

DAIKIN



DAIKIN ROOM AIR CONDITIONER
INSTALLATION MANUAL
R410A Split Series

INVERTER

Installation manual
Installationsanleitung
Manuel d'installation
Installatiehandleiding
Manual de instalación
Manuale di installazione
Εγχειρίδιο εγκατάστασης
Manual de instalação
Руководство по монтажу
Montaj kılavuzları

MODELS

FTXG25JV1BW	FTXG25JV1BS
FTXG35JV1BW	FTXG35JV1BS
FTXG50JV1BW	FTXG50JV1BS
CTXG50JV1BW	CTXG50JV1BS

English

Deutsch

Français

Nederlands

Español

Italiano

Ελληνικά

Portugues

Русский

Türkçe

CE - DECLARATION-OF-COMFORMITY
 CE - KONFORMITÄTSEKHLÄRUNG
 CE - DECLARATION-DE-CONFORMITE
 CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
 CE - DICHIARAZIONE-DI-CONFORMITA
 CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
 CE - ЗАРЯБЛЕННЕ-О-СОФОРМІТА
 CE - ОПФЯДЛЕННЕ-О-СОФОРМІТА
 CE - FÖRSÄKRAN-OM ÖVERENSTÄMMELSE

CE - ERKLÄRUNG OM-SÄMVER
 CE - ILMOITUS-YHDENMUKAISUDESTA
 CE - DEKLARACJA-ZGODNOSC
 CE - DECLARAȚIE-DE-CONFORTITATE

CE - IZJAVA O USKLADENOSTI
 CE - MEGFELELŐSÉGI-NYILATKOZAT
 CE - DEKLARACJA-ZGODNOSC
 CE - DECLARAȚIE-DE-CONFORTITATE

CE - IZJAVA O SKLADNOSTI
 CE - ATBILSTIBAS-DEKLARACIJA
 CE - VYHLASENIE-ZHODY
 CE - UYUMLULUK-BILDIRISI

CE - ATTIKITIES-DEKLARACIJA
 CE - ATBILSTIBAS-DEKLARACIJA
 CE - VYHLASENIE-ZHODY
 CE - UYUMLULUK-BILDIRISI

DAIKIN INDUSTRIES, LTD.

- 01 declares under its sole responsibility that the air conditioning models to which this declaration relates:
- 02 erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
- 03 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
- 04 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
- 05 dichiara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
- 06 δηλώνει sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
- 07 объявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:
- 08 заявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:

FTXG25JV1BW, FTXG25JV1BS, FTXG35JV1BW, FTXG35JV1BS,
 CTXG50JV1BW, CTXG50JV1BS, FTXG50JV1BW, FTXG50JV1BS

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
- 02 werden (gegebenen Normen) oder einen anderen Normdokument oder -dokumenten entsprechend/entsprechend, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
- 03 sont conformes à la ou aux norme(s) ou autre(s) document(s) normatifs), pour autant qu'ils soient utilisés conformément à nos instructions:
- 04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
- 05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
- 06 sono conformi (allo) seguente(s) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
- 07 είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο(α) ενυπόθετο(α) κανονισμό(α), υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

EN60335-2-40,

- 01 following the provisions of:
- 02 gemäß den Vorschriften der:
- 03 conformément aux stipulations des:
- 04 overeenkomstig de bepalingen van:
- 05 segundo las disposiciones de:
- 06 secondo le disposizioni per:
- 07 με τηρών των διατάξεων των:
- 08 de acordo com o previsto em:
- 09 в соответствии с положениями:
- 10 under iagttagelse af bestemmelserne i:
- 11 enligt villkoren i:
- 12 gitt i henhold til bestemmelserne i:
- 13 noudatteen määrätyksiä:
- 14 za obrzenci ustanoveni predpisu:
- 15 prema odredbama:
- 16 követti a(zi):
- 17 zgodnie z postanowieniami Dyrektywy:
- 18 in urma prevederilor:

- 01 Note * as set out in and judged positively by according to the Certificate <C>:
- 02 Hinweis * wie in der aufgeführt und von positiv beurteilt gemäß Zertifikat <C>:
- 03 Remarque * tel que défini dans et jugé positivement par conformément au Certificat <C>:
- 04 Bemerk * zoals vermeld in en positief beoordeeld door overeenkomstig Certificat <C>:
- 05 Nota * como se establece en y es valorado positivamente por de acuerdo con el Certificado <C>:
- 06 Nota * delimita nel e giudicato positivamente da secondo il Certificato <C>:
- 07 Hinweis * όπως καθορίζεται στο και κρίνεται θετικά από το σύμφωνα με το Πρωτόκολλο <C>:
- 08 Nota * tal como estabelecido em e com o parecer positivo de de acordo com o Certificado <C>:
- 09 Πληρωμένα * как указано в и в соответствии с положительным решением согласно Сертификату <C>:
- 10 Bemerk * som angivet i og positivt vurderet af i henhold til Certificat <C>:



Shinri Sada

Manager Quality Control Department

2011. 1. 31

3SB64417-17P

- 10 certifies under its sole responsibility that the air conditioning models to which this declaration relates:
- 11 erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
- 12 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
- 13 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
- 14 dichiara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
- 15 δηλώνει sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
- 16 объявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:
- 17 заявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:
- 18 déclare de proprie răspundere că aparaturile de aer condiționat la care se referă această declarație:

CE - IZJAVA O USKLADENOSTI
 CE - MEGFELELŐSÉGI-NYILATKOZAT
 CE - DEKLARACJA-ZGODNOSC
 CE - DECLARAȚIE-DE-CONFORTITATE

- 19 declares under its sole responsibility that the air conditioning models to which this declaration relates:
- 20 erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
- 21 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
- 22 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
- 23 dichiara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
- 24 δηλώνει sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
- 25 объявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:
- 26 заявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:

- 08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
- 09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:
- 10 overholder følgende standard(er) eller ændringsstandard(er) dokument(er), boudsat at disse anvendes i henhold til vore instrukser:
- 11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
- 12 инспекции устй еri übereinstimmelse mit folgende standard(er) eller andre normierende dokument(er), under forudsætning af at disse bruges i henhold til vore instrukser:
- 13 vastavast seuraavaan standardiin ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeiden mukaisesti:
- 14 за предплату, же jsou využívány v souladu s našimi pokyny, odpovídá následujícím normám nebo normativním dokumentům:
- 15 в складі з наступним стандартом(ами) іi другим нормативним документом(ами), уз вьет да се они користе у складі з нашим уптаням:

- 01 Directives, as amended.
- 02 Direktiven, gemäß Änderung.
- 03 Directives, telles que modifiées.
- 04 Richtlijnen, zoals aangepast.
- 05 Directivas, según lo emmendado.
- 06 Directive, come da modifica.
- 07 Οδηγίες, όπως έχουν τροποποιηθεί.
- 08 Directivas, conforme alteraçães em.
- 09 Директиве, со всеми поправками.
- 20 Direktiver, med senere ændringer.
- 21 Direktiv med foretagne ændringer.
- 22 Direktiver, med foretagne ændringer.
- 23 Direktiivie, sellaisia kuin ne ovat muutettuna.
- 24 Direktiivis, sellaisia kuin ne ovat muuttelutina.
- 25 Snemnice, kako je izmijenjeno.
- 26 Irányelvek és módosítások rendelkezései.
- 27 Оδηγίες, όπως έχουν τροποποιηθεί.
- 28 Директиве, со всеми поправками.

**Low Voltage 2006/95/EC *
 Electromagnetic Compatibility 2004/108/EC ***

- 16 Megjegyzés * a(z) alapján, a(z) igazolta a megjelölt, a(z) <C> hatásvény szerinti:
- 17 Uwaga * zgodnie z dokumentacją , pozytywną opinią badawczą w fidejuszem <C>.
- 18 Nota * așa cum este stabilit în și apreciat pozitiv în în conformitate cu Certificatul <C>.
- 19 Opomba * kot je obljeno v in odobreno s strani v skladu s ovrednitvijo <C>.
- 20 Märkus * nagu on näidatud dokumentis ja heaks kiidetud järgi vastavalt sertifikaatide <C>.
- 11 Information * enligt och godkännt av enligt Certificat <C>.
- 12 Merk * som det fremkommer i og gennem positiv bedømmelse af fidejuszem <C>.
- 13 Huom * jotta on esitetty asiantuntija ja jotta on hyväksynyt Sertifikaatin <C> mukaisesti.
- 14 Poznámka * jak bylo uvedeno v a pozitivně zjištěno v souladu s ověřením <C>.
- 15 Napomena * kako je izloženo u i pozitivno ocijenjeno od strane prema Certificatu <C>.

- 19 declares under its sole responsibility that the air conditioning models to which this declaration relates:
- 20 erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
- 21 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
- 22 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
- 23 dichiara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
- 24 δηλώνει sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
- 25 объявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:
- 26 заявляет, исключительно под своим ответстве́нностью, что модели кондиционеров воздуха, к которым относится настоящая заявлени́е:

- 16 megfelelőnek az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírás szerint használik:
- 17 spełniają wymogi następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami:
- 18 sunt în conformitate cu următorii (următoare) standard(e) sau alte (documente) normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:
- 19 skladen z naslednjimi standardi in drugimi normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili:
- 20 on vastavast järgmistele standarditele ja või teiste normatiivse dokumentidele, kui need kasutatakse vastavalt meie juhenditele:
- 21 соответстват на стандарти или други нормативни документи, при условие, че се използват съгласно нашите инструкции:
- 22 atitinka žemiau nurodytų standartų ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:
- 23 lad, je ličeti atbisliti razložja nardiljenem, atbislit sekojštem standardem un oštem normativnim dokumentim:
- 24 su zbiru s naslednjimi normami) alebo inými (normatívnymi) dokumentami), za predpokladu, že sa používajú v súlade s našimi inštrukciami:
- 25 trüchün, balmatlamızda göre kullanılması koşulluyla aşağıdaki standartlar ve norm belirlen belgelele uyumludur:

- 19 Direktive z vsemi spremembami.
- 20 Direktivd koos muudatustega.
- 21 Direktiver, c revizore vahepehina.
- 22 Direktiivose su papändajumis.
- 23 Direktiivis un to päändajumis.
- 24 Snemnice, v platnom znem.
- 25 Değiştirilmiş halleryle Yönetmelikler.
- 26 Οδηγίες, όπως έχουν τροποποιηθεί.
- 27 Оδηγίες, όπως έχουν τροποποιηθεί.
- 28 Директиве, со всеми поправками.

<A>	DAIKIN; TCF.015 N9J01-2011
	KEMA Quality B.V.
<C>	74736-KRO/EMC97-4957

DAIKIN INDUSTRIES, LTD.
 Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
 Kita-ku, Osaka, 530-8323 Japan

CE - DECLARATION-OF-CONFORMITY
CE - KONFORMITÄTSEKPLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARACÃO-DE-CONFORMIDADE
CE - ЗАРЯВЛЕНИЕ-О-СОБТВЕТСТВИИ
CE - OPYJIEJESERKLEPERING
CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELSE

CE - ERKLERING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O USKLAPENOSTI
CE - MEGFELELŐSÉGI-NYILATKOZAT
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSDEKLARACIJA
CE - VYHLÁSENIE-ZHODY
CE - UYUMLULUK-BILDIRISI

CE - ATTIKITIES-DEKLARACIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁSENIE-ZHODY
CE - UYUMLULUK-BILDIRISI

Daikin Industries, Ltd.

- 01 (GB) declares under its sole responsibility that the equipment to which this declaration relates:
- 02 (D) erklärt auf seine alleinige Verantwortung, dass diese Ausrüstung, für die diese Erklärung bestimmt ist:
- 03 (F) déclare sous sa seule responsabilité que l'équipement visé par la présente déclaration:
- 04 (NL) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de apparatuur waarop deze verklaring betrekking heeft:
- 05 (E) declara bajo su única responsabilidad que el equipo al que hace referencia la declaración:
- 06 (I) dichiara sotto la propria responsabilità che gli apparecchi a cui è riferita questa dichiarazione:
- 07 (GR) δηλώνει με αποκλειστική της ευθύνη ότι ο εξοπλισμός στον οποίο αναφέρεται η παρούσα δήλωση:
- 08 (P) declara sob sua exclusiva responsabilidade que os equipamentos a que esta declaração se refere:
- 09 (RU) заявляет, исключительной под своей ответственностью, что оборудование, к которому относится настоящее заявление:

FTXG25JV1BW, FTXG25JV1BS, FTXG35JV1BW, FTXG35JV1BS,
CTXG50JV1BW, CTXG50JV1BS, FTXG50JV1BW, FTXG50JV1BS

- 11 (DK) erklærer som eneansvarlig, at udstyret, som er omfattet af denne erklæring:
- 12 (N) erklærer i egenkap av hovedansvarlig, att utrustningen som berörs av denna deklARATION innefattar att:
- 13 (NL) erklærer et fullstendig ansvar for at det udstyr som berøres af denne deklARATION, indeholder at:
- 14 (GR) δηλώνει με ελεπί αποκλειστική ευθύνη, ότι ο εξοπλισμός στον οποίο αναφέρεται αυτή η δήλωση:
- 15 (HR) izjavuje pod isključivo vlastitom odgovornošću da oprema na koju se ova izjava odnosi:
- 16 (H) teljes felelősségre vállalással kijelentem, hogy az berendezések, melyekre e nyilatkozat vonatkozik:
- 17 (PL) deklaruje na własną wyłączną odpowiedzialność, że urządzenia, których ta deklaracja dotyczy:
- 18 (RO) declară pe proprie răspundere că echipamentele la care se referă această declarație:

- 20 (SE) deklarerar i egenkap av huvudsvarlig, att utrustningen som berörs av denna deklARATION innefattar att:
- 21 (BG) декларирам на собен отговорност, че оборудването, за което се отнася този декларация:
- 22 (LT) viskita savo atsakomybę šiekibai, kad įranga, kuriai laikoma ši deklaracija:
- 23 (LV) ar pīnu atbildību apliecinu, ka tālāk aprakstītais iekārtas, uz kurām attiecas šī deklarācija:
- 24 (SK) vyhlasuje na vlastnú zodpovednosť, že zariadenie, na ktoré sa vzťahuje toto vyhlásenie:
- 25 (TB) tanamamen kendri sorumülüğümde olnak üzere bu bildirimim ilgili oluştü donanımın aşşğıdaki gibi olduğunu beyan eder:

- 19 (EU) z vse odgovornostjo izjavlja, da je oprema namrav, na katero se izjava nanaša:
- 20 (EE) kinnitab oma täieliku vastutusele et käesoleva deklaratsiooni alla kuuluv varustus:
- 21 (BS) декларирам на собот отговорност, че оборудването, за което се отнася този декларация:
- 22 (LT) viskita savo atsakomybę šiekibai, kad įranga, kuriai laikoma ši deklaracija:
- 23 (LV) ar pīnu atbildību apliecinu, ka tālāk aprakstītais iekārtas, uz kurām attiecas šī deklarācija:
- 24 (SK) vyhlasuje na vlastnú zodpovednosť, že zariadenie, na ktoré sa vzťahuje toto vyhlásenie:
- 25 (TB) tanamamen kendri sorumülüğümde olnak üzere bu bildirimim ilgili oluştü donanımın aşşğıdaki gibi olduğunu beyan eder:

- 01 is in conformity with the provisions of:
- 02 den følgende Bestimmungen enspricht:
- 03 est conforme au articulado em:
- 04 conform is met de bepalingen van:
- 05 cumple las disposiciones según:
- 06 è conforme alle disposizioni di:

- 07 provided that the equipment is used in accordance with our instructions.
- 02 vorausgesetzt, dass die Ausrüstung gemäß der von uns gegebenen Anweisungen und Anleitungen verwendet wird.
- 03 pour autant que l'équipement soit utilisé conformément à nos instructions.
- 04 op voorwaarde dat de apparatuur overeenkomstig onze instructies wordt gebruikt.
- 05 siempre que el equipo se utilice de conformidad con nuestras instrucciones.
- 06 à patto che l'apparecchio venga usato in conformità alle nostre istruzioni.

- 01 Daikin Europe N.V. is authorized to compile the Technical Construction File.
- 08 A Daikin Europe N.V. está autorizada a compilar a documentação técnica de fabrico.
- 09 Командам Daikin Europe N.V. уполномочена съставяне технической документации.
- 10 Daikin Europe N.V. is authorized to compile the Dossier de Construction Technique.
- 04 Daikin Europe N.V. is bevoegd om het 'Technisch Constructiedossier' samen te stellen.
- 11 Daikin Europe N.V. está autorizada a compilar el Archivo de Construcción Técnica.
- 06 Daikin Europe N.V. è autorizzata a edigere il File 'tecnico di Costruzione.'

Daikin Europe N.V., Zandvoordestraat 300, B-8400 Oostende Belgium



3SB64417-18L

Shinri Sada
Manager Quality Control Department

Shinri Sada

2011.1.31

- 19 je usklajen z dobrotami:
- 20 on vastavuses järgmistele nõuetele:
- 21 съответства на разпоредбите на:
- 22 atitinka nustatytus reikalavimus.
- 23 atisi prištamb, kas noteiktas:
- 24 je v zhode s ustanovleniami:
- 25 hukümetli ile uyumludur.

- 07 υπό την προϋπόθεση ότι ο εξοπλισμός χρησιμοποιείται σύμφωνα με τις οδηγίες μας.
- 08 despte que o equipamento seja utilizado em conformidade com as nossas instruções.
- 09 при условии, что данное оборудование используется в соответствии с нашими инструкциями.
- 10 forudsat at udstyret anvendes i henhold til vores anvisninger.
- 11 under forudsättning att utrustningen används i enlighet med våra instruktioner.
- 12 forudsatt at udstyret bruges i henhold til vare instruktioner.

- 07 H Daikin Europe N.V. eivā atļaujot kompilēt tehniko konstrukciju failu.
- 08 A Daikin Europe N.V. está autorizada a compilar a documentação técnica de fabrico.
- 09 Командам Daikin Europe N.V. уполномочена съставяне технической документации.
- 10 Daikin Europe N.V. is authorized to compile the Dossier de Construction Technique.
- 11 Daikin Europe N.V. är bemyndigade att sammanställa den tekniska konstruktionsfilen.
- 12 Daikin Europe N.V. har tillåtelse til å kompilere den Tekniske konstruktionsfilen.

Machinery 2006/42/EC

- 01 Directive (valid from 29/12/2009).
- 02 Richtlijn (geldig vanaf 29/12/2009).
- 03 Directive (valida de 29/12/2009).
- 04 Richtlijn (geldig vanaf 29/12/2009).
- 05 Directive (valido desde 29/12/2009).
- 06 Directiva (valida dai 29/12/2009).
- 07 Öbnyta (gyveta ota 29/12/2009).
- 08 Directiva (em vigor desde 29/12/2009).
- 09 Директива (ваклетвот с 29/12/2009).
- 10 Direktiv (gældende fra 29/12/2009).
- 11 Direktiv (giltigt fra 29/12/2009).
- 12 Direktiv (gyldigt fra 29/12/2009).
- 13 Direktiv (voimassa 29.12.2009 alkaen).
- 14 Sméncia (plná od 29/12/2009).
- 15 Direktiva (vrijed od 29/12/2009).
- 16 Įrašyti įstatymo leidas: 2009.12.29.).
- 17 Dyrektywa (wzaina od dnia 29/12/2009).
- 18 Direktiva (valabila dn 29/12/2009).
- 19 Direktiva (v veljav od 29.12.2009).
- 20 Direktiv (kenhv atales 29/12/2009).
- 21 Директива (валвана от 29/12/2009).
- 22 Direktiva (galioja nuo 2009.12.29).
- 23 Direktiva (spéka no 29/12/2009).
- 24 Sméncia (plána od 29.12.2009).
- 25 Direktiv (geperifilik beslijevica 29/12/2009).

- 13 edelyttien, että laitteen käyttöä ohjeidemme mukaisesti.
- 14 za preopkladu, že zařízení je používáno v souladu s našimi pokyny.
- 15 za se oprema koristi u skladu s našim uputama.
- 16 ta a berendzéss az előírásokrak megfelelően használják.
- 17 pod warunkiem ekspozycji urządzenia zgodnie z treścią instrukcji.
- 18 sa conditie ca echipamentul să fie utilizat în conformitate cu instrucțiunile noastre.

- 19 pod pogodom, da se oprema upovrabja v skladu z našimi navodili.
- 20 ku vanusuti kasuatakse vastavati meie juhendite.
- 21 при поповеии, че оборудването се използва в съотваса с нашите инструкции.
- 22 su sąlyga, kad įranta naudojama pagal pateiktas instrukcijas.
- 23 ar nosacījumi, ka iekārta tiek lietota saskaņā ar mūsu instrukcijām.
- 24 Sméncia (plána od 29.12.2009).
- 25 ekspmanim talmalaimizm doğrullusunda kullanılması koşulluya.
- 19 Daikin Europe N.V. je pooblaščen za sestavo datoteke s tehnično mapo.
- 20 Daikin Europe N.V. om volitat koostama tehnilist dokumentatsiooni.
- 21 Daikin Europe N.V. e otopooblaščen za sastav Arka za tehnička instrukcija.
- 22 Daikin Europe N.V. yra įgaliojats sudaryti š technines konstrukcijos failą.
- 23 Daikin Europe N.V. ir autorizats sastādīt tehnisko dokumentāciju.
- 24 Spoločnosť Daikin Europe N.V. je oprávnená vytvorit súbor technickej konstrukcie.
- 25 Daikin Europe N.V. Teknikin Yapi Dosyasim derlemeyre yetkilidir.

DAIKIN INDUSTRIES, LTD.
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

01 Addendum to instructions delivered with the equipment:

The English text is the original instruction. Other languages are translations of the original instructions.

02 Ergänzung zu den mit der Ausrüstung gelieferten Instruktionen:

Bei der englischen Textfassung handelt es sich um das Original. Bei den Anleitungen in anderen Sprachen handelt es sich um Übersetzungen des Originals.

03 Addendum aux instructions fournies avec l'équipement:

Le texte anglais correspond aux instructions d'origine. Les autres langues sont les traductions des instructions d'origine.

04 Bijvoegsel voor bij de apparatuur geleverde instructies:

De Engelse tekst is de oorspronkelijke versie. Andere talen zijn vertalingen van de oorspronkelijke instructies.

05 Anexo a las instrucciones suministradas con el equipo:

El texto en inglés constituye las instrucciones originales. El resto de los idiomas son traducciones de las instrucciones originales.

06 Aggiunta alle istruzioni in dotazione con l'apparecchio:

Il testo in inglese corrisponde alle istruzioni originali. Le altre lingue sono traduzioni delle istruzioni originali.

07 Подаръпипо обръчува мору пуръхорна је по тоу зъонлопу:

То оууууко келуево евоу ои проророророр обръчес. Ои обръчес њакоуорес евоуи ои проророророр обръчуоуи.

08 Adenda às instruções fornecidas com o equipamento:

As instruções foram redigidas originalmente em inglês. As versões noutras línguas são traduções da redacção original.

09 Дополнение к инструкциям, прилагаемым к оборудованию:

Оригиналом инструкции является текст на английском языке. Текст на других языках является переводом с оригинала.

10 Tilleg til vejledningerne leveret sammen med dette udstyr:

Vejledningens originalsprøg er engelsk. Andre sprøg er oversættelser af den originale vejledning.

11 Tillägg till instruktionserna som medföljer utrustningen:

Den engelska texten är originalinstruktionerna. Övriga språk är översättningar av originalinstruktionerna.

12 Tillegg til instruksjoner som følger med utstyret:

Den engelske teksten inneholder originalinstruksjonene. Andre språk er oversettelser av originalinstruksjonene.

13 Lisäys laitelston mukana toimitettuihin ohjeisiin:

Eritynmukailiellien teksti on alkuperäinen ohje. Muut kielet ovat alkuperäisten ohjeden käännöksiä.

14 Doatek k pokynům dodávaným k zařizení:

Originální návod je v angličtině. Ostatní jazyky jsou překladem originálního návodu.

15 Doatek uputama isporučeniim s opremom:

Engleski tekst je originalna uputa. Ostali jezici su prijevodi originalne upute.

16 Kiegészítés a berendezéshez mellékelt útmutatóhoz:

Az útmutató eredeti szövege az angol nyelvű szöveg. A többi nyelvű változat az útmutató eredeti szövegének a fordítása.

17 Црпуреление информации оисноише инструкции, доисарзаных з урзденением:

Оригинал инструкции орасовано в языке английскн. Инструкции в остальных языках са умарзанемии инструкции оригиналел.

18 Anexa la instructiunile livrate cu echipamentul:

Textul în limba engleză este instrucțiunea originală. Celelalte limbi sunt traduceri ale instrucțiunilor originale.

19 Dodatek k navodilom, priložen opremi:

Izorni jezik teh navodi je angličtina. Navodila v drugih jezicah so prevodi navodil v izornem jeziku.

20 Lisa vanustusega koos taritud juhenditeie:

Inglisekeine tekst on originaaljuhend. Teised keeled on originaaljuhendite tõlked.

21 Дополнение към инструкциите, предоставени с оборудването:

Текстът на английски език е оригиналната инструкция. Текстовете на останалите езици са преводи на оригиналните инструкции.

22 Priedas prie instrukciju, pristatų su įranga:

Angliškias tekstas yra originali instrukcija. Tekstai kitomis kalbomis yra šios instrukcijos originalo vertimas.

23 Papildinājums kopā ar iekārtām piegādātajām instrukcijām:

Originālā instrukcija ir teksts angļu valodā. Teisi pārējis valodās ir oriģinālo instrukciju tulkojumi.

24 Doplněk k pokynom dodávaným spolu so zařadením:

Originálny návod je v angličtine. Ostatné jazyky sú preklady originálneho návodu.

25 Ekipman ile birlikte verilen talimatlara ek:

İngilizce metin asli talimatdır. Diğer diller asıl talimatların çevirileridir.




Safety Precautions

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- Meaning of WARNING and CAUTION notices





 **WARNING Failure to follow these instructions properly may result in personal injury or loss of life.**



 **CAUTION Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.**

- The safety marks shown in this manual have the following meanings:

 Be sure to follow the instructions.	 Be sure to establish an earth connection.	 Never attempt.
---	---	--



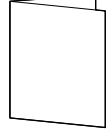
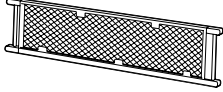
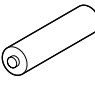
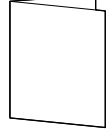
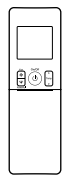



- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.

 WARNING	
• Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.	
• Install the air conditioner in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire.	
• Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.	
• Install the air conditioner on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the equipment falling and causing injury.	
• Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire.	
• Use a cable of suitable length. Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire.	
• Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire.	
• When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened. Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals.	
• If refrigerant gas leaks during installation, ventilate the area immediately. Toxic gas may be produced if the refrigerant comes into contact with fire.	
• After completing installation, check for refrigerant gas leakage. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.	
• When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R410A). The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury.	
• During installation, attach the refrigerant piping securely before running the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.	
• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.	
• Be sure to earth the air conditioner. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks.	
• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire.	

 CAUTION	
• Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out.	
• While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.	
• Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.	



Accessories

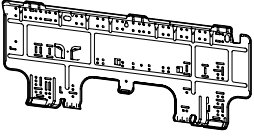Indoor unit (A) – (J),
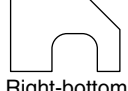
<p>(A) Mounting plate</p> 	1	<p>(D) Remote controller holder</p> 	1	<p>(G) Operation manual</p> 	1
<p>(B) Titanium apatite photocatalytic air-purifying filter</p> 	2	<p>(E) Dry battery AAA. LR03 (alkaline)</p> 	2	<p>(H) Installation manual</p> 	
<p>(C) Wireless remote controller</p> 	1	<p>(F) Indoor unit fixing screw (M4 x 12L)</p> 	2	<p>(J) Paper pattern (The paper pattern is placed between the last page and the inner side of the back cover. See page 10 for the usage of the paper pattern.)</p>  	1

Service Parts

- Obtain service parts as necessary.
- If a service part is required, obtain and install the part indicated by the part number corresponding to the unit's model name.

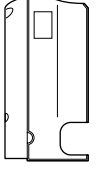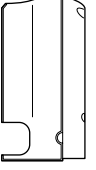(K) Side cover for right-side piping					(L) Side cover for left-side piping				
Model name	Part name	Model name	Part name		Model name	Part name	Model name	Part name	
FTXG25JV1BW	5003651	FTXG25JV1BS	5003653	FTXG25JV1BW	5003652	FTXG25JV1BS	5003654		
FTXG35JV1BW		FTXG35JV1BS		FTXG35JV1BW		FTXG35JV1BS			
FTXG50JV1BW		FTXG50JV1BS		FTXG50JV1BW		FTXG50JV1BS			
CTXG50JV1BW		CTXG50JV1BS		CTXG50JV1BW		CTXG50JV1BS			

⚠ CAUTION

- (K) Side cover for right-side piping is labeled with information concerning applicable safety standards. When replacing the right-side cover with (K) side cover for right-side piping, install the cover securely without removing this labeling.

Choosing an Installation Site

- Before choosing the installation site, obtain user approval.


1. Indoor unit

- The indoor unit should be sited in a place where:
 - 1) the restrictions on installation specified in the indoor unit installation drawings are met,
 - 2) both air inlet and air outlet have clear paths met,
 - 3) the unit is not in the path of direct sunlight,
 - 4) the unit is away from the source of heat or steam,
 - 5) there is no source of machine oil vapour (this may shorten indoor unit life),
 - 6) cool (warm) air is circulated throughout the room,
 - 7) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may shorten the remote controller range,
 - 8) the unit is at least 1m away from any television or radio set (unit may cause interference with the picture or sound),
 - 9) install at the recommended height (1.8m),
 - 10) no laundry equipment is located.






2. Wireless remote controller

- Turn on all the fluorescent lamps in the room, if any, and find the site where remote controller signals are properly received by the indoor unit (within 6m).

Indoor Unit Installation Drawings

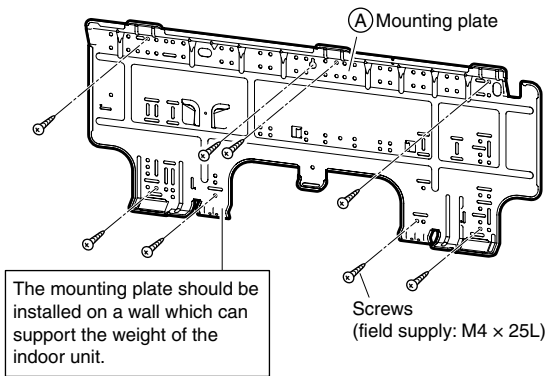

The mounting plate should be installed on a wall which can support the weight of the indoor unit.

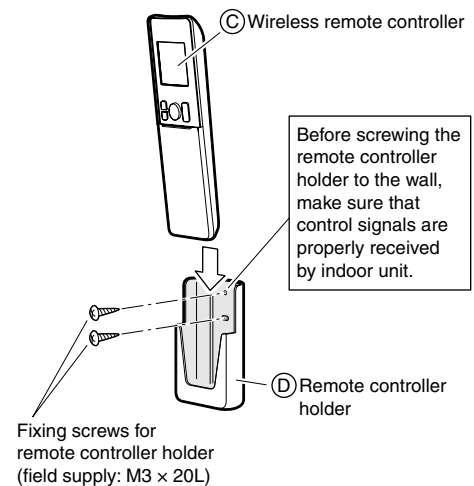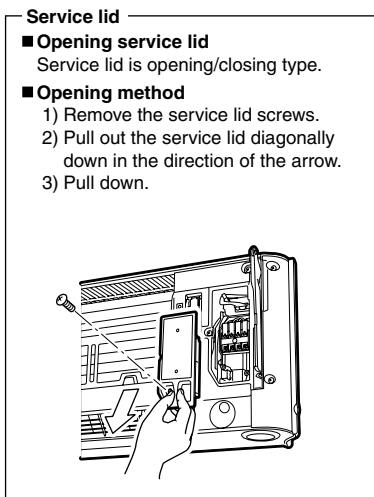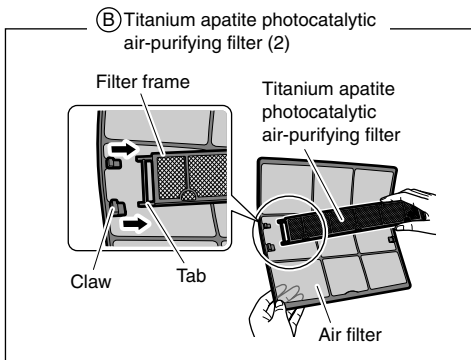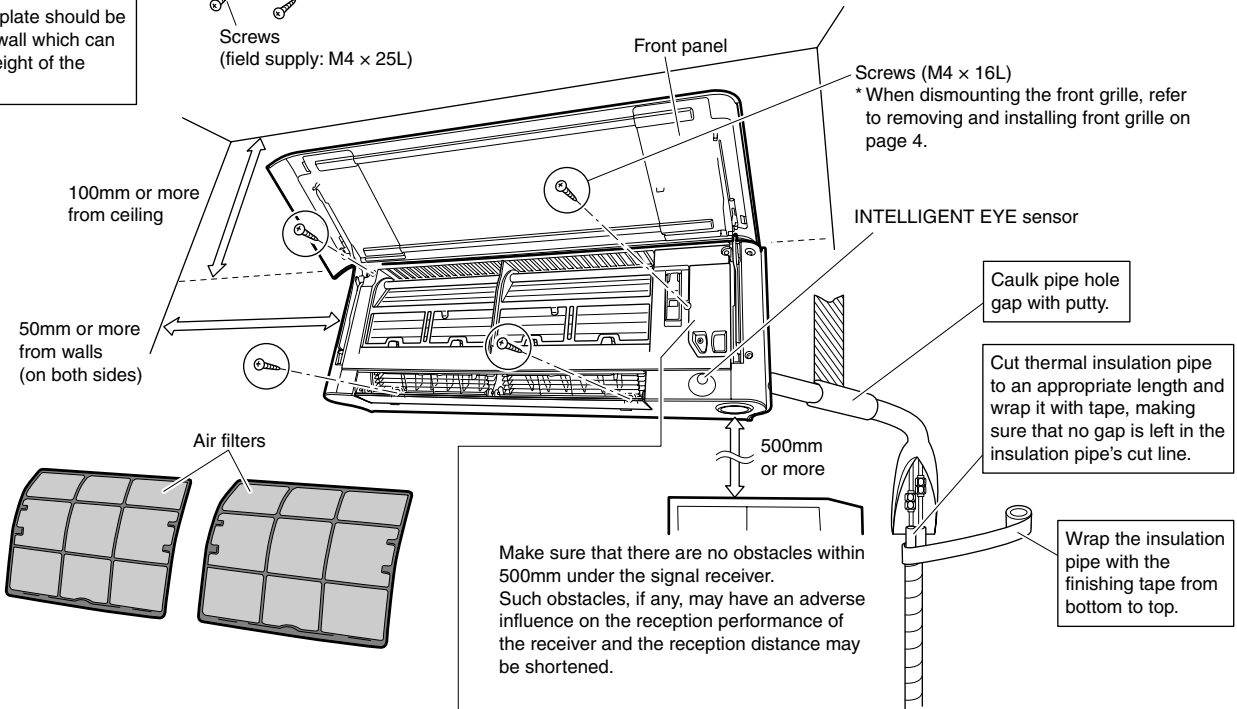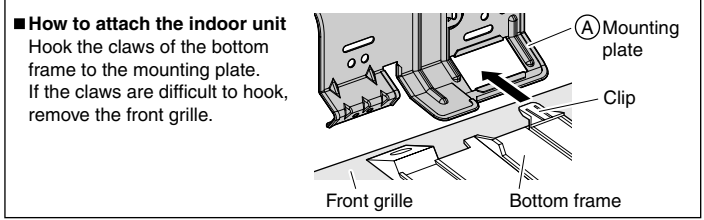

INTELLECTIVE EYE sensor

⚠ CAUTION


- Do not hit or violently push the INTELLECTIVE EYE sensor. This can lead to damage and malfunction.
- Do not place large objects near the sensor. Also keep heating units or humidifiers outside the sensor's detection area.

Preparation before Installation

1. Removing and installing front panel



• Removal method

- 1) Hook fingers on the indentations on the left and right sides of the indoor unit, and open the front panel to a position higher than the horizontal level.
- 2) Raise the front panel lock tabs on the left and right sides, and slide the front panel locks upward.
- 3) Remove the panel shafts on both sides from the shaft holes, and dismount the front panel.

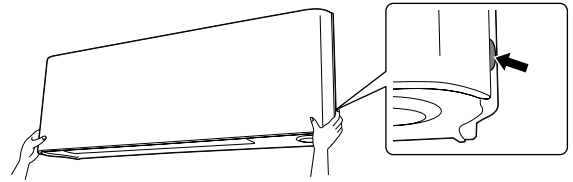

• Installation method


- 1) Insert the panel shafts on both sides of the front panel into the shaft holes.
- 2) Slide the front panel locks downward, and secure the front panel locks with the tabs laid outward.
- 3) Close the front panel after checking that the front panel is securely mounted.

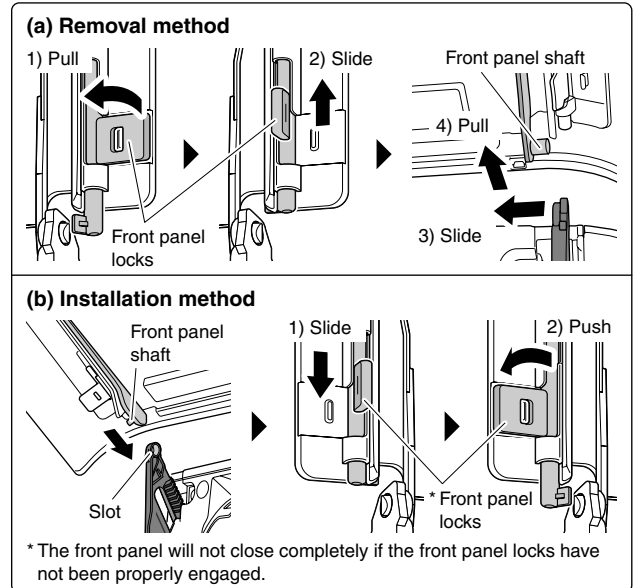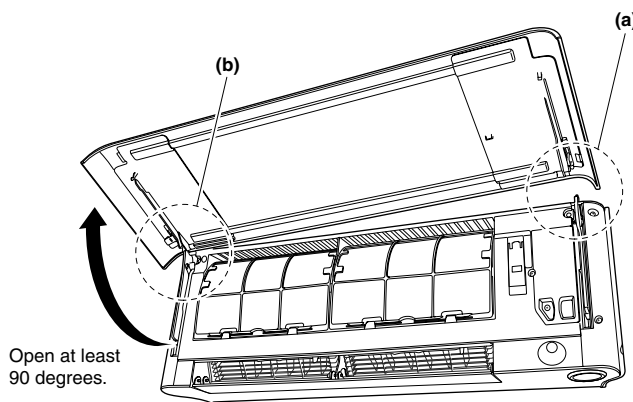


2. Removing and installing front grille

• Removal method

- 1) Remove the front panel and air filters.
- 2) Remove the service lid. (Refer to the opening method on page 3.)
- 3) Disconnect the wire harness from the wire clamp, and remove the wire harness from the connector.
- 4) Remove the right-side cover. (2 screws)

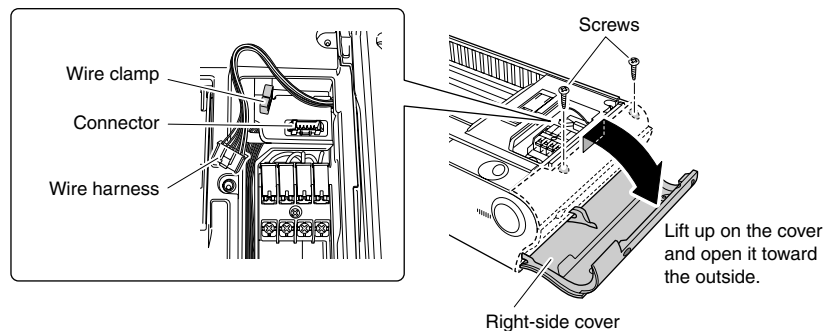


- 5) Rotate the flap (large) and dismount the flap (small).
- 6) Open the 2 screw covers, and remove 4 screws from the front grille.

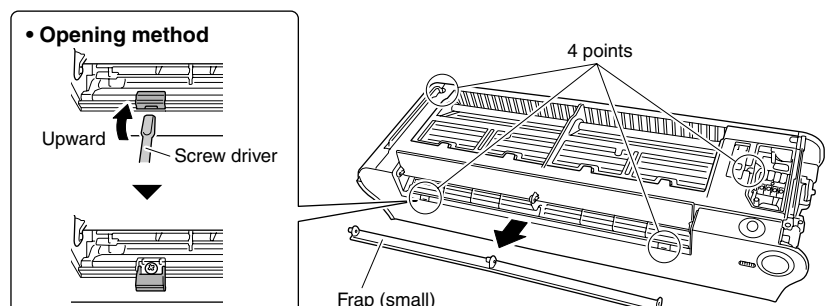

Preparation before Installation

- 7) Wear protection gloves and insert both hands under the front grille as shown in the illustration.
- 8) Remove the front grille from the 3 upper hooks by pushing up the top side of the front grille, pull the front grille toward you by holding both ends of the front grille, and dismount the front grille.

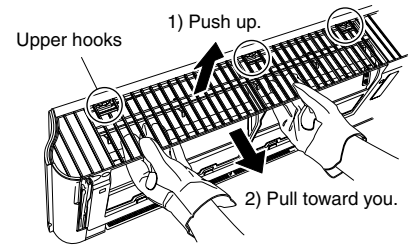


⚠ CAUTION

- Be sure to wear protection gloves.

• Installation method


- 1) Install the front grille and firmly engage the upper hooks (3 locations).
- 2) Install 4 screws of the front grille, and close the 2 screw covers.
- 3) Mount the flap (small) and return the flaps to the previous positions.
- 4) Attach the right-side cover. (Refer to figure.)
- 5) Attach the wire harness to the connector and secure the wire harness with the wire clamp.
- 6) Install the air filter and then mount the front panel.

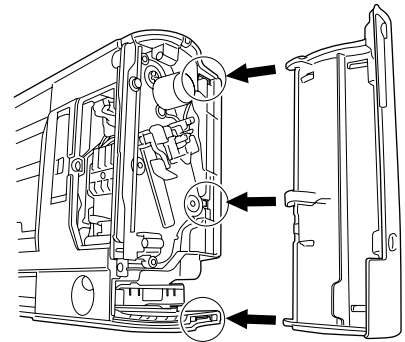

3. How to set the different addresses

When two indoor units are installed in one room, the two wireless remote controllers can be set for different addresses.


- 1) Remove the front panel and front grille. (4 screws)
- 2) Cut the address jumper (JA) on the printed circuit board.
- 3) Cut the address jumper in the remote controller.

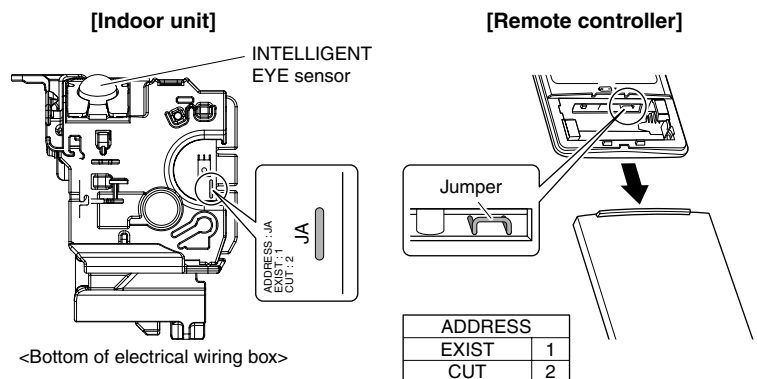

4. When connecting to an HA system (wired remote controller, central remote controller etc.)


• Removal methods of metal plate electrical wiring covers

- 1) Remove the front panel and front grille. (4 screws)
- 2) Remove the electrical wiring box. (1 screw)
- 3) Remove the 4 tabs and dismount the metal plate electrical wiring cover (A).
- 4) Pull down the hook on the metal plate electrical wiring cover (B), and remove a single tab.
- 5) Remove the 2 tabs on the top part and dismount the metal plate electrical wiring cover (B).

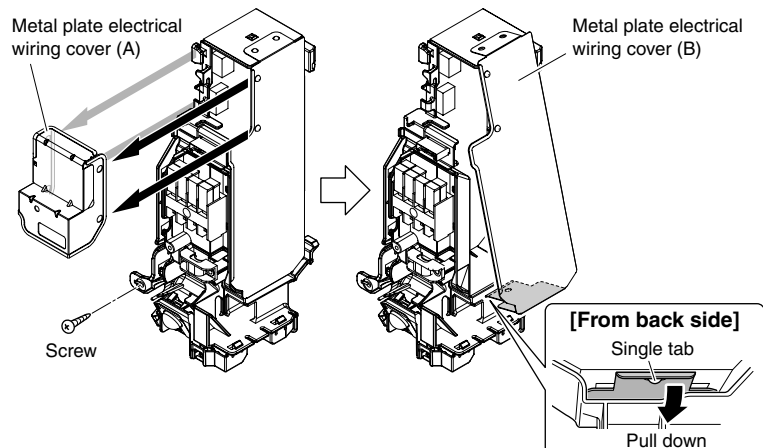


• Attachment methods of connection cord

- 1) Remove the metal plate electrical wiring cover.
(Refer to the **Removal methods of metal plate electrical wiring covers.**)
- 2) Attach the connection cord to the S21 connector and pull the harness out through the notched part in the figure.
- 3) Replace the electrical wiring cover as it was, and pull the harness around, as shown in the figure.

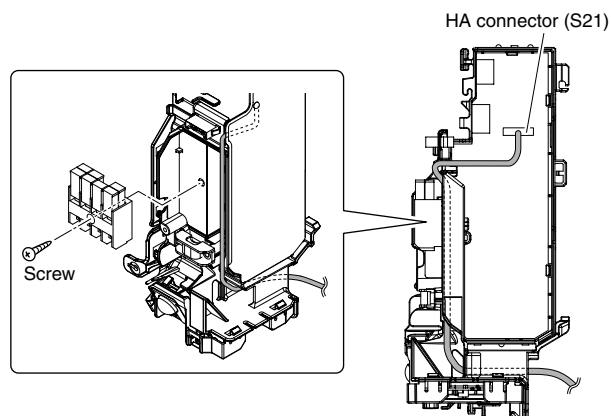

• Attachment methods of metal plate electrical wiring covers

- 1) Hook the top part of the metal plate electrical wiring cover (B) on the 2 tabs.
- 2) Press in the hook on the bottom to catch a single tab, and mount the metal plate electrical wiring cover (B).
- 3) Insert the connector into the hole, and hook and mount the metal plate electrical wiring cover (A) onto the 4 tabs.

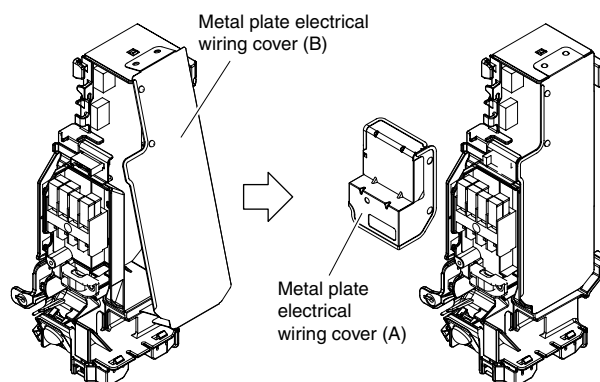


Refrigerant Piping Work

With a multi indoor unit , install as described in the installation manual supplied with the multi outdoor unit.

1. Flaring the pipe end

 
- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.



Flaring

Set exactly at the position shown below.

	Flare tool for R410A		Conventional flare tool	
	Clutch-type	Clutch-type (Rigid-type)	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)
A	0-0.5mm	1.0-1.5mm	1.0-1.5mm	1.5-2.0mm

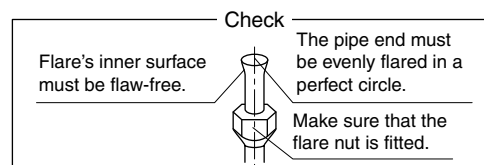

⚠ WARNING

- Do not use mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Do never install a drier to this R410A unit in order to guarantee its lifetime.
- The drying material may dissolve and damage the system.
- Incomplete flaring may cause refrigerant gas leakage.


Refrigerant Piping Work

2. Refrigerant piping

⚠ CAUTION

- Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
- Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.


Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

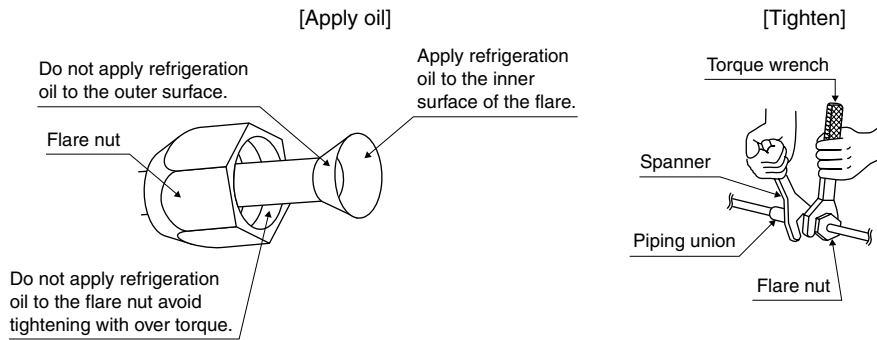

Flare nut tightening torque		
Gas side		Liquid side
3/8 inch	1/2 inch	1/4 inch
32.7-39.9N•m (330-407kgf•cm)	49.5-60.3N•m (505-615kgf•cm)	14.2-17.2N•m (144-175kgf•cm)


2-1. Caution on piping handling

- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.

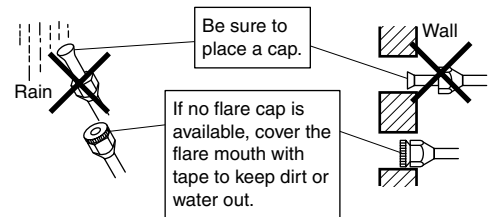

2-2. Selection of copper and heat insulation materials

- When using commercial copper pipes and fittings, observe the following:
 - 1) Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/mh°C)
Refrigerant gas pipe's surface temperature reaches 110°C max.
Choose heat insulation materials that will withstand this temperature.

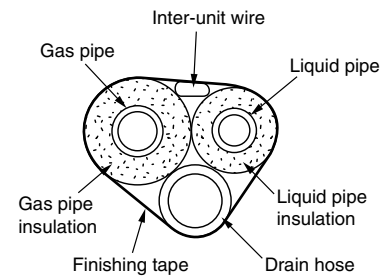

- 2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side		Liquid side	Gas pipe thermal insulation		Liquid pipe thermal insulation
25/35 class	50 class	O.D. 6.4mm	25/35 class	50 class	I.D. 8-10mm
O.D. 9.5mm	O.D. 12.7mm		I.D. 12-15mm	I.D. 14-16mm	
Minimum bend radius			Thickness 10mm Min.		
30mm or more	40mm or more	30mm or more			
Thickness 0.8mm (C1220T-O)					


- 3) Use separate thermal insulation pipes for gas and liquid refrigerant pipes.

Indoor Unit Installation

1. Installing the mounting plate


- The mounting plate should be installed on a wall which can support the weight of the indoor unit.
 - Temporarily secure the mounting plate to the wall, make sure that the unit is completely level, and mark the boring points on the wall.
 - Secure the mounting plate to the wall with screws.

Recommended mounting plate retention spots and dimensions

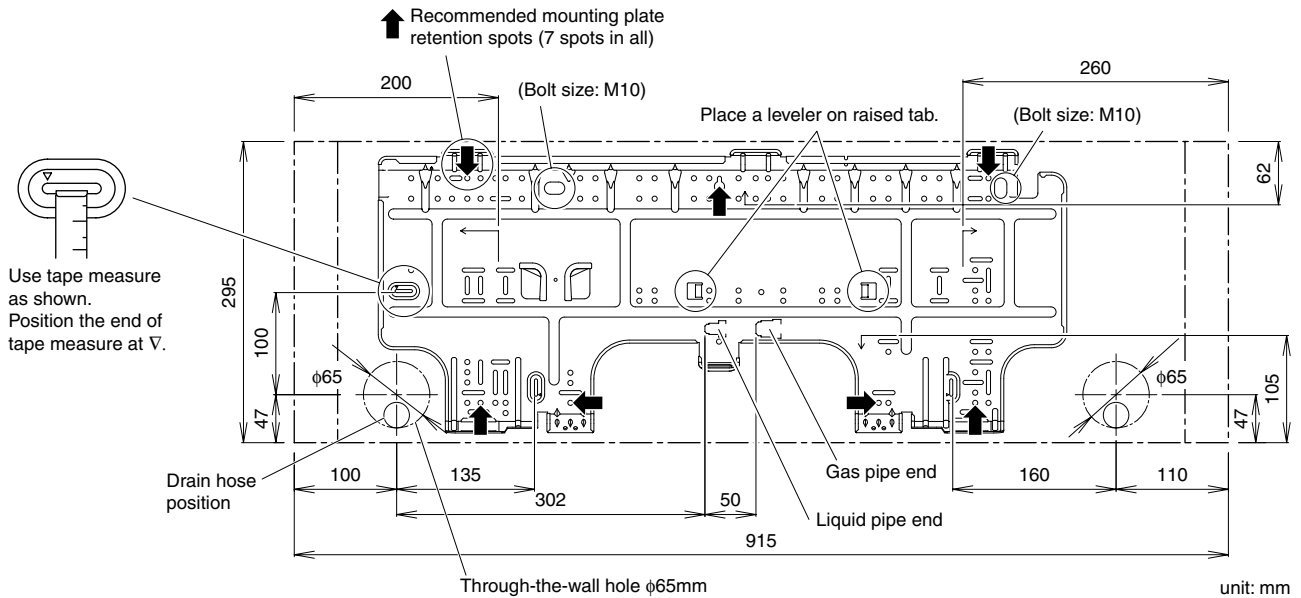


2. Boring a wall hole and installing wall embedded pipe

- For walls containing metal frame or metal board, be sure to use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.
- Be sure to caulk the gaps around the pipes with caulking material to prevent water leakage.
 - Bore a feed-through hole of 65mm in the wall so it has a down slope toward the outside.
 - Insert a wall pipe into the hole.
 - Insert a wall cover into wall pipe.
 - After completing refrigerant piping, wiring, and drain piping, caulk pipe hole gap with putty.

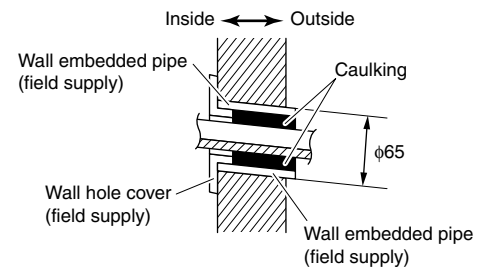

3. Inter-unit wiring

- Open the front panel, then remove the service lid.
- Pass the inter-unit wire from the outdoor unit through the feed-through wall hole and then through the back of the indoor unit. Pull them through the front side. Bend the ends of tie wires upward for easier work in advance. (If the inter-unit wire ends are to be stripped first, bundle wire ends with adhesive tape.)
- Press the bottom frame of the indoor unit with both hands to set it on the mounting plate hooks. Make sure the wires do not catch on the edge of the indoor unit.

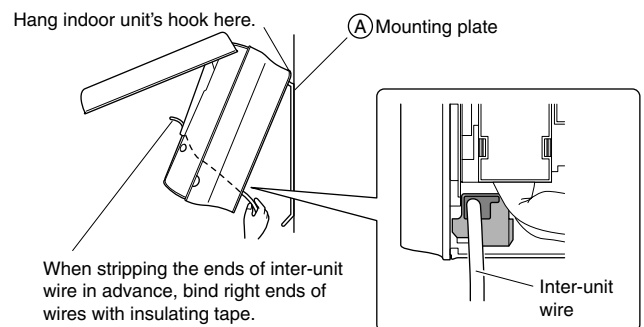

Indoor Unit Installation


4. Laying piping, hoses, and wiring

- The recommended installation method is back piping.
- **When performing side piping (b), refer to 5. Side piping on page 10.**
In the case of bottom piping (c), refer to 6. Bottom piping on page 10.


4-1. Right-back piping

- 1) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.
- 2) Wrap the inter-unit wire, refrigerant pipes and drain hose together with insulation tape.

(a)	Back piping	Normal installation	Refer to page 9
(b)	Side piping	Service parts use	Refer to page 10
(c)	Bottom piping	Paper pattern use	Refer to page 10

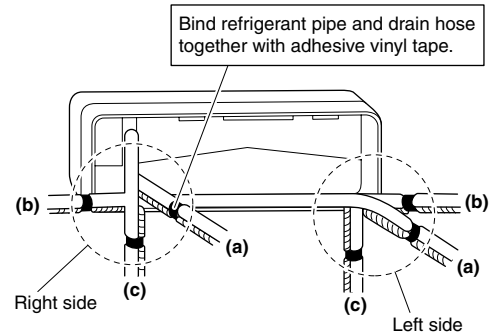

- 3) Pass the inter-unit wire, drain hose and refrigerant pipes through the wall hole, then set the indoor unit on the mounting plate hooks by using the Δ markings at the top of the indoor unit as a guide.

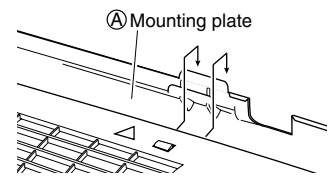

4-2. Left-back piping


How to replace the drain plug and drain hose

• Replacing onto the left side

- 1) Remove the insulation fixing screw on the right and remove the drain hose.
- 2) Remove the drain plug on the left side and attach it to the right side.
- 3) Insert the drain hose and tighten with included insulation fixing screw.
* (Forgetting to tighten this may cause water leakages.)


Drain hose attachment position

* The drain hose is on the back of the unit.

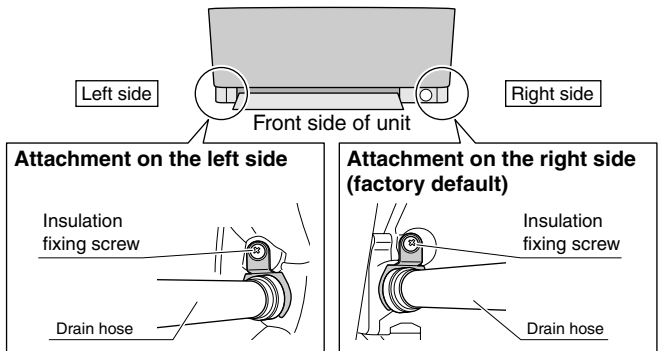


- 1) Replace the drain plug and drain hose.
- 2) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.
- 3) Be sure to connect the drain hose to the drain port in place of a drain plug.

How to set drain plug

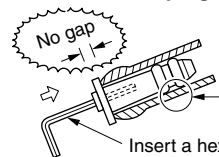


Do not apply lubricating oil (refrigeration oil) when inserting. Application of causes deterioration and drain leakage of the plug.

- 4) Shape the refrigerant pipe along the pipe path marking on the mounting plate.
- 5) Pass drain hose and refrigerant pipes through the wall hole, then set the indoor unit on mounting plate hooks, using the Δ markings at the top of indoor unit as a guide.
- 6) Pull in the inter-unit wire.
- 7) Connect the inter-unit pipes.
- 8) Wrap the refrigerant pipes and drain hose together with insulation tape as right figure, in case of setting the drain hose through the back of the indoor unit.

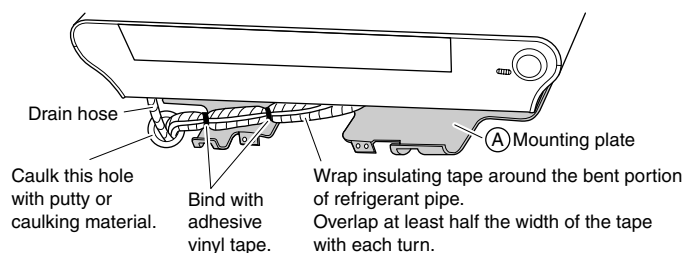




- 9) While exercising care so that the inter-unit wire do not catch indoor unit, press the bottom edge of indoor unit with both hands until it is firmly caught by the mounting plate hooks. Secure indoor unit to the mounting plate with indoor unit fixing screws (M4 × 12L).

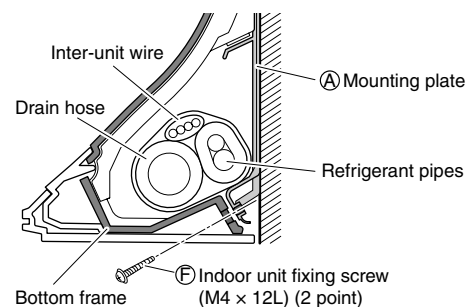

4-3. Wall embedded piping

Follow the instructions given under left-back piping.

Insert the drain hose to this depth so it won't be pulled out of the drain pipe.

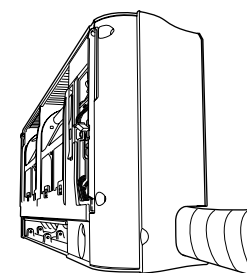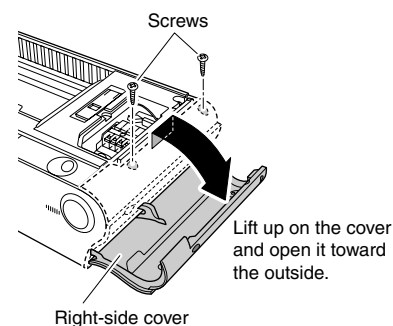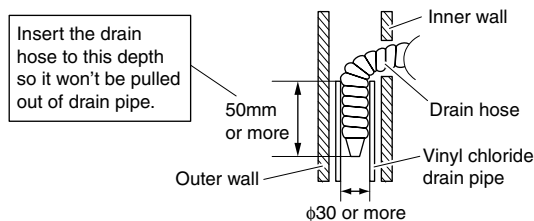

5. Side piping

• Right-side or left-side piping

- 1) Dismount the right- or left-side cover. (2 screws)
- 2) Mount the **Ⓚ** side cover for right-side piping (service parts) or the **Ⓛ** side cover for left-side piping (service parts).


- 3) Follow the procedure shown in 4-1. Right-back piping in the case of performing right-side piping and the procedure shown in 4-2. Left-back piping in the case of performing left-side piping. At that time, insert the drain hose and refrigerant pipes into the wall hole after inserting them into the hole on the right- or left-side piping cover.

6. Bottom piping


• Right-bottom or left-bottom piping

- 1) Separate the paper pattern along the cut line and draw a line along the paper pattern after aligning it with the reference position of the bottom frame of the unit. The paper pattern is placed between the last page and the inner side of the back cover.
- 2) Cut out the grille along the lines and open a hole for bottom piping.

[How to use the paper pattern]

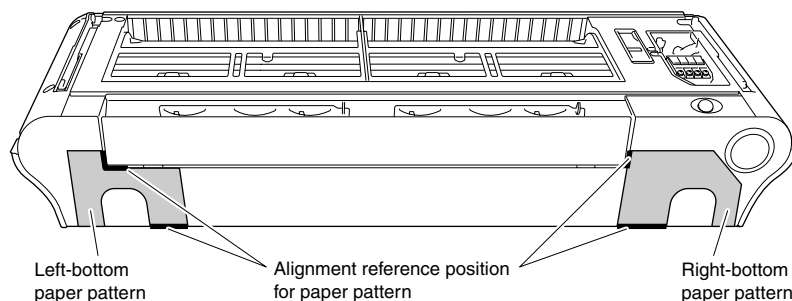

- 3) Follow the procedure shown in 4-1. Right-back piping in the case of performing right-bottom piping and the procedure shown in 4-2. Left-back piping in the case of performing left-bottom piping. At that time, insert the drain hose and refrigerant pipes into the wall hole after inserting them into the piping hole opened.


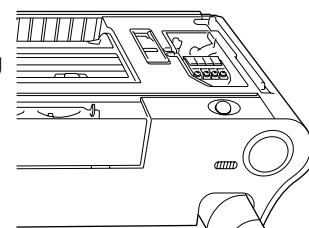


Indoor Unit Installation

7. Wiring


With a multi indoor unit, install as described in the installation manual supplied with the multi outdoor unit.

- 1) Strip wire ends (15mm).
- 2) Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals.
- 3) Connect the earth wires to the corresponding terminals.
- 4) Pull wires to make sure that they are securely latched up, then retain wires with wire retainer.
- 5) In case of connecting to an adapter system. Run the remote controller cable and attach the S21.
- 6) Shape the wires so that the service lid fits securely, then close service lid.

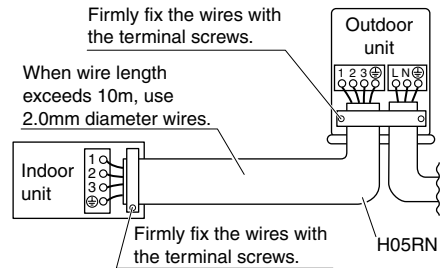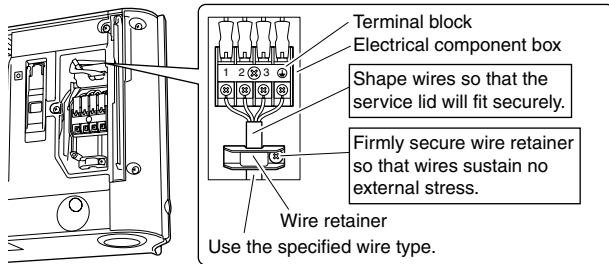

CAUTION

 - When connecting the connection wires to the terminal board using a single core wire, be sure to perform curling. Problems with the work may cause heat and fires.






WARNING

- Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

8. Drain piping

- 1) Connect the drain hose, as described right.
- 2) Remove the air filters and pour some water into the drain pan to check the water flows smoothly.
- 3) When drain hose requires extension, obtain an extension hose commercially available. Be sure to thermally insulate the indoor section of the extension hose.
- 4) When connecting a rigid polyvinyl chloride pipe (nominal diameter 13mm) directly to the drain hose attached to the indoor unit as with embedded piping work, use any commercially available drain socket (nominal diameter 13mm) as a joint.

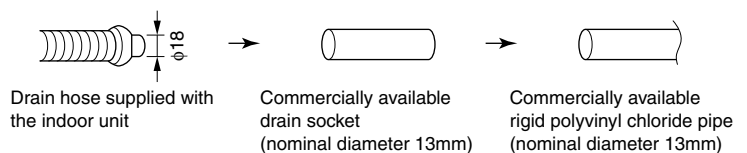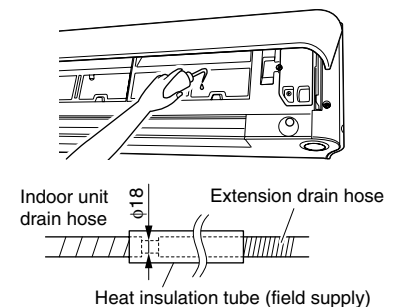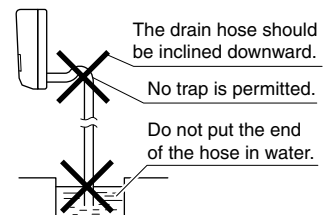

Trial Operation and Testing

1. Trial operation and testing

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 Trial operation should be carried out in either cooling or heating mode.

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.
 - 1) Trial operation may be disabled in either mode depending on the room temperature. Use the remote controller for trial operation as described below.
 - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).
 - 3) For protection, the system disables restart operation for 3 minutes after it is turned off.
- 1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.
- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
 - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

Trial operation from remote controller

- 1) Press "ON/OFF" button to turn on the system.
- 2) Press "TEMP" button (2 locations) and "MODE" button at the same time.
- 3) Press "TEMP" button and select "7".
- 4) Press "MODE" button.
- 5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press "ON/OFF" button.

2. Test items

Test items	Symptom (diagnostic display on RC)	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for inter-unit wiring.	Inoperative or burn damage	
Indoor or outdoor unit's air inlet or air outlet has clear path of air. Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	

DAIKIN INDUSTRIES, LTD.

Head office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan
http://www.daikin.com/global_ac/

DAIKIN EUROPE NV

Zandvoordestraat 300, B-8400 Oostende, Belgium



Two-dimensional bar code is a code for manufacturing.

3P255640-2B

M10B210 (1104) HT