

Total Heat Exchanger HRV (Heat Reclaim Ventilation)

MODELS**(Ceiling mounted duct type)**

VAM 150FAVE	VAM 150F5VE
VAM 250FAVE	VAM 250F5VE
VAM 350FAVE	VAM 350F5VE
VAM 500FAVE	VAM 500F5VE
VAM 650FAVE	VAM 650F5VE
VAM 800FAVE	VAM 800F5VE
VAM 1000FAVE	VAM 1000F5VE
VAM 1500FAVE	VAM 1500F5VE
VAM 2000FAVE	VAM 2000F5VE

English

Deutsch

Français

Español

Italiano

Ελληνικά

Nederlands

Portugues

Russian

Taiwanese

HRV

HRV; Heat Reclaim Ventilation

Before using the DAIKIN HRV, be sure to read this operation manual thoroughly. If you have any problems or there is a malfunction, please refer to this operation manual. Please keep this manual for your future reference whenever you do not understand how to use it when something is wrong with the unit during the operation.

HRV; Belüftungssystem zur Wärmerückgewinnung

Lesen Sie dieses Betriebshandbuch bitte sorgfältig durch, bevor Sie den HRV von Daikin in Betrieb nehmen. Sollten Probleme oder Störungen auftreten, schlagen Sie bitte in diesem Betriebshandbuch nach.

Bewahren Sie das Handbuch bitte gut auf, damit Sie auch später nachschlagen können, falls Störungen beim Betrieb der Einheit auftreten und Ihnen etwas unklar ist.

HRV; Ventilation avec récupération d'énergie

Veuillez lire entièrement ce manuel sur le fonctionnement avant d'utiliser le HRV DAIKIN. Si vous avez n'importe quel problème ou qu'il ya ait un fonctionnement défectueux, veuillez vous référer à ce manuel.

Veuillez aussi conserver ce manuel à portée de main de manière à pouvoir le consulter chaque fois que vous avez un problème pour comprendre l'utilisation de cet appareil ou lorsqu'il survient un dérangement pendant son fonctionnement.

HRV; Ventilación con recuperación de calor

Antes de utilizar el intercambiador de calor total de DAIKIN, lea cuidadosamente este manual de funcionamiento. Si tiene algún problema o hay un mal funcionamiento, consulte este manual de funcionamiento.

Por favor conserve este manual para poder consultarlo cuando no entienda cómo utilizar la unidad o cuando algo falle durante su funcionamiento.

HRV; Ventilazione con recupero di calore

Prima di usare lo HRV, è necessario leggere attentamente questo manuale di funzionamento. Nel caso vi troviate di fronte ad un problema o ad una condizione di anomalia, siete pregati di fare riferimento al presente manuale. Questo manuale va inoltre tenuto in un luogo accessibile nel caso in cui si incontrino difficoltà per l'uso dello scambiatore oppure se il funzionamento non è corretto.

HRV; Αερισμός ανάκτησης θερμότητας

Πριν χρησιμοποιήσετε τον ολικό HRV, διαβάστε καλά ολόκληρο το παρόν εγχειρίδιο οδηγιών λειτουργίας. Εάν έχετε οποιοδήποτε πρόβλημα ή υπάρχει κάποια δυσλειτουργία, ανατρέξτε στο παρόν εγχειρίδιο. Κρατήστε το παρόν εγχειρίδιο για να προσφεύγετε σ' αυτό στο μέλλον όταν έχετε απορίες ως προς τη χρήση της μονάδας ή υπάρχει κάποιο πρόβλημα κατά τη λειτουργία της.

HRV; Heat reclaim Ventilation, Ventilatie met warmtewisselaar

Lees eerst zorgvuldig deze bedieningshandleiding voor u de DAIKIN HRV gebruikt. Gebruik bij storingen of problemen deze handleiding. Bewaar de handleiding, zodat u deze kunt naslaan als een functie van het apparaat niet duidelijk is of als er een probleem aan het apparaat optreedt tijdens bedrijf.

HRV; Ventilação com Recuperação de Calor

Antes de utilizar o DAIKIN HRV, leia atentamente este manual. Caso tenha algum problema ou se existe alguma falha no funcionamento, consulte este manual.

Guarde este manual para futuras consultas sempre que não souber como utilizar ou se existir algum problema com a unidade durante a operação.

HRV; Вентиляция с регенерацией тепла (HRV)



До начала работы с DAIKIN HRV внимательно изучите данное руководство по эксплуатации. При возникновении любых нарушений работы или проблем обращайтесь к данному руководству по эксплуатации. Сохраняйте данное руководство для будущих обращений при любых сложностях в работе с блоком или нарушениях его функционирования.

HRV ; 熱電再生通風裝置



在使用大金熱量再生通風裝置以前，務請仔細閱讀本操作手冊。如果您碰到任何問題或者產品發生故障，請參考本操作手冊。

請保留本手冊以便今後無論您不明白如何使用本產品還是該產品在操作過程中存在問題時加以參考。


MODELS	VAM 150F	VAM 250F	VAM 350F	VAM 500F	VAM 650F
	VAM 800F	VAM 1000F			

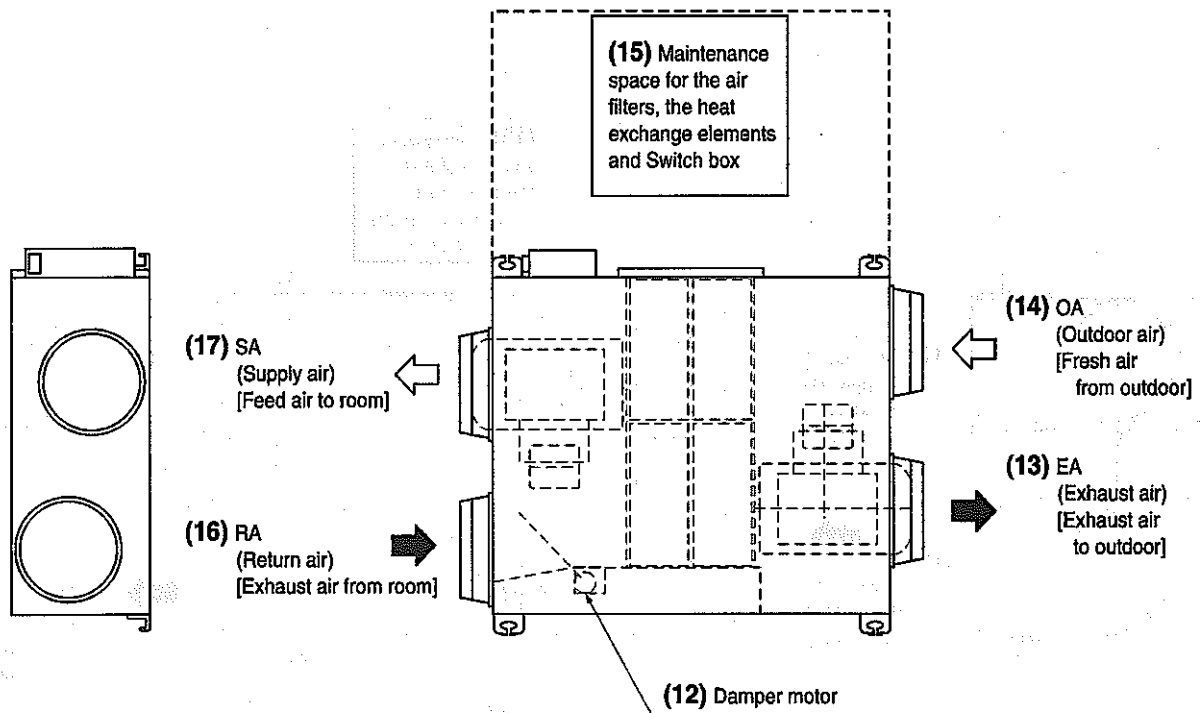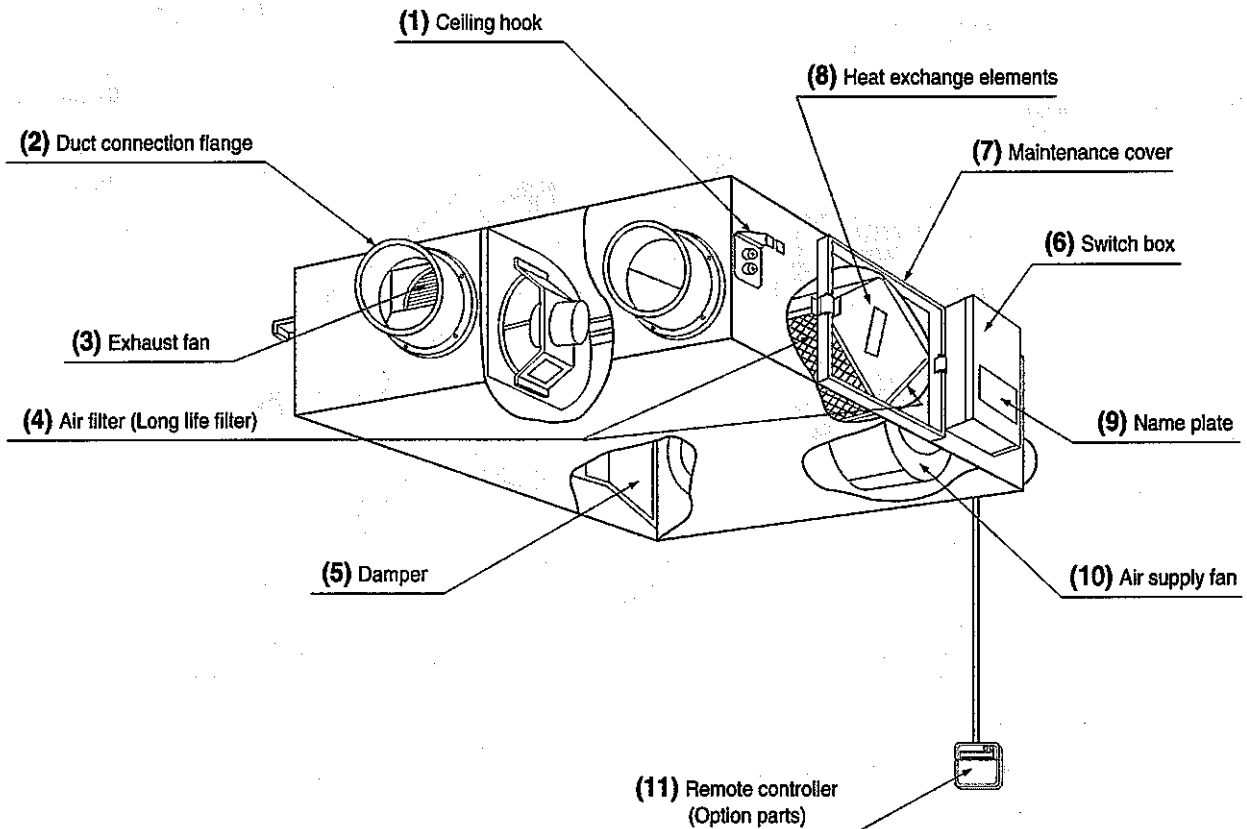


MODELS VAM 1500F VAM 2000F

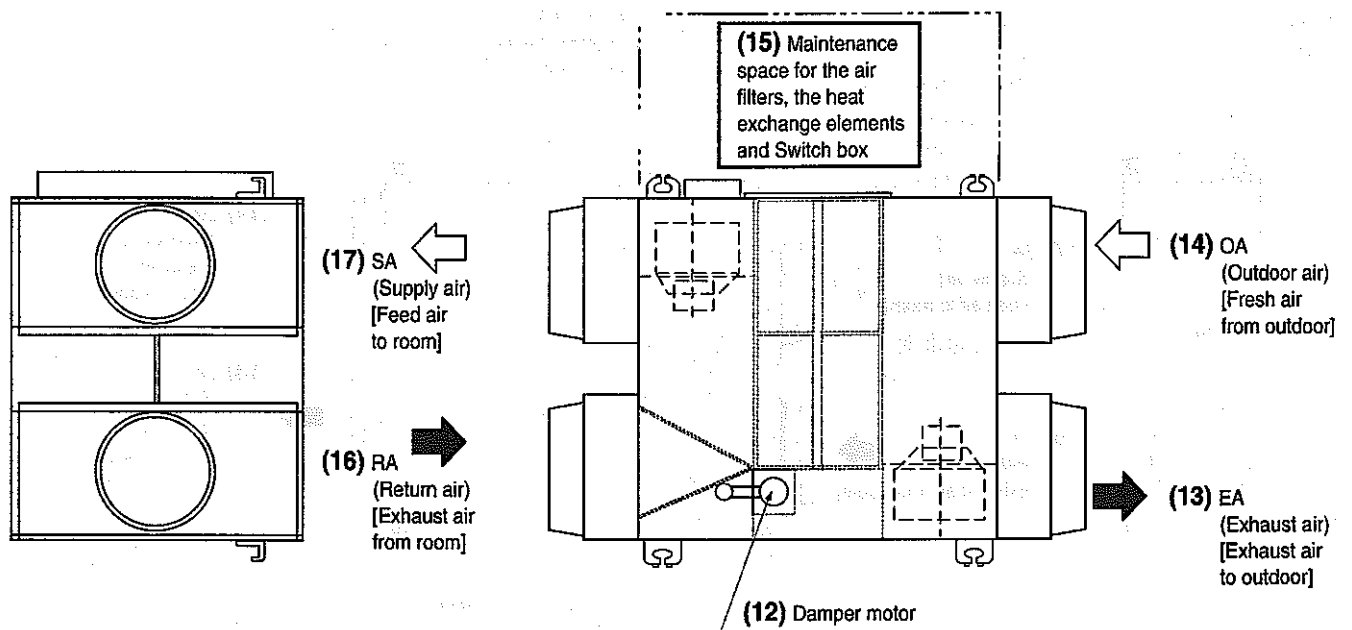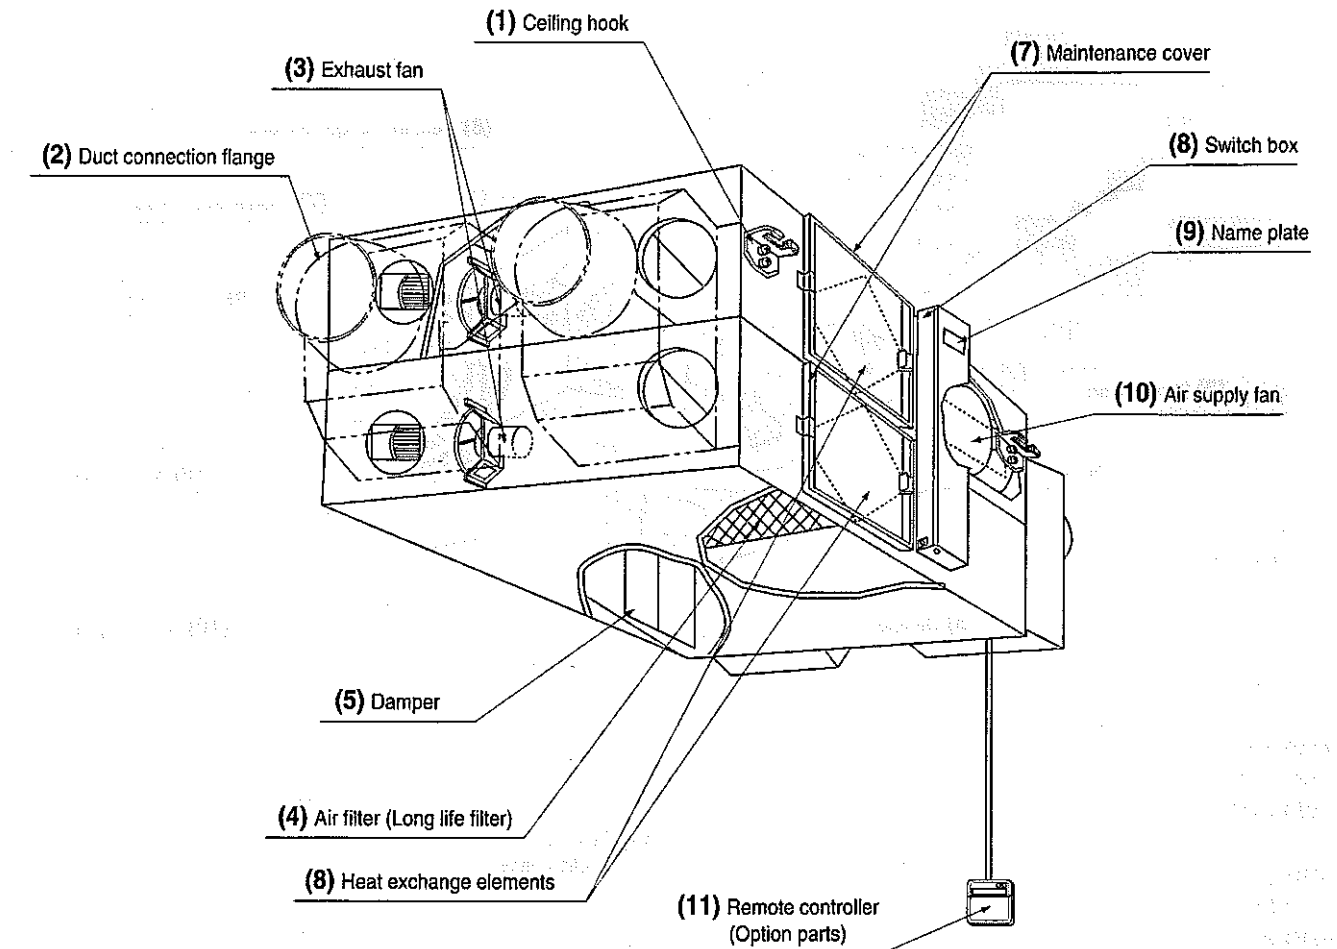


MODELS VAM 150F - 1000F

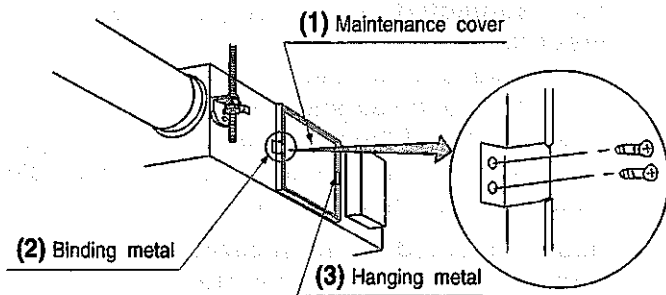


MODELS VAM 150F - 1000F

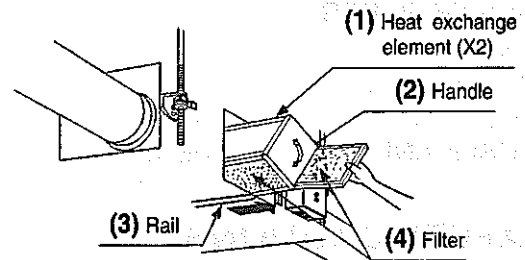


MODELS VAM 1500F VAM 2000F

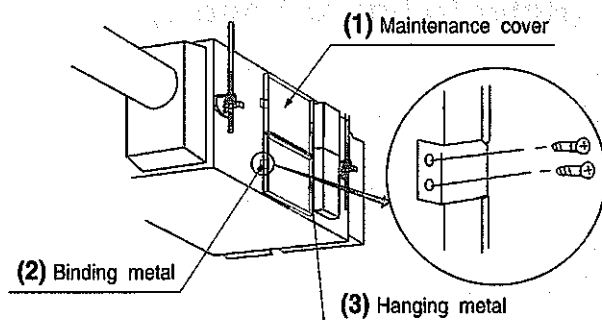


MODELS VAM 1500F VAM 2000F

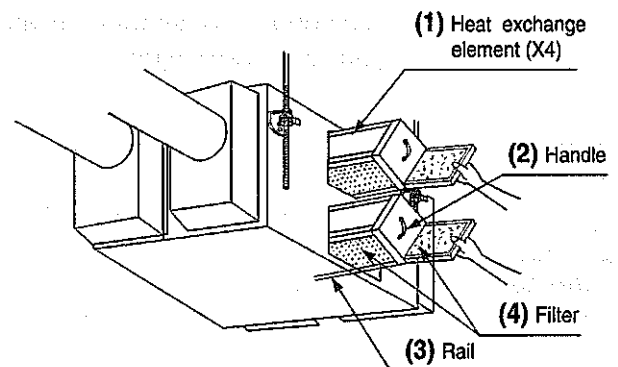


3

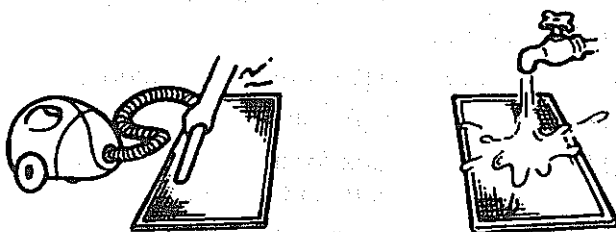

4

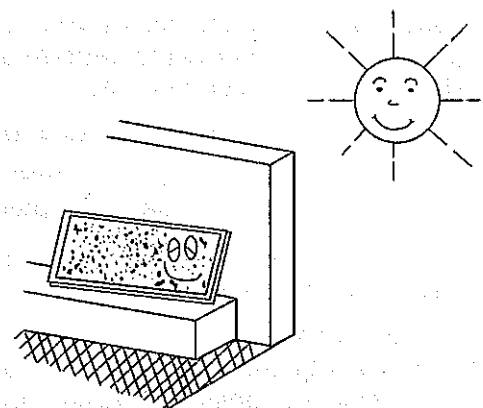

5

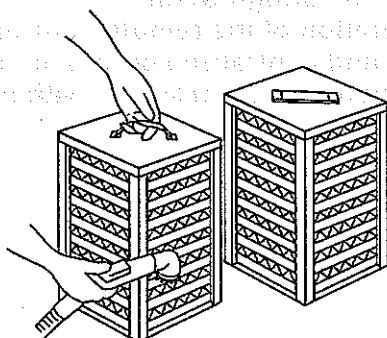

6

7

CONTENTS

1. SAFETY CAUTIONS	1
2. NAMES OF PARTS	1
3. OPERATION	1
4. MAINTENANCE (for a qualified service person only)	5
5. TROUBLE AND COUNTERMEASURE	6

1. SAFETY CAUTIONS

Read the following cautions carefully and use your equipment properly.

There are safety cautions and tips listed here as follows:

⚠ WARNING Improper handling can lead to such serious consequences as death or severe injury.

NOTE

- These instructions will ensure proper use of the equipment.


Be sure to follow these important safety cautions.

Keep these warning sheets handy so that you can refer to them if needed.

Also, if this equipment is transferred to a new user, make sure to hand over this user's manual to the new user.

⚠ WARNING

Never inspect or service the unit by yourself. Ask a qualified service person to perform this work. (The qualified service person)

WARNING: Before obtaining access to terminal devices (), all power supply circuit must be interrupted.

Electric shock may result. Before servicing the unit, always shut off power.

Always use the air filter.

If the air filter is not used, heat exchange elements will be clogged, possibly causing poor performance and subsequent failure.

Do not change operations suddenly. It can result not only in malfunction but also failure of switches or relays in the body.

Do not use a HRV or an air suction/discharge grille in the following places.

Place such as machinery plant and chemical plant where gas, which contains noxious gas or corrosive components of materials such as acid, alkali, organic solvent and paint, is generated.

Place where combustible gas leakage is likely.

Such gas can cause fire.

Place such as bathroom subjected to moisture.

Electric leak or electric shock and other failure can be caused.

Place subjected to high temperature or direct flame.

Avoid a place where the temperature near the HRV unit and the air suction/discharge air grille exceeds 40°C. If the unit is used at high temperature, deformed air filter and heat exchange element or burned motor result.

Place subjected to much carbon black.

Carbon black attaches to air filter and heat exchange element, marking them unable to use.

2. NAMES OF PARTS (Refer to figure 1 and 2)

- (1) Ceiling hook
- (2) Duct connection flange
- (3) Exhaust fan
- (4) Air filter (Long life filter)
- (5) Damper
- (6) Switch box
- (7) Maintenance cover
- (8) Heat exchange elements
- (9) Name plate
- (10) Air supply fan
- (11) Remote controller (Option parts)
- (12) Damper motor
- (13) EA (Exhaust air) [Exhaust air to outdoor]
- (14) OA (Outdoor air) [Fresh air from outdoor]
- (15) Maintenance space for the air filters, the heat exchange elements and Switch box
- (16) RA (Return air) [Exhaust air from room]
- (17) SA (Supply air) [Feed air to room]

3. OPERATION


3-1 Explanation for SYSTEMS

This product is operated differently depending on the system configuration.

For the operation of the remote controller for indoor unit and centralized controller, refer to the instruction manual provided with each unit.

■ OPERATION for EACH SYSTEM


Independent system

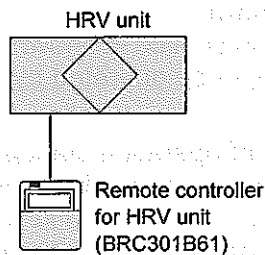

[Operation method]

The remote controller turns on and off HRV unit.
(Refer to the section 3-2)


Combined operation system with VRV systems and Sky-air series

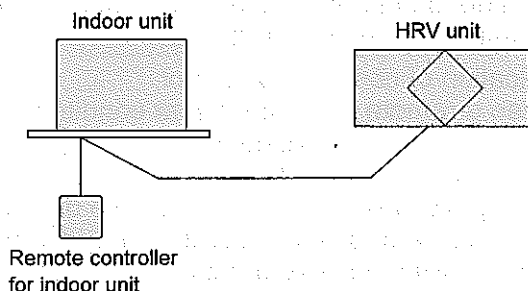

[Operation method]

The remote controller for VRV turns on and off the air conditioner and HRV unit.

If only the HRV unit is used without operating the air conditioner, set the unit in the "☰" VENTILATION mode. (Refer to the section 3-3)

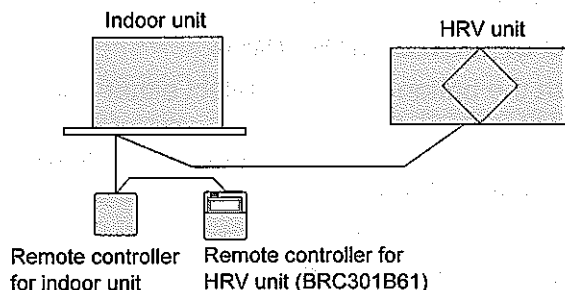

[Operation method]

The ON/OFF and timer operation can be performed using the HRV remote controllers.


(The indication of centralized control "☰" appears on the display.)

Other operations can be performed using the HRV remote controllers.

Starting and stopping operations of the indoor unit and the HRV unit can be performed using the indoor remote controllers.

(Refer to the section 3-2)

Centralized system

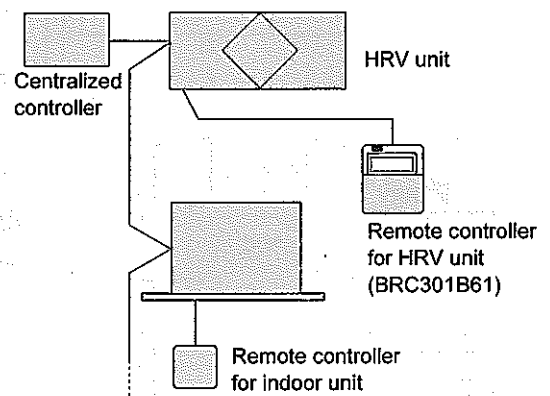

[Operation method]

When the HRV remote controllers is not connected, the Centralized controller controls the operation of the HRV unit.

(Refer to the section 3-4)

When the HRV remote controllers is connected, operation can be started and stopped using the Centralized controller or the indoor and the HRV remote controllers.

During the indication of centralized control

"☰" appears on the display, the ON/OFF and timer operation may not be possible with the HRV remote controllers.

Other operations can be performed using the HRV remote controllers.

(Refer to the section 3-2, 3-4)

3-2 Operation with the remote control exclusively for Air conditioning operation HRV units. (BRC301B61)

For non-independent systems, starting/stopping operation and timer operation may not be possible.


Use the air conditioner remote control or the Centralized controller in such cases.

(1) Operation lamp

This pilot lamp (red) light up while the unit is in Operation.

(2) Operation/Stop button

When pushed once, the unit starts operating.
When pushed twice, the unit stops.

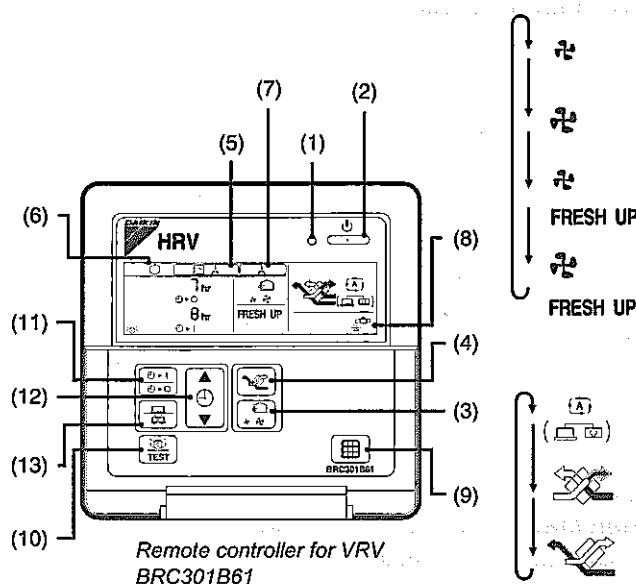

(3) Air flow rate changeover button

Air flow rate can be changed over to "F" [Low] mode or "F+" [High] mode, "F FRESH UP" [Low FRESH UP] mode, "F+ FRESH UP" [High FRESH UP] mode.

For "FRESH UP" operation

When this indication does not show: The volume of outdoor air supplied into the room and that of the room air exhausted outdoors is equivalent.

For "FRESH UP" operation,

- If it is set to "Fresh up air supply" The volume of outdoor air supplied into the room is larger than that of room air exhausted outdoors. (This operation prevents the odor and moisture from kitchens and toilets from flowing into the rooms.)
- If it is set to "Fresh up air exhaust" :The volume of room air exhausted outdoors is larger than that of outdoor air supplied into the room. (This operation prevents the hospital odor and floating bacteria from flowing out to the corridors.)

(4) Ventilation mode changeover button

"F" (Automatic) mode. The temperature sensor of the unit automatically changes the ventilation of the unit in [Bypass] mode and [Heat Exchange] mode.

"F+" (Heat Exchange) mode. In this mode, the air passes through the heat exchanger element to effect [Total Heat Exchanging] ventilation.

"F" (Bypass) mode. In this mode, the air does not pass through the heat exchange element but by passes it to effect [Bypass] ventilation.

(5) Indication of operation control method:

When the operation of HRVs are linked with the air conditioners, this indication may be shown.

While the indication is shown, the ON/OFF of HRVs cannot be operated by the HRV remote controller.

(6) Indication of operation standby: "S"

It indicates the pre-cooling/pre-heating operation. This unit is at stop and will start operation after the pre-cooling/pre-heating operation is over.

Pre-cooling/pre-heating operation means the operation of HRVs is delayed during the start-up operation of linked air conditioners such as before the office hours.

During this period the cooling or heating load is reduced to bring the room temperature to the set temperature in a short time.

(7) Indication of centralized control: "C"

When a remote controller for air conditioners or devices for centralized control are connected to the HRVs, this indication may show. During this indication appears on the display, the ON/OFF and timer operation may not be possible with the HRV remote controllers.

(8) Indication of air filter cleaning

When the indication "F" appears on the display, clean the filter.

(9) Filter signal reset button


(10) Inspection button

This button is to be used only for service. It is not to be used normally.

HOW TO OPERATE WITH TIMER

(11) Push the button "T" and select either one of "T+" or "T-".

Each time the button is pushed, the indication changes as shown below.

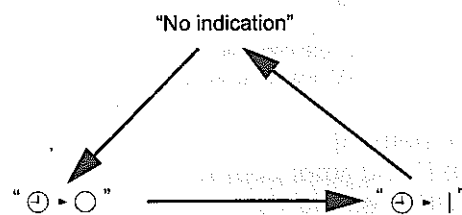

(12) Push the button "T" and set the time.

Each time when "T+" is pushed, the time advances one hour.

Each time when "T-" is pushed, the time goes back one hour.

(13) Push the button "T"

Then, the reservation is finished.


Either "T+" or "T-" changes from flashing to lighting.

After the reservation is finished, the remaining time is indicated in the display.

For cancelling the timer operation, push the button "T" once again.


The indication disappears.

3-3 Operating the HRV unit using the remote controller of the VRV-system air conditioner

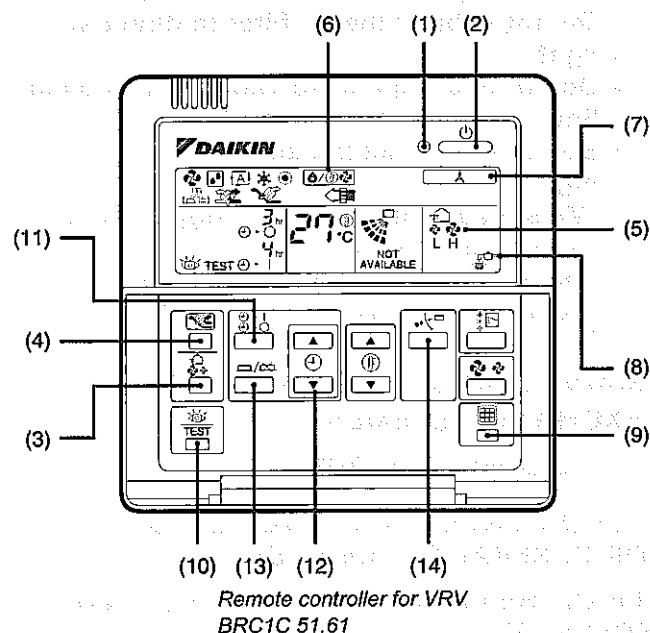

- (1) Operation lamp
- (2) Operation/stop button
- (3) Air flow rate changeover button
- (4) Ventilation mode changeover button
- (5) Indication of air flow rate
- (6) Indication of operation control method
- (7) Indication of centralized control
- (8) Indication of air filter cleaning
- (9) Filter signal reset button
- (10) Inspection button
- (11), (12), (13) See page 3 "HOW TO OPERATE WITH TIMER"
- (14) If you press these buttons when using independent operation of the HRV unit, the message "Not Available" will appear on the display for a few seconds.


When the VRV-system air conditioner is connected with the HRV unit with a direct duct, the remote controller of the air conditioner cannot be used to select the VENTILATION mode. To use the HRV unit without operating the air conditioner, set the air conditioner in the FAN VENTILATION mode and select the low fan speed.

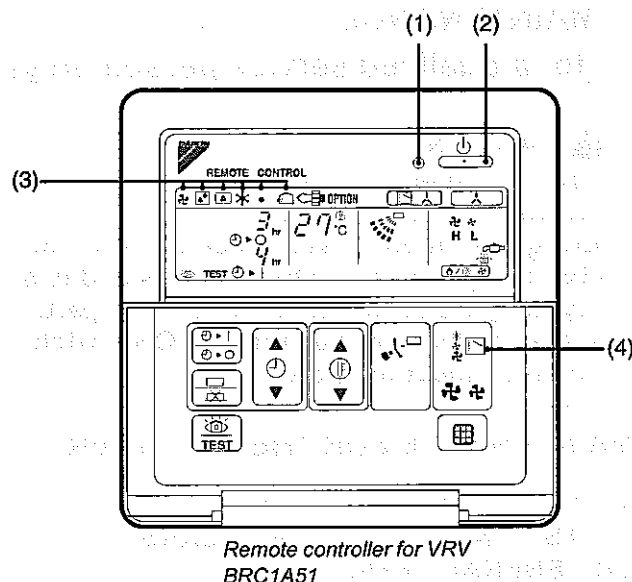

- (1) Operation lamp
- (2) Operation/stop button
- (3) Operation mode display
- (4) Operation mode selector

- Every time the operation mode selector is pressed, the operation mode display changes as shown below.

example)

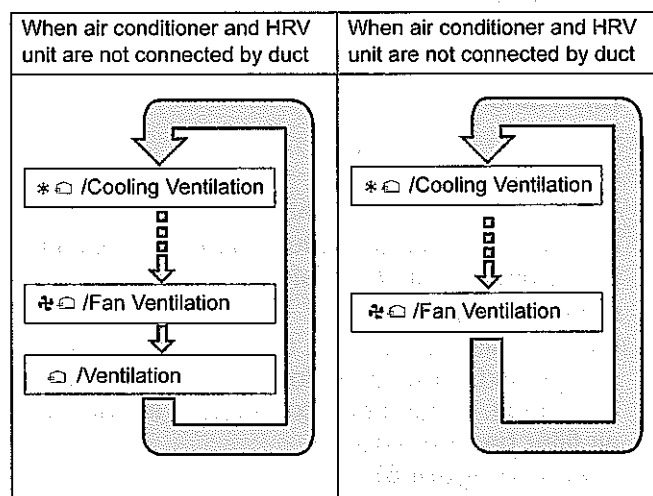

- When the "FILTER" indication appears on the display, clean the filter of the HRV unit. (Refer to the section 4)

3-4 Independent operation of the HRV unit using the Centralized controller (DCS302B61)

- After selecting the zone where the only the HRV unit operation is desired, press the operation mode selector and select "" VENTILATION. The HRV unit can then be operated independently from the air conditioner.
- When the "FILTER" indication appears on the display, clean the filter of the HRV unit. (Refer to the section 4)

4. MAINTENANCE

(for a qualified service person only)

⚠ CAUTION

Only a qualified service person is allowed to perform maintenance.

During operation, never check or clean the HRV. It may cause electrical shock and it is very dangerous to touch the rotating part. Be sure to turn off the OPERATION switch and disconnect the power.

■ MAINTENANCE FOR THE AIR FILTER

— CLEANING FREQUENCY —

AT LEAST ONCE EVERY TWO YEARS
(FOR GENERAL OFFICE USE)

(CLEAN THE ELEMENT MORE FREQUENTLY IF NECESSARY.)

1. Go into ceiling through the inspection hole, remove binding metal of maintenance cover and take it off.
(Refer to figure 3)
 - (1) Maintenance cover
 - (2) Binding metal
 - (3) Hanging metal
2. Take out the heat exchange elements from the unit body.
(Refer to figure 4)
 - (1) Heat exchange element
 - (2) Handle
 - (3) Rail
 - (4) Filter
3. To clean the air filter, lightly pat it with hand or remove dust with a vacuum cleaner. If excessively dirty, wash it in water.
(Refer to figure 5)
4. If the air filter is washed, remove water completely and allow to dry for 20 to 30 minutes in the shade. When dried completely, install the air filter back in place.
(Refer to figure 6)
5. Install the maintenance cover securely in place.

⚠ CAUTION

1. Do not wash the air filter in hot water.
2. Do not dry the air filter over a fire.
3. Do not subject the air filter to direct sunlight.
4. Do not use organic solvent such as gasoline and thinner on the air filter.
5. Be sure to install the air filter after servicing.
(Missing air filter causes clogged heat exchange element.)
The air filter is an optional item and the replacement is available.

■ MAINTENANCE FOR THE HEAT EXCHANGE ELEMENT

— CLEANING FREQUENCY —

AT LEAST ONCE EVERY TWO YEARS
(FOR GENERAL OFFICE USE)

(CLEAN THE ELEMENT MORE FREQUENTLY IF NECESSARY.)

1. Use a vacuum cleaner to remove dust and foreign objects on the surface of the heat exchange element.
(Refer to figure 7)
 - Use the vacuum cleaner equipped with a brush on the tip of the suction nozzle.
 - Lightly contact the brush on the surface of the heat exchanging element when cleaning.
(Do not crush the heat exchange element while cleaning.)
2. Install the air filter securely in place.
3. Put the heat exchange element on the rail and insert it securely in place.
4. Install the maintenance cover securely in place.

⚠ CAUTION

Never wash the heat exchanger element with water.

5. TROUBLE AND COUNTERMEASURE

5-1 If your unit does not operate properly, check the following items.

Conditions	Causes	Corrective actions
The unit does not operate at all.	Check if there is a power failure.	After power has been restored, start operation again.
	Check if the fuse has blown or breaker has worked.	Change the fuse or set the breaker.
	Check if the indication of operation control method on remote controller (BRC301B61) is shown.	This is normal. Operate the unit using the air conditioner remote control or centralized controller. (Refer to "3. OPERATION")
	Check if the indication of operation stand by on remote controller (BRC301B61) is shown.	It indicates the pre-cooling/pre-heating operation. This unit is at stop and will start operation after the pre-cooling/pre-heating operation is over. (Refer to "3. OPERATION")
Amount of discharged air is small and the discharging sound is high.	Check if the air filter and heat exchange element are clogged.	Refer to "4. MAINTENANCE"
Amount of discharged air is large and so is the sound.	Check if the air filter and heat exchange element are installed.	Refer to "4. MAINTENANCE"

5-2 If the following occurs, consult your dealer where the unit was purchased.

List of malfunction codes of Remote controller of the HRV-system air conditioner

Operation lamp	Inspection indicator	Unit No.	Malfunction code	Description
On	Off	Blinking	64	Indoor air thermistor malfunction
On	Off	Blinking	65	Outdoor air thermistor malfunction
On	Off	Blinking	6A	Dumper-related malfunction
Blinking	Blinking	Blinking	6A	Dumper-related malfunction + thermistor
Blinking	Blinking	Blinking	U5	Transmission error between the unit and remote controller
Off	Blinking	Off	U5	Printed circuit board error or setting error of remote controller
Off	Blinking	Off	U8	Transmission error between main remote controller and sub remote controller
Off	Blinking	Blinking	UA	Faulty installation setting
On	Blinking	On	UC	Repeated central address
Blinking	Blinking	Blinking	UE	Transmission error between the unit and centralized controller

In case of the malfunction with the code in white letters on the black background in the unit still operates.

However, be sure to have it inspected and repaired and as soon as possible.