

---


## ***VRV* SYSTEM      Air Conditioner**

---

### **MODELS**

#### **Ceiling-mounted cassette type (Multi flow model)**

<b>FXYP25-KAVE•KVEC</b>	<b>FXYFP32KV1</b>	<b>FXYP25KBVE</b>
<b>FXYP32-KAVE•KVEC</b>	<b>FXYFP40KV1</b>	<b>FXYP32KBVE</b>
<b>FXYP40-KAVE•KVEC</b>	<b>FXYFP50KV1</b>	<b>FXYP40KBVE</b>
<b>FXYP50-KAVE•KVEC</b>	<b>FXYFP63KV1</b>	<b>FXYP50KBVE</b>
<b>FXYP63-KAVE•KVEC</b>	<b>FXYFP80KV1</b>	<b>FXYP63KBVE</b>
<b>FXYP80-KAVE•KVEC</b>	<b>FXYFP100KV1</b>	<b>FXYP80KBVE</b>
<b>FXYP100-KAVE•KVEC</b>	<b>FXYFP125KV1</b>	<b>FXYP100KBVE</b>
<b>FXYP125-KAVE•KVEC</b>		<b>FXYP125KBVE</b>

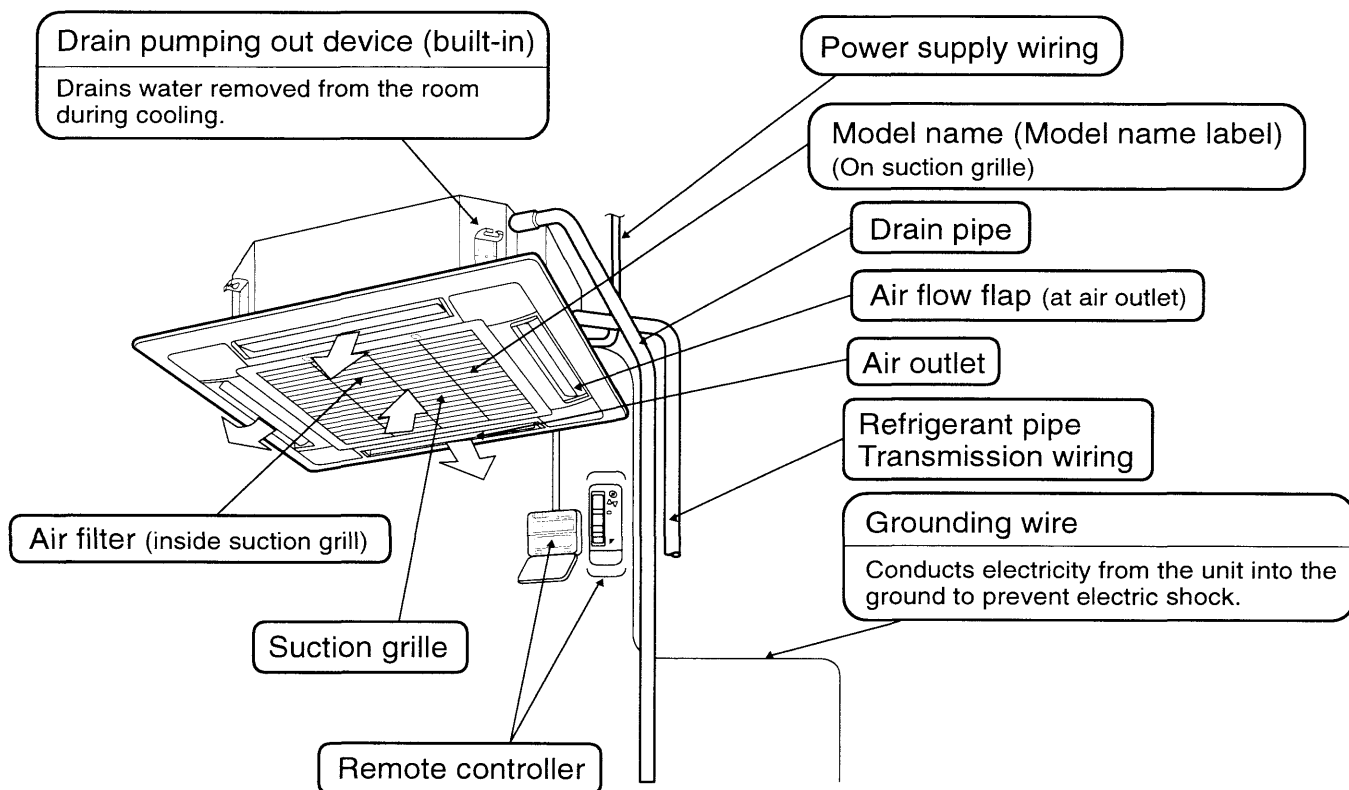


Thank you for purchasing this Daikin air conditioner. Carefully read this operation manual before using the air conditioner. It will tell you how to use the unit properly and help you if any trouble occurs. This manual explains about the indoor unit only. Use it along with the operation manual for the outdoor unit. After reading the manual, file it away for future reference.

## MAINTENANCE

### IMPORTANT!

- ONLY A QUALIFIED SERVICE PERSON IS ALLOWED TO PERFORM MAINTENANCE
- BEFORE OBTAINING ACCESS TO TERMINAL DEVICES, ALL POWER SUPPLY CIRCUITS MUST BE INTERRUPTED
- DO NOT USE WATER OR AIR OF 50°C OR HIGHER FOR CLEANING AIR FILTERS AND OUTSIDE PANELS

### HOW TO CLEAN THE AIR FILTER

Clean the air filter when the display shows “” (TIME TO CLEAN AIR FILTER)

Increase the frequency of cleaning if the unit is installed in a room where the air is extremely contaminated.


(As a yardstick for regulating yourself, consider cleaning the filter once a half year.)

If the dirt becomes impossible to clean, change the air filter. (Air filter for exchange is optional)

#### 1. Open the suction grille.


Slide the latches (x 2) outward to the side and carefully lower the grille.

(Do the same procedure for closing.)

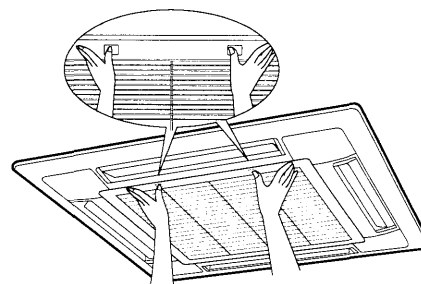

#### 2. Remove the air filters


Pull the air filter clips downward at an angle to detach the filter.

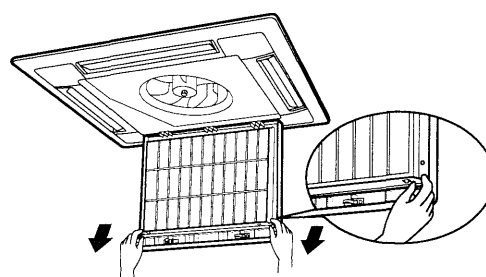

### 3. Clean the air filter.

Use vacuum cleaner ( A ) or wash the air filter with water ( B ).

A Using a vacuum cleaner

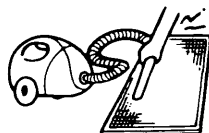

B Washing with water


To clean the air filter, use soft brush and neutral detergent.



Remove water and dry in the shade.

### 4. Fix the air filter


- ① Hook the air filter on the projections at the top of the suction grille.
- ② Press the bottom of the air filter against the projections on the bottom of the grille to snap the air filter into place.

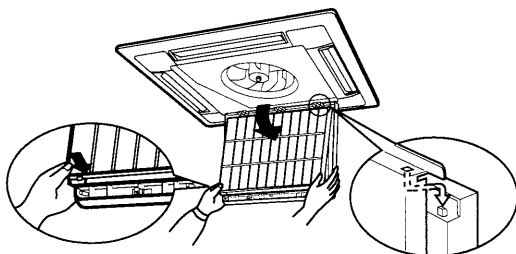

### 5. Shut the air inlet grille.

Refer to item No. 1.

### 6. Press the FILTER SIGN RESET BUTTON on the remote controller.

The display “” (TIME TO CLEAN AIR FILTER) vanishes.

(For details, see the operation manual for the outdoor unit.)

#### NOTE


- Do not remove the air filter except when cleaning. Unnecessary handling may damage the filter.

## HOW TO CLEAN THE SUCTION GRILLE

### 1. Open the suction grille.


Slide the latches (x 2) and carefully lower the grille.

(Do the same procedure for closing.)

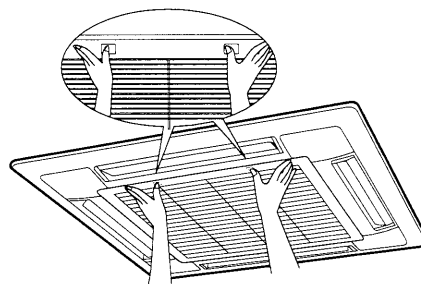

### 2. Detach the suction grille.

Open the suction grille 45 degrees and lift it upward.

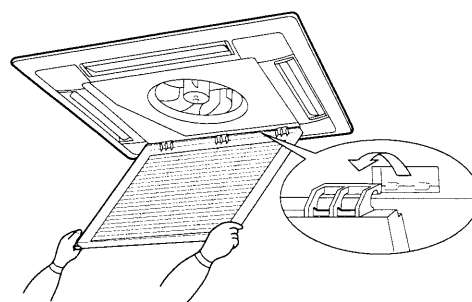

### 3. Clean the suction grille.

Wash with a soft bristle brush and neutral detergent or water, and dry thoroughly.



#### NOTE

- When badly soiled, spray with a typical kitchen cleanser and let sit for about 10 minutes. Then, wash with water.

### 4. Reattach the suction grille.

Refer to item No. 2.

### 5. Close the suction grille.

Refer to item No. 1.

## HOW TO CLEAN AIR OUTLET AND OUTSIDE PANELS

- Clean with soft cloth.
- When it is difficult to remove stains, use water or neutral detergent.

#### NOTES

- Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide. It may cause discoloring or warping.
- Do not let the indoor unit get wet. It may cause an electric shock or a fire.

**DAIKIN INDUSTRIES, LTD.**

Head office:  
Umeda Center Bldg., 4-12, Nakazaki-Nishi 2 chome,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

Shinjuku Sumitomo Bldg., 6-1 Nishi-Shinjuku  
2-chome, Shinjuku-ku, Tokyo, 163-0290 Japan

**DAIKIN EUROPE NV**

Zandvoordestraat 300, B-8400 Oostende, Belgium