


**DAIKIN**




# INSTALLATION AND OPERATION MANUAL

***VRV*** System air conditioners


FXSQ15A2VEB  
FXSQ20A2VEB  
FXSQ25A2VEB  
FXSQ32A2VEB  
FXSQ40A2VEB  
FXSQ50A2VEB  
FXSQ63A2VEB  
FXSQ80A2VEB  
FXSQ100A2VEB  
FXSQ125A2VEB  
FXSQ140A2VEB

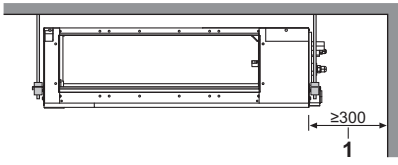


1

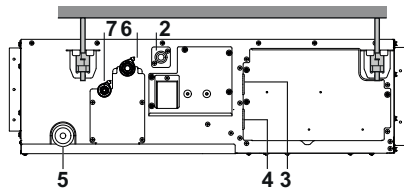


2

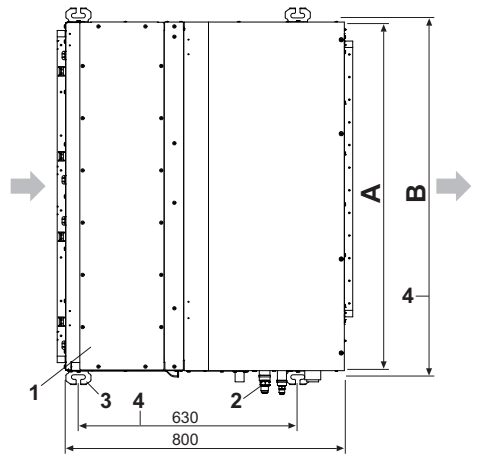


5

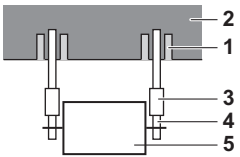


3

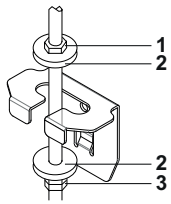


4

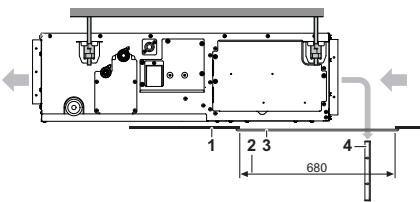


6a

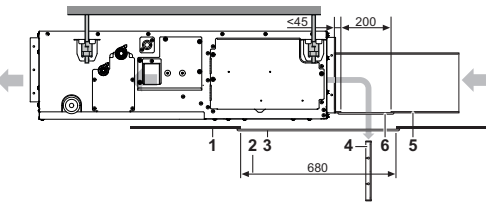


6b

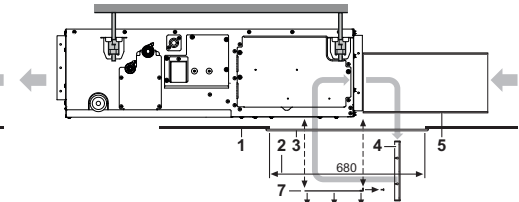


6c

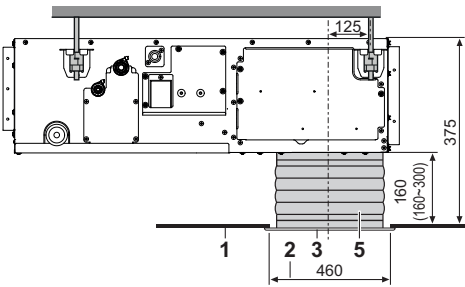


7a

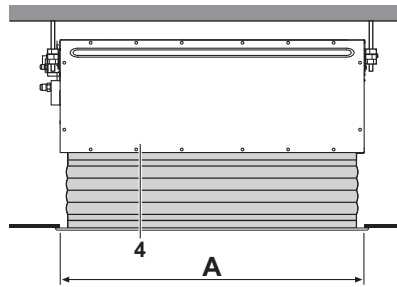


7b

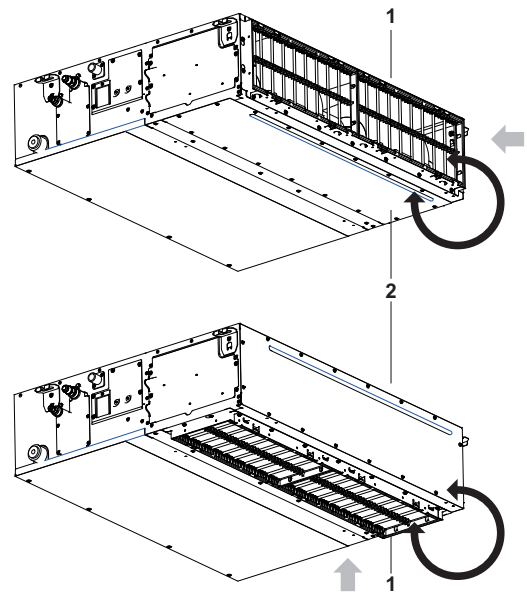


7c

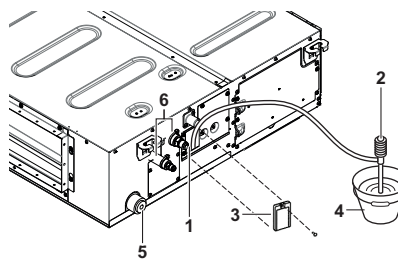



8

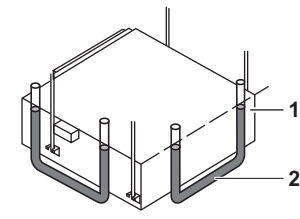

9

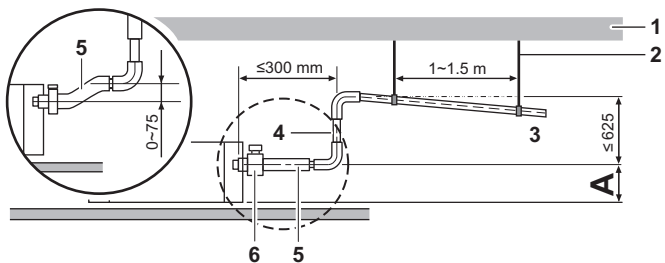

10

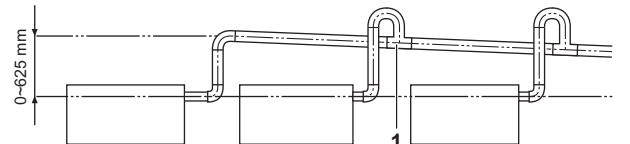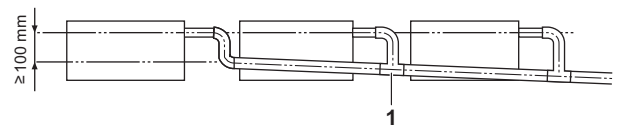

11

- CE - DECLARATION-OF-CONFORMITY  
 CE - KONFORMITÄTSPRÄKLARUNG  
 CE - DECLARATION-DE-CONFORMITE  
 CE - KONFORMITEITSVERKLARING

**Daikin Industries Czech Republic s.r.o.**

- 01 (en) declares under its sole responsibility that the air conditioning models to which this declaration relates;  
 02 (d) erklärt auf seine alleinige Verantwortung das die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;  
 03 (e) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration;  
 04 (nl) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;  
 05 (e) declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración;  
 06 (i) dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione;  
 07 (en) δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αφορά αυτή η παρούσα δήλωση;  
 08 (e) declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere.

- CE - DECLARACION-DE-CONFORMIDAD  
 CE - ЗАЯВЛЕНИЕ-О-СОПОБЕТСТВИИ  
 CE - OVERENSTEMMINGSVERKLARING  
 CE - FÖRSÄKRAN-OM-ÖVERENSTEMMELSE

- CE - ERKLÄRUNG OM-SAMSVAR  
 CE - ILMOITUS-YHDENMUKAISUDESTA  
 CE - DEKLARACJA-ZGODNOŚCI  
 CE - DECLARAȚIE-DE-CONFORMITATE

- CE - IZJAVA O SKLADNOSTI  
 CE - MEGFELELŐSÉG-NYILATKOZAT  
 CE - DEKLARACJA-ZGODNOŚCI  
 CE - DECLARAȚIE-DE-CONFORMITATE

- CE - IZJAVA O SKLADNOSTI  
 CE - VASTAVUSDEKLARACIJA  
 CE - ATBILSTĪBAS-DEKLARĀCIJA  
 CE - VYHLÁSENIE-ZHODY  
 CE - UYGUNLUK-BEYANI

- 17 (en) deklaruje na vlastní výhradzou odpovědnost, že modely klimatizátorov, ktorých dotyczy táto táto deklarácia;  
 18 (de) erklärt auf seine alleinige Verantwortung, dass die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;  
 19 (e) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration;  
 20 (nl) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;  
 21 (e) declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración;  
 22 (i) dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione;  
 23 (en) δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αφορά αυτή η παρούσα δήλωση;  
 24 (e) declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere;

**FXSQ15A2VEB, FXSQ20A2VEB, FXSQ25A2VEB, FXSQ32A2VEB, FXSQ36A2VEB, FXSQ50A2VEB, FXSQ63A2VEB, FXSQ80A2VEB, FXSQ100A2VEB, FXSQ125A2VEB, FXSQ140A2VEB,**


- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:  
 02 (en) den folgenden Normen (oder anderen Normdokumenten oder -dokumenten) entspricht/entsprechen, unter der Voraussetzung, dass sie gemäß unseren Anweisungen eingesetzt werden;  
 03 sont conformes à la(s) norm(e)s ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions;  
 04 conform de volgend(e) norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies;  
 05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones;  
 06 sono conformi all(i) seguente(i) standard(i) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni;  
 07 είναι σύμφωνα με το(ί) ακόλουθό(ί) πρότυπο(ί) ή/και έγγραφο(ί) κανονιστικό, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας;  
 08 (en) den folgenden Vorschriften of:  
 09 conformément aux stipulations des:  
 10 overeenkomstig de bepalingen van:  
 11 secondo le disposizioni de:  
 12 prema odredbama:  
 13 követeli al(z):  
 14 zgodnie z postanowieniami Dyrektyw:  
 15 в соответствии с положениями:  
 16 Note \* as set out in <A> and judged positively by <B>  
 17 Hinweis \* wie in <A> aufgeführt und von <B> positiv beurteilt  
 18 Remarque \* tel que défini dans <A> et évalué positivement par <B>  
 19 Bemerk \* zoals vermeld in <A> en positief beoordeeld door <B>  
 20 Bemerk \* como se establece en <A> y es valorado positivamente por <B> de acuerdo con el Certificado <C>  
 21 Nota \* delimitat nei <A> e giudicato positivamente di <B> secondo il Certificat <C>  
 22 Merk \* omicaa belygget av <A> og godkjent av <B> i henhold til <C>  
 23 Huom \* jotta on esitetty asiakkasra <A> ja jolla <B> on hyväksynyt Sertifikaatin <C>  
 24 Poznámka \* jak bylo uvedeno v <A> a pozitivně zjištěno <B> v souladu s ověřením <C>  
 25 Napomena \* kako je izloženo u <A> pozitivno ocijeneno od strane <B> prema Certificatu <C>

- 09 (en) заявляет, исключительно под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление;  
 10 (de) erklärt auf seine alleinige Verantwortung, dass die Modelle der Klimaanlage für die diese Erklärung inbezug auf;  
 11 (e) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration;  
 12 (nl) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;  
 13 (e) declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración;  
 14 (i) dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione;  
 15 (en) δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αφορά αυτή η παρούσα δήλωση;  
 16 (e) declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere;  
 17 spełnia wymagania następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami;  
 18 sunt în conformitate cu următoarele (următoarele) standarde (sau altele) documente normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre;  
 19 skлади з наступящих норм и других документов нормализационных, под warunkiem że используются согласно нашим инструкциям;  
 20 overeenkomstig de bepalingen van:  
 21 secondo le disposizioni de:  
 22 prema odredbama:  
 23 követeli al(z):  
 24 zgodnie z postanowieniami Dyrektyw:  
 25 в соответствии с положениями:  
 26 Note \* as set out in <A> and judged positively by <B>  
 27 Hinweis \* wie in <A> aufgeführt und von <B> positiv beurteilt  
 28 Remarque \* tel que défini dans <A> et évalué positivement par <B>  
 29 Bemerk \* zoals vermeld in <A> en positief beoordeeld door <B>  
 30 Bemerk \* como se establece en <A> y es valorado positivamente por <B> de acuerdo con el Certificado <C>  
 31 Nota \* delimitat nei <A> e giudicato positivamente di <B> secondo il Certificat <C>  
 32 Merk \* omicaa belygget av <A> og godkjent av <B> i henhold til <C>  
 33 Huom \* jotta on esitetty asiakkasra <A> ja jolla <B> on hyväksynyt Sertifikaatin <C>  
 34 Poznámka \* jak bylo uvedeno v <A> a pozitivně zjištěno <B> v souladu s ověřením <C>  
 35 Napomena \* kako je izloženo u <A> pozitivno ocijeneno od strane <B> prema Certificatu <C>

**Machinery 2006/42/EC\*\*  
 Electromagnetic Compatibility 2004/108/EC \***

- 01 Information \* enigi <A> och godkänns av <B> enligt Certifikat <C>  
 02 Merk \* som det fremkommer <A> og gjennoms positivt bedømmelse av <B> ifølge Sertifikaat <C>  
 03 Huom \* jotta on esitetty asiakkasra <A> ja jolla <B> on hyväksynyt Sertifikaatin <C>  
 04 Poznámka \* jak bylo uvedeno v <A> a pozitivně zjištěno <B> v souladu s ověřením <C>  
 05 Napomena \* kako je izloženo u <A> pozitivno ocijeneno od strane <B> prema Certificatu <C>  
 06 Megjegyzés \* a(z) <A> alapján a(z) <B> igazolta a megjelölt al(z) <C> tanúsítvány szerinti;  
 07 Uwaga \* zgodnie z dokumentacją <A> pozytywną opinię wydał <B> świadectwem <C>  
 08 Nota \* pesa cum esse stabili in <A> si avarcat pozitiv în <B> în conformitate cu Certificat <C>  
 09 Opomba \* kol je doobeno v <A> a pozitivno zjišeno <B> v skladu s certifikatom <C>  
 10 Märkus \* ragu on näidatud dokumentis <A> ja heals kiireld <B> järgi vastavalt sertifikaadile <C>  
 11 DICz\*\* on voliautletu laastama Teknisen asatiku;  
 12 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 13 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 14 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 15 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 16 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 17 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 18 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 19 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 20 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 21 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 22 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 23 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 24 A DICz\*\* on voliautletu laastama Teknisen asatiku;  
 25 A DICz\*\* on voliautletu laastama Teknisen asatiku;

- 01 Note \* as set out in <A> and judged positively by <B>  
 02 Hinweis \* wie in <A> aufgeführt und von <B> positiv beurteilt  
 03 Remarque \* tel que défini dans <A> et évalué positivement par <B>  
 04 Bemerk \* zoals vermeld in <A> en positief beoordeeld door <B>  
 05 Bemerk \* como se establece en <A> y es valorado positivamente por <B> de acuerdo con el Certificado <C>  
 06 Nota \* delimitat nei <A> e giudicato positivamente di <B> secondo il Certificat <C>  
 07 Merk \* omicaa belygget av <A> og godkjent av <B> i henhold til <C>  
 08 Huom \* jotta on esitetty asiakkasra <A> ja jolla <B> on hyväksynyt Sertifikaatin <C>  
 09 Poznámka \* jak bylo uvedeno v <A> a pozitivně zjištěno <B> v souladu s ověřením <C>  
 10 Napomena \* kako je izloženo u <A> pozitivno ocijeneno od strane <B> prema Certificatu <C>

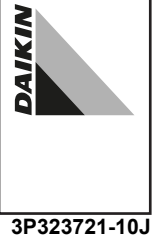

Tetsuya Baba  
 Managing Director  
 Pilsen, 2nd of March 2015

**DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.**  
 U Nové Hospody 1/1155, 301 00 Píseň Skvrňany,  
 Czech Republic

3P323721-10J

\*\*DICz = Daikin Industries Czech Republic s.r.o.

**Contents**

	<u>Page</u>
Before installation.....	1
Important information regarding the refrigerant used.....	2
Selecting installation site.....	2
Preparations before installation.....	2
Indoor unit installation.....	3
Installing the duct.....	3
Refrigerant piping work.....	4
Drain piping work.....	5
Electric wiring work.....	6
Wiring example and how to set the remote controller.....	7
Wiring example.....	7
Field setting.....	8
Installation of the decoration panel.....	10
Test operation.....	10
Maintenance.....	10
Disposal requirements.....	11
Wiring diagram.....	12

**!** READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION. KEEP THIS MANUAL IN A HANDY PLACE FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

The English text is the original instruction. Other languages are translations of the original instructions.

**!** **Installation must be done by a licensed technician. The choice of materials and installation must comply with the applicable national and international regulations.**

**Before installation**

- Leave the unit inside its packaging until you reach the installation site. Where unpacking is unavoidable, use a sling of soft material or protective plates together with a rope when lifting, this to avoid damage or scratches to the unit. When unpacking the unit or when moving the unit after unpacking, be sure to lift the unit by holding on to the hanger bracket without exerting any pressure on other parts, especially on refrigerant piping, drain piping and other resin parts.
- Refer to the installation manual of the outdoor unit for items not described in this manual.
- Caution concerning refrigerant series R410A:

The connectable outdoor units must be designed exclusively for R410A.


 

 
 

 
 
 

- Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.

**Precautions**

- Do not install or operate the unit in rooms mentioned below.
  - Places with mineral oil, or filled with oil vapour or spray like in kitchens. (Plastic parts may deteriorate.)
  - Where corrosive gas like sulphurous gas exists. (Copper tubing and brazed spots may corrode.)
  - Where volatile flammable gas like thinner or gasoline is used.
  - Where machines generating electromagnetic waves exist. (Control system may malfunction.)
  - Where the air contains high levels of salt such as air near the ocean and where voltage fluctuates a lot (e.g. in factories). Also in vehicles or vessels.
- Do not install accessories on the casing directly. Drilling holes in the casing may damage electrical wires and consequently cause fire.
- The unit should be installed at least 2.5 m from the floor.
- This appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- Sound pressure level is less than 70dB(A).

**Accessories**

Check if the following accessories are included with your unit.

 Metal clamp 1 piece	 Drain hose 1 piece	 Washer for hanging bracket 8 pieces	 Medium sealing pad 2 pieces
 Large sealing pad 1 piece	 Insulation for fitting for liquid pipe 1 piece	 Long sealing 2 pieces	 Installation and operation manual
 Screws for duct flanges 1 set 40 pieces.			 4 tie wraps

Screws for fixing panels are attached to the air inlet panel.

## Optional accessories

- There are two types of remote controllers: wired and wireless. Select a remote controller according to customer request and install in an appropriate place. Refer to catalogues and technical literature for selecting a suitable remote controller.
- When installing bottom suction: air inlet panel and canvas connection for the air inlet panel.

## For the following items, take special care during construction and check after installation is finished

Tick ✓ when checked	
<input type="checkbox"/>	Is the indoor unit fixed firmly? The unit may drop, vibrate or make noise.
<input type="checkbox"/>	Is the gas leak test finished? It may result in insufficient cooling or heating.
<input type="checkbox"/>	Is the unit fully insulated and checked for air leaks? Condensate water may drip.
<input type="checkbox"/>	Does drainage flow smoothly? Condensate water may drip.
<input type="checkbox"/>	Does the power supply voltage correspond to that shown on the name plate? The unit may malfunction or components may burn out.
<input type="checkbox"/>	Are wiring and piping correct? The unit may malfunction or components may burn out.
<input type="checkbox"/>	Is the unit safely grounded? Dangerous at electric leakage.
<input type="checkbox"/>	Is the wiring size according to specifications? The unit may malfunction or components may burn out.
<input type="checkbox"/>	Is nothing blocking the air outlet or inlet of either the indoor or outdoor units? It may result in insufficient cooling or heating.
<input type="checkbox"/>	Are refrigerant piping length and additional refrigerant charge noted down? The refrigerant charge in the system might not be clear.
<input type="checkbox"/>	Are the air filters fixed properly (when installing with rear duct)? Maintenance of the air filters can be impossible.
<input type="checkbox"/>	Is the external static pressure set? It may result in insufficient cooling or heating.

## Notes to the installer

- Read this manual carefully to ensure correct installation. Be sure to instruct the customer how to properly operate the system and show him/her the enclosed operation manual.
- Explain to the customer what system is installed on the site. Be sure to fill out the appropriate installation specifications in the chapter "What to do before operation" of the outdoor unit operation manual.

## Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol.

Refrigerant type: R410A

GWP<sup>(1)</sup> value: 1975

<sup>(1)</sup> GWP = global warming potential

Periodical inspections for refrigerant leaks may be required depending on European or local legislation. Please contact your local dealer for more information.

## Selecting installation site

(See [figure 1](#) and [figure 2](#))

- 1 Select an installation site where the following conditions are fulfilled and that meets your customer's approval.
  - Where optimum air distribution can be ensured.
  - Where nothing blocks air passage.
  - Where condensate water can be properly drained.
  - Where the false ceiling is not noticeably on an incline.
  - Where sufficient clearance for maintenance and service can be ensured.
  - Where there is no risk of flammable gas leaking.
  - The equipment is not intended for use in a potentially explosive atmosphere.
  - Where piping between indoor and outdoor units is possible within the allowable limit. (Refer to the installation manual of the outdoor unit.)
  - Keep indoor unit, outdoor unit, power supply wiring and transmission wiring at least 1 meter away from televisions and radios. This is to prevent image interference and noise in those electrical appliances. (Noise may be generated depending on the conditions under which the electric wave is generated, even if 1 meter is kept.)
  - When installing the wireless remote controller kit, the distance between wireless remote controller and indoor unit might be shorter if there are fluorescent lights who are electrically started in the room. The indoor unit must be installed as far as possible away from fluorescent lights.
  - Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
- 2 Ensure that a protective guard is installed on air suction and air outlet side to prevent that the fan blades or heat exchanger be touched.  
The protection must comply with relevant European and national regulations.
- 3 Use suspension bolts for installation. Check whether the ceiling is strong enough to support the weight of the indoor unit. If there is a risk, reinforce the ceiling before installing the unit.

- 1 Service space
- 2 Drain pipe
- 3 Power supply wiring port
- 4 Transmission wiring port
- 5 Maintenance drain outlet
- 6 Gas pipe
- 7 Liquid pipe

## Preparations before installation

- 1 Relation of ceiling opening to unit and suspension bolt position. (See [figure 5](#))

Model	A (mm)	B (mm)
15~32	550	588
40~50	700	738
63~80	1000	1038
100~125	1400	1438
140	1550	1588

- 1 Indoor unit
- 2 Pipe
- 3 Suspension bolt pitch (x4)
- 4 Suspension bolt pitch distance

For installation, choose one of the possibilities as listed further.

## Standard rear suction (See figure 6a)


- 1 Ceiling surface
- 2 Ceiling opening
- 3 Service access panel (optional accessory)
- 4 Air filter
- 5 Air inlet duct
- 6 Duct service opening
- 7 Interchangeable plate

## Installation with rear duct and duct service opening (See figure 6b)

## Installation with rear duct, no duct service opening (See figure 6c)


**NOTE** Before installation of the unit (in case of installation with duct, but no duct service opening): modify the position of the air filters.

- 1 Remove the air filter(s) at the outside of the unit
- 2 Remove the interchangeable plate
- 3 Install the air filter(s) from the inside of the unit
- 4 Reinstall the interchangeable plate

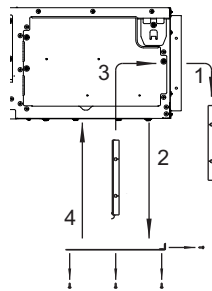

**NOTE** When installing an air inlet duct, select fixing screws that shall stick out maximum 5 mm at the inside of the flange to protect the air filter from damage during maintenance of the filter.

- 1 Air inlet duct
- 2 Inside of the flange
- 3 Fixing screw

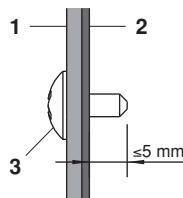

## Mounting the air inlet panel with a canvas connection (See figure 7a)

## Mounting the air inlet panel directly (See figure 7b)

- 1 Ceiling surface
- 2 Ceiling opening
- 3 Air inlet panel (Optional accessory)
- 4 Indoor unit (Back side)
- 5 Canvas connection for air inlet panel (Optional accessory)

Model	A (mm)
15~32	610
40~50	760
63~80	1060
100~125	1460
140	1610

## Bottom suction (See figure 7c)

**NOTE** The unit can be used with bottom suction by replacing the interchangeable plate by the air filter holding plate.

- 1 Air filter holding plate with air filter(s)
- 2 Interchangeable plate

**NOTE** For other installation than standard installation, contact your Daikin dealer for details.

- 2 The fan speed for this indoor unit is preset to provide standard external static pressure.
- 3 Install the suspension bolts.  
(Use M10 size bolt for the suspension bolt.) Use anchors for existing ceilings, and a sunken insert, sunken anchors or other field supplied parts for new ceilings to reinforce the ceiling in order to bear the weight of the unit.

### Installation example

(See figure 3)

- 1 Anchor
- 2 Ceiling slab
- 3 Long nut or turn-buckle
- 4 Suspension bolt
- 5 Indoor unit

**NOTE** All the above parts are field supplied.  
For other installation than standard installation, contact your dealer for details.

## Indoor unit installation

When installing optional accessories (except for the air inlet panel), read also the installation manual of the optional accessories. Depending on the field conditions, it may be easier to install optional accessories before the indoor unit is installed.

- 1 Install the indoor unit temporarily.
  - Attach the hanger bracket to the suspension bolt. Be sure to fix it securely by using a nut and washer from the upper and lower sides of the hanger bracket. (See figure 4)
- 2 Check if the unit is horizontally levelled.
  - Do not install the unit tilted. The indoor unit is equipped with a built-in drain pump and float switch. (If the unit is tilted against condensate flow, the float switch may malfunction and cause water to drip.)
  - Check if the unit is levelled at all four corners with a water level or a water-filled vinyl tube as shown in figure 9.
- 3 Tighten the upper nut.

- 1 Water level
- 2 Vinyl tube

## Installing the duct


Connect the duct supplied in the field.

### Air inlet side

- Attach the duct and intake-side flange (field supply).
- Connect the flange to the main unit with accessory screws (7).
- Wrap the intake-side flange and duct connection area with aluminum tape or something similar to prevent air escaping.



When attaching a duct to the intake side, be sure to attach an air filter inside the air passage on the intake side. (Use an air filter whose dust collecting efficiency is at least 50% in a gravimetric technique.)  
The included filter is not used when the intake duct is attached.

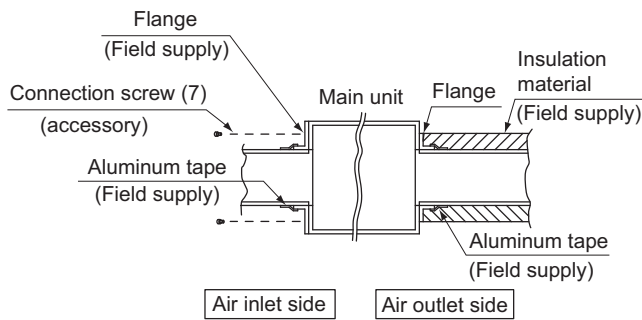

### Air outlet side

- Connect the duct according to the air inside of the outlet-side flange.
- Wrap the outlet-side flange and the duct connection area with aluminum tape or something similar to prevent air escaping.



- Be sure to insulate the duct to prevent condensation from forming. (Material: glass wool or polyethylene foam, 25 mm thick)
- Use electric insulation between the duct and the wall when using metal ducts to pass metal laths of the net or fence shape or metal plating into wooden buildings.
- Be sure to explain about the way of maintaining and cleaning local procurements (air filter, grille (both air outlet and suction grille), etc.) to your customer.

## Refrigerant piping work

For refrigerant piping of outdoor unit, refer to the installation manual supplied with the outdoor unit.


Before rigging tubes, check which type of refrigerant is used.



Installation shall be done by a licensed refrigeration technician, the choice of materials and installation shall comply with the applicable national and international codes. In Europe, EN378 is the applicable standard that shall be used.

- Use a pipe cutter and flare suitable for the used refrigerant.
- To prevent dust, moisture or other foreign matter from infiltrating the tube, either pinch the end, or cover it with tape.
- Use copper alloy seamless pipes (ISO 1337).
- The outdoor unit is charged with refrigerant.
- To prevent water leakage, execute heat insulation work completely on both sides of the gas and liquid piping. When using a heat pump, the temperature of the gas piping can reach up to approximately 120°C, use insulation which is sufficiently heat resistant.
- Be sure to use both a spanner and torque wrench together when connecting or disconnecting pipes to/from the unit.

- 1 Torque wrench
- 2 Spanner
- 3 Piping union
- 4 Flare nut

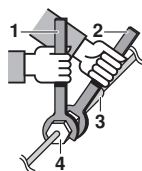


- Do not mix anything other than the specified refrigerant, such as air, etc..., inside the refrigerant circuit.
- Use annealed material only for flare connections.
- Refer to Table 1 for the dimensions of flare nut spaces and the appropriate tightening torque. (Overtightening may damage the flare and cause leaks.)

Table 1


Pipe gauge (mm)	Tightening torque (N·m)	Flare dimension A (mm)	Flare shape
Ø6.4	15~17	8.7~9.1	
Ø9.5	33~39	12.8~13.2	
Ø12.7	50~60	16.2~16.6	
Ø15.9	63~75	19.3~19.7	

 - When connecting the flare nut, coat the flare inner surface with ether oil or ester oil and initially tighten 3 or 4 turns by hand before tightening firmly.



- If the refrigerant gas leaks during the work, ventilate the area. A toxic gas is emitted by the refrigerant gas being exposed to a fire.
- Make sure there is no refrigerant gas leak. A toxic gas may be released by the refrigerant gas leaking indoor and being exposed to flames from an area heater, cooking stove, etc.
- Finally, insulate as shown in the figures below.

### Piping insulation procedure

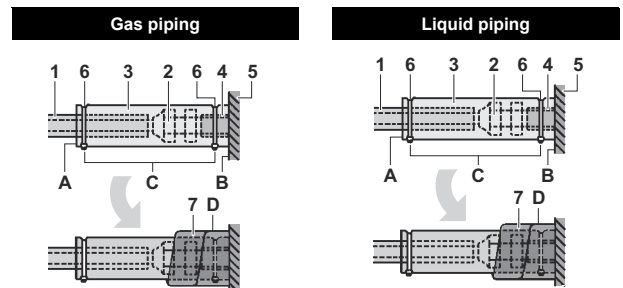


- 1 Piping insulation material (field supply)
  - 2 Flare nut connection
  - 3 Insulation for fitting (delivered with the unit)
  - 4 Piping insulation material (main unit)
  - 5 Main unit
  - 6 Clamp (field supply)
  - 7 Medium 1 sealing pad for gas piping (delivered with the unit)  
Medium 2 sealing pad for liquid piping (delivered with the unit)
- A Turn seams up  
B Attach to base  
C Tighten the part other than the piping insulation material  
D Wrap over from the base of the unit to the top of the flare nut connection



For local insulation, be sure to insulate local piping all the way into the pipe connections inside the unit. Exposed piping may cause condensation or may cause burns when touched.

### Cautions for brazing

- Be sure to carry out a nitrogen blow when brazing. Brazing without carrying out nitrogen replacement or releasing nitrogen into the piping will create large quantities of oxidized film on the inside of the pipes, adversely affecting valves and compressors in the refrigerating system and preventing normal operation.
- When brazing while inserting nitrogen into the piping, nitrogen must be set to 0.02 MPa with a pressure-reducing valve (=just enough so that it can be felt on the skin).

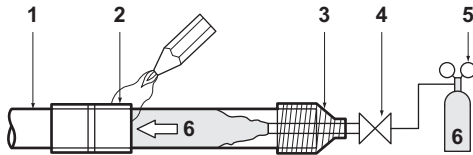

- 1 Refrigerant piping
- 2 Part to be brazed
- 3 Taping
- 4 Hands valve
- 5 Pressure-reducing valve
- 6 Nitrogen

- 1 Drain socket (attached to the unit)
- 2 Drain hose (supplied with the unit)
- 3 Metal clamp (supplied with the unit)
- 4 Large sealing pad (supplied with the unit)
- 5 Drain piping (field supply)

- Wrap the supplied large sealing pad over the metal clamp and drain hose to insulate and fix it with clamps.
- Insulate the complete drain piping inside the building (field supply).
- If the drain hose cannot be sufficiently set on a slope, fit the hose with drain raising piping (field supply).

■ How to perform drain piping

(See figure 10)

- 1 Ceiling slab
- 2 Hanger bracket
- 3 Adjustable range
- 4 Drain raising pipe
- 5 Drain hose (supplied with the unit)
- 6 Clamp metal (supplied with the unit)

- 1 Connect the drain hose to the drain raising pipes, and insulate them.
- 2 Connect the drain hose to the drain outlet on the indoor unit, and tighten it with the clamp.

Installation	A (mm)
Rear suction installation	231
When canvas duct is installed	350-530
When air inlet panel is directly installed	231

■ Precautions

- Install the drain raising pipes at a height of less than 625 mm.
- Install the drain raising pipes at a right angle to the indoor unit and no more than 300 mm from the unit.
- To prevent air bubbles, install the drain hose level or slightly tilted up ( $\leq 75$  mm).
- The drain pump mounted in this unit is the high lift type. The characteristic of this pump is that the higher the pump is the lower the drainage sound becomes. Therefore a drain pump height of 300mm is recommended.

**NOTE** The incline of attached drain hose should be 75 mm or less so that the drain socket does not have to withstand additional force.

To ensure a downward slope of 1:100, install hanging bars every 1 to 1.5 m.


When unifying multiple drain pipes, install the pipes as shown in figure 11. Select converging drain pipes whose gauge is suitable for the operating capacity of the unit.

- 1 T-joint converging drain pipes

## Drain piping work

### Installation of drain piping


Install the drain piping as shown in the figure and take measures against condensation. Improperly rigged piping could lead to leaks and eventually wet furniture and belongings.

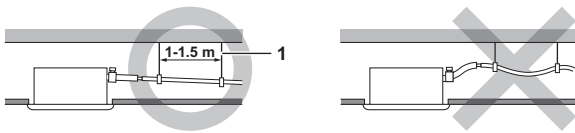

- 1 Hanging bar


■ Install the drain pipes.

- Keep piping as short as possible and slope it downwards at a gradient of at least 1/100 so that air may not remain trapped inside the pipe.
- Keep pipe size equal to or greater than that of the connecting pipe (vinyl pipe of 25 mm nominal diameter and 32 mm outer diameter).
- Push the supplied drain hose as far as possible over the drain socket.

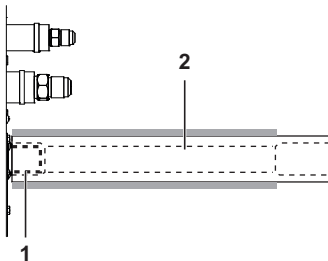

- 1 Drain socket (attached to the unit)
- 2 Drain hose (supplied with the unit)

- Tighten the metal clamp until the screw head is less than 4 mm from the metal clamp part as indicated in the illustration.

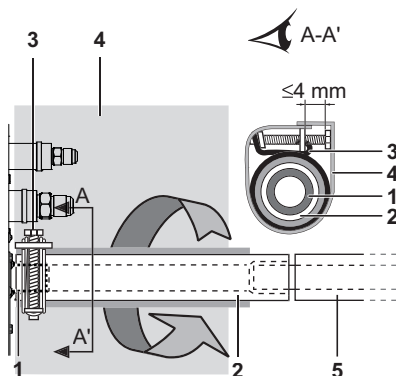

### Testing of drain piping

After piping work is finished, check if drainage flows smoothly.

- Add approximately 1 l of water gradually through the air discharge outlet. Check for water leaks. Method of adding water. See figure 8.

- 1 Water inlet
- 2 Portable pump
- 3 Water inlet cover
- 4 Bucket (adding water through water inlet)
- 5 Drain outlet for maintenance (with rubber drain plug)
- 6 Refrigerant pipes






### Caution for drain socket

Do not remove the drain pipe plug. Water might leak out.

The drain outlet is only used to discharge water if the drain pump is not used or before maintenance. Gently put in and out the drain plug. Excessive force may deform the drain socket of the drain pan.


- Pulling out the plug

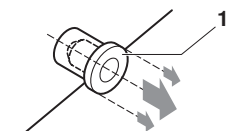

1 Drain plug

Do not wiggle the plug up and down

- Pushing in the plug

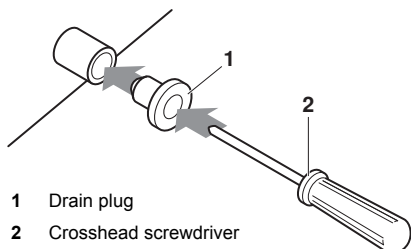

1 Drain plug

2 Crosshead screwdriver

Set the plug and push it by using a crosshead screwdriver

First perform electric wiring work as instructed in "Electric wiring work" on page 6 and how to set the remote controller as explained in "Wiring example and how to set the remote controller" on page 7.






### When electric wiring work is finished

Check drainage flow during COOL running, explained in "Test operation" on page 10.

### When electric wiring work is not finished

Remove the switch box cover and connect the single-phase power supply and the remote controller to the terminals. (Refer to "Electric wiring work" on page 6 for switch box attachment/detachment.) (Refer to figure 12 and figure 14)


- 1 Switch box cover
- 2 Transmission wiring port
- 3 Power supply wiring port
- 4 Wiring diagram
- 5 Switch box
- 6 Plastic clamp
- 7 Remote controller wiring
- 8 Terminal board for unit transmission wiring
- 9 Power supply wiring
- 10 Indoor PC board 1
- 11 Power supply terminal board
- 12 Transmission wiring between units
- 13 Indoor PC board 2
- 14 Long sealing
- 15 Wiring

Next, press the inspection/test operation button  on the remote controller. The unit will engage the test operation mode. Press the operation mode selector button  until selecting fan operation . Then, press the on/off button . The indoor unit fan and drain pump will start up. Check that the water has drained from the unit. Press  to go back to the first mode.

## Electric wiring work

### General instructions

- All field wiring and components must be installed by a licensed electrician and must comply with relevant European and national regulations.
- Use copper wire only.
- Follow the "Wiring diagram" attached to the unit body to wire the outdoor unit, indoor units and the remote controller. For details on hooking up the remote controller, refer to the "Installation manual of the remote controller".
- All wiring must be performed by an authorized electrician.
- Attach the earth leakage circuit breaker and fuse to the power supply line.
- A main switch or other means for disconnection, having a contact separation in all poles, must be incorporated in the fixed wiring in accordance with relevant local and national legislation. Note that the operation will restart automatically if the main power supply is turned off and then turned back on again.
- Refer to the installation manual delivered with the outdoor unit for the size of power supply electric wire connected to the outdoor unit, the capacity of the earth leakage breaker and fuse and for wiring instructions.
- Be sure to ground the air conditioner.
- Do not connect the ground wire to:
  - gas pipes: might cause explosions or fire if gas leaks.
  - telephone ground wires or lightning rods: might cause abnormally high electric potential in the ground during lightning storms.
  - plumbing pipes: no grounding effect if hard vinyl piping is used.
- Make sure that earth wire between the pull relief and terminal is longer than other wires.
- Be sure that the shape of the power supply cable and any other cable, before entering unit, should be as shown in this figure.
- All cables entering the unit should be fixed by tie wraps (accessory).
- Use long sealing (accessory) to block entrance of switch box as shown in figure 12.

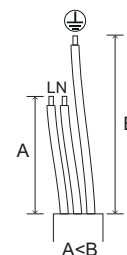

### Electrical characteristics

Model	Hz	Volts	Voltage range	Power supply	
				MCA	MFA
15	50/60	220-240/220	±10%	0.4	16 A
20				0.4	
25				0.4	
32				0.4	
40				0.8	
50				0.8	
63				0.9	
80				1.0	
100				1.5	
125				2.0	
140				1.9	

MCA: Min. circuit Amps (A)

MFA: Max. Fuse Amps (A)



NOTE For details, refer to "Electrical data" in the technical data book.

## Specifications for field supplied fuses and wire

Power supply wiring			
Model	Field fuses	Wire	Size
15~140	16 A	H05VV-U3G	Local codes

Model	Wire	Size
15~140	Sheathed wire (2)	0.75-1.25 mm <sup>2</sup>

**NOTE** For details, refer to "Wiring example" on page 7.



Allowable length of transmission wiring between indoor and outdoor units, and between the indoor unit and the remote controller is as follows:

1. Outdoor unit - indoor unit: max. 1000 m (total wiring length: 2000 m)
2. Indoor unit - remote controller: max 500 m

## Wiring example and how to set the remote controller

 
### How to connect wiring

Remove the switch box cover as shown in figure 12, and make the connections.

- 1 Switch box cover
- 2 Switch box low voltage wiring inlet
- 3 Switch box high voltage wiring inlet
- 4 Wiring diagram
- 5 Switch box

### Precautions

1. Observe the notes mentioned below when wiring to the power supply terminal board.
  - Use a round crimp-style terminal for insulation sleeve for connection to the terminal block for wiring the units. When none are available, follow the instructions below.



- 1 Round crimp-style terminal
- 2 Attach insulation sleeve
- 3 Wiring

- Do not connect wires of different gauge to the same power supply terminal. (Looseness in the connection may cause overheating.)
- When connecting wires of the same gauge, connect them according to the figure.



Use the specified electric wire. Connect the wire securely to the terminal. Lock the wire down without applying excessive force to the terminal. Use torques according to the table below.

Tightening torque (N·m)	
Terminal block for remote controller	0.79~0.97
Terminal block for power supply	1.18~1.44

- When attaching the control box lid, make sure not to pinch any wires.
- After all wiring connections are done, fill in any gaps in the casing wiring holes with putty or insulation material (field supply) thus to prevent small animals or dirt from entering the unit from outside and causing short circuits in the control box.

2. Do not connect wires of different gauge to the same grounding terminal. Looseness in the connection may deteriorate the protection.
3. Remote controller cords and wires connecting the units should be located at least 50 mm away from power supply wiring. Not following this guideline may result in malfunction due to electrical noise.
4. For the remote controller wiring, refer to the "Installation manual of the remote controller" supplied with the remote controller.

**NOTE** The customer has the ability to select the remote controller thermistor.



5. Never connect the power supply wiring to the terminal board for transmission wiring. This mistake could damage the entire system.
6. Use only specified wires and tightly connect wires to the terminals. Be careful that wires do not place external stress on the terminals. Keep wiring in neat order so that they do not obstruct other equipment such as popping open the switch box cover. Make sure the cover closes tight. Incomplete connections could result in overheating, and in the worse case, electric shock or fire.

Keep total current of crossover wiring between indoor units less than 12 A. Branch the line outside the terminal block of the unit in accordance with the electrical equipment standards, when using two power wiring of a gauge greater than 2 mm<sup>2</sup> (Ø1.6).

The branch must be sheathed in order to provide an equal or greater degree of insulation as power supply wiring itself.

## Wiring example

Fit the power supply wiring of each unit with a switch and fuse as shown in figure 16.

- 1 Power supply
- 2 Main switch
- 3 Power supply wiring
- 4 Transmission wiring
- 5 Switch
- 6 Fuse
- 7 BS unit REYQ only
- 8 Indoor unit
- 9 Remote controller

### Complete system example (3 systems)

When using 1 remote controller for 1 indoor unit (Normal operation) (See figure 15)

For group control or use with 2 remote controllers (See figure 17)

When including BS unit (See figure 13)

- 1 Outdoor unit
- 2 Indoor unit
- 3 Remote controller (optional accessories)
- 4 Most downstream indoor unit
- 5 For use with 2 remote controllers
- 6 BS unit

**NOTE** It is not necessary to designate an indoor unit address when using group control. The address is automatically set when the power is activated.



## Precautions

1. A single switch can be used to supply power to units on the same system. However, branch switches and branch circuit breakers must be selected carefully.
2. For a group control remote controller, choose the remote controller that suits the indoor unit which has the most functions.
3. All transmission wiring except for the remote controller wiring is polarized and must match the terminal symbol.
4. In case of group control, perform the remote controller wiring to the master unit when connecting to the simultaneous operation system (wiring to the slave unit is unnecessary).
5. When controlling the simultaneous operation system with 2 remote controllers, connect it to the master unit (wiring to the slave unit is unnecessary).
6. Be sure to connect the wiring to the master unit when combining with a simultaneous operating multi-type in group control.
7. Do not ground the equipment on gas pipes, water pipes, lightning rods or crossground with telephones. Improper grounding could result in electric shock.

## Field setting

Field setting must be made on the remote controller in function of the installation condition.

- Setting can be made by changing the "Mode number", "First code No." and "Second code No."
- For setting and operation, refer to the "Field settings" in the installation manual of the remote controller.

## Summary of field settings

Mode No. (Note 1)	First code No.	Description of setting	Second code No. (Note 2)				
			01	02	03	04	
10 (20)	0	Filter contamination - Heavy/Light = Setting to define time between 2 filter cleaning display indications. (When contamination is high, setting can be changed to half the time in between 2 filter cleaning display indications.)	Ultra-long-life filter	±10,000 hrs.	±5,000 hrs.	—	—
			Long-life filter	±2,500 hrs.	±1,250 hrs.		
			Standard filter	±200 hrs.	±100 hrs.		
	2	Thermostat sensor selection	Use both the unit sensor (or remote sensor if installed) AND the remote controller sensor. (See note 5+6)	Use unit sensor only (or remote sensor if installed). (See note 5+6)	Use remote controller sensor only. (See note 5+6)	—	
3	Setting for display of time between 2 filter cleaning display indications	Display	Do not display	—	—		
6	Thermostat sensor in group control	Use unit sensor only (or remote sensor if installed). (See note 6)	Use both the unit sensor (or remote sensor if installed) AND the remote controller sensor. (See note 4+5+6)	—	—		
12 (22)	0	Output signal X1-X2 of the optional KRP1B PCB kit	Thermostat-on + compressor run	—	Operation	Mal-function	
	1	ON/OFF input from outside (T1/T2 input) = Setting when forced ON/OFF is to be operated from outside.	Forced OFF	ON/OFF operation	—	—	
	3	Fan setting during thermostat OFF at heating operation	LL	Set speed	OFF (See note 3)	—	
	4	Differential automatic changeover	0°C	1°C	2°C	3°C (See note 7)	
	5	Auto-restart after power failure	Disabled	Enabled	—	—	
	9	Fixed cool/heat master	Disabled	Enabled	—	—	
15 (25)	3	Drain pump operation + humidifier interlock	Not equipped	Equipped	—	—	

**Note 1 :** Setting is carried out in the group mode, however, if the mode number inside parentheses is selected, indoor units can also be set individually.

**Note 2 :** Factory settings of the Second code No. are marked in grey backgrounds.

**Note 3 :** Only use in combination with optional remote sensor or when setting 10-2-03 is used.

**Note 4 :** If group control is selected and remote control sensor is to be used, then set 10-6-02 & 10-2-03.

**Note 5 :** If setting 10-6-02 + 10-2-01 or 10-2-02 or 10-2-03 are set at the same time, then setting 10-2-01, 10-2-02 or 10-2-03 have priority.

**Note 6 :** If setting 10-6-01 + 10-2-01 or 10-2-02 or 10-2-03 are set at the same time, then setting for group connection, 10-6-01 has priority and for individual connection, 10-2-01, 10-2-02 or 10-2-03 have priority.

**Note 7 :** More settings for Differential automatic change over temperatures are:

Second code No.	05	4°C
	06	5°C
	07	6°C
	08	7°C

## External static pressure settings

Settings for external static pressure can be achieved in 2 ways:

### Using the airflow automatic adjustment function

Airflow automatic adjustment is the volume of blow-off air that has been automatically adjusted to the rated quantity.

- 1 Make sure the test run is done with a dry coil.  
If the coil is not dry, run the unit for 2 hours with fan only to dry the coil.
- 2 Check if the power supply wiring to the air conditioning unit is completed along with the duct installation.  
If a closing damper is installed in the air conditioning unit, make sure that it is open.  
Also check if the air filter is properly attached into the air passage on the air suction side of the air conditioning unit.
- 3 If there is more than one air inlet and outlet, adjust the dampers so that the airflow rate of each air inlet and outlet is conform with the designed airflow rate.  
Make sure the air conditioning unit is in fan operation mode. Press and set the airflow adjustment button on the remote controller to change the airflow rate to H or L.
- 4 Setting the airflow automatic adjustment settings.

When the air conditioning unit is running in fan operation mode perform the next steps:

- stop the air conditioning unit,
- go to field setting mode,
- select mode No. 21 (or 11 in case of group setting),
- set the first code No. to "7",
- set the second code No. to "03".

Return to normal operating mode after setting these settings and press the ON/OFF operation button. The operation lamp will light up and the air conditioning unit will start the fan operation for airflow automatic adjustment.



Do not adjust the dampers during fan operation for airflow automatic adjustment.

After 1 to 8 minutes, the air conditioning unit stops operating automatically when the fan operation for airflow automatic adjustment has been carried out, the operation lamp will be off.

Mode No.	First code No.	Second code No.	Setting content
11 (21)	7	01	Airflow adjustment is OFF
		02	Completion of airflow adjustment
		03	Start of airflow adjustment

- 5 When the air conditioning unit has stopped, check on an indoor unit if the second code No. of mode No. 21 is set to "02".

If the air conditioning unit does not stop operating or the second code No. is not "02", repeat step 4.

If the outdoor unit is not turned on, the display on the remote controller will show "UH" or "UH" (refer to "Test operation" on page 10). However, you can continue setting this function because these messages are only applicable to outdoor units.

After setting this function, be sure to turn on the outdoor unit before performing the test operation on the outdoor unit.

If any other error display occurs on the display of the remote controller, refer to "Test operation" on page 10 and the operation manual of the outdoor unit. Check the defective point.



- If the external static pressure higher than 100 Pa, do not use airflow automatic adjustment function.
- If there is no change after airflow adjustment in the ventilation paths, be sure to perform setting the airflow automatic adjustment again.
- Contact your dealer if there is no change after performing airflow adjustment in the ventilation paths, after performing the test operation of the outdoor unit or when the air conditioning unit is moved to another location.
- If booster fans, an outdoor air processing unit or HRV via duct are used, do not use airflow automatic adjustment control with a remote controller.
- If the ventilation paths have been changed, perform the setting of the airflow automatic adjustment again as described above from step 3 onwards.

### Using the remote controller

Check on an indoor unit if the second code of mode No. 21 is set to "01" (= factory setting). Change the second code according to the external static pressure of the duct to be connected as shown in table 2.

#### NOTE

The second code No. is set to "01" by default.



Table 2

Mode No.	1st code No.	2nd code No.	External static pressure (Pa)											
			FXSQ											
			15	20	25	32	40	50	63	80	100	125	140	
13 (23)	6	01	30	30	30	30	30	30	30	30	40	40	50	50
		02	-	-	-	-	-	-	-	-	-	-	-	-
		03	30	30	30	30	30	30	30	-	-	-	-	-
		04	40	40	40	40	40	40	40	40	40	-	-	-
		05	50	50	50	50	50	50	50	50	50	50	50	50
		06	60	60	60	60	60	60	60	60	60	60	60	60
		07	70	70	70	70	70	70	70	70	70	70	70	70
		08	80	80	80	80	80	80	80	80	80	80	80	80
		09	90	90	90	90	90	90	90	90	90	90	90	90
		10	100	100	100	100	100	100	100	100	100	100	100	100
		11	110	110	110	110	110	110	110	110	110	110	110	110
		12	120	120	120	120	120	120	120	120	120	120	120	120
		13	130	130	130	130	130	130	130	130	130	130	130	130
		14	140	140	140	140	140	140	140	140	140	140	140	140
		15	150	150	150	150	150	150	150	150	150	150	150	150

### Control by 2 Remote Controllers (Controlling 1 indoor unit by 2 remote controllers)

When using 2 remote controllers, one must be set to "MAIN" and the other to "SUB".

#### MAIN/SUB CHANGEOVER


- Insert a wedge-head screwdriver into the recess between the upper and lower part of the remote controller and, working from the 2 positions, pry off the upper part. (See figure 18)  
(The remote controller PC board is attached to the upper part of the remote controller.)
- Turn the main/sub changeover switch on one of the two remote controller PC boards to "S". (See figure 19)  
(Leave the switch of the other remote controller set to "M".)

- 1 Remote controller PC board
- 2 Factory setting
- 3 Only one remote controller needs to be changed

## Computerised control (forced off and on/off operation)

- Wire specifications and how to perform wiring
  - Connect input from outside to terminals T1 and T2 of the terminal board (remote controller to transmission wiring).

Wire specification	Sheathed vinyl cord or cable (2 wire)
Gauge	0.75-1.25 mm <sup>2</sup>
Length	Max. 100 m
External terminal	Contact that can ensure the minimum applicable load of 15 V DC, 10 mA

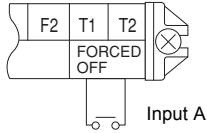

### 2 Actuation

- The following table explains "forced off" and "on/off operations" in response to input A.

Forced off	on/off operation
Input "on" stops operation	input off → on: turns on the unit (impossible by remote controllers)
Input "off" enables control	input on → off: turns off the unit by remote controller

### 3 How to select forced off and on/off operation

- Turn the power on and then use the remote controller to select operation.
- Set the remote controller to the field set mode. For details, refer to the chapter "How to set in the field", in the remote controller manual.
- When in the field set mode, select mode No. 12, then set the first code No. to "1". Then set second code (position) No. to "01" for forced off and to "02" for on/off operation. (forced off at factory set.) (See figure 20)

- Second code No.
- Mode No.
- First code No.
- Field set mode

## Centralized control

For centralized control, it is necessary to designate the group No. For details, refer to the manual of each optional controller for centralized control.

## Installation of the decoration panel

Refer to the installation manual attached to the decoration panel.

After installing the decoration panel, ensure that there is no space between the unit body and decoration panel.

## Test operation

Refer to the installation manual of the outdoor unit.

The operation lamp of the remote controller will flash when an error occurs. Check the error code on the liquid crystal display to identify the trouble.

Error code	Meaning
ⒷⒷ	Error in power supply to indoor unit
Ⓒ1	Transmission error between fan driver PCB and controller PCB of the indoor unit
Ⓒ6	Improper combination of fan driver PCB of the indoor unit or setting failure in control PCB type
ⓗ3	Test operation of the indoor unit has not been finished

If any of the items in following table are displayed on the remote controller, there may be a problem with the wiring or power, so check the wiring again.

Error code	Meaning
Ⓜ	There is a short circuit at the forced off terminals (T1, T2)
ⓗ4 or ⓗH	<ul style="list-style-type: none"> <li>The power on the outdoor unit is off</li> <li>The outdoor unit has not been wired for power supply</li> <li>Incorrect transmission of forced off wiring</li> </ul>
no display	<ul style="list-style-type: none"> <li>The power on the indoor unit is off</li> <li>The indoor unit has not been wired for power supply</li> <li>Incorrect transmission wiring, forced off wiring or remote controller wiring</li> </ul>

## Maintenance



### Caution

- Only a qualified service person is allowed to perform maintenance.
- Before obtaining access to terminal devices, all power supply circuits must be interrupted.
- Do not use water or air of 50°C or higher for cleaning air filters and outside panels.
- When cleaning the heat exchanger, be sure to remove the switchbox, fan motor, auxiliary electric heater and drain pump. Water or detergent may deteriorate the insulation of electronic components and result in burn-out of these components.
- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

### How to clean the air filter


Clean the air filter when the display shows "Ⓔ" (TIME TO CLEAN AIR FILTER).

Increase the frequency of cleaning if the unit is installed in a room where the air is extremely contaminated.


If the dirt becomes impossible to clean, change the air filter. (Air filter for exchange is optional.)

- Open the suction grille. (Only for bottom suction.)

Slide both knobs simultaneously as shown and then pull them downward.

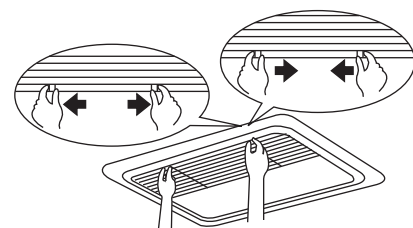


If chains are present, unhook the chains.

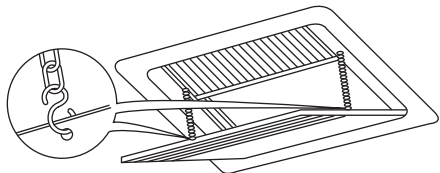


**2 Remove the air filters.**

Remove the air filters by pulling their cloth upward (rear suction) or backward (bottom suction).

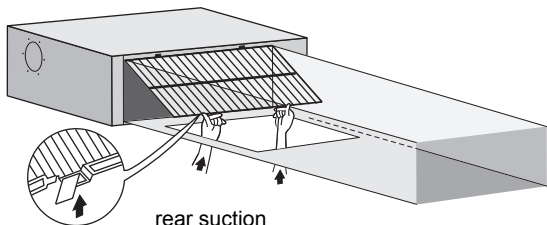

rear suction

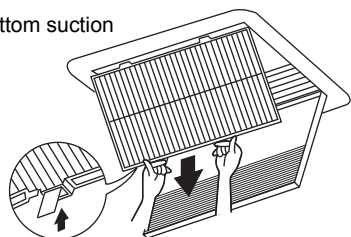

bottom suction

**3 Clean the air filter.**

Use vacuum cleaner (A) or wash the air filter with water (B).

(A) Using a vacuum cleaner


(B) Washing with water




When the air filter is very dirty, use soft brush and neutral detergent.

Remove water and dry in the shade.

**4 Fix the air filter.**

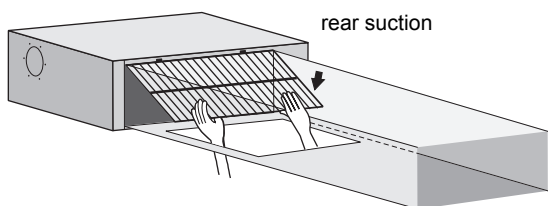

rear suction

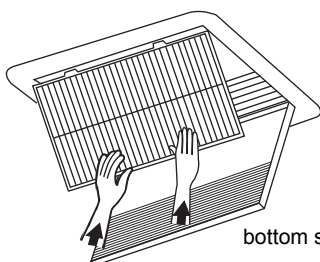

bottom suction

Align the two hanger brackets and push the two clips in their place (pull the cloth if necessary).  
Confirm that four hangers are fixed.

- 5 Shut the air inlet grille. (Only for bottom suction.)  
Refer to item no. 1.
- 6 After turning on the power, press FILTER SIGN RESET button.  
The "TIME TO CLEAN AIR FILTER" display is turned off.

**How to clean air outlet and outside panels**

- Clean with soft cloth.
- When it is difficult to remove stains, use water of neutral detergent.
- Clean the air inlet grille when it is shut.

**NOTE**



Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide. It may cause discolouring or warping.

Do not let the indoor unit get wet. It may cause an electric shock or a fire.

**Start up after a long stop**

Confirm the following:

- Check that the air inlet and outlet are not blocked. Remove any obstacle.
- Check if the earth is connected.

Clean the air filter and outside panels.

- After cleaning the air filter, make sure to attach it.

Turn on the main power supply switch.

- The control panel display lights when the power is turned on.
- To protect the unit, turn on the main power switch at least 6 hours before operation.

**What to do when stopping the system for a long period**

Turn on FAN OPERATION for half a day and dry the unit.

- Refer to the operation manual of the outdoor unit.




Cut off the power supply.

- When the main power switch is turned on, some wattage is being consumed even if the system is not operating.
- The remote controller display is turned off when the main power switch is turned off.

**Disposal requirements**

Dismantling of the unit, treatment of the refrigerant, of oil and of other parts must be done in accordance with relevant local and national legislation.

## Wiring diagram

 : FIELD WIRING  
 : CONNECTOR  
 : SCREW TERMINAL

BLK : BLACK  
 BLU : BLUE  
 BRN : BROWN  
 GRN : GREEN  
 ORG : ORANGE  
 PNK : PINK  
 RED : RED  
 WHT : WHITE  
 YLW : YELLOW



A1P.....PRINTED CIRCUIT BOARD	R2T.....THERMISTOR (LIQUID)
A2P.....PRINTED CIRCUIT BOARD (FAN)	R3T.....THERMISTOR (COIL)
C1.....CAPACITOR	S1L.....FLOAT SWITCH
C105.....CAPACITOR	V1R.....DIODE BRIDGE
DS1.....SELECTOR SWITCH	V2R.....POWER MODULE
F1U.....FUSE (T, 3.15 A, 250 V)	X1M.....TERMINAL STRIP (POWER SUPPLY)
F2U.....FUSE (T, 5 A, 250 V)	X2M.....TERMINAL BLOCK (CONTROL)
F3U.....FUSE (T, 6.3 A, 250 V)	Y1E.....ELECTRONIC EXPANSION VALVE COIL
HAP.....INDICATION LAMPS	Z1C.....FERRITE CORE
K1R.....MAGNETIC RELAY	Z2C.....FERRITE CORE
L1R.....REACTOR	Z1F.....NOISE FILTER
M1F.....MOTOR (INDOOR FAN)	
M1P.....MOTOR (DRAIN PUMP)	<b>CONNECTOR (OPTIONAL ACCESSORY)</b>
PS.....SWITCHING POWER SUPPLY	X28A.....CONNECTOR (POWER SUPPLY FOR WIRING)
Q1DI.....EARTH LEAKAGE BREAKER	X33A.....CONNECTOR (FOR WIRING)
R1.....RESISTOR (CURRENT SENSOR)	X35A.....CONNECTOR (POWER SUPPLY FOR WIRING)
R2.....RESISTOR (CURRENT SENSOR)	X38A.....CONNECTOR (FOR WIRING)
R1T.....THERMISTOR (SUCTION)	

WIRED REMOTE CONTROLLER	:	Wired remote controller
(OPTIONAL ACCESSORY)	:	(Optional accessory)
SWITCH BOX (INDOOR)	:	Switch box (indoor)
TRANSMISSION WIRING	:	Transmission wiring
CENTRAL REMOTE CONTROLLER	:	Central remote controller
INPUT FROM OUTSIDE	:	Input from outside
COMMON POWER SUPPLY	:	Common power supply



### NOTE









1. USE COPPER CONDUCTORS ONLY.
2. WHEN USING THE CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
3. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED "OFF" OR "ON/OFF" CONTROL OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. SEE INSTALLATION MANUAL FOR MORE DETAILS.
4. REFER TO INSTALLATION MANUAL.

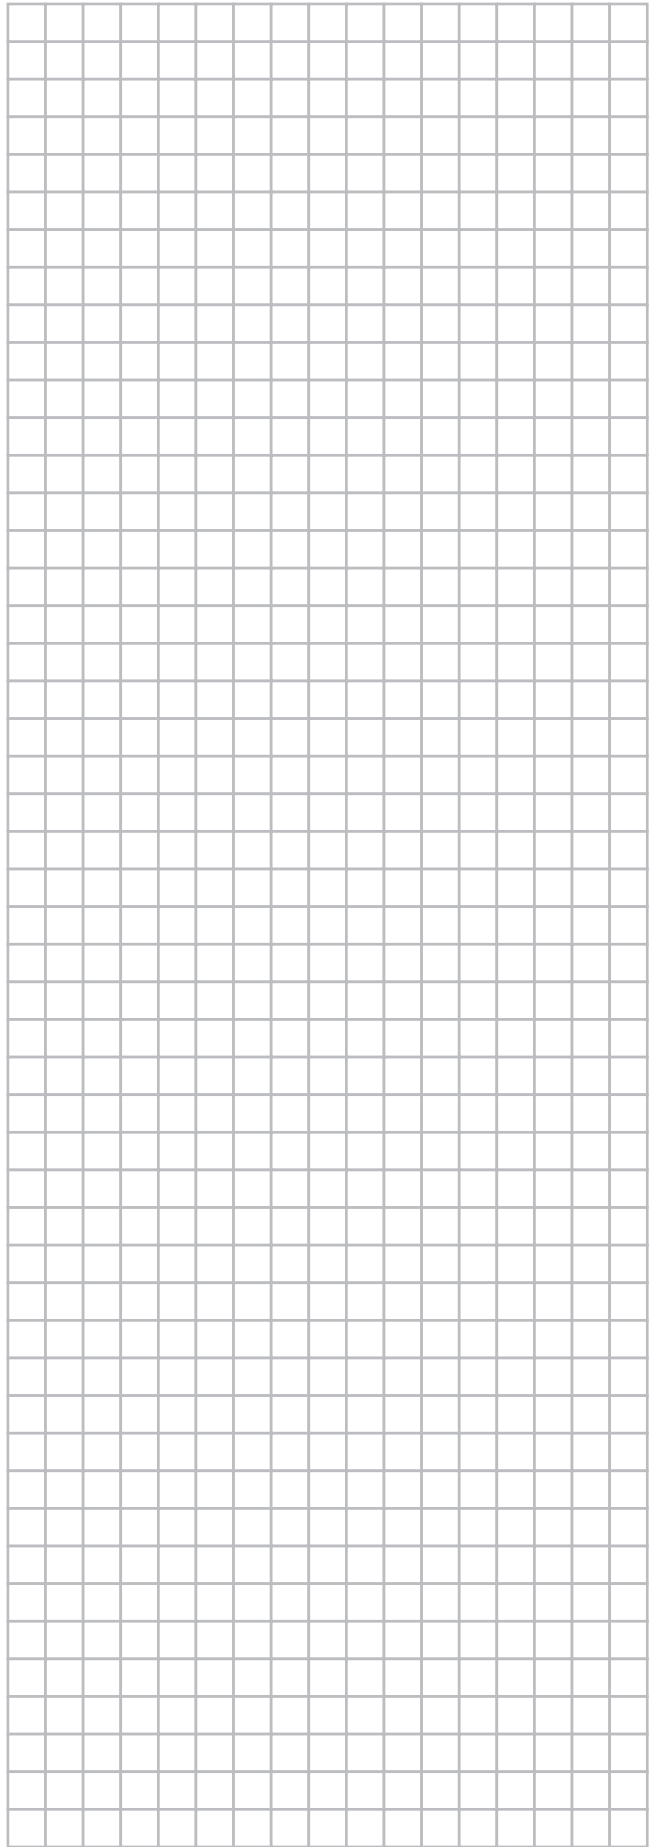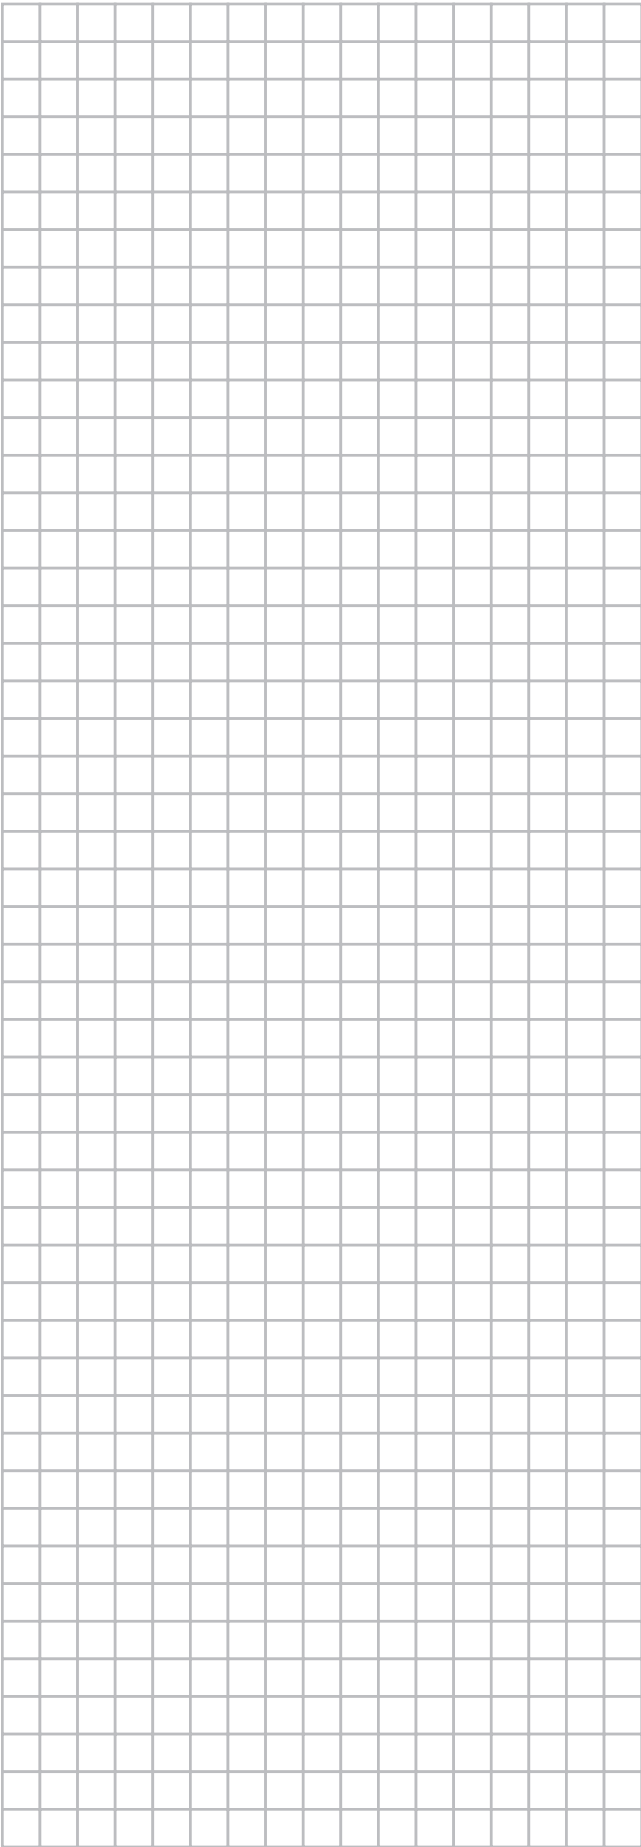




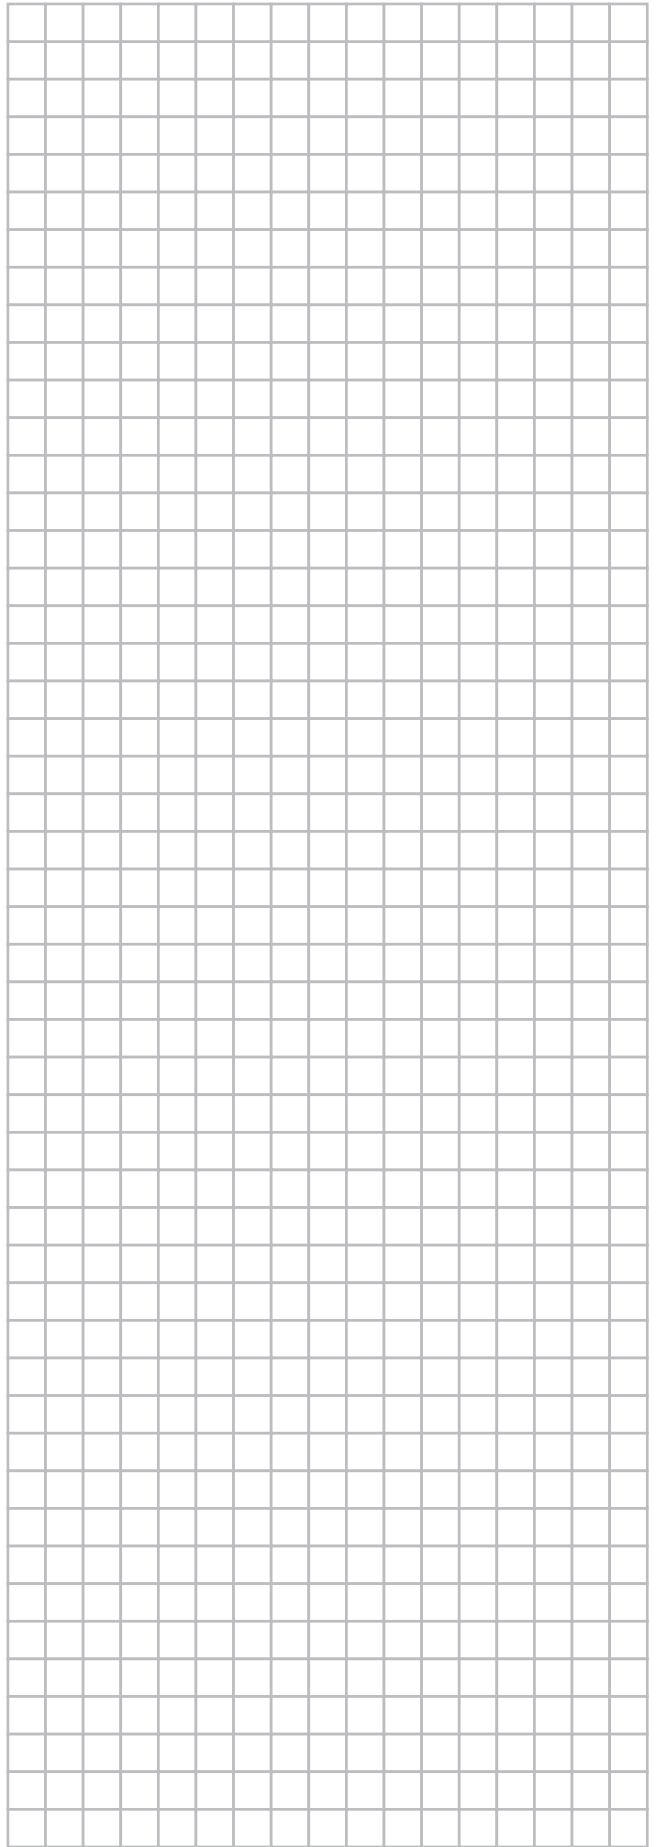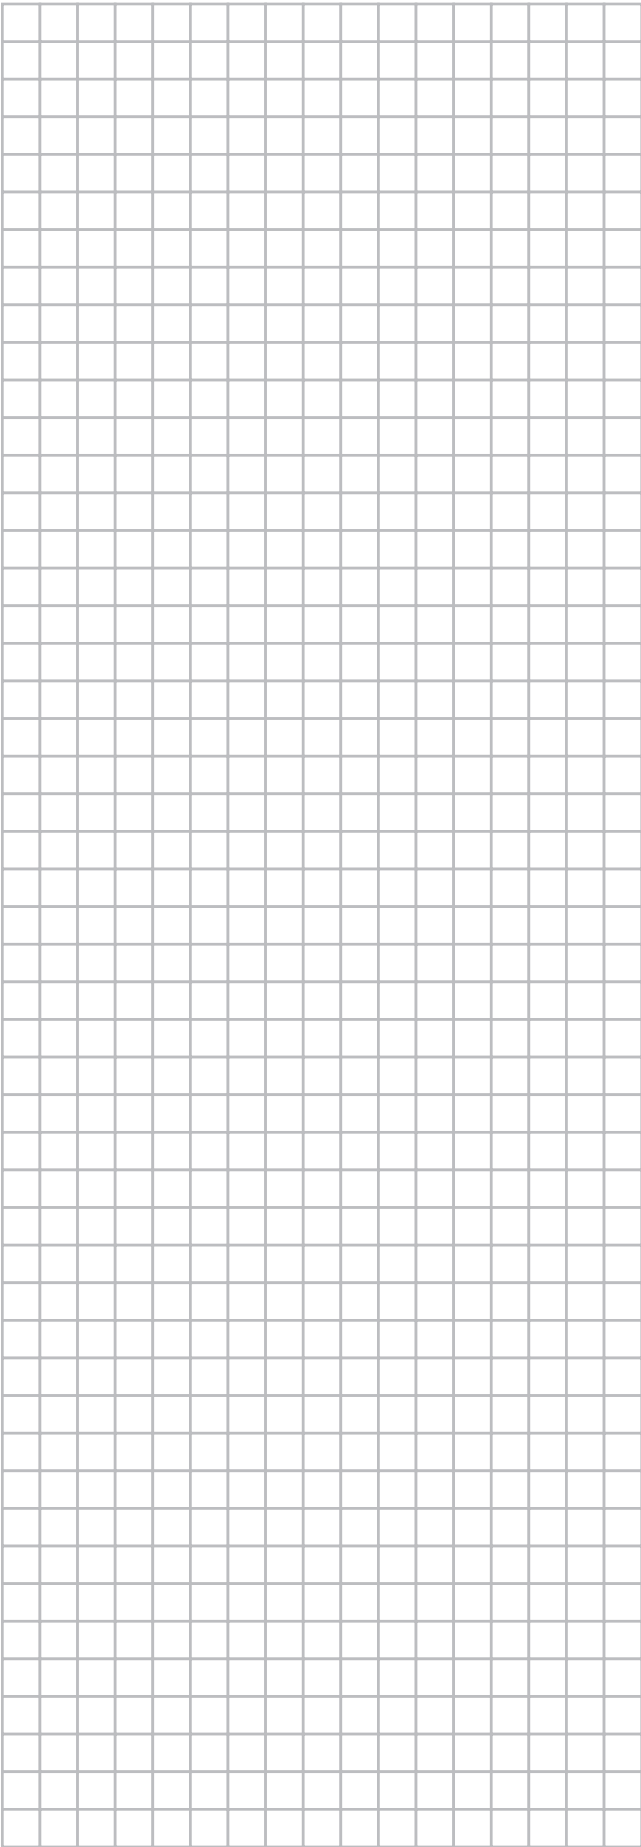

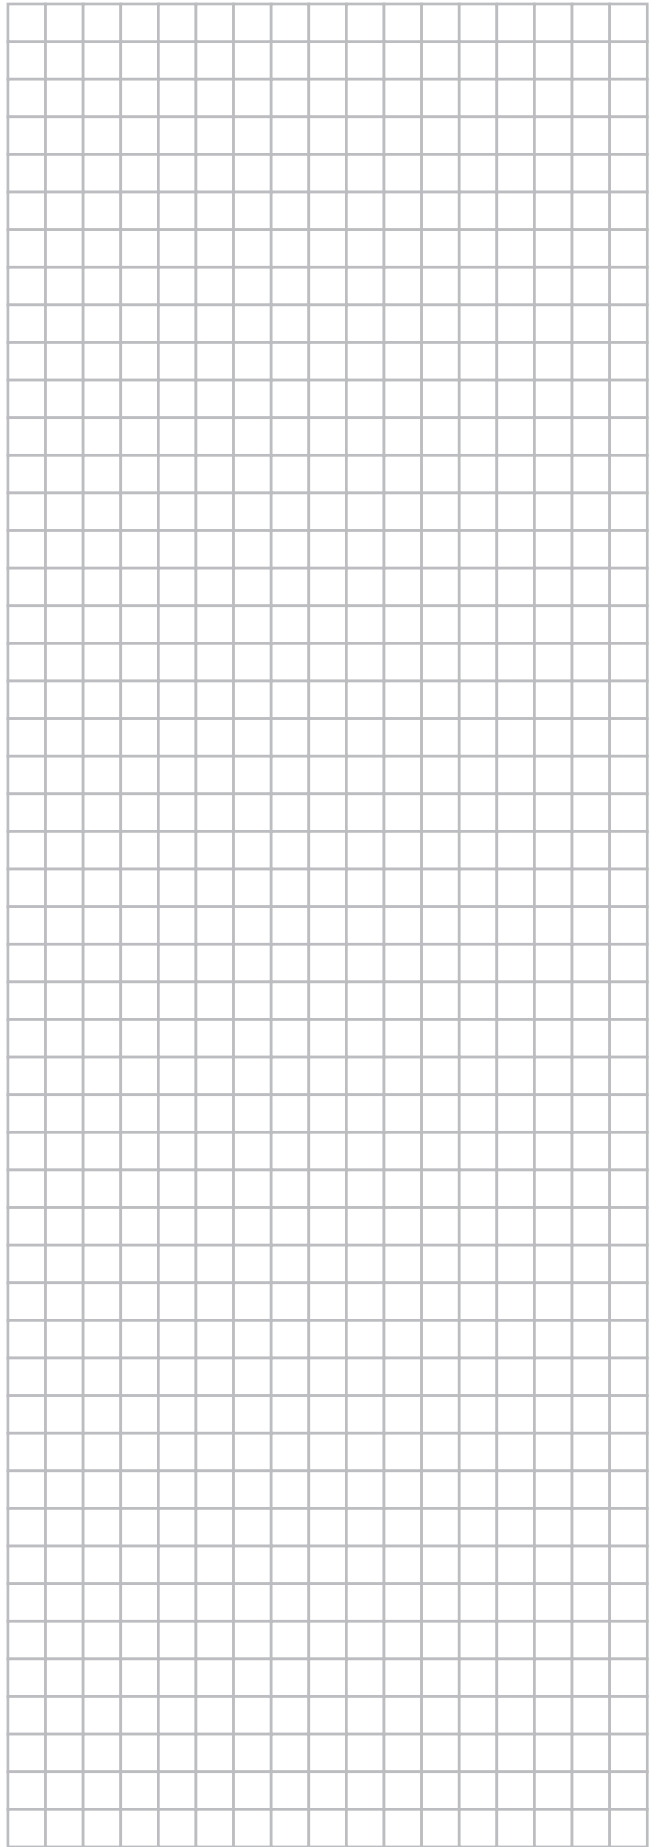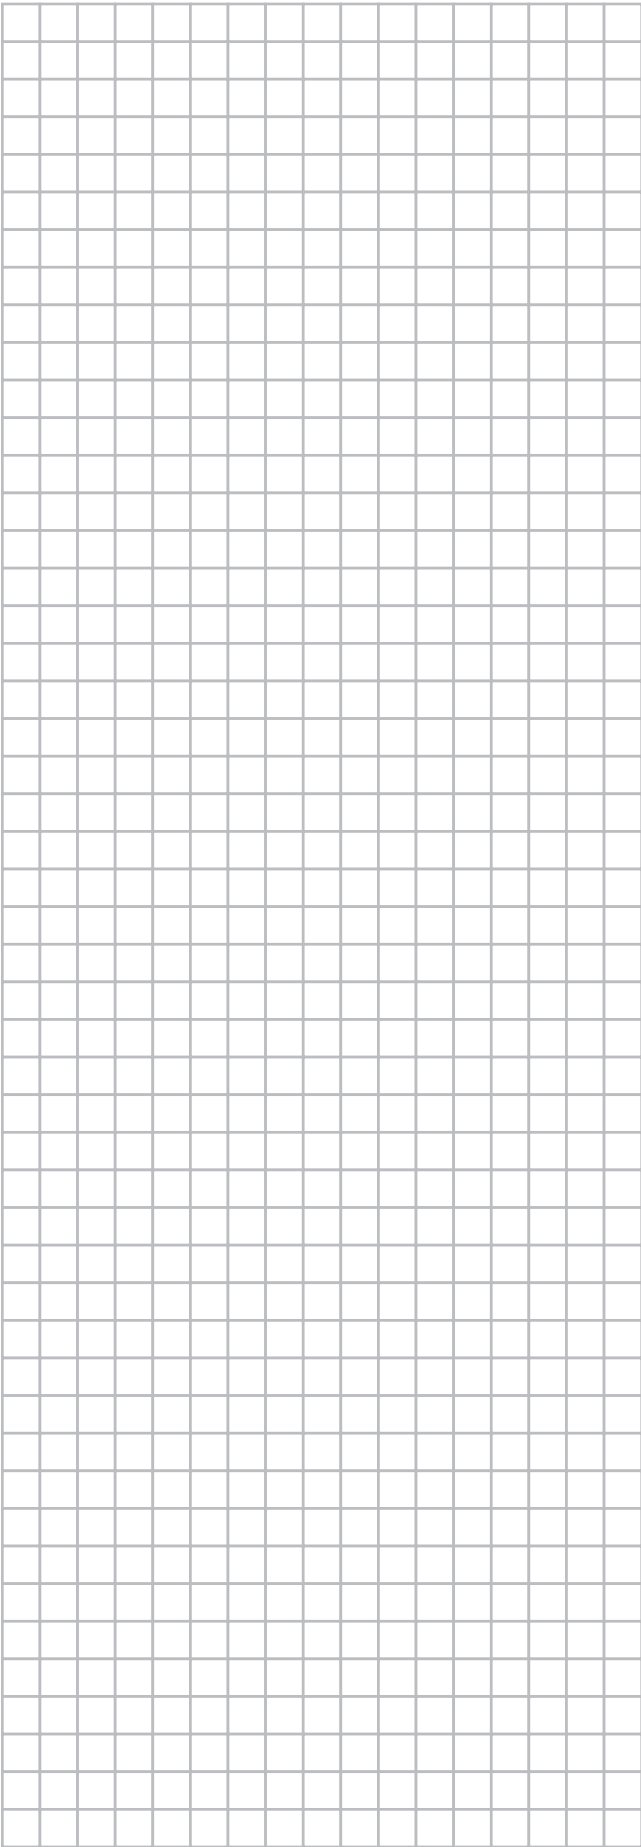

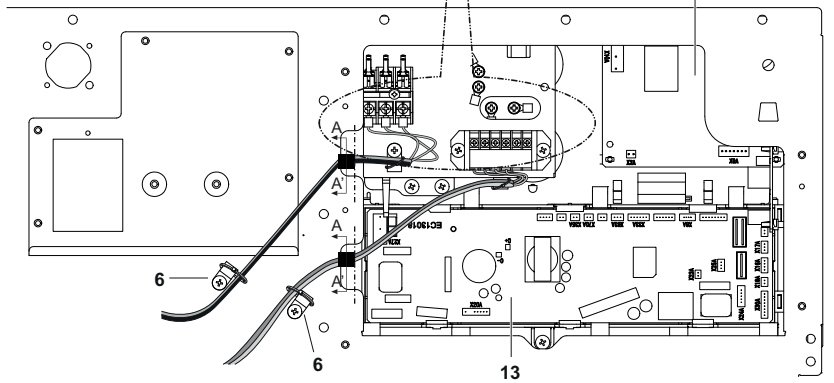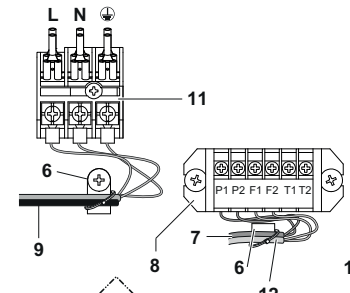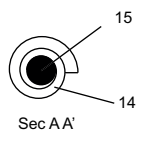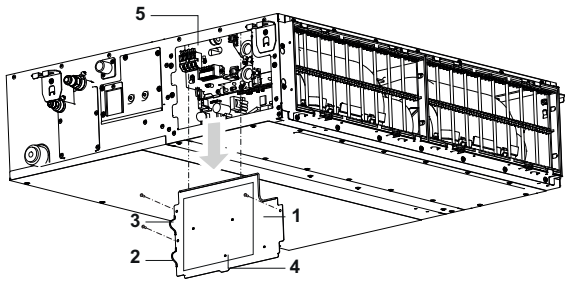


12

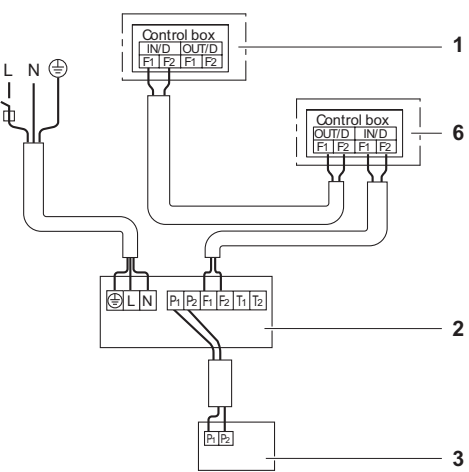


13


14

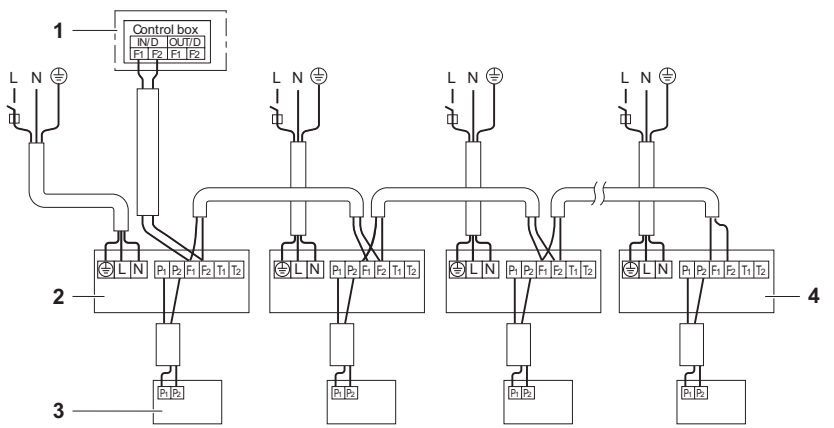


15

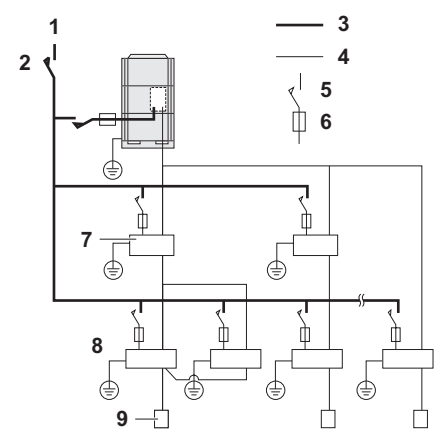


16

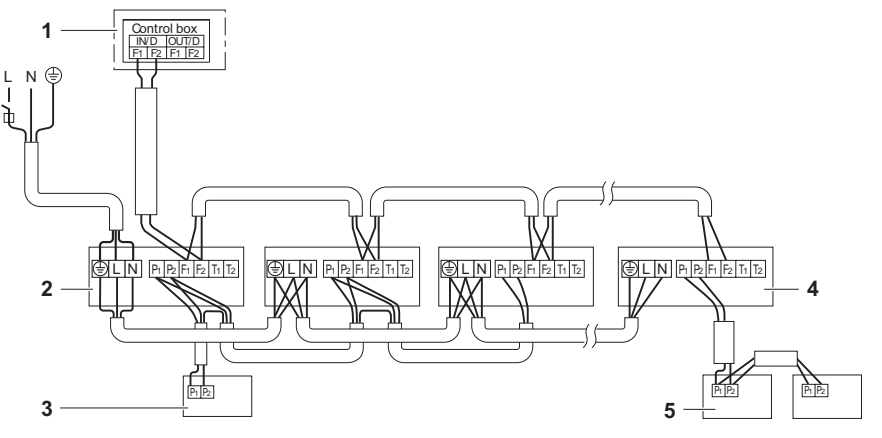


17

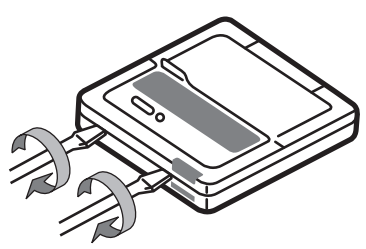

18

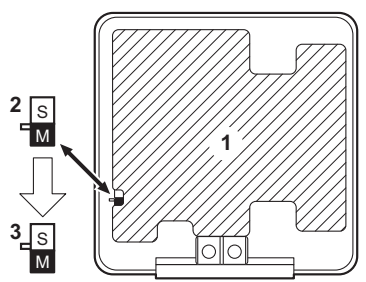

19

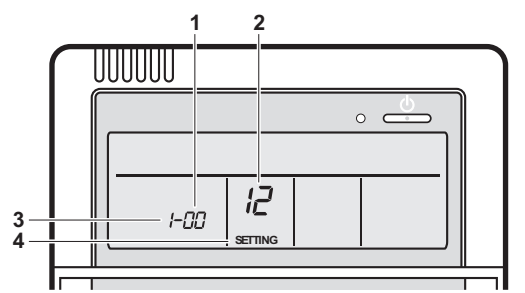

20

**DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.**

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2014 Daikin

4P399436-1A 2015.02