


DAIKIN

INSTALLATION MANUAL

R410A Split Series

INVERTER

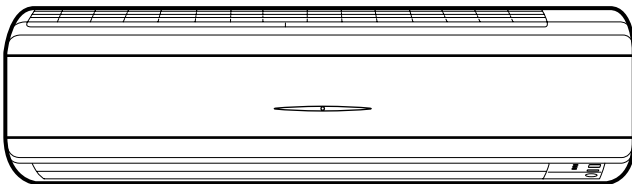

Models

FTXS50EV1B

FTKS50EV1B

FTXS60EV1B

FTKS60EV1B

FTXS71EV1B

FTKS71EV1B

Installation manual
R410A Split series

English

Installationsanleitung
Split-Baureihe R410A

Deutsch

Manuel d'installation
Série split R410A

Français

Montagehandleiding
R410A Split-systeem

Nederlands

Manual de instalación
Serie Split R410A

Español

Manuale d'installazione
Serie Multiambienti R410A

Italiano

Εγχειρίδιο εγκατάστασης
διαιρούμενης σειράς R410A

Ελληνικά

Manual de Instalação
Série split R410A

Portugues

Руководство по монтажу
Серия R410A с раздельной установкой

Русский

Montaj kılavuzları
R410A Split serisi

Türkçe

CE - DECLARACION-DE-CONFORMIDAD
CE - KONFORMITÄTSEKHLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

DAIKIN INDUSTRIES, LTD.

- 01 declares under its sole responsibility that the air conditioning models to which this declaration relates;
- 02 erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
- 03 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration;
- 04 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
- 05 declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración;
- 06 δηλώνει υπό την αποκλειστική του ευθύνη ότι τα προϊόντα των κλιματιστικών ομαδιών στο οποία αναφέρεται η παρούσα δήλωση;
- 07 заявляє про виключну свою відповідальність, що моделі кліматизаційного обладнання, до яких належить ця декларація, є належні;
- 08 declares sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere;
- 09 заявляет, исключив полностью свою ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление;

FTKS50EV1B, FTKS60EV1B, FTKS71EV1B,
FTXS50EV1B, FTXS60EV1B, FTXS71EV1B

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions;
- 02 werden folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden;
- 03 sont conformes à la(s) norm(e) (s) autre(s) document(s) normatif(s) pour autant qu'ils soient utilisés conformément à nos instructions;
- 04 conform de volgende norm(en) of één of meer andere normatieve documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies;
- 05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones;
- 06 sono conformi a(l) seguente(i) standard(i) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni;
- 07 эти изделия в полной мере соответствуют (или полностью соответствуют) следующим нормативным документам, при условии, что они используются в соответствии с нашими инструкциями;

EN60335-2-40,

- 01 following the provisions of:
- 02 gemäß den Vorschriften der:
- 03 conformen aux stipulations des:
- 04 overeenkomstig de bepalingen van:
- 05 siguiendo las disposiciones de:
- 06 secondo le prescrizioni per:
- 07 по условиям, описанным в:
- 08 de acordo com o previsto em:
- 09 в соответствии с положениями:
- 10 under tagtägelse af bestämmelserne i:
- 11 enligt villkoren i:
- 12 gitt i/handelt til bestemmelserne i:
- 13 noudatinten määräyksissä:
- 14 za dodržení ustanovení předpisu:
- 15 prema odredbama:
- 16 följande bestämmelser:
- 17 zgodnie z postanowieniami Dyrektywy:
- 18 in urma prevederilor:

- 01 Note * as set out in the Technical Construction File **Daikin.TCF015** and judged positively by **KEIMA** according to the Certificate **74736-KRO/EIMC97-4957**.
- 02 Hinweis * wie in der Technischen Konstruktionsakte **Daikin.TCF015** aufgeführt und von **KEIMA** positiv ausgemacht gemäß Zertifikat **74736-KRO/EIMC97-4957**.
- 03 Remarque * tel que stipulé dans le Fichier de Construction Technique **Daikin.TCF015** et jugé positivement par **KEIMA** conformément au Certificat **74736-KRO/EIMC97-4957**.
- 04 Bemerk * zoals vermeld in het Technisch Constructiedossier **Daikin.TCF015** en in orde bevonden door **KEIMA** overeenkomstig Certificaat **74736-KRO/EIMC97-4957**.
- 05 Nota * tal como se expone en el Archivo de Construcción Técnica **Daikin.TCF015** y juzgado positivamente por **KEIMA** según el Certificado **74736-KRO/EIMC97-4957**.
- 06 Nota * delimitato nel File Tecnico di Costruzione **Daikin.TCF015** e giudicato positivamente da **KEIMA** secondo il Certificato **74736-KRO/EIMC97-4957**.
- 07 Змістовий * опис проведеного стро Архіва Технік Конструкції **Daikin.TCF015** та кваліфікація технік стро **KEIMA** відповідно до Положення **74736-KRO/EIMC97-4957**.
- 08 Nota * tal como estabelecido no Ficheiro Técnico de Construção **Daikin.TCF015** e com o parecer positivo de **KEIMA** de acordo com o Certificado **74736-KRO/EIMC97-4957**.
- 09 Примечание * как указано в Досье технического положения **Daikin.TCF015** и в соответствии с положительным решением **KEIMA** согласно Сертификату **74736-KRO/EIMC97-4957**.

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАРЯВЛЕНІЕ-О-СОТВЕТСТВИИ
CE - OPGYVDELSELSERKLÆRING
CE - FÖRSÄKRAN-OM-ÖVERENSSTÄMMELSE

CE - ERKLÄRUNG OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

- 10 erklærer under eneansvar, at klimaanlægsmødelerne, som denne deklaration vedrører;
- 11 заявляє про свою повну відповідальність, що моделі кліматизаційних пристроїв, до яких належить ця декларація, відповідають наступним нормативним документам, при умові, що вони будуть використані відповідно до наших інструкцій;
- 12 erklærer er fuldtværdig ansvar for at de luftkonditioneringsmodeller som berøres af denne deklaration inderbejler at:
- 13 ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoituksena on ilmoittaa ilmastointilaitteiden mallit;
- 14 prohlašuje ve své plné odpovědnosti, že modely klimatizace, k nimž se tato prohlášení vztahuje;
- 15 із'являє повн відповідальність за моделі кліматизації, до яких стосується ця заява стосовно;
- 16 δηλώνει πλήρως ευθύνη σχετικά με το περιεχόμενο της δήλωσης, η οποία αφορά σχέδια μονάδων κλιματισμού;
- 17 déclare sur sa pleine responsabilité, que les modèles de climatisation, auxquels cette déclaration se réfère;
- 18 decelará pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație;

- 08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções;
- 09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям;
- 10 overholder følgende standard(er) eller andrestandard retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instruksjoner;
- 11 respektive utrustning är utvid i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner;
- 12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning at disse bruges i henhold til vore instrukser;
- 13 istavazat seuraavien standardien ja muiden ohjeistettujen dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti;
- 14 za predložku, že sou využívají v souladu s našimi pokyny, odpovídají následujícími normám nebo normativním dokumentům;
- 15 in skladu sa sledječim standardom(na) ili drugim normativnim dokumentom(na), uz uvjet da se oni se koriste u skladu s našim uputama;

Low Voltage 73/23/EEC
Machinery Safety 98/37/EEC
Electromagnetic Compatibility 89/336/EEC *

- 10 Bemerk * som antori, den Tekniske Konstruktionsfil **Daikin.TCF015** og positiv vurderet af **KEIMA**, i henhold til Certifikat **74736-KRO/EIMC97-4957**.
- 11 Information * undersøgningen er udført enligat med den Tekniske Konstruktionsfil **Daikin.TCF015** som positivt inngas av **KEIMA**, i henhold til Certifikat **74736-KRO/EIMC97-4957**.
- 12 Merk * frangar av Certifikat **74736-KRO/EIMC97-4957**.
- 13 Huom * mikä on esitetty Teknisessä Asakirjassa **Daikin.TCF015**, ja jotta **KEIMA** on hyväksynyt.
- 14 Poznamka * jak bylo uvedeno v souboru technické konstrukce **Daikin.TCF015** a pozitivně zjišeno **KEIMA** v souladu s osvědčením **74736-KRO/EIMC97-4957**.
- 15 Napomena * kako je izloženo u Databazi o tehničkoj konstrukciji **Daikin.TCF015** pozitivno ocjenjeno od strane **KEIMA** prema Certifikatu **74736-KRO/EIMC97-4957**.
- 16 Megjegyzés * a(z) **Daikin.TCF015** műszaki konstrukciós dokumentációját alapján, a(z) **KEIMA** igazolta a megfélelét az elnevezett **74736-KRO/EIMC97-4957** tanúsítvány szerint.
- 17 Uwaga * zgodnie z archiwalną dokumentacją konstrukcyjną **Daikin.TCF015**, pozytywna opinia **KEIMA** i Szwajcariem **74736-KRO/EIMC97-4957**.
- 18 Nota * conform celor stabilite în Dosarul tehnic de construcție **Daikin.TCF015** și apreciate pozitiv de **KEIMA** în conformitate cu Certificatul **74736-KRO/EIMC97-4957**.

CE - ZJAWA O SKLADBENOSTI
CE - MEGFELELŐSEG-NYILATKOZAT
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - ZJAWA O SKLADBENOSTI
CE - VASTAVUŠDEKLARACIJSOON
CE - DEKLARACIJA-3A-C'50BTBETCTBEIE
CE - UYUMLULUK-BİLDİRİSİ

- 19 заявляє про складовість заявля, да со модели климатских naprav, na katere se zjava nanašata;
- 20 kinnitab oma täieliku vastutuse, et käesoleva deklaratsiooni alla kuuluvad kliimaseadmeste mudelid;
- 21 декларирую на свою ответственность, что модели климатических установок, за които се отнася тази декларация;
- 22 visítja savo ársáskonyba sehiba, kad oro kondicionavnimo prietasu modeliai, kuriems yra laikoma ši deklaracija;
- 23 a prihu atbildbu apliecinā, ka tālāk uzskatīto modeļu gaisa kondicionēšanā, uz kuriem attiecas šī deklarācija;
- 24 vyhláše na vlastní zodpovědnost, že líto klimatické modely, na které sa vztáhuje tato vyhlášení;
- 25 lamamen kendi sorumluluğunda onlark üzere bu bildirimli ilgili olulduj klima modelerinin ağıdaki gibi olduğunu beyan eder;

- 16 megfelelnek az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírtak szerint használják;
- 17 spełnia wymagania następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami;
- 18 sunt în conformitate cu următorii (următoare) standard(e) sau al(e) document(e) normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre;
- 19 skladni z naslednjih standardi in drugim normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili;
- 20 on vastavuses järgmis(e) standard(ite)ga või teiste normatiivsete dokumentidega, kui need kasutatakse vastavalt meie juhendilele;
- 21 съответства на следните стандарти или други нормативни документи, при условие, че се използват съгласно нашите инструкции;
- 22 allinna kemiau noudotuks standardit r (e)iba, kluss normiivtus dokumentit su seljaga, tead yra noudotajm pagaj mūsų nurodyimus;
- 23 tad, ja teidi atbilstoš(ü) rādzoģa norādījumiem, atbilst serkšotiem standartiem un citiem normatīviem dokumentiem;
- 24 su u zlobe s nasledovno(y)mi normo(na)mi) alebo in(y)mi normatívn(y)mi dokumento(n)mi), za predpokladu, že sa používajú v súlade s našimi návodami;
- 25 üritun, lalmatinnrmz göre kullanimissa koşuluyla ağıdaki standartlar ve norm belirlen beğlelele uyumludur;

- 01 Directives, as amended;
- 02 Direktiven, gemäß Änderung;
- 03 Directives, telles que modifiées;
- 04 Richtlijnen, zoals geamendado;
- 05 Directives, según lo emmendado;
- 06 Directive, come da modifica;
- 07 Ohjelmia, omak e yvoim onnontiepi;
- 08 Directivas, conforme alteração em;
- 09 Директивя от всички поправки;
- 10 Direktiver, med senere ændringer;
- 11 Direktiv, med foretagne ændringer;
- 12 Direktiver, med foretatte endringer;
- 13 Direktiveja, salrašira kuni ne ovat muutetuna;
- 14 v planem znění;
- 15 Sprievnice, jako je izmijeneno;
- 16 irabavly(ek) is moduslāsak rindekzāsešil;
- 17 izpdižņiemzyim porpravkam;
- 18 Direktivelor, cu amendamentele respective;

19 Opomba * kol je dočleno v tehnični map **Daikin.TCF015** in odobeno s strani **KEIMA** v skladu s certifikatom **74736-KRO/EIMC97-4957**.

20 Märkus * nagu on näidatud tehnilises dokumentatsioonis **Daikin.TCF015** ja teaks leidud **KEIMA** järgi vastavalt sertifikaadile **74736-KRO/EIMC97-4957**.

21 Zabeleška * kako je zadrženo v Akta za tehnička konstrukcija **Daikin.TCF015** u ciljeno potvrđeno od **KEIMA** prema Certifikatu **74736-KRO/EIMC97-4957**.

22 Pastaba * kaip nurolyvia techninė konstrukcijos byloje **Daikin.TCF015** ir patvirtinta **KEIMA** pagal pažymėjimą **74736-KRO/EIMC97-4957**.

23 Pzīmēs * ka noteikts tehniskā dokumentācija **Daikin.TCF015**, atbilstoši **KEIMA** pozitīvajam lēmumam ko apliecinā sertifikāta **74736-KRO/EIMC97-4957**.

24 Poznámka * ako je to stanovene v souboru technické konstrukce **Daikin.TCF015** a kladně posouzen **KEIMA** podľa Certifikatu **74736-KRO/EIMC97-4957**.

25 Not * **Daikin.TCF015** tehnik Yap Dossyasında belirtildiği gibi ve **74736-KRO/EIMC97-4957** sertifikasına göre **KEIMA** tarafından onayla otarak deęerlendirilmiştir.




Noboru Murata
Manager Quality Control Department
Shiga, 1st of Nov. 2005

Noboru Murata

DAIKIN INDUSTRIES, LTD.
Umeda Center Bldg., 4-12, Nakazaki-Nishi 2-chome,
Kita-ku, Osaka, 530-8323 Japan




Safety Precautions

- Read these Safety Precautions carefully to ensure correct installation.
- This manual classifies the precautions into WARNING and CAUTION.
Be sure to follow all the precautions below: they are all important for ensuring safety.





 **WARNING**.....Failure to follow any of **WARNING** is likely to result in such grave consequences as death or serious injury.



 **CAUTION**.....Failure to follow any of **CAUTION** may in some cases result in grave consequences.

- The following safety symbols are used throughout this manual:

 Be sure to observe this instruction.	 Be sure to establish an earth connection.	 Never attempt.
--	---	--

- After completing installation, test the unit to check for installation errors. Give the user adequate instructions concerning the use and cleaning of the unit according to the Operation Manual.

 WARNING	
• Installation should be left to the dealer or another professional. Improper installation may cause water leakage, electrical shock, or fire.	
• Install the air conditioner according to the instructions given in this manual. Incomplete installation may cause water leakage, electrical shock, or fire.	
• Be sure to use the supplied or specified installation parts. Use of other parts may cause the unit to come to lose, water leakage, electrical shock, or fire.	
• Install the air conditioner on a solid base that can support the unit's weight. An inadequate base or incomplete installation may cause injury in the event the unit falls off the base.	
• Electrical work should be carried out in accordance with the installation manual and the national electrical wiring rules or code of practice. Insufficient capacity or incomplete electrical work may cause electrical shock or fire.	
• Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.	
• For wiring, use a cable long enough to cover the entire distance with no connection. Do not use an extension cord. Do not put other loads on the power supply, use a dedicated power circuit. (Failure to do so may cause abnormal heat, electric shock or fire.)	
• Use the specified types of wires for electrical connections between the indoor and outdoor units. Firmly clamp the interconnecting wires so their terminals receive no external stresses. Incomplete connections or clamping may cause terminal overheating or fire.	
• After connecting interconnecting and supply wiring be sure to shape the cables so that they do not put undue force on the electrical covers or panels. Install covers over the wires. Incomplete cover installation may cause terminal overheating, electrical shock, or fire.	
• If any refrigerant has leaked out during the installation work, ventilate the room. (The refrigerant produces a toxic gas if exposed to flames.)	
• After all installation is complete, check to make sure that no refrigerant is leaking out. (The refrigerant produces a toxic gas if exposed to flames.)	
• When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air. (Any presence of air or other foreign substance in the refrigerant circuit causes an abnormal pressure rise or rupture, resulting in injury.)	
• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the shut-off valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the freezer cycle which will lead to breakage and even injury.	
• During installation, attach the refrigerant piping securely before running the compressor. If the compressor is not attached and the shut-off valve is open during pump-down, air will be sucked in when the compressor is run, causing abnormal pressure in the freezer cycle which will lead to breakage and even injury.	
• Be sure to establish an earth. Do not earth the unit to a utility pipe, arrester, or telephone earth. Incomplete earth may cause electrical shock, or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.	
• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks, or fire.	

 CAUTION	
• Do not install the air conditioner in a place where there is danger of exposure to inflammable gas leakage. If the gas leaks and builds up around the unit, it may catch fire.	
• Establish drain piping according to the instructions of this manual. Inadequate piping may cause flooding.	
• Note for installing the outdoor unit. (For heat pump model only.) In cold area where the outside air temperature keep below or around freezing-point for a few days, the outdoor unit's drain may freeze. If so, it is recommended to install an electric heater in order to protect drain from freezing.	
• Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is tightened too hard, the flare nut may crack after a long time and cause refrigerant leakage.	

Accessories

Indoor unit (A) – (L),

(A) Mounting plate	1	(E) Remote controller holder	1	(K) Operation manual	1
(B) Titanium Apatite Photocatalytic Air-Purifying Filter	2	(G) AAA dry-cell batteries	2	(L) Installation manual	1
(D) Wireless remote controller	1	(H) Indoor unit fixing screws (M4 × 12L)	2		

Choosing a Site

- Before choosing the installation site, obtain user approval.

1. Indoor unit.

- The indoor unit should be sited in a place where:
 - 1) the restrictions on installation specified in the indoor unit installation drawings are met,
 - 2) both air intake and exhaust have clear paths met,
 - 3) the unit is not in the path of direct sunlight,
 - 4) the unit is away from the source of heat or steam,
 - 5) there is no source of machine oil vapour (this may shorten indoor unit life),
 - 6) cool (warm) air is circulated throughout the room,
 - 7) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may shorten the remote control range,
 - 8) the unit is at least 1 metre away from any television or radio set (unit may cause interference with the picture or sound).

2. Wireless remote controller.


- 1) Turn on all the fluorescent lamps in the room, if any, and find the site where remote control signals are properly received by the indoor unit (within 7 metres).

Installation Tips

1. Removing and installing front panel.


• Removal method

Hook fingers on the panel protrusions on the left and right of the main body, and open until the panel stops. Slide the front panel sideways to disengage the rotating shaft. Then pull the front panel toward you to remove it.

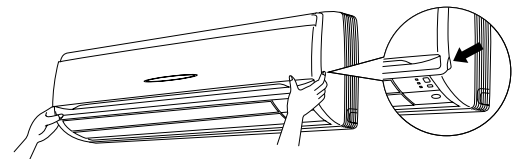

• Installation method

Align the tabs of the front panel with the grooves, and push all the way in. Then close slowly. Push the center of the lower surface of the panel firmly to engage the tabs.

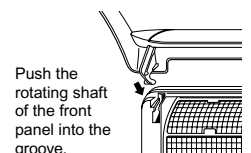


Installation Tips

2. Removing and installing front grille.

• Removal method

- 1) Remove front panel to remove the air filter.
- 2) Remove the front grille. (3 screws)
- 3) In front of the ○○○ mark of the front grille, there are 3 upper hooks. Lightly pull the front grille toward you with one hand, and push down on the hooks with the fingers of your other hand.

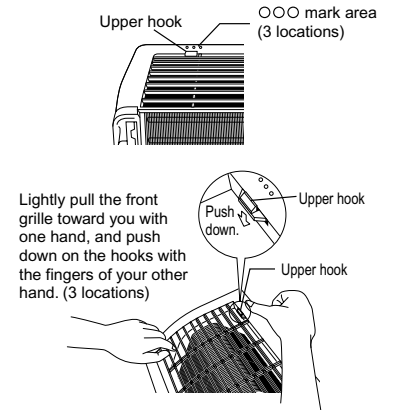

When there is no work space because the unit is close to ceiling


⚠ CAUTION

Be sure to wear protection gloves.

Place both hands under the center of the front grille, and while pushing up, pull it toward you.

• Installation method



- 1) Install the front grille and firmly engage the upper hooks (3 locations).
- 2) Install 3 screws of the front grill.
- 3) Install the air filter and then mount the front panel.

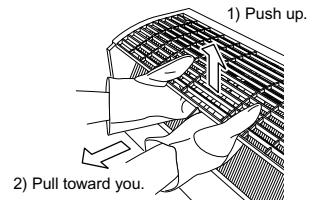


3. How to set the different addresses.

When two indoor units are installed in one room, the two wireless remote controllers can be set for different addresses.

- 1) In the same way as when connecting to an HA system, remove the metal plate electrical wiring cover.
- 2) Cut the address jumper (JA).
- 3) Cut the address jumper (J4).

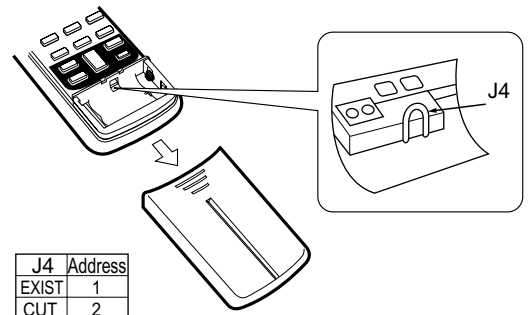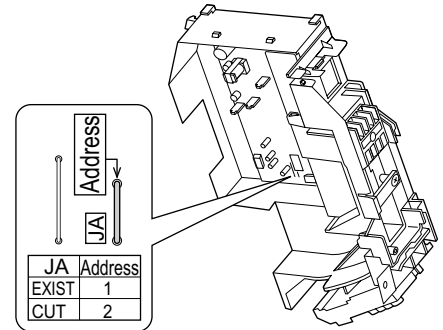

Indoor Unit Installation Drawings

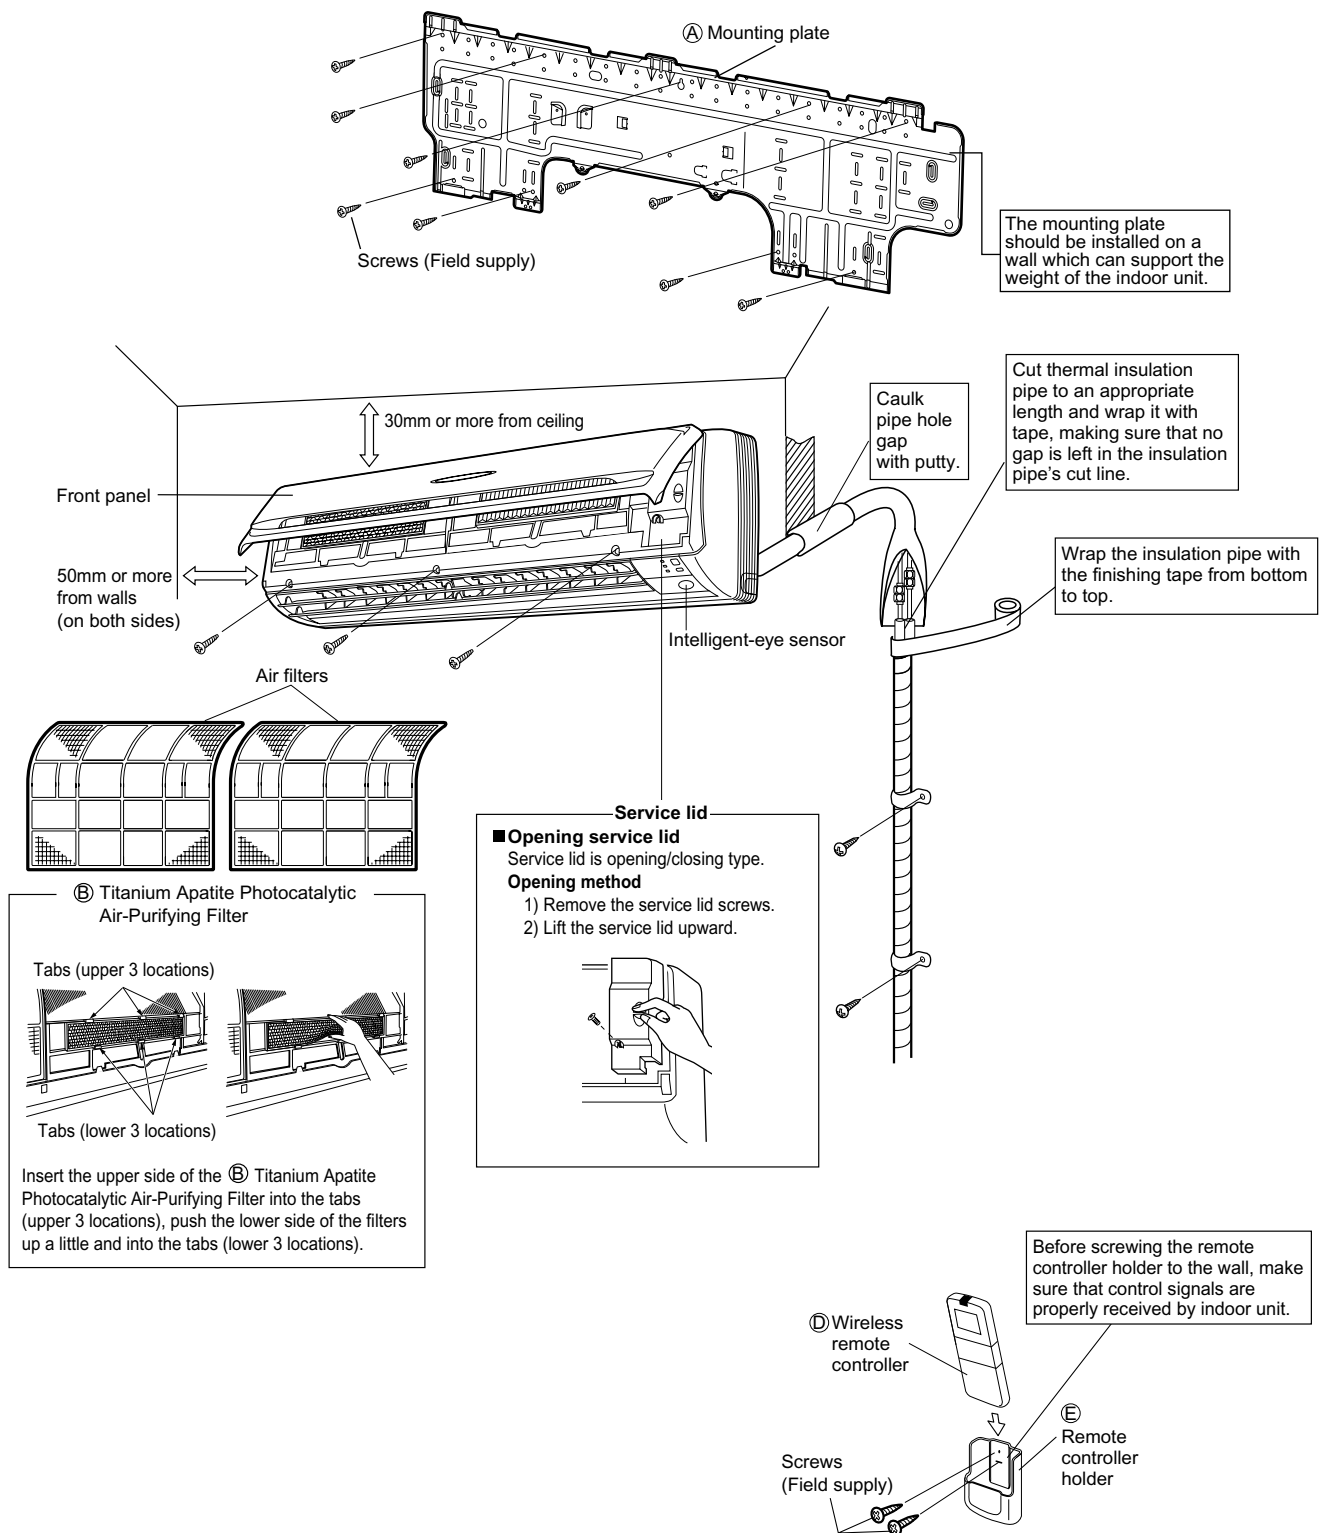

Intelligent-eye sensor

⚠ CAUTION


- 1) Do not hit or violently push the Intelligent-eye sensor. This can lead to damage and malfunction.
- 2) Do not place large objects near the sensor. Also keep heating units or humidifiers outside the sensor's detection area.

Indoor Unit Installation

1. Installing the mounting plate.


- The mounting plate should be installed on a wall which can support the weight of the indoor unit.
 - Temporarily secure the mounting plate to the wall, make sure that the panel is completely level, and mark the boring points on the wall.
 - Secure the mounting plate to the wall with screws.

Recommended mounting-plate retention spots and Dimensions

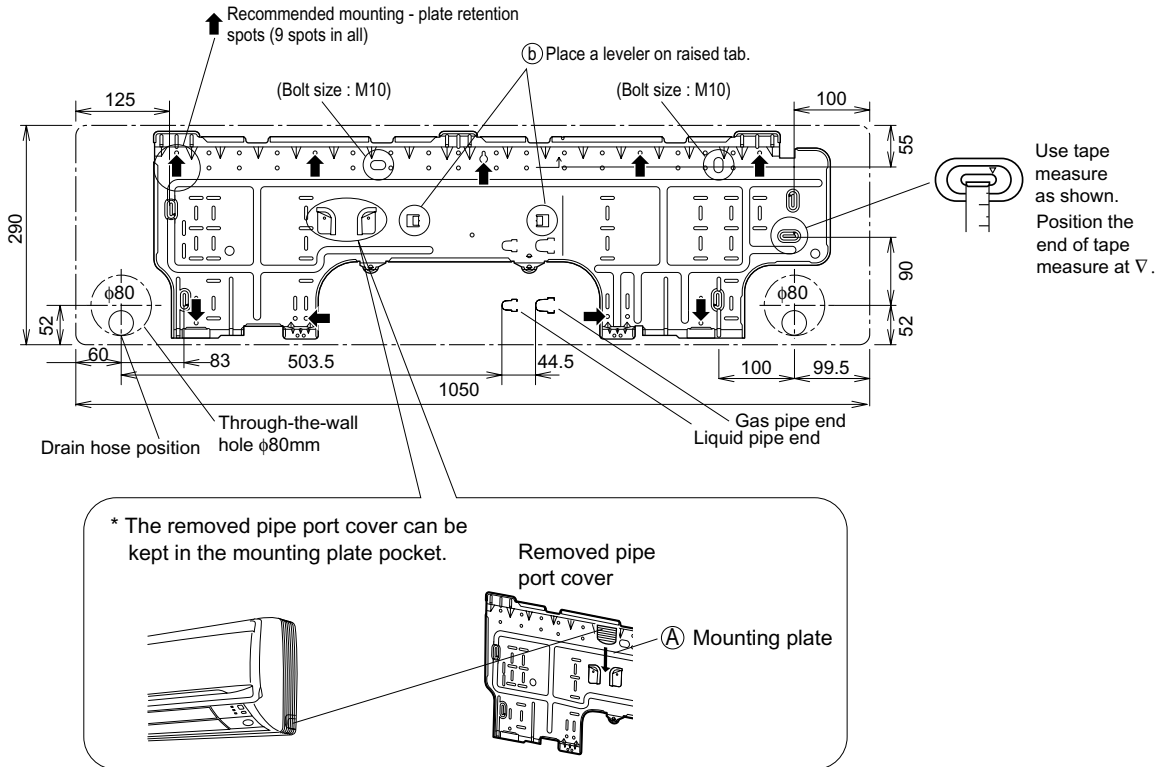

2. Boring a wall hole and installing wall embedded pipe.


- For walls containing metal frame or metal board, be sure to use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.
- Be sure to caulk the gaps around the pipes with caulking material to prevent water leakage.
 - 1) Bore a feed-through hole of 80mm in the wall so it has a down slope toward the outside.
 - 2) Insert a wall pipe into the hole.
 - 3) Insert a wall cover into wall pipe.
 - 4) After completing refrigerant piping, wiring, and drain piping, caulk pipe hole gap with putty.

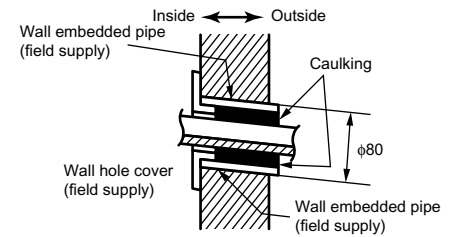


3. Installing indoor unit.

3-1. Right-Side, Right-Back, or Right-Bottom Piping


- 1) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.
- 2) Wrap the refrigerant pipes and drain hose together with insulation tape.

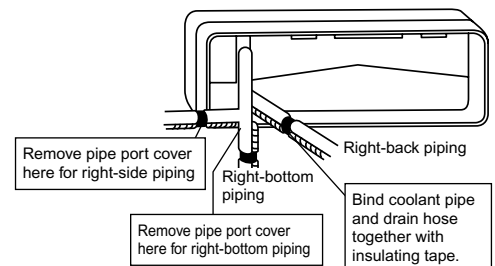

- 3) Pass the drain hose and refrigerant pipes through the wall hole, then set the indoor unit on the mounting plate hooks by using the Δ markings at the top of the indoor unit as a guide.

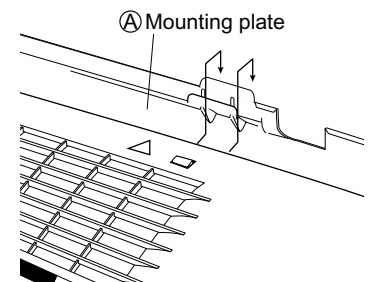


- 4) Open the front panel, then open the service lid.
(Refer to Installation tips)
- 5) Pass the interconnecting wires from the outdoor unit through the feed-through wall hole and then through the back of the indoor unit. Pull them through the front side. Bend the ends of tie wires upward in advance for easier work. (If the interconnecting wire ends are to be stripped first, bundle wire ends with adhesive tape.)
- 6) Press the indoor unit's bottom panel with both hands to set it on the mounting plate hooks. Make sure the wires do not catch on the edge of the indoor unit.

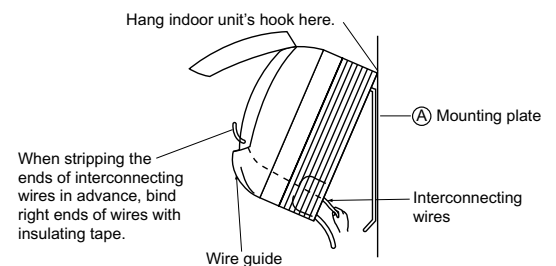

Indoor Unit Installation


3-2. Left-Side, Left-Back, or Left Bottom Piping

- 1) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.

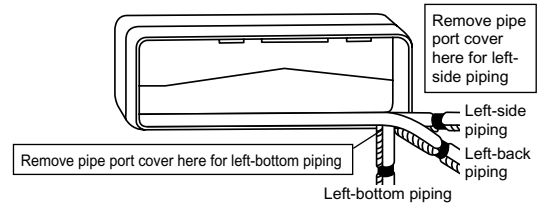


- 2) Be sure to connect the drain hose to the drain port in place of a drain plug.


How to set drain plug

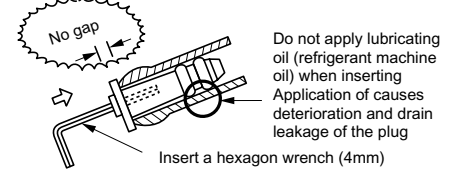

- 3) Shape the refrigerant pipe along the pipe path marking on the mounting plate.
- 4) Pass drain hose and refrigerant pipes through the wall hole, then set the indoor unit on mounting plate hooks, using the Δ markings at the top of indoor unit as a guide.
- 5) Pull in the interconnecting wires.
- 6) Connect the inter-unit piping.

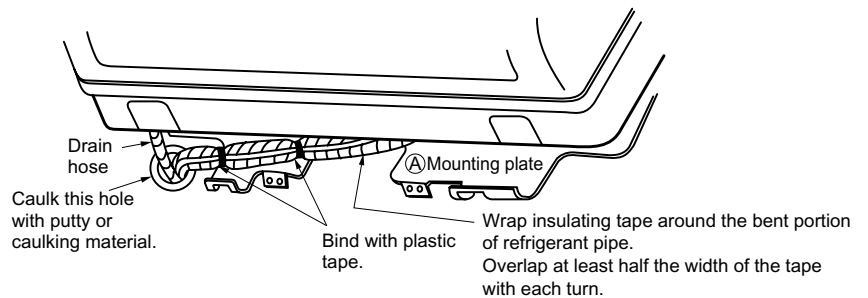

- 7) Wrap the refrigerant pipes and drain hose together with insulation tape as right figure, in case of setting the drain hose through the back of the indoor unit.
- 8) While exercising care so that the interconnecting wires do not catch indoor unit, press the bottom edge of indoor unit with both hands until it is firmly caught by the mounting plate hooks. Secure indoor unit to the mounting plate with screws (M4 × 12L).

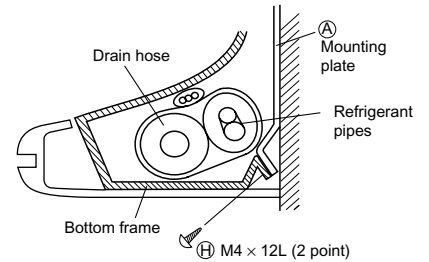


3-3. Wall Embedded Piping

Follow the instructions given under

Left-Side, Left-Back, or Left Bottom Piping


- 1) Insert the drain hose to this depth so it won't be pulled out of the drain pipe.

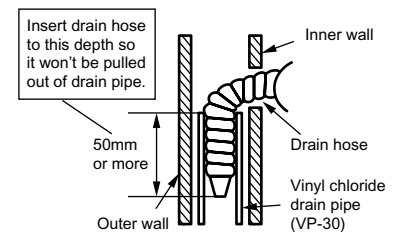

4. Wiring.

With a Multi indoor unit , install as described in the installation manual supplied with the Multi outdoor unit.

- 1) Strip wire ends (15mm).
- 2) Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals.
- 3) Connect the earth wires to the corresponding terminals.
- 4) Pull wires to make sure that they are securely latched up, then retain wires with wire retainer.
- 5) In case of connecting to an adapter system. Run the remote control cable and attach the S21. (Refer to 5. When connecting to an HA system.)
- 6) Shape the wires so that the service lid fits securely, then close service lid.

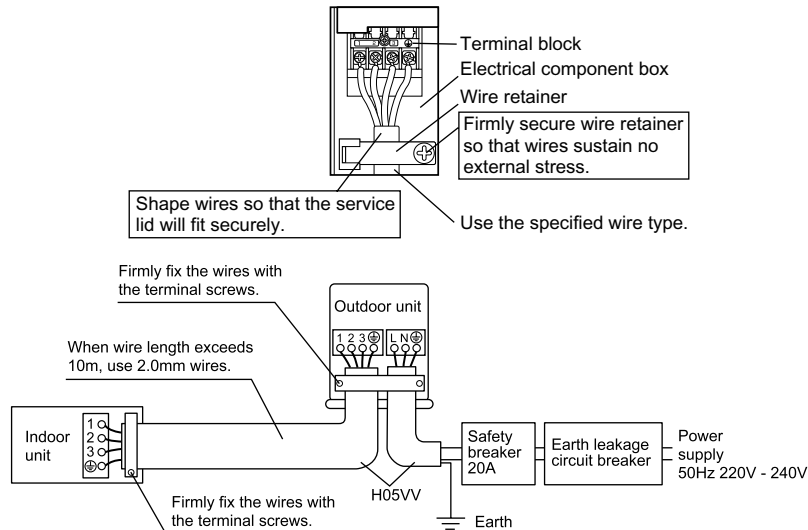


! WARNING

- 1) Do not use tapped wires, stand wires, extensioncords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- 2) Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.

5. When connecting to an HA system.


- 1) Remove the front grille. (3 screws)
- 2) Remove the electrical wiring box. (1 screw)
- 3) Remove the metal plate electrical wiring cover. (4 tabs)
- 4) Attach the connection cord to the S21 connector and pull the harness out through the notched part in the figure.
- 5) Replace the electrical wiring cover as it was, and pull the harness around, as shown in the figure.

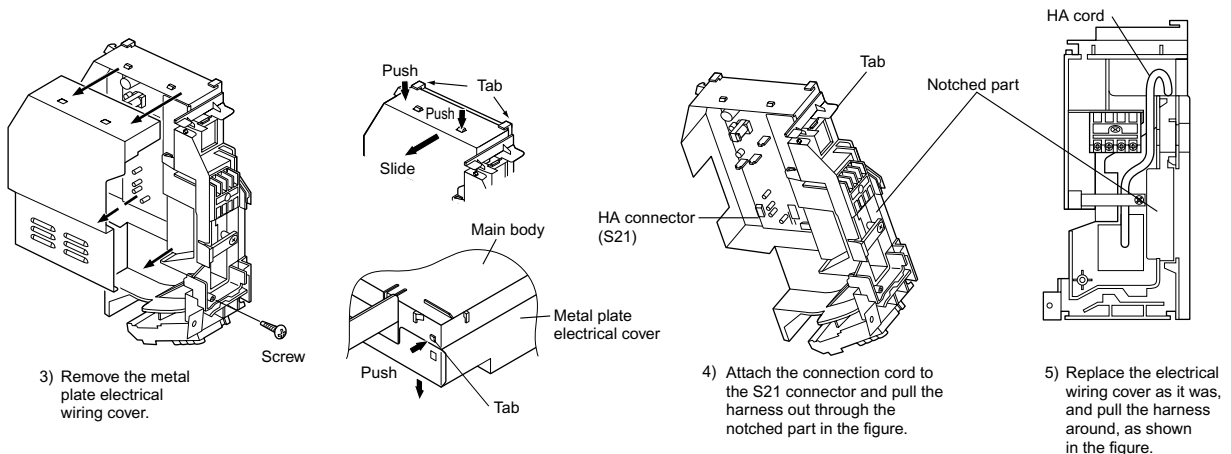


Indoor Unit Installation

6. Drain piping.

1) Connect the drain hose, as described right.

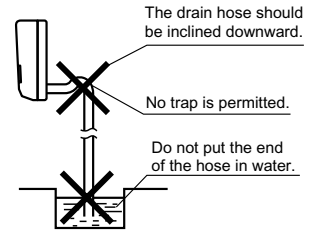


2) Remove the air filters and pour some water into the drain pan to check the water flows smoothly.

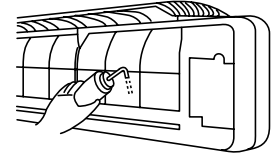


3) When drain hose requires extension, obtain an extension hose commercially available.

Be sure to thermally insulate the indoor section of the extension hose.

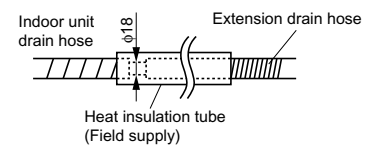

4) When connecting a rigid polyvinyl chloride pipe (nominal diameter 13mm) directly to the drain hose attached to the indoor unit as with embedded piping work, use any commercially available drain socket (nominal diameter 13mm) as a joint.

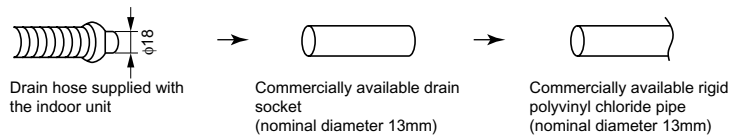


Refrigerant piping work

With a Multi indoor unit, install as described in the installation manual supplied with the Multi outdoor unit.

1. Flaring the pipe end.


- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.



Flaring

Set exactly at the position shown below.

A	Conventional flare tool		
	Clutch-type	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)
0 ~ 0.5mm	1.0 ~ 1.5mm	1.5 ~ 2.0mm	

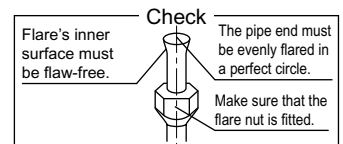


⚠ WARNING

- 1) Do not use mineral oil on flared part.
- 2) Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- 3) Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- 4) Do never install a drier to this R410A unit in order to guarantee its lifetime.
- 5) The drying material may dissolve and damage the system.
- 6) Incomplete flaring may cause refrigerant gas leakage.

2. Refrigerant piping.

- Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.
 - Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and escaping gas.

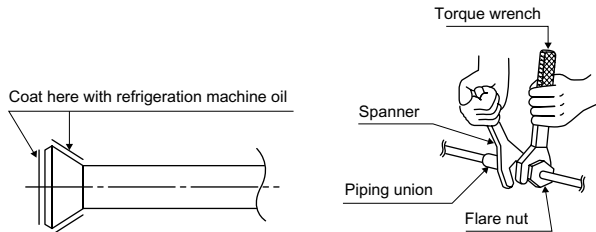


Flare nut tightening torque		
Gas side		Liquid side
1/2 inch	5/8 inch	1/4 inch
49.5-60.3N • m (505-615kgf • cm)	61.8-75.4N • m (630-770kgf • cm)	14.2-17.2N • m (144-175kgf • cm)

- To prevent gas leakage, apply refrigeration machine oil on both inner and outer surfaces of the flare. (Use refrigeration oil for R410A)

2-1. Caution on Piping Handling


- Protect the open end of the pipe against dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending. (Bending radius should be 30 to 40mm or larger.)

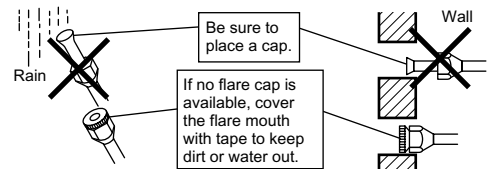

2-2. Selection of Copper and Heat Insulation materials

- When using commercial copper pipes and fittings, observe the following:
 - Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/mh°C)
Refrigerant gas pipe's surface temperature reaches 110°C max.
Choose heat insulation materials that will withstand this temperature.
 - Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side		Liquid side	Gas pipe thermal insulation		Liquid pipe thermal insulation
50/60 class	71 class	50/60/71 class	50/60 class	71 class	50/60/71 class
O.D. 12.7mm	O.D. 15.9mm	O.D. 6.4mm	I.D. 14-16mm	I.D. 16-20mm	I.D. 8-10mm
Thickness 0.8mm	Thickness 1.0mm	Thickness 0.8mm	Thickness 10mm Min.		

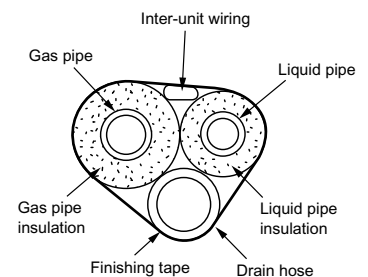

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.

Trial Operation and Testing

1. Trial Operation and Testing.

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 Trial operation should be carried out in either cooling or heating mode.

■ For Heat pump

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

1) Trial operation may be disabled in either mode depending on the room temperature.

Use the remote controller for trial operation as described below.

2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).

3) For protection, the system disables restart operation for 3 minutes after it is turned off.

■ For Cooling only

- Select the lowest programmable temperature.

1) Trial operation in cooling mode may be disabled depending on the room temperature.

Use the remote controller for trial operation as described below.

2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C).

3) For protection, the unit disables restart operation for 3 minutes after it is turned off.

1-3 Carry out the test operation in accordance with the Operation Manual to ensure that all functions and parts, such as louver movement, are working properly.

- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.

- If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

Trial Operation from Remote Controller

1) Press ON/OFF button to turn on the system.

2) Simultaneously press center of TEMP button and MODE button.

3) Press MODE button twice.

("77" will appear on the display to indicate that Trial Operation mode is selected.)

4) Trial run mode terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press ON/OFF button.

2. Test Items.

Test Items	Symptom (diagnostic display on RC)	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for interconnecting wire connections.	Inoperative or burn damage	
Indoor or outdoor unit's air intake or exhaust has clear path of air. Shut-off valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	

DAIKIN INDUSTRIES, LTD.

Head office:

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan
<http://www.daikin.com/global/>

DAIKIN EUROPE NV

Zandvoordestraat 300, B-8400 Oostende, Belgium