




Installation manual

Sky Air Alpha-series

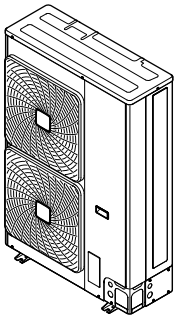

RZAG71M7V1B
RZAG100M7V1B
RZAG125M7V1B
RZAG140M7V1B

RZAG71M7Y1B
RZAG100M7Y1B
RZAG125M7Y1B
RZAG140M7Y1B

Installation manual
Sky Air Alpha-series

English

CE - DECLARATION OF CONFORMITY
CE - KONFORMITÄTSEKLERUNG
CE - DECLARAZIONE DI CONFORMITÀ
CE - ДЕКЛАРАЦИЯ СООТВЕТСТВИЯ
CE - DECLARACIÓN DE CONFORMIDAD
CE - DICHLARAZIONE DI CONFORMITÀ
CE - ДИКЛАРАЦИЈА СООТВЕТСТВИЈЕ
CE - FORSKNING OM SÄMVERKAN
CE - ÜBERENSSTEMMELESEKLERUNG
CE - OVERENSSTEMMELSEKLERING
CE - FORSKNING OM ÖVERENSSTÄMMELSE

Daikin Europe N.V.

- 01 (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
02 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
03 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
04 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
05 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
06 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
07 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
08 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta declaración se refiere.

RZAG71M7Y1B*, RZAG100M7V1B*, RZAG100M7Y1B*, RZAG125M7V1B*, RZAG140M7V1B*, RZAG140M7Y1B*, RZAG140M7Y1B*,
= 1, 1.2.3, ...9

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 (den) der/den folgenden Norm(en) oder einem anderen Normdokument(en) oder
03 (en) conformen aux prescriptions, sous réserve que ces documents soient utilisés conformément à nos instructions;
04 (en) conformen a las normas de los documentos de referencia, siempre que se utilicen de acuerdo con nuestras instrucciones;
05 están en conformidad con el(s) siguiente(s) norma(s) o otro(s) documento(s) normativos, siempre que sean utilizados de acuerdo con nuestras instrucciones;
06 sono conformi all(i) seguente(i) standard(i) o altro(i) documento(i) di carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni;
07 (en) об'являють про те що оцілюють (і/або створюють) кондиціонувачі, що відповідають наступним документам (і/або інструкціям), при умові, що ці документи будуть використовуватися відповідно до їхніх інструкцій;
08 están en conformidad con el(s) siguiente(s) norma(s) o otro(s) documento(s) normativos, desde que estos sejan utilizados de acuerdo con as nossas instruções;
09 (en) conformen a las normas de los documentos de referencia, siempre que se utilicen de acuerdo con nuestras instrucciones;
10 under applicable standards;
11 enligt vilkoren i;
12 (en) in accordance with the following standards;
13 (en) in accordance with the following standards;
14 (en) in accordance with the following standards;
15 (en) in accordance with the following standards;
16 (en) in accordance with the following standards;
17 (en) in accordance with the following standards;
18 (en) in accordance with the following standards;
19 ob upoštevanih dobrih;
20 (en) in accordance with the following standards;
21 (en) in accordance with the following standards;
22 (en) in accordance with the following standards;
23 (en) in accordance with the following standards;
24 (en) in accordance with the following standards;
25 (en) in accordance with the following standards;

- 01 * as set out in <A> and judged positively by according to the <C>
02 * as set out in the Technical Construction File <D> and judged positively by <E> (Applied module <F>). <G> Risk category <H>. Also refer to next page.
03 * wie in <A> aufgeführt und von positiv beurteilt gemäß <C>
04 * wie in der Technischen Konstruktionsakte <D> aufgeführt und von <E> (Angewandtes Modul <F>) positiv ausgezeichnet. <G> Risikoart <H>. Siehe auch nächste Seite.
05 * le que défini dans <A> et évalué positivement par conformément à <C>
06 * le que stipulé dans le Fichier de Construction Technique <D> et jugé positivement par <E> (Module appliqué <F>). <G> Catégorie de risque <H>. Se reporter également à la page suivante.
07 * как указано в <A> и оценено положительно решением согласно <C>
08 * как указано в Досье технического проектирования <D> и в соответствии со следующими решениями <E> (применяемый модуль <F>). Категория риска <H>. Также смотрите следующую страницу.
09 * como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>
10 * como se expone en el Archivo de Construcción Técnica <D> y juzgado positivamente por <E> (Módulo aplicado <F>). <G> Categoría de riesgo <H>. Consulte también la siguiente página.

- 01** Daikin Europe N.V. is authorised to compile the Technical Construction File.
02** Daikin Europe N.V. hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.
03** Компания Даикин Еуропа Н.В. авторизована составлять Технический проект.
04** Daikin Europe N.V. is authorised to compile the Dossier de Construction Technique.
05** Daikin Europe N.V. is authorised to compile the Technical Construction File.
06** Daikin Europe N.V. is authorised to compile the Dossier de Construction Technique.
07** Daikin Europe N.V. is authorised to compile the Technical Construction File.
08** Daikin Europe N.V. is authorised to compile the Dossier de Construction Technique.
09** Daikin Europe N.V. is authorised to compile the Technical Construction File.
10** Daikin Europe N.V. is authorised to compile the Dossier de Construction Technique.
11** Daikin Europe N.V. is authorised to compile the Technical Construction File.
12** Daikin Europe N.V. is authorised to compile the Dossier de Construction Technique.

CE - DECLARAZIONE DI CONFORMITÀ
CE - ÜBERENSSTEMMELESEKLERUNG
CE - OVERENSSTEMMELSEKLERING
CE - FORSKNING OM ÖVERENSSTÄMMELSE
CE - ERKLÄRUNG OM SÄMVERKAN
CE - ÜBERENSSTEMMELESEKLERUNG
CE - ÜBERENSSTEMMELSEKLERING
CE - PROHLÁŠENÍ SOUHRNĚ
CE - DECLARAZIONE DI CONFORMITÀ
CE - ÜBERENSSTEMMELESEKLERUNG
CE - OVERENSSTEMMELSEKLERING
CE - FORSKNING OM ÖVERENSSTÄMMELSE

- 09 (en) заявляет, исключительно под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящая декларация;
10 (en) erklærer under egen ansvar, at klimaanlægsmødelerne, som denne erklæring vedrører;
11 (en) déclare sous sa seule responsabilité que les modèles de climatiseurs d'air;
12 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
13 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
14 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
15 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
16 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta declaración se refiere.

- 17 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
18 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
19 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
20 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
21 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
22 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
23 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
24 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

Machinery 2006/42/EC

Low Voltage 2014/35/EU

Electromagnetic Compatibility 2014/30/EU

Pressure Equipment 2014/68/EU

- 01 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
02 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
03 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
04 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
05 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
06 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
07 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
08 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 09 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
10 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
11 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
12 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
13 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
14 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
15 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
16 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 17 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
18 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
19 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
20 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
21 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
22 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
23 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
24 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 25 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
26 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
27 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
28 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
29 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
30 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
31 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
32 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 33 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
34 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
35 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
36 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
37 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
38 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
39 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
40 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 41 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
42 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
43 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
44 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
45 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
46 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
47 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
48 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

CE - ZJAVNA OŠKILAVNOSTI
CE - VASTAVILNOSTI
CE - ÜBERENSSTEMMELESEKLERUNG
CE - ÜBERENSSTEMMELSEKLERING
CE - FORSKNING OM SÄMVERKAN
CE - ÜBERENSSTEMMELESEKLERUNG
CE - ÜBERENSSTEMMELSEKLERING
CE - FORSKNING OM ÖVERENSSTÄMMELSE
CE - ERKLÄRUNG OM SÄMVERKAN
CE - ÜBERENSSTEMMELESEKLERUNG
CE - ÜBERENSSTEMMELSEKLERING
CE - FORSKNING OM ÖVERENSSTÄMMELSE

- 17 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
18 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
19 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
20 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
21 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
22 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
23 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
24 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 25 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
26 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
27 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
28 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
29 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
30 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
31 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
32 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 33 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
34 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
35 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
36 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
37 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
38 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
39 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
40 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 41 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
42 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
43 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
44 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
45 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
46 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
47 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
48 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 49 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
50 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
51 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
52 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
53 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
54 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
55 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
56 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 57 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
58 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
59 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
60 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
61 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
62 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
63 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
64 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

- 65 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates
66 (en) erklärt unter seiner alleinigen Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
67 (en) déclare sous sa seule responsabilité que les appareils dont conditionnement de réfrigération est soumis à la présente déclaration;
68 (en) verklaart hierbij op eigen excelsusie verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
69 (en) déclare bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia a declaración;
70 (en) δηλώνει υπό αποκλειστική ευθύνη και υπό τον όνομα της εταιρείας που είναι φορέας της παρούσας δήλωσης;
71 (en) объявляет исключительно на себя ответственность за модели климатического оборудования, к которым относится настоящая декларация;
72 (en) déclare sous sa seule responsabilité que les modèles de air conditionné a que esta déclaration se refiere.

73 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates

74 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates

75 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates

76 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates

77 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates

78 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates

79 (en) (en) declares under its sole responsibility that the air conditioning models to which this declaration relates

Table of contents

1	About the documentation	5
1.1	About this document.....	5
2	About the box	5
2.1	Outdoor unit.....	5
2.1.1	To remove the accessories from the outdoor unit.....	5
3	Preparation	6
3.1	Preparing installation site.....	6
3.1.1	Installation site requirements of the outdoor unit.....	6
4	Installation	6
4.1	Mounting the outdoor unit.....	6
4.1.1	To provide the installation structure.....	6
4.1.2	To install the outdoor unit.....	6
4.1.3	To provide drainage.....	6
4.1.4	To prevent the outdoor unit from falling over.....	7
4.2	Connecting the refrigerant piping.....	7
4.2.1	To connect the refrigerant piping to the outdoor unit.....	7
4.3	Checking the refrigerant piping.....	8
4.3.1	Checking refrigerant piping: Setup.....	8
4.3.2	To check for leaks.....	8
4.3.3	To perform vacuum drying.....	8
4.4	Charging refrigerant.....	8
4.4.1	About charging refrigerant.....	8
4.4.2	About the refrigerant.....	9
4.4.3	To determine the additional refrigerant amount.....	10
4.4.4	To determine the complete recharge amount.....	10
4.4.5	Charging refrigerant: Setup.....	11
4.4.6	To charge additional refrigerant.....	11
4.4.7	To activate/deactivate the vacuum mode field setting.....	11
4.4.8	To completely recharge refrigerant.....	11
4.4.9	To fix the fluorinated greenhouse gases label.....	11
4.5	Connecting the electrical wiring.....	12
4.5.1	About electrical compliance.....	12
4.5.2	Guidelines when connecting the electrical wiring.....	12
4.5.3	Specifications of standard wiring components.....	12
4.5.4	To connect the electrical wiring on the outdoor unit.....	12
4.6	Finishing the outdoor unit installation.....	13
4.6.1	To finish the outdoor unit installation.....	13
4.6.2	To check the insulation resistance of the compressor.....	14
5	Commissioning	14
5.1	Checklist before commissioning.....	14
5.2	To perform a test run.....	14
5.3	Error codes when performing a test run.....	15
6	Disposal	15
7	Technical data	16
7.1	Overview: Technical data.....	16
7.2	Service space: Outdoor unit.....	16
7.3	Piping diagram: Outdoor unit.....	17
7.4	Wiring diagram: Outdoor unit.....	17

1 About the documentation

1.1 About this document

Target audience

Authorised installers

i INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
 - Safety instructions that you must read before installing
 - Format: Paper (in the box of the outdoor unit)
- **Outdoor unit installation manual:**
 - Installation instructions
 - Format: Paper (in the box of the outdoor unit)
- **Installer reference guide:**
 - Preparation of the installation, reference data,...
 - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.


Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin extranet (authentication required).

2 About the box

2.1 Outdoor unit

2.1.1 To remove the accessories from the outdoor unit

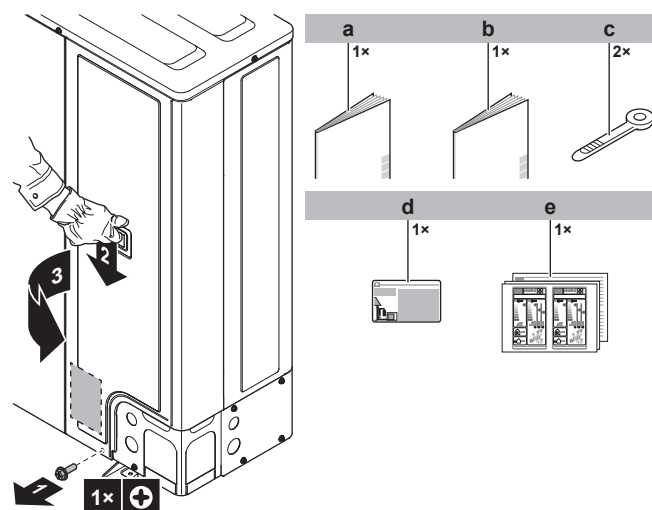

- a General safety precautions
- b Outdoor unit installation manual
- c Cable tie
- d Fluorinated greenhouse gases label
- e Energy label

3 Preparation

3 Preparation

3.1 Preparing installation site

WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

3.1.1 Installation site requirements of the outdoor unit

Mind the spacing guidelines. See the "Technical data" chapter, and the figures on the inside of the front cover.

INFORMATION

The sound pressure level is less than 70 dBA.

CAUTION

Appliance not accessible to the general public, install it in a secured area, protected from easy access.


This unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment.

4 Installation

4.1 Mounting the outdoor unit

4.1.1 To provide the installation structure

Prepare 4 sets of anchor bolts, nuts and washers (field supply) as follows:

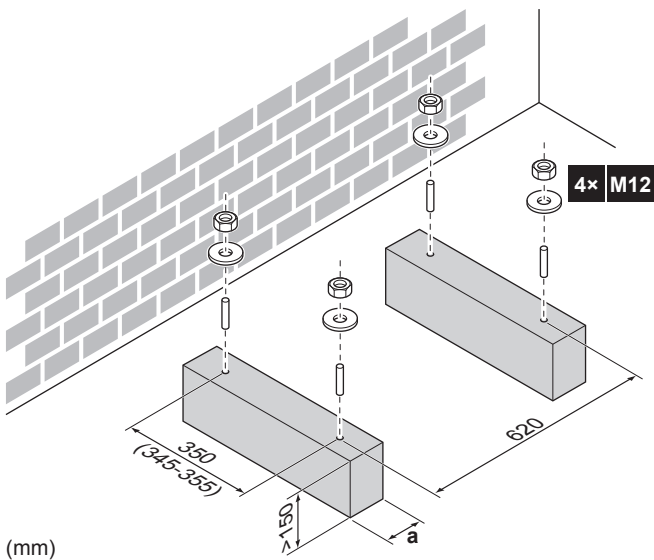


(mm)

a Make sure not to cover the drain holes of the bottom plate of the unit.


INFORMATION

The recommended height of the upper protruding part of the bolts is 20 mm.

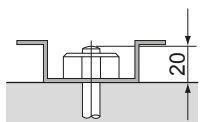


NOTICE

Fix the outdoor unit to the foundation bolts using nuts with resin washers (a). If the coating on the fastening area is stripped off, the nuts rust easily.



4.1.2 To install the outdoor unit

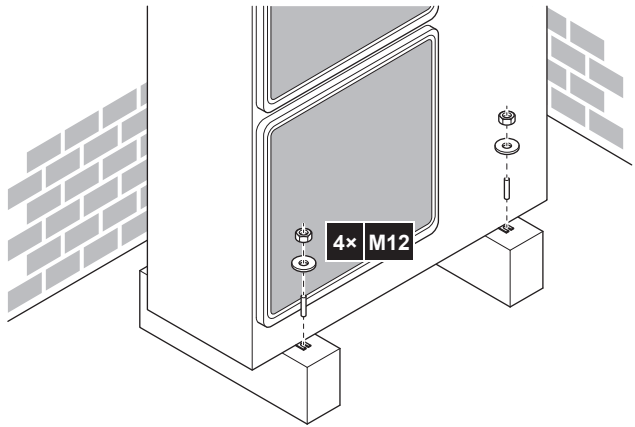


4.1.3 To provide drainage

INFORMATION


If necessary, you can use a drain plug kit (field supply) to prevent drain water from dripping.

NOTICE

If drain holes of the outdoor unit are covered by a mounting base or by floor surface, raise the unit to provide a free space of more than 150 mm under the outdoor unit.

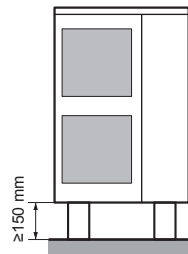

Drain holes (dimensions in mm)

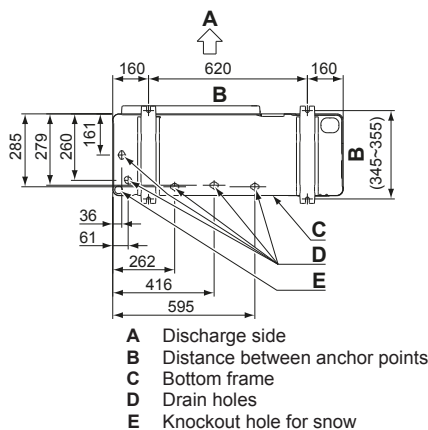


- A Discharge side
- B Distance between anchor points
- C Bottom frame
- D Drain holes
- E Knockout hole for snow

Snow

In regions with snowfall, snow might build up and freeze between the heat exchanger and the external plate. This might decrease the operating efficiency. To prevent this:


- 1 Drill (a, 4×) and remove the knockout hole (b).

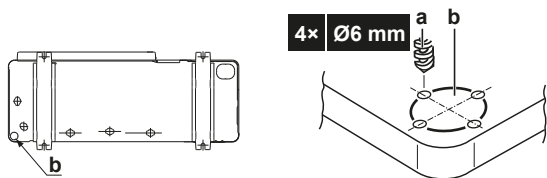

- 2 Remove the burrs, and paint the edges and areas around the edges using repair paint to prevent rusting.

4.1.4 To prevent the outdoor unit from falling over

- 1 Prepare 2 cables as indicated in the following illustration (field supply).
- 2 Place the 2 cables over the outdoor unit.
- 3 Insert a rubber sheet between the cables and the outdoor unit to prevent the cable from scratching the paint (field supply).
- 4 Attach the cable's ends. Tighten those ends.

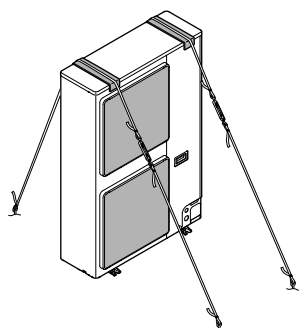


4.2 Connecting the refrigerant piping


⚠ DANGER: RISK OF BURNING

4.2.1 To connect the refrigerant piping to the outdoor unit

- **Piping length.** Keep field piping as short as possible.
 - **Piping protection.** Protect the field piping against physical damage.
- 1 Do the following:
 - Remove the service cover (a) with screw (b).
 - Remove the piping intake plate (c) with screw (d).

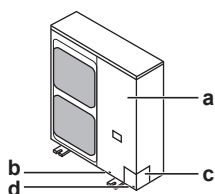


- 2 Choose a piping route (a, b, c or d).

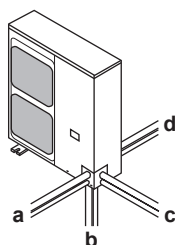


- 3 If you have chosen the downwards piping route:

- Drill (a, 4x) and remove the knockout hole (b).
- Cut out the slits (c) with a metal saw.

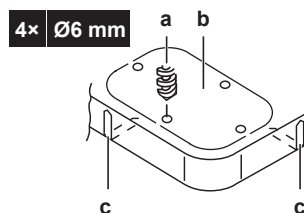


- 4 Do the following:

- Connect the liquid pipe (a) to the liquid stop valve.
- Connect the gas pipe (b) to the gas stop valve.

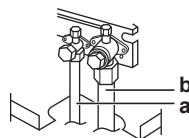

- 5 Do the following:

- Insulate the liquid piping (a) and the gas piping (b).
- Wind heat insulation around the curves, and then cover it with vinyl tape (c).
- Make sure the field piping does not touch any compressor components (d).
- Seal the insulation ends (sealant etc.) (e).

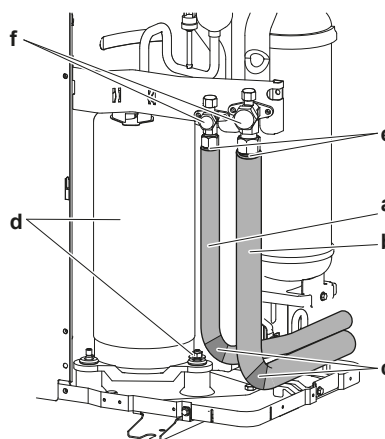


- 6 If the outdoor unit is installed above the indoor unit, cover the stop valves (f, see above) with sealing material to prevent condensed water on the stop valves from moving to the indoor unit.



NOTICE

Any exposed piping might cause condensation.


- 7 Reattach the service cover and the piping intake plate.
- 8 Seal all gaps (example: a) to prevent snow and small animals from entering the system.

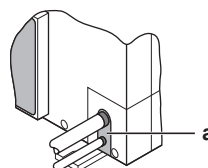

4 Installation

NOTICE

Do not block the air vents. This could affect air circulation inside the unit.

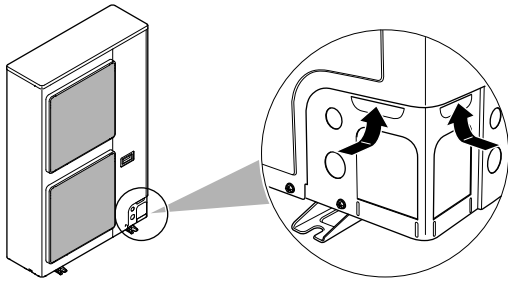

WARNING


Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.

NOTICE

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

4.3 Checking the refrigerant piping

4.3.1 Checking refrigerant piping: Setup

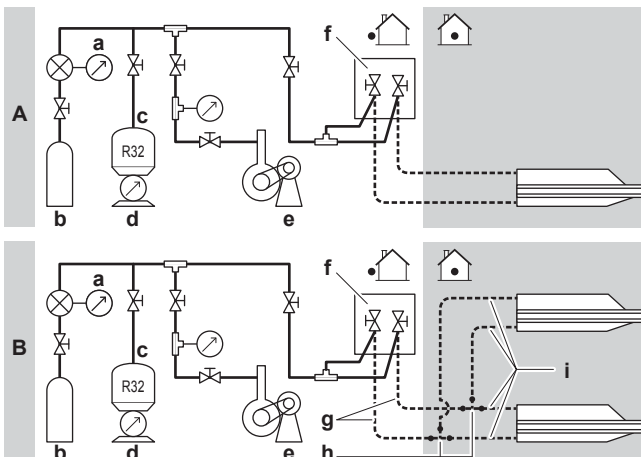

- A Setup in case of pair
- B Setup in case of twin
- a Pressure gauge
- b Nitrogen
- c Refrigerant
- d Weighing machine
- e Vacuum pump
- f Stop valve
- g Main piping
- h Refrigerant branch kit
- i Branch piping

4.3.2 To check for leaks

NOTICE

Do NOT exceed the unit's maximum working pressure (see "PS High" on the unit name plate).

NOTICE

Make sure to use a recommended bubble test solution from your wholesaler. Do not use soap water, which may cause cracking of flare nuts (soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold), and/or lead to corrosion of flared joints (soap water may contain ammonia which causes a corrosive effect between the brass flare nut and the copper flare).

- Charge the system with nitrogen gas up to a gauge pressure of at least 200 kPa (2 bar). It is recommended to pressurize to 3000 kPa (30 bar) in order to detect small leaks.
- Check for leaks by applying the bubble test solution to all connections.
- Discharge all nitrogen gas.

4.3.3 To perform vacuum drying

NOTICE

- Connect the vacuum pump to **both** the service port of the gas stop valve and the service port of the liquid stop valve to increase efficiency.
- Make sure that the gas stop valve and liquid stop valve are firmly closed before performing the leak test or vacuum drying.

- Vacuum the system until the pressure on the manifold indicates -0.1 MPa (-1 bar).
- Leave as is for 4-5 minutes and check the pressure:

If the pressure...	Then...
Does not change	There is no moisture in the system. This procedure is finished.
Increases	There is moisture in the system. Go to the next step.

- Evacuate for at least 2 hours to a pressure on the manifold of -0.1 MPa (-1 bar).
- After turning OFF the pump, check the pressure for at least 1 hour.
- If you do NOT reach the target vacuum or cannot maintain the vacuum for 1 hour, do the following:
 - Check for leaks again.
 - Perform vacuum drying again.

NOTICE

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

4.4 Charging refrigerant

4.4.1 About charging refrigerant

The outdoor unit is factory charged with refrigerant, but in some cases the following might be necessary:

What	When
Charging additional refrigerant	When the total liquid piping length is more than specified (see later).
Completely recharging refrigerant	Example: <ul style="list-style-type: none"> When relocating the system. After a leak.

Charging additional refrigerant

Before charging additional refrigerant, make sure the outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying).

i INFORMATION

Depending on the units and/or the installation conditions, it might be necessary to connect electrical wiring before you can charge refrigerant.

Typical workflow – Charging additional refrigerant typically consists of the following stages:

- 1 Determining if and how much you have to charge additionally.
- 2 If necessary, charging additional refrigerant.
- 3 Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

Completely recharging refrigerant

Before completely recharging refrigerant, make sure the following is done:

- 1 All refrigerant is recovered from the system.
- 2 The outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying).
- 3 Vacuum drying on the outdoor unit's **internal** refrigerant piping is performed.

! NOTICE

Before completely recharging, perform vacuum drying on the outdoor unit's **internal** refrigerant piping as well.

! NOTICE

To perform vacuum drying or a complete recharge of the outdoor unit's internal refrigerant piping it is necessary to activate the vacuum mode (see "[4.4.7 To activate/deactivate the vacuum mode field setting](#)" on page 11) which will open required valves in the refrigerant circuit so the vacuuming process or recharge of refrigerant can be done properly.


- Before vacuum drying or recharging, activate field setting "vacuum mode".
- After finishing vacuum drying or recharging, deactivate field setting "vacuum mode".

! WARNING

Some sections of the refrigerant circuit may be isolated from other sections caused by components with specific functions (e.g. valves). The refrigerant circuit therefore features additional service ports for vacuuming, pressure relief or pressurizing the circuit.

In case it is required to perform **brazing** on the unit, ensure that there is no pressure remaining inside the unit. Internal pressures need to be released with ALL the service ports indicated on the figures below opened. The location is depending on model type.

Location of service ports:

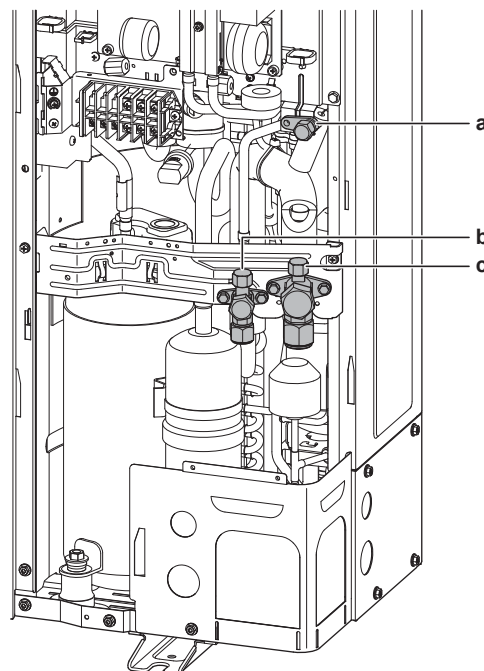

- a Internal service port
- b Stop valve with service port (liquid)
- c Stop valve with service port (gas)

Typical workflow – Completely recharging refrigerant typically consists of the following stages:

- 1 Determining how much refrigerant to charge.
- 2 Charging refrigerant.
- 3 Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

4.4.2 About the refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R32

Global warming potential (GWP) value: 675



WARNING: FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



WARNING

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.

4 Installation



WARNING

The refrigerant inside the unit is mildly flammable, but normally does not leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.

Turn off any combustible heating devices, ventilate the room, and contact the dealer from which you purchased the unit.

Do not use the unit until a service person confirms that the portion from which the refrigerant leaked is repaired.

4.4.3 To determine the additional refrigerant amount

To determine if adding additional refrigerant is necessary

If	Then
$(L1+L2+L3+L4+L5+L6+L7) \leq$ chargeless length Chargeless length= • 10 m (size-down) • 40 m (standard) • 15 m (size-up)	You do not have to add additional refrigerant.
$(L1+L2+L3+L4+L5+L6+L7) >$ chargeless length	You must add additional refrigerant. For future servicing, encircle the selected amount in the tables below.



INFORMATION

Piping length is the largest one way length of liquid piping.

To determine the additional refrigerant amount (R in kg) (in case of pair)

Standard piping size:

	L1 (m)				
L1 (standard):	40~50 m	50~55 m	55~60 m (a)	60~75 m (a)	75~85 m (a)
R:	0.35 kg	0.7 kg ^(a) 0.55 kg ^(b)	0.7 kg	1.05 kg	1.55 kg

- (a) Only for RZAG100~140.
(b) Only for RZAG71.

Size-up piping size:

	L1 (m)			
L1 (size-up):	15~20 m	20~25 m	25~30 m ^(a)	30~35 m ^(a)
R:	0.35 kg	0.7 kg	1.05 kg	1.4 kg

- (a) Only for RZAG100~140.

To determine the additional refrigerant amount (R in kg) (in case of twin, triple and double twin)

1 Determine G1 and G2.

G1 (m)	Total length of <x> liquid piping x=Ø9.5 mm (standard) x=Ø12.7 mm (size-up)
G2 (m)	Total length of Ø6.4 mm liquid piping

2 Determine R1 and R2.

If	Then
$G1 > 40 \text{ m}^{(a)}$	Use the table below to determine R1 (length= $G1-40 \text{ m}$) ^(a) and R2 (length= $G2$).
$G1 \leq 40 \text{ m}^{(a)}$ (and $G1+G2 > 40 \text{ m}$) ^(a)	R1=0.0 kg. Use the table below to determine R2 (length= $G1+G2-40 \text{ m}$) ^(a) .

- (a) In case of size-up: Replace 40 m by 15 m.

In case of standard liquid pipe size:

	Length				
	0~10 m	10~20 m	20~30 m	30~40 m	40~45 m
R1:	0.35 kg	0.7 kg	1.05 kg ^(a)	1.4 kg ^(a)	
R2:	0.2 kg	0.4 kg	0.6 kg	0.8 kg ^(a)	1 kg ^(b)

In case of size-up liquid pipe size:

	Length						
	0~5 m	5~10 m	10~15 m ^(a)	15~20 m ^(a)	20~30 m	30~40 m	40~45 m
R1:	0.35 kg	0.7 kg	1.05 kg	1.4 kg	—	—	—
R2:	0.35 kg		0.7 kg		1.05 kg	1.4 kg	—

- (a) Only for RZAG100~140.
(b) Only for RZAG125-140.

3 Determine the additional refrigerant amount: $R=R1+R2$.

Examples

Layout	Additional refrigerant amount (R)	
	Case: Twin, standard liquid pipe size	
	1 G1	Total Ø9.5 => G1=45 m
	G2	Total Ø6.4 => G2=7+5=12 m
	Case: G1>40 m	
	R1	Length=G1-40 m=5 m => R1=0.35 kg
	R2	Length=G2=12 m => R2=0.4 kg
3 R	$R=R1+R2=0.35+0.4=0.75 \text{ kg}$	
	Case: Triple, standard liquid pipe size	
	1 G1	Total Ø9.5 => G1=15 m
	G2	Total Ø6.4 => G2=20+17+17=54 m
	Case: G1≤40 m (and G1+G2>40 m)	
	R1	R1=0.0 kg
	R2	Length=G1+G2-40 m=15+54-40=29 m => R2=0.6 kg
3 R	$R=R1+R2=0.0+0.6=0.6 \text{ kg}$	

4.4.4 To determine the complete recharge amount

To determine the complete recharge amount (kg) (in case of standard liquid pipe size)

Model	Length (m) ^(a)					
	3~40	40~50	50~55	55~60	60~75	75~85
RZAG71	2.95	3.3	3.5	—	—	—
RZAG100~140	3.75	4.1	4.45		4.8	5.3

- (a) Length=L1 (pair); L1+L2 (twin, triple); L1+L2+L4 (double twin)

To determine the complete recharge amount (kg) (in case of size-up liquid pipe size)

Model	Length (m) ^(a)			
	3~15	15~20	20~25	25~35
RZAG71	2.95		3.3	—
RZAG100~140	3.35	3.7	4.05	4.4

(a) Length=L1 (pair); L1+L2 (twin, triple); L1+L2+L4 (double twin)

To determine the complete recharge amount (kg) (in case of size-down liquid pipe size)

Model	Length (m) ^(a)
	3~10
RZAG71	2.95
RZAG100~140	3.75

(a) Length=L1 (pair); L1+L2 (twin, triple); L1+L2+L4 (double twin)

4.4.5 Charging refrigerant: Setup

See "4.3.1 Checking refrigerant piping: Setup" on page 8.

4.4.6 To charge additional refrigerant



WARNING

- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, always use protective gloves and safety glasses.

Prerequisite: Before charging refrigerant, make sure the refrigerant piping is connected and checked (leak test and vacuum drying).

- Connect the refrigerant cylinder to both the service port of the gas stop valve and the service port of the liquid stop valve.
- Charge the additional refrigerant amount.
- Open the stop valves.

4.4.7 To activate/deactivate the vacuum mode field setting

Description

To perform vacuum drying or a complete recharge of the outdoor unit's internal refrigerant piping it is necessary to activate the vacuum mode which will open required valves in the refrigerant circuit so the vacuuming process or recharge of refrigerant can be done properly.

To activate vacuum mode:

Activating the vacuum mode is done by operating the push buttons BS* on the PCB (A1P) and reading the feedback from the 7-segment displays.

Operate the switches and push buttons with an insulated stick (such as a closed ball-point pen) to avoid touching of live parts.



- When the unit is powered on and not running, hold down the BS1 pushbutton for 5 seconds.

Result: You will reach the setting mode, the 7 segment display will show '2 0 0'.

- Press the BS2 button until you reach page 2-28.

- When 2-28 is reached, press the BS3 button once.
- Change the setting to '1' by pressing the BS2 button once.
- Push the BS3 button once
- When the display is not blinking anymore, press the BS3 button again to activate vacuum mode.

To deactivate vacuum mode:

After charging or vacuuming the unit, please deactivate the vacuum mode by changing the setting back to '0'.

Make sure to reattach the electronic component box cover and to install the front cover after the job is finished.



NOTICE

Make sure that all outside panels, except for the service cover on the electrical component box, are closed while working.

Close the lid of the electrical component box firmly before turning on the power.

4.4.8 To completely recharge refrigerant



WARNING


- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, always use protective gloves and safety glasses.

Prerequisite: Before completely recharging refrigerant, make sure the system is pumped down, the outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying) and vacuum drying on the outdoor unit's **internal** refrigerant piping is performed.

- If not already done (for vacuum drying of the unit), activate the vacuum mode (see "4.4.7 To activate/deactivate the vacuum mode field setting" on page 11)
- Connect the refrigerant cylinder to the service port of the liquid stop valve.
- Open the liquid stop valve.
- Charge the complete refrigerant amount.
- Deactivate the vacuum mode (see "4.4.7 To activate/deactivate the vacuum mode field setting" on page 11).
- Open the gas stop valve.

4.4.9 To fix the fluorinated greenhouse gases label

- Fill in the label as follows:

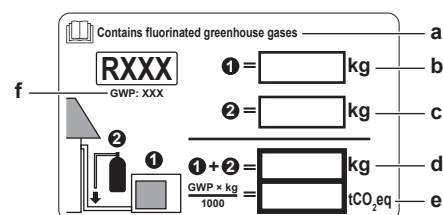

- If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- Factory refrigerant charge: see unit name plate
- Additional refrigerant amount charged
- Total refrigerant charge
- Greenhouse gas emissions** of the total refrigerant charge expressed as tonnes CO₂-equivalent
- GWP = Global warming potential

4 Installation



NOTICE

In Europe, the **greenhouse gas emissions** of the total refrigerant charge in the system (expressed as tonnes CO₂-equivalent) is used to determine the maintenance intervals. Follow the applicable legislation.

Formula to calculate the greenhouse gas emissions:
GWP value of the refrigerant × Total refrigerant charge [in kg] / 1000

- Fix the label on the inside of the outdoor unit. There is a dedicated place for it on the wiring diagram label.

4.5 Connecting the electrical wiring



DANGER: RISK OF ELECTROCUTION



WARNING

ALWAYS use multicore cable for power supply cables.



CAUTION

For use of units in applications with temperature alarm settings it is recommended to foresee a delay of 10 minutes for signalling the alarm in case the alarm temperature is exceeded. The unit may stop for several minutes during normal operation for "defrosting the unit", or when in "thermostat stop" operation.

4.5.1 About electrical compliance

RZAG71~140M7V1B

Equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase.).

RZAG71~140M7Y1B

Equipment complying with EN/IEC 61000-3-2 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current ≤16 A per phase.).

4.5.2 Guidelines when connecting the electrical wiring

Tightening torques

Item	Tightening torque (N•m)
M4 (X1M)	1.2~1.8
M4 (earth)	1.2~1.4
M5 (X1M)	2.0~3.0
M5 (earth)	2.4~2.9

If limited space is available at the wire terminal, use bended crimp-style ring terminals.

4.5.3 Specifications of standard wiring components

Component		V1		Y1			
		71	100~140	71	100	125	140
Power supply cable	MCA ^(a)	20.2 A	30.5 A	13.3 A	17.1 A	16.9 A	16.6
	Voltage range	220~240 V		380~415 V			
	Phase	1~		3N~			
	Frequency	50 Hz					
	Wire sizes	Must comply with applicable legislation					
Interconnection cables		Minimum cable section of 2.5 mm ² and applicable for 230 V					
Recommended field fuse		25 A	32 A	16 A	20 A		
Earth leakage circuit breaker		Must comply with applicable legislation					

(a) MCA=Minimum circuit ampacity. Stated values are maximum values (see electrical data of combination with indoor units for exact values).


4.5.4 To connect the electrical wiring on the outdoor unit





NOTICE

- Follow the wiring diagram (delivered with the unit, located at the inside of the service cover).
- Make sure the electrical wiring does NOT obstruct proper reattachment of the service cover.

- Remove the service cover.
- Connect the interconnection cables and power supply as follows:

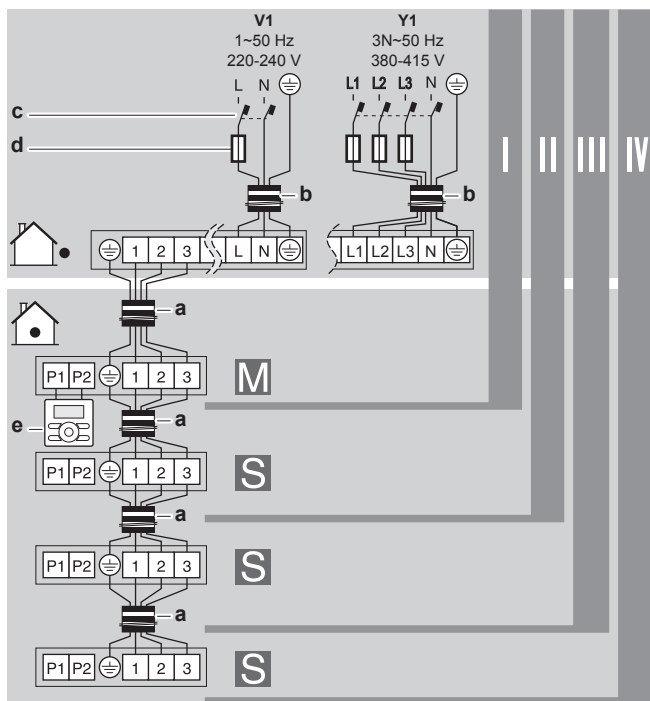

- I, II, III, IV Pair, twin, triple, double twin
- M, S Master, slave
- a Interconnection cable
- b Power supply cable
- c Earth leakage circuit breaker
- d Fuse
- e User interface

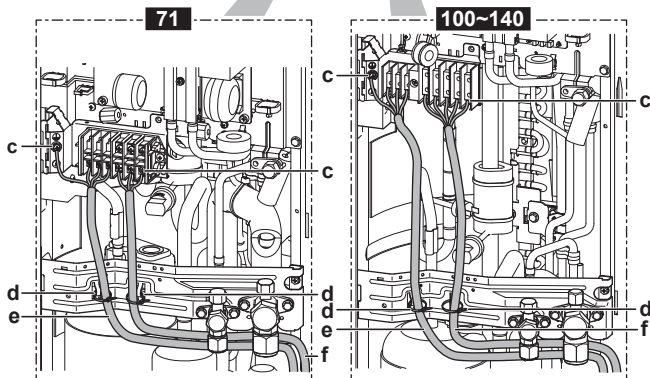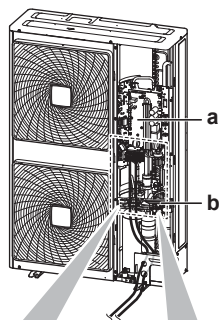

- a Switch box
- b Stop valve attachment plate
- c Earth
- d Cable tie
- e Interconnection cable
- f Power supply cable

- 3 Fix the cables (power supply and interconnection cable) with a cable tie to the stop valve attachment plate and route the wiring according to the illustration above.
- 4 Route the wiring through the frame and connect the wiring to the frame at the knockout hole.


<p>Routing through the frame</p>	<p>Choose one of the 3 possibilities:</p> <p>a Power supply cable b Interconnection cable</p>
<p>Connecting to the frame</p>	<p>When cables are routed from the unit, a protection sleeve for the conduits (PG insertions) can be inserted at the knockout hole.</p> <p>When you do not use a wire conduit, protect the wires with vinyl tubes to prevent the edge of the knockout hole from cutting the wires.</p> <p>A Inside of the outdoor unit B Outside of the outdoor unit</p> <p>a Wire b Bush c Nut d Frame e Hose</p>

- 5 Reattach the service cover.
- 6 Connect an earth leakage circuit breaker and fuse to the power supply line.

4.6 Finishing the outdoor unit installation

4.6.1 To finish the outdoor unit installation

- 1 Insulate and fix the refrigerant piping and interconnection cable as follows:

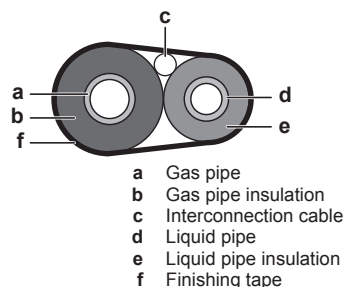

- 2 Install the service cover.

5 Commissioning

4.6.2 To check the insulation resistance of the compressor

NOTICE

If, after installation, refrigerant accumulates in the compressor, the insulation resistance over the poles can drop, but if it is at least 1 MΩ, then the unit will not break down.

- Use a 500 V mega-tester when measuring insulation.
- Do not use a mega-tester for low-voltage circuits.

- Measure the insulation resistance over the poles.

If	Then
≥1 MΩ	Insulation resistance is OK. This procedure is finished.
<1 MΩ	Insulation resistance is not OK. Go to the next step.

- Turn ON the power and leave it on for 6 hours.

Result: The compressor will heat up and evaporate any refrigerant in the compressor.

- Measure the insulation resistance again.

5 Commissioning

NOTICE

NEVER operate the unit without thermistors and/or pressure sensors/switches. Burning of the compressor might result.

5.1 Checklist before commissioning

Do NOT operate the system before the following checks are OK:

<input type="checkbox"/>	You read the complete installation instructions, as described in the installer reference guide .
<input type="checkbox"/>	The indoor units are properly mounted.
<input type="checkbox"/>	In case a wireless user interface is used: The indoor unit decoration panel with infrared receiver is installed.
<input type="checkbox"/>	The outdoor unit is properly mounted.
<input type="checkbox"/>	The following field wiring has been carried out according to this document and the applicable legislation: <ul style="list-style-type: none"> Between the local supply panel and the outdoor unit Between the outdoor unit and the indoor unit (master) Between the indoor units
<input type="checkbox"/>	There are NO missing phases or reversed phases .
<input type="checkbox"/>	The system is properly earthed and the earth terminals are tightened.
<input type="checkbox"/>	The fuses or locally installed protection devices are installed according to this document, and have not been bypassed.
<input type="checkbox"/>	The power supply voltage matches the voltage on the identification label of the unit.
<input type="checkbox"/>	There are NO loose connections or damaged electrical components in the switch box.
<input type="checkbox"/>	The insulation resistance of the compressor is OK.
<input type="checkbox"/>	There are NO damaged components or squeezed pipes on the inside of the indoor and outdoor units.

<input type="checkbox"/>	There are NO refrigerant leaks .
<input type="checkbox"/>	The correct pipe size is installed and the pipes are properly insulated.
<input type="checkbox"/>	The stop valves (gas and liquid) on the outdoor unit are fully open.

5.2 To perform a test run

This task is only applicable when using the BRC1E52 user interface.

- When using BRC1E51, see the installation manual of the user interface.
- When using BRC1D, see the service manual of the user interface.



NOTICE



Do not interrupt the test run.







INFORMATION


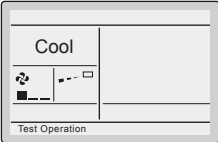

Backlight. To perform an ON/OFF action on the user interface, the backlight does not need to be lit. For any other action, it needs to be lit first. The backlight is lit for ±30 seconds when you press a button.

- Perform introductory steps.
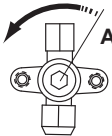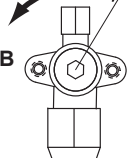
#	Action
1	Open the liquid stop valve (A) and gas stop valve (B) by removing the stem cap and turning counterclockwise with a hex wrench until it stops. <div style="display: flex; justify-content: space-around; align-items: center;">   </div>
2	Close the service cover to prevent electric shocks.
3	Turn ON power for at least 6 hours before starting operation to protect the compressor.
4	On the user interface, set the unit to cooling operation mode.


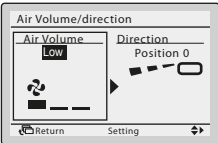

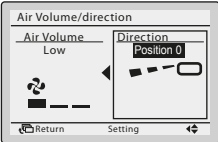


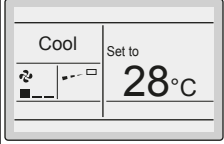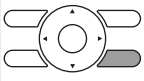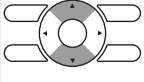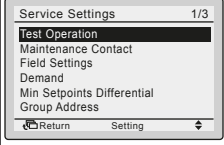- Start the test run.

#	Action	Result
1	Go to the home menu.	
2	Press at least 4 seconds. <div style="text-align: center;">  </div>	The Service Settings menu is displayed.
3	Select Test Operation. <div style="text-align: center;">  </div>	





#	Action	Result
4	Press. 	Test Operation is displayed on the home menu. 
5	Press within 10 seconds. 	Test run starts.

3 Check operation for 3 minutes.

4 Check operation of the airflow direction.

#	Action	Result
1	Press. 	
2	Select Position 0. 	
3	Change the position. 	If the airflow flap of the indoor unit moves, operation is OK. If not, operation is not OK.
4	Press. 	The home menu is displayed.

5 Stop the test run.
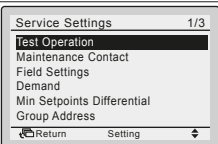
#	Action	Result
1	Press at least 4 seconds. 	The Service Settings menu is displayed.
2	Select Test Operation. 	
3	Press. 	The unit returns to normal operation, and the home menu is displayed.

5.3 Error codes when performing a test run

If the installation of the outdoor unit has NOT been done correctly, the following error codes may be displayed on the user interface:

Error code	Possible cause
Nothing displayed (the currently set temperature is not displayed)	<ul style="list-style-type: none"> The wiring is disconnected or there is a wiring error (between power supply and outdoor unit, between outdoor unit and indoor units, between indoor unit and user interface). The fuse on the outdoor unit PCB has blown out.
E3, E4 or L8	<ul style="list-style-type: none"> The stop valves are closed. The air inlet or air outlet is blocked.
E7	There is a missing phase in case of three-phase power supply units. Note: Operation will be impossible. Turn OFF the power, recheck the wiring, and switch two of the three electrical wires.
L4	The air inlet or air outlet is blocked.
U0	The stop valves are closed.
U2	<ul style="list-style-type: none"> There is a voltage imbalance. There is a missing phase in case of three-phase power supply units. Note: Operation will be impossible. Turn OFF the power, recheck the wiring, and switch two of the three electrical wires.
U4 or UF	The inter-unit branch wiring is not correct.
UA	The outdoor and indoor unit are incompatible.



NOTICE

- The reversed phase protection detector of this product only functions when the product starts up. Consequently reversed phase detection is not performed during normal operation of the product.
- The reversed phase protection detector is designed to stop the product in the event of an abnormality when the product is started up.
- Replace 2 of the 3 phases (L1, L2, and L3) during reverse-phase protection abnormality.

6 Disposal



NOTICE

Do not try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, oil and other parts must comply with applicable legislation. Units must be treated at a specialised treatment facility for reuse, recycling and recovery.

7 Technical data

7 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of latest technical data is available on the Daikin extranet (authentication required).

7.1 Overview: Technical data

This chapter contains information about:


- Service space
- Piping diagram
- Wiring diagram

7.2 Service space: Outdoor unit

Suction side	In the illustrations below, the service space at the suction side is based on 35°C DB and cooling operation. Foresee more space in the following cases: <ul style="list-style-type: none">• When the suction side temperature regularly exceeds this temperature.• When the heat load of the outdoor units is expected to regularly exceed the maximum operating capacity.
Discharge side	Take refrigerant piping work into account when positioning the units. If your layout does not match with any of the layouts below, contact your dealer.

Single unit | Single row of units

See figure 1 on the inside of the front cover.

- A,B,C,D** Obstacles (walls/baffle plates)
- E** Obstacle (roof)
- a,b,c,d,e** Minimum service space between the unit and obstacles A, B, C, D and E
- e_B** Maximum distance between the unit and the edge of obstacle E, in the direction of obstacle B
- e_D** Maximum distance between the unit and the edge of obstacle E, in the direction of obstacle D
- H_U** Height of the unit
- H_B,H_D** Height of obstacles B and D
- 1** Seal the bottom of the installation frame to prevent discharged air from flowing back to the suction side through the bottom of the unit.
- 2** Maximum two units can be installed.
-  Not allowed

Multiple rows of units


See figure 2 on the inside of the front cover.

Stacked units (max. 2 levels)

See figure 3 on the inside of the front cover.

- A1=>A2** (A1) If there is danger of drainage dripping and freezing between the upper and lower units...
(A2) Then install a **roof** between the upper and lower units. Install the upper unit high enough above the lower unit to prevent ice buildup at the upper unit's bottom plate.
- B1=>B2** (B1) If there is no danger of drainage dripping and freezing between the upper and lower units...
(B2) Then it is not required to install a roof, but **seal the gap** between the upper and lower units to prevent discharged air from flowing back to the suction side through the bottom of the unit.

7.3 Piping diagram: Outdoor unit

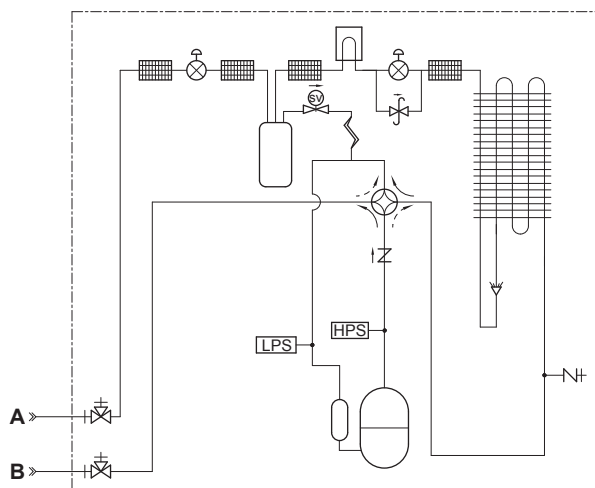

- Charge port / Service port (with 5/16" flare)
- Stop valve
- Filter
- Check valve
- Pressure relief valve
- Solenoid valve

- Heat sink (PCB)
- Capillary tube
- Electronic expansion valve
- 4-way valve
- High pressure switch
- Low pressure switch
- Compressor accumulator
- Heat exchanger
- Compressor
- Distributor
- Liquid receiver
- Flare connection
- A** Field piping (liquid: Ø9.5 flare connection)
- B** Field piping (gas: Ø15.9 flare connection)
- Heating
- Cooling

7.4 Wiring diagram: Outdoor unit

The wiring diagram is delivered with the unit, located at the inside of the service cover.

(1) Connection diagram

English	Translation
Connection diagram	Connection diagram
Only for ***	Only for ***
See note ***	See note ***
Outdoor	Outdoor
Indoor	Indoor
Upper	Upper
Lower	Lower
Fan	Fan
ON	ON
OFF	OFF

(2) Layout

English	Translation
Layout	Layout
Front	Front
Back	Back
Position of compressor terminal	Position of compressor terminal

(3) Notes

English	Translation
Notes	Notes
	Connection
X1M	Indoor/outdoor communication
-----	Earth wiring

English	Translation
-----	Field supply
①	Several wiring possibilities
	Protective earth
	Field wire
	Wiring depending on model
	Option
	Switch box
	PCB

NOTES:

- 1 Refer to the wiring diagram sticker (on the back of the front plate) for how to use the BS1~BS3 and DS1 switches.
- 2 When operating, do not short-circuit protective devices S1PH, S1PL and Q1E.
- 3 Refer to the combination table and the option manual for how to connect the wiring to X6A, X28A and X77A.
- 4 Colours: BLK: black, RED: red, BLU: blue, WHT: white, GRN: green



(4) Legend

English	Translation
Legend	Legend
Field supply	Field supply
Optional	Optional
Part n°	Part n°
Description	Description

A1P Printed circuit board (main)

7 Technical data

A2P	Printed circuit board (noise filter)	L*, L*A, L*B, NA, NB,	Connector
BS1~BS3 (A1P)	Push button switch	E*, U, V, W, X*A	
C1~C5 (A1P) (Y1 only)	Capacitor	(A1P~A2P)	
DS1 (A1P)	Dipswitch		
E1H	Bottom plate heater (option)		
F*U	Fuse		
HAP (A1P)	Light-emitting diode (service monitor is green)		
K1M, K3M (A1P) (Y1 only)	Magnetic contactor		
K1R (A1P)	Magnetic relay (Y1S)		
K2R (A1P)	Magnetic relay (Y2S)		
K4R (A1P)	Magnetic relay (E1H)		
K10R, K13R~K15R (A1P)	Magnetic relay		
K11M (A1P) (V1 only)	Magnetic contactor		
L1R (Y1 only)	Reactor		
M1C	Compressor motor		
M1F~M2F	Fan motor		
PFC (A1P) (V1 only)	Power factor correction		
PS (A1P)	Switching power supply		
Q1DI	Earth leakage circuit breaker (30 mA)		
Q1E	Overload protection		
R1~R8 (A1P) (Y1 only)	Resistor		
R1T	Thermistor (air)		
R2T	Thermistor (discharge)		
R3T	Thermistor (suction)		
R4T	Thermistor (heat exchanger)		
R5T	Thermistor (heat exchanger middle)		
R6T	Thermistor (liquid)		
R7T	Thermistor (fin)		
R8 (A1P) (V1 only)	Resistor		
RC (A1P) (Y1 only)	Signal receiver unit		
S1PH	High pressure switch		
S1PL	Low pressure switch		
SEG1~SEG3	7-segment display		
TC1 (A1P) (V1 only)	Signal transmission circuit		
TC (A1P) (Y1 only)	Signal transmission circuit		
V1 (V1 only)	Varistor		
V1D (A1P) (V1 only)	Diode		
V1D~V2D (A1P) (Y1 only)	Diode		
V*R (V1 only)	Diode module		
V1R, V2R (A1P) (Y1 only)	Diode module		
V3R~V5R (A1P) (Y1 only)	IGBT power module		
X1M	Terminal strip		
Y1E~Y3E	Electronic expansion valve		
Y1S~Y2S	Solenoid valve (4-way valve)		
Z*C	Noise filter (ferrite core)		
Z*F	Noise filter		

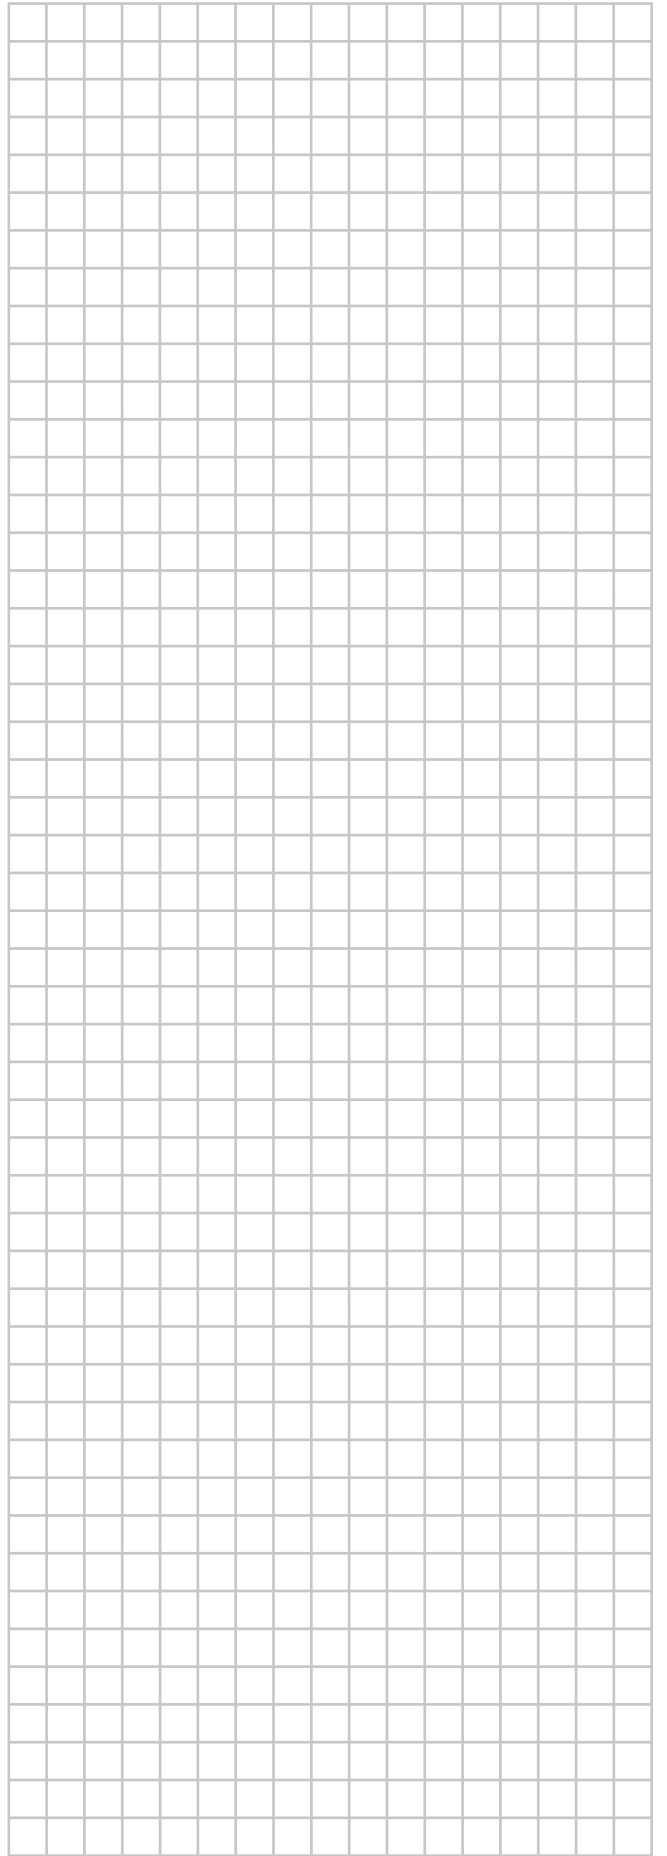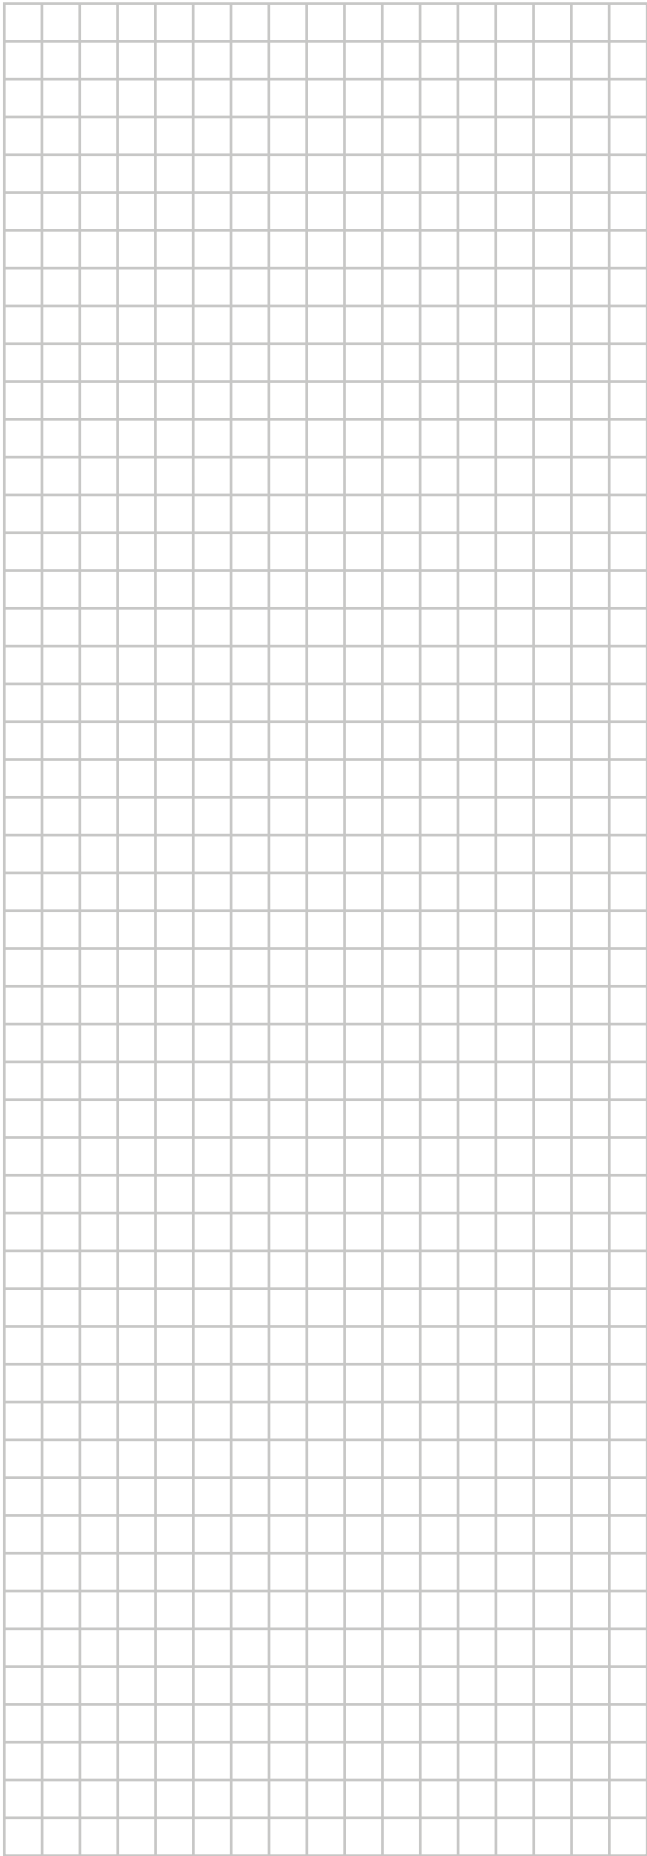

ERC



4P485927-1 0000000X

Copyright 2017 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P485927-1 2017.04