


# Service Manual

# SUPER MULTI *NX* E-Series

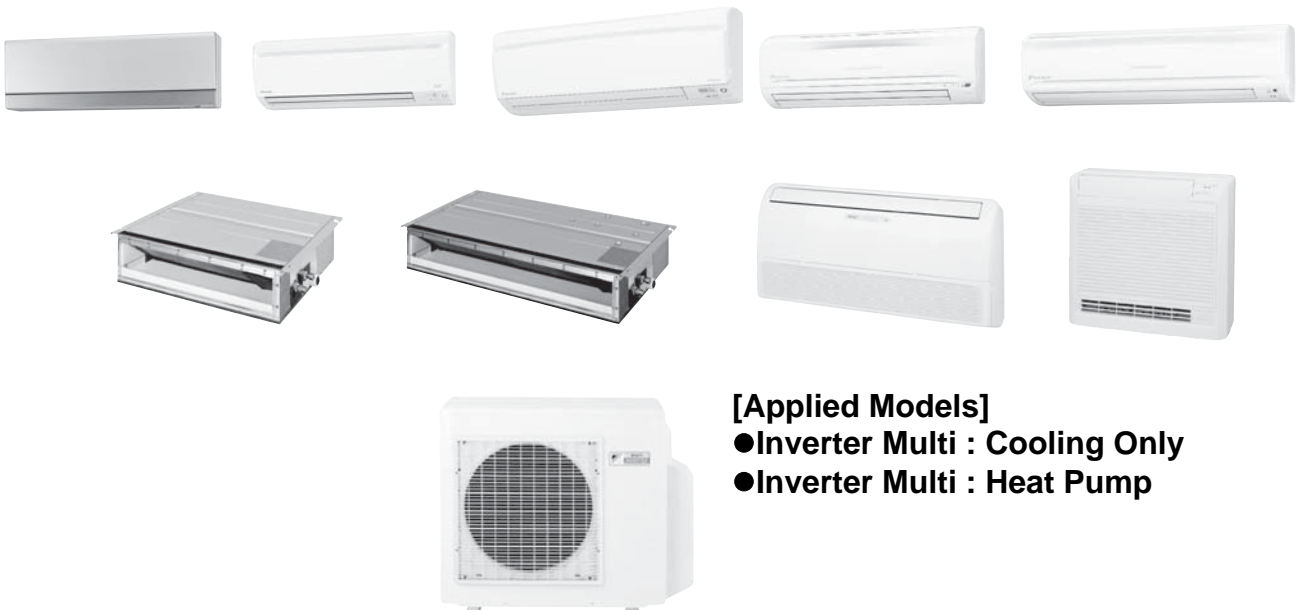

**[Applied Models]**

- Inverter Multi : Cooling Only
- Inverter Multi : Heat Pump

# SUPER MULTI NX E-Series

## ●Cooling Only

### Indoor Unit

FTKS20D3VMW(L)  
FTKS25D3VMW(L)  
FTKS35D3VMW(L)  
FTKS50D2V1W(L)  
FTKS20CAVMB  
FTKS25CAVMB  
FTKS35CAVMB  
FTKS50EV1B

FDKS25EAVMB  
FDKS35EAVMB  
FDKS25CAVMB  
FDKS35CAVMB  
FDKS50CVMB

FVKS25BAVMB  
FVKS35BAVMB  
FVKS50BAVMB  
FLKS25BAVMB  
FLKS35BAVMB  
FLKS50BAVMB

FHQ35BVV1B  
FHQ50BVV1B

### Outdoor Unit

3MKS50E2(3)V1B

4MKS58E2(3)V1B

## ●Heat Pump

### Indoor Unit

FTXG25EV1BW(S)  
FTXG35EV1BW(S)  
CTXG50EV1BW(S)  
FTXS20D3VMW(L)  
FTXS25D3VMW(L)  
FTXS35D3VMW(L)  
FTXS50D2V1W(L)  
FTXS20CAVMB  
FTXS25CAVMB  
FTXS35CAVMB  
FTXS50EV1B

FDXS25EAVMB  
FDXS35EAVMB  
FDXS25CAVMB  
FDXS35CAVMB  
FDXS50CVMB

FVXS25BAVMB  
FVXS35BAVMB  
FVXS50BAVMB  
FLXS25BAVMB  
FLXS35BAVMB  
FLXS50BAVMB

FHQ35BVV1B  
FHQ50BVV1B

ATXG25EV1B  
ATXG35EV1B  
ATXG50EV1B

ATXS20E2V1B  
ATXS25E2V1B  
ATXS35E2V1B  
ATXS50E2V1B

ATXS20DAVMB  
ATXS25DAVMB  
ATXS35DAVMB

ATX50EV1B

### Outdoor Unit

2MXS52E2(3)V1B

3MXS52E2(3)V1B

2AMX52E2(3)V1B

3AMX52E2(3)V1B

1. Introduction .....	V
1.1 Safety Cautions .....	V
Part 1 List of Functions .....	1
1. List of Functions .....	2
1.1 Cooling Only Models .....	2
1.2 Heat Pump Models .....	7
Part 2 Specifications .....	15
1. Specifications .....	16
1.1 Indoor Units - Cooling Only .....	16
1.2 Outdoor Units - Cooling Only .....	24
1.3 Indoor Units - Heat Pump .....	25
1.4 Outdoor Units - Heat Pump .....	38
Part 3 Printed Circuit Board Connector Wiring Diagram .....	41
1. Printed Circuit Board Connector Wiring Diagram .....	42
1.1 Wall Mounted Type .....	42
1.2 Duct Connected Type .....	51
1.3 Floor / Ceiling Suspended Dual Type .....	53
1.4 Floor Standing Type .....	56
1.5 Ceiling Suspended Type .....	59
1.6 Outdoor Units .....	61
Part 4 Function and Control .....	65
1. Main Functions .....	66
1.1 Frequency Principle .....	66
1.2 Power-Airflow Dual Flaps, Wide Angle Louvers and Auto-Swing .....	68
1.3 Operation Starting Control .....	69
1.4 Fan Speed Control for Indoor Units .....	70
1.5 Programme Dry Function .....	71
1.6 Automatic Operation .....	72
1.7 Thermostat Control .....	73
1.8 Night Set Mode .....	74
1.9 ECONO Mode .....	75
1.10 INTELLIGENT EYE (Wall Mounted Type Only) .....	76
1.11 HOME LEAVE Operation .....	78
1.12 Inverter POWERFUL Operation .....	79
1.13 Other Functions .....	80
2. Function of Main Structural Parts .....	82
2.1 Main Structural Parts .....	82
2.2 Function of Thermistor .....	83
3. Control Specification .....	87
3.1 Mode Hierarchy .....	87
3.2 Frequency Control .....	88
3.3 Controls at Mode Changing / Start-up .....	90
3.4 Discharge Pipe Control .....	92
3.5 Input Current Control .....	92
3.6 Freeze-up Protection Control .....	93

3.7 Heating Peak-cut Control .....	93
3.8 Fan Control.....	94
3.9 Liquid Compression Protection Function 2.....	94
3.10 Defrost Control .....	95
3.11 Electronic Expansion Valve Control .....	96
3.12 Malfunctions .....	100
3.13 Forced Operation Mode .....	101
3.14 Wiring-Error Check.....	102
3.15 Additional Function.....	104
Part 5 System Configuration.....	107
1. System Configuration.....	108
1.1 Operation Instructions .....	108
2. Instruction.....	109
2.1 Wall Mounted, Duct, Floor/Ceiling, Floor Standing Type .....	109
2.2 Ceiling Suspended Type .....	192
Part 6 Service Diagnosis.....	203
1. Caution for Diagnosis.....	204
1.1 Troubleshooting with Operation Lamp .....	204
2. Problem Symptoms and Measures .....	206
3. Service Check Function .....	207
4. Code Indication on the remote control .....	210
4.1 Error Codes and Description of Fault.....	210
5. Troubleshooting .....	211
5.1 Indoor Units .....	211
5.2 Outdoor Units .....	212
5.3 Indoor Unit PCB Abnormality .....	213
5.4 Freeze-up Protection Control or High Pressure Control.....	214
5.5 Fan Motor or Related Abnormality .....	216
5.6 Thermistor or Related Abnormality (Indoor Unit).....	219
5.7 Shutter Drive Motor / Shutter Limit Switch Abnormality .....	220
5.8 Signal Transmission Error (between Indoor and Outdoor Units).....	221
5.9 Unspecified Voltage (between Indoor and Outdoor Units).....	222
5.10 Freeze-up Protection Control .....	223
5.11 Outdoor Unit PCB Abnormality.....	225
5.12 OL Activation (Compressor Overload) .....	226
5.13 Compressor Lock .....	227
5.14 DC Fan Lock .....	228
5.15 Input Over Current Detection .....	229
5.16 Discharge Pipe Temperature Control.....	231
5.17 High Pressure Control in Cooling .....	232
5.18 Compressor Sensor System Abnormality .....	234
5.19 Position Sensor Abnormality .....	236
5.20 CT or Related Abnormality .....	237
5.21 Thermistor or Related Abnormality (Outdoor Unit).....	239
5.22 Electrical Box Temperature Rise.....	241
5.23 Radiation Fin Temperature Rise .....	243
5.24 Output Over Current Detection.....	245
5.25 Insufficient Gas.....	247







5.26 Low-voltage Detection or Over-voltage Detection .....	249
5.27 Signal Transmission Error (on Outdoor Unit PCB) .....	250
5.28 Anti-icing Function in Other Rooms / Unspecified Voltage (between Indoor and Outdoor Units) .....	251
6. Check .....	252
6.1 How to Check .....	252
 Part 7 Removal Procedure .....	 263
1. Outdoor Unit .....	264
1.1 Removal of the Panels and Plates .....	264
1.2 Removal of the Electrical Box .....	269
1.3 Removal of the PCB .....	276
1.4 Removal of the Propeller Fan / Fan Motor .....	282
1.5 Removal of the Sound Blanket .....	284
1.6 Removal of Electronic Expansion Valve Coil, Four Way Valve Coil and Thermistor .....	288
1.7 Removal of the Distributor .....	291
1.8 Removal of the Four Way Valve .....	292
1.9 Removal of the Compressor .....	293
 Part 8 Others .....	 295
1. Others .....	296
1.1 Test Run from the remote control .....	296
1.2 Jumper Settings .....	297
 Part 9 Appendix .....	 299
1. Piping Diagrams .....	300
1.1 Indoor Units .....	300
1.2 Outdoor Units .....	306
2. Wiring Diagrams .....	308
2.1 Indoor Units .....	308
2.2 Outdoor Units .....	313
 Index .....	 i
 Drawings & Flow Charts .....	 vi







# 1. Introduction








## 1.1 Safety Cautions

### Cautions and Warnings


- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
  - △ This symbol indicates an item for which caution must be exercised.  
The pictogram shows the item to which attention must be paid.
  - This symbol indicates a prohibited action.  
The prohibited item or action is shown inside or near the symbol.
  - This symbol indicates an action that must be taken, or an instruction.  
The instruction is shown inside or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.




### 1.1.1 Caution in Repair



 <b>Warning</b>	
<p>Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Working on the equipment that is connected to a power supply can cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.</p>	
<p>If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.</p>	
<p>When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it can cause injury.</p>	
<p>If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.</p>	
<p>The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.</p>	
<p>Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.</p>	

 <b>Caution</b>	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands can cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the refrigerating cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the refrigerating cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	




### 1.1.2 Cautions Regarding Products after Repair



 <b>Warning</b>	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only



 <b>Warning</b>	
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A ) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	
When replacing the coin battery in the remote control, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 <b>Caution</b>	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	For integral units only

### 1.1.3 Inspection after Repair

 <b>Warning</b>	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	





 <b>Warning</b>	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it can cause an electrical shock, excessive heat generation or fire.	

 <b>Caution</b>	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 MΩ or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

## 1.1.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

## 1.1.5 Using Icons List

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

# Part 1

# List of Functions

1. List of Functions .....	2
1.1 Cooling Only Models .....	2
1.2 Heat Pump Models.....	7

# 1. List of Functions

## 1.1 Cooling Only Models

Category	Functions			Category	Functions			
		FTKS20-35D3VMW(L)	FTKS50D2V1W(L)			FTKS20-35D3VMW(L)	FTKS50D2V1W(L)	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	
PAM Control	—	—	Titanium Apatite Photocatalytic Air-Purifying Filter		○	○		
Compressor	Oval Scroll Compressor	—	—		Longlife Filter (Option)	—	—	
	Swing Compressor	—	—		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	—	—		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Mold Proof Operation	—	—	
	Power-Airflow Diffuser	—	—		Heating Dry Operation	—	—	
	Wide-Angle Louvers	○	○		Good-Sleep Cooling Operation	—	—	
	Vertical Auto-Swing (Up and Down)	○	○		Timer	24-Hour On/Off Timer	○	○
	Horizontal Auto-Swing (Right and Left)	—	—			72-Hour On/Off Timer	—	—
	3-D Airflow	—	—			Night Set Mode	○	○
	Comfort Airflow Mode	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	
3-Step Airflow (H/P Only)	—	—	Self-Diagnosis (Digital, LED) Display		○	○		
Comfort Control	Auto Fan Speed	○	○		Wiring Error Check	—	—	
	Indoor Unit Silent Operation	○	○		Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	
	Night Quiet Mode (Automatic)	—	—		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○
	Outdoor Unit Silent Operation (Manual)	—	—			Flexible Voltage Correspondence	○	—
	Intelligent Eye	○	○			High Ceiling Application	—	—
	Quick Warming Function	—	—	Chargeless	—	—		
	Hot-Start Function	—	—	Either Side Drain (Right or Left)	○	○		
Automatic Defrosting	—	—	Power Selection	—	—			
Operation	Automatic Operation	—	—	Remote Control	5-Rooms Centralized Controller (Option)	○	○	
	Programme Dry Function	○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	
	Fan Only	○	○		Remote Control Adapter (Normal Open Contact) (Option)	○	○	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—		remote control	DIII-NET Compatible (Adapter) (Option)	○	○
	Inverter Powerful Operation	○	○			Wireless	○	○
	Priority-Room Setting	—	—		Wired	—	—	
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	—	—					
	ECONO Mode	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
Temperature Display	—	—						
Another Room Operation	—	—						

**Note:** ○ : Holding Functions  
— : No Functions

Category	Functions	FTKS20-35CAVMB	FTKS50EV1B	Category	Functions	FTKS20-35CAVMB	FTKS50EV1B	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	○	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	○	
Compressor	Oval Scroll Compressor	—	—		Longlife Filter (Option)	—	—	
	Swing Compressor	—	—		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	—	—		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Mold Proof Operation	—	—	
	Power-Airflow Diffuser	—	—		Heating Dry Operation	—	—	
	Wide-Angle Louvers	○	○		Good-Sleep Cooling Operation	—	—	
	Vertical Auto-Swing (Up and Down)	○	○		Timer	24-Hour On/Off Timer	○	○
	Horizontal Auto-Swing (Right and Left)	—	○			72-Hour On/Off Timer	—	—
	3-D Airflow	—	○			Night Set Mode	○	○
	Comfort Airflow Mode	—	—			Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○
3-Step Airflow (H/P Only)	—	—	Self-Diagnosis (Digital, LED) Display	○	○			
Comfort Control	Auto Fan Speed	○	○	Wiring Error Check	—		—	
	Indoor Unit Silent Operation	○	○	Anticorrosion Treatment of Outdoor Heat Exchanger	—		—	
	Night Quiet Mode (Automatic)	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit		○	○
	Outdoor Unit Silent Operation (Manual)	—	—		Flexible Voltage Correspondence		○	—
	Intelligent Eye	○	○		High Ceiling Application		—	—
	Operation	Quick Warming Function	—	—	Chargeless	—	—	
		Hot-Start Function	—	—	Either Side Drain (Right or Left)	○	○	
Automatic Defrosting		—	—	Power Selection	—	—		
Lifestyle Convenience	Automatic Operation	—	—	Remote Control	5-Rooms Centralized Controller (Option)	○	○	
	Programme Dry Function	○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	
	Fan Only	○	○		Remote Control Adapter (Normal Open Contact) (Option)	○	○	
	New Powerful Operation (Non-Inverter)	—	—		DIII-NET Compatible (Adapter) (Option)	○	○	
	Inverter Powerful Operation	○	○	remote control	Wireless	○	○	
	Priority-Room Setting	—	—		Wired	—	—	
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	ECONO Mode	—	—					
	Indoor Unit On/Off Switch	○	○					
Signal Reception Indicator	○	○						
Temperature Display	—	—						
Another Room Operation	—	—						

**Note:** ○ : Holding Functions  
— : No Functions



Category	Functions				Category	Functions				
		FDKS25/35CAVMB	FDKS50CVMB	FDKS25/35EAVMB			FDKS25/35CAVMB	FDKS50CVMB	FDKS25/35EAVMB	
Basic Function	Inverter (with Inverter Power Control)	○	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic & Virustatic Functions	—	—	—	
	Operation Limit for Cooling (°CDB)	—	—	—		Photocatalytic Deodorizing Filter	—	—	—	
	Operation Limit for Heating (°CWB)	—	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	—	
	PAM Control	—	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	—	
Compressor	Oval Scroll Compressor	—	—	—		Longlife Filter (Option)	—	—	—	
	Swing Compressor	—	—	—		Mold Proof Air Filter	○	○	○	
	Rotary Compressor	—	—	—		Wipe-clean Flat Panel	—	—	—	
	Reluctance DC Motor	—	—	—		Washable Grille	—	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—	—		Filter Cleaning Indicator	—	—	—	
	Power-Airflow Dual Flaps	—	—	—		Mold Proof Operation	—	—	—	
	Power-Airflow Diffuser	—	—	—		Heating Dry Operation	—	—	—	
	Wide-Angle Louvers	—	—	—		Good-Sleep Cooling Operation	—	—	—	
	Vertical Auto-Swing (Up and Down)	—	—	—		Timer	24-Hour On/Off Timer	○	○	○
	Horizontal Auto-Swing (Right and Left)	—	—	—			72-Hour On/Off Timer	—	—	—
	3-D Airflow	—	—	—			Night Set Mode	○	○	○
	Comfort Airflow Mode	—	—	—		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	○
3-Step Airflow (H/P Only)	—	—	—	Self-Diagnosis (Digital, LED) Display	○		○	○		
Comfort Control	Auto Fan Speed	○	○	○	Flexibility	Wiring-Error Check	—	—	—	
	Indoor Unit Silent Operation	○	○	○		Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	—	
	Night Quiet Mode (Automatic)	—	—	—		Multi-Split / Split Type Compatible Indoor Unit	○	○	○	
	Outdoor Unit Silent Operation (Manual)	—	—	—		Flexible Voltage Correspondence	○	○	○	
	Intelligent Eye	—	—	—		High Ceiling Application	—	—	—	
	Quick Warming Function	—	—	—		Chargeless	—	—	—	
	Hot-Start Function	—	—	—		Either Side Drain (Right or Left)	—	—	—	
	Automatic Defrosting	—	—	—		Power-Selection	—	—	—	
Operation	Automatic Operation	—	—	—	Remote Control	5-Rooms Centralized Controller (Option)	○	○	○	
	Programme Dry Function	○	○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	○	
	Fan Only	○	○	○		Remote Control Adapter (Normal Open Contact) (Option)	○	○	○	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	—	remote control	DIII-NET Compatible (Adapter) (Option)	○	○	○	
	Inverter Powerful Operation	○	○	○		Wireless	○	○	○	
	Priority-Room Setting	—	—	—		Wired	—	—	—	
	Cooling / Heating Mode Lock	—	—	—						
	Home Leave Operation	○	○	○						
	ECONO Mode	—	—	—						
	Indoor Unit On/Off Switch	○	○	○						
	Signal Reception Indicator	○	○	○						
	Temperature Display	—	—	—						
Another Room Operation	—	—	—							

**Note:** ○ : Holding Functions  
— : No Functions

Category	Functions	FLKS25-50BAVMB	FVKS25-50BAVMB	FHQ35/60BVV1B	Category	Functions	FLKS25-50BAVMB	FVKS25-50BAVMB	FHQ35/60BVV1B
Basic Function	Inverter (with Inverter Power Control)	○	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic & Virustatic Functions	○	○	—
	Operation Limit for Cooling (°CDB)	—	—	—		Photocatalytic Deodorizing Filter	○	○	—
	Operation Limit for Heating (°CWB)	—	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	—
	PAM Control	—	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	—
Compressor	Oval Scroll Compressor	—	—	—		Longlife Filter (Option)	—	—	○
	Swing Compressor	—	—	—		Mold Proof Air Filter	○	○	○
	Rotary Compressor	—	—	—		Wipe-clean Flat Panel	—	—	—
	Reluctance DC Motor	—	—	—		Washable Grille	—	○	○
Comfortable Airflow	Power-Airflow Flap	—	—	—		Filter Cleaning Indicator	—	—	○
	Power-Airflow Dual Flaps	—	—	—		Mold Proof Operation	—	—	—
	Power-Airflow Diffuser	—	—	—		Heating Dry Operation	—	—	—
	Wide-Angle Louvers	—	○	—		Good-Sleep Cooling Operation	—	—	—
	Vertical Auto-Swing (Up and Down)	○	○	○	Timer	24-Hour On/Off Timer	○	○	—
	Horizontal Auto-Swing (Right and Left)	—	—	—		72-Hour On/Off Timer	—	—	○
	3-D Airflow	—	—	—		Night Set Mode	○	○	—
	Comfort Airflow Mode	—	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	○
3-Step Airflow (H/P Only)	—	—	—	Self-Diagnosis (Digital, LED) Display		○	○	○	
Comfort Control	Auto Fan Speed	○	○	—	Wiring-Error Check	—	—	—	
	Indoor Unit Silent Operation	○	○	—	Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	—	
	Night Quiet Mode (Automatic)	—	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	○
	Outdoor Unit Silent Operation (Manual)	—	—	—		Flexible Voltage Correspondence	○	○	—
	Intelligent Eye	—	—	—		High Ceiling Application	—	—	○
	Quick Warming Function	—	—	—		Chargeless	—	—	—
	Hot-Start Function	—	—	—		Either Side Drain (Right or Left)	—	—	—
	Automatic Defrosting	—	—	—		Power-Selection	—	—	—
Operation	Automatic Operation	—	—	—	Remote Control	5-Rooms Centralized Controller (Option)	○	○	—
	Programme Dry Function	○	○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	—
	Fan Only	○	○	○		Remote Control Adapter (Normal Open Contact) (Option)	○	○	—
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	—	remote control	DIII-NET Compatible (Adapter) (Option)	○	○	○
	Inverter Powerful Operation	○	○	—		Wireless	○	○	○
	Priority-Room Setting	—	—	—	Wired	—	—	○	
	Cooling / Heating Mode Lock	—	—	—					
	Home Leave Operation	○	○	—					
	ECONO Mode	—	—	—					
	Indoor Unit On/Off Switch	○	○	—					
	Signal Reception Indicator	○	○	—					
	Temperature Display	—	—	—					
Another Room Operation	—	—	—						

**Note:** ○ : Holding Functions  
— : No Functions

Category	Functions	3MKS50E2(3)V1B 4MKS58E2(3)V1B	Category	Functions	3MKS50E2(3)V1B 4MKS58E2(3)V1B
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter with Bacteriostatic & Virustatic Functions	—
	Operation Limit for Cooling (°CDB)	-10 ~ 46		Photocatalytic Deodorizing Filter	—
	Operation Limit for Heating (°CWB)	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—
	PAM Control	○		Titanium Apatite Photocatalytic Air-Purifying Filter	—
Compressor	Oval Scroll Compressor	—		Longlife Filter (Option)	—
	Swing Compressor	○		Mold Proof Air Filter	—
	Rotary Compressor	—		Wipe-clean Flat Panel	—
	Reluctance DC Motor	○		Washable Grille	—
Comfortable Airflow	Power-Airflow Flap	—		Filter Cleaning Indicator	—
	Power-Airflow Dual Flaps	—		Mold Proof Operation	—
	Power-Airflow Diffuser	—	Heating Dry Operation	—	
	Wide-Angle Louvers	—	Good-Sleep Cooling Operation	—	
	Vertical Auto-Swing (Up and Down)	—	Timer	24-Hour On/Off Timer	—
	Horizontal Auto-Swing (Right and Left)	—		72-Hour On/Off Timer	—
	3-D Airflow	—		Night Set Mode	—
Comfort Control	Comfort Airflow Mode	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	—
	3-Step Airflow (H/P Only)	—		Self-Diagnosis (Digital, LED) Display	○
	Auto Fan Speed	—	Flexibility	Wiring-Error Check	○
	Indoor Unit Silent Operation	—		Anticorrosion Treatment of Outdoor Heat Exchanger	○
	Night Quiet Mode (Automatic)	○		Multi-Split / Split Type Compatible Indoor Unit	—
	Outdoor Unit Silent Operation (Manual)	○		Flexible Voltage Correspondence	—
	Intelligent Eye	—		High Ceiling Application	—
	Quick Warming Function	—		Chargeless	○
Hot-Start Function	—	Either Side Drain (Right or Left)		—	
Automatic Defrosting	—	Power-Selection	—		
Operation	Automatic Operation	—	Remote Control	5-Rooms Centralized Controller (Option)	—
	Programme Dry Function	—		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	—
	Fan Only	—		Remote Control Adapter (Normal Open Contact) (Option)	—
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	remote control	DIII-NET Compatible (Adapter) (Option)	—
	Inverter Powerful Operation	—		Wireless	—
	Priority-Room Setting	○	Wired	—	
	Cooling / Heating Mode Lock	—			
	Home Leave Operation	—			
	ECONO Mode	—			
	Indoor Unit On/Off Switch	—			
	Signal Reception Indicator	—			
	Temperature Display	—			
Another Room Operation	—				

**Note:** ○ : Holding Functions  
— : No Functions

## 1.2 Heat Pump Models

Category	Functions				Category	Functions				
		FTXG25/35EV1BW(S)	CTXG50EV1BW(S)	FTXS20-35D3VMW(L)			FTXG25/35EV1BW(S)	CTXG50EV1BW(S)	FTXS20-35D3VMW(L)	
Basic Function	Inverter (with Inverter Power Control)	○	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	—	
	Operation Limit for Cooling (°CDB)	—	—	—		Photocatalytic Deodorizing Filter	—	—	—	
	Operation Limit for Heating (°CWB)	—	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	—	
	PAM Control	—	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○	○	
Compressor	Oval Scroll Compressor	—	—	—		Longlife Filter (Option)	—	—	—	
	Swing Compressor	—	—	—		Mold Proof Air Filter	○	○	○	
	Rotary Compressor	—	—	—		Wipe-clean Flat Panel	○	○	○	
	Reluctance DC Motor	—	—	—		Washable Grille	—	—	—	
Comfortable Airflow	Power-Airflow Flap	—	○	—		Filter Cleaning Indicator	—	—	—	
	Power-Airflow Dual Flaps	○	—	○		Mold Proof Operation	—	—	—	
	Power-Airflow Diffuser	—	—	—		Heating Dry Operation	—	—	—	
	Wide-Angle Louvers	○	○	○		Good-Sleep Cooling Operation	—	—	—	
	Vertical Auto-Swing (Up and Down)	○	○	○		Timer	24-Hour On/Off Timer	○	○	○
	Horizontal Auto-Swing (Right and Left)	○	○	—			72-Hour On/Off Timer	—	—	—
	3-D Airflow	○	○	—			Night Set Mode	○	○	○
	Comfort Airflow Mode	○	—	○		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	○
3-Step Airflow (H/P Only)	—	○	—	Self-Diagnosis (Digital, LED) Display	○		○	○		
Comfort Control	Auto Fan Speed	○	○	○	Wiring Error Check		—	—	—	
	Indoor Unit Silent Operation	○	○	○	Anticorrosion Treatment of Outdoor Heat Exchanger		—	—	—	
	Night Quiet Mode (Automatic)	—	—	—	Flexibility		Multi-Split / Split Type Compatible Indoor Unit	—	—	—
	Outdoor Unit Silent Operation (Manual)	—	—	—			Flexible Voltage Correspondence	—	—	○
	Intelligent Eye	○	○	○			High Ceiling Application	—	—	—
	Quick Warming Function	—	—	—	Operation		Chargeless	—	—	—
	Hot-Start Function	○	○	○		Either Side Drain (Right or Left)	○	○	○	
Automatic Defrosting	—	—	—	Power Selection		—	—	—		
Operation	Automatic Operation	○	○	○	Remote Control	5-Rooms Centralized Controller (Option)	○	○	○	
	Programme Dry Function	○	○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	○	
	Fan Only	○	○	○		Remote Control Adapter (Normal Open Contact) (Option)	○	○	○	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	—		remote control	DIII-NET Compatible (Adapter) (Option)	○	○	○
	Inverter Powerful Operation	○	○	○			Wireless	○	○	○
	Priority-Room Setting	—	—	—			Wired	—	—	—
	Cooling / Heating Mode Lock	—	—	—						
	Home Leave Operation	—	—	—						
	ECONO Mode	—	—	○						
	Indoor Unit On/Off Switch	○	○	○						
	Signal Reception Indicator	○	○	○						
Temperature Display	—	—	—							
Another Room Operation	—	—	—							

**Note:** ○ : Holding Functions  
— : No Functions

Category	Functions	FTXS50D2V1W(L)	FTXS20-35CAVMB	FTXS50EV1B	Category	Functions	FTXS50D2V1W(L)	FTXS20-35CAVMB	FTXS50EV1B	
Basic Function	Inverter (with Inverter Power Control)	○	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	—	
	Operation Limit for Cooling (°CDB)	—	—	—		Photocatalytic Deodorizing Filter	—	—	—	
	Operation Limit for Heating (°CWB)	—	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	○	—	
	PAM Control	—	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	○	—	○	
Compressor	Oval Scroll Compressor	—	—	—		Longlife Filter (Option)	—	—	—	
	Swing Compressor	—	—	—		Mold Proof Air Filter	○	○	○	
	Rotary Compressor	—	—	—		Wipe-clean Flat Panel	○	○	○	
	Reluctance DC Motor	—	—	—		Washable Grille	—	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—	—		Filter Cleaning Indicator	—	—	—	
	Power-Airflow Dual Flaps	○	○	○		Mold Proof Operation	—	—	—	
	Power-Airflow Diffuser	—	—	—		Heating Dry Operation	—	—	—	
	Wide-Angle Louvers	○	○	○		Good-Sleep Cooling Operation	—	—	—	
	Vertical Auto-Swing (Up and Down)	○	○	○	Timer	24-Hour On/Off Timer	○	○	○	
	Horizontal Auto-Swing (Right and Left)	—	—	○		72-Hour On/Off Timer	—	—	—	
	3-D Airflow	—	—	○		Night Set Mode	○	○	○	
	Comfort Airflow Mode	○	—	—		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	○
3-Step Airflow (H/P Only)	—	—	—	Self-Diagnosis (Digital, LED) Display	○		○	○		
Comfort Control	Auto Fan Speed	○	○	○	Wiring Error Check		—	—	—	
	Indoor Unit Silent Operation	○	○	○	Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	—		
	Night Quiet Mode (Automatic)	—	—	—		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	○
	Outdoor Unit Silent Operation (Manual)	—	—	—	Flexible Voltage Correspondence		—	○	—	
	Intelligent Eye	○	○	○	High Ceiling Application		—	—	—	
	Quick Warming Function	—	—	—	Chargeless		—	—	—	
	Hot-Start Function	○	○	○	Either side Drain (Right or Left)		○	○	○	
	Automatic Defrosting	—	—	—	Power Selection		—	—	—	
Operation	Automatic Operation	○	○	○	Remote Control	5-Rooms Centralized Controller (Option)	○	○	○	
	Programme Dry Function	○	○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	○	
	Fan Only	○	○	○		Remote Control Adapter (Normal Open Contact) (Option)	○	○	○	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	—		remote control	DIII-NET Compatible (Adapter) (Option)	○	○	○
	Inverter Powerful Operation	○	○	○			Wireless	○	○	○
	Priority-Room Setting	—	—	—			Wired	—	—	—
	Cooling / Heating Mode Lock	—	—	—						
	Home Leave Operation	—	○	○						
	ECONO Mode	○	—	—						
	Indoor Unit On/Off Switch	○	○	○						
	Signal Reception Indicator	○	○	○						
	Temperature Display	—	—	—						
Another Room Operation	—	—	—							

**Note:** ○ : Holding Functions  
 — : No Functions

Category	Functions				Category	Functions				
		FDXS25/35CAVMB	FDXS50CVMB	FDXS25/35EAVMB			FDXS25/35CAVMB	FDXS50CVMB	FDXS25/35EAVMB	
Basic Function	Inverter (with Inverter Power Control)	○	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic & Virustatic Functions	—	—	—	
	Operation Limit for Cooling (°CDB)	—	—	—		Photocatalytic Deodorizing Filter	—	—	—	
	Operation Limit for Heating (°CWB)	—	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	—	
	PAM Control	—	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	—	
Compressor	Oval Scroll Compressor	—	—	—		Longlife Filter (Option)	—	—	—	
	Swing Compressor	—	—	—		Mold Proof Air Filter	○	○	○	
	Rotary Compressor	—	—	—		Wipe-clean Flat Panel	—	—	—	
	Reluctance DC Motor	—	—	—		Washable Grille	—	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—	—		Filter Cleaning Indicator	—	—	—	
	Power-Airflow Dual Flaps	—	—	—		Mold Proof Operation	—	—	—	
	Power-Airflow Diffuser	—	—	—		Heating Dry Operation	—	—	—	
	Wide-Angle Louvers	—	—	—		Good-Sleep Cooling Operation	—	—	—	
	Vertical Auto-Swing (Up and Down)	—	—	—		Timer	24-Hour On/Off Timer	○	○	○
	Horizontal Auto-Swing (Right and Left)	—	—	—			72-Hour On/Off Timer	—	—	—
	3-D Airflow	—	—	—			Night Set Mode	○	○	○
	3-Step Airflow (H/P Only)	—	—	—			Auto-Restart (after Power Failure)	○	○	○
Comfort Control	Auto Fan Speed	○	○	○	Worry Free "Reliability & Durability"	Self-Diagnosis (Digital, LED) Display	○	○	○	
	Indoor Unit Silent Operation	○	○	○		Wiring-Error Check	—	—	—	
	Night Quiet Mode (Automatic)	—	—	—		Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	—	
	Outdoor Unit Silent Operation (Manual)	—	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	○	
	Intelligent Eye	—	—	—		Flexible Voltage Correspondence	○	○	○	
	Quick Warming Function	—	—	—		High Ceiling Application	—	—	—	
	Hot-Start Function	○	○	○		Chargeless	—	—	—	
	Automatic Defrosting	—	—	—		Either Side Drain (Right or Left)	—	—	—	
Operation	Automatic Operation	○	○	○	Power-Selection	—	—	—		
	Programme Dry Function	○	○	○	Remote Control	5-Rooms Centralized Controller (Option)	○	○	○	
	Fan Only	○	○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	○	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	—		remote control	Remote Control Adapter (Normal Open Contact) (Option)	○	○	○
	Inverter Powerful Operation	○	○	○	DIII-NET Compatible (Adapter) (Option)		○	○	○	
	Priority-Room Setting	—	—	—	Wireless	○	○	○		
	Cooling / Heating Mode Lock	—	—	—	Wired	—	—	—		
	Home Leave Operation	○	○	○						
	ECONO Mode	—	—	—						
	Indoor Unit On/Off Switch	○	○	○						
	Signal Reception Indicator	○	○	○						
Temperature Display	—	—	—							
Another Room Operation	—	—	—							

**Note:** ○ : Holding Functions  
— : No Functions

Category	Functions	FLXS25-50BAVMB	FVXS25-50BAVMB	FHQ35/60BW1B	Category	Functions	FLXS25-50BAVMB	FVXS25-50BAVMB	FHQ35/60BW1B	
Basic Function	Inverter (with Inverter Power Control)	○	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic & Virustatic Functions	○	○	—	
	Operation Limit for Cooling (°CDB)	—	—	—		Photocatalytic Deodorizing Filter	○	○	—	
	Operation Limit for Heating (°CWB)	—	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	—	
	PAM Control	—	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	—	
Compressor	Oval Scroll Compressor	—	—	—		Longlife Filter (Option)	—	—	○	
	Swing Compressor	—	—	—		Mold Proof Air Filter	○	○	○	
	Rotary Compressor	—	—	—		Wipe-clean Flat Panel	—	—	—	
	Reluctance DC Motor	—	—	—		Washable Grille	—	○	○	
Comfortable Airflow	Power-Airflow Flap	—	—	—		Filter Cleaning Indicator	—	—	○	
	Power-Airflow Dual Flaps	—	—	—		Mold Proof Operation	—	—	—	
	Power-Airflow Diffuser	—	—	—		Heating Dry Operation	—	—	—	
	Wide-Angle Louvers	—	○	—		Good-Sleep Cooling Operation	—	—	—	
	Vertical Auto-Swing (Up and Down)	○	○	○		Timer	24-Hour On/Off Timer	○	○	—
	Horizontal Auto-Swing (Right and Left)	—	—	—			72-Hour On/Off Timer	—	—	○
	3-D Airflow	—	—	—			Night Set Mode	○	○	—
	Comfort Airflow Mode	—	—	—		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	○
3-Step Airflow (H/P Only)	—	○	—	Self-Diagnosis (Digital, LED) Display			○	○	○	
Comfort Control	Auto Fan Speed	○	○	—	Wiring-Error Check	—	—	—		
	Indoor Unit Silent Operation	○	○	—	Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	—		
	Night Quiet Mode (Automatic)	—	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	○	
	Outdoor Unit Silent Operation (Manual)	—	—	—		Flexible Voltage Correspondence	○	○	—	
	Intelligent Eye	—	—	—		High Ceiling Application	—	—	○	
	Quick Warming Function	—	—	—		Chargeless	—	—	—	
	Hot-Start Function	○	○	—		Either Side Drain (Right or Left)	—	—	—	
	Automatic Defrosting	—	—	—		Power-Selection	—	—	—	
Operation	Automatic Operation	○	○	—		Remote Control	5-Rooms Centralized Controller (Option)	○	○	—
	Programme Dry Function	○	○	○			Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	—
	Fan Only	○	○	○	Remote Control Adapter (Normal Open Contact) (Option)		○	○	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	—	remote control	DIII-NET Compatible (Adapter) (Option)	○	○	○	
	Inverter Powerful Operation	○	○	—		Wireless	○	○	○	
	Priority-Room Setting	—	—	—	Wired	—	—	○		
	Cooling / Heating Mode Lock	—	—	—						
	Home Leave Operation	○	○	—						
	ECONO Mode	—	—	—						
	Indoor Unit On/Off Switch	○	○	—						
	Signal Reception Indicator	○	○	—						
	Temperature Display	—	—	—						
Another Room Operation	—	—	—							

**Note:** ○ : Holding Functions  
— : No Functions

Category	Functions	2MXS52E2(3)V1B 3MXS52E2(3)V1B	Category	Functions	2MXS52E2(3)V1B 3MXS52E2(3)V1B
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter with Bacteriostatic & Virustatic Functions	—
	Operation Limit for Cooling (°CDB)	-10 ~ 46		Photocatalytic Deodorizing Filter	—
	Operation Limit for Heating (°CWB)	-15 ~ 15.5		Air Purifying Filter with Photocatalytic Deodorizing Function	—
	PAM Control	○		Titanium Apatite Photocatalytic Air-Purifying Filter	—
Compressor	Oval Scroll Compressor	—		Longlife Filter (Option)	—
	Swing Compressor	○		Mold Proof Air Filter	—
	Rotary Compressor	—		Wipe-clean Flat Panel	—
	Reluctance DC Motor	○		Washable Grille	—
Comfortable Airflow	Power-Airflow Flap	—		Filter Cleaning Indicator	—
	Power-Airflow Dual Flaps	—		Mold Proof Operation	—
	Power-Airflow Diffuser	—		Heating Dry Operation	—
	Wide-Angle Louvers	—		Good-Sleep Cooling Operation	—
	Vertical Auto-Swing (Up and Down)	—	Timer	24-Hour On/Off Timer	—
	Horizontal Auto-Swing (Right and Left)	—		72-Hour On/Off Timer	—
	3-D Airflow	—		Night Set Mode	—
3-Step Airflow (H/P Only)	—	Auto-Restart (after Power Failure)		—	
Comfort Control	Auto Fan Speed	—	Worry Free "Reliability & Durability"	Self-Diagnosis (Digital, LED) Display	○
	Indoor Unit Silent Operation	—		Wiring-Error Check	○
	Night Quiet Mode (Automatic)	—		Anticorrosion Treatment of Outdoor Heat Exchanger	○
	Outdoor Unit Silent Operation (Manual)	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—
	Intelligent Eye	○		Flexible Voltage Correspondence	—
	Quick Warming Function	—		High Ceiling Application	—
	Hot-Start Function	○		Chargeless	30m
	Automatic Defrosting	—		Either Side Drain (Right or Left)	—
Operation	Automatic Operation	○	Power-Selection	—	
	Programme Dry Function	—	Remote Control	5-Rooms Centralized Controller (Option)	—
	Fan Only	—		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	—
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—		Remote Control Adapter (Normal Open Contact) (Option)	—
	Inverter Powerful Operation	—	DIII-NET Compatible (Adapter) (Option)	—	
	Priority-Room Setting	—	remote control	Wireless	—
	Cooling / Heating Mode Lock	○		Wired	—
	Home Leave Operation	○			
	ECONO Mode	—			
	Indoor Unit On/Off Switch	—			
	Signal Reception Indicator	—			
	Temperature Display	—			
Another Room Operation	—				

**Note:** ○ : Holding Functions  
— : No Functions



Category	Functions	ATXG25/35EV1B	ATXG50EV1B	ATXS20/25/35/50E2V1B	Category	Functions	ATXG25/35EV1B	ATXG50EV1B	ATXS20/25/35/50E2V1B	
Basic Function	Inverter (with Inverter Power Control)	○	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	—	
	Operation Limit for Cooling (°CDB)	—	—	—		Photocatalytic Deodorizing Filter	—	—	—	
	Operation Limit for Heating (°CWB)	—	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	—	
PAM Control	—	—	—	Titanium Apatite Photocatalytic Air-Purifying Filter		○	○	○		
Compressor	Oval Scroll Compressor	—	—	—		Longlife Filter (Option)	—	—	—	
	Swing Compressor	—	—	—		Mold Proof Air Filter	○	○	○	
	Rotary Compressor	—	—	—		Wipe-clean Flat Panel	○	○	○	
	Reluctance DC Motor	—	—	—		Washable Grille	—	—	—	
Comfortable Airflow	Power-Airflow Flap	○	○	—		Filter Cleaning Indicator	—	—	—	
	Power-Airflow Dual Flaps	—	—	○		Mold Proof Operation	—	—	—	
	Power-Airflow Diffuser	—	—	—	Heating Dry Operation	—	—	—		
	Wide-Angle Louvers	○	○	○	Good-Sleep Cooling Operation	—	—	—		
	Vertical Auto-Swing (Up and Down)	○	○	○	Timer	24-Hour On/Off Timer	○	○	○	
	Horizontal Auto-Swing (Right and Left)	○	○	—		72-Hour On/Off Timer	—	—	—	
	3-D Airflow	○	○	—		Night Set Mode	○	○	○	
	Comfort Airflow Mode	○	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	○	
3-Step Airflow (H/P Only)	—	—	—	Self-Diagnosis (Digital, LED) Display		○	○	○		
Comfort Control	Auto Fan Speed	○	○	○		Wiring Error Check	—	—	—	
	Indoor Unit Silent Operation	○	○	○		Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	—	
	Night Quiet Mode (Automatic)	—	—	—		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	—	○
	Outdoor Unit Silent Operation (Manual)	—	—	—			Flexible Voltage Correspondence	—	—	—
	Intelligent Eye	○	○	○			Chargeless	—	—	—
	Quick Warming Function	—	—	—	Operation	Either Side Drain (Right or Left)	○	○	○	
	Hot-Start Function	○	○	○		Power Selection	—	—	—	
Automatic Defrosting	—	—	—	Lifestyle Convenience		5-Rooms Centralized Controller (Option)	○	○	○	
Operation	Automatic Operation	○	○		○	Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	○	
	Programme Dry Function	○	○		○	Remote Control Adapter (Normal Open Contact) (Option)	○	○	○	
	Fan Only	○	○		○	DIII-NET Compatible (Adapter) (Option)	○	○	○	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—		—	Remote Control	Wireless	○	○	○
	Inverter Powerful Operation	○	○		○		Wired	—	—	—
	Priority-Room Setting	—	—		—		remote control			
	Cooling / Heating Mode Lock	—	—		—					
	Home Leave Operation	—	—		—					
	ECONO Mode	—	—	○						
	Indoor Unit On/Off Switch	○	○	○						
	Signal Reception Indicator	○	○	○						
Temperature Display	—	—	—							
Another Room Operation	—	—	—							

**Note:** ○ : Holding Functions  
 — : No Functions

Category	Functions	ATXS20/25/35DAVMB	ATX50EV1B	Category	Functions	ATXS20/25/35DAVMB	ATX50EV1B	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air Purifying Filter with Photocatalytic Deodorizing Function	○	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Deodorizing Function	—	○	
Compressor	Oval Scroll Compressor	—	—		Longlife Filter (Option)	—	—	
	Swing Compressor	—	—		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	—	—		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Mold Proof Operation	—	—	
	Power-Airflow Diffuser	—	—		Heating Dry Operation	—	—	
	Wide-Angle Louvers	○	○		Good-Sleep Cooling Operation	—	—	
	Vertical Auto-Swing (Up and Down)	○	○		Timer	24-Hour On/Off Timer	○	○
	Horizontal Auto-Swing (Right and Left)	—	○			72-Hour On/Off Timer	—	—
	3-D Airflow	—	○	Night Set Mode		○	○	
	Comfort Airflow Mode	—	—	Auto-Restart (after Power Failure)		○	○	
Comfort Control	3-Step Airflow (H/P Only)	—	—	Worry Free "Reliability & Durability"	Self-Diagnosis (Digital, LED) Display	○	○	
	Auto Fan Speed	○	○		Wiring Error Check	—	—	
	Indoor Unit Silent Operation	○	○		Anticorrosion Treatment of Outdoor Heat Exchanger	—	—	
	Night Quiet Mode (Automatic)	—	—		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○
	Outdoor Unit Silent Operation (Manual)	—	—	Flexible Voltage Correspondence		—	—	
	Intelligent Eye	○	○	Chargeless		—	—	
	Quick Warming Function	—	—	Either Side Drain (Right or Left)		○	○	
	Operation	Hot-Start Function	○	○	Power Selection	—	—	
Automatic Defrosting		—	—	Remote Control	5-Rooms Centralized Controller (Option)	○	○	
Automatic Operation		○	○		Remote Control Adapter (Normal Open-Pulse Contact) (Option)	○	○	
Lifestyle Convenience	Programme Dry Function	○	○	remote control	Remote Control Adapter (Normal Open Contact) (Option)	○	○	
	Fan Only	○	○		DIII-NET Compatible (Adapter) (Option)	○	○	
	New Powerful Operation (Non-Inverter)	—	—	Wireless	○	○		
	Inverter Powerful Operation	○	○	Wired	—	—		
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	ECONO Mode	—	—					
	Indoor Unit On/Off Switch	○	○					
Signal Reception Indicator	○	○						
Temperature Display	—	—						
Another Room Operation	—	—						

**Note:** ○ : Holding Functions  
 — : No Functions

Category	Functions	2AMX52E2(3)V1B 3AMX52E2(3)V1B	Category	Functions	2AMX52E2(3)V1B 3AMX52E2(3)V1B	
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter with Bacteriostatic & Virustatic Functions	—	
	Operation Limit for Cooling (°CDB)	-10 ~ 46		Photocatalytic Deodorizing Filter	—	
	Operation Limit for Heating (°CWB)	-15 ~ 15.5		Air Purifying Filter with Photocatalytic Deodorizing Function	—	
	PAM Control	○		Titanium Apatite Photocatalytic Deodorizing Function	—	
Compressor	Oval Scroll Compressor	—		Longlife Filter (Option)	—	
	Swing Compressor	○		Mould Proof Air Filter	—	
	Rotary Compressor	—		Wipe-clean Flat Panel	—	
	Reluctance DC Motor	○		Washable Grille	—	
Comfortable Airflow	Power-Airflow Flap	—		Filter Cleaning Indicator	—	
	Power-Airflow Dual Flaps	—		Mold Proof Operation	—	
	Power-Airflow Diffuser	—		Heating Dry Operation	—	
	Wide-Angle Louvers	—		Good-Sleep Cooling Operation	—	
	Vertical Auto-Swing (Up and Down)	—		Timer	24-Hour On/Off Timer	—
	Horizontal Auto-Swing (Right and Left)	—			72-Hour On/Off Timer	—
	3-D Airflow	—			Night Set Mode	—
	Comfort Airflow Mode	—		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	—
3-Step Airflow (H/P Only)	—	Self-Diagnosis (Digital, LED) Display	○			
Comfort Control	Auto Fan Speed	—	Wiring-Error Check		○	
	Indoor Unit Silent Operation	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○	
	Night Quiet Mode (Automatic)	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	
	Outdoor Unit Silent Operation (Manual)	○		Flexible Voltage Correspondence	—	
	Intelligent Eye	—		Chargeless	30m	
	Quick Warming Function	○		Either Side Drain (Right or Left)	—	
	Hot-Start Function	—		Power-Selection	—	
Automatic Defrosting	○	Remote Control		5-Rooms Centralized Controller (Option)	—	
Operation	Automatic Operation		—	Remote Control Adapter (Normal Open-Pulse Contact) (Option)	—	
	Programme Dry Function		—	Remote Control Adapter (Normal Open Contact) (Option)	—	
	Fan Only		—	DIII-NET Compatible (Adapter) (Option)	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	remote control	Wireless	—	
	Inverter Powerful Operation	—		Wired	—	
	Priority-Room Setting	○				
	Cooling / Heating Mode Lock	○				
	Home Leave Operation	—				
	ECONO Mode	—				
	Indoor Unit On/Off Switch	—				
	Signal Reception Indicator	—				
Temperature Display	—					

**Note:** ○ : Holding Functions  
— : No Functions

# Part 2

# Specifications

1. Specifications .....	16
1.1 Indoor Units - Cooling Only .....	16
1.2 Outdoor Units - Cooling Only .....	24
1.3 Indoor Units - Heat Pump.....	25
1.4 Outdoor Units - Heat Pump.....	38

# 1. Specifications

## 1.1 Indoor Units - Cooling Only

### Wall Mounted Type

50Hz 230V

Model			FTKS20D3VMW	FTKS20D3VML
Rated Capacity			2.0kW Class	2.0kW Class
Front Panel Color			White	Silver Line
Air Flow Rates	ml/min (cfm)	H	8.7 (307)	8.7 (307)
		M	6.7 (237)	6.7 (237)
		L	4.7 (166)	4.7 (166)
		SL	3.9 (138)	3.9 (138)
Fan	Type	Cross Flow Fan		Cross Flow Fan
	Motor Output	W	40	40
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.16	0.16
Power Consumption (Rated)		W	35	35
Power Factor		%	95.1	95.1
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	283×800×195	283×800×195
Packaged Dimensions (H×W×D)		mm	265×855×340	265×855×340
Weight		kg	9	9
Gross Weight		kg	12	12
Operation Sound	H/L/SL	dBA	38/25/22	38/25/22
Sound Power	H	dBA	56	56
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D051079	3D051080

Model			FTKS25D3VMW	FTKS25D3VML
Rated Capacity			2.5kW Class	2.5kW Class
Front Panel Color			White	Silver Line
Air Flow Rates	ml/min (cfm)	H	8.7 (307)	8.7 (307)
		M	6.7 (237)	6.7 (237)
		L	4.7 (166)	4.7 (166)
		SL	3.9 (138)	3.9 (138)
Fan	Type	Cross Flow Fan		Cross Flow Fan
	Motor Output	W	40	40
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.16	0.16
Power Consumption (Rated)		W	35	35
Power Factor		%	95.1	95.1
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	283×800×195	283×800×195
Packaged Dimensions (H×W×D)		mm	265×855×340	265×855×340
Weight		kg	9	9
Gross Weight		kg	12	12
Operation Sound	H/L/SL	dBA	38/25/22	38/25/22
Sound Power	H	dBA	56	56
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D051081	3D051082

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

50Hz 230V

Model			FTKS35D3VMW	FTKS35D3VML
Rated Capacity			3.5kW Class	3.5kW Class
Front Panel Color			White	Silver Line
Air Flow Rates	ml/min (cfm)	H	8.9 (314)	8.9 (314)
		M	6.9 (244)	6.9 (244)
		L	4.8 (169)	4.8 (169)
		SL	4.0 (141)	4.0 (141)
Fan	Type	Cross Flow Fan		Cross Flow Fan
	Motor Output	W	40	40
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.18	0.18
Power Consumption (Rated)		W	40	40
Power Factor		%	96.6	96.6
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	283×800×195	283×800×195
Packaged Dimensions (H×W×D)		mm	265×855×340	265×855×340
Weight		kg	9	9
Gross Weight		kg	12	12
Operation Sound	H/L/SL	dBA	39/26/23	39/26/23
Sound Power	H	dBA	57	57
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D051083	3D051084

Model			FTKS50D2V1W	FTKS50D2V1L
Rated Capacity			5.0kW Class	5.0kW Class
Front Panel Color			White	Silver Line
Air Flow Rates	ml/min (cfm)	H	11.4 (402)	11.4 (402)
		M	9.3 (328)	9.3 (328)
		L	7.1 (251)	7.1 (251)
		SL	6.2 (219)	6.2 (219)
Fan	Type	Cross Flow Fan		Cross Flow Fan
	Motor Output	W	40	40
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.21	0.21
Power Consumption (Rated)		W	48	48
Power Factor		%	99.4	99.4
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	283×800×195	283×800×195
Packaged Dimensions (H×W×D)		mm	265×855×340	265×855×340
Weight		kg	9	9
Gross Weight		kg	12	12
Operation Sound	H/M/L/SL	dBA	46/41/35/32	46/41/35/32
Sound Power	H	dBA	62	62
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ12.7	φ12.7
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D051812	3D051813

## Conversion Formulae

$\text{kcal/h} = \text{kW} \times 860$   
 $\text{Btu/h} = \text{kW} \times 3414$   
 $\text{cfm} = \text{ml/min} \times 35.3$

50Hz 230V

Model			FTKS20CAVMB	FTKS25CAVMB
Rated Capacity			2.0kW Class	2.5kW Class
Front Panel Color			White	White
Air Flow Rates	ml/min (cfm)	H	7.7 (272)	7.7 (272)
		M	5.9 (208)	5.9 (208)
		L	4.2 (148)	4.2 (148)
		SL	3.6 (127)	3.6 (127)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	18	18
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.18	0.18
Power Consumption (Rated)		W	40	40
Power Factor		%	96.6	96.6
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	273×784×195	273×784×195
Packaged Dimensions (H×W×D)		mm	258×834×325	258×834×325
Weight		kg	7.5	7.5
Gross Weight		kg	11	11
Operation Sound	H/M/L/SL	dBA	38/32/25/22	38/32/25/22
Sound Power	H	dBA	56	56
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D050947	3D050949

Model			FTKS35CAVMB	FTKS50EV1B
Rated Capacity			3.5kW Class	5.0kW Class
Front Panel Color			White	White
Air Flow Rates	ml/min (cfm)	H	7.7 (272)	14.7 (519)
		M	6.0 (212)	12.4 (438)
		L	4.4 (155)	10.3 (364)
		SL	3.8 (134)	9.5 (335)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	18	43
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.18	0.15
Power Consumption (Rated)		W	40	34
Power Factor		%	96.6	98.6
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	273×784×195	290×1,050×238
Packaged Dimensions (H×W×D)		mm	258×834×325	337×1,147×366
Weight		kg	7.5	12
Gross Weight		kg	11	17
Operation Sound	H/M/L/SL	dBA	39/33/26/23	43/39/34/31
Sound Power	H	dBA	57	59
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ12.7
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D050951	3D051643

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=m <sup>3</sup> /min×35.3

## Duct Connected Type

50Hz 230V

Model			FDKS25CAVMB	FDKS35CAVMB
Rated Capacity			2.5kW Class	3.5kW Class
Front Panel Color			—	—
Air Flow Rates	ml/min (cfm)	H	9.5 (335)	10.0 (353)
		M	8.8 (311)	9.3 (328)
		L	8.0 (282)	8.5 (300)
		SL	6.7 (237)	7.0 (247)
Fan	Type	Sirocco Fan		Sirocco Fan
	Motor Output	W	62	62
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.47	0.47
Power Consumption (Rated)		W	100	100
Power Factor		%	92.5	92.5
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	200×900×620	200×900×620
Packaged Dimensions (H×W×D)		mm	266×1,106×751	266×1,106×751
Weight		kg	25	25
Gross Weight		kg	31	31
Operation Sound	H/M/L/SL	dBA	35/33/31/29	35/33/31/29
External Static Pressure		Pa	40	40
Moisture Removal		L/h	1.2	1.9
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	VP20 (O.D. φ26 / I.D. φ20)	VP20 (O.D. φ26 / I.D. φ20)
Drawing No.			3D048947C	3D048948C

Model			FDKS50CVMB
Rated Capacity			5.0kW Class
Front Panel Color			—
Air Flow Rates	ml/min (cfm)	H	12.0 (424)
		M	11.0 (388)
		L	10.0 (353)
		SL	8.4 (297)
Fan	Type	Sirocco Fan	
	Motor Output	W	130
	Speed	Steps	5 Steps, Silent, Auto
Air Filter			Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.64
Power Consumption (Rated)		W	140
Power Factor		%	95.1
Temperature Control			Microcomputer Control
Dimensions (H×W×D)		mm	200×900×620
Packaged Dimensions (H×W×D)		mm	266×1,106×751
Weight		kg	27
Gross Weight		kg	34
Operation Sound	H/M/L/SL	dBA	37/35/33/31
External Static Pressure		Pa	40
Moisture Removal		L/h	2.9
Heat Insulation			Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ12.7
	Drain	mm	VP20 (O.D. φ26 / I.D. φ20)
Drawing No.			3D052134A

**Note:** The operating sound is based on the rear side suction inlet and the external static pressure 40 Pa. Operating sound for under side suction inlet: [operating sound for rear side suction inlet]+5 dB. However, when installation to which the external static pressure becomes low is carried out, 5 dB or more may go up.

## Conversion Formulae

kcal/h=kW×860  
Btu/h=kW×3414  
cfm=ml/min×35.3



50Hz 230V

Model			FDKS25EAVMB	FDKS35EAVMB
Rated Capacity			2.5kW Class	3.5kW Class
Front Panel Color			—	—
Air Flow Rates	ml/min (cfm)	H	8.7 (307)	8.7 (307)
		M	8.0 (282)	8.0 (282)
		L	7.3 (258)	7.3 (258)
		SL	6.2 (219)	6.2 (219)
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	62	62
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.48	0.48
Power Consumption (Rated)		W	71	71
Power Factor		%	64.3	64.3
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	200×700×620	200×700×620
Packaged Dimensions (H×W×D)		mm	274×906×751	274×906×751
Weight		kg	21	21
Gross Weight		kg	29	29
Operation Sound	H/M/L/SL	dBA	35/33/31/29	35/33/31/29
External Static Pressure		Pa	30	30
Moisture Removal		L/h	1.2	1.9
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	VP20 (O.D. φ26 / I.D. φ20)	VP20 (O.D. φ26 / I.D. φ20)
Drawing No.			3D051882A	3D051884A

**Note:** The operating sound is based on the rear side suction inlet and the external static pressure 30 Pa. Operating sound for under side suction inlet: [operating sound for rear side suction inlet]+6 dB. However, when installation to which the external static pressure becomes low is carried out, 6 dB or more may go up.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

## Floor / Ceiling Suspended Dual Type

50Hz 230V

Model			FLKS25BAVMB	FLKS35BAVMB
Rated Capacity			2.5kW Class	3.5kW Class
Front Panel Color			Almond White	Almond White
Air Flow Rates	ml/min (cfm)	H	7.6 (268)	8.6 (304)
		M	6.8 (240)	7.6 (268)
		L	6.0 (212)	6.6 (233)
		SL	5.2 (184)	5.6 (198)
Fan	Type	Sirocco Fan		Sirocco Fan
	Motor Output	W	34	34
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.34	0.36
Power Consumption (Rated)		W	74	78
Power Factor		%	94.6	94.2
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	490×1,050×200	490×1,050×200
Packaged Dimensions (H×W×D)		mm	566×1,100×280	566×1,100×280
Weight		kg	16	16
Gross Weight		kg	22	22
Operation Sound	H/M/L/SL	dBA	37/34/31/28	38/35/32/29
Sound Power	H	dBA	53	54
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D050862	3D050864

Model			FLKS50BAVMB
Rated Capacity			5.0W Class
Front Panel Color			Almond White
Air Flow Rates	ml/min (cfm)	H	11.4 (402)
		M	10.0 (353)
		L	8.5 (300)
		SL	7.5 (265)
Fan	Type	Sirocco Fan	
	Motor Output	W	34
	Speed	Steps	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.45
Power Consumption (Rated)		W	96
Power Factor		%	92.8
Temperature Control			Microcomputer Control
Dimensions (H×W×D)		mm	490×1,050×200
Packaged Dimensions (H×W×D)		mm	280×1,100×566
Weight		kg	17
Gross Weight		kg	24
Operation Sound	H/M/L/SL	dBA	47/43/39/36
Sound Power	H	dBA	63
Heat Insulation			Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ12.7
	Drain	mm	φ18.0
Drawing No.			3D050896

## Conversion Formulae

kcal/h=kW×860  
 Btu/h=kW×3414  
 cfm=ml/min×35.3

Floor Standing Type

50Hz 230V

Model			FVKS25BAVMB	FVKS35BAVMB
Rated Capacity			2.5kW Class	3.5kW Class
Front Panel Color			Almond White	Almond White
Air Flow Rates	ml/min (cfm)	H	8.1 (286)	8.3 (293)
		M	6.2 (219)	6.3 (222)
		L	4.3 (152)	4.3 (152)
		SL	3.4 (120)	3.4 (120)
Fan	Type	Cross Flow Fan		Cross Flow Fan
	Motor Output	W	14+14	14+14
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Upward	Right, Left, Horizontal, Upward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.14	0.14
Power Consumption (Rated)		W	32	32
Power Factor		%	99.4	99.4
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	600×650×195	600×650×195
Packaged Dimensions (H×W×D)		mm	714×770×294	714×770×294
Weight		kg	13	13
Gross Weight		kg	19	19
Operation Sound	H/M/L/SL	dBA	38/32/26/23	39/33/27/24
Sound Power	H	dBA	54	55
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ18.0	φ18.0
Drawing No.			3D050870	3D050872

Model			FVKS50BAVMB
Rated Capacity			5.0kW Class
Front Panel Color			Almond White
Air Flow Rates	ml/min (cfm)	H	10.8 (381)
		M	9.2 (325)
		L	7.7 (272)
		SL	6.7 (237)
Fan	Type	Cross Flow Fan	
	Motor Output	W	14+14
	Speed	Steps	5 Steps, Silent, Auto
Air Direction Control			Right, Left, Horizontal, Upward
Air Filter			Removable-Washable-Mildew Proof
Running Current (Rated)		A	0.26
Power Consumption (Rated)		W	55
Power Factor		%	92.0
Temperature Control			Microcomputer Control
Dimensions (H×W×D)		mm	600×650×195
Packaged Dimensions (H×W×D)		mm	714×770×294
Weight		kg	13
Gross Weight		kg	19
Operation Sound	H/M/L/SL	dBA	44/40/36/33
Sound Power	H	dBA	56
Heat Insulation			Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ12.7
	Drain	mm	φ20.0
Drawing No.			3D050894

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

## Ceiling Suspended Type

50Hz 230V

Model			FHQ35BVV1B	FHQ50BVV1B
Rated Capacity			3.5kW Class	5.0kW Class
Decoration Panel	Color		White	White
	Dimensions (H×W×D)		—	—
Air Flow Rates	ml/min (cfm)	H	13.0 (458)	13.0 (458)
		M	—	—
		L	10.0 (353)	10.0 (353)
		SL	—	—
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	62	62
	Speed	Steps	2 Steps	2 Steps
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable-Washable-Mildew Proof	Removable-Washable-Mildew Proof
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H×W×D)		mm	195×960×680	195×960×680
Packaged Dimensions (H×W×D)		mm	279×1,046×818	279×1,046×818
Weight		kg	24	25
Gross Weight		kg	31	32
Operation Sound	H/L	dBA	37/32	38/33
Sound Power	H/L	dBA	53/48	54/49
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4 (Flare)	φ 6.4 (Flare)
	Gas	mm	φ 9.5 (Flare)	φ 12.7 (Flare)
	Drain	mm	VP20 (O.D.φ 26 / I.D.φ 20)	VP20 (O.D.φ 26 / I.D.φ 20)
Drawing No.			3D037992E	3D037992E

## Conversion Formulae

$\text{kcal/h} = \text{kW} \times 860$   
 $\text{Btu/h} = \text{kW} \times 3414$   
 $\text{cfm} = \text{ml/min} \times 35.3$

## 1.2 Outdoor Units - Cooling Only

50Hz 230V

Model		3MKS50E2(3)V1B		4MKS58E2(3)V1B	
Cooling Capacity	kW	—		—	
Power Consumption	W	—		—	
Running Current	A	—		—	
Casing Color		Ivory White		Ivory White	
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model	2YC36BXD		2YC36BXD	
	Motor Output	W	1,100	1,100	
Refrigerant Oil	Model	FVC50K		FVC50K	
	Charge	L	0.65	0.65	
Refrigerant	Type	R-410A		R-410A	
	Charge	kg	2.0	2.0	
Air Flow Rates	ml/min	H	45	45	
		L	45	45	
	cfm	H	1,589	1,589	
		L	1,589	1,589	
Fan	Type	Propeller		Propeller	
	Motor Output	W	53	53	
	Running Current	A	H: 0.33 / L: 0.33	H: 0.33 / L: 0.33	
	Power Consumption	W	H: 43 / L: 43	H: 43 / L: 43	
Starting Current	A	5.3		6.7	
Dimensions (H×W×D)	mm	735×936×300		735×936×300	
Packaged Dimensions (H×W×D)	mm	797×992×390		797×992×390	
Weight	kg	49		49	
Gross Weight	kg	56		56	
Operation Sound	dBA	46		46	
Sound Power	dBA	59		59	
Piping Connection	Liquid	mm	φ 6.4×3	φ 6.4×4	
	Gas	mm	φ 9.5×3	φ 9.5×2, φ 12.7×2	
	Drain	mm	φ 18.0	φ 18.0	
Heat Insulation		Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
No. of Wiring Connection		3 for Power Supply, 4 for Interunit Wiring		3 for Power Supply, 4 for Interunit Wiring	
Max. Interunit Piping Length	m	50 (for Total of Each Room)		50 (for Total of Each Room)	
	m	25 (for One Room)		25 (for One Room)	
Amount of Additional Charge	g/m	Chargeless		Chargeless	
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)	
	m	15 (between Indoor Units)		15 (between Indoor Units)	
Drawing No.		3D052268#1		3D052267#1	

**Note:** The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB	7.5m

Conversion Formulae
kcal/h=kW×860 Btu/h=kW×3414 cfm=ml/min×35.3

# 1.3 Indoor Units - Heat Pump

## Wall Mounted Type

50Hz 230V

Model			FTXG25EV1BW		FTXG25EV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		2.5kW Class	
Front Panel Color			Mat Crystal White		Mat Crystal Silver	
Air Flow Rates	ml/min (cfm)	H	7.7 (271)	9.0 (317)	7.7 (271)	9.0 (317)
		M	6.1 (215)	7.9 (278)	6.1 (215)	7.9 (278)
		L	4.7 (165)	6.7 (236)	4.7 (165)	6.7 (236)
		SL	3.8 (134)	5.4 (190)	3.8 (134)	5.4 (190)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40	40	40	
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto	5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)			A	0.15-0.14-0.13	0.15-0.14-0.13	0.15-0.14-0.13
Power Consumption (Rated)			W	30-30-30	30-30-30	30-30-30
Power Factor			%	90.9-93.2-96.2	90.9-93.2-96.2	90.9-93.2-96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)			mm	275×840×150	275×840×150	275×840×150
Packaged Dimensions (H×W×D)			mm	222×894×345	222×894×345	222×894×345
Weight			kg	9	9	9
Gross Weight			kg	13	13	13
Operation Sound	H/ML/SL	dBA	38/32/25/22	38/33/28/25	38/32/25/22	38/33/28/25
Sound Power	H	dBA	56	56	56	56
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051101		3D051102	

Model			FTXG35EV1BW		FTXG35EV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5kW Class		5.0kW Class	
Front Panel Color			Mat Crystal White		Mat Crystal Silver	
Air Flow Rates	ml/min (cfm)	H	8.1 (285)	9.6 (338)	8.1 (285)	9.6 (338)
		M	6.5 (229)	8.2 (289)	6.5 (229)	8.2 (289)
		L	4.9 (173)	6.7 (236)	4.9 (173)	6.7 (236)
		SL	4.1 (144)	5.9 (208)	4.1 (144)	5.9 (208)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40	40	40	
	Speed	Steps	5 Steps, Silent, Auto	5 Steps, Silent, Auto	5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)			A	0.15-0.14-0.13	0.15-0.14-0.13	0.15-0.14-0.13
Power Consumption (Rated)			W	30-30-30	30-30-30	30-30-30
Power Factor			%	90.9-93.2-96.2	90.9-93.2-96.2	90.9-93.2-96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)			mm	275×840×150	275×840×150	275×840×150
Packaged Dimensions (H×W×D)			mm	222×894×345	222×894×345	222×894×345
Weight			kg	9	9	9
Gross Weight			kg	13	13	13
Operation Sound	H/ML/SL	dBA	39/33/26/23	39/34/29/26	39/33/26/23	39/34/29/26
Sound Power	H	dBA	57	57	57	57
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ12.7	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051103		3D051104	

## Conversion Formulae

$\text{kcal/h} = \text{kW} \times 860$   
 $\text{Btu/h} = \text{kW} \times 3414$   
 $\text{cfm} = \text{ml/min} \times 35.3$

50Hz 230V

Model			CTXG50EV1BW		CTXG50EV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0kW Class		5.0kW Class	
Front Panel Color			Mat Crystal White		Mat Crystal Silver	
Air Flow Rates	ml/min (cfm)	H	11.3 (398)	12.6 (444)	11.3 (398)	12.6 (444)
		M	9.1 (320)	10.6 (373)	9.1 (320)	10.6 (373)
		L	7.1 (250)	8.7 (306)	7.1 (250)	8.7 (306)
		SL	6.7 (236)	7.7 (271)	6.7 (236)	7.7 (271)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.15-0.14-0.13	0.15-0.14-0.13	0.15-0.14-0.13	0.15-0.14-0.13
Power Consumption (Rated)		W	30	30	30	30
Power Factor		%	90.9-93.2-96.2	90.9-93.2-96.2	90.9-93.2-96.2	90.9-93.2-96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	275×840×150		275×840×150	
Packaged Dimensions (H×W×D)		mm	222×894×345		222×894×345	
Weight		kg	9		9	
Gross Weight		kg	13		13	
Operation Sound	H/M/L/SL	dBA	47/41/35/32	47/41/35/32	47/41/35/32	47/41/35/32
Sound Power	H	dBA	64	64	64	64
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ12.7		φ12.7	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051105		3D051106	

Model			FTXS20D3VMW		FTXS20D3VML	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.0kW Class		2.0kW Class	
Front Panel Color			White		Silver Line	
Air Flow Rates	ml/min (cfm)	H	8.7 (307)	9.4 (332)	8.7 (307)	9.4 (332)
		M	6.7 (237)	7.6 (268)	6.7 (237)	7.6 (268)
		L	4.7 (166)	5.8 (205)	4.7 (166)	5.8 (205)
		SL	3.9 (138)	5.0 (177)	3.9 (138)	5.0 (177)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.16	0.16	0.16	0.16
Power Consumption (Rated)		W	35	35	35	35
Power Factor		%	95.1	95.1	95.1	95.1
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	283×800×195		283×800×195	
Packaged Dimensions (H×W×D)		mm	265×855×340		265×855×340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/L/SL	dBA	38/25/22	38/28/25	38/25/22	38/28/25
Sound Power	H	dBA	56	56	56	56
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051085		3D051086	

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

Model			FTXS50D2V1W		FTXS50D2V1L	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0kW Class		5.0kW Class	
Front Panel Color			White		White	
Air Flow Rates	ml/min (cfm)	H	11.4 (402)	11.4 (402)	11.4 (402)	11.4 (402)
		M	9.3 (328)	9.4 (332)	9.3 (328)	9.4 (332)
		L	7.1 (251)	7.4 (261)	7.1 (251)	7.4 (261)
		SL	6.2 (219)	6.3 (222)	6.2 (219)	6.3 (222)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.21	0.21	0.21	0.21
Power Consumption (Rated)		W	48	48	48	48
Power Factor		%	99.4	99.4	99.4	99.4
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	283×800×195		283×800×195	
Packaged Dimensions (H×W×D)		mm	265×855×340		265×855×340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/M/L/SL	dBA	46/41/35/32	46/40/34/31	46/41/35/32	46/40/34/31
Sound Power	H	dBA	62	62	62	62
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ12.7		φ15.9	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051814		3D051815	

Model			FTXS25D3VMW		FTXS25D3VML	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		2.5kW Class	
Front Panel Color			White		Silver Line	
Air Flow Rates	ml/min (cfm)	H	8.7 (307)	9.4 (332)	8.7 (307)	9.4 (332)
		M	6.7 (237)	7.6 (268)	6.7 (237)	7.6 (268)
		L	4.7 (166)	5.8 (205)	4.7 (166)	5.8 (205)
		SL	3.9 (138)	5.0 (177)	3.9 (138)	5.0 (177)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.16	0.16	0.16	0.16
Power Consumption (Rated)		W	35	35	35	35
Power Factor		%	95.1	95.1	95.1	95.1
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	283×800×195		283×800×195	
Packaged Dimensions (H×W×D)		mm	265×855×340		265×855×340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/L/SL	dBA	38/25/22	38/28/25	38/25/22	38/28/25
Sound Power	H	dBA	56	56	56	56
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051087		3D051088	

## Conversion Formulae

$\text{kcal/h} = \text{kW} \times 860$   
 $\text{Btu/h} = \text{kW} \times 3414$   
 $\text{cfm} = \text{ml/min} \times 35.3$



50Hz 230V

Model			FTXS35D3VMW		FTXS35D3VML	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5kW Class		3.5kW Class	
Front Panel Color			White		Silver Line	
Air Flow Rates	ml/min (cfm)	H	8.9 (314)	9.7 (342)	8.9 (314)	9.7 (342)
		M	6.9 (244)	7.9 (279)	6.9 (244)	7.9 (279)
		L	4.8 (169)	6.0 (212)	4.8 (169)	6.0 (212)
		SL	4.0 (141)	5.2 (184)	4.0 (141)	5.2 (184)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.18	0.18	0.18	0.18
Power Consumption (Rated)		W	40	40	40	40
Power Factor		%	96.6	96.6	96.6	96.6
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	283×800×195		283×800×195	
Packaged Dimensions (H×W×D)		mm	265×855×340		265×855×340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/L/SL	dBA	39/26/23	39/29/26	39/26/23	39/29/26
Sound Power	H	dBA	57	57	57	57
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051089		3D051090	

Model			FTXS20CAVMB		FTXS25CAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		2.5kW Class	
Front Panel Color			White		White	
Air Flow Rates	ml/min (cfm)	H	7.7 (272)	7.8 (275)	7.7 (272)	7.8 (275)
		M	5.9 (208)	6.5 (230)	5.9 (208)	6.5 (230)
		L	4.2 (148)	5.3 (187)	4.2 (148)	5.3 (187)
		SL	3.6 (127)	4.6 (162)	3.6 (127)	4.6 (162)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	18		18	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.18	0.18	0.18	0.18
Power Consumption (Rated)		W	40	40	40	40
Power Factor		%	96.6	96.6	96.6	96.6
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	273×784×195		273×784×195	
Packaged Dimensions (H×W×D)		mm	258×834×325		258×834×325	
Weight		kg	7.5		7.5	
Gross Weight		kg	11		11	
Operation Sound	H/M/L/SL	dBA	38/32/25/22	38/33/28/25	38/32/25/22	38/33/28/25
Sound Power	H	dBA	56	56	56	56
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D050941		3D050943	

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

50Hz 230V

Model			FTXS35CAVMB		FTXS50EV1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5kW Class		5.0kW Class	
Front Panel Color			White			
Air Flow Rates	ml/min (cfm)	H	7.7 (272)	8.1 (286)	14.7 (519)	16.1 (569)
		M	6.0 (212)	6.7 (237)	12.4 (438)	13.9 (491)
		L	4.4 (155)	5.3 (187)	10.3 (364)	11.5 (406)
		SL	3.8 (134)	4.6 (162)	9.5 (335)	10.2 (360)
Fan	Type	Cross Flow Fan				
	Motor Output	W	18		43	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.18	0.18	0.15	0.16
Power Consumption (Rated)		W	40	40	34	36
Power Factor		%	96.6	96.6	98.6	97.8
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	273×784×195		290×1,050×238	
Packaged Dimensions (H×W×D)		mm	258×834×325		337×1,147×366	
Weight		kg	7.5		12	
Gross Weight		kg	11		17	
Operation Sound	H/M/L/SL	dBA	39/33/26/23	39/34/29/26	43/39/34/31	42/38/33/30
Sound Power	H	dBA	57	57	59	58
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ12.7	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D050945		3D051645	

## Conversion Formulae

kcal/h=kW×860  
 Btu/h=kW×3414  
 cfm=ml/min×35.3

50Hz 230V

Model			ATXG25EV1B		ATXG35EV1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		3.5kW Class	
Front Panel Color			Mat Crystal White		Mat Crystal White	
Air Flow Rates	ml/min (cfm)	H	7.7 (271)	9.0 (317)	8.1 (285)	9.6 (338)
		M	6.1 (215)	7.9 (278)	6.5 (229)	8.2 (289)
		L	4.7 (165)	6.7 (236)	4.9 (173)	6.7 (236)
		SL	3.8 (134)	5.4 (190)	4.1 (144)	5.9 (208)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.14	0.14	0.14	0.14
Power Consumption (Rated)		W	30	30	30	30
Power Factor		%	93.2	93.2	93.2	93.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	275×840×150		275×840×150	
Packaged Dimensions (H×W×D)		mm	222×894×345		222×894×345	
Weight		kg	9		9	
Gross Weight		kg	13		13	
Operation Sound	H/M/L/SL	dBA	38/32/25/22	38/33/28/25	39/33/26/23	39/34/29/26
Sound Power	H	dBA	56	56	57	57
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051107		3D051108	

Model			ATXG50EV1B		ATXS20E2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0kW Class		2.0kW Class	
Front Panel Color			Mat Crystal White		White	
Air Flow Rates	ml/min (cfm)	H	11.3 (398)	12.6 (444)	8.7 (307)	9.4 (332)
		M	9.1 (320)	10.6 (373)	6.7 (237)	7.6 (268)
		L	7.1 (250)	8.7 (306)	4.7 (166)	5.8 (205)
		SL	6.7 (236)	7.7 (271)	3.9 (138)	5.0 (177)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.14	0.14	0.16	0.16
Power Consumption (Rated)		W	30	30	35	35
Power Factor		%	93.2	93.2	95.1	95.1
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	275×840×150		283×800×195	
Packaged Dimensions (H×W×D)		mm	222×894×345		265×855×340	
Weight		kg	9		9	
Gross Weight		kg	13		12	
Operation Sound	H/M/L/SL	dBA	47/41/35/32	47/41/35/32	38/32/25/22	38/33/28/25
Sound Power	H	dBA	64	64	56	56
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ12.7		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051109		3D051746	

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

50Hz 230V

Model			ATXS25E2V1B		ATXS35E2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		3.5kW Class	
Front Panel Color			White			
Air Flow Rates	ml/min (cfm)	H	8.7 (307)	9.4 (332)	8.9 (314)	9.7 (342)
		M	6.7 (237)	7.6 (268)	6.9 (244)	7.9 (279)
		L	4.7 (166)	5.8 (205)	4.8 (169)	6.0 (212)
		SL	3.9 (138)	5.0 (177)	4.0 (141)	5.2 (184)
Fan	Type	Cross Flow Fan				
	Motor Output	W	40			
	Speed	Steps	5 Steps, Silent, Auto			
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof			
Running Current (Rated)		A	0.16	0.16	0.18	0.18
Power Consumption (Rated)		W	35	35	40	40
Power Factor		%	95.1	95.1	96.6	96.6
Temperature Control			Microcomputer Control			
Dimensions (H×W×D)		mm	283×800×195		283×800×195	
Packaged Dimensions (H×W×D)		mm	265×855×340		265×855×340	
Weight		kg	9			
Gross Weight		kg	12			
Operation Sound	H/M/L/SL	dBA	38/32/25/22	38/33/28/25	39/33/26/23	39/34/29/26
Sound Power	H	dBA	56	56	57	57
Heat Insulation			Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051747		3D051748	

Model			ATXS50E2V1B		ATXS20DAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0kW Class		2.0kW Class	
Front Panel Color			White			
Air Flow Rates	ml/min (cfm)	H	11.4 (402)	11.4 (402)	7.7 (272)	7.8 (275)
		M	9.3 (328)	9.4 (332)	5.9 (208)	6.5 (230)
		L	7.1 (251)	7.4 (261)	4.2 (148)	5.3 (187)
		SL	6.2 (219)	6.3 (222)	3.6 (127)	4.6 (162)
Fan	Type	Cross Flow Fan				
	Motor Output	W	40			
	Speed	Steps	5 Steps, Silent, Auto			
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof			
Running Current (Rated)		A	0.21	0.21	0.18	0.18
Power Consumption (Rated)		W	48	48	40	40
Power Factor		%	99.4	99.4	96.6	96.6
Temperature Control			Microcomputer Control			
Dimensions (H×W×D)		mm	283×800×195		273×784×195	
Packaged Dimensions (H×W×D)		mm	265×855×340		258×834×325	
Weight		kg	9			
Gross Weight		kg	12			
Operation Sound	H/M/L/SL	dBA	46/41/35/32	46/40/34/31	38/32/25/22	38/33/28/25
Sound Power	H	dBA	62	62	56	56
Heat Insulation			Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ12.7		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D051799		3D050953	

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

50Hz 230V

Model			ATXS25DAVMB				ATXS35DAVMB			
			Cooling		Heating		Cooling		Heating	
Rated Capacity			2.5kW Class				3.5kW Class			
Front Panel Color			White				White			
Air Flow Rates	ml/min (cfm)	H	7.7 (272)	7.8 (275)	7.7 (272)	8.1 (286)				
		M	5.9 (208)	6.5 (230)	6.0 (212)	6.7 (237)				
		L	4.2 (148)	5.3 (187)	4.4 (155)	5.3 (187)				
		SL	3.6 (127)	4.6 (162)	3.8 (134)	4.6 (162)				
Fan	Type	Cross Flow Fan				Cross Flow Fan				
	Motor Output	W	18				18			
	Speed	Steps	5 Steps, Silent, Auto				5 Steps, Silent, Auto			
Air Direction Control			Right, Left, Horizontal, Downward				Right, Left, Horizontal, Downward			
Air Filter			Removable-Washable-Mildew Proof				Removable-Washable-Mildew Proof			
Running Current (Rated)	A	0.18	0.18	0.18	0.18					
Power Consumption (Rated)	W	40	40	40	40					
Power Factor	%	96.6	96.6	96.6	96.6					
Temperature Control			Microcomputer Control				Microcomputer Control			
Dimensions (H×W×D)	mm	273×784×195				273×784×195				
Packaged Dimensions (H×W×D)	mm	258×834×325				258×834×325				
Weight	kg	7.5				7.5				
Gross Weight	kg	11				11				
Operation Sound	H/M/L/SL	dBA	38/32/25/22	38/33/28/25	39/33/26/23	39/34/29/26				
Sound Power	H	dBA	56	56	57	57				
Heat Insulation			Both Liquid and Gas Pipes				Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4				φ 6.4			
	Gas	mm	φ 9.5				φ 9.5			
	Drain	mm	φ18.0				φ18.0			
Drawing No.			3D050955				3D050957			

Model			ATX50EV1B			
			Cooling		Heating	
Rated Capacity			5.0kW Class			
Front Panel Color			White			
Air Flow Rates	ml/min (cfm)	H	14.7 (519)	16.1 (569)		
		M	12.4 (438)	13.9 (491)		
		L	10.3 (364)	11.5 (406)		
		SL	9.5 (335)	10.2 (360)		
Fan	Type	Cross Flow Fan				
	Motor Output	W	43			
	Speed	Steps	5 Steps, Silent, Auto			
Air Direction Control			Right, Left, Horizontal, Downward			
Air Filter			Removable-Washable-Mildew Proof			
Running Current (Rated)	A	0.15	0.16			
Power Consumption (Rated)	W	34	36			
Power Factor	%	98.6	97.8			
Temperature Control			Microcomputer Control			
Dimensions (H×W×D)	mm	290×1,050×238				
Packaged Dimensions (H×W×D)	mm	337×1,147×366				
Weight	kg	12				
Gross Weight	kg	17				
Operation Sound	H/M/L/SL	dBA	43/39/34/31	42/38/33/30		
Sound Power	H	dBA	59	58		
Heat Insulation			Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4			
	Gas	mm	φ12.7			
	Drain	mm	φ18.0			
Drawing No.			3D051789			

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

## Duct Connected Type

50Hz 230V

Model			FDXS25CAVMB		FDXS35CAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		3.5kW Class	
Front Panel Color			—		—	
Air Flow Rates	ml/min (cfm)	H	9.5 (335)	9.5 (335)	10.0 (353)	10.0 (353)
		M	8.8 (311)	8.8 (311)	9.3 (328)	9.3 (328)
		L	8.0 (282)	8.0 (282)	8.5 (300)	8.5 (300)
		SL	6.7 (237)	6.7 (237)	7.0 (247)	7.0 (247)
Fan	Type	Sirocco Fan		Sirocco Fan		
	Motor Output	W	62		62	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.47	0.47	0.47	0.47
Power Consumption (Rated)		W	100	100	100	100
Power Factor		%	92.5	92.5	92.5	92.5
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	200×900×620		200×900×620	
Packaged Dimensions (H×W×D)		mm	266×1,106×751		266×1,106×751	
Weight		kg	25		25	
Gross Weight		kg	31		31	
Operation Sound	H/M/L/SL	dBA	35/33/31/29	35/33/31/29	35/33/31/29	35/33/31/29
External Static Pressure		Pa	40		40	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	VP20 (O.D. φ26 / I.D. φ20)		VP20 (O.D. φ26 / I.D. φ20)	
Drawing No.			3D048945C		3D048946C	

Model			FDXS50CVMB	
			Cooling	Heating
Rated Capacity			5.0kW Class	
Front Panel Color			—	
Air Flow Rates	ml/min (cfm)	H	12.0 (424)	12.0 (424)
		M	11.0 (388)	11.0 (388)
		L	10.0 (353)	10.0 (353)
		SL	8.4 (297)	8.4 (297)
Fan	Type	Sirocco Fan		
	Motor Output	W	130	
	Speed	Steps	5 Steps, Silent, Auto	
Air Filter			Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.64	0.64
Power Consumption (Rated)		W	140	140
Power Factor		%	95.1	95.1
Temperature Control			Microcomputer Control	
Dimensions (H×W×D)		mm	200×900×620	
Packaged Dimensions (H×W×D)		mm	266×1,106×751	
Weight		kg	27	
Gross Weight		kg	34	
Operation Sound	H/M/L/SL	dBA	37/35/33/31	37/35/33/31
External Static Pressure		Pa	40	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	VP20 (O.D. φ26 / I.D. φ20)	
Drawing No.			3D052132	

**Note:** The operating sound is based on the rear side suction inlet and the external static pressure 40 Pa.  
 Operating sound for under side suction inlet : [operating sound for rear side suction inlet] +5 dB.  
 However, when installation to which the external static pressure becomes low is carried out, 5 dB or more may go up.

## Conversion Formulae

kcal/h=kW×860  
 Btu/h=kW×3414  
 cfm=ml/min×35.3

50Hz 230V

Model			FDXS25EAVMB		FDXS35EAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		3.5kW Class	
Front Panel Color			—		—	
Air Flow Rates	m <sup>3</sup> /min (cfm)	H	8.7 (307)	8.7 (307)	8.7 (307)	8.7 (307)
		M	8.0 (282)	8.0 (282)	8.0 (282)	8.0 (282)
		L	7.3 (258)	7.3 (258)	7.3 (258)	7.3 (258)
		SL	6.2 (219)	6.2 (219)	6.2 (219)	6.2 (219)
Fan	Type	Sirocco Fan		Sirocco Fan		
	Motor Output	W	62		62	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof	
Running Current (Rated)		A	0.48	0.48	0.48	0.48
Power Consumption (Rated)		W	71	71	71	71
Power Factor		%	64.3	64.3	64.3	64.3
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)		mm	200×700×620		200×700×620	
Packaged Dimensions (H×W×D)		mm	274×906×751		274×906×751	
Weight		kg	21		21	
Gross Weight		kg	29		29	
Operation Sound	H/M/L/SL	dBA	35/33/31/29	35/33/31/29	35/33/31/29	35/33/31/29
External Static Pressure		Pa	30		30	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	VP20 (O.D. φ26 / I.D. φ20)		VP20 (O.D. φ26 / I.D. φ20)	
Drawing No.			3D051881A		3D051883A	

**Note:** The operating sound is based on the rear side suction inlet and the external static pressure 30 Pa. Operating sound for under side suction inlet : [operating sound for rear side suction inlet] +6 dB. However, when installation to which the external static pressure becomes low is carried out, 6 dB or more may go up.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=m <sup>3</sup> /min×35.3

## Floor / Ceiling Suspended Dual Type

50Hz 230V

Model			FLXS25BAVMB		FLXS35BAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		3.5kW Class	
Front Panel Color			Almond White			
Air Flow Rates	ml/min (cfm)	H	7.6 (268)	9.2 (325)	8.6 (304)	9.8 (346)
		M	6.8 (240)	8.3 (293)	7.6 (268)	8.9 (314)
		L	6.0 (212)	7.4 (261)	6.6 (233)	8.0 (282)
		SL	5.2 (184)	6.6 (233)	5.6 (198)	7.2 (254)
Fan	Type	Sirocco Fan				
	Motor Output	W	34			
	Speed	Steps	5 Steps, Silent, Auto			
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable-Washable-Mildew Proof			
Running Current (Rated)		A	0.32	0.34	0.36	0.36
Power Consumption (Rated)		W	70	74	78	78
Power Factor		%	95.1	94.6	94.2	94.2
Temperature Control			Microcomputer Control			
Dimensions (H×W×D)		mm	490×1,050×200			490×1,050×200
Packaged Dimensions (H×W×D)		mm	566×1,100×280			566×1,100×280
Weight		kg	16			
Gross Weight		kg	22			
Operation Sound	H/M/L/SL	dBA	37/34/31/28	37/34/31/29	38/35/32/29	39/36/33/30
Sound Power	H	dBA	53	—	54	—
Heat Insulation			Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4			φ 6.4
	Gas	mm	φ 9.5			φ 9.5
	Drain	mm	φ18.0			φ18.0
Drawing No.			3D050866		3D050868	

Model			FLXS50BAVMB		
			Cooling	Heating	
Rated Capacity			5.0kW Class		
Front Panel Color			Almond White		
Air Flow Rates	ml/min (cfm)	H	11.4 (402)	12.1 (427)	
		M	10.0 (353)	9.8 (346)	
		L	8.5 (300)	7.5 (265)	
		SL	7.5 (265)	6.8 (240)	
Fan	Type	Sirocco Fan			
	Motor Output	W	34		
	Speed	Steps	5 Steps, Silent, Auto		
Air Direction Control			Right, Left, Horizontal, Downward		
Air Filter			Removable-Washable-Mildew Proof		
Running Current (Rated)		A	0.45	0.45	
Power Consumption (Rated)		W	96	96	
Power Factor		%	92.8	92.8	
Temperature Control			Microcomputer Control		
Dimensions (H×W×D)		mm	490×1,050×200		
Packaged Dimensions (H×W×D)		mm	280×1,100×566		
Weight		kg	17		
Gross Weight		kg	24		
Operation Sound	H/M/L/SL	dBA	47/43/39/36	46/41/35/33	
Sound Power	H	dBA	63	32	
Heat Insulation			Both Liquid and Gas Pipes		
Piping Connection	Liquid	mm	φ 6.4		
	Gas	mm	φ12.7		
	Drain	mm	φ18.0		
Drawing No.			3D050897		

## Conversion Formulae

$\text{kcal/h} = \text{kW} \times 860$   
 $\text{Btu/h} = \text{kW} \times 3414$   
 $\text{cfm} = \text{ml/min} \times 35.3$



Floor Standing Type

50Hz 230V

Model			FVXS25BAVMB		FVXS35BAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5kW Class		3.5kW Class	
Front Panel Color			Almond White			
Air Flow Rates	ml/min (cfm)	H	8.1 (286)	9.2 (325)	8.3 (293)	9.2 (325)
		M	6.2 (219)	7.0 (247)	6.3 (222)	7.1 (251)
		L	4.3 (152)	4.8 (169)	4.3 (152)	5.0 (177)
		SL	3.4 (120)	3.5 (124)	3.4 (120)	3.6 (127)
Fan	Type	Cross Flow Fan				
	Motor Output	W	14+14		14+14	
	Speed	Steps	5 Steps, Silent, Auto		5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Upward		Right, Left, Horizontal, Upward	
Air Filter			Removable-Washable-Mildew Proof			
Running Current (Rated)	A	0.14	0.14	0.14	0.14	
Power Consumption (Rated)	W	32	32	32	32	
Power Factor	%	99.4	99.4	99.4	99.4	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H×W×D)	mm	600×650×195		600×650×195		
Packaged Dimensions (H×W×D)	mm	714×770×294		714×770×294		
Weight	kg	13		13		
Gross Weight	kg	19		19		
Operation Sound	H/M/L/SL	dBA	38/32/26/23	38/32/26/23	39/33/27/24	39/34/29/26
Sound Power	H	dBA	54	—	55	—
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D050874		3D050876	

Model			FVXS50BAVMB	
			Cooling	Heating
Rated Capacity			5.0kW Class	
Front Panel Color			Almond White	
Air Flow Rates	ml/min (cfm)	H	10.8 (381)	13.2 (466)
		M	9.2 (325)	11.3 (399)
		L	7.7 (272)	9.4 (332)
		SL	6.7 (237)	8.3 (293)
Fan	Type	Cross Flow Fan		
	Motor Output	W	14+14	
	Speed	Steps	5 Steps, Silent, Auto	
Air Direction Control			Right, Left, Horizontal, Upward	
Air Filter			Removable-Washable-Mildew Proof	
Running Current (Rated)	A	0.26	0.32	0.32
Power Consumption (Rated)	W	55	70	70
Power Factor	%	92.0	95.1	95.1
Temperature Control			Microcomputer Control	
Dimensions (H×W×D)	mm	600×650×195		
Packaged Dimensions (H×W×D)	mm	714×770×294		
Weight	kg	13		
Gross Weight	kg	19		
Operation Sound	H/M/L/SL	dBA	44/40/36/33	45/40/36/33
Sound Power	H	dBA	56	57
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ12.7	
	Drain	mm	φ20.0	
Drawing No.			3D050895	

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3414
cfm=ml/min×35.3

## Ceiling Suspended Type

50Hz 230V

Model			FHQ35BVV1B		FHQ50BVV1B		
			Cooling	Heating	Cooling	Heating	
Rated Capacity			3.5kW Class		5.0kW Class		
Decoration Panel	Color	White				White	
	Dimensions (H×W×D)	—				—	
Air Flow Rates	ml/min (cfm)	H	13.0 (458)	13.0 (458)	13.0 (458)	13.0 (458)	
		M	—		—		
		L	10.0 (353)	10.0 (353)	10.0 (353)	10.0 (353)	
		SL	—		—		
Fan	Type	Sirocco Fan				Sirocco Fan	
	Motor Output	W	62		62		
	Speed	Steps	2 Steps		2 Steps		
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward		
Air Filter			Removable-Washable-Mildew Proof		Removable-Washable-Mildew Proof		
Temperature Control			Microcomputer Control		Microcomputer Control		
Dimensions (H×W×D)		mm	195×960×680		195×960×680		
Packaged Dimensions (H×W×D)		mm	279×1,046×818		279×1,046×818		
Weight		kg	24		25		
Gross Weight		kg	31		32		
Operation Sound	H/L	dBA	37/32		38/33		
Sound Power	H/L	dBA	53/48		54/49		
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes		
Piping Connection	Liquid	mm	φ 6.4 (Flare)		φ 6.4 (Flare)		
	Gas	mm	φ 9.5 (Flare)		φ 12.7 (Flare)		
	Drain	mm	VP20 (O.D.φ 26 / I.D.φ 20)		VP20 (O.D.φ 26 / I.D.φ 20)		
Drawing No.			3D037992E		3D037992E		

## Conversion Formulae

$\text{kcal/h} = \text{kW} \times 860$   
 $\text{Btu/h} = \text{kW} \times 3414$   
 $\text{cfm} = \text{ml/min} \times 35.3$

# 1.4 Outdoor Units - Heat Pump

50Hz 230V

Model			2MXS52E2(3)V1B		3MXS52E2(3)V1B	
			Cooling	Heating	Cooling	Heating
Cooling Capacity	kW	---		---		
Power Consumption	W	---		---		
Running Current	A	---		---		
Casing Color		Ivory White		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model	2YC36BXD		2YC36BXD		
Motor Output	W	1,100		1,100		
Refrigerant Oil	Model	FVC50K		FVC50K		
	Charge	L	0.65		0.65	
Refrigerant	Type	R-410A		R-410A		
	Charge	kg	2.0		2.0	
Air Flow Rates	ml/min	H	45	45	45	45
		L	45	41	45	41
	cfm	H	1,589	1,589	1,589	1,589
		L	1,589	1,448	1,589	1,448
Fan	Type	Propeller		Propeller		
	Motor Output	W	53		53	
	Running Current	A	H: 0.33 / L: 0.29		H: 0.33 / L: 0.29	
	Power Consumption	W	H: 43 / L: 34		H: 43 / L: 34	
Starting Current	A	6.7		6.2		
Dimensions (H×W×D)	mm	735×936×300		735×936×300		
Packaged Dimensions (H×W×D)	mm	797×992×390		797×992×390		
Weight	kg	49		49		
Gross Weight	kg	56		56		
Operation Sound	dBA	46	47	46	47	
Sound Power	dBA	59	60	59	60	
Piping Connection	Liquid	mm	φ 6.4×2		φ 6.4×3	
	Gas	mm	φ12.7×2		φ 9.5×2, φ12.7×1	
	Drain	mm	φ18.0		φ18.0	
Heat Insulation		Both Liquid and Gas Pipes		Both Liquid and Gas Pipes		
No. of Wiring Connection		3 for Power Supply, 4 for Interunit Wiring		3 for Power Supply, 4 for Interunit Wiring		
Max. Interunit Piping Length	m	50 (for Total of Each Room)		50 (for Total of Each Room)		
	m	25 (for One Room)		25 (for One Room)		
Amount of Additional Charge	g/m	20 (30m or more)		20 (30m or more)		
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)		
	m	7.5 (between Indoor Units)		7.5 (between Indoor Units)		
Drawing No.		3D052266#1		3D052265#1		

**Note:** The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formulae
kcal/h=kW×860 Btu/h=kW×3414 cfm=ml/min×35.3

50Hz 230V

Model			2AMX52E2(3)V1B				3AMX52E2(3)V1B			
			Cooling		Heating		Cooling		Heating	
Cooling Capacity		kW	—		—		—		—	
Power Consumption		W	—		—		—		—	
Running Current		A	—		—		—		—	
Casing Color			Ivory White				Ivory White			
Compressor	Type	Hermetically Sealed Swing Type				Hermetically Sealed Swing Type				
	Model	2YC36BXD				2YC36BXD				
	Motor Output	W	1,100		1,100		1,100		1,100	
Refrigerant Oil	Model	FVC50K				FVC50K				
	Charge	L	0.65		0.65		0.65		0.65	
Refrigerant	Type	R-410A				R-410A				
	Charge	kg	2.0		2.0		2.0		2.0	
Air Flow Rates	ml/min	H	45	45	45	45				
		L	45	41	45	41				
	cfm	H	1,589	1,589	1,589	1,589				
		L	1,589	1,448	1,589	1,448				
Fan	Type	Propeller				Propeller				
	Motor Output	W	53		53		53		53	
	Running Current	A	H: 0.33 / L: 0.29				H: 0.33 / L: 0.29			
	Power Consumption	W	H: 43 / L: 34				H: 43 / L: 34			
Starting Current	A	6.7				6.2				
Dimensions (H×W×D)	mm	735×936×300				735×936×300				
Packaged Dimensions (H×W×D)	mm	797×992×390				797×992×390				
Weight	kg	49				49				
Gross Weight	kg	56				56				
Operation Sound	dB(A)	46	47	46	47					
Sound Power	dB(A)	59	60	59	60					
Piping Connection	Liquid	mm	φ 6.4×2		φ 6.4×3					
	Gas	mm	φ12.7×2		φ 9.5×2, φ12.7×1					
	Drain	mm	φ18.0							
Heat Insulation	Both Liquid and Gas Pipes				Both Liquid and Gas Pipes					
No. of Wiring Connection	3 for Power Supply, 4 for Interunit Wiring				3 for Power Supply, 4 for Interunit Wiring					
Max. Interunit Piping Length	m	50 (for Total of Each Room)				50 (for Total of Each Room)				
	m	25 (for One Room)				25 (for One Room)				
Amount of Additional Charge	g/m	20 (30m or more)				20 (30m or more)				
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)				15 (between Indoor Unit and Outdoor Unit)				
	m	7.5 (between Indoor Units)				7.5 (between Indoor Units)				
Drawing No.	3D052270#1				3D052269#1					

**Note:** The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formulae
kcal/h=kW×860 Btu/h=kW×3414 cfm=ml/min×35.3



# Part 3

# Printed Circuit Board

# Connector Wiring Diagram

1. Printed Circuit Board Connector Wiring Diagram.....	42
1.1 Wall Mounted Type .....	42
1.2 Duct Connected Type.....	51
1.3 Floor / Ceiling Suspended Dual Type.....	53
1.4 Floor Standing Type .....	56
1.5 Ceiling Suspended Type .....	59
1.6 Outdoor Units .....	61

# 1. Printed Circuit Board Connector Wiring Diagram

## 1.1 Wall Mounted Type

### 1.1.1 FTXG25~35E, CTXG50E, ATXG25~50E

#### Connectors

#### PCB(1) (Control PCB)

- |        |  |
|--------|--|
| 1) S1  | Connector for fan motor                                  |
| 2) S21 | Connector for centralized control (HA)                   |
| 3) S32 | Connector for heat exchanger thermistor                  |
| 4) S36 | Connector for INTELLIGENT EYE sensor PCB and control PCB |
| 5) S41 | Connector for swing motor                                |
| 6) S46 | Connector for signal receiver PCB                        |
| 7) S49 | Connector for reduction motor (front panel mechanism)    |
| 8) S51 | Connector for front panel limit switch                   |

#### PCB(2) (Signal Receiver PCB)

- |        |                           |
|--------|---------------------------|
| 1) S47 | Connector for control PCB |
|--------|---------------------------|

#### PCB(3) (INTELLIGENT EYE sensor PCB)

- |        |                           |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|



#### Note:

Other designations

#### PCB(1) (Control PCB)


- |          |  |
|----------|--|
| 1) V1    | Varistor   |
| 2) JA    | Address setting jumper                                 |
| JB       | Fan speed setting when compressor is OFF on thermostat |
| JC       | Power failure recovery function (auto-restart)         |
|          | * Refer to page 297 for detail.                        |
| 3) FU1   | Fuse (3.15A)   |
| 4) LED A | LED for service monitor (green)                        |

#### PCB(2) (Signal Receiver PCB)

- |         |                                  |
|---------|----------------------------------|
| 1) SW1  | Forced operation ON / OFF switch |
| 2) LED2 | LED for INTELLIGENT EYE (green)  |
| 3) LED3 | LED for timer (yellow)           |
| 4) LED4 | LED for operation (green)        |
| 5) RTH1 | Room temperature thermistor      |


PCB Detail

PCB(1): Control PCB (indoor unit)

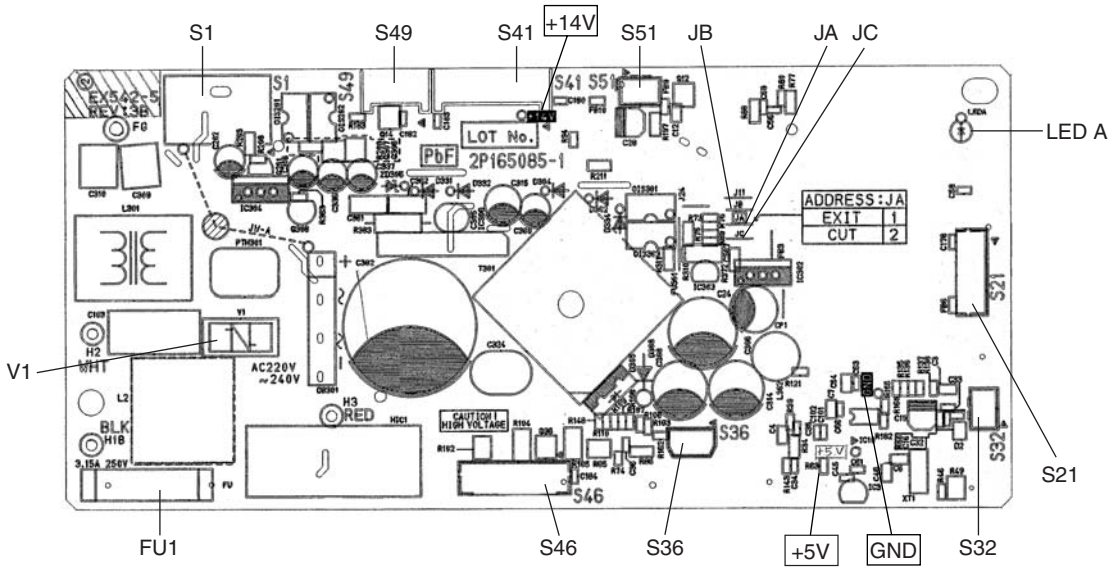


(R6038)

PCB(2): Signal Receiver PCB

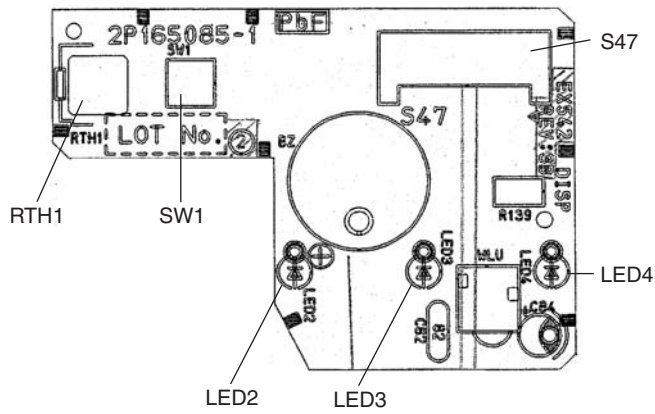

(R4992)

PCB(3): INTELLIGENT EYE sensor PCB

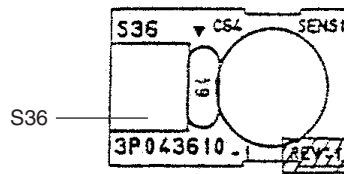

(R4988)



## 1.1.2 FTK(X)S20~50D, ATXS20~50E

### Connectors

#### PCB(1)(Control PCB)

- |        |   |
|--------|---|
| 1) S1  | Connector for AC fan motor                    |
| 2) S6  | Connector for swing motor (horizontal blades) |
| 3) S7  | Connector for AC fan motor (Hall IC)          |
| 4) S21 | Connector for centralized control (HA)        |
| 5) S26 | Connector for display PCB                     |
| 6) S28 | Connector for signal receiver PCB             |
| 7) S32 | Connector for heat exchanger thermistor       |
| 8) S35 | Connector for INTELLIGENT EYE sensor PCB      |

#### PCB(2)(Signal Receiver PCB)

- |        |                           |
|--------|---------------------------|
| 1) S29 | Connector for control PCB |
|--------|---------------------------|

#### PCB(3)(Display PCB)

- |        |                           |
|--------|---------------------------|
| 1) S27 | Connector for control PCB |
|--------|---------------------------|

#### PCB(4)(INTELLIGENT EYE sensor PCB)

- |        |                           |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|



#### Note:

Other designations

#### PCB(1)(Control PCB)


- |          |  |
|----------|--|
| 1) V1    | Varistor   |
| 2) JA    | Address setting jumper                                 |
| JB       | Fan speed setting when compressor is OFF on thermostat |
| JC       | Power failure recovery function (auto-restart)         |
|          | * Refer to page 297 for detail.                        |
| 3) LED A | LED for service monitor (green)                        |
| 4) FU1   | Fuse (3.15A)   |

#### PCB(3)(Display PCB)

- |         |                                  |
|---------|----------------------------------|
| 1) SW1  | Forced operation ON / OFF switch |
| 2) LED1 | LED for operation (green)        |
| 3) LED2 | LED for timer (yellow)           |
| 4) LED3 | LED for INTELLIGENT EYE (green)  |
| 5) RTH1 | Room temperature thermistor      |


PCB Detail

PCB(1): Control PCB

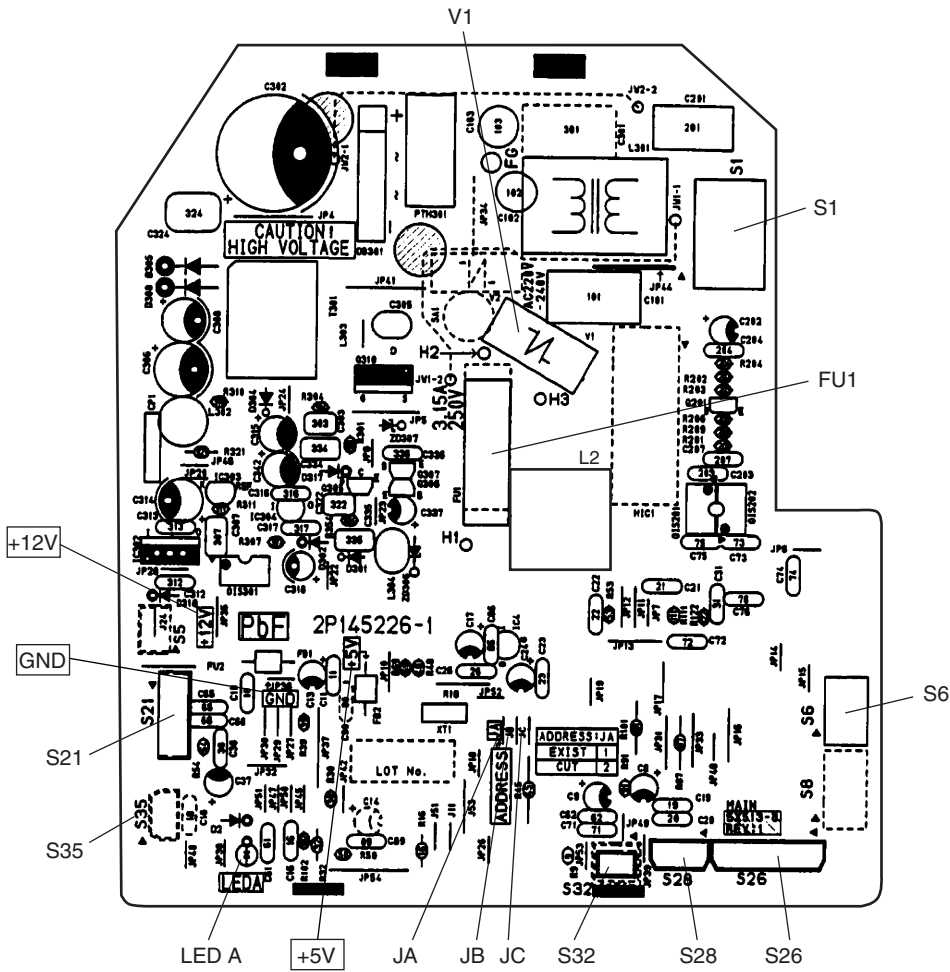


(R6039)

PCB(2): Signal Receiver PCB

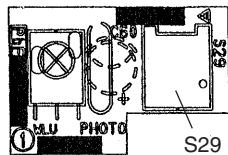


(R5234)

PCB(3): Display PCB

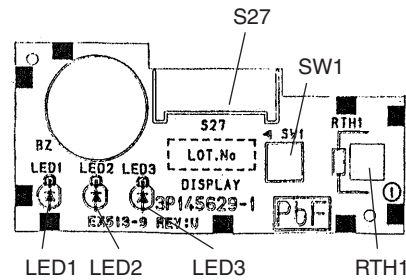

(R4290)

PCB(4): INTELLIGENT EYE sensor PCB

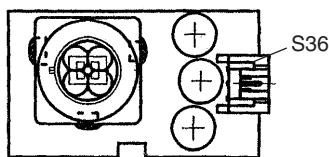

(R4291)

### 1.1.3 FTK(X)S20~35C, ATXS20~35D

#### Connectors

##### PCB(1) (Control PCB)

- |        |  |
|--------|--|
| 1) S1  | Connector for AC fan motor                   |
| 2) S6  | Connector for swing motor (Horizontal Flap)  |
| 3) S7  | Connector for AC fan motor                   |
| 4) S21 | Connector for centralized control to 5 rooms |
| 5) S26 | Connector for signal receiver PCB            |
| 6) S32 | Connector for heat exchanger thermistor      |
| 7) S35 | Connector for Intelligent Eye Sensor PCB     |

##### PCB(2) (Signal Receiver PCB)

- |        |                           |
|--------|---------------------------|
| 1) S27 | Connector for control PCB |
|--------|---------------------------|

##### PCB(3) (INTELLIGENT EYE Sensor PCB)

- |        |                           |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|



#### Note:

Other designations


##### PCB(1) (Control PCB)

- |          |  |
|----------|--|
| 1) V1    | Varistor   |
| 2) JA    | Address setting jumper                                 |
| JB       | Fan speed setting when compressor is OFF on thermostat |
| JC       | Power failure recovery function (auto-restart)         |
|          | * Refer to page 297 for more detail.                   |
| 3) LED A | LED for service monitor (green)                        |
| 4) FU1   | Fuse (3.15A)   |

##### PCB(2) (Signal Receiver PCB)

- |               |                                    |
|---------------|------------------------------------|
| 1) SW7 (S1W)  | Forced operation ON/OFF switch     |
| 2) LED1       | LED for operation (green)          |
| 3) LED2       | LED for timer (yellow)             |
| 4) LED3       | LED for HOME LEAVE operation (red) |
| 5) RTH1 (R1T) | Room temperature thermistor        |

PCB

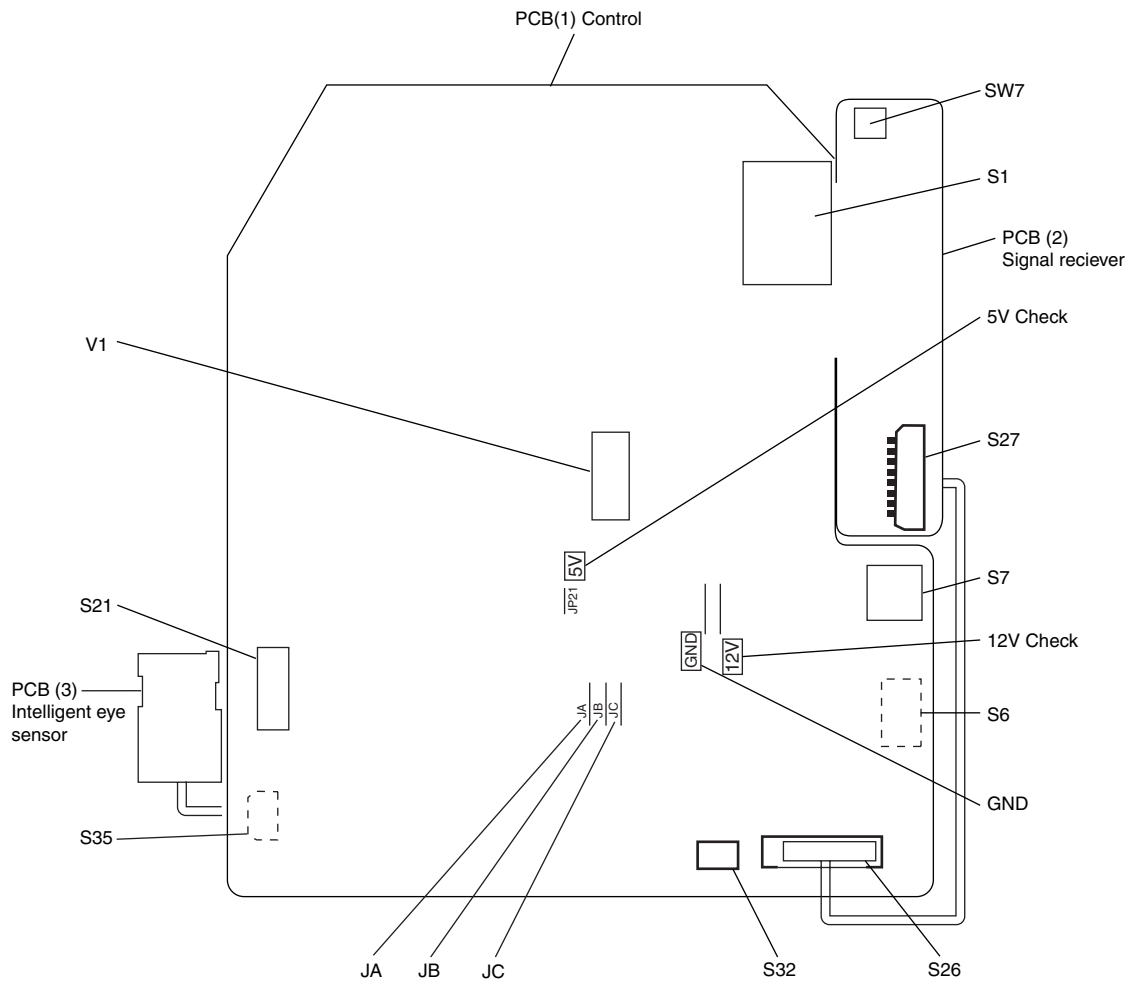


(R2413)

PCB Detail


PCB(1): Control PCB

PCB(2): Signal Receiver PCB

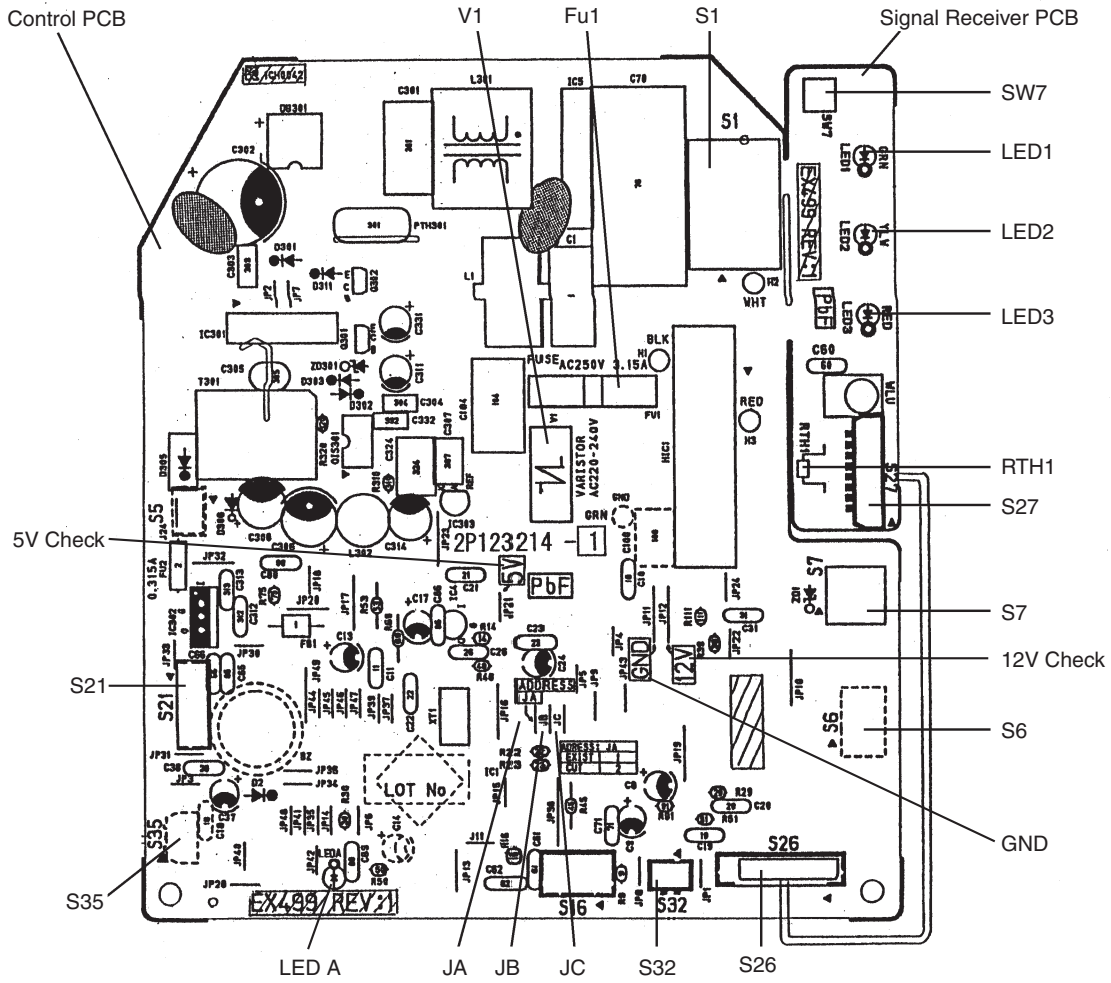

(R4987)

PCB(3): INTELLIGENT EYE sensor PCB (Inverter models only)

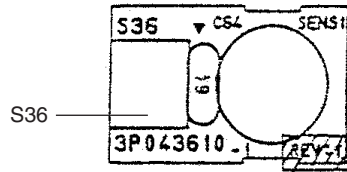

(R4988)

## 1.1.4 FTK(X)S50E, ATX50E

### Connectors

#### PCB(1) (Control PCB)

- |        |   |
|--------|---|
| 1) S1  | Connector for DC fan motor                    |
| 2) S6  | Connector for swing motor (horizontal blades) |
| 3) S8  | Connector for swing motor (vertical blades)   |
| 4) S21 | Connector for centralized control (HA)        |
| 5) S26 | Connector for buzzer PCB                      |
| 6) S28 | Connector for signal receiver PCB             |
| 7) S32 | Connector for heat exchanger thermistor       |
| 8) S35 | Connector for Intelligent Eye sensor PCB      |

#### PCB(2) (Signal Receiver PCB)

- |        |                           |
|--------|---------------------------|
| 1) S29 | Connector for control PCB |
|--------|---------------------------|

#### PCB(3) (Buzzer PCB)

- |        |                           |
|--------|---------------------------|
| 1) S27 | Connector for control PCB |
| 2) S38 | Connector for display PCB |

#### PCB(4) (Display PCB)

- |        |                          |
|--------|--------------------------|
| 1) S37 | Connector for buzzer PCB |
|--------|--------------------------|

#### PCB(5) (INTELLIGENT EYE sensor PCB)

- |        |                           |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|



**Note:** Other designations

#### PCB(1) (Control PCB)

- |          |  |
|----------|--|
| 1) V1    | Varistor   |
| 2) JA    | Address setting jumper                                 |
| JB       | Fan speed setting when compressor is OFF on thermostat |
| JC       | Power failure recovery function (auto-restart)         |
|          | * Refer to page 297 for detail.                        |
| 3) LED A | LED A for service monitor (green)                      |
| 4) FU1   | Fuse (3.15A)   |

#### PCB(2) (Signal Receiver PCB)

- |              |                                |
|--------------|--------------------------------|
| 1) SW1 (S1W) | Forced operation ON/OFF switch |
|--------------|--------------------------------|

#### PCB(3) (Buzzer PCB)


- |               |                             |
|---------------|-----------------------------|
| 1) RTH1 (R1T) | Room temperature thermistor |
|---------------|-----------------------------|

#### PCB(4) (Display PCB)


- |         |                                    |
|---------|------------------------------------|
| 4) LED1 | LED for operation (green)          |
| 5) LED2 | LED for timer (yellow)             |
| 6) LED3 | LED for Home Leave operation (red) |

PCB Detail


PCB(1): Control PCB (indoor unit)

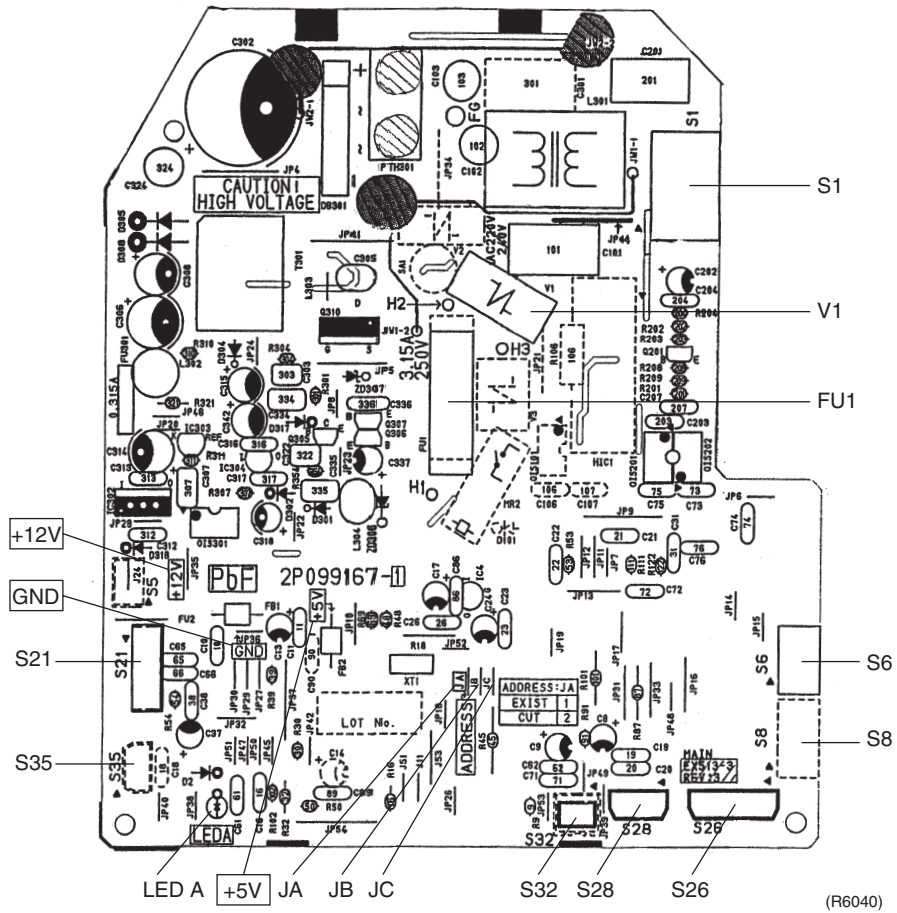


PCB(2): Signal Receiver PCB

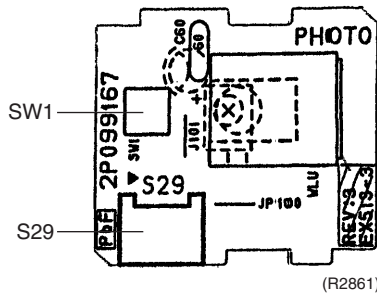


PCB(3): Buzzer PCB

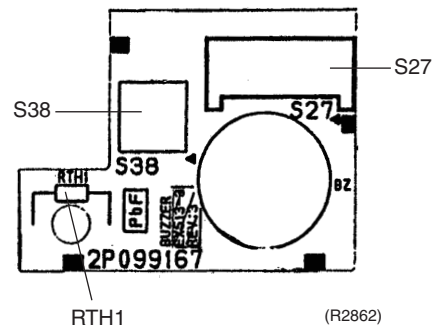

PCB(4): Display PCB

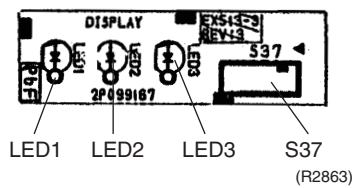

PCB(5): Intelligent Eye sensor PCB

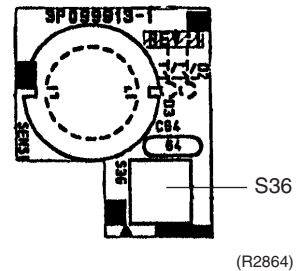

## 1.2 Duct Connected Type

### Connectors

#### PCB(1) (Control PCB)

- 1) S1 Connector for AC fan motor
- 2) S7 Connector for AC fan motor
- 3) S21 Connector for centralized control to 5 rooms
- 4) S26 Connector for display PCB
- 5) S32 Connector for heat exchanger thermistor

#### PCB(2) (Display PCB)

- 1) S1 Connector for control PCB



**Note:** Other designations

#### PCB(1) (Control PCB)


- 1) V1 Varistor
- 2) JA Address setting jumper
- JB Fan speed setting when compressor is OFF on thermostat
- JC Power failure recovery function (auto-restart)  
\* Refer to page 297 for more detail.
- 3) LED A LED for service monitor (green)
- 4) FU1 Fuse (3.15A)

#### PCB(2) (Display PCB)

- 1) SW1 (S1W) Forced operation ON/OFF switch
- 2) LED1 LED for operation (green)
- 3) LED2 LED for timer (yellow)
- 4) LED3 LED for HOME LEAVE operation (red)
- 5) RTH1 (R1T) Room temperature thermistor

### PCB Detail


#### PCB (1): Control PCB

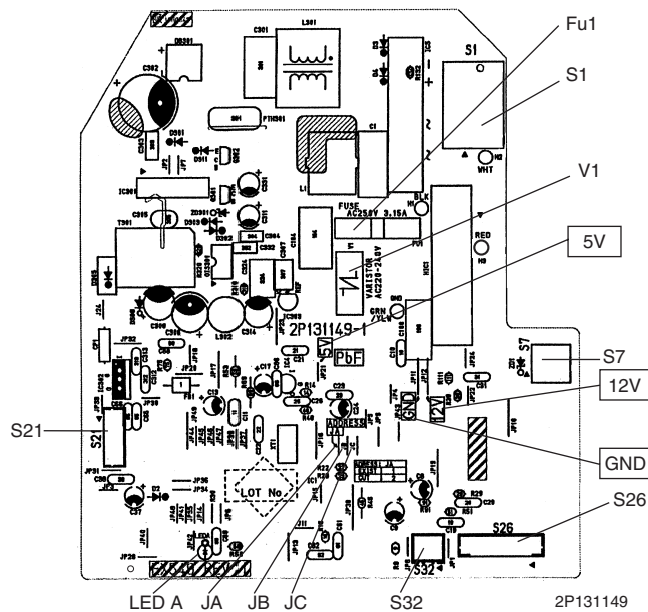



PCB Detail

PCB (2): Display PCB

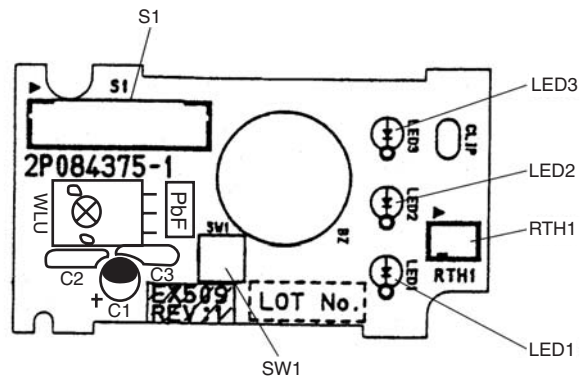

2P084375

## 1.3 Floor / Ceiling Suspended Dual Type

### Connectors

#### PCB(1) (Control PCB)

- |        |  |
|--------|--|
| 1) S6  | Connector for swing motor (horizontal swing) |
| 2) S7  | Connector for AC fan motor                   |
| 3) S21 | Connector for centralized control            |
| 4) S24 | Connector for display PCB                    |
| 5) S26 | Connector for signal receiver PCB            |
| 6) S32 | Connector for heat exchanger thermistor      |
| 7) S37 | Connector for power supply PCB               |

#### PCB(2) (Power Supply PCB)

- |        |                           |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|

#### PCB(3) (Display PCB)

- |        |                           |
|--------|---------------------------|
| 1) S25 | Connector for control PCB |
|--------|---------------------------|

#### PCB(4) (Signal Receiver PCB)

- |        |   |
|--------|---|
| 1) S27 | Connector for control PCB                 |
| 2) S31 | Connector for room temperature thermistor |



#### Note:

Other designations

#### PCB(1) (Control PCB)

- |          |   |
|----------|---|
| 1) JA    | Address setting jumper  |
| JB       | Fan speed setting when compressor is OFF on thermostat                            |
| JC       | Power failure recovery function (auto-restart)<br>* Refer to page 297 for detail. |
| 2) SW2   | Select switch ceiling or floor  |
| 3) LED A | LED for service monitor (green)   |

#### PCB(2) (Power Supply PCB)

- |        |              |
|--------|--------------|
| 1) V1  | Varistor     |
| 1) FU1 | Fuse (3.15A) |

#### PCB(3) (Display PCB)


- |         |                                    |
|---------|------------------------------------|
| 1) LED1 | LED for operation (green)          |
| 2) LED2 | LED for timer (yellow)             |
| 3) LED3 | LED for HOME LEAVE operation (red) |

#### PCB(4) (Signal Receiver PCB)

- |              |                                |
|--------------|--------------------------------|
| 1) SW1 (S1W) | Forced operation ON/OFF switch |
|--------------|--------------------------------|

PCB Detail


PCB (1): Control PCB

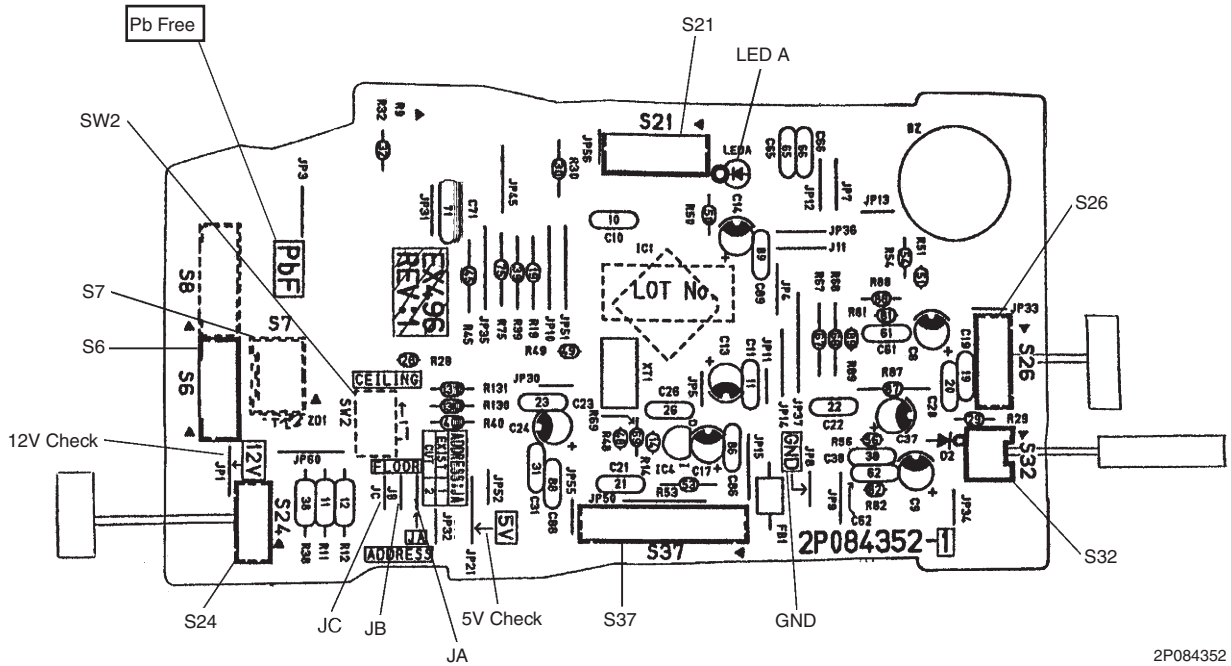

2P084352


PCB Detail

PCB (2): Power Supply PCB

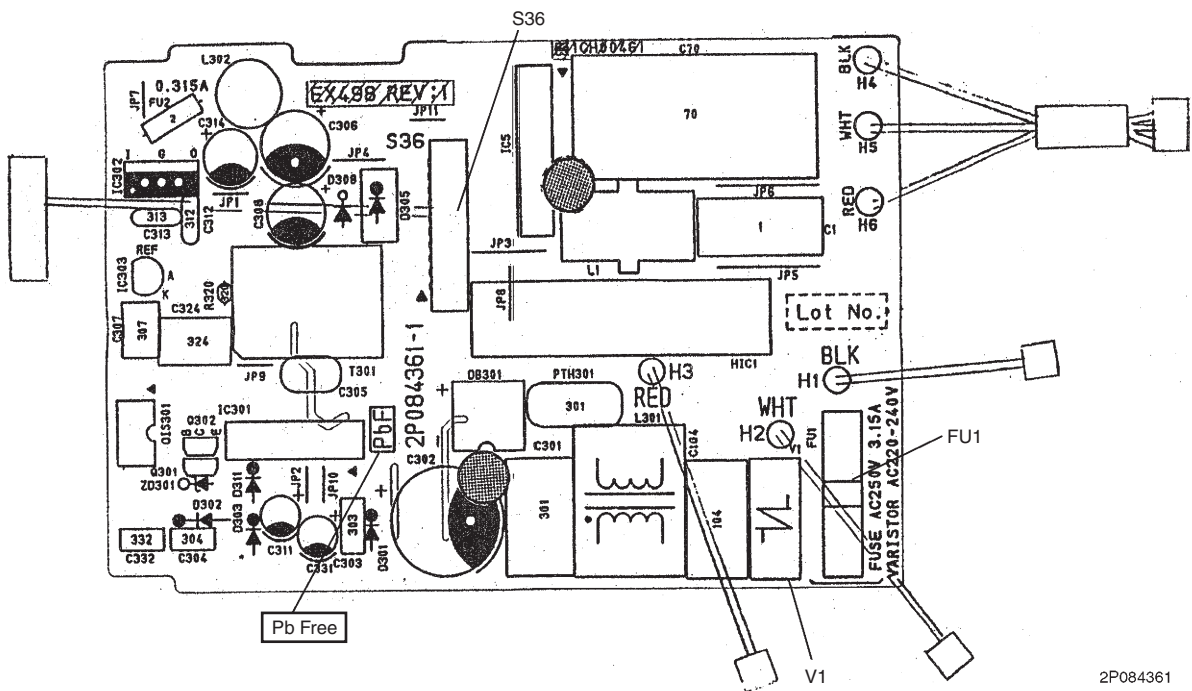


2P084361

PCB (3): Display PCB

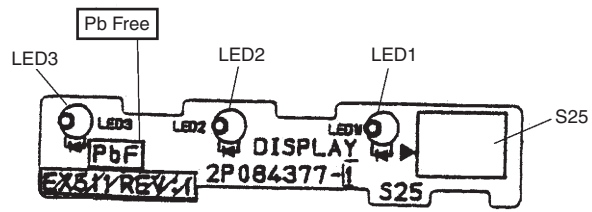

PCB (4): Signal Receiver PCB

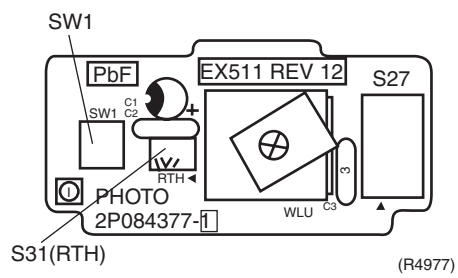

## 1.4 Floor Standing Type

### Connectors

#### PCB(1) (Power Supply PCB)

- |                      |                           |
|----------------------|---------------------------|
| 1) S8, S202,<br>S204 | Connector for control PCB |
|----------------------|---------------------------|

#### PCB(2) (Control PCB)

- |                      |  |
|----------------------|--|
| 1) S6                | Connector for swing motor and lower air outlet motor       |
| 2) S21               | Connector for centralized control                          |
| 3) S23               | Connector for display PCB                                  |
| 4) S31, S32          | Connector for room temperature / heat exchanger thermistor |
| 5) S7, S201,<br>S203 | Connector for power supply PCB                             |
| 6) S25               | Connector for signal receiver PCB                          |
| 7) S301, S302        | Connector for DC fan motors                                |

#### PCB(3) (Signal Receiver PCB)

- |        |                           |
|--------|---------------------------|
| 1) S26 | Connector for control PCB |
|--------|---------------------------|

#### PCB(4) (Display PCB)

- |        |                           |
|--------|---------------------------|
| 1) S24 | Connector for control PCB |
|--------|---------------------------|



#### Note:

Other Designations

#### PCB(2) (Control PCB)

- |          |   |
|----------|---|
| 1) V1    | Varistor  |
| 2) JA    | Address setting jumper  |
| JB       | Fan speed setting when compressor is OFF on thermostat                            |
| JC       | Power failure recovery function (auto-restart)<br>* Refer to page 297 for detail. |
| 3) FU    | Fuse (3.15A)  |
| 4) LED A | LED for service monitor (green)   |

#### PCB(3) (Signal Receiver PCB)


- |        |                                       |
|--------|---------------------------------------|
| 1) SW2 | Changing upward air flow limit switch |
| 2) SW4 | Discharge changeover switch           |

#### PCB(4) (Display PCB)

- |              |                                    |
|--------------|------------------------------------|
| 1) SW1 (S1W) | Forced operation ON/OFF switch     |
| 2) LED11     | LED for operation (green)          |
| 3) LED12     | LED for timer (yellow)             |
| 4) LED14     | LED for HOME LEAVE operation (red) |


PCB Detail

PCB (1): Power Supply PCB (25, 35 class)

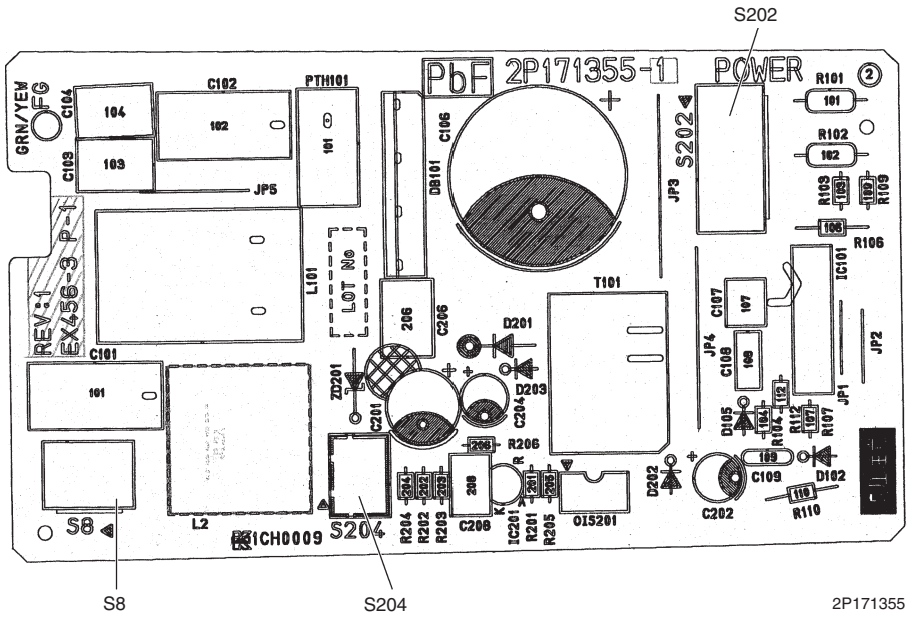

PCB Detail


PCB (1): Power Supply PCB (50 class)

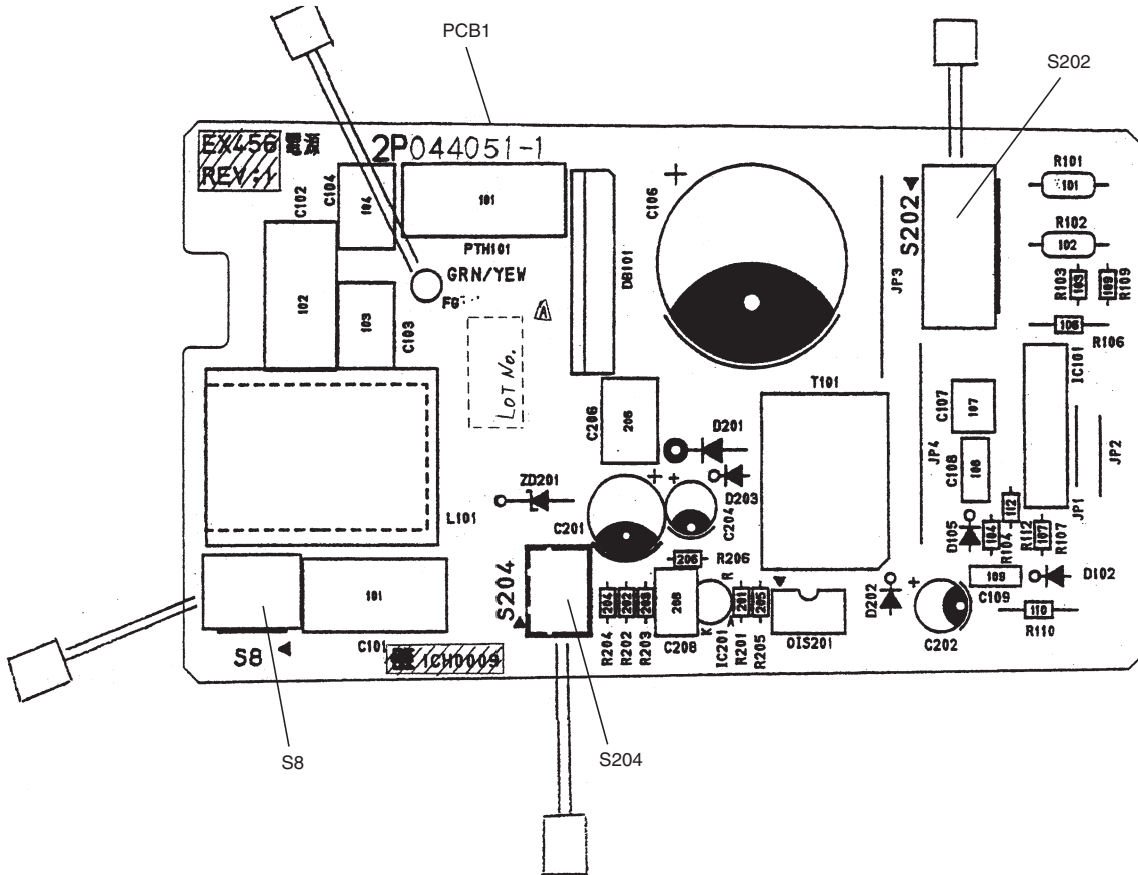

2P044051F

PCB Detail

- PCB (2): Control PCB
- PCB (3): Display PCB
- PCB (4): Signal Receiver PCB

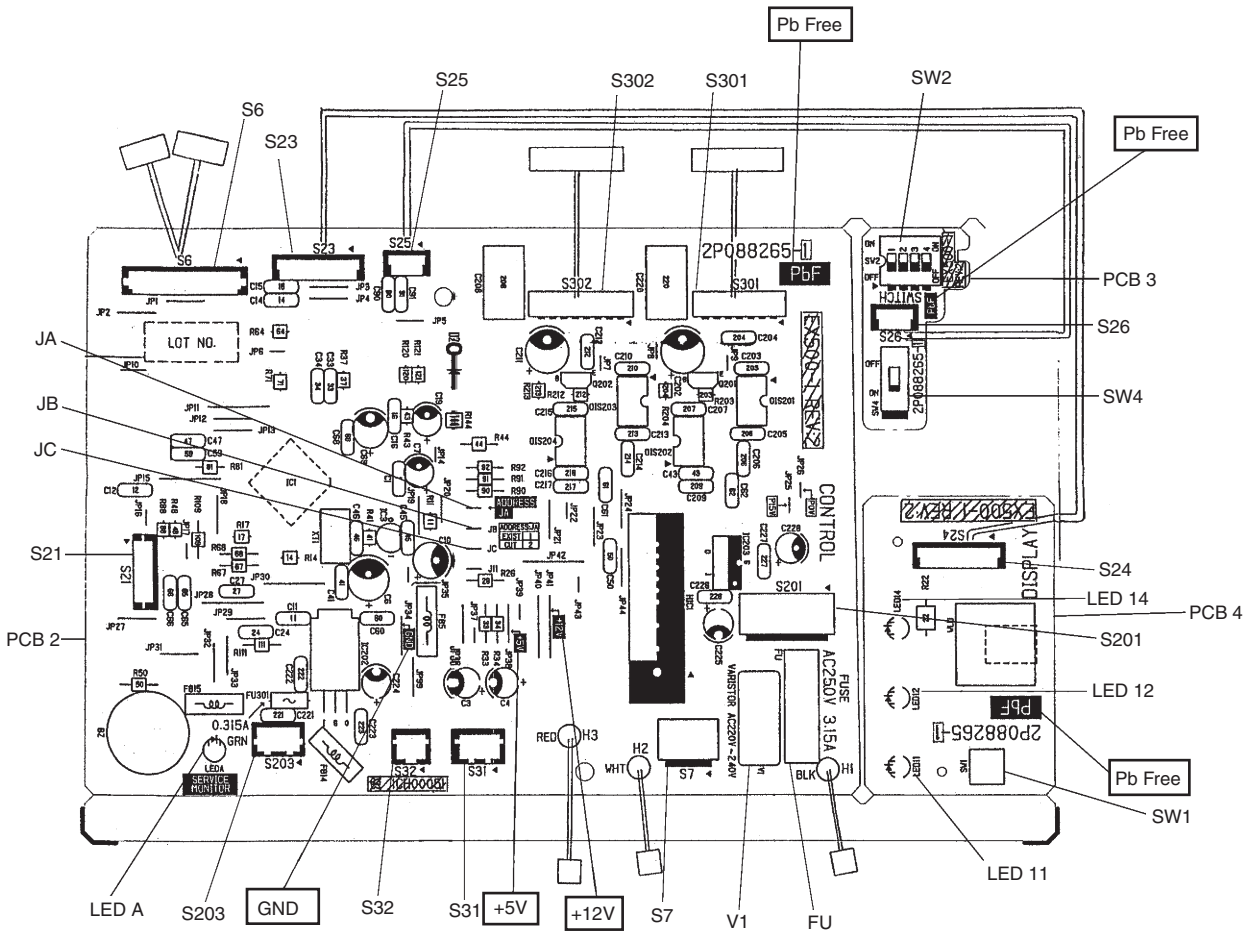

2P088265

## 1.5 Ceiling Suspended Type

---

### Connectors

1) X5A	Connector for Terminal Strip (for Wired Remote Control)
2) X14A	Connector for Limit Switch (for Swing Flap)
3) X15A	Connector for Drain Pump (Optional Accessory)
4) X17A	Connector for Heat Exchanger Thermistor (2)
5) X18A	Connector for Heat Exchanger Thermistor (1)
6) X19A	Connector for Room Temperature Thermistor
7) X20A, X26A	Connector for Fan Motor
8) X24A	Connector for Infrared Remote Control Receiver Unit
9) X25A	Connector for Drain Pump Motor (Optional Accessory)
10) X27A	Connector for Terminal Strip (for Inter Unit Wiring)
11) X29A	Connector for Swing Motor
12) X33A	Connector for Wiring Adapter PCB (Optional Accessory)
13) X35A	Connector for Group Control Adapter (Optional Accessory)
14) X40A	Connector for ON/OFF Input from Outside (for Optional Accessory)
15) X60A, X61A	Connector for Interface Adapter (Optional Accessory)




**Note:** Other Designation

1) HAP	Service Monitor LED
--------	---------------------



PCB Detail

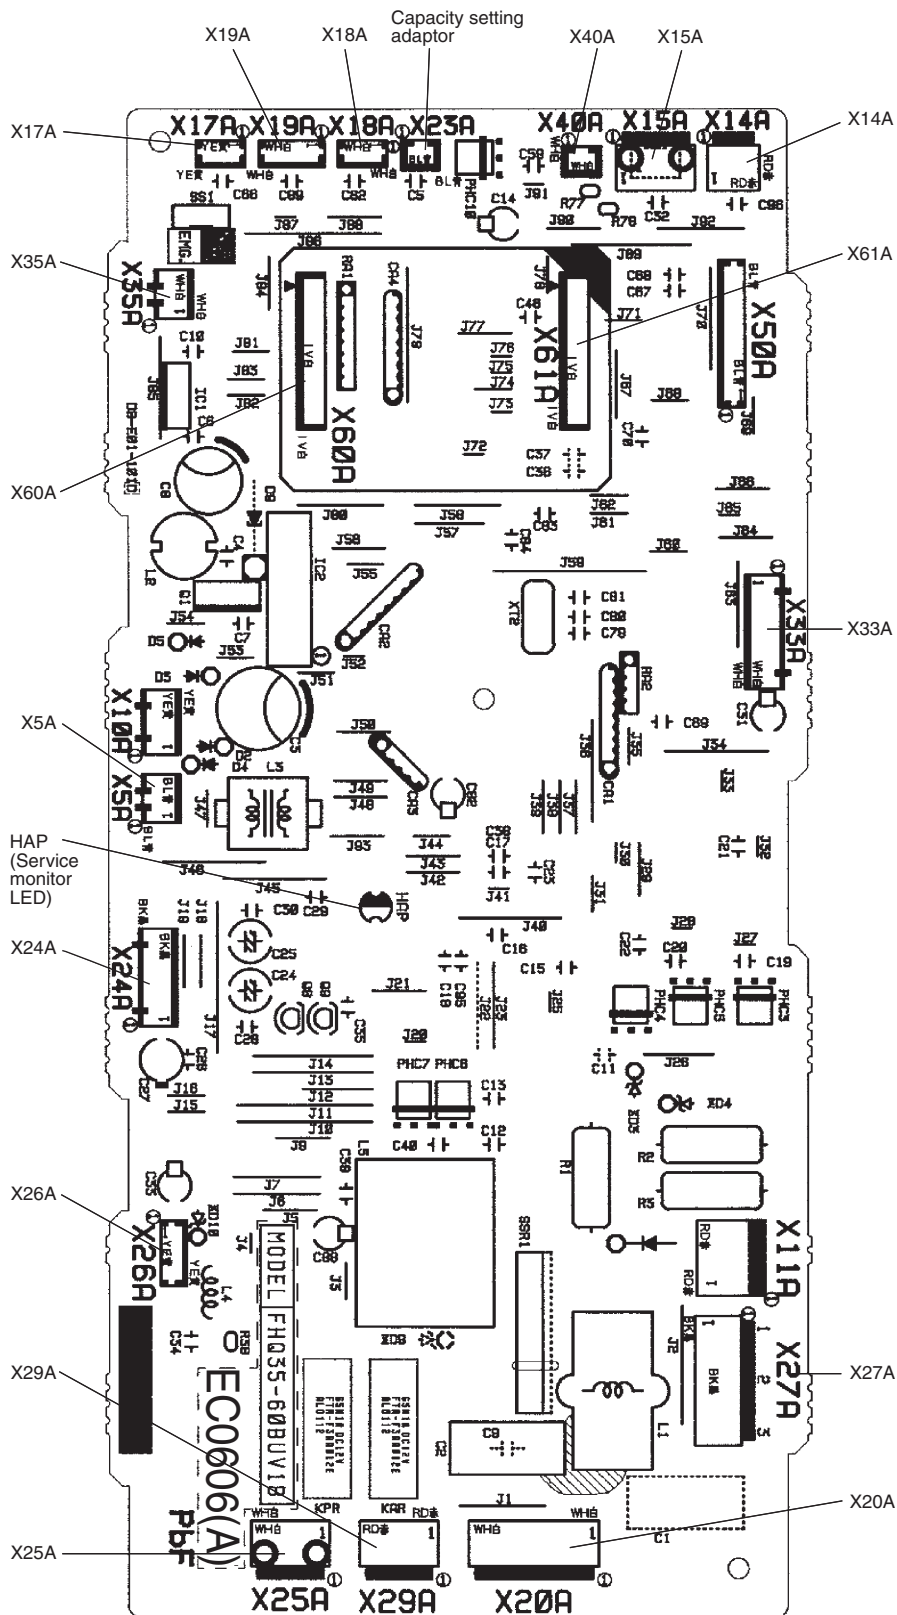

2P095007

## 1.6 Outdoor Units

### Connectors

#### PCB(1)(Main PCB)

1) S10	Connector for terminal strip (indoor-outdoor transmission)
2) S15	Connector for COOL / HEAT mode lock
3) S20	Connector for electronic expansion valve coil A port (white)
4) S21	Connector for electronic expansion valve coil B port (red)
5) S22	Connector for electronic expansion valve coil C port (blue)
6) S23	Connector for electronic expansion valve coil D port (yellow)
7) S40	Connector for overload protector
8) S51, S101	Connector for service monitor PCB
9) S70	Connector for fan motor
10) S80	Connector for four way valve coil
11) S90	Connector for thermistors (outdoor air, heat exchanger, and discharge pipe)
12) S92	Connector for gas pipe thermistor
13) S93	Connector for liquid pipe thermistor
14) AC1, AC2	Connector for terminal strip (power supply)
15) HR1, HR2	Connector for reactor

#### PCB(2)(Service Monitor PCB)

1) S52, S102	Connector for control PCB
--------------	---------------------------



#### Note:

Other Designations

#### PCB(1)(Main PCB)


1) FU1	Fuse (30A)
2) FU2, FU3	Fuse (3.15A)
3) V2, V3, V5 V6, V11	Varistor (for 50/60 models)

#### PCB(2)(Service Monitor PCB)

1) LED A	Service monitor LED (green)
2) LED1 - LED4	Service monitor LED (red)
3) SW1	Forced operation ON/OFF switch
4) SW3	Wiring error check switch
5) SW4	Priorily room setting switch
6) SW5	Night quiet mode setting switch


PCB Detail

PCB(1): Main PCB (outdoor unit 50/60 models)

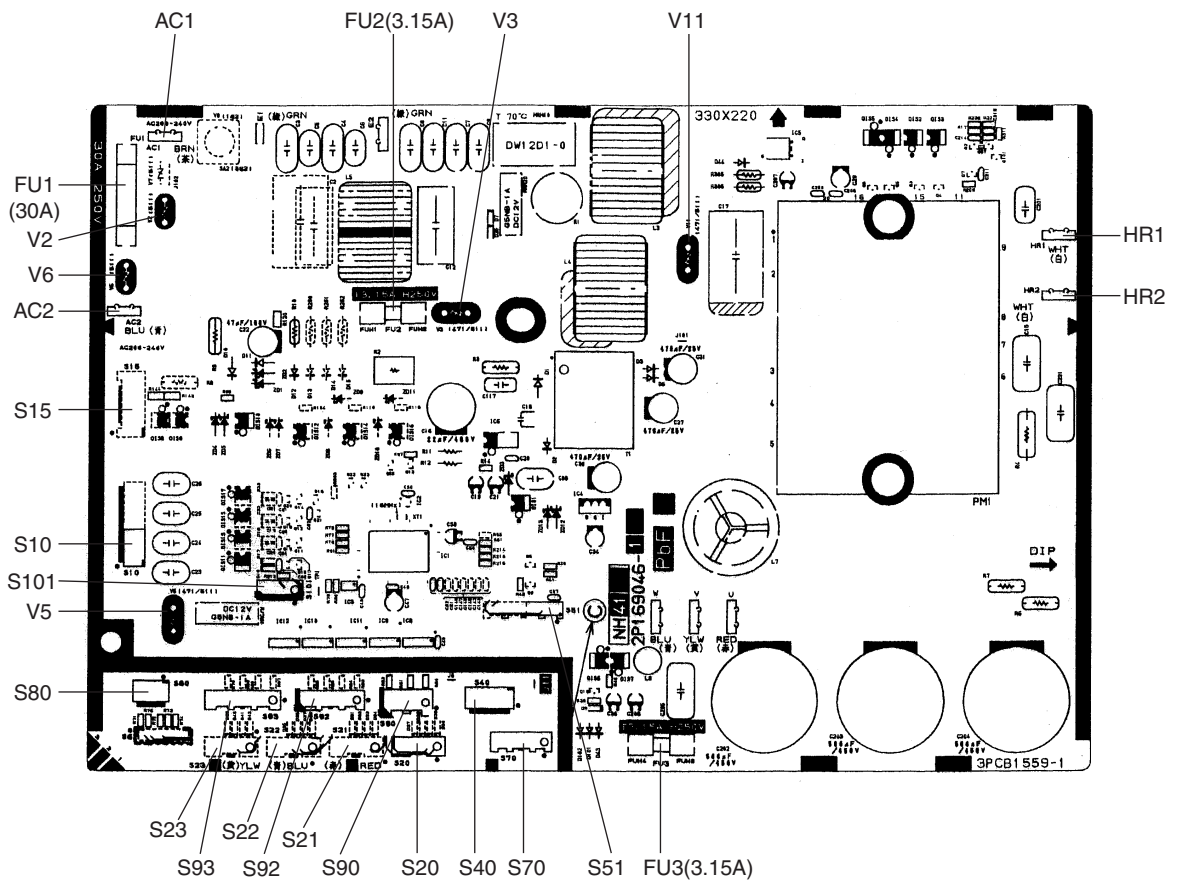

(R6041)

PCB(2): Service Monitor PCB

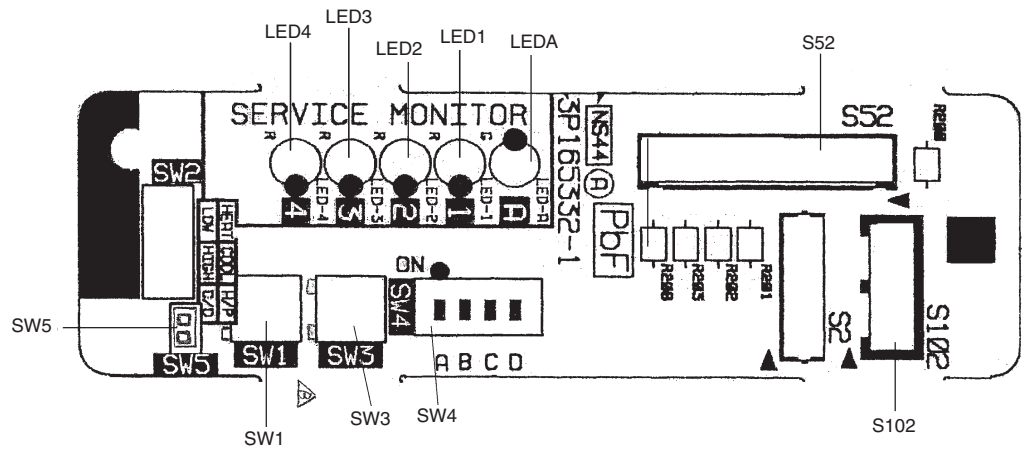

3P165332



# Part 4

## Function and Control

1. Main Functions .....	66
1.1 Frequency Principle.....	66
1.2 Power-Airflow Dual Flaps, Wide Angle Louvers and Auto-Swing .....	68
1.3 Operation Starting Control.....	69
1.4 Fan Speed Control for Indoor Units.....	70
1.5 Programme Dry Function .....	71
1.6 Automatic Operation.....	72
1.7 Thermostat Control.....	73
1.8 Night Set Mode.....	74
1.9 ECONO Mode .....	75
1.10 INTELLIGENT EYE (Wall Mounted Type Only) .....	76
1.11 HOME LEAVE Operation .....	78
1.12 Inverter POWERFUL Operation .....	79
1.13 Other Functions.....	80
2. Function of Main Structural Parts .....	82
2.1 Main Structural Parts.....	82
2.2 Function of Thermistor .....	83
3. Control Specification .....	87
3.1 Mode Hierarchy.....	87
3.2 Frequency Control.....	88
3.3 Controls at Mode Changing / Start-up.....	90
3.4 Discharge Pipe Control .....	92
3.5 Input Current Control.....	92
3.6 Freeze-up Protection Control .....	93
3.7 Heating Peak-cut Control .....	93
3.8 Fan Control.....	94
3.9 Liquid Compression Protection Function 2.....	94
3.10 Defrost Control .....	95
3.11 Electronic Expansion Valve Control .....	96
3.12 Malfunctions .....	100
3.13 Forced Operation Mode .....	101
3.14 Wiring-Error Check.....	102
3.15 Additional Function.....	104

# 1. Main Functions

**i** Note: See the list of functions for the functions applicable to different models.

## 1.1 Frequency Principle

### Main Control Parameters

The compressor is frequency-controlled during normal operation. The target frequency is set by the following 2 parameters coming from the operating indoor unit:

- The load condition of the operating indoor unit
- The difference between the room temperature and the set temperature

### Additional Control Parameters

The target frequency is adapted by additional parameters in the following cases:

- Frequency restrictions
- Initial settings
- Forced cooling / heating operation


### Inverter Principle

To regulate the capacity, a frequency control is needed. The inverter makes it possible to vary the rotation speed of the compressor. The following table explains the conversion principle:

Phase	Description
1	The supplied AC power source is converted into the DC power source for the present.
2	The DC power source is reconverted into the three phase AC power source with variable frequency. <ul style="list-style-type: none"> <li>■ When the frequency increases, the rotation speed of the compressor increases resulting in an increased refrigerant circulation. This leads to a higher amount of the heat exchange per unit.</li> <li>■ When the frequency decreases, the rotation speed of the compressor decreases resulting in a decreased refrigerant circulation. This leads to a lower amount of the heat exchange per unit.</li> </ul>

### Drawing of Inverter


The following drawing shows a schematic view of the inverter principle:

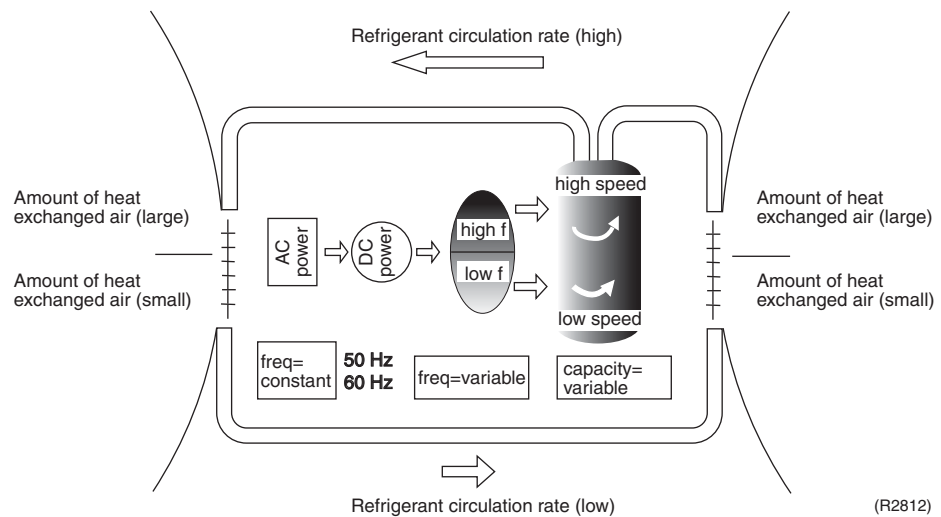

### Inverter Features

The inverter provides the following features:

- The regulating capacity can be changed according to the changes in the outdoor air temperature and cooling / heating load.
- Quick heating and quick cooling  
The compressor rotational speed is increased when starting the heating (or cooling). This enables a quick set temperature.

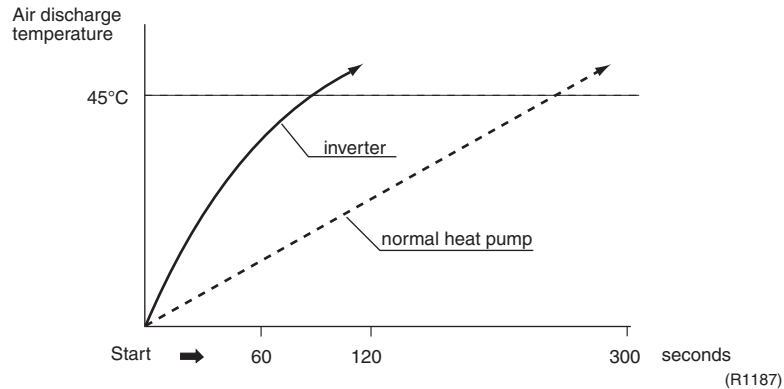

- Even during extreme cold weather, the high capacity is achieved. It is maintained even when the outdoor air temperature is 2°C.
- Comfortable air conditioning  
A detailed adjustment is integrated to ensure a fixed room temperature. It is possible to air condition with a small room temperature variation.
- Energy saving heating and cooling  
Once the set temperature is reached, the energy saving operation enables to maintain the room temperature at low power.

### Frequency Limits

The following table shows the functions that define the minimum and maximum frequency:

Frequency limits	Limited during the activation of following functions
Low	<ul style="list-style-type: none"> <li>■ Four way valve operation compensation. Refer to page 90.</li> </ul>
High	<ul style="list-style-type: none"> <li>■ Input current control. Refer to page 92.</li> <li>■ Compressor protection function. Refer to page 90.</li> <li>■ Heating Peak-cut control. Refer to page 93.</li> <li>■ Freeze-up protection. Refer to page 93.</li> <li>■ Defrost control. Refer to page 95.</li> </ul>

### Forced Cooling / Heating Operation

For more information, refer to "Forced operation mode" on page 101.



# 1.2 Power-Airflow Dual Flaps, Wide Angle Louvers and Auto-Swing

## Power-airflow Dual Flaps

The large flaps send a large volume of air downwards to the floor. The flap provides an optimum control area in cooling, heating and dry mode.

### Heating Mode

During heating mode, the large flap enables direct warm air straight downwards. The flap presses the warm air above the floor to reach the entire room.

### Cooling Mode

During cooling mode, the flap retracts into the indoor unit. Then, cool air can be blown far and pervaded all over the room.





## Wide-Angle Louvers

The louvers, made of elastic synthetic resin, provide a wide range of airflow that guarantees a comfortable air distribution.

## Auto-Swing

### In case of FTK(X)S20-50D


The following table explains the auto swing process for heating, cooling, dry and fan :

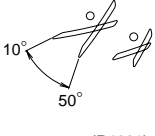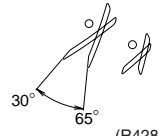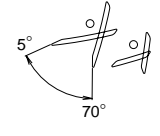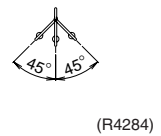Vertical Swing (up and down)			Horizontal Swing (right and left: manual)
Cooling / Dry	Heating	Fan	
 <p>(R4281)</p>	 <p>(R4282)</p>	 <p>(R4283)</p>	 <p>(R4284)</p>

## 3-D Airflow

### FTK(X)50E, ATX50E, FTXG25/35E, CTXG50E, ATXG25-50E

- Alternative repetition of vertical and horizontal swing motions enables uniform air-conditioning of the entire room. This function is effective for starting the air conditioner.
- When the horizontal swing and vertical swing are both set to auto mode, the airflow become 3-D airflow and the horizontal swing and vertical swing motions are alternated. The order of swing motion is such that it turns counterclockwise, starting from the right upper point as viewed to the front side of the indoor unit.


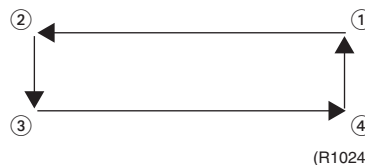


## COMFORT AIRFLOW Mode

### In case of FTK(X)S20-50D, ATXS20-50E

The vertical swing flap is controlled not to blow the air directly on the person in the room.

- The airflow rate is controlled automatically within the following steps.  
Cooling: L tap – MH tap (same as AUTOMATIC)  
Heating: ML tap – M tap
- The latest command has the priority between POWERFUL and COMFORT AIRFLOW.

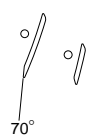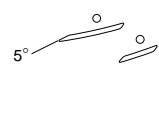Heating	Cooling
 <p>(R4303)</p>	 <p>(R4302)</p>


# 1.3 Operation Starting Control

FTXG25-35E, CTXG50E, ATXG25-50E


The system carries out the following control at the beginning to conduct every functional parts properly.

1. Opening the front panel fully
2. Output of the  $\Delta D$  signal after the front panel starts moving
3. Opening the flap fully after the front panel opens fully
4. Making the fan rotate when the flap passes over the fan-banned area

## Control Flow

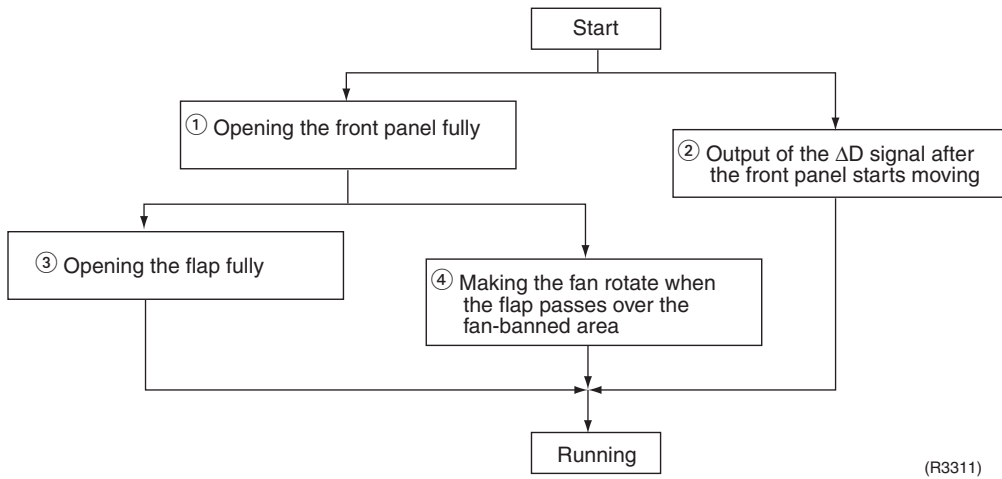

## Timing Chart

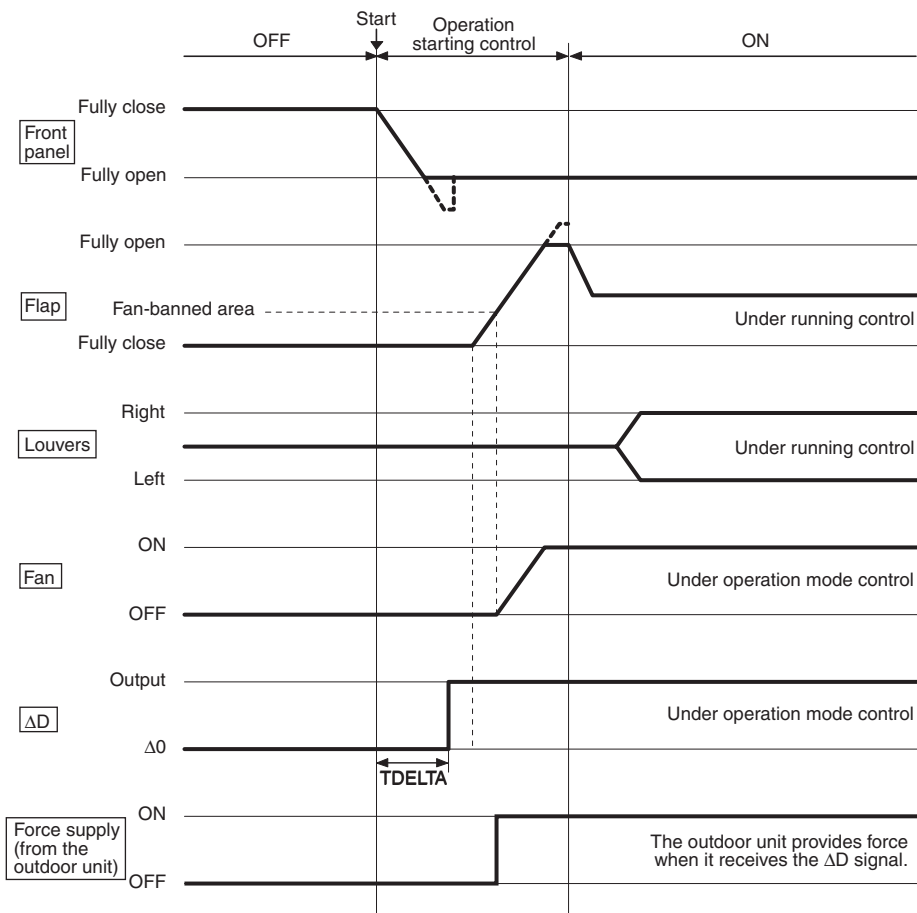

# 1.4 Fan Speed Control for Indoor Units

## Control Mode

The airflow rate can be automatically controlled depending on the difference between the set temperature and the room temperature. This is done through phase control and Hall IC control.



For more information about Hall IC, refer to the troubleshooting for fan motor on page 216.

## Phase Steps

Phase control and fan speed control contains 9 steps: LLL, LL, SL, L, ML, M, MH, H and HH.

Step	FTXG25/35E ATXG25/35E		CTXG50E ATXG50E		FTK(X)S50E ATX50E		FTK(X)S20-50D ATXS20-50E FTK(X)S20-35CA ATXS20-35DA FDK(X)S25-35EA FDK(X)S25-35CA FDK(X)S50C FVK(X)S25-50BA FLK(X)S25-50BA									
	Cooling	Heating	Cooling	Heating	Cooling	Heating	Cooling	Heating								
LLL																
LL																
SL																
L	 (R6035)	 (R6036)	 (R6035)	 (R6036)	 (R6037)	 (R6036)	 (R6037)	 (R6036)								
ML																
M																
MH																
H																
HH (Powerful)									H+70	H+50	H+50	H+50	H+90	H+90	H+50	H+50

= Within this range the airflow rate is automatically controlled when the FAN setting button is set to automatic.



**Note:**


1. Fan stops during defrost operation.
2. In time of thermostat OFF, the fan rotates at the following speed.  
Cooling : The fan keeps rotating at the set tap.  
Heating : The fan stops.

## Automatic Air Flow Control for Heating

On heating mode, the indoor fan speed will be regulated according to the indoor heat exchanger temperature and the difference between the room temperature and the required set point.

## Automatic Air Flow Control for Cooling

The following drawing explains the principle of fan speed control for cooling:

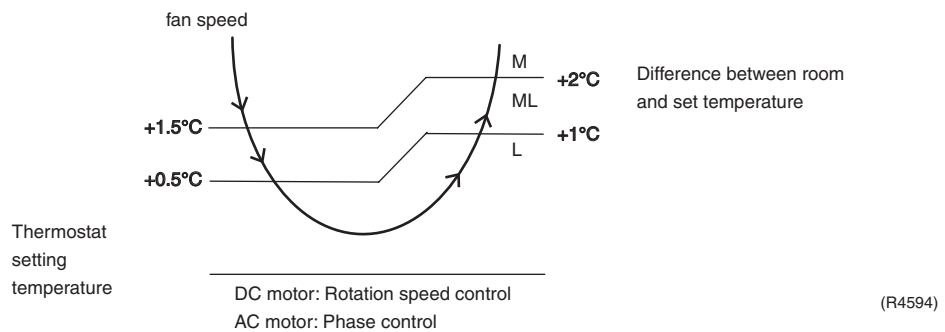

# 1.5 Programme Dry Function


Programme dry function removes humidity while preventing the room temperature from lowering.

Since the microcomputer controls both the temperature and air flow volume, the temperature adjustment and fan adjustment buttons are inoperable in this mode.

## In Case of Inverter Units

The microcomputer automatically sets the temperature and fan settings. The difference between the room temperature at startup and the temperature set by the microcomputer is divided into two zones. Then, the unit operates in the dry mode with an appropriate capacity for each zone to maintain the temperature and humidity at a comfortable level.

Room temperature at startup	Temperature (ON point) at which operation starts	Frequency switching point	Temperature difference for operation stop
24°C	Room temperature at startup	0.5°C	1.5°C
18°C	18°C		1.0°C
17°C		—	

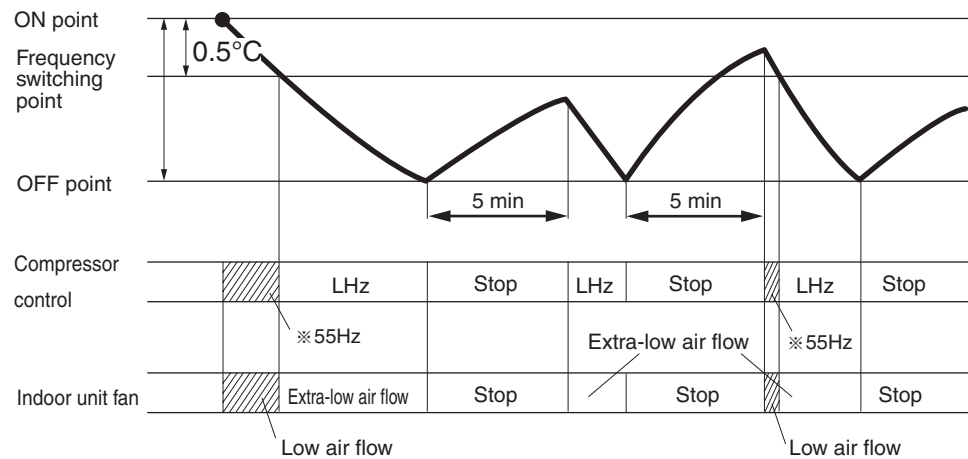

LHz indicates low frequency. Item marked with varies depending on models.

(R1359)

## 1.6 Automatic Operation


### Automatic Cooling / Heating Function (Heat Pump Only)

When the AUTO mode is selected with the remote control, the microcomputer automatically determines the operation mode from cooling and heating according to the room temperature and setting temperature at the time of the operation startup, and automatically operates in that mode.

The unit automatically switches the operation mode to cooling or heating to maintain the room temperature at the main unit setting temperature.

#### Detailed Explanation of the Function

1. remote control setting temperature is set as automatic cooling / heating setting temperature (18 to 30°C).
2. Main unit setting temperature equals remote control setting temperature plus correction value (correction value / cooling: 0 deg, heating: 0 deg.).
3. Operation ON / OFF point and mode switching point are as follows.
  - ① Heating → Cooling switching point:  
Room temperature  $\geq$  Main unit setting temperature +2.5 deg.
  - ② Cooling → Heating switching point:  
Room temperature  $<$  Main unit setting temperature -2.5 deg.
  - ③ Thermostat ON / OFF point is the same as the ON / OFF point of cooling or heating operation.
4. During initial operation  
Room temperature  $\geq$  remote control setting temperature: Cooling operation  
Room temperature  $<$  remote control setting temperature: Heating operation

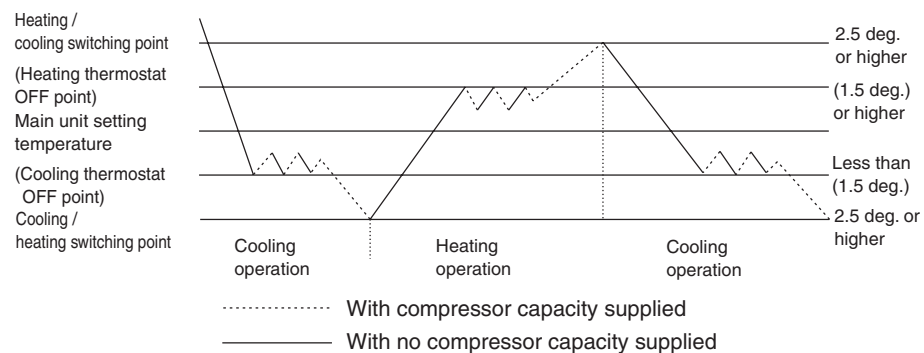

(R1360)

# 1.7 Thermostat Control

Thermostat control is based on the difference between the room temperature and the setpoint.

### Thermostat OFF Condition


- ◆ The temperature difference is in the zone A.

### Thermostat ON Condition

- ◆ The temperature difference is above the zone C after being in the zone A.
- ◆ The system resumes from defrost control in any zones except A.
- ◆ The operation turns on in any zones except A.
- ◆ The monitoring time has passed while the temperature difference is in the zone B.  
(Cooling / Dry : 10 minutes, Heating : 10 seconds)


### Cooling / Dry

- ◆ Wall Mounted Type

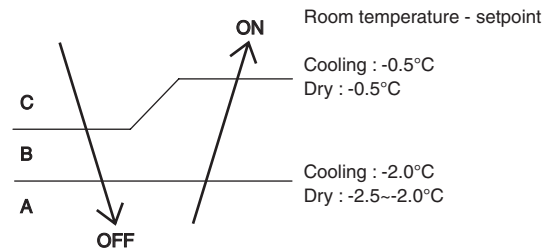

(R4668)


- ◆ Floor standing Type
- ◆ Floor/Ceiling suspended Type
- ◆ Duct Connected Type

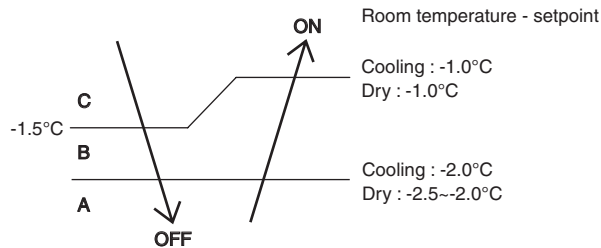

(R6032)


### Heating

- ◆ Wall Mounted Type

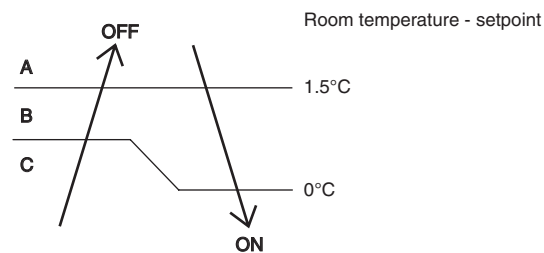

(R4669)

- ◆ Floor standing Type
- ◆ Floor/Ceiling suspended Type
- ◆ Duct Connected Type

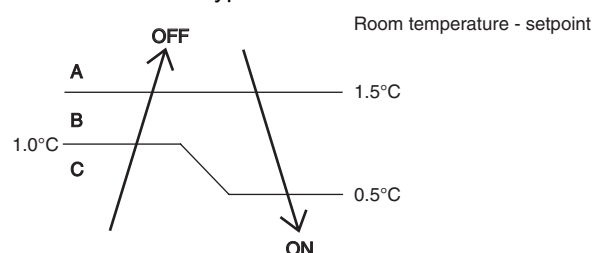

(R6033)


# 1.8 Night Set Mode

When the OFF timer is set, the Night Set circuit automatically activates. The Night Set circuit maintains the airflow setting made by users.

## The Night Set Circuit


The Night Set circuit continues heating or cooling the room at the set temperature for the first one hour, then automatically raises the temperature setting slightly in the case of cooling, or lowers it slightly in the case of heating, for economical operations. This prevents excessive heating in winter and excessive cooling in summer to ensure comfortable sleeping conditions, and also conserves electricity.

## Cooling Operation

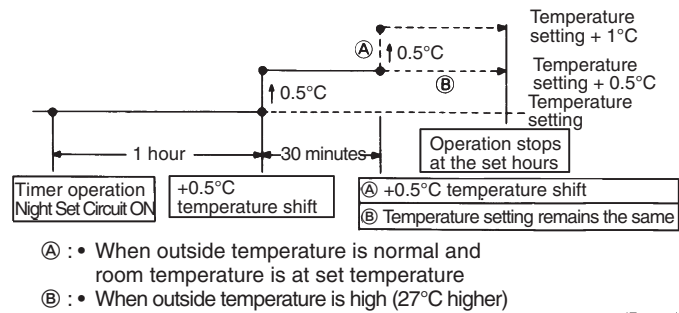


(R1361)

In case of FTK(X)S20-50D, ATXS20-50E, F(C)TXG20-50E, ATXG20-50E the temperature rises once.

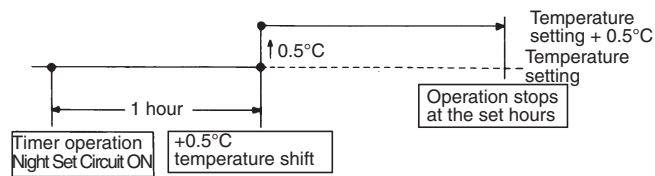

(R4421)

## Heating Operation

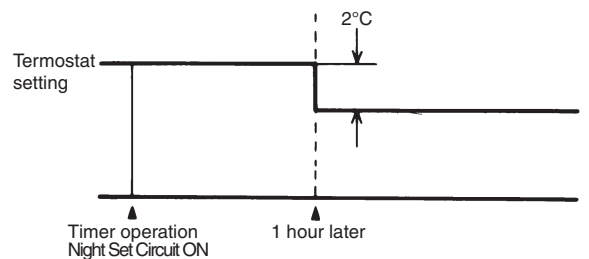

(R1362)

## 1.9 ECONO Mode

### Outline


#### FTK(X)S20-50D, ATXS20-50E

The "ECONO mode" reduces the maximum operating current and power consumption by approx. 30% during start up etc..

This mode is particularly convenient for energy-saving-oriented users. It is also a major bonus for those whose breaker capacities do not allow the use of multiple electrical devices and air conditioners.

It is easily activated from the infrared remote control by pushing the ECONO button.

- When this function is ON, the maximum capacity is also down. (Approx. 20%)
- This function can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled.
- This function and POWERFUL operation cannot be used at the same time. The latest command has the priority.

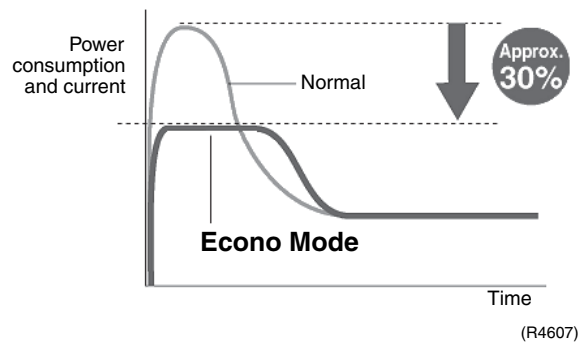

### Details

- ECONO mode can be activated while the unit is running. The remote control can send the ECONO command when the unit is in COOL, HEAT, DRY, or AUTO operation.
- When the ECONO command is valid, the upper limit of frequency is restricted.

Refer to page 105 for "ECONO-proof setting".




# 1.10 INTELLIGENT EYE (Wall Mounted Type Only)

This is the function that detects existence of humans in the room by a human motion sensor (INTELLIGENT EYE) and reduces the capacity when there is no human in the room in order to save electricity.


## Processing

### 1. Detection method by Intelligent Eye

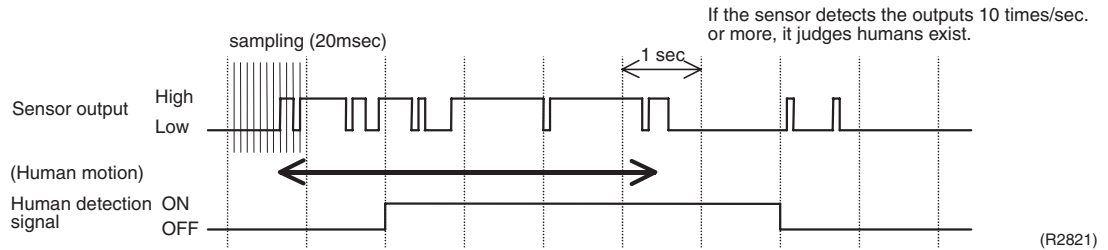

- This sensor detects human motion by receiving infrared rays and displays the pulse wave output.
- A microcomputer in an indoor unit carries out a sampling every 20 msec. and if it detects 10 cycles of the wave in one second in total (corresponding to  $20\text{msec.} \times 10 = 100\text{msec.}$ ), it judges human is in the room as the motion signal is ON.

### 2. The motions (for example: in cooling)

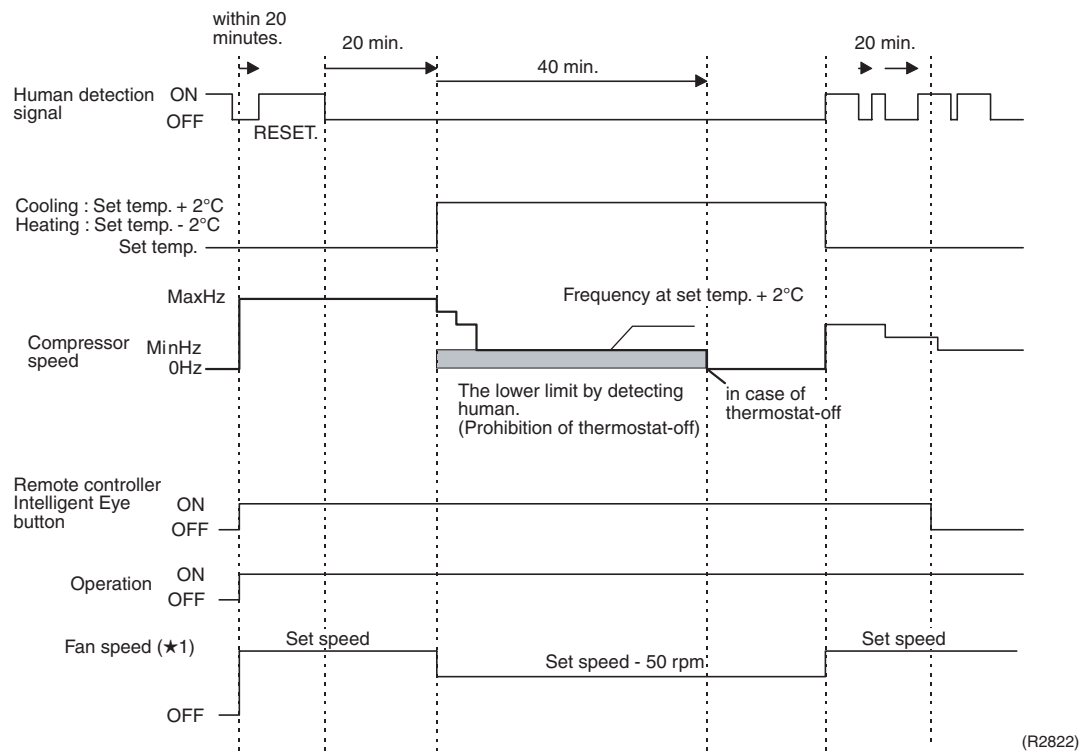

- When a microcomputer doesn't have a signal from the sensor in 20 minutes, it judges that nobody is in the room and operates the unit in temperature sifted 2°C from the set temperature. (Cooling : 2°C higher, Dry: 1°C higher and Auto : according to the operation mode at that time.)
- ★1 In case of Fan mode, the fan speed reduces by 50 rpm.

- Since the set temperature is shifted by 2°C higher for 40 minutes, compressor speed becomes low and can realize energy saving operation. But as thermostat is prone to be off by the fact that the set temperature has been shifted, the thermostat-off action is prohibited in 40 minutes so as to prevent this phenomena.  
After this 40 minutes, the prohibition of the thermostat-off is cancelled and it can realize the conditions to conduct thermostat-off depending on the room temperature. In or after this forty minutes, if the sensor detects human motion detection signal, it let the set temperature and the fan speed return to the original set point, keeping a normal operation.

---

**Others**

- The dry operation can't command the setting temperature with a remote control, but internally the set temperature is shifted by 1°C.

## 1.11 HOME LEAVE Operation

### Outline

In order to respond to the customer's need for immediate heating and cooling of the room after returning home or for house care, a measure to switch the temperature and air volume from that for normal time over to outing time by one touch is provided. (This function responds also to the need for keeping up with weak cooling or heating.)

This time, we seek for simplicity of operation by providing the special temperature and air volume control for outing to be set by the exclusive button.

The SkyAir indoor models also have the function.

### Detail of the Control

#### 1. Start of Function

The function starts when the [HOME LEAVE] button is pressed in cooling mode or heating mode (including stopping and powerful operation). If this button is pressed while the operation is stopped, the function becomes effective when the operation is started. If this button is pressed in powerful operation, the powerful operation is reset and this function becomes effective.

- The [HOME LEAVE] button is ineffective in dry mode and fan mode.


#### 2. Details of Function

A mark representing [HOME LEAVE] is indicated on the liquid crystal display of the remote control. The indoor unit is operated according to the set temperature and air volume for HOME LEAVE which were pre-set in the memory of the remote control.

The LED (Red) of indoor unit representing [HOME LEAVE] lights up. (It goes out when the operation is stopped.)

#### 3. End of Function

The function ends when the [HOME LEAVE] button is pressed again during [HOME LEAVE] operation or when the powerful operation button is pressed.

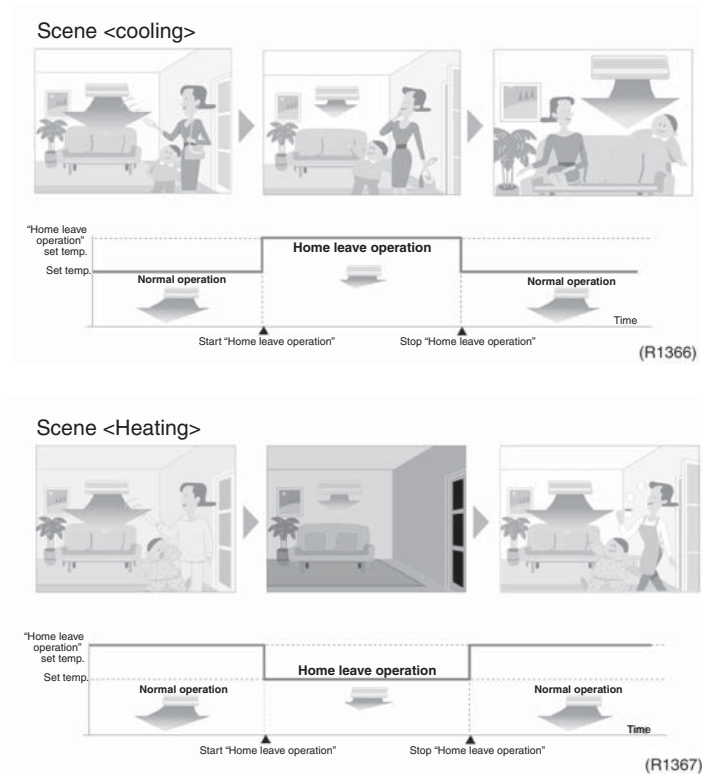

### Others

The set temperature and set air volume are memorized in the remote control. When the remote control is reset due to replacement of battery, it is necessary to set the temperature and air volume again for [HOME LEAVE].

## 1.12 Inverter POWERFUL Operation

### Outline

In order to exploit the cooling and heating capacity to full extent, operate the air conditioner by increasing the indoor fan rotating speed and the compressor frequency.


### Details of the Control

When POWERFUL button is pushed in each operation mode, the fan speed / setting temperature will be converted to the following states in a period of twenty minutes.

#### In case of FTK(X)S20-50D, ATXS20-50E

Operation mode	Fan speed	Target set temperature
COOL	H tap + 50 rpm	18°C
DRY	Dry rotating speed + 50 rpm	Normally targeted temperature in dry operation; Approx. -2°C
HEAT	H tap + 50 rpm	30°C
FAN	H tap + 50 rpm	—
AUTO	Same as cooling / heating in Powerful operation	The target is kept unchanged

Ex.) : Powerful operation in cooling mode.

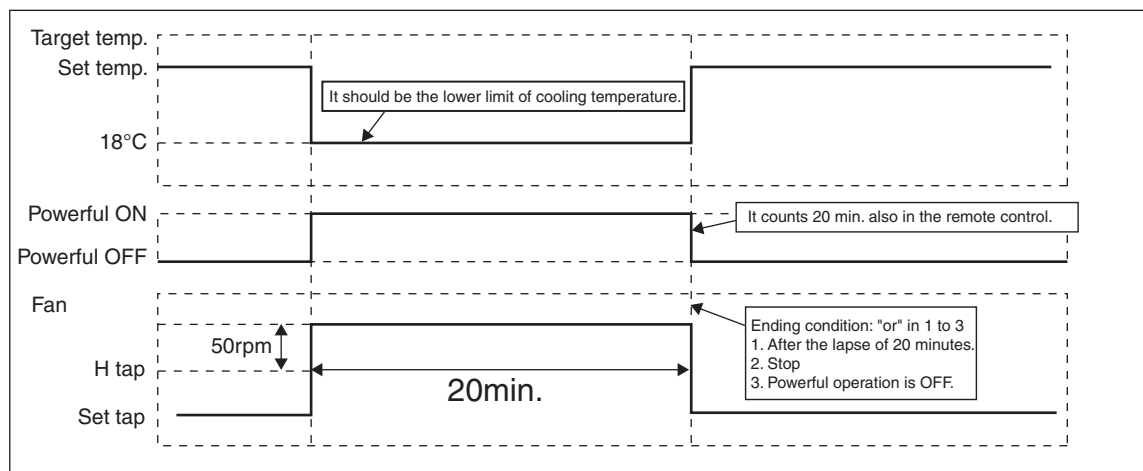

(R4560)



Refer to "Fan Speed control" on page 70 for detail.


## 1.13 Other Functions

### 1.13.1 Hot Start Function

#### Heat Pump Only

In order to prevent the cold air blast that normally comes when heating is started, the temperature of the heat exchanger of the indoor unit is detected, and either the air flow is stopped or is made very weak thereby carrying out comfortable heating of the room.

\*The cold air blast is also prevented using a similar control when the defrosting operation is started or when the thermostat gets turned ON.

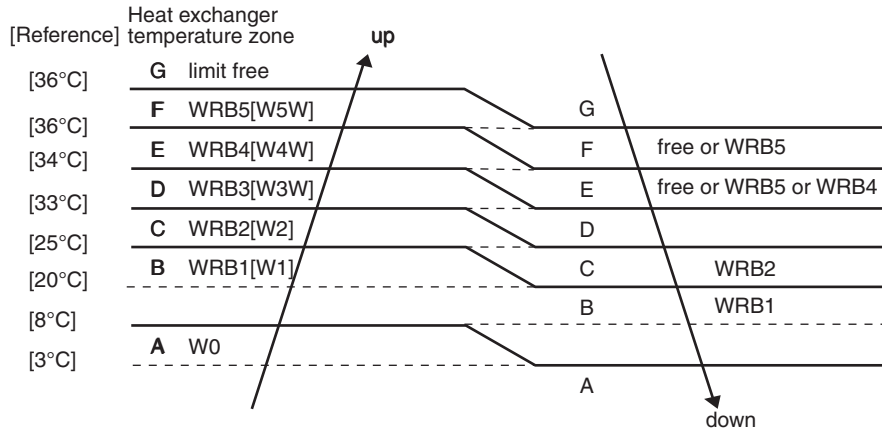

### 1.13.2 Signal Receiving Sign


When the indoor unit receives a signal from the remote control, the unit emits a signal receiving sound.

### 1.13.3 ON/OFF Button on Indoor Unit

An ON/OFF button is provided on the front panel of the unit. Use this button when the remote control is missing or if its battery has run out.

Every press of the button switches from ON to OFF or from OFF to ON.

**In case of FTK(X)S20-50D, ATXS20-50E**

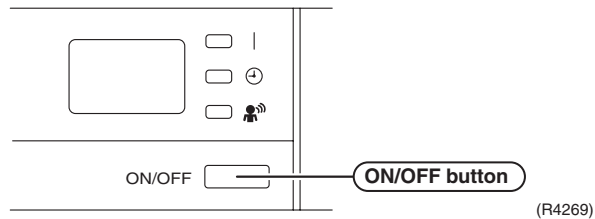

- Push this button once to start operation. Push once again to stop it.
- This button is useful when the remote control is missing.
- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
Cooling Only	COOL	22°C	AUTO
Heat Pump	AUTO	25°C	AUTO

- In the case of multi system operation, there are times when the unit does not activate with this button.

### 1.13.4 Titanium Apatite Photocatalytic Air-Purifying Filter

This filter combines the Air Purifying Filter and Titanium Apatite Photocatalytic Deodorizing Filter in a single highly effective unit. The filter traps microscopic particles, decompose odours and even deactivates bacteria and viruses. It lasts for three years without replacement if washed about once every six months.

### 1.13.5 Photocatalytic Deodorizing Filter

Photocatalytic Deodorizing Filter demonstrates powerful oxidation characteristics when subjected to harmless ultraviolet light. Photocatalytic deodorizing power is recovered simply by exposing the filter to the sun for 6 hours once every 6 months.

### 1.13.6 Air-Purifying Filter

A double structure made up of a bacteriostatic filter and an Air-Purifying Filter traps dust, mildew, mites, tobacco smoke, and allergy-causing pollen. Replace the Air-Purifying Filter once every 3 months.

### 1.13.7 Air Purifying Filter with Photocatalytic Deodorizing Function

This filter incorporates the benefits the Air Purifying Filter and Photocatalytic Deodorizing Filter in a single unit. Combining the two filters in this way increases the active surface area of the new filter. This larger surface area allows the filter to effectively trap microscopic particles, decompose odours and deactivate bacteria and viruses even for the high volume of air required to air-condition large living rooms. The filter can be used for approximately 3 years if periodic maintenance is performed.

### 1.13.8 Mold Proof Air Filter

The filter net is treated with mold resisting agent TBZ (harmless, colorless, and odorless). Due to this treatment, the amount of mold growth is much smaller than that of normal filters.

### 1.13.9 Self-Diagnosis Digital Display

The microcomputer continuously monitors main operating conditions of the indoor unit, outdoor unit and the entire system. When an abnormality occur, the LCD remote control displays error code. These indications allow prompt maintenance operations.


### 1.13.10 Auto-restart Function

Even if a power failure (including one for just a moment) occurs during the operation, the operation restarts in the condition before power failure automatically when power is restored. (Note) It takes 3 minutes to restart the operation because the 3 minute stand-by function is activated.


## 2. Function of Main Structural Parts

### 2.1 Main Structural Parts

#### Heat Pump Model

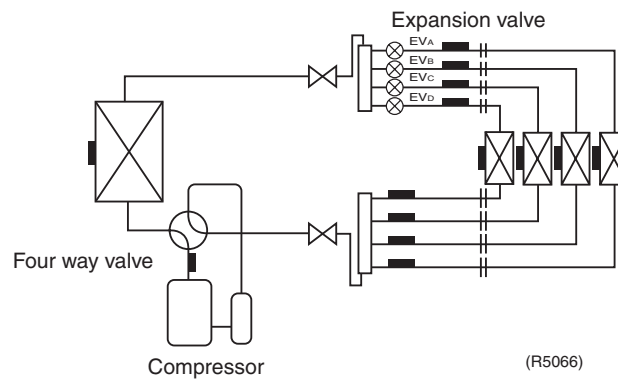

#### Cooling Only Model

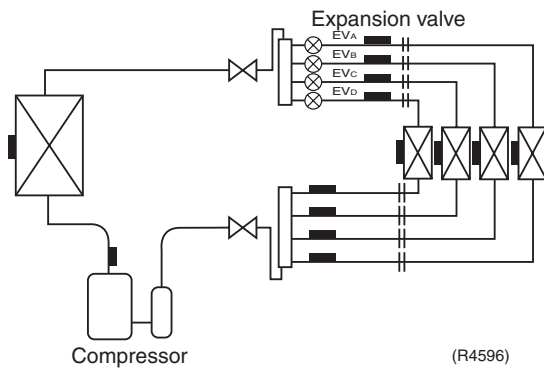

**i Note:** Expansion Valve : In Case of 2 port model.....EVA-B, 3 port model.....EVA-C, 4 port model.....EVA-D

## 2.2 Function of Thermistor

### 2.2.1 Heat Pump Model

---

#### A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge temperature. The system sets a target discharge temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The outdoor heat exchanger thermistor is used for detecting disconnection of the discharge thermistor when cooling.  
When the discharge pipe temperature becomes lower than the outdoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.

---

#### B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used for controlling temperature of the discharge pipe. If the temperature of discharge pipe (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency drops or the operation halts.
2. The discharge pipe thermistor is used for detecting disconnection of the discharge thermistor.

---

#### C Gas Pipe Thermistor

1. In cooling, the gas pipe thermistors are used for gas pipe isothermal control. The system controls electronic expansion valve opening so that gas pipe temperature in each room becomes equal.



---

**D Indoor Heat Exchanger Thermistor**


1. The indoor heat exchanger thermistors are used for controlling target discharge temperature.  
The system sets a target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The indoor heat exchanger thermistors are used for preventing freezing.  
During the cooling operation, if the temperature drops abnormally, the operating frequency becomes lower, then the operation halts.
3. The indoor heat exchanger thermistors are used for anti-icing control.  
During the cooling operation, if the heat exchanger temperature in the room where operation is halted becomes  $-1^{\circ}\text{C}$ , or if the room temperature - heat exchanger temperature in the room where operation is halted becomes  $\geq 10^{\circ}\text{C}$ , it is assumed as icing.
4. During heating: the indoor heat exchanger thermistors are used for detecting disconnection of the discharge pipe thermistor.  
When the discharge pipe temperature becomes lower than the indoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
5. The indoor heat exchanger thermistors are used for detecting incorrect wiring.  
During checking incorrect wiring, refrigerant is passed in order from the port A to detect a heat exchanger temperature, and then wiring and piping will be checked.
6. The indoor heat exchanger thermistors are used for sub-cooling control.  
The actual sub-cooling is calculated from the liquid pipe temperature and the heat exchanger temperature. The system controls the electronic expansion valve opening to reach the target sub-cooling.
7. The indoor heat exchanger thermistors are used for heating isothermal control of heat exchanger.  
When heating: if the difference in temperature of each room is greater than  $8^{\circ}\text{C}$ , the electronic expansion valve of the room in which the temperature is higher is opened.

---

**E Liquid Pipe Thermistor**

1. In heating, the liquid pipe thermistors are used for sub-cooling control.  
The system calculates the actual sub-cooling with the liquid pipe temperature and the maximum heat exchanger temperature among all rooms, and controls the opening of the electronic expansion valve to reach the target sub-cooling.

## 2.2.2 Cooling Only Model

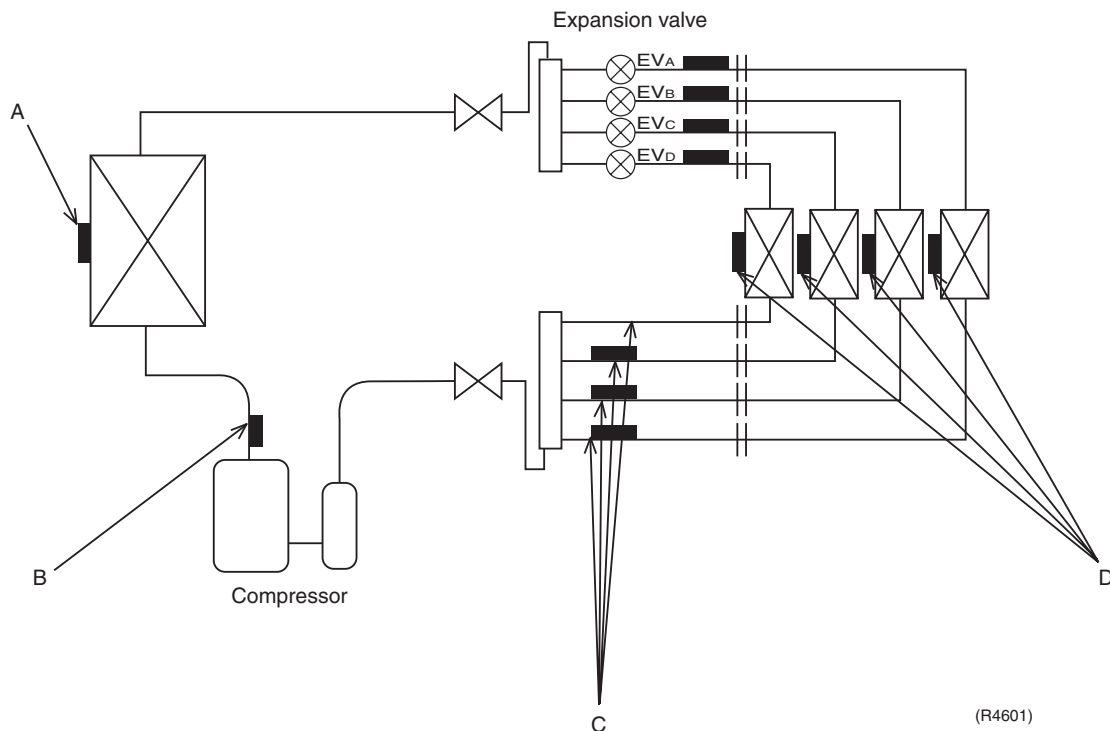

### A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge temperature. The system sets a target discharge temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The outdoor heat exchanger thermistor is used for detecting disconnection of the discharge thermistor when cooling. When the discharge pipe temperature becomes lower than the outdoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.

### B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used for controlling temperature of the discharge pipe. If the temperature of discharge pipe (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency drops or the operation halts.
2. The discharge pipe thermistor is used for detecting disconnection of the discharge thermistor.

### C Gas Pipe Thermistor

1. In cooling, the gas pipe thermistors are used for gas pipe isothermal control. The system controls electronic expansion valve opening so that gas pipe temperature in each room becomes equal.

**D Indoor Heat Exchanger Thermistor**

1. The indoor heat exchanger thermistors are used for controlling target discharge temperature.  
The system sets a target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The indoor heat exchanger thermistors are used for preventing freezing.  
During the cooling operation, if the temperature drops abnormally, the operating frequency becomes lower, then the operation halts.
3. The indoor heat exchanger thermistors are used for anti-icing control.  
During the cooling operation, if the heat exchanger temperature in the room where operation is halted becomes  $-1^{\circ}\text{C}$ , or if the room temperature - heat exchanger temperature in the room where operation is halted becomes  $\geq 10^{\circ}\text{C}$ , it is assumed as icing.
4. The indoor heat exchanger thermistors are used for detecting incorrect wiring.  
During checking incorrect wiring, refrigerant is passed in order from the port A to detect a heat exchanger temperature, and then wiring and piping will be checked.

## 3. Control Specification

### 3.1 Mode Hierarchy


#### Outline

There are two modes; the mode selected in user's place (normal air conditioning mode) and forced operation mode for installation and providing service.

#### Detail

##### 1. For heat pump model


There are following modes; stop, cooling (includes drying), heating (include defrosting)

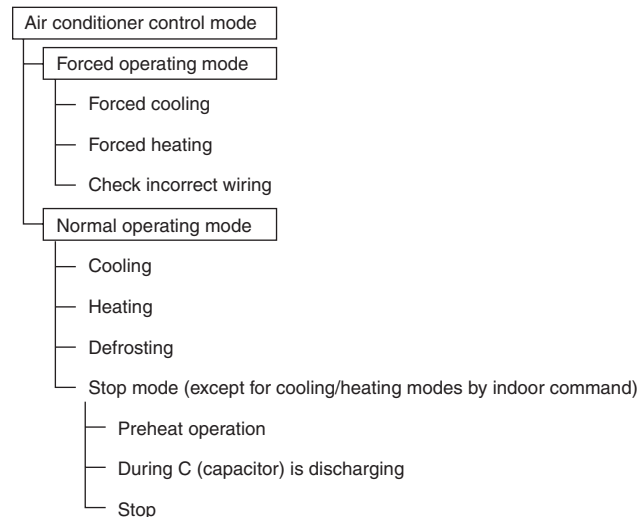

(R1373)

##### 2. For cooling only model

There are following models; stop and cooling (including drying).

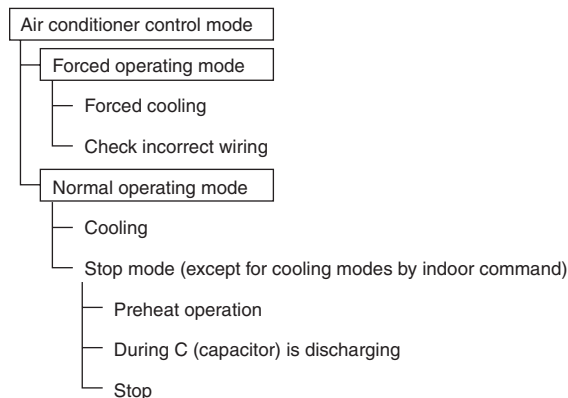

(R1374)



#### Note:

Unless specified otherwise, an indoor dry operation command must be regarded as cooling operation. An indoor fan operation command cannot be made in a multiple indoor unit. (A forced fan command to the indoor unit from the outdoor unit must be made during forced operation.)

#### Determine Operating Mode

Judge the operating mode command set by each room in accordance with the instructing procedure, and determine the operating mode of the system.

The following procedure will be taken as the modes conflict with each other.

\*1. The system will follow the mode determined first. (First-push, first-set)

\*2. For the rooms set with different mode, select stand-by mode. (Operation lamp flashes)


## 3.2 Frequency Control

### Outline

Frequency that corresponds to each room's capacity will be determined according to the difference in the temperature of each room and the temperature that is set by the remote control.

The function is explained as follows.

1. How to determine frequency.
2. Frequency command from an indoor unit. (The difference between a room temperature and the temperature set by the remote control.)
3. Frequency command from an indoor unit. (The ranked capacity of the operating room).
4. Frequency initial setting.
5. PI control.

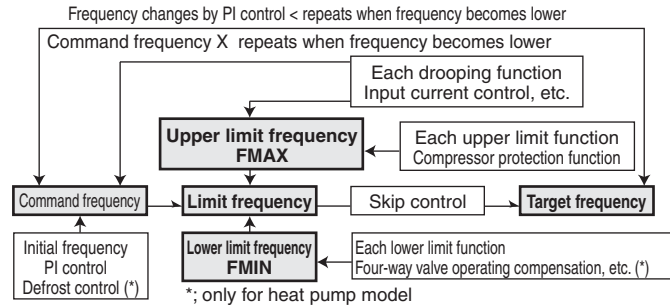

(R1375)

### Detail

#### How to Determine Frequency

The compressor's frequency will finally be determined by taking the following steps.

#### For Heat Pump Model

##### 1. Determine command frequency

- ◆ Command frequency will be determined in the following order of priority.
  - 1.1 Limiting frequency by drooping function
    - ◆ Input current, discharge pipes, low Hz high pressure limit, peak cutting, freeze-up protection, dew prevention, fin thermistor temperature.
  - 1.2 Limiting defrost control time
  - 1.3 Forced cooling / heating
  - 1.4 Indoor frequency command

##### 2. Determine upper limit frequency

- ◆ Set a minimum value as an upper limit frequency among the frequency upper limits of the following functions:  
Compressor protection, input current, discharge pipes, Low Hz high pressure, peak cutting, freeze-up protection, defrost.

##### 3. Determine lower limit frequency

- ◆ Set a maximum value as a lower limit frequency among the frequency lower limits of the following functions:  
Four way valve operating compensation, draft prevention, pressure difference upkeep.

##### 4. Determine prohibited frequency

- ◆ There is a certain prohibited frequency such as a power supply frequency.

#### For Cooling Only Model

##### 1. Determine command frequency

- ◆ Command frequency will be determined in the following order of priority.
  - 1.1 Limiting frequency by drooping function  
Input current, discharge pipes, freeze-up protection, dew prevention, fin thermistor temperature.
  - 1.2 Indoor frequency command

**2. Determine upper limit frequency**

- ◆ Set a minimum value as an upper limit frequency among the frequency upper limits of the following functions:  
Compressor protection, input current, discharge pipes, freeze-up protection, dew prevention, fin thermistor temperature.

**3. Determine lower limit frequency**

- ◆ Set a maximum value as an lower limit frequency among the frequency lower limits of the following functions:  
Pressure difference upkeep.

**4. Determine prohibited frequency**

- ◆ There is a certain prohibited frequency such as a power supply frequency.

**Indoor Frequency Command ( $\Delta D$  signal)**

The difference between a room temperature and the temperature set by the remote control will be taken as the " $\Delta D$  signal" and is used for frequency command.

Temperature difference	$\Delta D$ signal	Temperature difference	$\Delta D$ signal	Temperature difference	$\Delta D$ signal	Temperature difference	$\Delta D$ signal
0	*Th OFF	2.0	4	4.0	8	6.0	C
0.5	1	2.5	5	4.5	9	6.5	D
1.0	2	3.0	6	5.0	A	7.0	E
1.5	3	3.5	7	5.5	B	7.5	F

\*Th OFF = Thermostat OFF

**Indoor Unit Capacity (S value)**

The capacity of the indoor unit is a "S" value and is used for frequency command.

Capacity	S value	Capacity	S value
2.5 kW	25	5.0 kW	50
3.5 kW	35	6.0 kW	60

**Frequency Initial Setting****<Outline>**

When starting the compressor, or when conditions are varied due to the change of the operating room, the frequency must be initialized according to the total of a maximum  $\Delta D$  value of each room and a total value of Q ( $\Sigma Q$ ) of the operating room (the room in which the thermostat is set to ON).  
Q value: Indoor unit output determined from indoor unit volume, air flow rate and other factors.

**PI Control (Determine Frequency Up / Down by  $\Delta D$  Signal)****1. P control**

Calculate a total of the  $\Delta D$  value in each sampling time (20 seconds), and adjust the frequency according to its difference from the frequency previously calculated.

**2. I control**

If the operating frequency is not change more than a certain fixed time, adjust the frequency up and down according to the  $\Sigma \Delta D$  value, obtaining the fixed  $\Sigma \Delta D$  value.

When the  $\Sigma \Delta D$  value is small...lower the frequency.

When the  $\Sigma \Delta D$  value is large...increase the frequency.

**3. Limit of frequency variation width**

When the difference between input current and input current drooping value is less than 1.5 A, the frequency increase width must be limited.

**4. Frequency management when other controls are functioning**

- ◆ When each frequency is drooping;  
Frequency management is carried out only when the frequency droops.
- ◆ For limiting lower limit  
Frequency management is carried out only when the frequency rises.

**5. Upper and lower limit of frequency by PI control**

The frequency upper and lower limits are set depending on the total of S values of a room. When low noise commands come from the indoor unit more than one room or when outdoor unit low noise or quiet commands come from all the rooms, the upper limit frequency must be lowered than the usual setting.

## 3.3 Controls at Mode Changing / Start-up

### 3.3.1 Preheating Operation

**Outline** Operate the inverter in the open phase operation with the conditions including the preheating command from the indoor, the outdoor air temperature and discharge pipe temperature. The power consumption of preheating operation is 35W. (The total power consumption depends on the number of the indoor units.)

**Detail**

**Preheating ON Condition**

- ◆ When outdoor air temperature is below 10.5°C and discharge pipe temperature is below 10.5°C, inverter in open phase operation starts.

**OFF Condition**

- ◆ When outdoor air temperature is higher than 12°C or discharge pipe temperature is higher than 12°C, inverter in open phase operation stops.

### 3.3.2 Four Way Valve Switching

**Outline of heating operation**

**Heat Pump Only**

During the heating operation current must be conducted and during cooling and defrosting current must not be conducted. In order to eliminate the switching sound (as the four way valve coil switches from ON to OFF) when the heating is stopped, the delay switch of the four way valve must be carried out after the operation stopped.

**Detail**

The OFF delay of four way valve  
Energize the coil for 150 sec after unit operation is stopped.

### 3.3.3 Four Way Valve Operation Compensation

**Outline**

**Heat Pump Only**

At the beginning of the operation as the four way valve is switched, acquire the differential pressure required for activating the four way valve by having output the operating frequency, which is more than a certain fixed frequency, for a certain fixed time. The lower limit frequency is restricted to 48Hz for 70 seconds on both cooling and heating, except under the condition of heating overload (outdoor temperature  $\geq 15$  degree).

**Detail**

**Starting Conditions**

1. When starting compressor for heating.
  2. When the operating mode changes from the previous time.
  3. When starting compressor for rushing defrosting or resetting.
  4. When starting compressor for the first time after the reset with the power is ON.
- Set the lower limit frequency to 48 (model by model) Hz for 70 seconds with any conditions 1 through 4 above.


### 3.3.4 3 Minutes Stand-by

Prohibit to turn ON the compressor for 3 minutes after turning it off. (Except when defrosting. (Only for Heat Pump Model).)

### 3.3.5 Compressor Protection Function

When turning the compressor from OFF to ON, the upper limit of frequency must be set as follows. (The function must not be used when defrosting (only for heat pump model).)

	2YC36
FCG 3	85
FCG 2	70
FCG 1	55

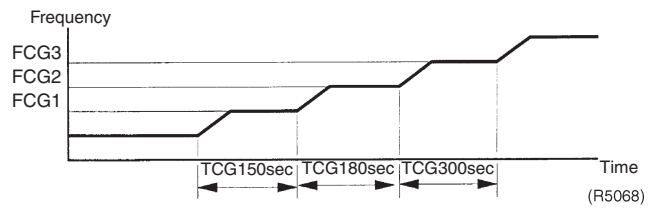




### 3.4 Discharge Pipe Control

**Outline**

The discharge pipe temperature is used as the compressor's internal temperature. If the discharge pipe temperature rises above a certain level, the operating frequency upper limit is set to keep this temperature from going up further.

**Detail**

**Zones (typical value)**

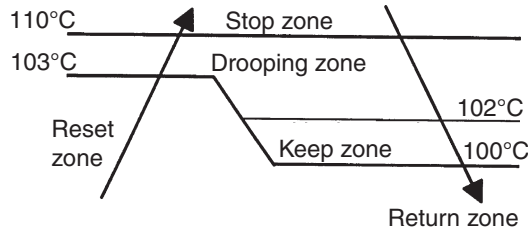

(R5069)

**Management within the Zone**

Zone	Control contents
Stop zone	When the temperature reaches the stop zone, stop the compressor and correct abnormality.
Drooping zone	Start the timer, and the frequency will be drooping.
Keep zone	Keep the frequency upper limit.
Return / Reset zone	Cancel the frequency upper limit.


### 3.5 Input Current Control

**Outline**

Detect an input current by the CT during the compressor is running, and set the frequency upper limit from such input current. In case of heat pump model, this control is the upper limit control function of the frequency which takes priority of the lower limit of four way valve activating compensation.

**Detail**

The frequency control will be made within the following zones.

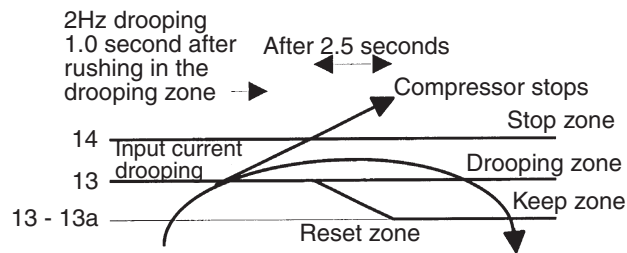

(R4598)

When a “stop current” continues for 2.5 seconds after rushing on the stop zone, the compressor operation stops.

If a “drooping current” is continues for 1.0 second after rushing on the drooping zone, the frequency will be 2 Hz drooping.

Repeating the above drooping continues until the current rushes on the drooping zone without change. In the unchanged zone, the frequency limit will remain.

In the return / reset zone, the frequency limit will be cancelled.


**Limitation of current drooping and stop value according to the outdoor air temperature**

1. In case the operation mode is cooling
  - ◆ The current droops when outdoor air temperature becomes higher than a certain level (model by model).
2. In case the operation mode is heating (only for heat pump model)
  - ◆ The current droops when outdoor air temperature becomes higher than a certain level (model by model).

### 3.6 Freeze-up Protection Control

**Outline** During cooling operation, the signals being sent from the indoor unit allow the operating frequency limitation and then prevent freezing of the indoor heat exchanger.

**Detail** **Conditions for Start Controlling**  
 Judge the controlling start with the indoor heat exchanger temperature after 2 sec from operation start and after 30 sec from changing number of operation room.  
**Control in Each Zone**  
 The zone is determined by the commands from indoor units.  
 In drooping zone, the frequency decreases 2Hz/2 seconds.

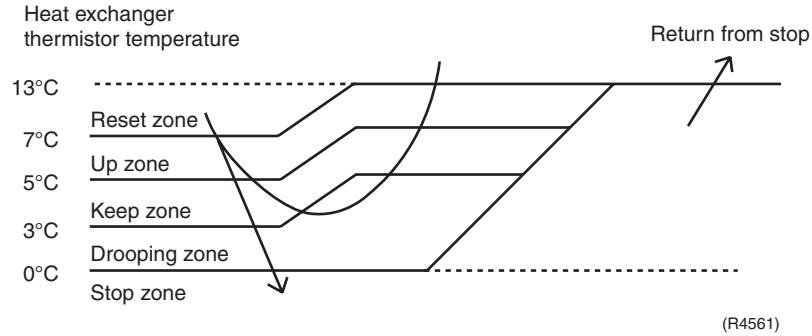


### 3.7 Heating Peak-cut Control

**Outline** **Heat Pump Only**  
 During heating operation, the signals being sent from the indoor unit allow the operating frequency limitation and prevent abnormal high pressure. (The signal from the indoor unit must be divided as follows.)

**Detail** **Conditions for Start Controlling**  
 Judge the controlling start with the indoor heat exchanger temperature after 2 min from operation start and after A sec from changing number of operation room.

	A
When increase	30
When decrease	2

**Control in Each Zone**  
 The maximum value of heat exchange intermediate temperature of each indoor unit controls the following (excluding stopped rooms).  
 In drooping zone, the frequency decreases 6Hz/40 seconds.  
 In up zone, the frequency increases 2Hz/60 seconds.

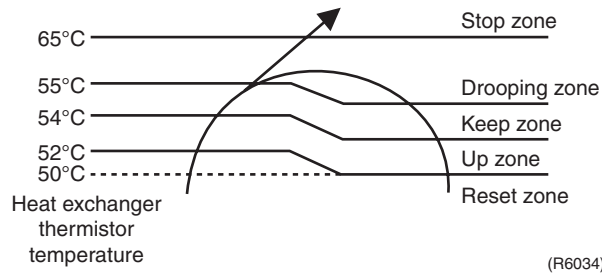

## 3.8 Fan Control

---

### Outline

Fan control is carried out with following functions.

1. Fan ON control for electric component cooling fan
  2. Fan control when defrosting
  3. Fan OFF delay when stopped
  4. ON/OFF control when cooling operation
  5. Fan control when the number of heating rooms decreases
  6. Fan control when forced operation
  7. Fan control in indoor / outdoor silent operation
  8. Fan control for pressure difference upkeep
- 

### Detail

#### Fan OFF Control when Stopped

- ◆ Fan OFF delay for 60 seconds must be made when the compressor is stopped.

#### Fan control when the number of heating room decreases (Only for Heat Pump Model)

When the outdoor air temperature is more than 10°C, the fan must be turned OFF for 30 seconds.

#### Tap Control

On cooling, the fan tap changes L ↔ M when the outdoor air temperature is 8°C, and M ↔ H at 37°C.

On heating, the fan tap changes L ↔ M when the outdoor air temperature is 12°C, and M ↔ H at 4°C.

For SkyAir models, the fan starts when the outdoor air temperature is more than 37°C on cooling, or less than -4°C on heating, or when 60 seconds have elapsed.

#### Tap Control in Indoor Unit Silent Operation

1. When Cooling Operation  
When the outdoor air temperature is less than 37°C, the fan tap must be set to L.
2. When Heating Operation  
When the outdoor air temperature is more than 4°C, the fan tap must be turned to L (only for heat pump model).

## 3.9 Liquid Compression Protection Function 2

---

### Outline

In order to obtain the dependability of the compressor, the compressor must be stopped according to the conditions of the temperature of the outdoor air and outdoor heat exchanger.

---

### Detail

#### Heat Pump Model

- ◆ Operation stop depending on the outdoor air temperature

Compressor operation turns OFF under the conditions that the system is in cooling operation and outdoor air temperature is below -10°C.

#### Cooling Only Model

- ◆ Operation stops depending on the outdoor air temperature.

Compressor operation turns OFF under the condition that outdoor air temperature is below -10°C.

### 3.10 Defrost Control

**Outline**

**Heat Pump Only**

Defrosting is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than its fixed value when finishing.

**Detail**

**Conditions for Starting Defrost**

Under the conditions that the system is in heating operation, 6 minutes after the compressor is started and more than 38 minutes of accumulated time pass since the start of the operation or ending the defrosting.

When the outdoor air temperature and the outdoor heat exchanger temperature meet the following condition for 60 seconds, the defrost control starts.

$$A < -(19/256) \times B + (45/64) \times C$$

A: outdoor heat exchanger temperature

B: output frequency

C: outdoor air temperature

**Conditions for Canceling Defrost**


The target heat exchanger temperature as the canceling condition is selected in the range of  $4^{\circ}\text{C} \leq T_e \leq 12^{\circ}\text{C}$  according to the air temperature as the following formula.

$$\text{The target heat exchanger temperature} = -(45/64) \times (\text{ambient temperature}) + 14$$

The defrost operation surely operates in 120 seconds after the start. (A→B)

After then the defrost operation stops at the following conditions.

1. When the heat exchanger temperature reaches the target heat exchanger temperature. (B→C)
2. When 650 seconds have passed after the start even if the heat exchanger temperature does not reaches the target heat exchanger temperature. (C)

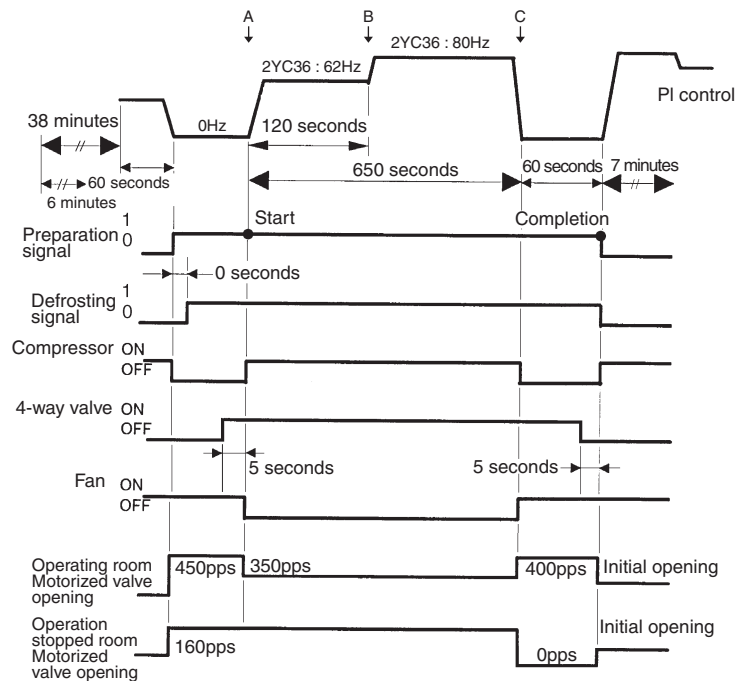

(R5070)

## 3.11 Electronic Expansion Valve Control

---

### Outline

The following items are included in the electronic expansion valve control.

#### **Electronic expansion valve is fully closed**

1. Electronic expansion valve is fully closed when turning on the power.
2. Pressure equalizing control

#### **Room Distribution Control**

1. Gas pipe isothermal control (distribution control in cooling)
2. SC control (only for heat pump model, distribution control in heating)

#### **Open Control**

1. Electronic expansion valve control when starting operation
2. Control when frequency changed
3. Control for defrosting (only for heat pump model)
4. Oil recover control
5. Control when a discharge pipe temperature is abnormally high
6. Control when the discharge pipe thermistor is disconnected
7. Control for indoor unit freeze-up protection

#### **Feedback Control**

1. Discharge pipe temperature control

#### **Distribution control for each room**

1. Liquid pipe temperature control (with all ports connected and all rooms being air-conditioned)
2. Liquid pipe temperature control for stopped rooms
3. Dew prevention function for indoor rotor

Detail

The followings are the examples of control which function in each mode by the electronic expansion valve control.

Operation pattern		Gas pipe isothermal control	SC control (only for heat pump model)	Control when frequency changed	Control for abnormally high discharge pipe temperature	Oil recovery control	Indoor freeze-up protection control	Liquid pipe temperature control	Liquid pipe temperature control for stopped rooms	Dew prevention control for indoor rotor
When power is turned ON	Fully closed when power is turned ON	×	×	×	×	×	×	×	×	×
Cooling, 1 room operation	Open control when starting	×	×	×	○	○	○	×	×	×
	(Control of target discharge pipe temperature)	×	×	○	○	○	○	×	×	○
Cooling, 2 rooms operation to Cooling, 4 rooms operation	Control when the operating room is changed	×	×	×	○	○	○	×	×	○
	(Control of target discharge pipe temperature)	○	×	○	○	○	○	×	×	○
Stop	Pressure equalizing control	×	×	×	×	×	×	×	×	×
Heating, 1 room operation (only for heat pump model)	Open control when starting	×	×	×	○	×	×	×	×	×
	(Control of target discharge pipe temperature)	×	○ All rooms ×	○	○	×	×	○ All rooms ○	○ All rooms ×	×
Heating, 2 rooms operation to Heating, 4 rooms operation (only for heat pump model)	Control when the operating room is changed	×	×	×	○	×	×	×	×	×
	(Control of target discharge pipe temperature)	×	○ All rooms ×	○	○	×	×	○ All rooms ○	○ All rooms ×	×
Stop	(Defrost control FD=1) (only for heat pump model)	×	×	×	×	×	×	×	×	×
	Pressure equalizing control	×	×	×	×	×	×	×	×	×
Heating operation (only for heat pump model)	Open control when starting	×	×	×	○	×	×	×	×	×
	Control of discharge pipe thermistor disconnection	×	○ All rooms ×	×	×	×	×	○ All rooms ○	○ All rooms ×	×
Stop	Pressure equalizing control	×	×	×	×	×	×	×	×	×

(R3056)

### 3.11.1 Fully Closing with Power ON

Initialize the electronic expansion valve when turning on the power, set the opening position and develop pressure equalizing.

The electronic expansion valves are closed further with 720 pulse, and then opened with 150 pulse.

### 3.11.2 Pressure Equalization Control

When the compressor is stopped, open and close the electronic expansion valve and develop pressure equalization.

### 3.11.3 Opening Limit

---

**Outline** Limit a maximum and minimum opening of the electronic expansion valve in the operating room.

---

**Detail**

- ◆ A maximum electronic expansion valve opening in the operating room: 450 pulses
  - ◆ A minimum electronic expansion valve opening in the operating room: 75 pulses
- The electronic expansion valve is fully closed in the room where cooling is stopped and is opened with fixed opening during defrosting.

### 3.11.4 Gas Pipe Isothermal Control During Cooling

When the units are operating in multiple rooms, detect the gas piping temperature and correct the electronic expansion valve opening so that the temperature of the gas pipe in each room becomes identical.

- ◆ When the gas pipe temperature > the average gas pipe temperature,
  - open the electronic expansion valve in that room
- ◆ When the gas pipe temperature < the average gas pipe temperature,
  - close the electronic expansion valve in that room

The temperatures are monitored every 40 seconds.

### 3.11.5 SC Control

**Outline**

**Heat Pump Only**

Detect the temperature of liquid pipe and heat exchanger of the rooms and compensate the electronic expansion valve opening so that the SC of each room becomes the target SC.

- ◆ When the actual SC is > target SC, open the electronic expansion valve of the room.
  - ◆ When the actual SC is < target SC, close the electronic expansion valve of the room.
- 

**Detail**

**Start Functioning Conditions**

After finishing the open control (660 seconds after the beginning of the operation), control all the electronic expansion valve in the operating room.

**Determine Electronic Expansion Valve Opening**

Adjust the electronic expansion valve so that the temperature difference between the maximum heat exchanger temperature of connected room and the temperature of liquid pipe thermistor becomes constant.

### 3.11.6 Starting Operation Control / Changing Operation Room

Control the electronic expansion valve opening when the system is starting or the operating room is changed, and prevent the system to be super heated or moistened.

### 3.11.7 Disconnection of the Discharge Pipe Thermistor

#### Outline

Detect a disconnected discharge pipe thermistor by comparing the discharge pipe temperature with the condensation temperature. If any is disconnected, open the electronic expansion valve according to the outdoor air temperature and the operating frequency and operate for a specified time, and then stop.

After 3 minutes of waiting, restart the unit and check if any is disconnected. If any is disconnected stop the system after operating for a specified time. If the disconnection is detected 4 times in succession, then the system will be down.

#### Detail

##### Detect Disconnection

If a 630-second timer for open control becomes over, and a 9-minute timer for the compressor operation continuation is not counting time, the following adjustment must be made.

1. When the operation mode is cooling  
When the discharge pipe temperature is lower than the outdoor heat exchanger temperature, the discharge pipe thermistor disconnection must be ascertained.
2. When the operation mode is heating (only for heat pump model)  
When the discharge pipe temperature is lower than the max temperature of operating room heat exchanger, the discharge pipe thermistor disconnection must be ascertained.

##### Adjustment when the thermistor is disconnected

When compressor stop repeats specified time, the system should be down.

### 3.11.8 Control when frequency is changed

When the target pipe temperature control is active, if the target frequency is changed for a specified value in a certain time period, cancel the target discharge pipe temperature control and change the opening of the target electronic expansion valve according to the shift.

### 3.11.9 High Temperature of the Discharge Pipe

When the compressor is operating, if the discharge pipe temperature exceeds a certain value, open the electronic expansion valve and remove the refrigerant to the low pressure side and lower discharge temperature.

### 3.11.10 Oil Recovery Function

#### Outline


The electronic expansion valve opening in the cooling stopped room must be set as to open for a certain time at a specified interval so that the oil in the cooling stopped room may not be accumulated.

#### Detail

During cooling operation, every 1 hour continuous operation, the electronic expansion valves in the operation stopped room must be opened by 80 pulses for specified time.

### 3.11.11 Target Discharge Pipe Temperature Control

Obtain the target discharge pipe temperature from the indoor and outdoor heat exchange temperature, and adjust the electronic expansion valve opening so that the actual discharge pipe temperature become close to that temperature. (Indirect SH control using the discharge pipe temperature)

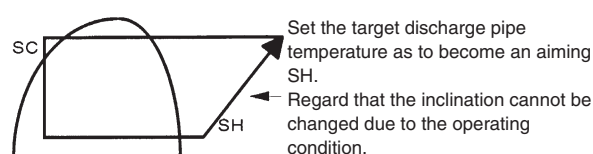

(R1389)

Determine a correction value of the electronic expansion valve compensation and drive it according to the deflection of the target discharge temperature and actual discharge temperature, and the discharge temperature variation by the 20 sec.



## 3.12 Malfunctions

### 3.12.1 Sensor Malfunction Detection

Sensor malfunction may occur either in the thermistor or current transformer (CT) system.

#### Relating to Thermistor Malfunction

1. Outdoor heat exchanger thermistor
2. Discharge pipe thermistor
3. Fin thermistor
4. Gas pipe thermistor
5. Outdoor air temperature thermistor
6. Liquid pipe thermistor

#### Relating to CT Malfunction

When the output frequency is more than 55 Hz and the input current is less than 0.5A, carry out abnormal adjustment.

### 3.12.2 Detection of Overload and Over Current

#### Outline

In order to protect the inverter, detect an excessive output current, and for protecting compressor, monitor the OL operation.

#### Detail


- ◆ If the OL (compressor head) temperature exceeds 120°C (2YC36), the compressor gets interrupted.

### 3.12.3 Insufficient Gas Control


#### Outline

If a power consumption is below the specified value in which the frequency is higher than the specified frequency, it must be regarded as gas insufficient.

In addition to such conventional function, if the discharge temperature is higher than the target discharge pipe temperature, and more than the specified temperature, and the electronic expansion valve is fully open (450 pulses) more than the specified time, it is considered as an insufficient gas.

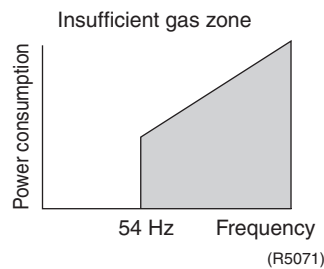

With the conventional function, a power consumption is weak comparing with that in the normal operation when gas is insufficient, and gas insufficiency is detected by checking a power consumption.

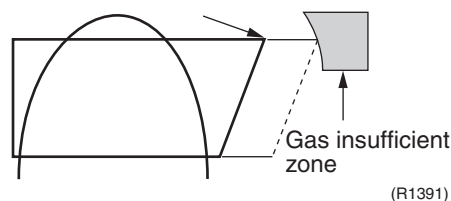

When operating with insufficient gas, although the rise of discharge pipe temperature is great and the electronic expansion valve is open, it is presumed as an insufficient gas if the discharge pipe temperature is higher than the target discharge pipe temperature.

**Detail****Judgment by Input Current**

When an output frequency is exceeds 54 Hz and the input current is less than specified value, the adjustment is made for insufficient gas.

**Judgment by Discharge Pipe Temperature**

When discharge pipe temperature is 20°C higher than target value and the electronic expansion valve opening is 450 plus (max.), the adjustment is made for insufficient gas.

**3.12.4 Preventing Indoor Freezing**

During cooling, if the heat exchanger temperature in the operation stopped room becomes below the specified temperature for the specified time, open the electronic expansion valve in the operation stopped room as specified, and carry out the fully closed operation. After this, if freezing abnormality occurs more than specified time, the system shall be down as the system abnormality.

**3.13 Forced Operation Mode****Outline**

Forced operating mode includes functions such as; forced cooling, forced heating, incorrect wiring, incorrect piping check.

Operating mode must be selected by operating the forced operation switch.

**Detail****Forced Cooling, Forced Heating (Only for Heat Pump Model)**

Item	Forced Cooling	Forced Heating
Forced operation allowing conditions	1) The indoor unit is not abnormal, but the indoor unit which is not in the freezing prohibiting zone is present in more than 1 room.	1) The indoor unit is not abnormal. The indoor unit which is not in the peak-cut prohibited zone is present in more than 1 room.
	2) The outdoor unit is not abnormal and not in the 3-minute stand-by mode.	←
	3) The operating mode of the outdoor unit is the stop mode.	←
	4) The slide selection switch of the forced operation is the cooling mode. The forced operation is allowed when the above "and" conditions are met.	4) The slide selection switch of the forced operation is the heating mode. The forced operation is allowed when the above "and" conditions are met.
Starting / adjustment	If the forced operation switch is pressed as the above conditions are met.	←
1) Determine operating room	All rooms	One of the available units runs. Priority is given to the youngest number's room in alphabetical order. (A > B > C > D)
2) Command frequency	◆ 2YC36: 52 Hz	◆ 2YC36: 42 Hz (Outdoor air temp:0°C)
3) Electronic expansion valve opening	It depends on the capacity of the operating indoor unit.	←
4) Outdoor unit adjustment	Compressor is in operation.	←
5) Indoor unit adjustment	The command of forced operation is transmitted to the indoor unit.	←
End	1) When the forced operation switch is pressed again.	←
	2) The operation is to end automatically after 15 min.	←
Others	The protect functions are prior to all others in the forced operation.	←

## 3.14 Wiring-Error Check

### Outline

The convenient Wiring Error Check function is designed for the microcomputer to correct wiring errors itself.

If local wiring is unclear in the case of buried piping, for example, just press the wiring error check switch that is behind the right-hand panel of the outdoor unit. Even if the connections for Room A and Room B are confused, the system may run without a hassle. Note that this check function does not work in the following cases.

- ◆ For about 30 seconds after the power is turned on (during initial setup).
- ◆ For 3-minute standby period after the compressor has stopped.
- ◆ When the outdoor air temperature is below 5°C.
- ◆ If the indoor unit is in trouble (also in case of all-room transmission failure).

When the piping and wiring are perfect, there is no need to use this function.

### Operation

1. Remove the 2 screws from the service panel (right side panel) and detach the panel.
2. Press the wiring error check switch on the service monitor PCB, and the wiring error check function is activated.
3. In about 10-15 minutes, the checking will end automatically.
4. When the checking is over, the service monitor LED indicators start flashing.

LED	1	2	3	4	Judgment
Status	All flashing at once				Self-correction impossible
	Flashing one after another				Self-correction complete

Self-correction complete...The LED indicators 1 ~ 4 flash one after another.

Self-correction impossible...The LED indicators flash all at the same time.

- ◆ Transmission failure occurs at any of the indoor units.
- ◆ The indoor unit heat exchanger thermistor is disconnected.
- ◆ An indoor unit is in trouble (if a trouble occurs during the wiring error checking).

Emergency stop...Any of the LED indicators 1 ~ 4 stays on.



#### Note:

1. After self-correction completed, LED 3 and LED 4 are not displayed for 2 rooms, LED 4 is not displayed for 3 rooms.
2. It takes about 10-15 minutes (after pressing the wiring error check switch) to complete the checking. (Wrong wiring between the upper and lower units cannot be self-corrected.)
3. Wrongly connected liquid and gas pipes cannot be self-corrected either. Be sure to make the liquid pipe and the gas pipe in pairs.
4. To forced-terminate the wiring error check procedure halfway, press the wiring error check switch again.  
In this case, the microcomputer's memory gets back to its initial status (Room A wiring → Port A piping, Room B wiring → Port B piping).
5. In replacing the outdoor unit PCB, be sure to use this function.
6. Make the power slide setting after doing the wiring error checking. (Otherwise, if the wiring is reversed, the air-conditioners being connected are set up in the reverse way.)

### Basic Knowledge

- ◆ This function works in this way. Refrigerant is let flow from Port A and on. The temperatures of the indoor unit heat exchanger thermistors are detected one by one to check up the matching between the pipes and wiring.
- ◆ With this function on, freezing (crackling) noise may be heard from the indoor unit. This is not a problem. (This is because the heat exchange temperature is made to drop below 0°C in order to increase the detection accuracy.)
- ◆ The indoor fan is made to turn on and off at the same time.

### Checking the current setting data on the microcomputer memory

Those data can be checked by looking at the service monitor LED indicators, when the wiring error checking is over, during forced operation, at the stop of the system.

The LED indicators stop flashing when the forced operation is over.


LED1...Room A wiring, LED2...Room B wiring

1st flashing LED...Port A piping, 2nd flashing LED...Port B piping


The first stay-on LED means the room that is connected with Port A. The next stay-on LED means the one connected with Port B.

### Example

Let's suppose the LED indicators are flashing as follows.

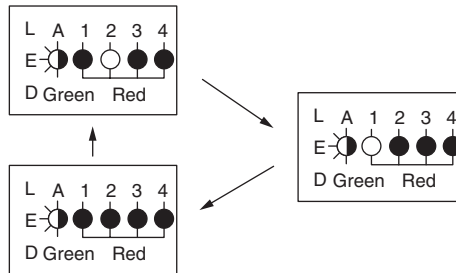

The above means that Port A is connected with Port B and Port B with Room A (or self-corrected this way.)

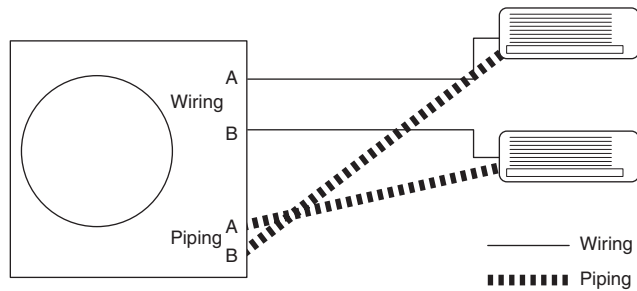

## 3.15 Additional Function

### 3.15.1 Connection Pipe Condensation Preventing Function

This control is intended to adjust the electronic expansion valve opening so that the outdoor unit gas pipe temperature (GDN) be kept below 8°C.

### 3.15.2 Priority Room Setting

Electronic expansion valves are controlled to provide the unit designated as the priority room with the capacity of other room units.


(Distribution of capacity: Priority room unit ---  $\Delta D$  Max., other room units ---  $\Delta D - \alpha$ )

- ◆ Setting method
  - Turn off the circuit breaker before changing the setting.
  - Only one room can be set as the priority room.
- ◆ Control start conditions
  - Priority room setting is made.
  - AND
  - “Powerful” signal from the priority room unit is received.



**Note:** The operation mode of the priority room unit has precedence.

- ◆ Cancellation of control
  - The control function is canceled when the “Powerful” operation mode is switched off or 20 minutes elapse after “Powerful Operation” started.

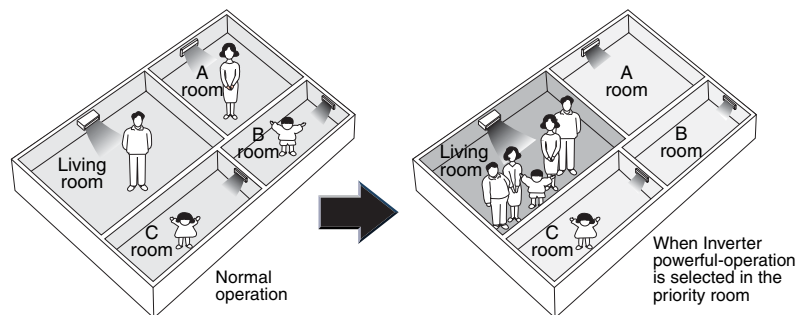

**The prioritised room will be heated/cooled much more quickly**

(R1396)

### 3.15.3 POWERFUL Operation Mode

Compressor operating frequency is increased to PI Max. (Max. Hz of operating room unit  $\Sigma S$ ) and outdoor unit airflow rate is increased.

### 3.15.4 Cooling / Heating Mode Lock

Use the S15 connector to set the unit to only cool or heat.

Setting to only heat (H): Short-circuit pins 1 and 3 of the connector <S15>.


Setting to only cool (C): short-circuit pins 3 and 5 of the connector <S15>.

The following specifications apply to the connector housing and pins.

JST products Housing: VHR-5N

Pin: SVH-21T-1, 1

Note that forced operation is also possible in COOL / HEAT mode.

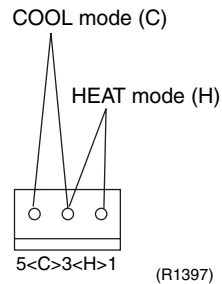

### 3.15.5 ECONO-mode-proof Setting

#### Outline

When installing in hotels, you can make ECONO mode ineffective on the outdoor unit.

#### Operation

The ECONO mode can be switched over between "effective" and "ineffective" by pressing the forced operation switch (SW1) and wiring error check switch (SW3) at the same time and holding them for 5 seconds while the compressor is stopped. The LEDs are lit in turn for 15 seconds to show the ECONO mode status.

The factory setting is "effective".

	effective → ineffective	ineffective → effective
LED flashing order	4 → 3 → 2 → 1	1 → 2 → 3 → 4



# Part 5

# System Configuration

1. System Configuration.....	108
1.1 Operation Instructions .....	108
2. Instruction.....	109
2.1 Wall Mounted, Duct, Floor/Ceiling, Floor Standing Type .....	109
2.2 Ceiling Suspended Type .....	192



# 1. System Configuration

## 1.1 Operation Instructions

After the installation and test operation of the room air conditioner have been completed, it should be operated and handled as described below. Every user would like to know the correct method of operation of the room air conditioner, to check if it is capable of cooling (or heating) well, and to know a clever method of using it.

In order to meet this expectation of the users, giving sufficient explanations taking enough time can be said to reduce about 80% of the requests for servicing. However good the installation work is and however good the functions are, the customer may blame either the room air conditioner or its installation work because of improper handling. The installation work and handing over of the unit can only be considered to have been completed when its handling has been explained to the user without using technical terms but giving full knowledge of the equipment.

## 2. Instruction

### 2.1 Wall Mounted, Duct, Floor/Ceiling, Floor Standing Type

#### 2.1.1 Manual Contents and Reference Page

Model Series	Wall Mounted Type ★2			
	F(A)TXG25/35E, C(A)TXG50E	FTK(X)S20-50D, ATXS20-50E	FTK(X)S20-35C, ATXS20-35D	FTK(X)S50E, ATX50E
<b>Read before Operation</b>				
Safety Precautions	110	110	110	110
Names of Parts	112	115	118	121
Preparation before Operation ★1	133	133	133	133
<b>Operation</b>				
AUTO, DRY, COOL, HEAT, FAN Operation ★1	136	136	136	136
Adjusting the Air Flow Direction	138	140	142	144
POWERFUL Operation ★1	150	150	150	150
OUTDOOR UNIT SILENT Operation ★1	151	151	151	151
ECONO Operation	—	152	—	—
HOME LEAVE Operation ★1	—	—	153	153
INTELLIGENT EYE Operation	159	155	157	155
TIMER Operation ★1	161	161	161	161
Note for Multi System	163	163	163	163
<b>Care</b>				
Care and Cleaning	165	168	171	174
<b>Troubleshooting</b>				
Troubleshooting	187	187	187	187
Drawing No.	3P166453-1B 3P166453-2B	3P142629-1C 3P166453-3	3P119293-2L 3P147101-1C	3P170835-1A 3P170835-2



Model Series	Duct Connected Type		Floor/Ceiling Suspended Dual Type	Floor Standing Type
	FDK(X)S25/35C	FDK(X)S25/35E, FDK(X)S50C	FLK(X)S25-50B	FVK(X)S25-50B
<b>Read before Operation</b>				
Safety Precautions	110	110	110	110
Names of Parts	124	124	127	130
Preparation before Operation ★1	133	133	133	133
<b>Operation</b>				
AUTO, DRY, COOL, HEAT, FAN Operation ★1	136	136	136	136
Adjusting the Air Flow Direction	—	—	146	148
POWERFUL Operation ★1	150	150	150	150
OUTDOOR UNIT SILENT Operation ★1	151	151	151	151
ECONO Operation	—	—	—	—
HOME LEAVE Operation ★1	153	153	153	153
INTELLIGENT EYE Operation	—	—	—	—
TIMER Operation ★1	161	161	161	161
Note for Multi System	163	163	163	163
<b>Care</b>				
Care and Cleaning	177	179	181	184
<b>Troubleshooting</b>				
Troubleshooting	187	187	187	187
Drawing No.	3P131999-2L	3P131999-3K	3P098587-2N	3P098587-1N






★1 : Illustrations are for wall mounted type FTK(X)S20-50D as representative.

★2 : Designs of the front panels are different according to models.


## 2.1.2 Safety Precautions


- Keep this manual where the operator can easily find them.
- Read this manual attentively before starting up the unit.
- For safety reason the operator must read the following cautions carefully.
- This manual classifies precautions into WARNING and CAUTION. Be sure to follow all precautions below: they are all important for ensuring safety.

 <b>WARNING</b> If you do not follow these instructions exactly, the unit may cause property damage, personal injury or loss of life.	 <b>CAUTION</b> If you do not follow these instructions exactly, the unit may cause minor or moderate property damage or personal injury.
---	---



- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li> Never do.</li> <li> Be sure to earth the air conditioner.</li> <li> Never touch the air conditioner (including the remote control) with a wet hand.</li> </ul> | <ul style="list-style-type: none"> <li> Be sure to follow the instructions.</li> <li> Never cause the air conditioner (including the remote control) to get wet.</li> </ul> |
|---|---|




### **WARNING**

- In order to avoid fire, explosion or injury, do not operate the unit when harmful, among which flammable or corrosive gases, are detected near the unit. 
- It is not good for health to expose your body to the air flow for a long time.
- Do not put a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury.
- Do not attempt to repair, relocate, modify or reinstall the air conditioner by yourself. Incorrect work will cause electric shocks, fire etc.  
For repairs and reinstallation, consult your Daikin dealer for advice and information.

- The refrigerant used in the air conditioner is safe. Although leaks should not occur, if for some reason any refrigerant happens to leak into the room, make sure it does not come in contact with any flame as of gas heaters, kerosene heaters or gas range. 
- If the air conditioner is not cooling (heating) properly, the refrigerant may be leaking, so call your dealer. When carrying out repairs accompanying adding refrigerant, check the content of the repairs with our service staff.
- Do not attempt to install the air conditioner by yourself. Incorrect work will result in water leakage, electric shocks or fire. For installation, consult the dealer or a qualified technician.
- In order to avoid electric shock, fire or injury, if you detect any abnormally such as smell of fire, stop the operation and turn off the breaker. And call your dealer for instructions.

### **CAUTION**

- The air conditioner must be earthed. Incomplete earthing may result in electric shocks. Do not connect the earth line to a gas pipe, water pipe, lightning rod, or a telephone earth line. 
- In order to avoid any quality deterioration, do not use the unit for cooling precision instruments, food, plants, animals or works of art. 
- Never expose little children, plants or animals directly to the air flow.
- Do not place appliances which produce open fire in places exposed to the air flow from the unit or under the indoor unit. It may cause incomplete combustion or deformation of the unit due to the heat.
- Do not block air inlets nor outlets. Impaired air flow may result in insufficient performance or trouble.
- Do not stand or sit on the outdoor unit. Do not place any object on the unit to avoid injury, do not remove the fan guard.
- Do not place anything under the indoor or outdoor unit that must be kept away from moisture. In certain conditions, moisture in the air may condense and drip.
- After a long use, check the unit stand and fittings for damage.
- Do not touch the air inlet and aluminum fins of outdoor unit. It may cause injury.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

- To avoid oxygen deficiency, ventilate the room sufficiently if equipment with burner is used together with the air conditioner. 
  - Before cleaning, be sure to stop the operation, turn the breaker off or pull out the supply cord.
  - Do not connect the air conditioner to a power supply different from the one as specified. It may cause trouble or fire.
  - Depending on the environment, an earth leakage breaker must be installed. Lack of an earth leakage breaker may result in electric shocks.
  - Arrange the drain hose to ensure smooth drainage. Incomplete draining may cause wetting of the building, furniture etc.
  - Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.  
Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smok on fire when making contact with electrical parts.
- 
- Do not operate the air conditioner with wet hands. 
- 
- Do not wash the indoor unit with excessive water, only use a slightly wet cloth.
  - Do not place things such as vessels containing water or anything else on top of the unit.   
Water may penetrate into the unit and degrade electrical insulations, resulting in an electric shock.
- 

### Installation site

- To install the air conditioner in the following types of environments, consult the dealer.
  - Places with an oily ambient or where steam or soot occurs.
  - Salty environment such as coastal areas.
  - Places where sulfide gas occurs such as hot springs.
  - Places where snow may block the outdoor unit.

The drain from the outdoor unit must be discharged to a place of good drainage.

### Consider nuisance to your neighbours from noises

- For installation, choose a place as described below.
  - A place solid enough to bear the weight of the unit which does not amplify the operation noise or vibration.
  - A place from where the air discharged from the outdoor unit or the operation noise will not annoy your neighbours.

### Electrical work

- For power supply, be sure to use a separate power circuit dedicated to the air conditioner.


### System relocation

- Relocating the air conditioner requires specialized knowledge and skills. Please consult the dealer if relocation is necessary for moving or remodeling.


### 2.1.3 Names of Parts

FTXG 25/35 E, CTXG 50 E, ATXG 25/50E

#### ■ Indoor Unit

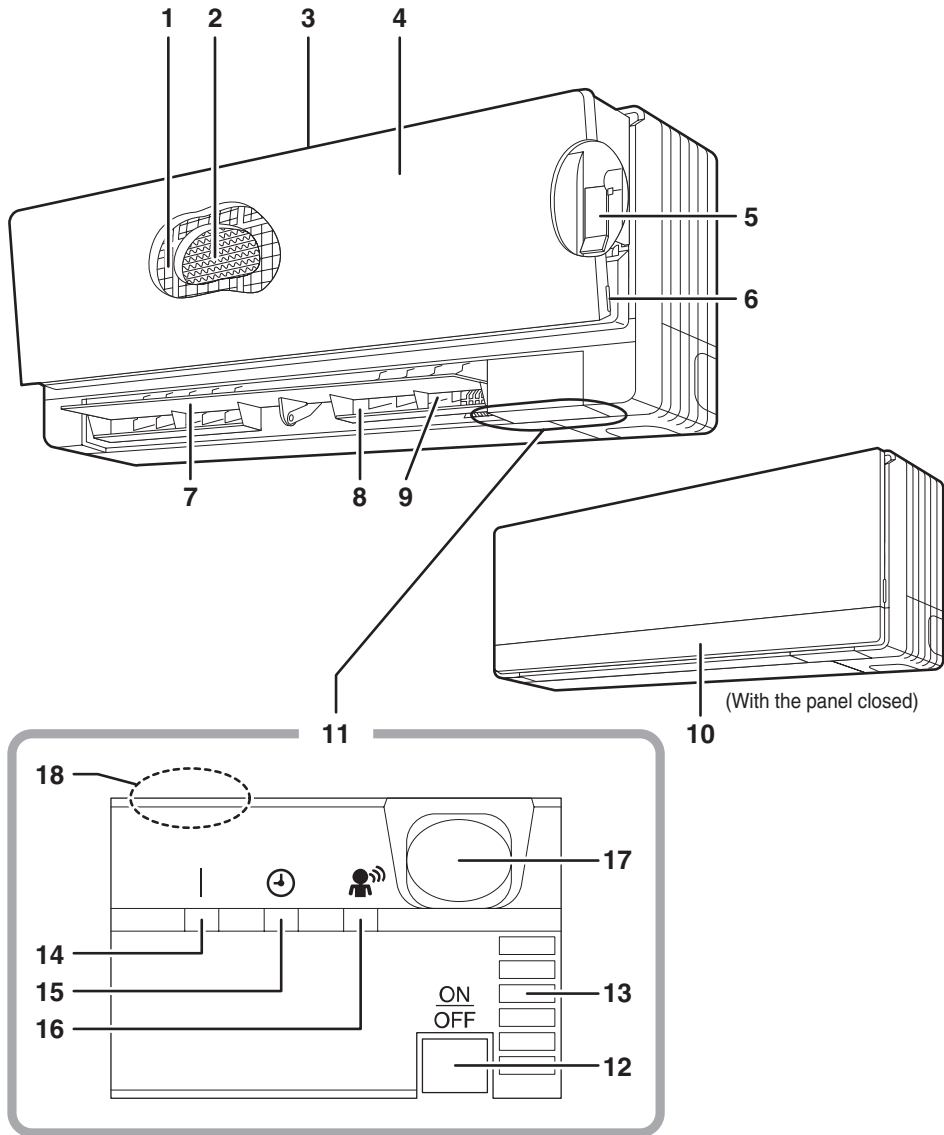

## Outdoor Unit

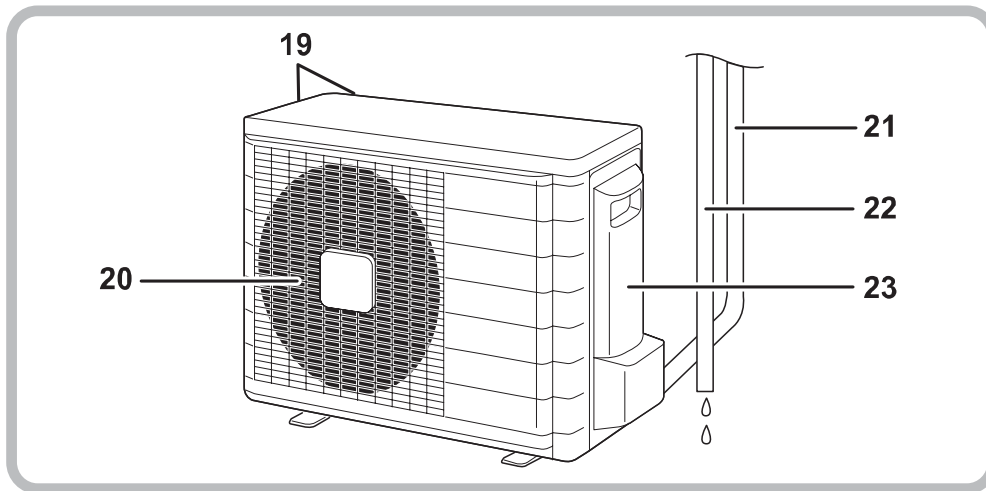

### Indoor Unit

1. Air filter
2. Titanium Apatite Photocatalytic Air-Purifying Filter:
  - These filters are attached to the inside of the air filters.
3. Air inlet
4. Front panel
5. Supporting plate
  - The supporting plate is used to support the front panel during maintenance.
6. Panel tab
7. Flap (horizontal blade)
8. Air outlet
9. Louvers (vertical blades):
  - The louvers are inside of the air outlet.
10. Outlet vent panel
11. Display
12. Indoor Unit ON/OFF switch:
  - Push this switch once to start operation. Push once again to stop it.

- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
F(C)TXG	AUTO	25°C	AUTO


- This switch is useful when the remote control is missing.
13. Room temperature sensor
    - It senses the air temperature around the unit.
  14. Operation lamp (green)
  15. TIMER lamp (yellow)
  16. INTELLIGENT EYE lamp (green)
  17. INTELLIGENT EYE sensor:
    - It detects the movement of people and automatically switches between normal operation and energy saving operation.
  18. Signal receiver:
    - It receives signals from the remote control.
    - When the unit receives a signal, you will hear a short beep.
      - Operation start .....beep-beep
      - Settings changed.....beep
      - Operation stop .....beeeep

### Outdoor Unit

19. Air inlet: (Back and side)
20. Air outlet
21. Refrigerant piping and inter-unit cable
22. Drain hose
23. Earth terminal:
  - It is inside of this cover.

Appearance of the outdoor unit may differ from some models.

## ■ Remote control

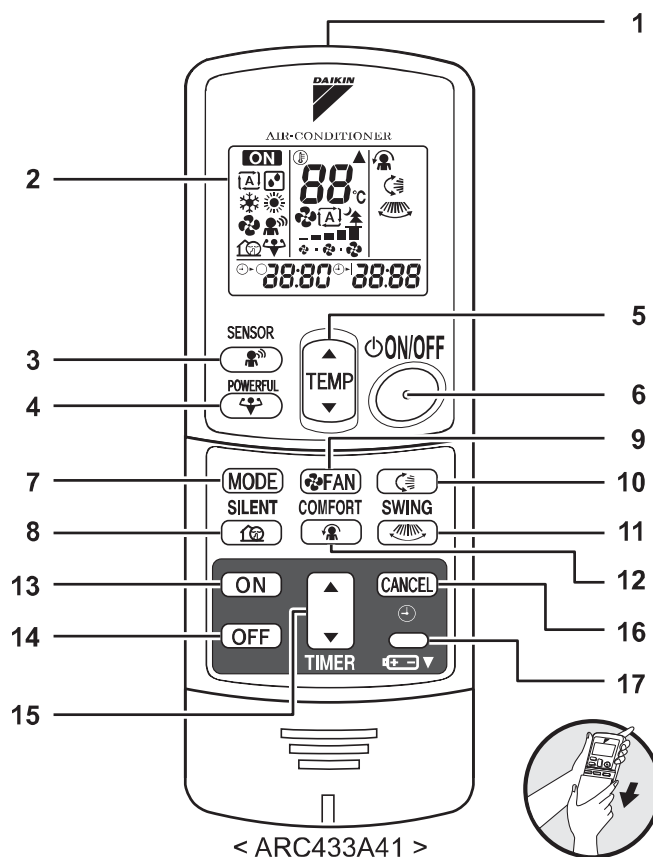


< ARC433A41 >

- |   |   |
|---|---|
| <p><b>1. Signal transmitter:</b></p> <ul style="list-style-type: none"> <li>• It sends signals to the indoor unit.</li> </ul> <p><b>2. Display:</b></p> <ul style="list-style-type: none"> <li>• It displays the current settings.<br/>(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)</li> </ul> <p><b>3. SENSOR button:</b> INTELLIGENT EYE operation</p> <p><b>4. POWERFUL button:</b> POWERFUL operation</p> <p><b>5. TEMPERATURE adjustment buttons:</b></p> <ul style="list-style-type: none"> <li>• It changes the temperature setting.</li> </ul> <p><b>6. ON/OFF button:</b></p> <ul style="list-style-type: none"> <li>• Press this button once to start operation.<br/>Press once again to stop it.</li> </ul> <p><b>7. MODE selector button:</b></p> <ul style="list-style-type: none"> <li>• It selects the operation mode.<br/>(AUTO/DRY/COOL/HEAT/FAN)</li> </ul> | <p><b>8. SILENT button:</b> OUTDOOR UNIT SILENToperation</p> <p><b>9. FAN setting button:</b></p> <ul style="list-style-type: none"> <li>• It selects the air flow rate setting.</li> </ul> <p><b>10. SWING button:</b></p> <ul style="list-style-type: none"> <li>• Flap (Horizontal blade)</li> </ul> <p><b>11. SWING button:</b></p> <ul style="list-style-type: none"> <li>• Louvers (Vertical blades)</li> </ul> <p><b>12. COMFORT AIRFLOW mode button</b></p> <p><b>13. ON TIMER button</b></p> <p><b>14. OFF TIMER button</b></p> <p><b>15. TIMER Setting button:</b></p> <ul style="list-style-type: none"> <li>• It changes the time setting.</li> </ul> <p><b>16. TIMER CANCEL button:</b></p> <ul style="list-style-type: none"> <li>• It cancels the timer setting.</li> </ul> <p><b>17. CLOCK button</b></p> |
|---|---|


## FTK(X)S 20-50 D, ATXS 20-50 E

## ■ Indoor Unit

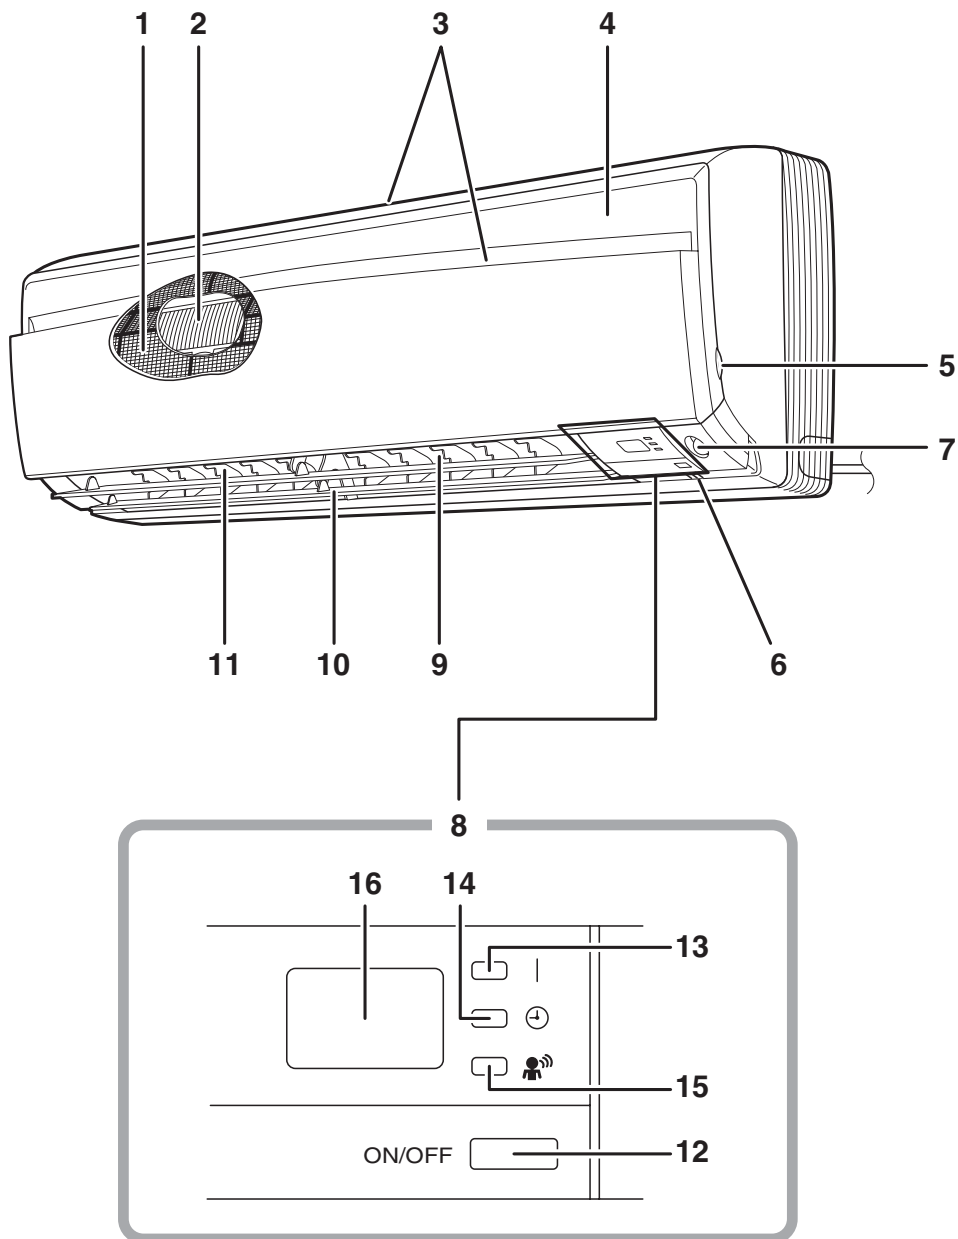



■ Outdoor Unit

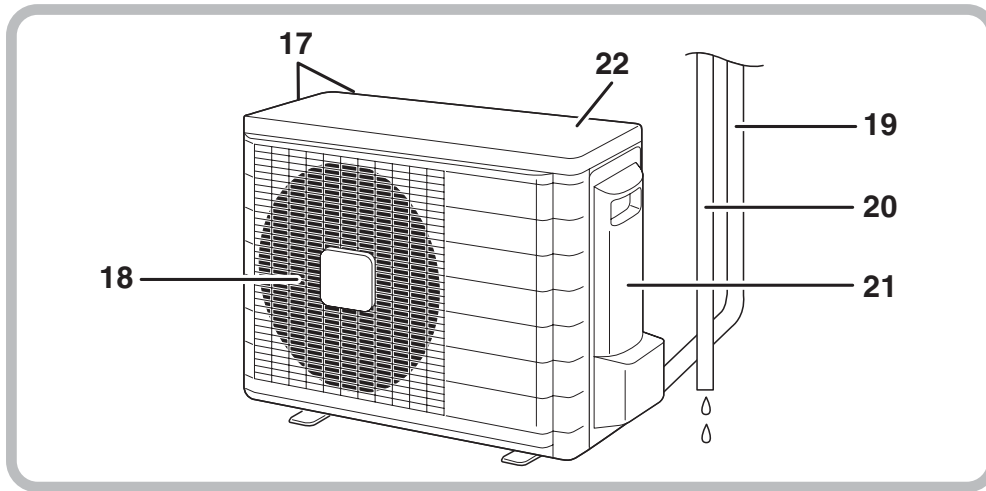

■ Indoor Unit

- 1. Air filter
- 2. Titanium Apatite Photocatalytic Air-Purifying Filter:
  - These filters are attached to the inside of the air filters.
- 3. Air inlet
- 4. Front panel
- 5. Panel tab
- 6. Room temperature sensor:
  - It senses the air temperature around the unit.
- 7. INTELLIGENT EYE sensor:
  - It detects the movements of people and automatically switches between normal operation and energy saving operation.
- 8. Display
- 9. Air outlet
- 10. Flaps (horizontal blades):
- 11. Louvers (vertical blades):
  - The louvers are inside of the air outlet.

12. Indoor Unit ON/OFF switch:

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
F(C)TKS	COOL	22°C	AUTO
F(C)TXS	AUTO	25°C	AUTO

- This switch is useful when the remote control is missing.

- 13. Operation lamp (green)
- 14. TIMER lamp (yellow)
- 15. INTELLIGENT EYE lamp (green)
- 16. Signal receiver:

- It receives signals from the remote control.
- When the unit receives a signal, you will hear a short beep.
  - Operation start .....beep-beep
  - Settings changed.....beep
  - Operation stop.....beeeep

■ Outdoor Unit

- 17. Air inlet: (Back and side)
- 18. Air outlet
- 19. Refrigerant piping and inter-unit cable
- 20. Drain hose

21. Earth terminal:


- It is inside of this cover.

22. Outside air temperature sensor

- It senses the ambient temperature around the unit.

Appearance of the outdoor unit may differ from some models.


## ■ Remote control

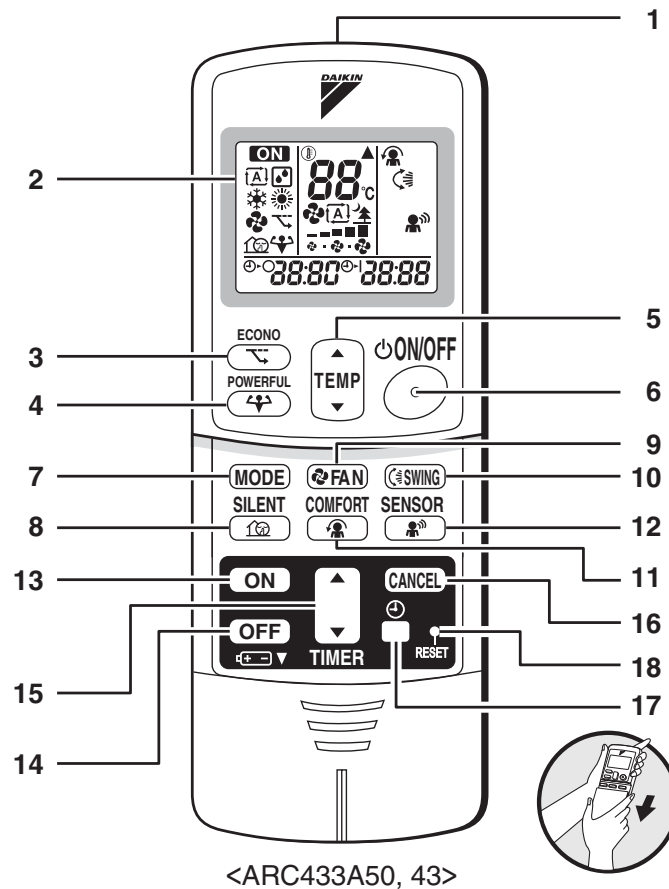


- 1. Signal transmitter:**
  - It sends signals to the indoor unit.
- 2. Display:**
  - It displays the current settings. (In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
- 3. ECONO button:**  
ECONO operation
- 4. POWERFUL button:**  
POWERFUL operation
- 5. TEMPERATURE adjustment buttons:**
  - It changes the temperature setting.
- 6. ON/OFF button:**
  - Press this button once to start operation.
  - Press once again to stop it.
- 7. MODE selector button:**
  - It selects the operation mode. (AUTO/DRY/COOL/HEAT/FAN)
- 8. SILENT button:**  
OUTDOOR UNIT SILENT operation
- 9. FAN setting button:**
  - It selects the air flow rate setting.
- 10. SWING button:**
  - Adjusting the Air Flow Direction
- 11. COMFORT AIRFLOW button:**  
COMFORT AIRFLOW operation
- 12. SENSOR button:**  
INTELLIGENT EYE operation
- 13. ON TIMER button**
- 14. OFF TIMER button**
- 15. TIMER Setting button:**
  - It cancels the timer setting.
- 16. TIMER CANCEL button:**
  - It cancels the timer setting
- 17. CLOCK button:**
- 18. RESET button:**
  - Restart the unit if it freezes.
  - Use a thin object to push.

FTK(X)S 20/35 C, ATXS 20/35 D

■ Indoor Unit

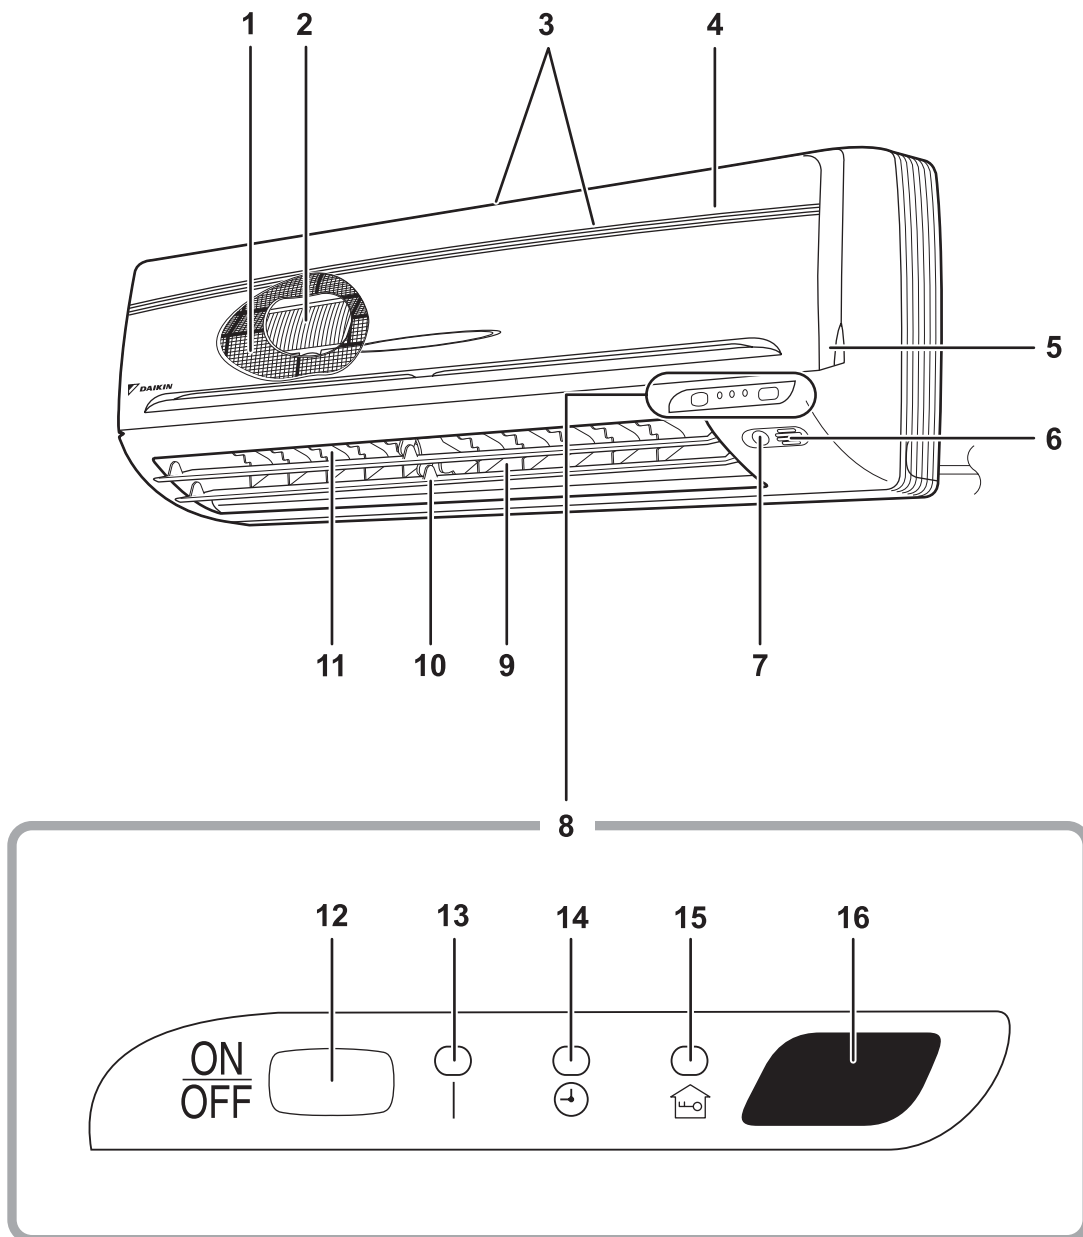

■ Outdoor Unit

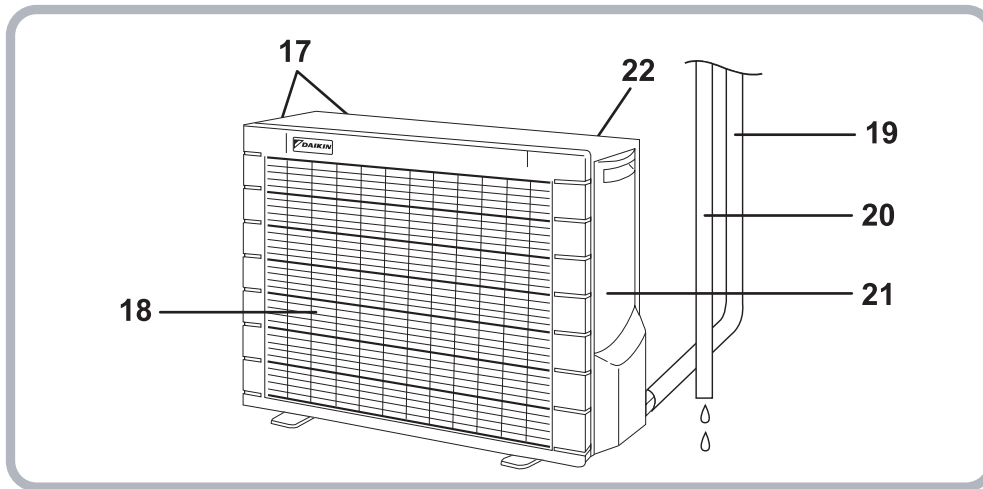

■ Indoor Unit

1. Air filter
2. Air-Purifying Filter with photocatalytic deodorizing function:
  - These filters are attached to the inside of the air filters.
3. Air inlet
4. Front panel
5. Panel tab
6. Room temperature sensor:
  - It senses the air temperature around the unit.
7. INTELLIGENT EYE sensor:
  - It detects the movements of people and automatically switches between normal operation and energy saving operation.
8. Display
9. Air outlet
10. Flaps (horizontal blades)
11. Louvers (vertical blades):
  - The louvers are inside of the air outlet.

12. Indoor Unit ON/OFF switch:

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
FTKS	COOL	22°C	AUTO
FTXS	AUTO	25°C	AUTO

- This switch is useful when the remote control is missing.

13. Operation lamp (green)

14. TIMER lamp (yellow)

15. HOME LEAVE lamp (red)

16. Signal receiver:


- It receives signals from the remote control.
- When the unit receives a signal, you will hear a short beep.
  - Operation start .....beep-beep
  - Settings changed.....beep
  - Operation stop.....beeeep

■ Outdoor Unit

17. Air inlet: (Back and side)
18. Air outlet
19. Refrigerant piping and inter-unit cable
20. Drain hose
21. Earth terminal:
  - It is inside of this cover.
22. Outside air temperature sensor: (Back side)
  - It senses the ambient temperature around the unit.

Appearance of the outdoor unit may differ from some models.

## ■ Remote control

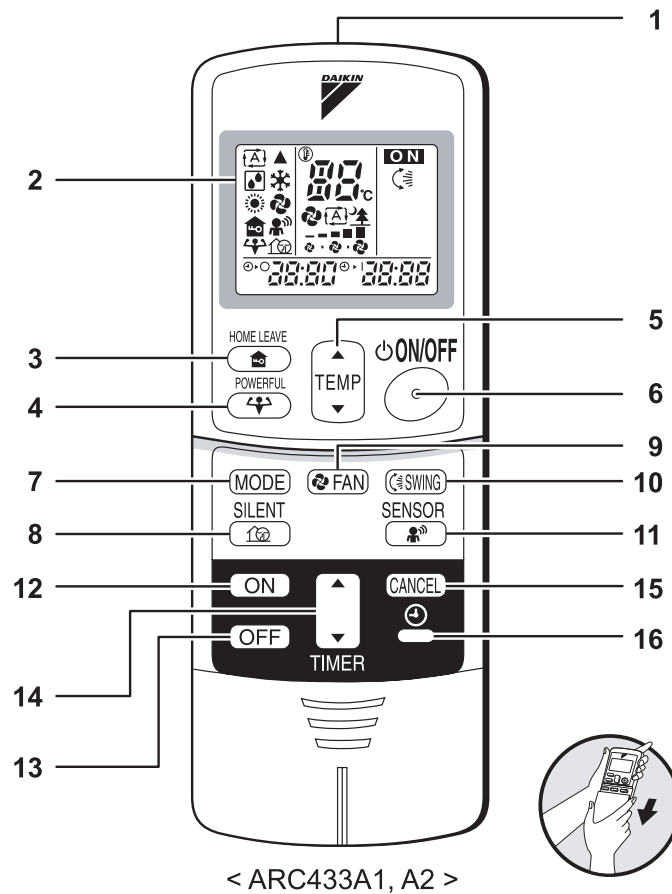

**1. Signal transmitter:**

- It sends signals to the indoor unit.

**2. Display:**

- It displays the current settings. (In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

**3. HOME LEAVE button:**

HOME LEAVE operation

**4. POWERFUL button:**

POWERFUL operation

**5. TEMPERATURE adjustment buttons:**

- It changes the temperature of time setting.

**6. ON/OFF button:**

- Press this button once to start operation.  
Press once again to stop it.

**7. MODE selector button:**

- It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN)

**8. SILENT button:**

OUTDOOR UNIT SILENT operation

**9. FAN setting button:**

- It selects the air flow rate setting.

**10. SWING button**

**11. SENSOR button**

for INTELLIGENT EYE operation

**12. ON TIMER button**

**13. OFF TIMER button**

**14. TIMER Setting button:**

- It changes the time setting.


**15. TIMER CANCEL button:**

- It cancels the timer setting.


**16. CLOCK button**

## FTK(X)S 50 E, ATX 50 E


## ■ Indoor Unit

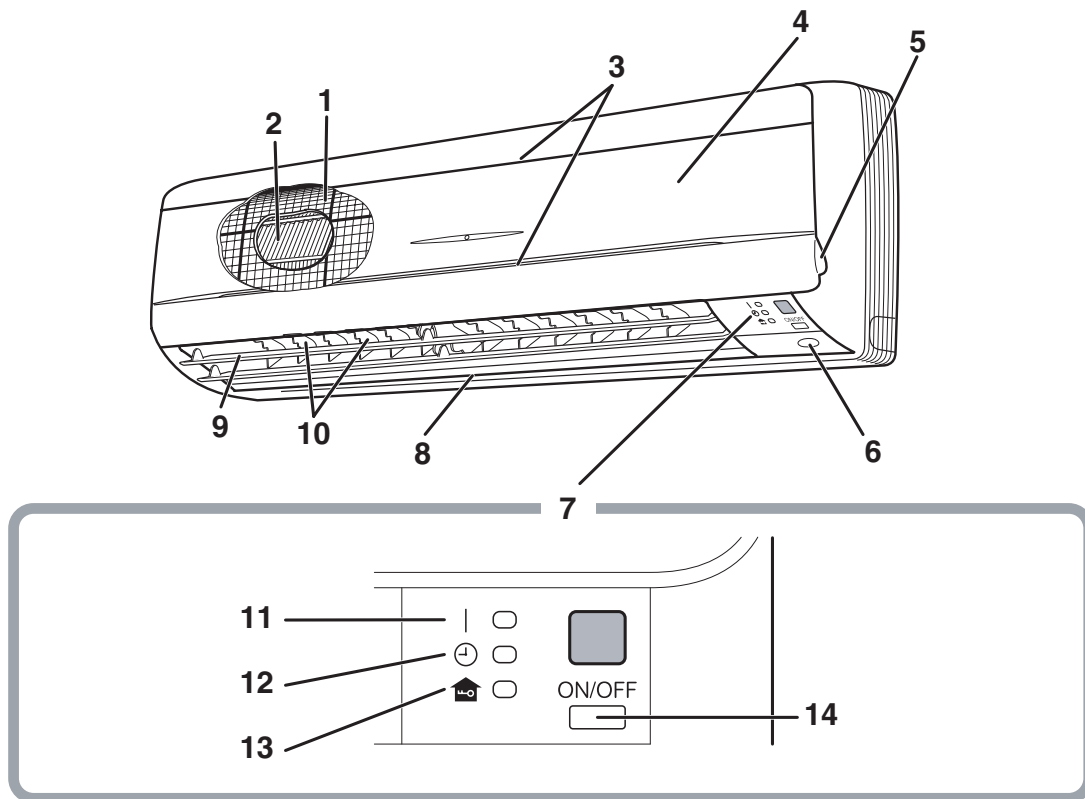

## ■ Main unit control panel

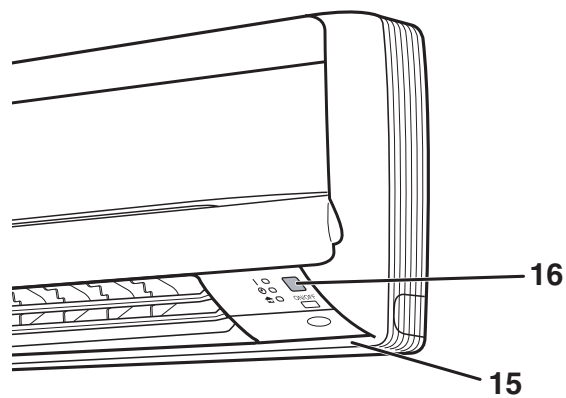

■ Outdoor Unit

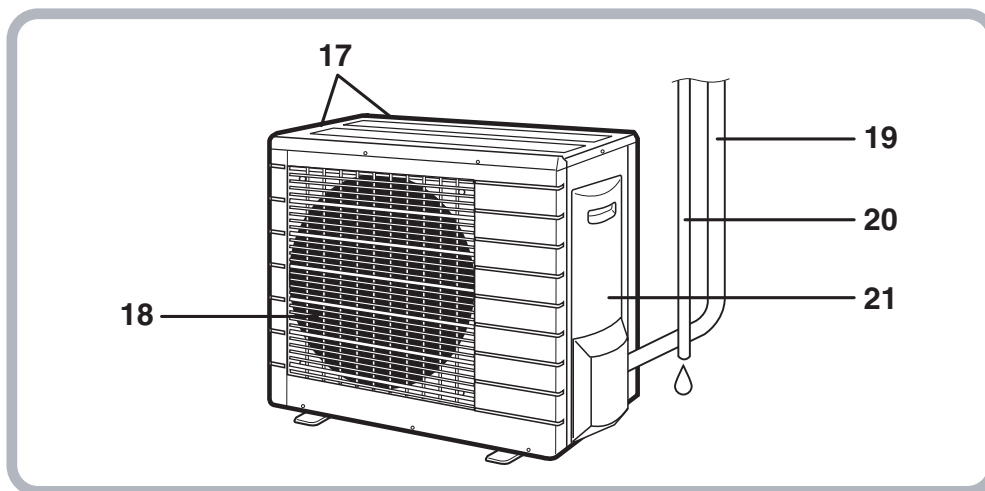

■ Indoor Unit

- 1. Air filter
- 2. Titanium Apatite Photocatalytic Air-Purifying Filter:
  - These filters are attached to the inside of the air filters.
- 3. Air inlet
- 4. Front panel
- 5. Panel tab
- 6. INTELLIGENT EYE sensor:
  - It detects the movements of people and automatically switches between normal operation and energy saving operation.
- 7. Display
- 8. Air outlet
- 9. Flap (horizontal blade)
- 10. Louvers (vertical blades):
  - The louvers are inside of the air outlet.
- 11. Operation lamp (green)
- 12. TIMER lamp (yellow)
- 13. HOME LEAVE lamp (red):
  - Lights up when you use HOME LEAVE Operation.

14. Indoor Unit ON/OFF switch:

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table

	Mode	Temperature setting	Air flow rate
FTKS	COOL	22°C	AUTO
FTXS	AUTO	25°C	AUTO


- This switch is useful when the remote control is missing.
15. Room temperature sensor:
- It senses the air temperature around the unit.
16. Signal receiver:
- It receives signals from the remote control.
  - When the unit receives a signal, you will hear a short beep.
    - Operation start .....beep-beep
    - Settings changed.....beep
    - Operation stop.....beeeeeep

■ Outdoor Unit

- 17. Air inlet: (Back and side)
- 18. Air outlet
- 19. Refrigerant piping and inter-unit cable
- 20. Drain hose
- 21. Earth terminal:
  - It is inside of this cover.

Appearance of the outdoor unit may differ from some models.

## ■ Remote control

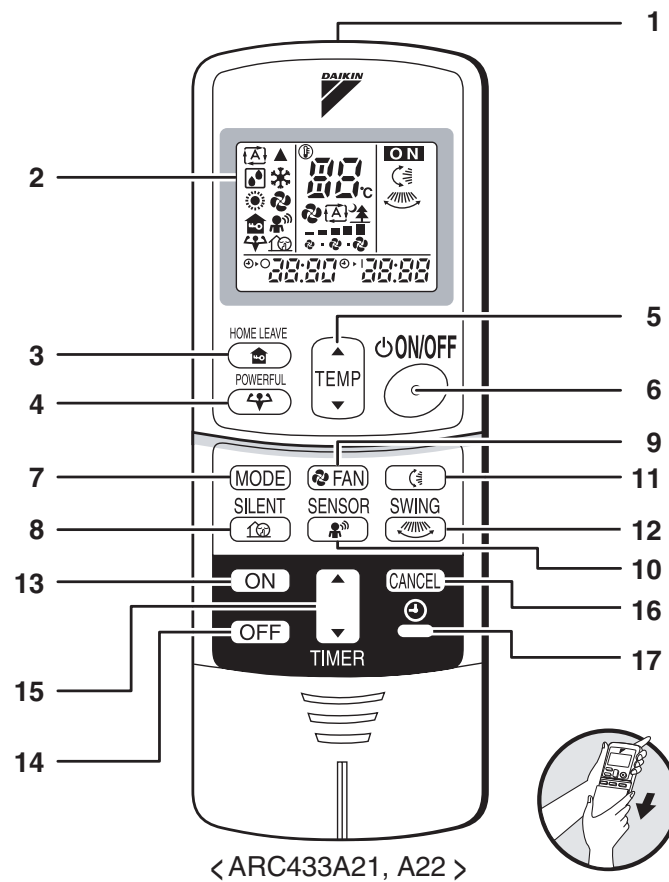

### 1. Signal transmitter:

- It sends signals to the indoor unit.

### 2. Display:

- It displays the current settings. (In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

### 3. HOME LEAVE button:

HOME LEAVE operation

### 4. POWERFUL button:

for POWERFUL operation

### 5. TEMPERATURE adjustment buttons:

- It changes the temperature of time setting.

### 6. ON/OFF button:

- Press this button once to start operation.
- Press once again to stop it.

### 7. MODE selector button:

- It selects the operation mode. (AUTO/DRY/COOL/HEAT/FAN)

### 8. SILENT button:

for OUTDOOR UNIT SILENT operation

### 9. FAN setting button:

- It selects the air flow rate setting.

### 10. SENSOR button: for INTELLIGENT EYE operation

### 11. SWING button:

- Flap (Horizontal blade)

### 12. SWING button:

- Louver (Vertical blade)

### 13. ON TIMER button

### 14. OFF TIMER button

### 15. TIMER Setting button:

- It changes the time setting.

### 16. TIMER CANCEL button:


- It cancels the timer setting.

### 17. CLOCK button




FDK(X)S 25/50 C, FDK(X)S 25/35 E

■ Indoor Unit

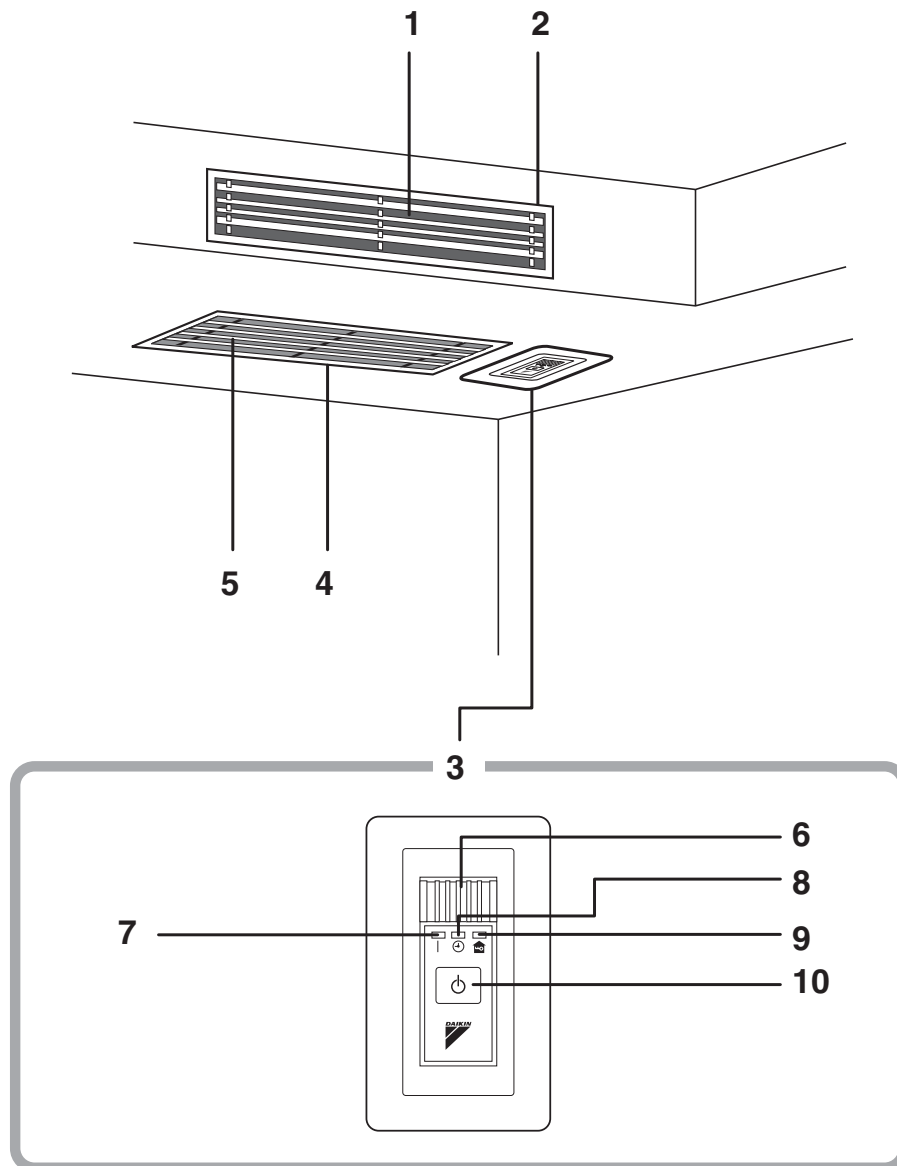

## ■ Outdoor Unit

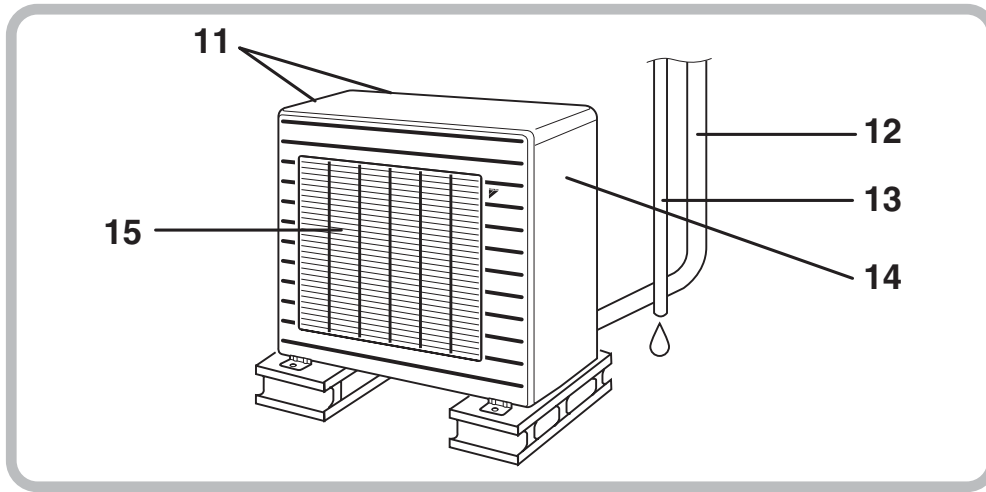

### ■ Indoor Unit

1. **Air outlet**
2. **Air outlet grille:** (Field supply)
  - Appearance of the Air outlet grille and Air inlet grille may differ with some models
3. **Display, Control panel**
4. **Suction grille:** (option)
  - Appearance of the suction grille and Air inlet grille may differ with some models.
5. **Air inlet**
6. **Room temperature sensor:**
  - It senses the air temperature around the unit.
7. **Operation lamp (green)**
8. **TIMER lamp (yellow)**
9. **HOME LEAVE lamp (red):**
  - Lights up when you use HOME LEAVE operation.

#### 10. Indoor Unit ON/OFF switch:

- Push this switch once to start operation. Push once again to stop it.
- This switch is useful when the remote control is missing.
- **The operation mode refers to the following table.**


	Mode	Temperature setting	Air flow rate
FDKS	COOL	22°C	AUTO
FDXS	AUTO	25°C	AUTO

### ■ Outdoor Unit

11. **Air inlet:** (Back and side)
12. **Refrigerant piping and inter-unit cable**
13. **Drain hose**
14. **Earth terminal:**
  - It is inside of this cover.
15. **Air outlet**

Appearance of the outdoor unit may differ from some models.

■ Remote control

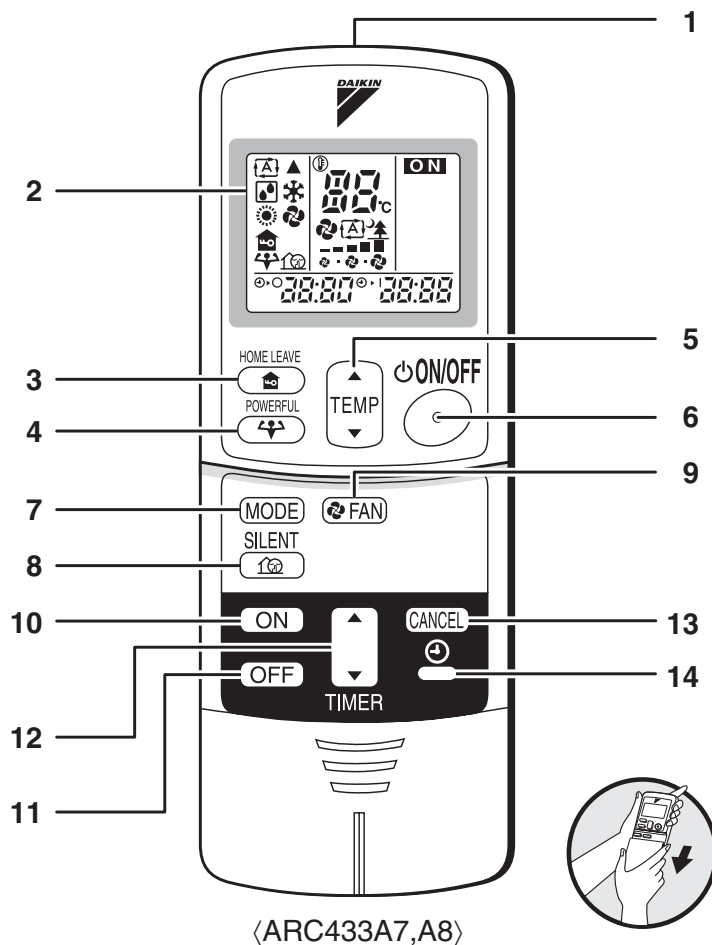


<ARC433A7,A8>

- |   |   |
|---|---|
| <p><b>1. Signal transmitter:</b></p> <ul style="list-style-type: none"> <li>• It sends signals to the indoor unit.</li> </ul> <p><b>2. Display:</b></p> <ul style="list-style-type: none"> <li>• It displays the current settings. (In this illustration, each section is shown with all its displays ON for the purpose of explanation.)</li> </ul> <p><b>3. HOME LEAVE button:</b><br/>HOME LEAVE operation</p> <p><b>4. POWERFUL button:</b><br/>POWERFUL operation</p> <p><b>5. TEMPERATURE adjustment buttons:</b></p> <ul style="list-style-type: none"> <li>• It changes the temperature setting.</li> </ul> <p><b>6. ON/OFF button:</b></p> <ul style="list-style-type: none"> <li>• Press this button once to start operation. Press once again to stop it.</li> </ul> | <p><b>7. MODE selector button:</b></p> <ul style="list-style-type: none"> <li>• It selects the operation mode. (AUTO/DRY/COOL/HEAT/FAN)</li> </ul> <p><b>8. SILENT button:</b><br/>for OUTDOOR UNIT SILENT operation</p> <p><b>9. FAN setting button:</b></p> <ul style="list-style-type: none"> <li>• It selects the air flow rate setting.</li> </ul> <p><b>10. ON TIMER button</b></p> <p><b>11. OFF TIMER button</b></p> <p><b>12. TIMER Setting button:</b></p> <ul style="list-style-type: none"> <li>• It changes the time setting.</li> </ul> <p><b>13. TIMER CANCEL button:</b></p> <ul style="list-style-type: none"> <li>• It cancels the timer setting.</li> </ul> <p><b>14. CLOCK button</b></p> |
|---|---|

## FLK(X)S 25/50/ B

### ■ Indoor Unit

The indoor unit can be installed either to the ceiling or to a wall. The descriptions contained in this manual show the case when installation is being carried out to the ceiling. (The methods of operation used are the same when installing to a wall.)

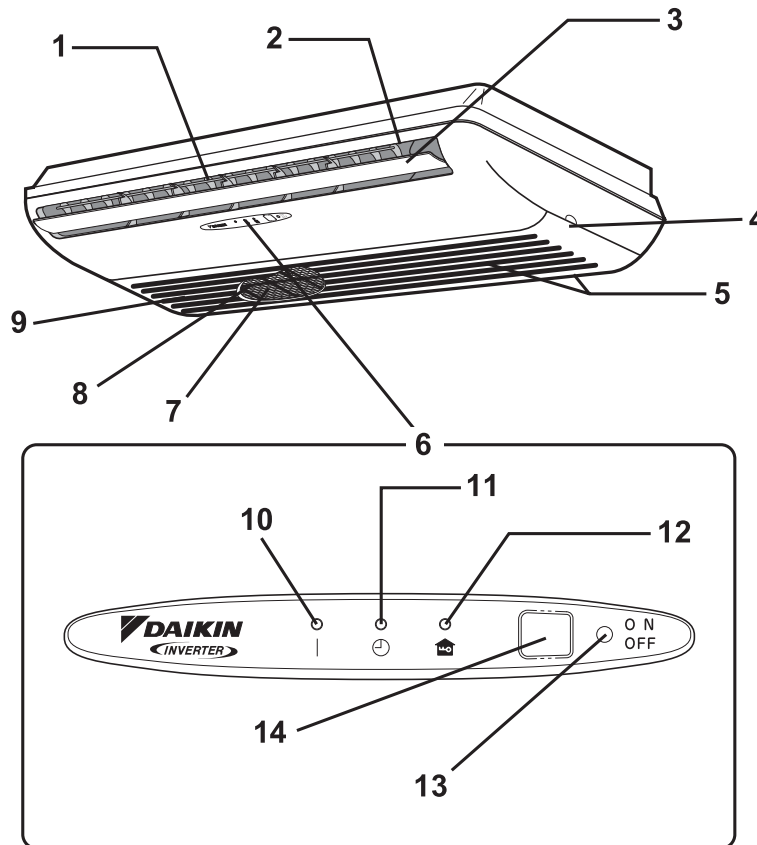


### ■ Opening the front panel

How to open the front panel

#### CAUTION

- Before opening the front panel, be sure to stop the operation and turn the breaker OFF.

■ Outdoor Unit

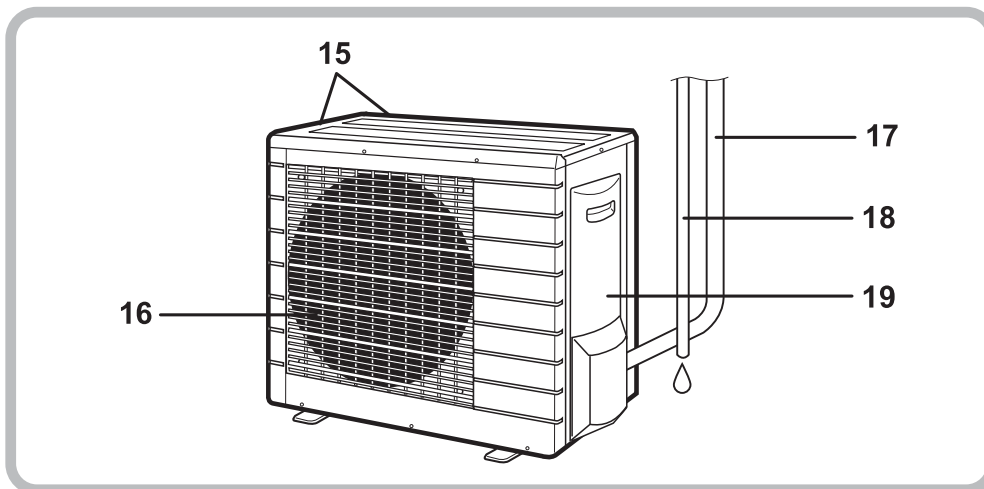

■ Indoor Unit

**1. Louvers (vertical blades):**  
The louvers are inside of the air outlet.

**2. Air outlet**

**3. Flap (horizontal blade)**

**4. Panel tab**

**5. Air inlet**

**6. Display**

**7. Air filter**

**8. Photocatalytic deodorizing filter or Air purifying filter:**

- These filters are attached to the inside of the air filters.

**9. Front panel**

**10. Operation lamp (green)**

**11. TIMER lamp (yellow)**

**12. HOME LEAVE lamp (red):**  
Lights up when you use HOME LEAVE Operation.

**13. Indoor unit ON/OFF switch:**

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
FLKS	COOL	22°C	AUTO
FLXS	AUTO	25°C	AUTO

- Push the switch using an object with a sharp tip, such as a pen.
  - This switch is useful when the remote control is missing.
- 14. Signal receiver:**
- It receives signals from the remote control.
  - When the unit receives a signal, you will hear a short beep.
    - Operation start .....beep-beep
    - Settings changed.....beep
    - Operation stop.....beeeep

■ Outdoor Unit

**15. Air inlet:** (Back and side)

**16. Air outlet**

**17. Refrigerant piping and inter-unit cable**


**18. Drain hose**

**19. Earth terminal:**

- It is inside of this cover.
- 

Appearance of the outdoor unit may differ from some models.

## ■ Remote Control

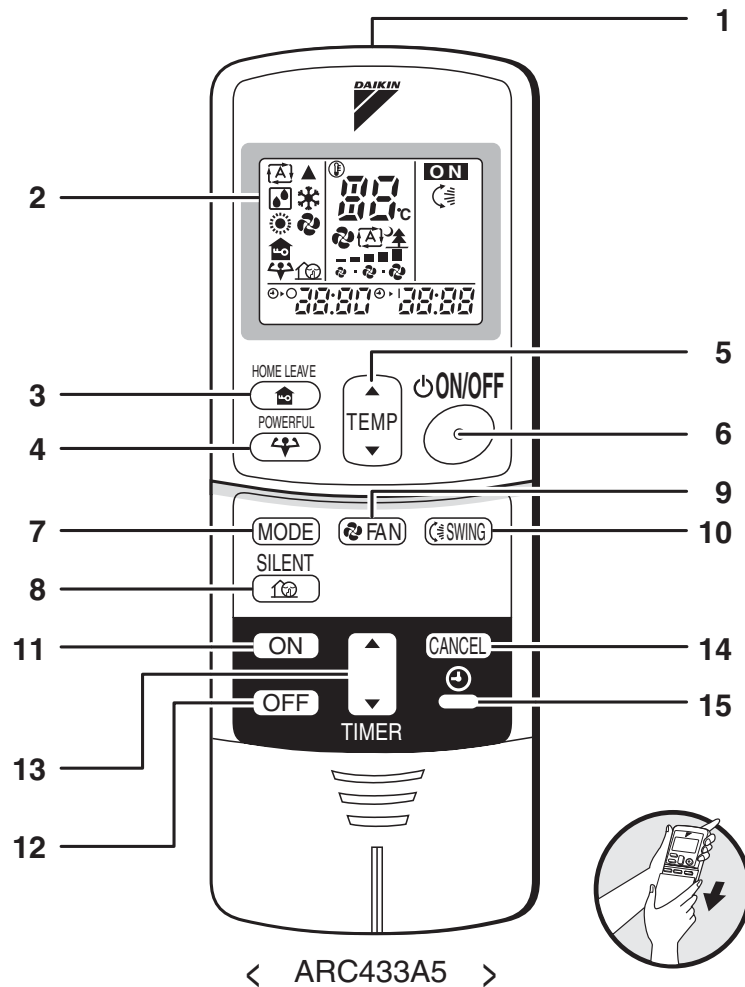

### 1. Signal transmitter:

- It sends signals to the indoor unit.

### 2. Display:

- It displays the current settings.  
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

### 3. HOME LEAVE button:

HOME LEAVE operation

### 4. POWERFUL button:

POWERFUL operation

### 5. TEMPERATURE adjustment buttons:

- It changes the temperature setting.

### 6. ON/OFF button:

- Press this button once to start operation.  
Press once again to stop it.

### 7. MODE selector button:

- It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN)

### 8. OUTDOOR UNIT SILENT button

### 9. FAN setting button:

- It selects the air flow rate setting.

### 10. SWING button

### 11. ON TIMER button

### 12. OFF TIMER button

### 13. TIMER Setting button:

- It changes the time setting.


### 14. TIMER CANCEL button:

- It cancels the timer setting.

### 15. CLOCK button


## FVK(X)S 25/50 B

### Indoor Unit

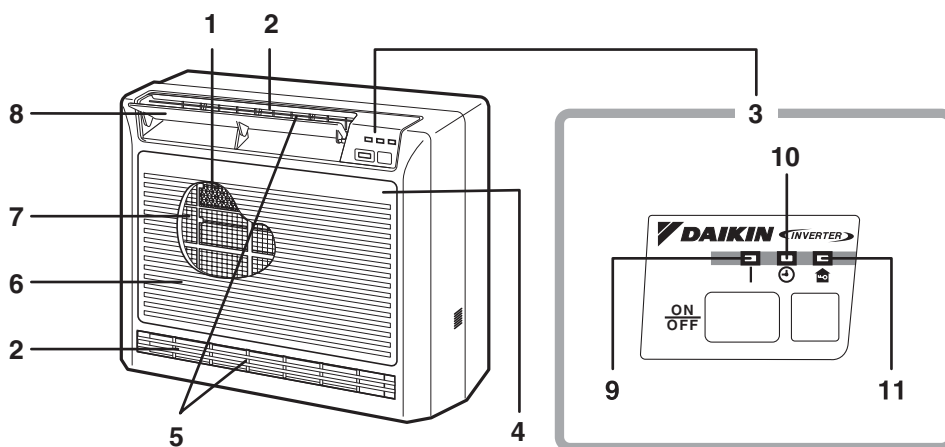

### Opening the front panel


How to open the front panel:

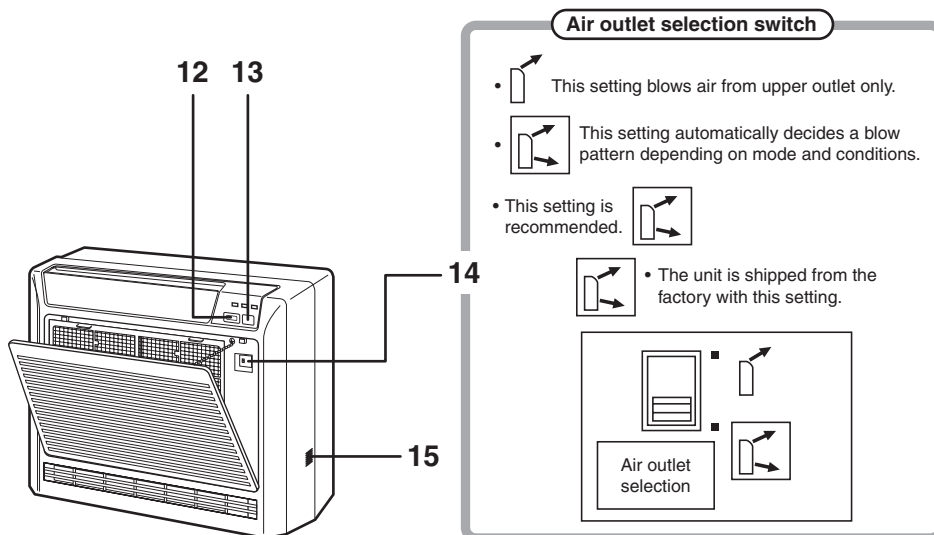

### CAUTION

- Before opening the front panel, be sure to stop the operation and turn the breaker OFF.
- Do not touch the metal parts on the inside of the indoor unit, as it may result in injury.

## ■ Outdoor Unit

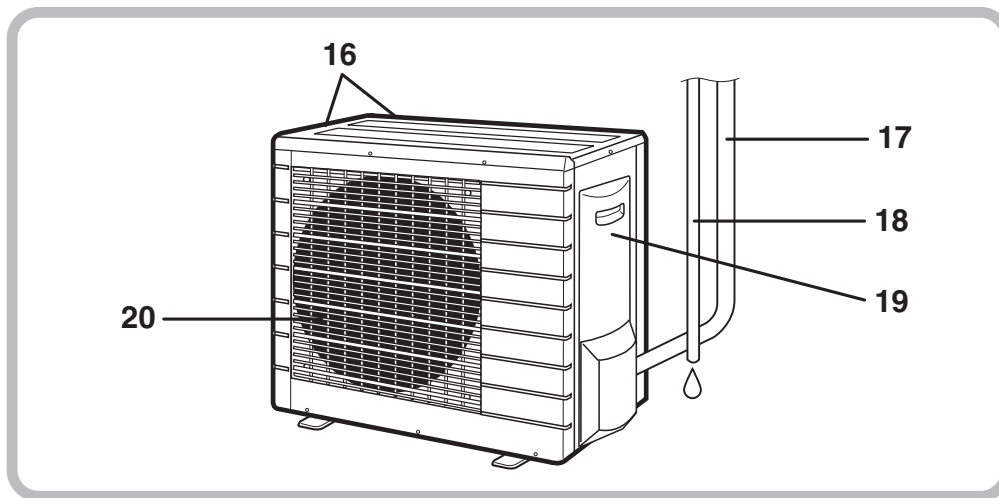

## ■ Indoor Unit

### 1. Photocatalytic deodorizing filter and Air purifying filter:

- These filters are attached to the inside of the air filters.

### 2. Air outlet

### 3. Display

### 4. Front grille

### 5. Louvers (vertical blades):

- The louvers are inside of the air outlet.

### 6. Air inlet

### 7. Air filter

### 8. Flap (horizontal blade)

### 9. Operation lamp (green)

### 10. TIMER lamp (yellow)

### 11. HOME LEAVE lamp (red)

### 12. Indoor Unit ON/OFF switch:

- Push this switch once to start operation.  
Push it once again to stop it.

- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
FVKS	COOL	22°C	AUTO
FVXS	AUTO	25°C	AUTO

- This switch is useful when the remote control is missing.

### 13. Signal receiver:

- Signals are received from the remote control.
- When the unit receives a signal you will hear a short beep.
  - Operation start .....beep-beep
  - Settings changed.....beep
  - Operation stop.....beeeeeep

### 14. Air outlet selection switch

### 15. Room temperature sensor:

- It senses the air temperature around the unit.

## ■ Outdoor Unit

### 16. Air inlet: (Back and side)

### 17. Refrigerant piping and inter-unit cable

### 18. Drain hose

### 19. Earth terminal:


- It is inside of this cover.

### 20. Air outlet

Appearance of the outdoor unit may differ from some models.



## Remote Control

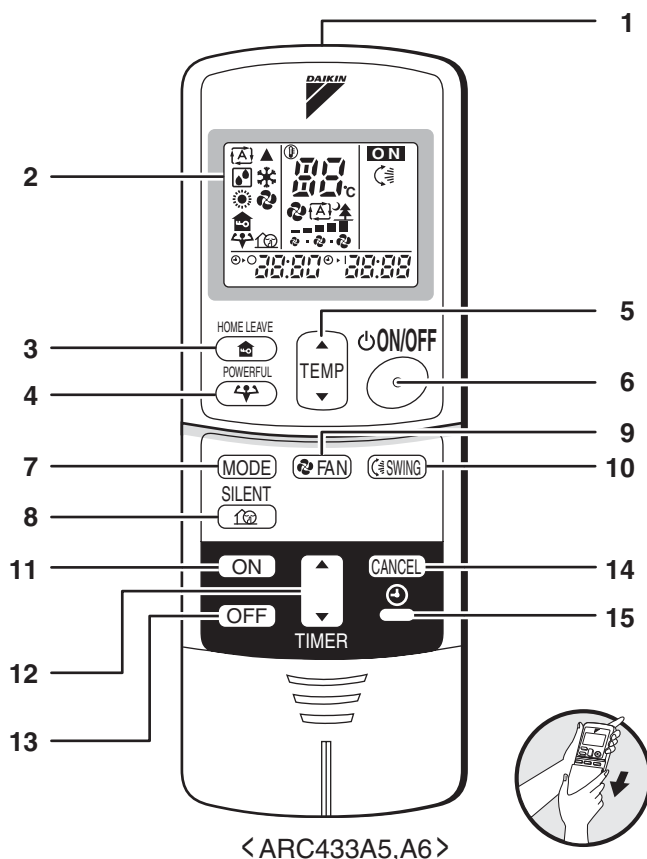

**1. Signal transmitter:**

- It sends signals to the indoor unit.

**2. Display:**

- It displays the current settings.  
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

**3. HOME LEAVE button:**

for HOME LEAVE operation

**4. POWERFUL button:**

for POWERFUL operation

**5. TEMPERATURE adjustment buttons:**

- It changes the temperature setting.

**6. ON/OFF button:**

- Press this button once to start operation.  
Press once again to stop it.

**7. MODE selector button:**

- It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN)

**8. SILENT button:** OUTDOOR UNIT SILENT operation

**9. FAN setting button:**

- It selects the air flow rate setting.

**10. SWING button**

**11. ON TIMER button**

**12. TIMER Setting button:**

- It changes the time setting.

**13. OFF TIMER button**

**14. TIMER CANCEL button:**


- It cancels the timer setting.

**15. CLOCK button.**

## 2.1.4 Preparation before Operation

### ■ To set the batteries

1. Slide the front cover to take it off.
2. Set two dry batteries (AAA).
3. Set the front cover as before.

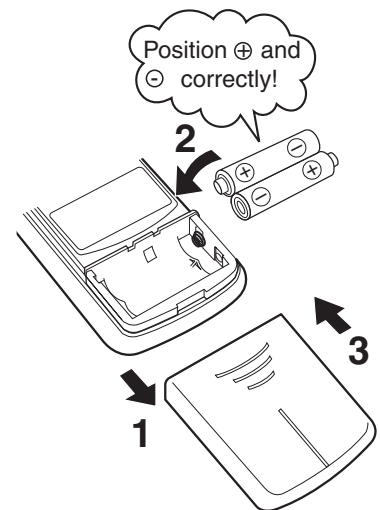


### ATTENTION

#### ■ About batteries

- When replacing the batteries, use batteries of the same type, and replace the two old batteries together.
- When the system is not used for a long time, take the batteries out.
- We recommend replacing once a year, although if the remote control display begins to fade or if reception deteriorates, please replace with new alkali batteries. Do not use manganese batteries.
- The attached batteries are provided for the initial use of the system. The usable period of the batteries may be short depending on the manufactured date of the air conditioner.


## ■ To operate the remote control

- To use the remote control, aim the transmitter at the indoor unit. If there is anything to block signals between the unit and the remote control, such as a curtain, the unit will not operate.
- Do not drop the remote control. Do not get it wet.
- The maximum distance for communication is about 7m.

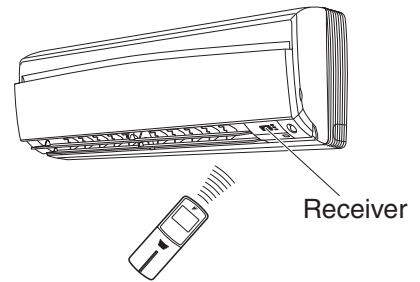

## ■ To fix the remote control holder on the wall

1. Choose a place from where the signals reach the unit.
2. Fix the holder to a wall, a pillar, or similar location with the screws procured locally.
3. Place the remote control in the remote control holder.

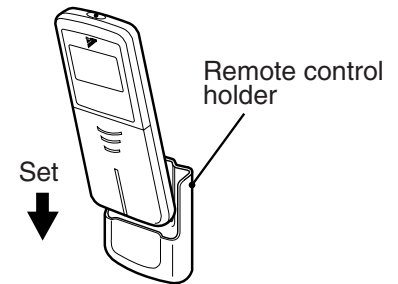

- To remove, pull it upwards.

## ATTENTION

### ■ About remote control


- Never expose the remote control to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote control signals happen to operate another appliance, move that appliance to somewhere else, or consult the shop.

**■ To set the clock**

1. Press “**CLOCK button**”.  
0:00 is displayed.  
⌚ blinks.
2. Press “**TIMER setting button**” to set the clock to the present time.  
Holding down “▲” or “▼” button rapidly increases or decreases the time display.
3. Press “**CLOCK button**”.  
: blinks.

**■ Turn the breaker ON**

- Turning ON the breaker opens the flap, then closes it again. (This is a normal procedure.)

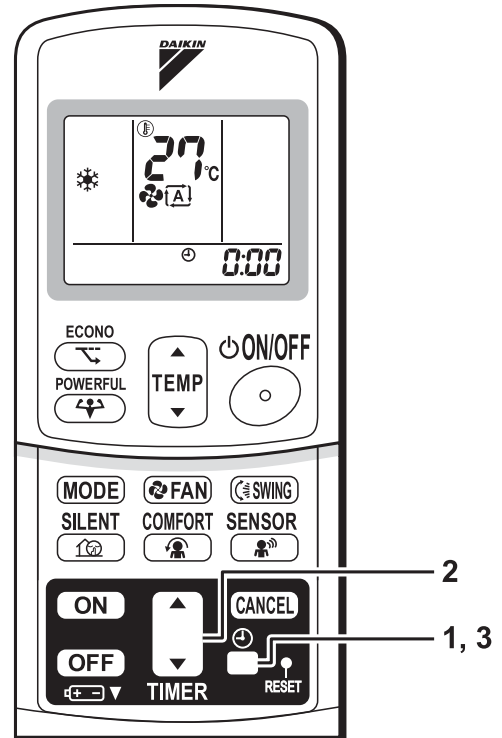

**NOTE**

**■ Tips for saving energy**

- Be careful not to cool (heat) the room too much.  
Keeping the temperature setting at a moderate level helps to save energy.
- Cover windows with a blind or a curtain.  
Blocking sunlight and air from outdoors increases the cooling (heating) effect.
- Clogged air filters cause inefficient operation and waste energy. Clean them once in about every two weeks.

Recommended temperature setting
For cooling: 26°C – 28°C
For heating: 20°C – 24°C

**■ Please note**

- The air conditioner always consumes 15-35 watts of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker OFF.
- Use the air conditioner in the following conditions.

Mode	Operating conditions	If operation is continued out of this range
COOL	Outdoor temperature: <2MK(X)S40> 10 to 46°C <2MXS52> -10 to 46°C <3/4/5MK(X)S> -10 to 46°C <RK(X)S> -10 to 46°C Indoor temperature: 18 to 32°C Indoor humidity: 80% max.	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation. (In multi system, it may work to stop the operation of the outdoor unit only.)</li> <li>• Condensation may occur on the indoor unit and drip.</li> </ul>
HEAT	Outdoor temperature: <2MXS40> -10 to 15.5°C <2MXS52> -15 to 15.5°C <3/4/5MXS> -15 to 15.5°C <RXS50> -15 to 18°C Indoor temperature: 10 to 30°C	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation.</li> </ul>
DRY	Outdoor temperature: <2MK(X)S40> 10 to 46°C <2MXS52> -10 to 46°C <3/4/5MK(X)S> -10 to 46°C <RK(X)S> -10 to 46°C Indoor temperature: 18 to 32°C Indoor humidity: 80% max.	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation.</li> <li>• Condensation may occur on the indoor unit and drip.</li> </ul>

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

## 2.1.5 AUTO • DRY • COOL • HEAT • FAN Operation

The air conditioner operates with the operation mode of your choice. From the next time on, the air conditioner will operate with the same operation mode.

### ■ To start operation

1. Press “MODE selector button” and select an operation mode.

- Each pressing of the button advances the mode setting in sequence.

☐A : AUTO


☐D : DRY

❄ : COOL

☀ : HEAT

☐F : FAN

<F(C)TKS>

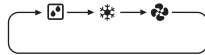


<F(C)TXS>



2. Press “ON/OFF” button .

- The OPERATION lamp lights up.

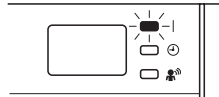


### ■ To stop operation

3. Press “ON/OFF button” again.

- Then OPERATION lamp goes off.

### ■ To change the temperature setting



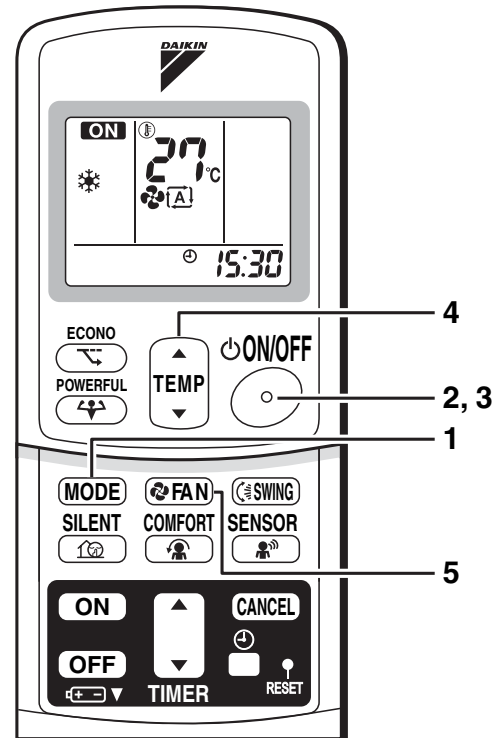


4. Press “TEMPERATURE adjustment button”.




DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like 

## ■ To change the air flow rate setting

### 5. Press "FAN setting button".

DRY mode	AUTO or COOL or HEAT or FAN mode
The air flow rate setting is not variable	Five levels of air flow rate setting from "  " to "  " plus "  " "  " are available. 

- Indoor unit quiet operation

When the air flow is set to "  ", the noise from the indoor unit will become quieter.

Use this when making the noise quieter.

The unit might lose power when the fan strength is set to weak level.

## NOTE

### ■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.

### ■ Note on COOL operation

- This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, performance drops.

### ■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and fan strength, so manual adjustment of these functions is unavailable.

### ■ Note on AUTO operation

- In AUTO operation, the system selects an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, you can manually select the operation mode and setting you like.

### ■ Note on air flow rate setting





- At smaller air flow rates, the cooling (heating) effect is also smaller.


## 2.1.6 Adjusting the Air Flow Direction

### FTXG 25/35 E, CTXG 50 E, ATXG 25/50 E




You can adjust the air flow direction to increase your comfort.

#### ■ To adjust the horizontal blade (flap)

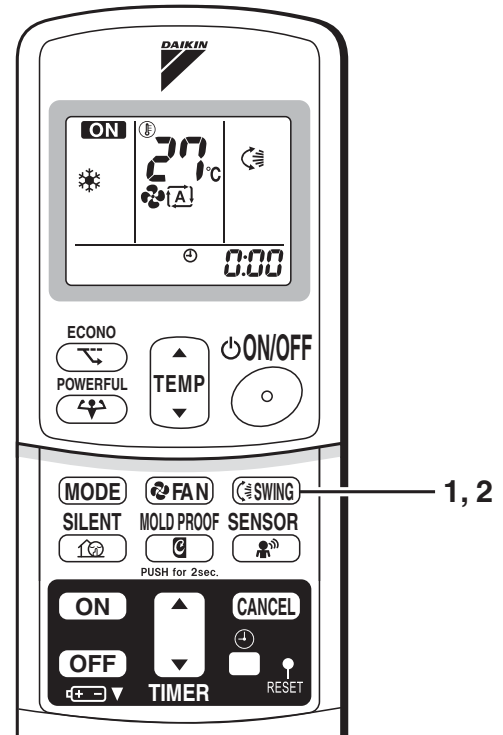



1. Press "SWING button ".
  - "  " is displayed on the LCD.
2. When the flap have reached the desired position, press "SWING button " once more.
  - The flap will stop moving.
  - "  " disappears from the LCD.



#### ■ To adjust the vertical blades (louvers)

3. Press "SWING button ".
  - "  " is displayed on the LCD.
4. When the louvers have reached the desired position, press the "SWING button " once more.
  - The louvers will stop moving.

#### ■ To 3-D Airflow


1. 3. Press the "SWING button " and the "SWING button ": the "  " and "  " display will light up and the flap and louvers will move in turn.

#### ■ To cancel 3-D Airflow

2. 4. Press either the "SWING button " or the "SWING button ".


## ■ To start COMLFORT AIRFLOW operation

### 5. Press “COMFORT AIRFLOW button”.


- The flap orientational change, preventing air from blowing directly on the occupants of the room.
- “” is displayed on the LCD.
- [COOL/DRY] The flap will go up.
- [HEAT] The flap will go down.

## ■ To cancel COMFORT AIRFLOW operation

### 6. Press “COMFORT AIRFLOW button” again.

- The flaps will return to the memory position from before COMFORT AIRFLOW mode.
- “” disappears from the LCD

## Notes on flaps and louvers angles

- When “**SWING button** ” is selected, the flap swinging range depends on the operation mode. (See the figure.)

### Three-Dimensional (3-D) Airflow

- Using three-dimensional airflow circulates cold air, which tends to collect at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.


### Comfort Airflow

- The air flow is set automatically.
- The air direction is as shown in the figure at right.


### ■ ATTENTION

- Always use a remote control to adjust the flap angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Always use a remote control to adjust the louvers angles.


In COOL or DRY mode

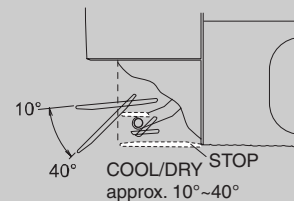

In HEAT or FAN mode

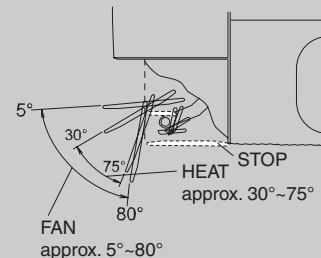

In COMFORT AIRFLOW mode

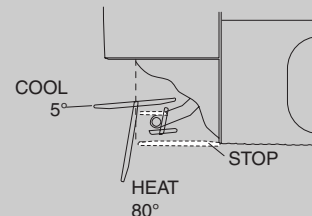


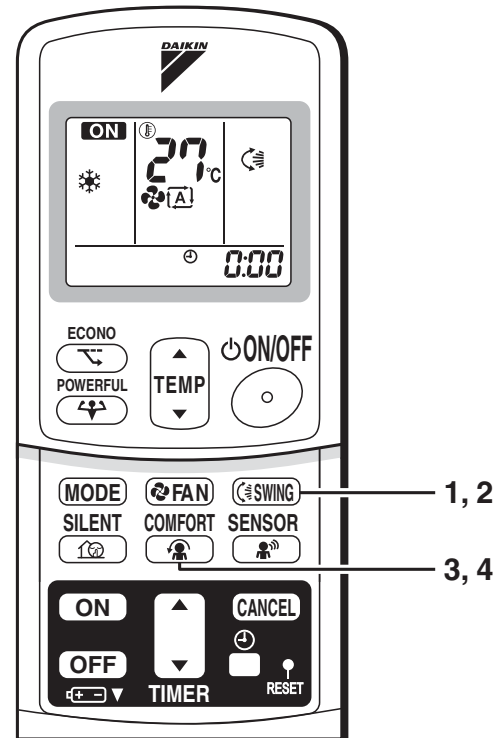


## FTK(X)S 20-50 D, ATXS 20-50 E

You can adjust the air flow direction to increase your comfort.

### ■ To adjust the horizontal blades (flaps)

1. Press "SWING button".  
"  " is displayed on the LCD and the flaps will begin to swing.
2. When the flaps have reached the desired position, press "SWING button" once more.
  - The display will go blank.
  - The flaps will stop moving.




### ■ To adjust the vertical blades (louvers)

Hold the knob and move the louvers.


(You will find a knob on the left-side and the right-side blades.)

- When the unit is installed in the corner of a room, the direction of the louvers should be facing away from the wall. If they face the wall, the wall will block off the wind, causing the cooling (or heating) efficiency to drop.

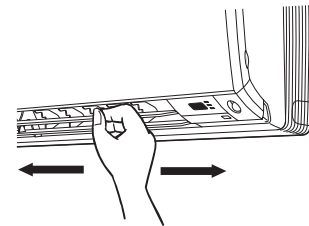


## ■ To start COMFORT AIRFLOW operation

### 3. Press “COMFORT AIRFLOW button”.

- The flap position will change, preventing air from blowing directly on the occupants of the room.
- “” is displayed on the LCD.
- [COOL/DRY] The flap will go up.
- [HEAT] The flap will go down.

## ■ To cancel COMFORT AIRFLOW operation

### 4. Press “COMFORT AIRFLOW button” again.

- The flaps will return to the memory position from before COMFORT AIRFLOW mode.
- “” disappears from the LCD

## Notes on COMFORT AIRFLOW operation


- POWERFUL operation and COMFORT AIRFLOW operation cannot be used at the same time. Priority is given to POWERFUL operation

## Notes on flaps and louvers angles

- When “**SWING button**” is selected, the flaps swinging range depends on the operation mode. (See the figure.)

### ■ ATTENTION

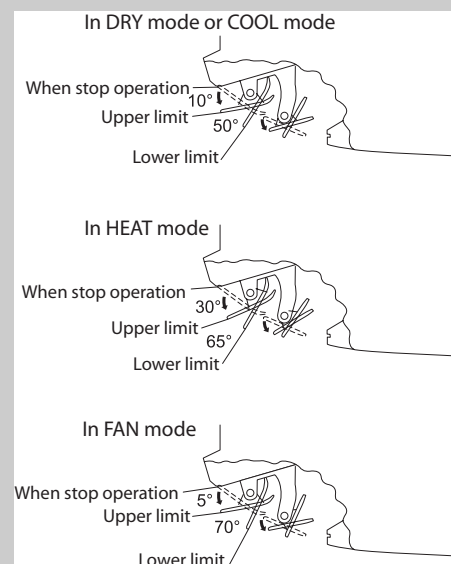

- Always use a remote control to adjust the flaps angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.




**FTK(X)S 20/35 C, ATXS 20/35 D**

You can adjust the air flow direction to increase your comfort.

**■ To adjust the horizontal blades (flaps)**


1. Press “SWING button”.
  - “” is displayed on the LCD and the flaps will begin to swing.
2. When the flaps has reached the desired position, press “SWING button” once more.
  - The flap will stop moving.
  - “” disappears from the LCD

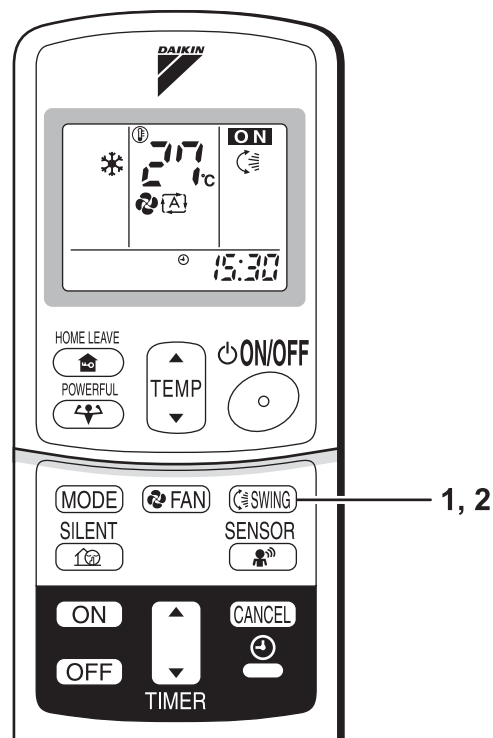

## ■ To adjust the vertical blades (louvers)

Hold the knob and move the louvers.

(You will find a knob on the left-side and the right-side blades.)

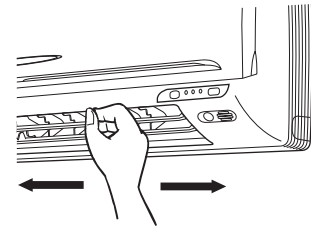


## Notes on flaps and louvers angles.

- When “**SWING button**” is selected, the flaps swinging range depends on the operation mode. (See the figure.)

### ■ ATTENTION



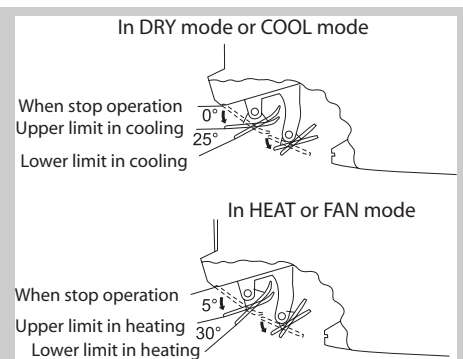

- Always use a remote control to adjust the flaps angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.




## FTK(X)S 50 E, ATX 50 E

You can adjust the air flow direction to increase your comfort.

### ■ To adjust the horizontal blade (flap)



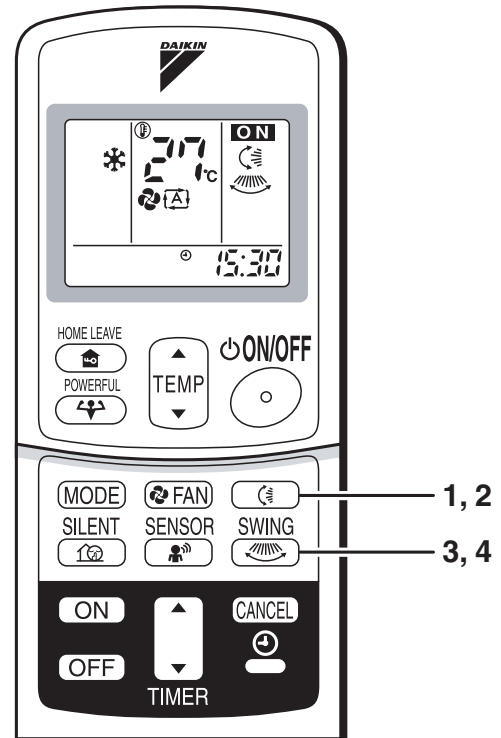

1. Press "SWING button ".
  - " " is displayed on the LCD and the flaps will begin to swing.
2. When the flap has reached the desired position, press "SWING button  " once more.
  - The flap will stop moving.
  - " " disappears from the LCD



### ■ To adjust the vertical blades (louvers)

3. Press "SWING button ".
  - " " is displayed on the LCD.
4. When the louvers have reached the desired position, press the "SWING button  " once more.
  - The louvers will stop moving.

## ■ To 3-D Airflow

- 1.3. Press the “SWING button ” and the “SWING button ”: the “” and “” display will light up and the flap and louvers will move in turn.

## ■ To cancel 3-D Airflow

- 2.4. Press either the “SWING button ” or the “SWING button ”.

## Notes on louvers angles

### ■ ATTENTION

- Always use a remote control to adjust the louvers angles. Inside the air outlet, a fan is rotating at a high speed.

## Notes on flap angles


- When “**SWING button**” is selected, the flaps swinging range depends on the operation mode. (See the figure.)

### Three-Dimensional (3-D) Airflow

- Using three-dimensional airflow circulates cold air, which tends to collect at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.

### ■ ATTENTION

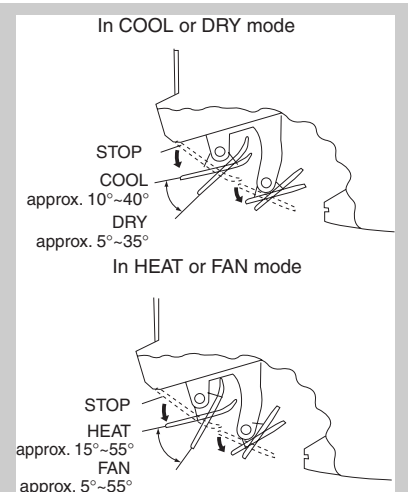

- Always use a remote control to adjust the flaps angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers. Inside the air outlet, fan is rotating at a high speed.




## FLK(X)S 25-50 B

You can adjust the air flow direction to increase your comfort.


### ■ To adjust the horizontal blade (flap)

1. Press “SWING button”
  - “” is displayed on the LCD and the flaps will begin to swing.
2. When the flaps have reached the desired position, press “SWING button” once more.
  - The flap will stop moving.
  - “” disappears from the LCD.

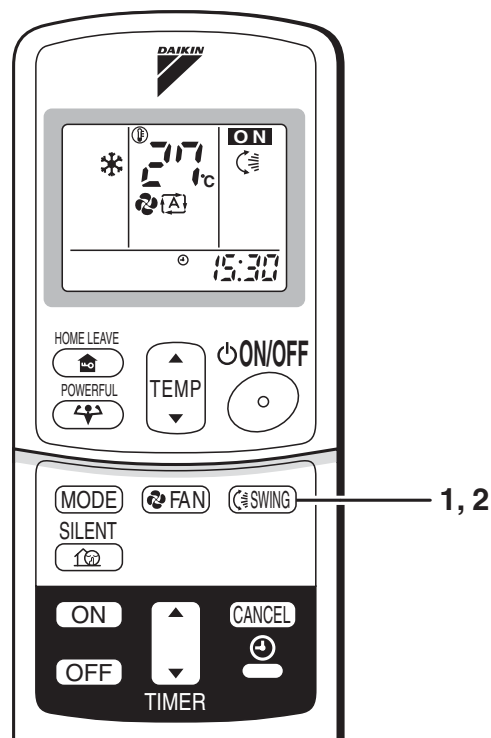

## ■ To adjust the vertical blades (louvers)

- When adjusting the louver, use a robust and stable stool and watch your steps carefully. Hold the knob and move the louvers. (You will find a knob on the left side and the right side blades.)

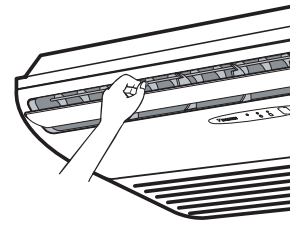


## Notes on flap and louvers angles.

- Unless [SWING] is selected, you should set the flap at a near-horizontal angle in COOL or DRY mode to obtain the best performance.
- In COOL or DRY mode, if the flap is fixed at a downward position, the flap automatically moves in about 60 minutes to prevent condensation on it.

### ■ ATTENTION

- Always use a remote control to adjust the flap angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.

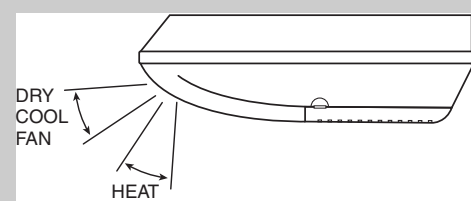






## FVK(X)S 25-50 B

You can adjust the air flow direction to increase your comfort.


### ■ To adjust the horizontal blade (flap)

1. Press "SWING button".
  - "  " is displayed on the LCD and the flaps will begin to swing.
2. When the flap have reached the desired position, press "SWING button" once more.
  - The flap will stop moving.
  - "  " disappears from the LCD.

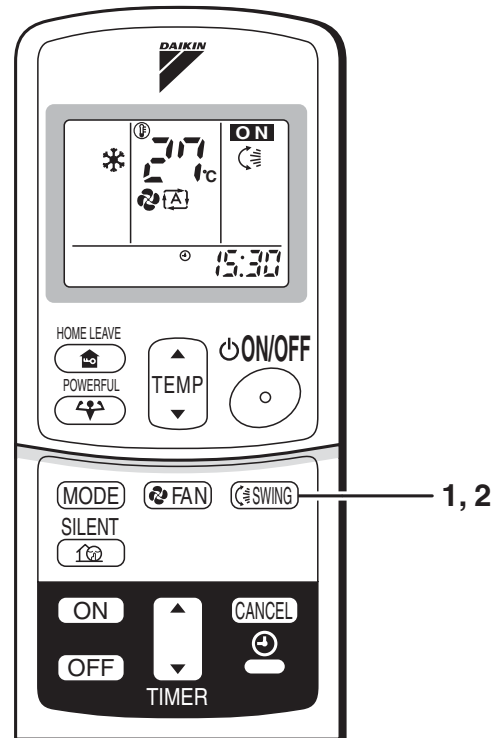

### ■ To adjust the vertical blades (louvers)

Hold the knob and move the louver.  
(You will find a knob on the left-side and the right-side blades.)

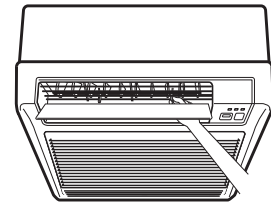


### Notes on flap and louvers angle.

- Unless [SWING] is selected, you should set the flap at a near- horizontal angle in HEAT mode and at an upward position in COOL or DRY mode to obtain the best performance.

#### ■ ATTENTION

- When adjusting the flap by hand, turn off the unit, and use the remote control to restart the unit.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.

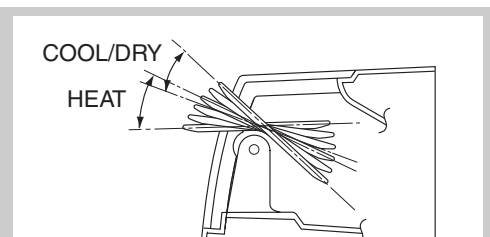


## ■ Air flow selection

- Make air flow selection according to what suits you.

### When setting the air flow selection switch to

- Air conditioner automatically decides the appropriate blowing pattern depending on the operating mode/situation.

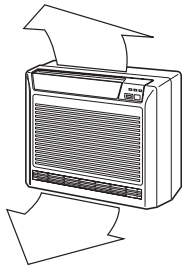Operating mode	Situation	Blowing pattern
COOL mode	<ul style="list-style-type: none"> <li>• When the room has become fully cool, or when one hour has passed since turning on the air conditioner.</li> </ul>	<ul style="list-style-type: none"> <li>• So that air does not come into direct contact with people, air is blown upper air outlet, room temperature is equilised.</li> </ul>
	<ul style="list-style-type: none"> <li>• At start of operation or other times when the room is not fully cooled.</li> </ul>	 <ul style="list-style-type: none"> <li>• Air is blown from the upper and lower air outlets for high speed cooling during COOL mode, and for filling the room with warm air during HEAT mode.</li> </ul>
HEAT mode	<ul style="list-style-type: none"> <li>• At times other than below. (Normal time.)</li> </ul>	
	<ul style="list-style-type: none"> <li>• At start or when air temperature is low.</li> </ul>	

- During Dry mode, so that cold air does not come into direct contact with people, air is blown upper air outlet.

### When setting the air outlet selection switch to

- Regardless of the operating mode or situation, air blows from the upper air outlet.
- Use this switch when you do not want air coming out of the lower air outlet. (While sleeping etc..)


## CAUTION

- Do not try to adjust the flap by hand.
- When adjusting by hand, the mechanism may not operate properly or condensation may drip from air outlets.


## 2.1.7 POWERFUL Operation


POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.

### ■ To start POWERFUL operation

1. Press "POWERFUL button".
  - POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the settings which were used before POWERFUL operation.
  - When using POWERFUL operation, there are some functions which are not available.
  - "  " is displayed on the LCD


### ■ To cancel POWERFUL operation

2. Press "POWERFUL button" again.
  - "  " disappears from the LCD.

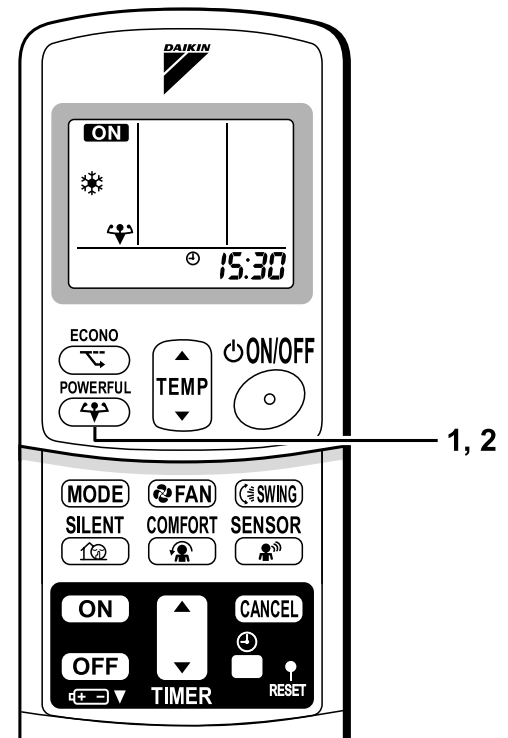

## NOTE

### ■ Notes on POWERFUL operation

- POWERFUL Operation cannot be used together with ECONO, SILENT, or COMFORT Operation. Priority is given to the function of whichever button is pressed last.
- POWERFUL Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the "  " disappears from the LCD.
- **In COOL and HEAT mode**  
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the air flow rate be fixed to the maximum setting.  
The temperature and air flow settings are not variable.
- **In DRY mode**  
The temperature setting is lowered by 2.5°C and the air flow rate is slightly increased.
- **In FAN mode**  
The air flow rate is fixed to the maximum setting.
- **When using priority-room setting**  
See "Note for multi system".

## 2.1.8 OUTDOOR UNIT SILENT Operation


OUTDOOR UNIT SILENT operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

### ■ To start OUTDOOR UNIT SILENT operation

1. Press "SILENT button".
  - "  " is displayed on the LCD.

### ■ To cancel OUTDOOR UNIT SILENT operation

2. Press "SILENT button".
  - "  " disappears from the LCD.

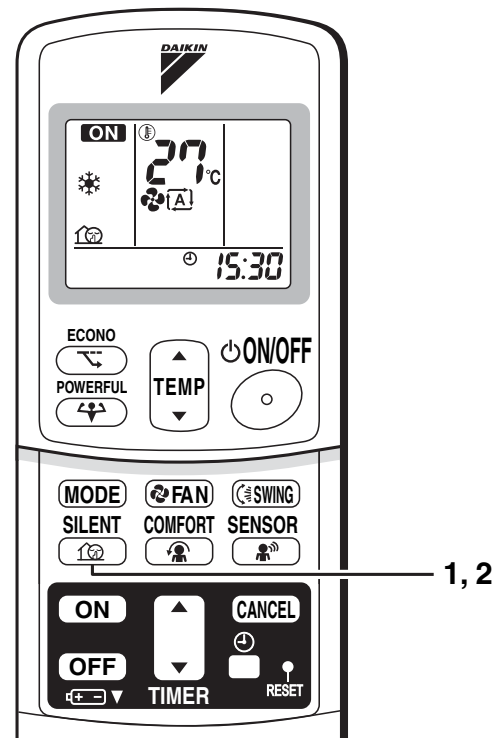

## NOTE


### ■ Note on OUTDOOR UNIT SILENT operation

- If using a multi system, this function will work only when the OUTDOOR UNIT SILENT operation is set on all operated indoor units.  
However, if using priority-room setting, see "Note for multi system".
- This function is available in COOL, HEAT, and AUTO modes.  
(This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT SILENT operation cannot be used at the same time.  
Priority is given to the function of whichever button is pressed last.


## 2.1.9 ECONO Operation


ECONO operation is a function which enables efficient operation by lowering the maximum power consumption value.

### ■ To start ECONO operation


1. Press "ECONO button".
  - "  " is displayed on the LCD.

### ■ To cancel ECONO operation

2. Press "ECONO button" again.
  - "  " disappears from the LCD.

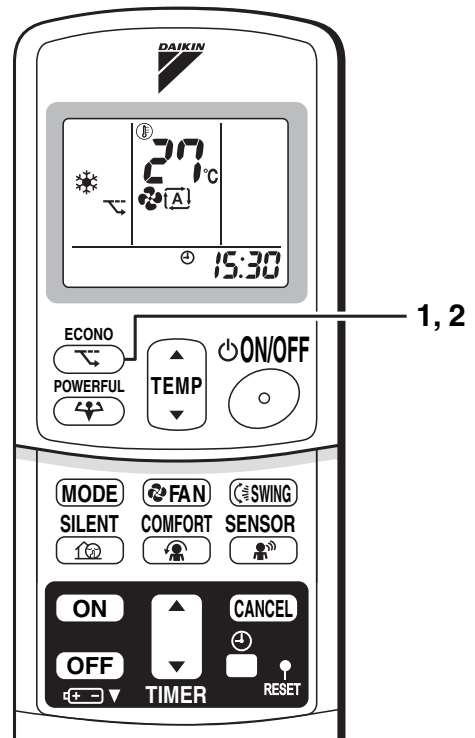

## NOTE


- ECONO Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the "  " disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY and HEAT modes. The fan strength does not change in ECONO operation.
- POWERFUL operation and ECONO operation cannot be used at the same time. Priority is given to POWERFUL operation.
- Power consumption may not drop even if ECONO operation is used, when the level of power consumption is already low.

## 2.1.10 HOME LEAVE Operation

HOME LEAVE operation is a function which allows you to record your preferred temperature and air flow rate settings.


### ■ To start HOME LEAVE operation

1. Press "HOME LEAVE button".
  - "🏠" is displayed on the LCD.
  - The HOME LEAVE lamp lights up.

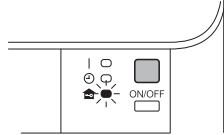

### ■ To cancel HOME LEAVE operation

2. Press "HOME LEAVE button" again.
  - "🏠" disappears from the LCD.
  - The HOME LEAVE lamp goes off.

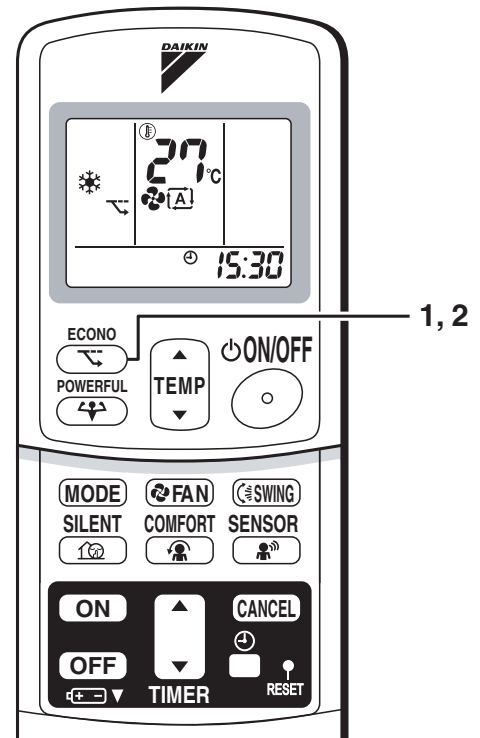

## Before using HOME LEAVE operation

### ■ To set the temperature and air flow rate for HOME LEAVE operation

When using HOME LEAVE operation for the first time, please set the temperature and air flow rate for HOME LEAVE operation. Record your preferred temperature and air flow rate.

	Initial setting		Selectable range	
	temperature	Air flow rate	temperature	Air flow rate
Cooling	25°C	AUTO	18-32°C	5 step, AUTO and SILENT
Heating	25°C	AUTO	10-30°C	5 step, AUTO and SILENT

1. Press "HOME LEAVE button". Make sure "🏠" is displayed in the remote control display.
2. Adjust the set temperature with "▲" or "▼" as you like.
3. Adjust the air flow rate with "FAN" setting button as you like.

Home leave operation will run with these settings the next time you use the unit. To change the recorded information, repeat steps 1 – 3.

## ■ What's the HOME LEAVE operation?


Is there a set temperature and air flow rate which is most comfortable, a set temperature and air flow rate which you use the most? HOME LEAVE operation is a function that allows you to record your favorite set temperature and air flow rate. You can start your favorite operation mode simply by pressing the HOME LEAVE button on the remote control. This function is convenient in the following situations.

### ■ Useful in these cases

#### 1. Use as an energy-saving mode

Set the temperature 2-3°C higher (cooling) or lower (heating) than normal. Setting the fan strength to the lowest setting allows the unit to be used in energy-saving mode. Also convenient for use while you are out or sleeping.


- **Every day before you leave the house...**

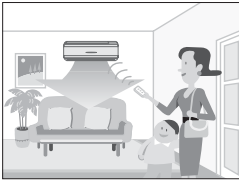

When you go out, push the "HOME LEAVE Operation" button, and the air conditioner will adjust capacity to reach the preset temperature for HOME LEAVE Operation.




When you return, you will be welcomed by a comfortably air conditioned room.

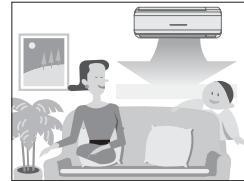


Push the "HOME LEAVE Operation" button again, and the air conditioner will adjust capacity to the set temperature for normal operation.


- **Before bed...**

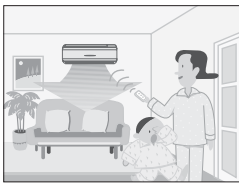

Set the unit to HOME LEAVE Operation before leaving the living room when going to bed.

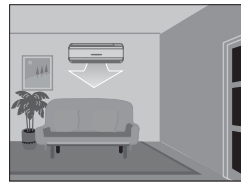

The unit will maintain the temperature in the room at a comfortable level while you sleep.

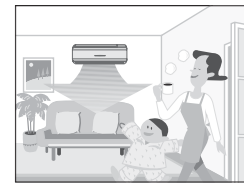


When you enter the living room in the morning, the temperature will be just right. Disengaging HOME LEAVE Operation will return the temperature to that set for normal operation. Even the coldest winters will pose no problem!

#### 2. Use as a favorite mode

Once you record the temperature and air flow rate settings you most often use, you can retrieve them by pressing HOME LEAVE button. You do not have to go through troublesome remote control operations.

### NOTE


- Once the temperature and air flow rate for HOME LEAVE operation are set, those settings will be used whenever HOME LEAVE operation is used in the future. To change these settings, please refer to the "Before using HOME LEAVE operation" section above.
- HOME LEAVE operation is only available in COOL and HEAT mode. Cannot be used in AUTO, DRY, and FAN mode.
- HOME LEAVE operation runs in accordance with the previous operation mode (COOL or HEAT) before using HOME LEAVE operation.
- HOME LEAVE operation and POWERFUL operation cannot be used at the same time. Last button that was pressed has priority.
- The operation mode cannot be changed while HOME LEAVE operation is being used.
- When operation is shut off during HOME LEAVE operation, using the remote control or the indoor unit ON/OFF switch,  will remain on the remote control display.

## 2.1.11 INTELLIGENT EYE Operation

FTK(X)S 20-50 D, FTK(X)S 50 E, ATXS 20-50 E, ATX 50 E

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.



### ■ To start INTELLIGENT EYE operation

1. Press “SENSOR button”.
  - “” is displayed on the LCD.

### ■ To cancel the INTELLIGENT EYE operation

2. Press “SENSOR button” again.
  - “” disappears from the LCD.

[EX.]

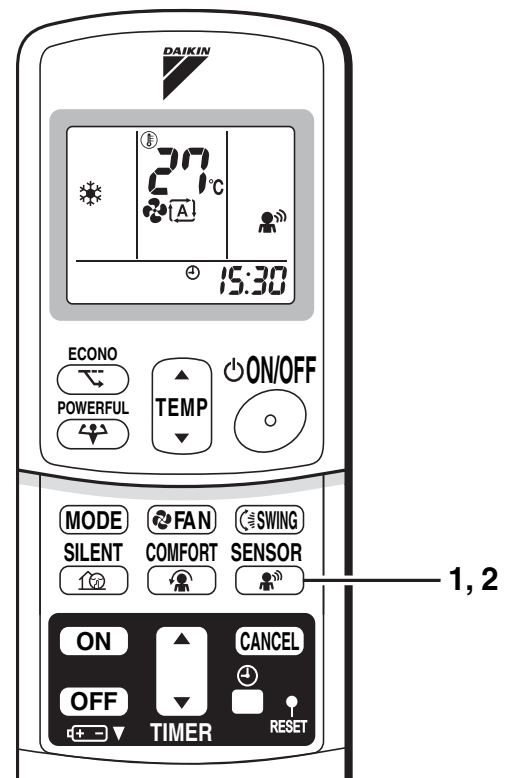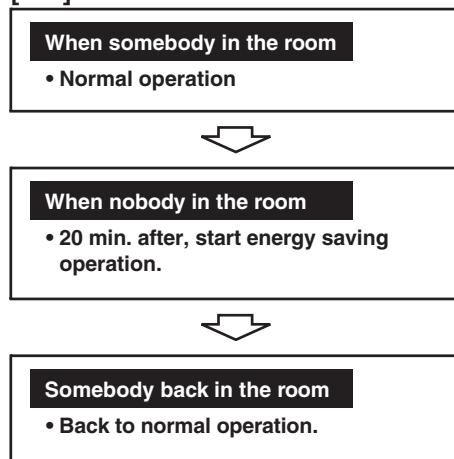




## “INTELLIGENT EYE” is useful for Energy Saving

### ■ Energy saving operation

- Change the temperature  $-2^{\circ}\text{C}$  in heating /  $+2^{\circ}\text{C}$  in cooling /  $+2^{\circ}\text{C}$  in dry mode from set temperature.
- Decrease the air flow rate slightly in fan operation. (In FAN mode only)

### Notes on “INTELLIGENT EYE”

- Application range is as follows.

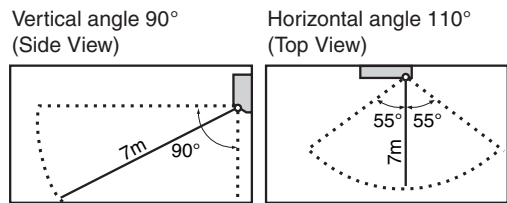

- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during powerful operation.
- Night set mode will not go on while you use INTELLIGENT EYE operation.


### CAUTION

- Do not place large objects near the sensor.  
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect objects it shouldn't as well as not detect objects it should.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.


## FTK(X)S 20-35 C, ATXS 20-35 D

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.



### ■ To start INTELLIGENT EYE operation

1. Press “SENSOR button”.
  - “” is displayed on the LCD.

### ■ To cancel the INTELLIGENT EYE operation


2. Press “SENSOR button” again.
  - “” disappears from the LCD.

[EX.]

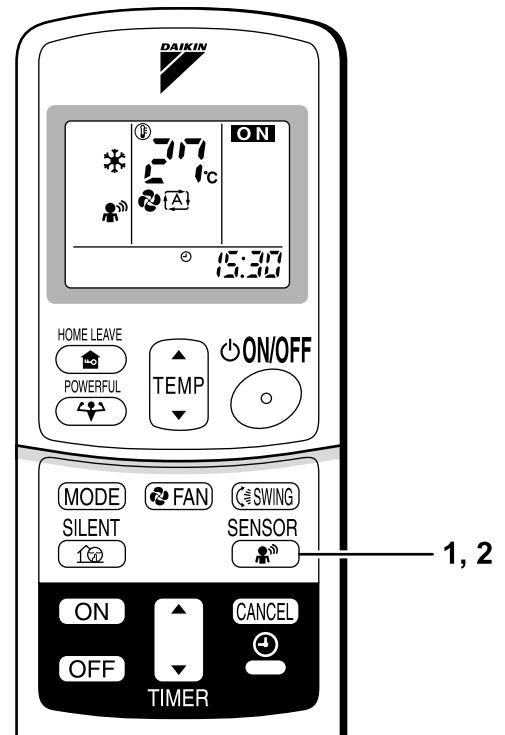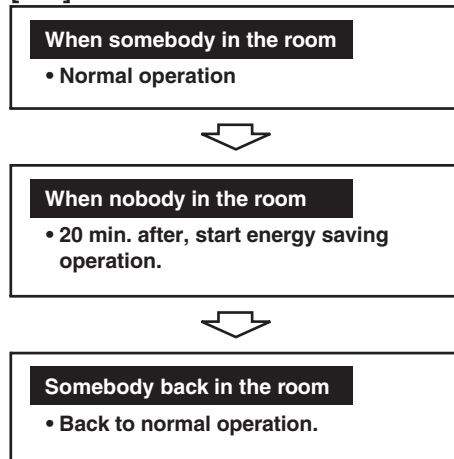


**■ To adjust the angle of the INTELLIGENT EYE sensor**

- You can adjust the angle of the INTELLIGENT EYE sensor to increase the detection area. (Adjustable angle: 15° to right and left of centre)

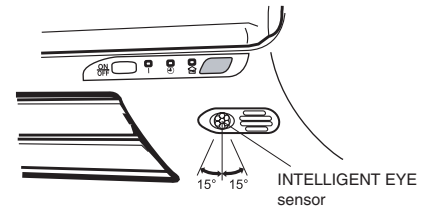

- Gently push and slide the sensor to adjust the angle.
- After adjusting the angle, wipe the sensor gently with a clean cloth, being careful not to scratch the sensor.

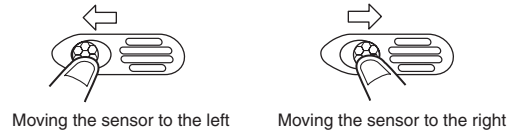


**“INTELLIGENT EYE” is useful for Energy Saving.**

**■ Energy saving operation**

- Change the temperature -2°C in heating / +2°C in cooling / +1°C in dry mode from set temperature.
- Decrease the air flow rate slightly in fan operation. (In FAN mode only)

**Notes on “INTELLIGENT EYE”**

- Application range is as follows.

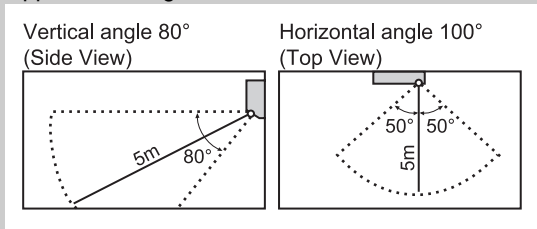

- Sensor may not detect moving objects further than 5m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during powerful operation.
- Night set mode will not go on during you use INTELLIGENT EYE operation.


**⚠ CAUTION**

- Do not place large objects near the sensor. Also keep heating units or humidifiers outside the sensor’s detection area. This sensor can detect objects it shouldn’t as well as not detect objects it should.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.


## FTXG 25/35 E, CTXG 50 E, ATXG 25-50 E

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.

### ■ To start INTELLIGENT EYE operation

1. Press “SENSOR button”.
  - “” is displayed on the LCD.


### ■ To cancel the INTELLIGENT EYE operation

2. Press “SENSOR button” again.
  - “” disappears from the LCD.

[EX.]


**When somebody in the room**

- Normal operation.
- The INTELLIGENT EYE lamp lights up.

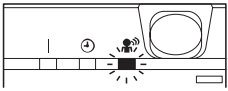




**When somebody in the room**

- 20 min. after, start energy saving operation.
- The INTELLIGENT EYE lamp goes off.

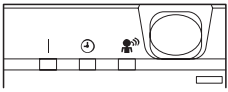


**Somebody back in the room**

- Back to normal operation.
- The INTELLIGENT EYE lamp lights up.

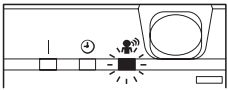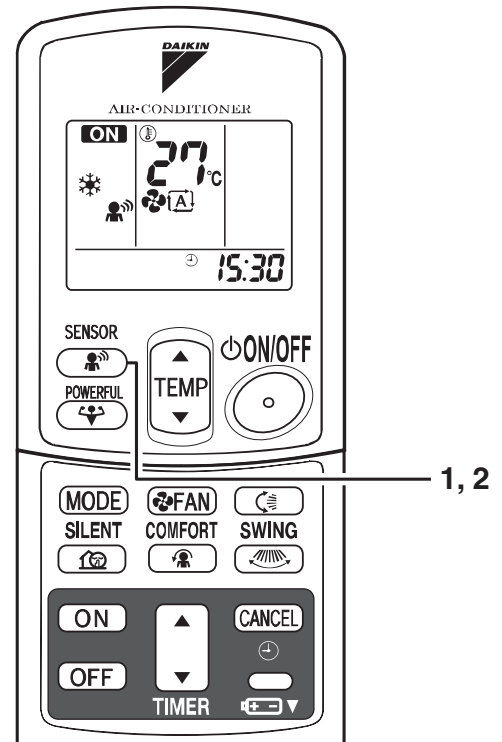
## “INTELLIGENT EYE” is useful for Energy Saving

### ■ Energy saving operation

- Change the temperature  $-2^{\circ}\text{C}$  in heating /  $+2^{\circ}\text{C}$  in cooling /  $+2^{\circ}\text{C}$  in dry mode from set temperature.
- Decrease the air flow rate slightly in fan operation. (In FAN mode only)

### Notes on “INTELLIGENT EYE”

- Application range is as follows.

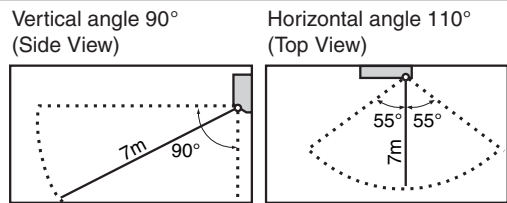

- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during powerful operation.
- Night set mode will not go on while you use INTELLIGENT EYE operation.

### CAUTION


- Do not place large objects near the sensor.  
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect objects it shouldn't as well as not detect objects it should.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

## 2.1.12 TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.


### ■ To use OFF TIMER operation

- Check that the clock is correct.  
If not, set the clock to the present time.
- 1. Press “OFF TIMER button”.  
0:00 is displayed.  
⊖-○ blinks.
- 2. Press “TIMER Setting button” until the time setting reaches the point you like.
  - Every pressing of either button increases or decreases the time setting by 10 minutes.  
Holding down either button changes the setting rapidly.
- 3. Press “OFF TIMER button” again.
  - The TIMER lamp lights up.

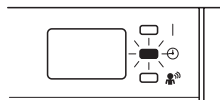

### ■ To cancel the OFF TIMER operation

4. Press “CANCEL button”.
  - The TIMER lamp goes off.

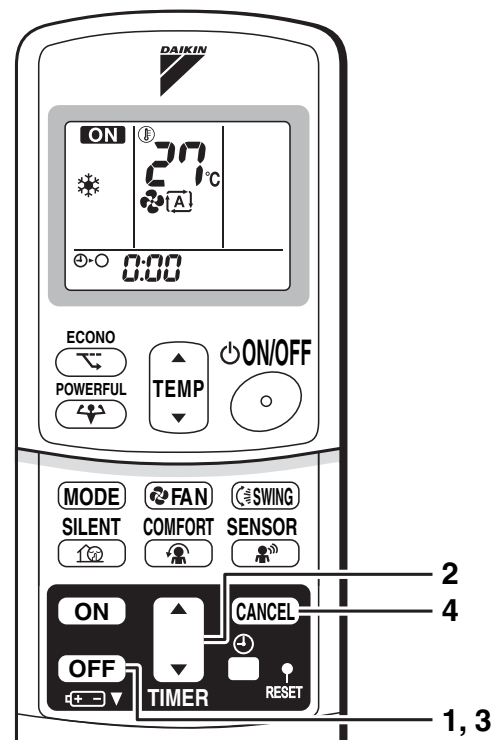

## NOTE


- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote control batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user.

### ■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

### ■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time.
- 1. Press “ON TIMER button”.
  - 6:00 is displayed.
  - “⊖|” blinks.
- 2. Press “TIMER Setting button” until the time setting reaches the point you like.
  - Every pressing of either button increases or decreases the time setting by 10 minutes.
  - Holding down either button changes the setting rapidly.
- 3. Press “ON TIMER button” again.
  - The TIMER lamp lights up..


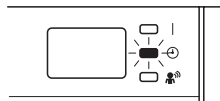


### ■ To cancel ON TIMER operation

- 4. Press “CANCEL button”.
  - The TIMER lamp goes off.

### ■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the two timers is shown below.

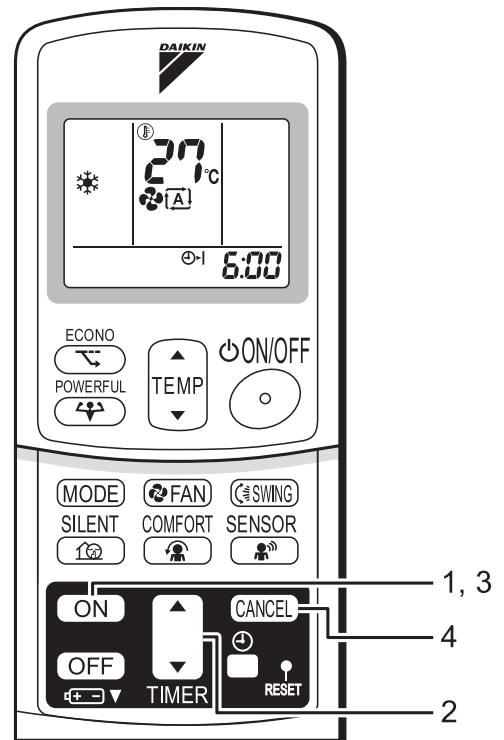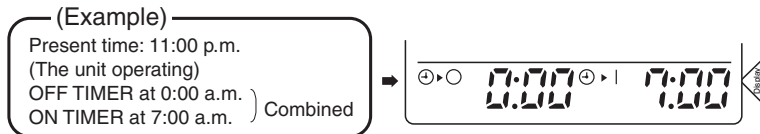


## ATTENTION

- In the following cases, set the timer again.
  - After a breaker has turned OFF.
  - After a power failure.
  - After replacing batteries in the remote control.

## 2.1.13 Note for Multi System

### <<What is a “Multi System”? >>

This system has one outdoor unit connected to multiple indoor units. Functions depend on the model. See the list of functions and applicable models (\*2) on the next page.

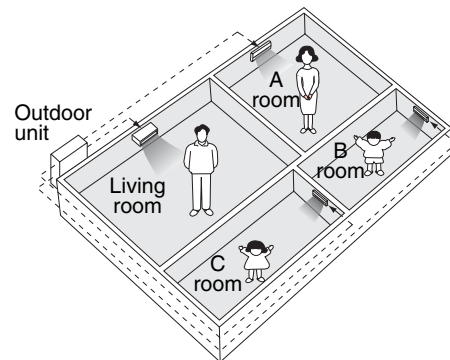

### ■ Selecting the Operation Mode

#### 1. With the Priority Room Setting present but inactive or not present

When more than one indoor unit is operating, priority is given to the first unit that was turned on. In this case, set the units that are turned on later to the same operation mode (\*1) as the first unit.

Otherwise, they will enter the Standby Mode, and the operation lamp will flash; this does not indicate malfunction.

(\*1)

- COOL, DRY and FAN mode may be used at the same time.
- AUTO mode automatically selects COOL mode or HEAT mode based on the room temperature. Therefore, AUTO mode is available when selecting the same operation mode as that of the room with the first unit to be turned on.

#### <CAUTION>

Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.

If the operation mode of the first room is **FAN Mode**, then using **Heating Mode** in any room after this will give priority to **heating**. In this situation, the air conditioner running in **FAN Mode** will go on standby, and the operation lamp will flash.

#### 2. With the Priority Room Setting active

See “Priority Room Setting” on the next page.

### ■ NIGHT QUIET Mode (Available only for cooling operation)

NIGHT QUIET Mode requires initial programming during installation. Please consult your retailer or dealer for assistance. NIGHT QUIET Mode reduces the operation noise of the outdoor unit during the night time hours to prevent annoyance to neighbors.

- The NIGHT QUIET Mode is activated when the temperature drops 5°C or more below the highest temperature recorded that day. Therefore, when the temperature difference is less than 5°C, this function will not be activated.
- NIGHT QUIET Mode reduces slightly the cooling (heating) efficiency of the unit.

### ■ OUTDOOR UNIT SILENT Operation

#### 1. With the Priority Room Setting present but inactive or not present

When using the OUTDOOR UNIT SILENT operation feature with the Multi system, set all indoor units to OUTDOOR UNIT SILENT operation using their remote controls.

When clearing OUTDOOR UNIT SILENT operation, clear one of the operating indoor units using their remote control. However OUTDOOR UNIT SILENT operation display remains on the remote control for other rooms. We recommend you release all rooms using their remote controls.

#### 2. With the Priority Room Setting active

See “Priority Room Setting” on the next page.

### ■ Cooling / Heating Mode Lock (Available only for heat pump models)

The Cooling / Heating Mode Lock requires initial programming during installation. Please consult your retailer or dealer for assistance. The Cooling / Heating Mode Lock sets the unit forcibly to either Cooling or Heating Mode. This function is convenient when you wish to set all indoor units connected to the Multi system to the same operation mode.



## ■ Priority Room Setting

The Priority Room Setting requires initial programming during installation. Please consult your retailer or dealer for assistance.

The room designated as the Priority Room takes priority in the following situations:

### 1. Operation Mode Priority

As the operation mode of the Priority Room takes precedence, the user can select a different operation mode from other rooms.

(Example)

\* Room A is the Priority Room in the examples.

When COOL mode is selected in Room A while operating the following modes in Room B, C and D:

Operation mode in Room B, C and D	Status of Room B, C and D when the unit in Room A is in COOL mode
COOL or DRY or FAN	Current operation mode maintained
HEAT	The unit enters Standby Mode. Operation resumes when the Room A unit stops operating.
AUTO	If the unit is set to COOL mode, operation continues. If set to HEAT mode, it enters Standby Mode. Operation resumes when the Room A unit stops operating.

### 2. Priority when POWERFUL operation is used

(Example)

\* Room A is the Priority Room in the examples.

The indoor units in Rooms A,B,C and D are all operating. If the unit in Room A enters POWERFUL operation, operation capacity will be concentrated in Room A. In such a case, the cooling (heating) efficiency of the units in Rooms B,C and D may be slightly reduced.

### 3. Priority when using OUTDOOR UNIT SILENT operation

(Example)

\* Room A is the Priority Room in the examples.

Just by setting the unit in Room A to SILENT operation, the air conditioner starts OUTDOOR UNIT SILENT operation.

You don't have to set all the operated indoor units to SILENT operation.

## 2.1.14 Care and cleaning

FTXG 25/35 E, CTXG 50 E, ATXG 25-50 E



### CAUTION

- Before cleaning, be sure to stop the operation and turn the breaker OFF.
- Always shut down the unit (and close the panel) before doing any work. Opening the panel during operation may cause the panel to fall off.

### UNITS

#### ■ Indoor unit, Outdoor unit and Remote control

1. Wipe them with dry soft cloth.

#### ■ Front panel

1. **Open the front panel.**

- Open the front panel by placing a finger on the panel tab on either side of the front panel.

2. **Remove the front panel.**


- With the front panel open so that it is almost horizontal, slide it to the right. The revolving axis on the left will come off.
- The revolving axis on the right can be removed by sliding the front panel to the left.

3. **Clean the front panel.**

- Wipe it with a soft cloth soaked in water.
- Only neutral detergent may be used.
- In case of washing the front panel with water, dry it with cloth, dry it up in the shade after washing.

4. **Attach the front panel.**

- Place the revolving axes on either side of the front panel into the holes and slowly close. (Press either side of the front panel.)

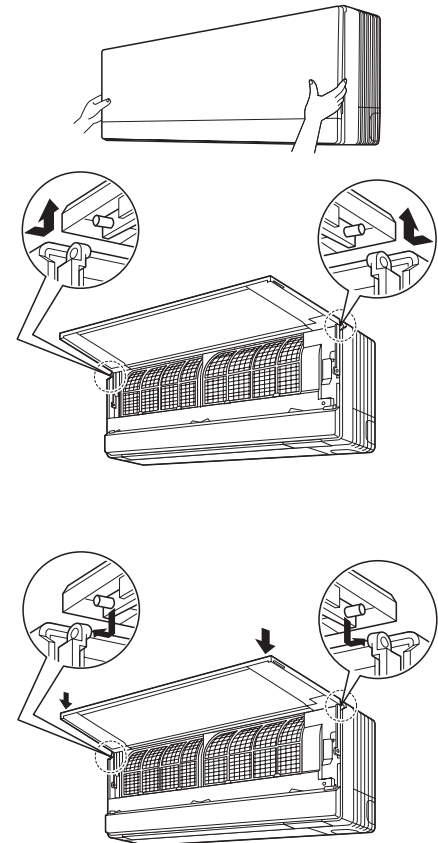


### CAUTION

- Don't touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front panel, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front panel, support the panel securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40 °C, benzine, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hand stuff.
- After cleaning, make sure that the front panel is securely fixed.

## FILTERS

### 1. Open the front panel.

- Open the front panel by placing a finger on the panel tab on either side of the front panel and then secure it using the supporting plate on the right.

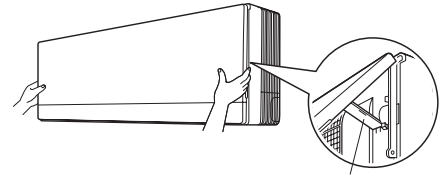

Supporting plate

### 2. Pull out the air filters.


- Push a little upwards the tab at the center of each air filter, then pull it down.

### 3. Take off the Titanium Apatite Photocatalytic Air-Purifying Filter.

- Hold the recessed parts of the frame and unhook the four claws.


### 4. Clean or replace each filter.

- See figure.

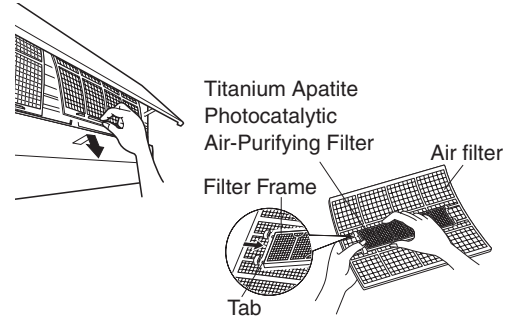

### 5. Set the air filter and the Titanium Apatite Photocatalytic Air-Purifying Filter as they were and close the front panel.


- Be sure to insert the two tabs below.
- Return the supporting plate to its previous position.
- Press either side of the front panel.

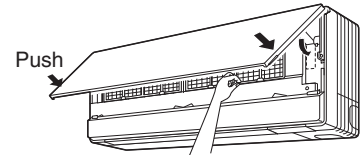

## ■ Air Filter


### 1. Wash the air filters with water or clean them with vacuum cleaner.

- If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
- It is recommended to clean the air filters every two weeks.

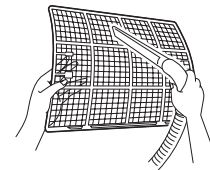

## ■ Titanium Apatite Photocatalytic Air-Purifying Filter (gray)

The Titanium Apatite Photocatalytic Air-Purifying Filter can be renewed by washing it with water once every 6 months. We recommend replacing it once every 3 years.

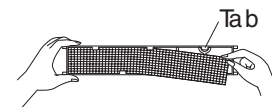

### [Maintenance]

1. Remove dust with a vacuum cleaner and wash lightly with water.
2. If it is very dirty, soak it for 10 to 15 minutes in water mixed with a neutral cleaning agent.
3. Do not remove filter from frame when washing with water.
4. After washing, shake off remaining water and dry in the shade.
5. Since the material is made out of paper, do not wring out the filter when removing water from it.

### [Replacement]

1. Remove the tabs on the filter frame and replace with a new filter.
  - Dispose of the old filter as flammable waste.

## NOTE

- Operation with dirty filters:
  - (1) cannot deodorize the air.                      (2) cannot clean the air.
  - (3) results in poor heating or cooling.    (4) may cause odour.
- To order Titanium Apatite Photocatalytic Air-Purifying Filter contact to the service shop there you bought the air conditioner.
- Dispose of old filters as burnable waste.

Item	Part No.
Titanium Apatite Photocatalytic Air-Purifying Filter. (with frame) 1 set	KAF952B41
Titanium Apatite Photocatalytic Air-Purifying Filter. (without frame) 1 set	KAF952B42

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.

Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.

Check that the drain comes smoothly out of the drain hose during COOL or DRY operation

- If no drain water is seen, water may be leaking from the indoor unit.  
Stop operation and consult the service shop if this is the case.

## ■ Before a long idle period

1. **Operate the “FAN only” for several hours on a fine day to dry out the inside.**
  - Press “MODE selector button” and select “FAN” operation.
  - Press “ON/OFF button” and start operation.
2. **After operation stops, turn off the breaker for the room air conditioner.**
3. **Clean the air filters and set them again.**
4. **Take out batteries from the remote control.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

## FTK(X)S 20-50 D, ATXS 20-50 E



**CAUTION** Before cleaning, be sure to stop the operation and turn the breaker OFF.


## UNITS

■ **Indoor unit, outdoor unit and remote control**


1. Wipe them with dry soft cloth.

■ **Front panel**

1. **Open the front panel.**
  - Hold the panel by the tabs on the two sides and lift it until it stops with a click.
2. **Remove the front panel.**
  - Lift the front panel up, slide it slightly to the right, and remove it from the horizontal axle.
3. **Clean the front panel.**
  - Wipe it with a soft cloth soaked in water.
  - Only neutral detergent may be used.
  - In case of washing the panel with water, dry it with cloth, dry it up in the shade after washing.

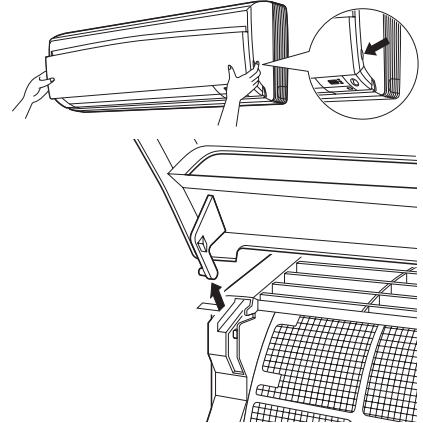



4. **Attach the front panel.**
  - Set the 2 keys of the front panel into the slots and push them in all the way.
  - Close the front panel slowly and push the panel at the 3 points. ( 1 on each side and 1 in the middle.)

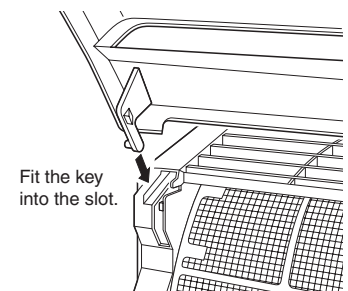**CAUTION**


- Don't touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front panel, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front panel, support the panel securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40°C, benzene, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hand stuff.
- After cleaning, make sure that the front panel is securely fixed.

## Filters

1. **Open the front panel.**
2. **Pull out the air filters.**
  - Push a little upwards the tab at the center of each air filter, then pull it down.
3. **Take off the Titanium Apatite Photocatalytic**
  - Hold the recessed parts of the frame and unhook the four claws.
4. **Clean or replace each filter.**
  - See figure.

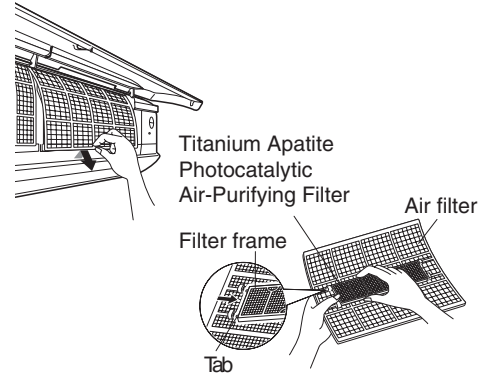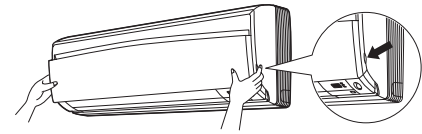


5. **Set the air filter and the Titanium Apatite Photocatalytic Air-Purifying filter as they were and close the front panel.**
  - Insert claws of the filters into slots of the front panel. Close the front panel slowly and push the panel at the 3 points. (1 on each side and 1 in the middle.)

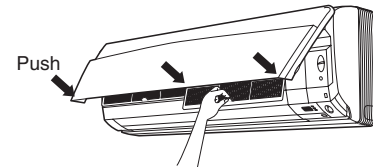


## ■ Air Filter

1. **Wash the air filters with water or clean them with vacuum cleaner.**
  - If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
  - It is recommended to clean the air filters every two weeks.

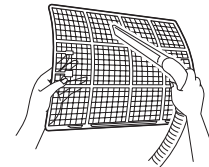

## ■ Titanium Apatite Photocatalytic Air-purifying Filter

The Titanium Apatite Photocatalytic Air-Purifying Filter can be renewed by washing it with water once every 6 months. We recommend replacing it once every 3 years.

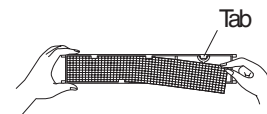

### [Maintenance]

1. **Remove dust with a vacuum cleaner and wash lightly with water.**
2. **If it is very dirty, soak it for 10 to 15 minutes in water mixed with a neutral cleaning agent.**
3. **Do not remove filter from frame when washing with water.**
4. **After washing, shake off remaining water and dry in the shade.**
5. **Since the material is made out of paper, do not wring out the filter when removing water from it.**

### [Replacement]

1. **Remove the tabs on the filter frame and replace with a new filter.**
  - Dispose of the old filter as flammable waste.

**NOTE**

- Operation with dirty filters:
  - (1) cannot deodorize the air.                      (2) cannot clean the air.
  - (3) results in poor heating or cooling.      (4) may cause odour.
- To order Titanium Apatite Photocatalytic Air-Purifying Filter contact the service shop where you bought the air conditioner.
- Dispose of old filters as non-flammable waste.

Item	Part No.
Titanium Apatite Photocatalytic Air-Purifying Filter. (without frame) 1 set	KAF970A46

**Check**

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.
• If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

**■ Before a long idle period**

1. **Operate the “FAN only” for several hours on a fine day to dry out the inside.**
  - Press “MODE selector button” and select “FAN” operation.
  - Press “ON/OFF button” and start operation.
2. **Clean the air filters and set them again.**
3. **Take out batteries from the remote control.**
4. **Turn OFF the breaker for the room air conditioner.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

## FTK(X)S 20-35 C, ATXS 20-35 D

**!** **CAUTION** Before cleaning, be sure to stop the operation and turn the breaker OFF.

### UNITS


#### ■ Indoor unit, Outdoor unit and Remote control

1. Wipe them with dry soft cloth.

#### ■ Front panel


1. **Open the front panel.**

- Hold the panel by the tabs on the two sides and lift it until it stops with a click.

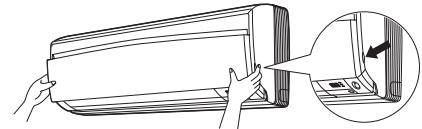

2. **Remove the front panel.**

- Supporting the front panel with one hand, release the lock by sliding down the knob with the other hand.
- To remove the front panel, pull it toward yourself with both hands.

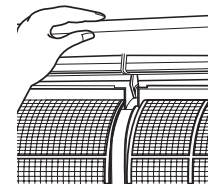


3. **Clean the front panel.**

- Wipe it with a soft cloth soaked in water.
- Only neutral detergent may be used.
- In case of washing the panel with water, dry it with cloth, dry it up in the shade after washing.

4. **Attach the front panel.**

- Set the 3 keys of the front panel into the slots and push them in all the way.
- Close the front panel slowly and push the panel at the 3 points. (1 on each side and 1 in the middle.)
- Check to see if the rotating axis in the upper center section is moving.

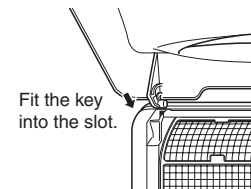


**!** **CAUTION**

- Don't touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front panel, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front panel, support the panel securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40°C, benzene, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hand stuff.
- After cleaning, make sure that the front panel is securely fixed.




## FILTERS


1. **Open the front panel.**
2. **Pull out the air filters.**
  - Push a little upwards the tab at the center of each air filter, then pull it down.

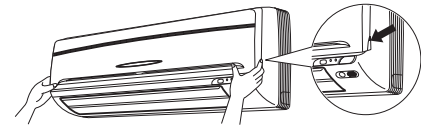

3. **Take off the air purifying filter with photocatalytic deodorizing function.**
  - Hold the recessed parts of the frame and unhok the four claws.

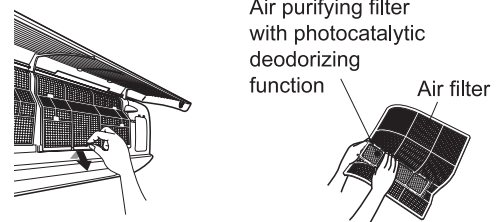


4. **Clean or replace each filter.**  
See figure.
5. **Set the air filter with photocatalytic deodorizing function as they were and close the front panel.**
  - Insert claws of the filters into slots of the front panel. Close the front panel slowly and push the panel at the 3 points. (1 on each side and 1 in the middle.)

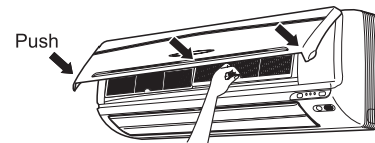


### ■ Air Filter

1. **Wash the air filters with water or clean them with vacuum cleaner.**
  - If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
  - It is recommended to clean the air filters every two weeks.

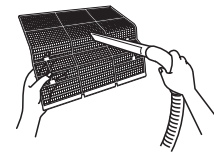

### ■ Air purifying filter with photocatalytic deodorizing function (gray)

The Air purifying filter with photocatalytic deodorizing function can be renewed by washing it with water once every 6 months. We recommend replacing it once every 3 years.

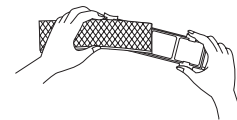

#### [Maintenance]

1. Remove dust with a vacuum cleaner and wash lightly with water.
2. If it is very dirty, soak it for 10 to 15 minutes in water mixed with a neutral cleaning agent.
3. Do not remove filter from frame when washing with water.
4. After washing, shake off remaining water and dry in the shade.
5. Since the material is made out of paper, do not wring out the filter when removing water from it.

#### [Replacement]

1. Remove the tabs on the filter frame and replace with a new filter.
  - Dispose of the old filter as flammable waste.

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.

Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.

Check that the drain comes smoothly out of the drain hose during COOL or DRY operation

- If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

## ■ Before a long idle period

1. **Operate the “FAN only” for several hours on a fine day to dry out the inside.**
  - Press “MODE” button and select “FAN” operation.
  - Press “ON/OFF” button and start operation.
2. **After operation stops, turn off the breaker for the room air conditioner.**
3. **Clean the air filters and set them again.**
4. **Take out batteries from the remote control.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

## NOTE

- Operation with dirty filters:
  - (1) cannot deodorize the air.
  - (2) cannot clean the air.
  - (3) results in poor heating or cooling.
  - (4) may cause odour.
- To order air purifying filter with photocatalytic deodorizing function contact to the service shop there you bought the air conditioner.
- Dispose of old filters as burnable waste..

Item	Part No.
Air-purifying filter with photocatalytic deodorizing function (with frame) 1 set	KAF918A43
Air-purifying filter with photocatalytic deodorizing function (without frame) 1 set	KAF918A44

## FTK(X)S 50 E, ATX 50 E

**!** **CAUTION** Before cleaning, be sure to stop the operation and turn the breaker OFF.  
**UNITS**


### ■ Indoor unit, Outdoor unit and Remote control

1. Wipe them with dry soft cloth.

### ■ Front panel


#### 1. Open the front panel.

- Hold the panel by the tabs on the two sides and lift it until it stops with a click.

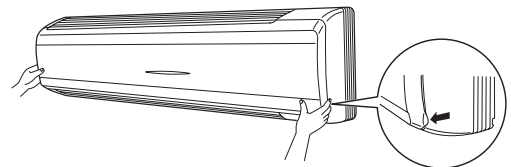

#### 2. Remove the front panel.

- Open the front panel further while sliding it to either the left or right and pulling it toward you. This will disconnect the rotation dowel on one side. Then disconnect the rotation dowel on the other side in the same manner.

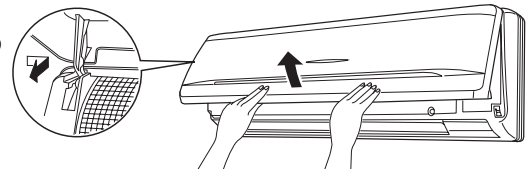


#### 3. Clean the front panel.

- Wipe it with a soft cloth soaked in water.
- Only neutral detergent may be used.
- In case of washing the panel with water, dry it with cloth, dry it up in the shade after washing.

#### 4. Attach the front panel.

- Align the rotation dowels on the left and right of the front panel with the slots, then push them all the way in.
- Close the front panel slowly. (Press the panel at both sides and the center.)

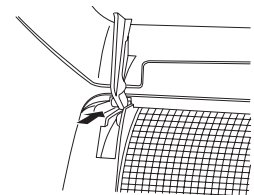


### **!** **CAUTION**


- Don't touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front panel, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front panel, support the panel securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40°C, benzene, gasoline, thinner, nor or volatile oils, polishing compound, scrubbing brushes, nor or other hand stuff.
- After cleaning, make sure that the front panel is securely fixed.

## FILTERS


1. **Open the front panel.**
2. **Pull out the air filters.**
  - Push a little upwards the tab at the center of each air filter, then pull it down.

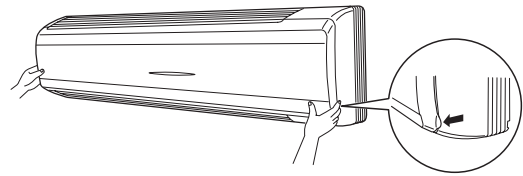

3. **Take off the Titanium Apatite Photocatalytic Air-Purifying Filter.**
  - Press the top of the air-cleaning filter onto the tabs (3 tabs at top). Then press the bottom of the filter up slightly, and press it onto the tabs (3 at bottom).

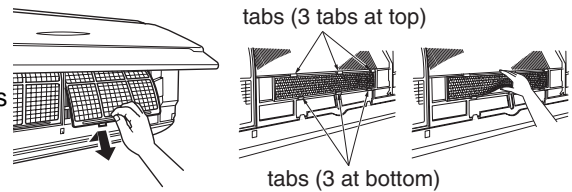


4. **Clean or replace each filter.**  
See figure.
5. **Set the air filter and the Titanium Apatite Photocatalytic Air-Purifying Filter as they were and close the front panel.**
  - Press the front panel at both sides and the center.

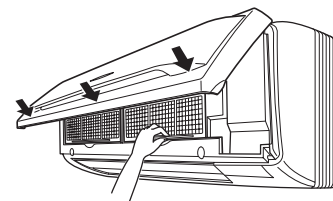

### ■ Air Filter

1. **Wash the air filters with water or clean them with vacuum cleaner.**
  - If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
  - It is recommended to clean the air filters every two weeks.

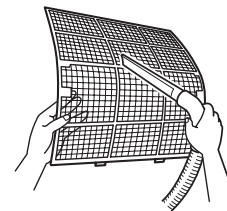

### ■ Titanium Apatite Photocatalytic Air-purifying Filter (gray)

The Titanium Apatite Photocatalytic Air-purifying Filter can be renewed by washing it with water once every 6 months. We recommend replacing it once every 3 years.

#### [Maintenance]

1. **Remove dust with a vacuum cleaner and wash lightly with water.**
2. **If it is very dirty, soak it for 10 to 15 minutes in water mixed with a neutral cleaning agent.**
3. **After washing, shake off remaining water and dry in the shade.**
4. **Since the material is made out of paper, do not wring out the filter when removing water from it.**

#### [Replacement]

1. **Remove the tabs on the filter frame and replace with a new filter.**
  - Dispose of the old filter as flammable waste.

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
Check that the drain comes smoothly out of the drain hose during COOL or DRY operation <ul style="list-style-type: none"> <li>If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.</li> </ul>

### ■ Before a long idle period

1. **Operate the “FAN only” for several hours on a fine day to dry out the inside.**
  - Press “MODE selector button” and select “FAN” operation.
  - Press “ON/OFF button” and start operation.
2. **After operation stops, turn off the breaker for the room air conditioner.**
3. **Clean the air filters and set them again.**
4. **Take out batteries from the remote control.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

### NOTE

- Operation with dirty filters:
  - (1) cannot deodorize the air.                      (2) cannot clean the air.
  - (3) results in poor heating or cooling.      (4) may cause odour.
- To order Titanium Apatite Photocatalytic Air-Purifying Filter contact to the service shop there you bought the air conditioner.
- Dispose of old filters as burnable waste.

Item	Part No.
Titanium Apatite Photocatalytic Air-Purifying Filter. (without frame) 1 set	KAF952B42

## FDK(X)S 25/35 C



### CAUTION

- Only a qualified service person is allowed to perform maintenance.
- Before cleaning, be sure to stop the operation and turn the breaker OFF.


## ■ Cleaning the air filter

### 1. Removing the air filter.

- Rear suction  
Pull the bottom side of the air filter backwards, over the 3 bends.
- Bottom suction  
Pull the filter over the 3 bends situated at the backside of the unit.


### 2. Cleaning the air filter.

- Remove dust from the air filter using a vacuum cleaner and gently rinse them in cool water. Do not use detergent or hot water to avoid filter shrinking or deformation. After cleaning dry them in the shade.

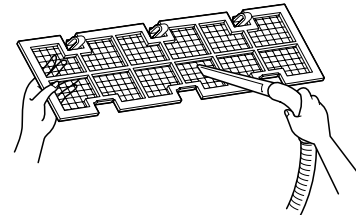

### 3. Replacing the air filter.

- Rear suction  
Hook the filter behind the flap situated at the top of the unit and push the other side gently over the 3 bends.
- Bottom suction  
Hook the filter behind the flap situated at the middle of the unit and push the other side gently over the 3 bends.

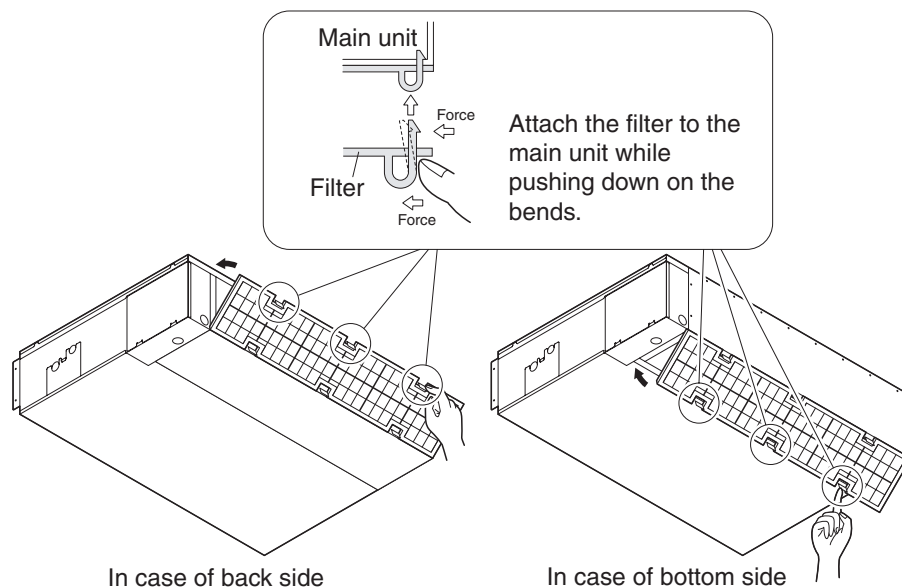

## ■ Cleaning the drain pan

- Clean the drain pan periodically, or drain piping may be clogged with dust and may result in water leakage. Ask your DAIKIN dealer to clean them.
- Prepare a cover locally to prevent any dust in the air around the indoor unit from getting in the drain pan, if there is a great deal of dust present.



### CAUTION

- Do not operate the air conditioner without filters, this to avoid dust accumulation inside the unit.
- Do not remove the air filter except when cleaning. Unnecessary handling may damage the filter.
- Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide, It may cause discoloring or warping.
- Do not let the indoor unit get wet. It may cause an electric shock or a fire.
- Operation with dusty air filters lowers the cooling and heating capacity and wastes energy.
- The suction grille is option.
- Do not use water or air of 50°C or higher for cleaning air filters and outside panels..

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
--

Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
---

Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.
---

- |  |
|--|
| <ul style="list-style-type: none"> <li>• If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.</li> </ul> |
|--|

## ■ Before a long idle period

1. **Operate the "FAN only" for several hours on a fine day to dry out the inside.**
  - Press "MODE selector button" and select "FAN" operation.
  - Press "ON/OFF button" and start operation.
2. **After operation stops, turn off the breaker for the room air conditioner.**
3. **Clean the air filters and set them again.**
4. **Take out batteries from the remote control.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

## FDK(X)S 25/35 E, FDK(X)S 50 C



### CAUTION

- Only a qualified service person is allowed to perform maintenance.
- Before cleaning, be sure to stop the operation and turn the breaker OFF.


## ■ Cleaning the air filter

### 1. Removing the air filter.

- Rear suction  
Pull the bottom side of the air filter backwards, over the bends. (2 bends for 25/35 type, 3 bends for 50/60 type)
- Bottom suction  
Pull the filter over the bends (2 bends for 25/35 type, 3 bends for 50/60 type) situated at the backside of the unit.


### 2. Cleaning the air filter.

- Remove dust from the air filter using a vacuum cleaner and gently rinse them in cool water. Do not use detergent or hot water to avoid filter shrinking or deformation. After cleaning dry them in the shade.

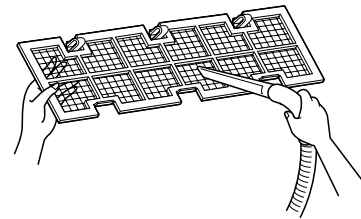

### 3. Replacing the air filter.

- Rear suction  
Hook the filter behind the flap situated at the top of the unit and push the other side gently over the bends. (2 bends for 25/35 type, 3 bends for 50/60 type)
- Bottom suction  
Hook the filter behind the flap situated at the middle of the unit and push the other side gently over the bends. (2 bends for 25/35 type, 3 bends for 50/60 type)

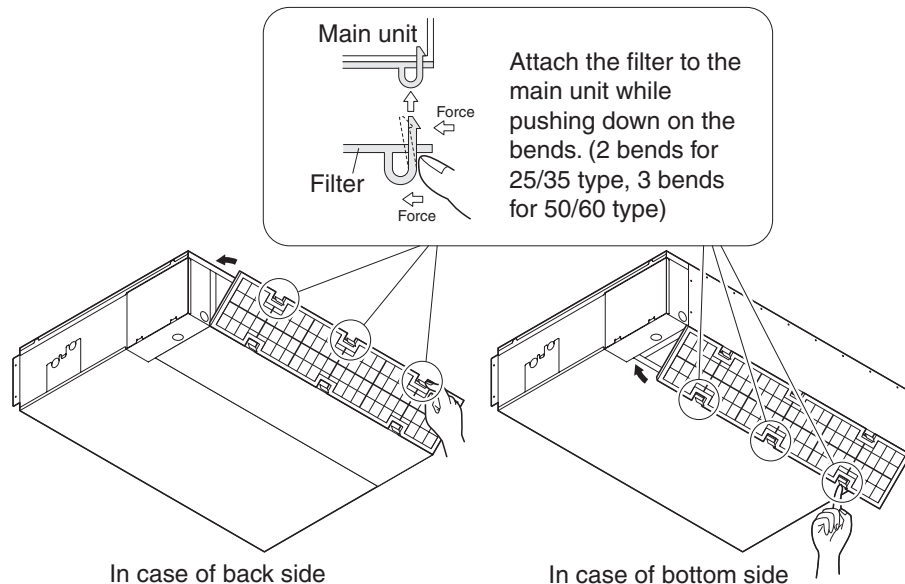



## ■ Cleaning the drain pan

- Clean the drain pan periodically, or drain piping may be clogged with dust and may result in water leakage. Ask your DAIKIN dealer to clean them.
- Prepare a cover locally to prevent any dust in the air around the indoor unit from getting in the drain pan, if there is a great deal of dust present.



### CAUTION

- Do not operate the air conditioner without filters, this to avoid dust accumulation inside the unit.
- Do not remove the air filter except when cleaning. Unnecessary handling may damage the filter.
- Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide, It may cause discoloring or warping.
- Do not let the indoor unit get wet. It may cause an electric shock or a fire.
- Operation with dusty air filters lowers the cooling and heating capacity and wastes energy.
- The suction grille is option.
- Do not use water or air of 50°C or higher for cleaning air filters and outside panels.
- Ask your DAIKIN dealer how to clean it.

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
--

Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
---

Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.
---

- |  |
|--|
| <ul style="list-style-type: none"> <li>• If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.</li> </ul> |
|--|

## ■ Before a long idle period

- 1. Operate the "FAN only" for several hours on a fine day to dry out the inside.**
  - Press "MODE selector button" and select "FAN" operation.
  - Press "ON/OFF button" and start operation.
- 2. Clean the air filters and set them again.**
- 3. Take out batteries from the remote controller.**
- 4. Turn OFF the breaker for the room air conditioner.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

## FLK(X)S 25-50 B

**!** **CAUTION** Before cleaning, be sure to stop the operation and turn the breaker OFF.

### UNITS

#### ■ Indoor unit, Outdoor unit and Remote control

1. Wipe them with dry soft cloth.

#### ■ Front panel

##### 1. Open the front panel.



- Hold the panel by the tabs on the two sides and lift it until it stops.

##### 2. Clean the front panel.

- Wipe it with a soft cloth soaked in water.
- Only neutral detergent may be used.
- In case of washing the panel with water, dry it with cloth, dry it up in the shade after washing

##### 3. Close the front panel.

- Push the panel at the 5 points indicated by ↑
- Operation without air filters may result in troubles as dust will accumulate inside the indoor unit.

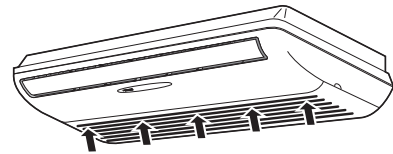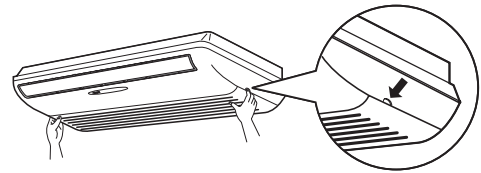


**!** **CAUTION**


- Don't touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front panel, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front panel, support the panel securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40°C, benzene, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hand stuff.
- After cleaning, make sure that the front panel is securely fixed.

## FILTERS


1. **Open the front panel.**
2. **Pull out the air filters.**
  - Push upwards the tab at the center of filter, then pull it down.

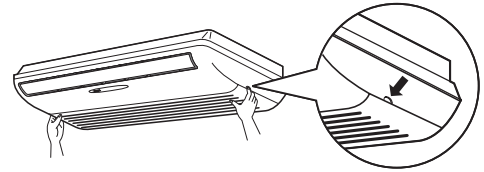


3. **Take off the air purifying filter, photocatalytic deodorizing filter.**
  - Hold the recessed parts of the frame and unhook the four claws.
4. **Clean or replace each filter**  
See figure.

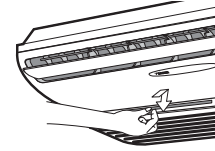

Air purifying filter or Photocatalytic deodorizing filter

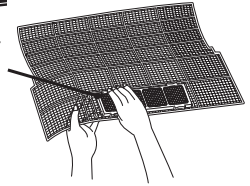


5. **Set the air filter, air purifying filter and photocatalytic deodorizing filter as they were and close the front panel.**
  - Insert claws of the filters into slots of the front panel.
  - Push the panel at the 5 points.

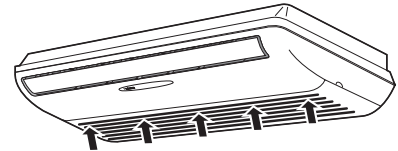

### ■ Air Filter


1. **Wash the air filters with water or clean them with vacuum cleaner.**
  - If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
  - It is recommended to clean the air filters every two weeks.

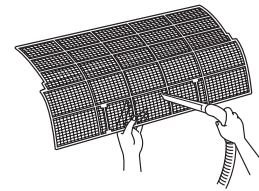

### ■ Air Purifying Filter (green)

(Replace approximately once every 3 months.)

1. **Detach the filter element and attach a new one.**
  - Insert with the green side up.
  - It is recommended to replace the air purifying filter every three months.

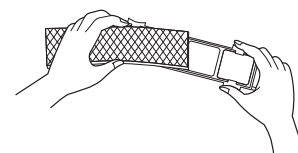

### ■ Photocatalytic Deodorizing Filter (gray)

#### [Maintenance]

1. **Dry the photocatalytic deodorizing filter in the sun.**
  - After removing the dust with a vacuum cleaner, place the filter in the sun for approximately 6 hours. By drying the photocatalytic deodorizing filter in the sun, its deodorizing and antibacterial capabilities are regenerated.
  - Because the filter material is paper, it can not be cleaned with water.
  - It is recommended to dry the filter once every 6 months.

#### [Replacement]

1. **Detach the filter element and attach a new one.**

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
Check that the drain comes smoothly out of the drain hose during COOL or DRY operation. <ul style="list-style-type: none"> <li>If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.</li> </ul>

## ■ Before a long idle period

1. **Operate the “FAN only” for several hours on a fine day to dry out the inside.**
  - Press “MODE” selector button and select “FAN” operation.
  - Press “ON/OFF” button and start operation.
2. **After operation stops, turn off the breaker for the room air conditioner.**
3. **Clean the air filters and set them again.**
4. **Take out batteries from the remote control.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

## NOTE

- Operation with dirty filters :
  - (1) cannot deodorize the air.
  - (2) cannot clean the air.
  - (3) results in poor heating or cooling.
  - (4) may cause odour.
- The air purifying filter and Photocatalytic deodorizing filter cannot be reused, even if washed.
- In principle, there is no need to replace the photocatalytic deodorizing filter. Remove the dust periodically with a vacuum cleaner. However, it is recommended to replace the filter in the following cases.
  - (1) The paper material is torn or broken during cleaning.
  - (2) The filter has become extremely dirty after long use.
- To order air purifying filter or Photocatalytic deodorizing filter, contact to the service shop where you bought the air conditioner.
- Dispose of old air filters as non-burnable waste and Photocatalytic deodorizing filters as burnable waste.

Item	Part No.
Photocatalytic deodorizing filter (with frame)	KAZ917B41
Photocatalytic deodorizing filter (without frame)	KAZ917B42
Air purifying filter (with frame)	KAF925B41
Air purifying filter (without frame)	KAF925B42

## FLK(X)S 25-50 B

**!** **CAUTION** Before cleaning, be sure to stop the operation and turn the breaker OFF.

### UNITS


#### ■ Indoor unit, Outdoor unit and Remote control

1. Wipe them with dry soft cloth.

#### ■ Front panel


1. **Open the front panel.**

- Press the two  places on the left and right of the front panel.

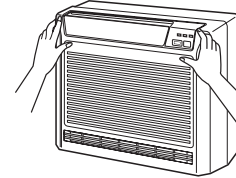

2. **Remove the front panel.**

- Remove the chain.
- Allowing the front panel to fall forward will enable you to remove it.

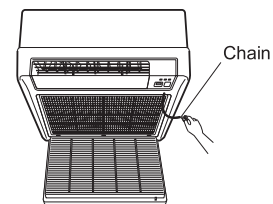


3. **Clean the front panel**

- Wipe softly with a damp cloth.
- Only neutral detergent may be used.
- In case of washing the front panel with water, dry it with cloth, dry it up in the shade after washing.

4. **Attach the front panel.**

- Insert the front panel into the grooves of the unit (3 places).
- Attach the chain to the right, inner-side of the front panel.

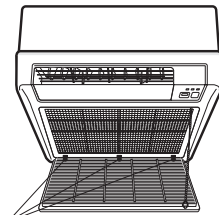

Place front panel in grooves.


1. Close the panel slowly.

**!** **CAUTION**


- Hold the front grille firmly so that it does not fall.
- Do not touch the metal parts on the inside of the indoor unit, as it may result in injury.
- When removing or attaching the front panel, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front panel, support the panel securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40°C, benzene, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hand stuff.
- After cleaning, make sure that the front panel is securely fixed.

## FILTERS


1. Open the front panel.

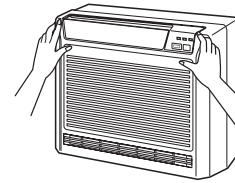

2. Remove the air filters
  - Press the claws on the right and left of the air filter down slightly, then pull upward.
3. Take off the air purifying filter, photocatalytic deodorizing filter.
  - Hold the tabs of the frame, and remove the claws in 4 places

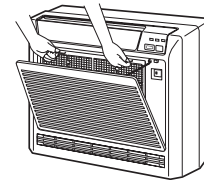


4. Clean or replace each filter  
See figure.
5. Set the air filter, air purifying filter and photocatalytic deodorizing filter as they were and close the front panel.
  - Operation without air filters may result in troubles as dust will accumulate inside the indoor unit.

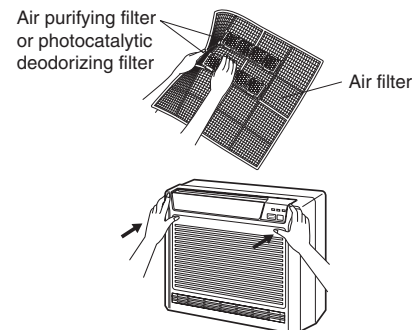

### ■ Air Filter


1. Wash the air filters with water or clean them with vacuum cleaner.
  - If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
  - It is recommended to clean the air filters every two weeks.

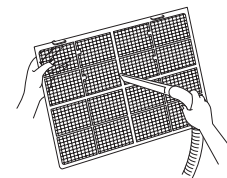

### ■ Air Purifying Filter (green)

(Replace approximately once every 3 months.)

1. Detach the filter element and attach a new one.
  - Insert with the green side up.
  - It is recommended to replace the air purifying filter every three months.

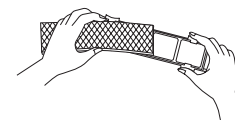

### ■ Photocatalytic Deodorizing Filter (gray)

#### [Maintenance]

1. Dry the photocatalytic deodorizing filter in the sun.
  - After removing the dust with a vacuum cleaner, place the filter in the sun for approximately 6 hours. By drying the photocatalytic deodorizing filter in the sun, its deodorizing and antibacterial capabilities are regenerated.
  - Because the filter material is paper, it can not be cleaned with water.
  - It is recommended to dry the filter once every 6 months.

#### [Replacement]

1. Detach the filter element and attach a new one.

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
Check that the drain comes smoothly out of the drain hose during COOL or DRY operation. • If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

## ■ Before a long idle period

1. **Operate the “FAN only” for several hours on a fine day to dry out the inside.**
  - Press “MODE” button and select “FAN” operation.
  - Press “ON/OFF” button and start operation.
2. **After operation stops, turn off the breaker for the room air conditioner.**
3. **Clean the air filters and set them again.**
4. **Take out batteries from the remote control.**
  - When a multi outdoor unit is connected, make sure the heating operation is not used at the other room before you use the fan operation.

## NOTE

- Operation with dusty air filters lowers the cooling (heating) capacity and wastes energy. Air is also prevented from flowing smoothly through the unit creating a noise.
- Operation with dirty filters:
  - (1) cannot deodorize the air.                      (2) cannot clean the air.
  - (3) results in poor heating or cooling.      (4) may cause odour.
- The air purifying filter and Photocatalytic deodorizing filter cannot be reused, even if washed.
- In principle, there is no need to replace the photocatalytic deodorizing filter. Remove the dust periodically with a vacuum cleaner. However, it is recommended to replace the filter in the following cases.
  - (1) The paper material is torn or broken during cleaning.
  - (2) The filter has become extremely dirty after long use.
- To order air purifying filter or Photocatalytic deodorizing filter, contact to the service shop where you bought the air conditioner.
- Dispose of old air filters as non-burnable waste and Photocatalytic deodorizing filters as burnable waste.

Item	Part No.
Photocatalytic deodorizing filter (with frame)	KAZ917B41
Photocatalytic deodorizing filter (without frame)	KAZ917B42
Air purifying filter (with frame)	KAF925B41
Air purifying filter (without frame)	KAF925B42

## 2.1.15 Troubleshooting

### These cases are not troubles.

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Explanation
<b>Operation does not start soon.</b> <ul style="list-style-type: none"> <li>• When ON/OFF button was pressed soon after operation was stopped.</li> <li>• When the mode was reselected.</li> </ul>	<ul style="list-style-type: none"> <li>• This is to protect the air conditioner. You should wait for about 3 minutes.</li> </ul>
<b>Hot air does not flow out soon after the start of heating operation.</b>	<ul style="list-style-type: none"> <li>• The air conditioner is warming up. You should wait for 1 to 4 minutes. (The system is designed to start discharging air only after it has reached a certain temperature.)</li> </ul>
<b>The heating operation stops suddenly and a flowing sound is heard.</b>	<ul style="list-style-type: none"> <li>• The system is taking away the frost on the outdoor unit. You should wait for about 3 to 8 minutes.</li> </ul>
<b>The outdoor unit emits water or steam.</b>	<ul style="list-style-type: none"> <li>■ In HEAT mode</li> <li>• The frost on the outdoor unit melts into water or steam when the air conditioner is in defrost operation.</li> <li>■ In COOL or DRY mode</li> <li>• Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.</li> </ul>
<b>Mists come out of the indoor unit.</b>	<ul style="list-style-type: none"> <li>■ This happens when the air in the room is cooled into mist by the cold air flow during cooling operation.</li> </ul>
<b>The indoor unit gives out odour</b>	<ul style="list-style-type: none"> <li>■ This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the air flow. (If this happens, we recommend you to have the indoor unit washed by a technician. Consult the service shop where you bought the air conditioner.)</li> </ul>
<b>The outdoor fan rotates while the air conditioner is not in operation.</b>	<ul style="list-style-type: none"> <li>■ After operation is stopped:               <ul style="list-style-type: none"> <li>• The outdoor fan continues rotating for another 60 seconds for system protection.</li> </ul> </li> <li>■ While the air conditioner is not in operation:               <ul style="list-style-type: none"> <li>• When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.</li> </ul> </li> </ul>
<b>The operation stopped suddenly. (OPERATION lamp is on.)</b>	<ul style="list-style-type: none"> <li>■ For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.</li> </ul>



## Check again

Please check again before calling a repair person.


Case	Check
<b>The air conditioner does not operate.</b> <b>(OPERATION lamp is off)</b>	<ul style="list-style-type: none"> <li>• Hasn't a breaker turned OFF or a fuse blown?</li> <li>• Isn't it a power failure?</li> <li>• Are batteries set in the remote control?</li> <li>• Is the timer setting correct?</li> </ul>
<b>Cooling (Heating) effect is poor.</b>	<ul style="list-style-type: none"> <li>• Are the air filters clean?</li> <li>• Is there anything to block the air inlet or the outlet of the indoor and the outdoor units?</li> <li>• Is the temperature setting appropriate?</li> <li>• Are the windows and doors closed?</li> <li>• Are the air flow rate and the air direction set appropriately?</li> <li>• Is the unit set to the INTELLIGENT EYE mode?</li> </ul>
<b>Operation stops suddenly.</b> <b>(OPERATION lamp flashes)</b>	<ul style="list-style-type: none"> <li>• Are the air filters clean?</li> <li>• Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? Clean the air filters or take all obstacles away and turn the breaker OFF. Then turn it ON again and try operating the air conditioner with the remote control. If the lamp still flashes, call the service shop where you bought the air conditioner.</li> <li>• Are operation modes all the same for indoor units connected to outdoor units in the <b>multi system</b>? If not, set all indoor units to the same operation mode and confirm that the lamps flash. Moreover, when the operation mode is in "AUTO", set all indoor unit operation modes to "COOL" or "HEAT" for a moment and check again that the lamps are normal. If the lamps stop flashing after the above steps, there is no malfunction.</li> </ul>
<b>An abnormal functioning happens during operation.</b>	<ul style="list-style-type: none"> <li>• The air conditioner may malfunction with lightning or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote control.</li> </ul>

**Call the service shop immediately.**

 **WARNING**

- When an abnormality (such as a burning smell) occurs, stop operation and turn the breaker OFF. Continued operation in an abnormal condition may result in troubles, electric shocks or fire. Consult the service shop where you bought the air conditioner.
- Do not attempt to repair or modify the air conditioner by yourself. Incorrect work may result in electric shocks or fire. Consult the service shop where you bought the air conditioner.

If one of the following symptoms takes place, call the service shop immediately.

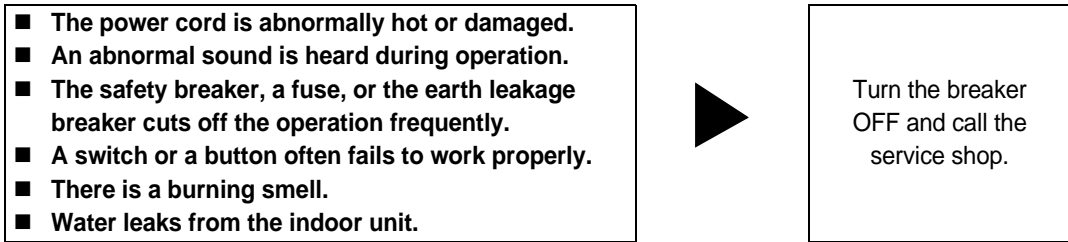

<ul style="list-style-type: none"> <li>■ <b>After a power failure</b> The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.</li> </ul>	<ul style="list-style-type: none"> <li>■ <b>Lightning</b> If lightning may strike the neighbouring area, stop operation and turn the breaker OFF for system protection.</li> </ul>
--	--

**Disposal requirements**



Your air conditioning product is marked with this symbol. This means that electrical and electronic products shall not be mixed with unsorted household waste.

Do not try to dismantle the system yourself: the dismantling of the air conditioning system, treatment of the refrigerant, of oil and of other parts must be done by a qualified installer in accordance with relevant local and national legislation.

Air conditioners must be treated at a specialized treatment facility for re-use, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. Please contact the installer or local authority for more information.

Batteries must be removed from the remote control and disposed of separately in accordance with relevant local and national legislation.

**We recommend periodical maintenance**


In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist aside from regular cleaning by the user. For specialist maintenance, contact the service shop where you bought the air conditioner. The maintenance cost must be born by the user.

## FAULT DIAGNOSIS

### FAULT DIAGNOSIS BY REMOTE CONTROL

In the ARC433A series, the temperature display sections on the main unit indicate corresponding codes.

1. When the **TIMER CANCEL** button is held down for 5 seconds, a “00” indication flashes on the temperature display section.

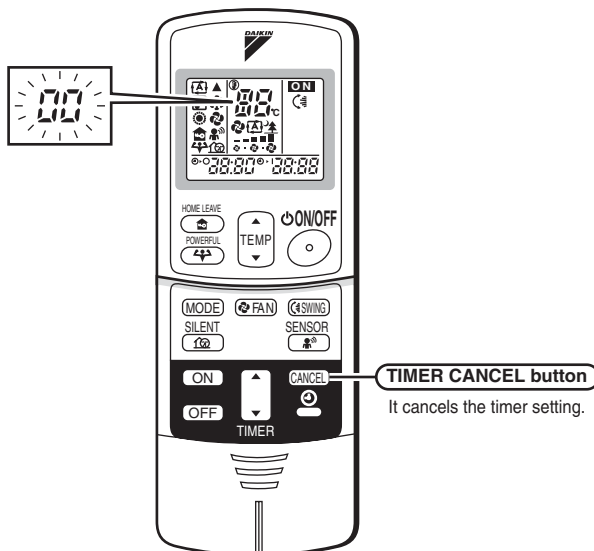

2. Press the **TIMER CANCEL** button repeatedly until a continuous beep is produced.

- The code indication changes as shown below, and notifies with a long beep.

	CODE	MEANING
<b>SYSTEM</b>	00	NORMAL
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
<b>INDOOR UNIT</b>	A1	INDOOR PCB DEFECTIVENESS
	A5	HIGH PRESSURE CONTROL OR FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
<b>OUTDOOR UNIT</b>	EA	COOLING-HEATING SWITCHING ERROR
	E5	OL STARTED
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	E8	OPERATION HALT DUE TO DETECTION OF INPUT OVER CURRENT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	F6	HIGH PRESSURE CONTROL (IN COOLING)
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	CT ABNORMALITY
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

### NOTE

1. A short beep and two consecutive beeps indicate non-corresponding codes.
2. To cancel the code display, hold the **TIMER CANCEL** button down for 5 seconds. The code display also cancel itself if the button is not pressed for 1 minute.

## LED ON OUTDOOR UNIT PCB 3MXS, 3MKS, 4MXS, 4MKS series

GREEN	RED				DIAGNOSIS
MICROCOMPUTER NORMAL	MALFUNCTION DETECTION				
LED-A	LED1	LED2	LED3	LED4	
●	●	●	●	●	NORMAL→CHECK INDOOR UNIT
☼	☼	●	☼	☼	HIGH PRESSURE PROTECTOR WORKED OR FREEZE-UP IN OPERATING UNIT OR STAND-BY UNIT
☼	☼	●	☼	●	* OVERLOAD RELAY WORKED OR HIGH DISCHARGE PIPE TEMPERATURE
☼	●	☼	☼	●	FAULTY COMPRESSOR START
☼	●	☼	●	☼	INPUT OVERCURRENT
☼	☼	☼	●	●	* THERMISTOR OR CT ABNORMALITY
☼	☼	☼	●	☼	HIGH TEMPERATURE SWITCHBOX
☼	●	●	●	☼	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
☼	●	●	☼	●	* OUTPUT OVERCURRENT
☼	●	●	☼	☼	* REFRIGERANT SHORTAGE
☼	☼	●	●	●	LOW VOLTAGE TO MAIN CIRCUIT OR MOMENTARY VOLTAGE LOSS
☼	☼	●	●	●	REVERSING SOLENOID VALVE SWITCHING FAILURE
☼	☼	☼	☼	☼	FAN MOTOR FAULT
☼	-	-	-	-	[NOTE 1]
●	-	-	-	-	POWER SUPPLY FAULT OR [NOTE 2]

GREEN	NORMALLY FLASHING
RED	NORMALLY OFF
☼	ON
☼	FLASHING
●	OFF
-	IRRELEVANT

## LED ON OUTDOOR UNIT PCB 2MXS, 2MKS serie


GREEN	DIAGNOSIS
MICROCOMPUTER NORMAL	
LED-A	
☼	NORMAL→CHECK INDOOR UNIT
☼	[NOTE 1]
●	POWER SUPPLY FAULT OR [NOTE 2]

GREEN	NORMALLY FLASHING
☼	ON
☼	FLASHING
●	OFF


## NOTES

1. Turn the power off and then on again. If the LED display recurs, the outdoor unit PCB is faulty.
2. Diagnosis marked  
\*Do not apply to some cases. For details, refer to the service guide.


## 2.2 Ceiling Suspended Type

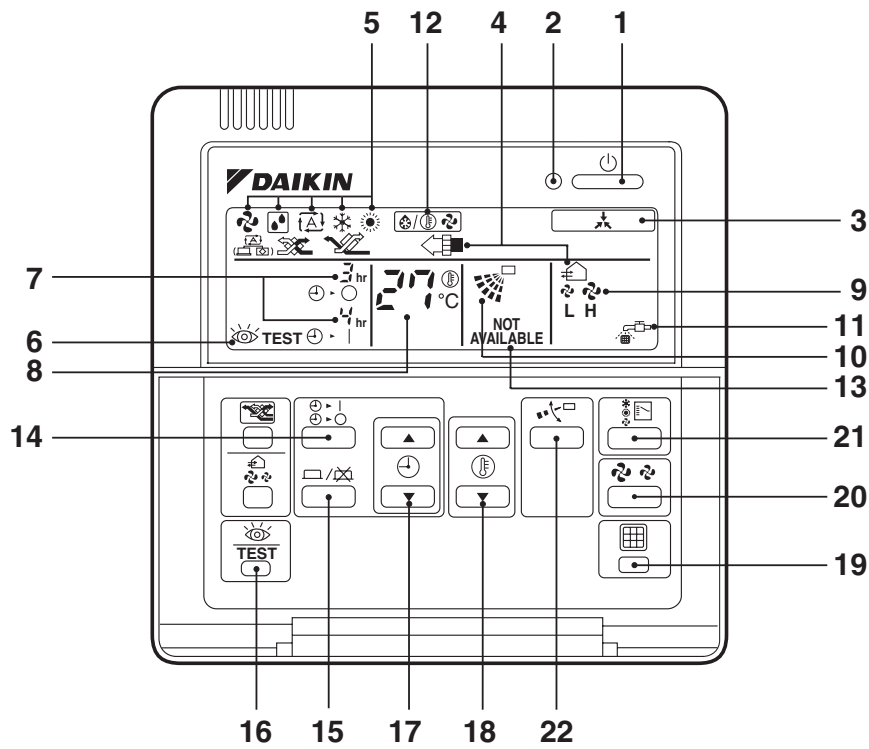


1

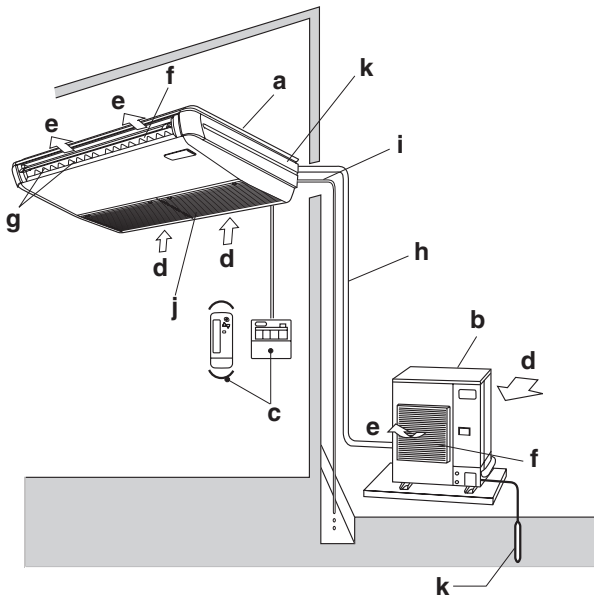

2

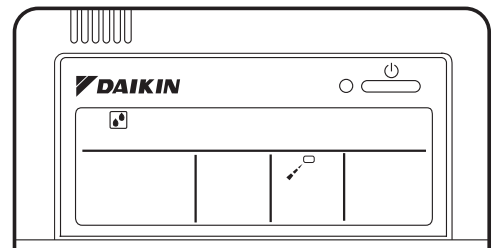

3

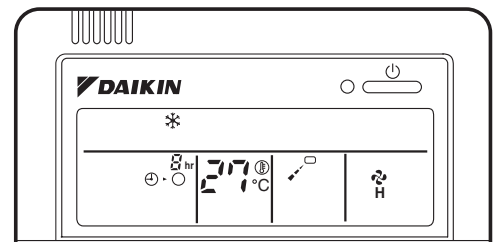

4

- The precautions described below are **WARNING** and **CAUTION**. These are very important precautions concerning safety. Be sure to observe all of them without fail.

**WARNING...**

These are the matters with possibilities leading to serious consequences such as death or serious injury due to erroneous handling.

**CAUTION...**

These are the matters with possibilities leading to injury or material damage due to erroneous handling including probabilities leading to serious consequences in some cases.

- After reading, keep this manual at a place where any user can read at any time. Furthermore, make certain that this operation manual is handed to a new user when he takes over the operation.

**WARNING...**

**Avoid exposure of your body directly to the cold air for a long time, or avoid excessive exposure of your body to the cold air.**

Otherwise, your physical condition may be deteriorated and/or your health may be ruined.

**When the air conditioner is in abnormal conditions (smell of something burning, etc), unplug the power cord from the outlet, and contact the dealer where you purchased the air conditioner.**

Continued operation under such circumstances may result in a failure, electric shock, and fire.

**Ask your dealer for installation of the air conditioner.** Incomplete installation performed by yourself may result in a failure, a water leakage, electric shock, and fire.

**Ask your dealer for improvement, repair and maintenance.**

Incomplete improvement, repair, and maintenance may result in a failure, a water leakage, electric shock, and fire.

**Do not insert your finger, a stick, etc., into the air inlet, outlet, and fan blades.**

A fan in high-speed running may result in injury.

**For refrigerant leakage, consult your dealer.**

When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the limiting concentration even when it leaks. If the refrigerant leaks exceeding the level of limiting concentration, an oxygen deficiency accident may happen.

**For installation of separately sold component parts, ask a specialist.**

Be sure to use the separately sold component parts designated by our company.

Incomplete installation performed by yourself may result in a failure, a water leakage, electric shock, and fire.

**Ask your dealer to move and reinstall the air conditioner.**

Incomplete installation may result in a failure, a water leakage, electric shock, and fire.

**Do not use any fuse with improper capacity.**

The use of a piece of wire and whatnot may result in a failure and fire.

**The refrigerant in the air conditioner is safe and normally does not leak. If the refrigerant leaks inside the room, the contact with a fire of a burner, a heater or a cooker may result in a harmful gas.**

Do not use the air conditioner until when a service person confirms to finish repairing the portion where the refrigerant leaks.

**CAUTION...**

**Do not use the air conditioner for other purposes.**

Do not use the air conditioner for a special application such as the storage of foods, animals and plants, precision machines, and art objects as otherwise the deterioration of quality may result.

**Do not remove the air outlet of the outdoor unit.**

The fan may get exposed and result in injury.

**When the air conditioner is used in combination with burners or heaters, perform sufficient ventilation.**

Insufficient ventilation may result in a oxygen deficiency accident.

**Check and make sure that foundation blocks are not damaged after a long use.**

If they are left in a damaged condition, the unit may fall and result in injury.

**Neither place a flammable spray bottle near the air conditioner nor perform spraying.**

Doing so may result in a fire.

**To clean the air conditioner, stop operation, and unplug the power cord from the outlet.**

Otherwise, an electric shock and injury may result.

**Do not operate the air conditioner with a wet hand.**

An electric shock may result.

**Do not place items that might be damaged by water under the indoor unit.**

Water may condensate and drip if the humidity reaches 80% or if the drain exit gets clogged.

**Do not place a burner or heater at a place directly exposed to the wind from the air conditioner.**

Incomplete combustion of the burner or heater may result.

**Do not allow a child to mount on the outdoor unit or avoid placing any object on it.**

Falling or tumbling may result in injury.

**Do not expose animals and plants directly to the wind from the air conditioner.**

Adverse influence to animals and plants may result.

**Do not wash the air conditioner with water.**

Electrical shock or fire may result.

**Do not install the air conditioner at any place where flammable gas may leak out.**

If the gas leaks out and stays around the air conditioner, a fire may break out.

**Be sure to install an earth leakage breaker.**

Unless it is installed, an electric shock may result.

**Be sure the air conditioner is electrically grounded.**  
 Do not connect the grounding conductor to a gas pipe, water pipe, lightning arrester and the grounding conductor for a telephone.  
 Imperfect grounding work may result in an electric shock.  
**Execute complete drain piping for perfect drainage.**  
 Incomplete piping may result in a water leakage.  
**The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.**

**1. Operation range**

If the temperature or the humidity is beyond the following conditions, safety devices may work and the air conditioner may not operate, or sometimes, water may drop from the indoor unit.

**Cooling**

OUTDOOR UNIT	INDOOR		OUTDOOR TEMPERATURE
	TEMPERATURE	HUMIDITY	
R35 · 45 · 60	DB 18 to 33	80% or below	DB - 15 to 46
	WB 12 to 24		
RY35 · 45 · 60	DB 18 to 33	80% or below	DB - 5 to 46
	WB 12 to 24		
R71 · 100 · 125 RP71 · 100 · 125 REP71 · 100 · 125	DB 21 to 35	80% or below	DB - 15 to 46
	WB 14 to 25		
RY71 · 100 · 125 RYP71 · 100 · 125 RYEP71 · 100 · 125	DB 18 to 35	80% or below	DB - 5 to 46
	WB 12 to 25		
RZP71 · 100 · 125	DB 21 to 35	80% or below	DB - 5 to 50
	WB 14 to 25		
RQ71 · 100 · 125	DB 18 to 37	80% or below	DB - 5 to 46
	WB 12 to 28		
RR71 · 100 · 125	DB 18 to 37	80% or below	DB - 15 to 46
	WB 12 to 28		
RZQ71 · 100 · 125 · 140	DB 18 to 37	80% or below	DB - 15 to 50
	WB 12 to 28		
RS50 · 60 RKS35 · 50 · 60 RXS35 · 50 · 60	DB 21 to 32	80% or below	DB - 10 to 46
	WB 14 to 23		
3MKS50 4MKS58 · 75 · 90 3MXS52 · 2MXS52 4MXS68 · 80	DB 21 to 32	80% or below	DB - 10 to 46
	WB 14 to 23		
RMKS112 · 140 · 160 RMS112 · 140 · 160	DB 21 to 32	80% or below	DB - 5 to 46
	WB 14 to 23		

**HEATING**

OUTDOOR UNIT	INDOOR TEMPERATURE		OUTDOOR TEMPERATURE	
	DB	WB	DB	WB
RY35 · 45 · 60	15 to 27	15 to 27	DB	- 9 to 21
			WB	- 10 to 15.5
RY71 · 100 · 125 RYP71 · 100 · 125 RYEP71 · 100 · 125	15 to 27	15 to 27	DB	- 9 to 21
			WB	- 10 to 15.5
RZP71 · 100 · 125	15 to 27	15 to 27	DB	- 14 to 21
			WB	- 15 to 15.5
RQ71 · 100 · 125	10 to 27	10 to 27	DB	- 9 to 21
			WB	- 10 to 15
RZQ71 · 100 · 125 · 140	10 to 27	10 to 27	DB	- 19.5 to 21
			WB	- 20 to 15.5
RXS35 · 50 · 60	10 to 30	10 to 30	DB	- 14 to 24
			WB	- 15 to 18
3MXS52 · 2MXS52 4MXS68 · 80	10 to 30	10 to 30	DB	- 14 to 21
			WB	- 15 to 15.5
RMS112 · 140 · 160	10 to 30	10 to 30	DB	- 14 to 21
			WB	- 15 to 15.5

DB: Dry bulb temperature (°C)  
 WB: Wet bulb temperature (°C)

The setting temperature range of the remote control is 16°C to 32°C.

**2. Installation site**

**Regarding places for installation**

- **Is the air conditioner installed at a well-ventilated place where there are no obstacles around?**
- **Do not use the air conditioner in the following places.**
  - a. Filled with much mineral oil such as cutting oil.
  - b. Where there is much salt such as a beach area.
  - c. Where sulfured gas exists such as a hot-spring resort.
  - d. Where there are considerable voltage fluctuations such as a factory or plant.
  - e. Vehicles and vessels.
  - f. Where there is much spray of oil and vapor such as a cookery, etc.
  - g. Where there are machines generating electromagnetic waves.
  - h. Filled with acid and/or alkaline steam or vapor.
- **Is a snow protection measure taken?**  
 For details, consult your dealer.

**Regarding wiring**

- **All wiring must be performed by an authorized electrician.**  
 To do wiring, ask your dealer. Never do it by yourself.

- **Make sure that a separate power supply circuit is provided for this air conditioner and that all electrical work is carried out by qualified personnel according to local laws and regulations.**

### Pay attention to running noises, too



- **Are the following places selected?**
  - a. A place that can sufficiently withstand the weight of the air conditioner with less running noises and vibrations.
  - b. A place where the hot wind discharged from the air outlet of the outdoor unit and the running noises.
- **Are you sure that there are no obstacles near the air outlet of the outdoor unit?**  
Such obstacles may result in declined performance and increased running noises.
- **If abnormal noises occur in use, stop the operation of the air conditioner, and then consult your dealer or our service station.**











### Regarding drainage of drain piping

- **Is the drain piping executed to perform complete drainage?**  
If proper drainage is not carried out from the outdoor drain pipes during air-conditioning operation, chances are that dust and dirt are clogged in the pipe. This may result in a water leakage from the indoor unit. Under such circumstances, stop the operation of the air conditioner, and then consult your dealer or our service station.
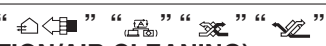
## 3. Name and function of each switch and display on the remote control

Refer to figure 1 on page [1]

1	<b>ON/OFF BUTTON</b>
	Press the button and the system will start. Press the button again and the system will stop.
2	<b>OPERATION LAMP (RED)</b>
	The lamp lights up during operation.
3	<b>DISPLAY “” (UNDER CENTRALIZED CONTROL)</b>
	When this display shows, the system is UNDER CENTRALIZED CONTROL.
4	<b>DISPLAY “” (VENTILATION/AIR CLEANING)</b>
	This display shows that the total heat exchange and the air cleaning unit are in operation (These are optional accessories).

5	<b>DISPLAY “” (OPERATION MODE)</b>
	This display shows the current OPERATION MODE. For cooling only type, “  ” (Auto) and “  ” (Heating) are not installed.
6	<b>DISPLAY “ TEST” (INSPECTION/TEST OPERATION)</b>
	When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.
7	<b>DISPLAY “” (PROGRAMMED TIME)</b>
	This display shows the PROGRAMMED TIME of the system start or stop.
8	<b>DISPLAY “” (SET TEMPERATURE)</b>
	This display shows the set temperature.
9	<b>DISPLAY “” (FAN SPEED)</b>
	This display shows the set fan speed.
10	<b>DISPLAY “” (AIR FLOW FLAP)</b>
	Refer to “AIR FLOW DIRECTION ADJUST”.
11	<b>DISPLAY “” (TIME TO CLEAN AIR FILTER)</b>
	Refer to “HOW TO CLEAN THE AIR FILTER”.
12	<b>DISPLAY “” (DEFROST)</b>
	Refer to “DEFROST OPERATION”.
13	<b>NON-FUNCTIONING DISPLAY</b>
	If that particular function is not available, pressing the button may display the words “NOT AVAILABLE” for a few seconds. When running multiple units simultaneously, the “NOT AVAILABLE” message will only appear if none of the indoor units is equipped with the function. If even one unit is equipped with the function, the display will not appear.
14	<b>TIMER MODE START/STOP BUTTON</b>
	Refer to “PROGRAM TIMER OPERATION”.
15	<b>TIMER ON/OFF BUTTON</b>
	Refer to “PROGRAM TIMER OPERATION”.
16	<b>INSPECTION/TEST OPERATION BUTTON</b>
	This button is used only by qualified service persons for maintenance purposes.
17	<b>PROGRAMMING TIME BUTTON</b>
	Use this button for programming “START and/or STOP” time.
18	<b>TEMPERATURE SETTING BUTTON</b>
	Use this button for SETTING TEMPERATURE.
19	<b>FILTER SIGN RESET BUTTON</b>
	Refer to HOW TO CLEAN THE AIR FILTER.



20	<b>FAN SPEED CONTROL BUTTON</b>
	Press this button to select the fan speed, HIGH or LOW, of your choice.
21	<b>OPERATION MODE SELECTOR BUTTON</b>
	Press this button to select OPERATION MODE.
22	<b>AIR FLOW DIRECTION ADJUST BUTTON</b>
	Refer to "AIR FLOW DIRECTION ADJUST".
<b>NOTE</b>	
<ul style="list-style-type: none"> <li>For the sake of explanation, all indications are shown on the display in Figure 1 contrary to actual running situations.</li> </ul>	

**4. Operation procedure**

Refer to figure 1 on page [1]

- Operating procedure varies with heat pump type and cooling only type. Contact your Daikin dealer to confirm your system type.
- To protect the unit, turn on the main power switch 6 hours before operation.
- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

**Cooling, heating, automatic, fan, and program dry operation**

Operate in the following order.



**Operation mode selector**

Press **OPERATION MODE SELECTOR** button several times and select the **OPERATION MODE** of your choice as follows.

- COOLING OPERATION.....“ ❄️ ”
- HEATING OPERATION .....“ ☀️ ”
- AUTOMATIC OPERATION.....“ ⏸️ ”
  - In this operation mode, COOL/HEAT changeover is automatically conducted
- FAN OPERATION.....“ 🌀 ”
- DRY OPERATION .....“ 💧 ”
  - The function of this program is to decrease the humidity in your room with the minimum temperature decrease.
  - Micro computer automatically determines TEMPERATURE and FAN SPEED.
  - This system does not go into operation if the room temperature is below 16°C.

Refer to figure 3 on page [1]

- For cooling only type, "COOLING", "FAN" and "DRY" operation are able to select.



**Press ON/OFF button**

OPERATION lamp lights up or goes off and the system starts or stops OPERATION.

**[EXPLANATION OF HEATING OPERATION]**

**DEFROST OPERATION**

- As the frost on the coil of an outdoor unit increase, heating effect decreases and the system goes into DEFROST OPERATION.
- The indoor unit fan stops and the remote control display shows “ ❄️/❄️ ”.
- After 6 to 8 minutes (maximum 10 minutes) of DEFROST OPERATION, the system returns to HEATING OPERATION.

**Regarding outside air temperature and heating capacity**

- The heating capacity of the air conditioner declines as the outside air temperature falls. In such a case, use the air conditioner in combination with other heating systems.
- A warm air circulation system is employed, and therefore it takes some time until the entire room is warmed up after the start of operation.
- An indoor fan runs to discharge a gentle wind automatically until the temperature inside the air conditioner reaches a certain level. At this time, the remote control displays “ ❄️/❄️ ”. Leave it as it stands and wait for a while.
- When the warm air stays under the ceiling and your feet are cold, we recommend that you use a circulator (a fan to circulate the air inside the room). For details, consult your dealer.


**Adjustment**

For programming TEMPERATURE, FAN SPEED and AIR FLOW DIRECTION, follow the procedure shown below.



**Temperature setting**

Press TEMPERATURE SETTING button and program the setting temperature.

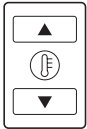

Each time this button is pressed, setting temperature rises 1°C

Each time this button is pressed, setting temperature lowers 1°C

- The setting is impossible for fan operation

**NOTE**

- The setting temperature range of the remote control is 16°C to 32°C.



**Fan speed control**

Press FAN SPEED CONTROL button.

High or Low fan speed can be selected.


The microchip may sometimes control the fan speed in order to protect the unit.



**Air flow direction adjust**

- There are 2 ways of adjusting the air discharge angle.
  1. A. Up and down adjustment
  2. B. Left and right direction


**Fig. 1**

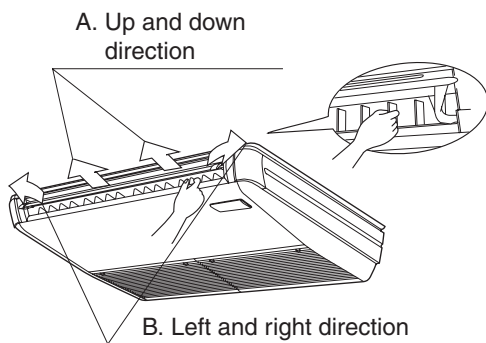

**A. Up and down direction**

- The movable limit of the flap is changeable. Contact your Daikin dealer for details.


Press the AIR FLOW DIRECTION ADJUST button to select the air direction as following.

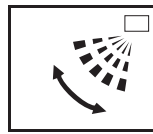

The AIR FLOW FLAP display swings as shown left and the air flow direction continuously varies. (Automatic swing setting)



Press AIR FLOW DIRECTION ADJUST button to select the air direction of your choice.

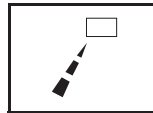

The AIR FLOW FLAP display stops swinging and the air flow direction is fixed (Fixed air flow direction setting).

**Movement of the air flow flap**

For the following conditions, micro computer controls the air flow direction so it may be different from the display.

Operation mode	Cooling	Heating
Operation condition	<ul style="list-style-type: none"> <li>• When room temperature is lower than the set temperature</li> </ul>	<ul style="list-style-type: none"> <li>• When room temperature is higher than the set temperature</li> <li>• At defrost operation</li> </ul>
	<ul style="list-style-type: none"> <li>• When operating continuously at horizontal air flow direction</li> </ul>	

Operation mode includes automatic operation.

**B. Left and right direction**

- Adjusting air flow direction in the left and right direction. (Refer to Fig.1)


**NOTE**

- Only make adjustments after you have stopped the air flow direction swing in a position where adjustments are possible. Your hand may get caught if you attempt to make adjustments while the unit is swinging.

### Program timer operation

Operate in the following order.

- The timer is operated in the following two ways.
- Programming the stop time ( ⊕ > ○ ) ... The system stops operating after the set time has elapsed.
- Programming the start time ( ⊕ > | ) ... The system starts operating after the set time has elapsed.
- The timer can be programmed a maximum of 72 hours.
- The start and the stop time can be simultaneously programmed.

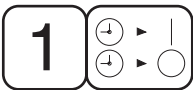

### 1 Timer mode START/STOP

Press the **TIMER MODE START/STOP** button several times and select the mode on the display.

The display flashes.


For setting the timer stop ... " ⊕ > ○ "

For setting the timer start ... " ⊕ > | "



### 2 Programming time

Press the **PROGRAMMING TIME** button and set the time for stopping or starting the system.

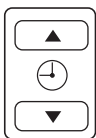

When this button is pressed, the time advances by 1 hour.

When this button is pressed, the time goes backward by 1 hour.



### 3 Timer ON/OFF

Press the **TIMER ON/OFF** button.

The timer setting procedure ends.

The display " ⊕ > ○ " or " ⊕ > | " changes from flashing light to a constant light.


Refer to figure 4 on page [1]

#### NOTE

- When setting the timer OFF and On at the same time, repeat the above procedure from **1** to **3** once again.
- When the timer is programmed to stop the system after 3 hours and start the system after 4 hours, the system will stop after 3 hours and then 1 hour later the system will start.
- After the timer is programmed, the display shows the remaining time.
  - Press the **TIMER ON/OFF** button once again to cancel programming. The display vanishes.

### 5. Optimum operation

Observe the following precautions to ensure the system operates.

- Adjust the room temperature properly for a comfortable environment. Avoid excessive heating or cooling.
- Prevent direct sunlight from entering a room during cooling operation by using curtains or blinds.
- Ventilate the room regularly.  
Using the unit for long periods of time requires attentive ventilation of the room.
- Keep doors and windows closed. If the doors and windows remain open, room air will flow out and cause to decrease the effect of cooling and heating.
- Do not place other heaters directly below the indoor unit. They may deform due to the heat.
- Never place objects near the air inlet and the air outlet of the unit. It may cause deterioration in the effect or stop in the operation.
- Turn off the main power supply switch when it is not used for long periods of time. When the main power switch is turned on, some watts of electricity is being used even if the system is not operating. Turn off the main power supply switch for saving energy. When reoperating, turn on the main power supply switch 6 hours before operation for smooth running (Refer to MAINTENANCE)
- When the display shows "  " (TIME TO CLEAN AIR FILTER), ask a qualified service person to clean the filters (Refer to MAINTENANCE).

## 6. Maintenance (for service personnel)

Only a qualified service person is allowed to perform maintenance

### IMPORTANT!

- Before obtaining access to terminal devices, all power supply circuits must be interrupted
- To clean the air conditioner, be sure to stop operation, and turn the power switch off. Otherwise, an electric shock and injury may result.
- Do not wash the air conditioner with water. Doing so may result in an electric shock.
- Be careful with a scaffold or staging. Caution must be exercised because of work at a high place.

Fig. 2

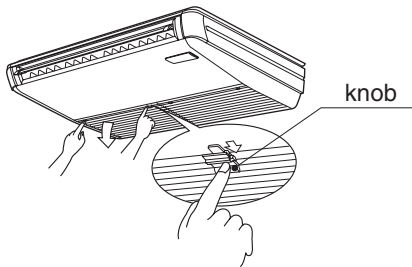


Fig. 3

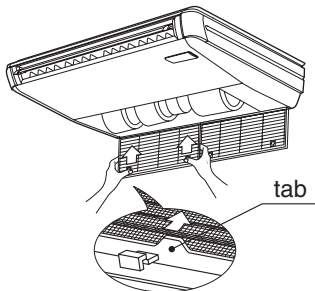


Fig. 4


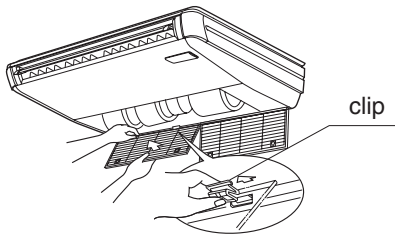



Fig. 5

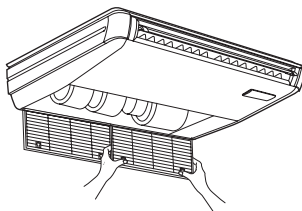

### How to clean the air filter

Clean the air filter when the display shows “” (TIME TO CLEAN AIR FILTER).

It will display that it will operate for a set amount of time.

Increase the frequency of cleaning if the unit is installed in a room where the air is extremely contaminated.

If the dirt becomes impossible to clean, change the air filter (Air filter for exchange is optional).

#### 1. Open the suction grille.

Slide both knobs simultaneously as shown and then pull them downward.

(Do the same procedure for closing.)

(Refer Fig. 2)

#### 2. Remove the air filters.

Push the 2 tabs up, and slowly lower the grille.

(Refer to Fig. 3)

#### 3. Clean the air filter.

Use a vacuum cleaner **A)** or wash the air filter with water **B).**

**A)** Using a vacuum cleaner



**B)** Washing with water

When the air filter is very dirty, use soft brush and neutral detergent.



Remove water and dry in the shade.

### NOTE

- Do not wash the air conditioner with hot water of more than 50°C, as doing so may result in discoloration and/or deformation.
- Do not expose it to fire, as doing so may result in burning.

#### 4. Fix the air filter.

Set the hatch of the air filter to the hook of the suction grille, and fix the air filter

(Refer to Fig. 5)

#### 5. Close the suction grille.

Refer to item No. 1.

#### 6. After turning on the power, press FILTER SIGN RESET button.

The “TIME TO CLEAN AIR FILTER” display vanishes.

### How to clean air outlet and outside panels

- Clean with soft cloth.
- When it is difficult to remove stains, use water or neutral detergent.

#### NOTE

- Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide. It may cause discoloring or warping.
- Do not let the indoor unit get wet. It may cause an electric shock or a fire.
- Do not use water or air of 50°C or higher for cleaning air filters and outside panels.

### How to clean the suction grille

#### 1. Open the suction grille.

Slide both knobs and then pull them downward. (Do the same procedure for closing.)

#### 2. Remove the air filter.

Refer to "HOW TO CLEAN THE AIR FILTER".  
(Refer to Fig.3)

#### 3. Remove the suction grille.

Open the suction grille and pull the clips on the back of suction grille forward.  
(Refer to Fig. 4)

#### 4. Clean the suction grille.

Wash with a soft bristle brush and neutral detergent or water, and dry thoroughly.

##### • When very grimy

Directly apply the type of detergent used for cleaning ventilation fans or ovens, wait 10 minutes, and then rinse with water.



#### NOTE

- Do not wash the air conditioner with hot water of more than 50°C, as doing so may result in discoloration and/or deformation.
- 5. **Fix the air filter.**  
Refer to "How to clean the air filter".
- 6. **Fix the suction grille.**  
Refer to item No. 3.
- 7. **Close the suction grille.**  
Refer to item No. 1.

### Start up after a long stop

#### Confirm the following

- Check that the air inlet and outlet are not blocked.  
Remove any obstacle.
- Check if the earth is connected  
Might there be a broken wire somewhere?  
Contact your dealer if there are any problems.

#### Clean the air filter and outside panels

- After cleaning the air filter, make sure to attach it.

### Turn on the main power supply switch

- The display on the remote control will be shown when the power is turned on.
- To protect the unit, turn on the main power switch at least 6 hours before operation.

### What to do when stopping the system for a long period

#### Turn on FAN OPERATION for half a day and dry the unit.

- Refer to "6. OPERATION PROCEDURE".

#### Cut off the power supply.

- When the main power switch is turned on, some watts of electricity is being used even if the system is not operating. Turn off the main power supply switch for saving energy.
- The display on the remote control will vanish when the main power switch is turned off.

#### Clean the air filter and the exterior.

- Be sure to replace the air filter to its original place after cleaning. Refer to "Maintenance"

## 7. Not malfunction of the air conditioner

The following symptoms do not indicate air conditioner malfunction

### I. The system does not operate

- **The system does not restart immediately after the ON/OFF button is pressed.**


If the OPERATION lamp lights, the system is in normal condition.

It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.

- **The system does not restart immediately when TEMPERATURE SETTING button is returned to the former position after pushing the button.**

If the OPERATION lamp lights, the system is in normal condition.

It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.

- **The system does not start when the display shows “” (UNDER CENTRALIZED CONTROL) and it flashes for few seconds after pressing an operation button.**

This is because the system is under centralized control. Flashes on the display indicates that the system cannot be controlled by the remote control.

- **The system does not start immediately after the power supply is turned on.**  
Wait one minute until the micro computer is prepared for operation.
- **The outdoor unit is stopped.**  
This is because the room temperature has reached the set temperature. The indoor unit switches to fan operation.

## II. When “” (under centralized control) is displayed and operation is different from the remote control display.

This is because operating mode is controlled by a micro computer, as shown below, depending on the operating mode of other connected indoor units when using in a multi system.

- **If the operating mode does not match that of the other indoor units which are already running, the indoor unit goes into standby mode (the fan stops and the air flow flaps become horizontal).**
- The unit will go into the above mode if either cooling, dry or fan operation mode are set together with heating mode.

### NOTE

Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.

- If the operation mode of the first room is FAN Mode, then using Heating Mode in any room after this will give priority to heating. In this situation, the air conditioner running in FAN Mode will go on standby.
  - With the Priority Room Setting active  
Contact your Daikin dealer for the operation that corresponds to your system.
- **If the total capacity of all the indoor units running exceeds the limit, the indoor unit will go into standby mode (fan and air flow direction remain as set). (Only for cooling-only type.)**
  - **If another indoor unit goes into heating mode after cooling, the unit may go into dry mode (fan operates whisper and the air flow flaps become horizontal).**

## III. The fan speed is different from the setting.

- **Pressing the fan speed control button does not change the fan speed.**

When the room temperature reaches the set temperature in heating mode, the power supply from the outdoor unit stops and the indoor unit goes into whisper mode (in a multi system, the fan goes back and forth between stop and whisper). This is to prevent the cool air from being blown directly onto anyone in the room.

## IV. Air blow direction is not as specified.

- **Actual air blow direction is not as shown on the remote control.**
- **Automatic swing setting does not work.**  
Refer to “AIR FLOW DIRECTION ADJUST”.

## V. White mist comes out of a unit.

- **When humidity is high during cooling operation (In oily or dusty places)**  
If the inside of an indoor unit is extremely contaminated, the temperature distribution inside a room becomes uneven. It is necessary to clean the inside of the indoor unit. Ask your Daikin dealer for details on cleaning the unit  
This operation requires a qualified service person.
- **When the system is changed over to HEATING OPERATION after DEFROST OPERATION.**  
Moisture generated by DEFROST becomes steam and exists.

## VI. Noise of air conditioners

- **A ringing sound after the unit is started.**  
**This sound is generated by the temperature regulator working.**  
It will quiet down after about a minute.
- **A continuous flow “Shuh” sound is heard when the system is in COOLING or DEFROST OPERATION**  
This is the sound of refrigerant gas flowing through both indoor and outdoor units.
- **A “Shuh” sound which is heard at the start or immediately after the stop of operation or which is heard at the start or immediately after the stop of DEFROST OPERATION.**  
This is the noise of refrigerant caused by flow stop and flow change.
- **A continuous flow “Shah” sound is heard when the system is in COOLING OPERATION or at a stop.**  
The noise is heard when the drain pump is in operation.
- **A “Pishi-pishi” squeaking sound is heard when the system is in operation or after the stop of operation.**  
Expansion and contraction of plastic parts caused by temperature change makes this noise.



**VII. Dust from the units**

- **Dust may blow out from the unit after starting operation from long resting time.**  
Dust absorbed by the unit blows out.

**VIII. The units give off odors**

The unit absorbs the smell of rooms, furniture, cigarettes, etc., and then emits them.

**IX. The liquid crystal of the remote control show "88"**

- **It happens immediately after the main power supply switch is turned on.**  
This shows that the remote control is in normal condition. This is continues temporary.


**8. TROUBLE SHOOTING**

**I. If one of the following malfunctions occurs, take the measures shown below and contact your Daikin dealer.**  
The system must be repaired by a qualified service person.

**⚠ WARNING...**

**When the air conditioner is in abnormal conditions (smell of something burning, etc.), unplug the power cord from the outlet, and contact your dealer**  
Continued operation under such circumstances may result in a failure, electric shock, and fire.

- If a safety device such as a fuse, a breaker, or an earth leakage breaker frequently actuates, or ON/OFF switch does not properly work.  
**Measure:** Turn off the main power switch
- If water leaks from unit.  
**Measure:** Stop the operation.
- if the display "⚡" (INSPECTION), "UNIT No.", and the OPERATION lamp flashes and the "MALFUNCTION CODE" appears.

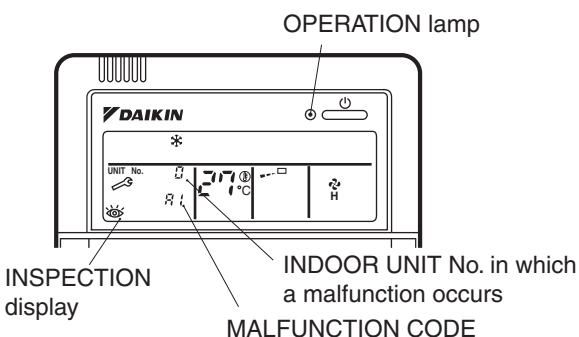

**Measure:** Notify your Daikin dealer and inform him/her of the display.

**II. If the system does not properly operate except for the above mentioned case, and none of the above mentioned malfunctions is evident, investigate the system according to the following procedures.**

- 1. If the system does not operate at all.**
  - Check if there is a power failure.  
Wait until power is restored. If power failure occurs during operation, the system automatically restarts immediately after the power supply recovers.
  - Check if the fuse has blown or breaker has worked.  
Change the fuse or set the breaker.
- 2. If the system stops operating after operating the system.**
  - Check if the air inlet or outlet of outdoor or indoor unit is blocked by obstacles.  
Remove the obstacle and make it well-ventilated.
  - Check if the air filter is clogged.  
Ask a qualified service person to clean the air filters (Refer to MAINTENANCE).
- 3. The system operates but it does not sufficiently cool or heat.**
  - If the air inlet or outlet of the indoor or the outdoor unit is blocked with obstacles.  
Remove the obstacle and make it well-ventilated.
  - If the air filter is clogged.  
Ask a qualified service person to clean the air filters (Refer to MAINTENANCE).
  - If the set temperature is not proper (Refer to ADJUSTMENT).
  - If the FAN SPEED button is set to LOW SPEED (Refer to ADJUSTMENT).
  - If the air flow angle is not proper (Refer to AIR FLOW DIRECTION ADJUST).
  - If the doors or the windows are open.  
Shut the doors or windows to prevent wind from coming in.
  - If direct sunlight enters the room (when cooling).  
Use curtains or blinds.
  - When there are too many inhabitants in the room (when cooling).  
Cooling effect decreases if heat gain of the room is too large.
  - If the heat source of the room is excessive (when cooling).  
Cooling effect decreases if heat gain of the room is too large.

# Part 6

## Service Diagnosis

1. Caution for Diagnosis .....	204
1.1 Troubleshooting with Operation Lamp .....	204
2. Problem Symptoms and Measures .....	206
3. Service Check Function .....	207
4. Code Indication on the remote control .....	210
4.1 Error Codes and Description of Fault .....	210
5. Troubleshooting .....	211
5.1 Indoor Units .....	211
5.2 Outdoor Units .....	212
5.3 Indoor Unit PCB Abnormality .....	213
5.4 Freeze-up Protection Control or High Pressure Control .....	214
5.5 Fan Motor or Related Abnormality .....	216
5.6 Thermistor or Related Abnormality (Indoor Unit) .....	219
5.7 Shutter Drive Motor / Shutter Limit Switch Abnormality .....	220
5.8 Signal Transmission Error (between Indoor and Outdoor Units) .....	221
5.9 Unspecified Voltage (between Indoor and Outdoor Units) .....	222
5.10 Freeze-up Protection Control .....	223
5.11 Outdoor Unit PCB Abnormality .....	225
5.12 OL Activation (Compressor Overload) .....	226
5.13 Compressor Lock .....	227
5.14 DC Fan Lock .....	228
5.15 Input Over Current Detection .....	229
5.16 Discharge Pipe Temperature Control .....	231
5.17 High Pressure Control in Cooling .....	232
5.18 Compressor Sensor System Abnormality .....	234
5.19 Position Sensor Abnormality .....	236
5.20 CT or Related Abnormality .....	237
5.21 Thermistor or Related Abnormality (Outdoor Unit) .....	239
5.22 Electrical Box Temperature Rise .....	241
5.23 Radiation Fin Temperature Rise .....	243
5.24 Output Over Current Detection .....	245
5.25 Insufficient Gas .....	247
5.26 Low-voltage Detection or Over-voltage Detection .....	249
5.27 Signal Transmission Error (on Outdoor Unit PCB) .....	250
5.28 Anti-icing Function in Other Rooms / Unspecified Voltage (between Indoor and Outdoor Units) .....	251
6. Check .....	252
6.1 How to Check .....	252



# 1. Caution for Diagnosis

## 1.1 Troubleshooting with Operation Lamp


The operation lamp flashes when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated or when the thermistor malfunctions, disabling equipment operation.
2. When a signal transmission error occurs between the indoor and outdoor units.


In either case, conduct the diagnostic procedure described in the following pages.

### Location of Operation Lamp


In case of  
FTXG 25/35 E Series  
CTXG 50 E  
ATXG 25/35/50 E

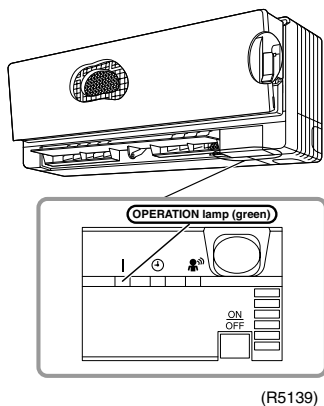


In case of  
FTK(X)S 20/25/35 D Series  
FTK(X)S 50 D Series

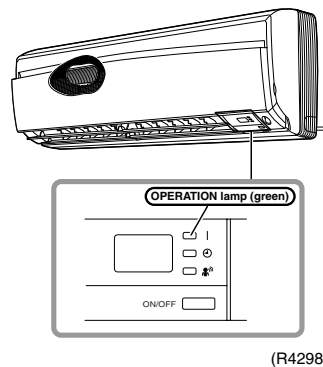


In case of  
ATXS 20/25/35/50 E Series

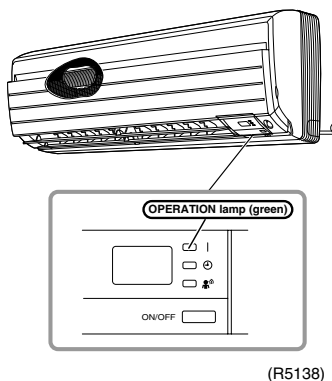


In case of  
FTK(X)S 20/25/35 C Series  
ATXS 20/25/35 D Series

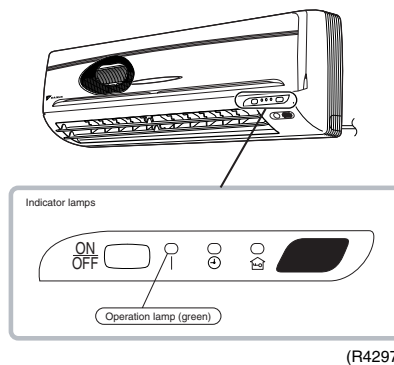


In case of  
FTK(X)S 50 E Series  
ATX 50 E Series

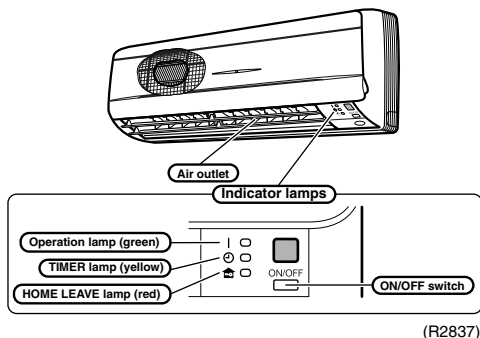


In case of  
FDK(X)S 25/35/50 C Series  
FDK(X)S 25/35 E Series

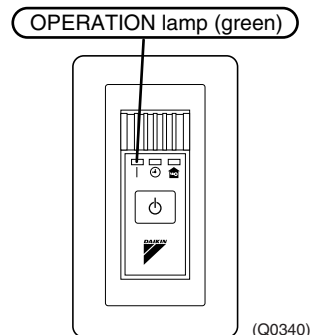

In case of  
FVK(X)S 25/35/50 B Series

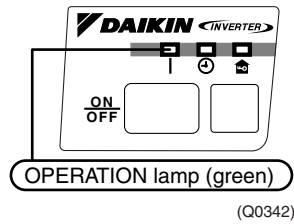

In case of  
FLK(X)S 25/35/50 B Series

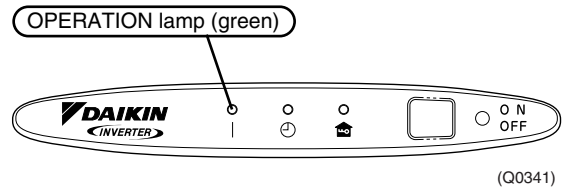

**Caution:**

Operation stops suddenly. (Operation lamp blinks.)

Cause of above trouble could be "Operation mode conflict".

Check followings;

Are the operation modes all the same for indoor units connected to Multi system outdoor unit?  
If not set all indoor units to the same operation mode and confirm that the operation lamp is not blinking.


Moreover, when the operation mode is in "Auto", set all indoor unit operation mode to "Cool" or "Heat" and check again if the operation lamp is normal.

If the lamp stops blinking after the above steps, there is no malfunction.

★Operation stops and operation lamp blinks only for indoor unit which the different operation mode is set later. (The first set operation mode has priority.)

**Troubleshooting  
with the LED  
Indication**

Outdoor Unit

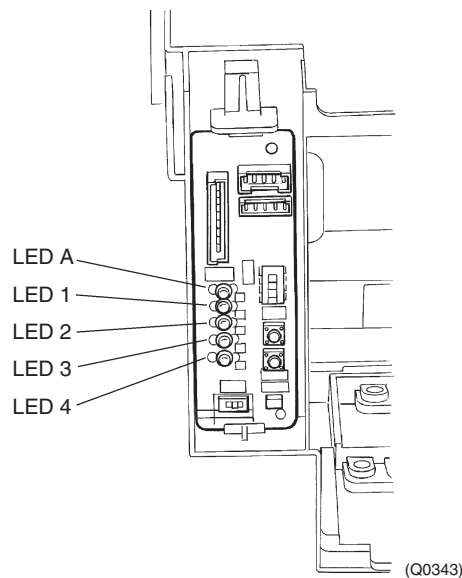

There are green and red LEDs on the PCB. The flashing green LED indicates normal equipment condition, and the OFF condition of the red LED indicates normal equipment condition. (Troubleshooting with the green LED)

The LED A (green) of the outdoor unit indicate microcomputer operation condition.

Even after the error is cancelled and the equipment operates in normal condition, the LED indication remains.

## 2. Problem Symptoms and Measures


Problem Symptom	Check Item	Details of Measure	Page No. to be referred
None of the units operates.	Check the power supply.	Check to make sure that the rated voltage is supplied.	—
	Check the type of the indoor units.	Check to make sure that the indoor unit type is compatible with the outdoor unit.	—
	Check the outdoor air temperature.	Heating operation cannot be used when the outdoor air temperature is 21°C or higher (only for heat pump model), and cooling operation cannot be used when the outdoor air temperature is below -10 °C	—
	Diagnosis with indoor unit LED indication	—	211
	Diagnosis with outdoor unit LED indication	—	212
	Check the remote control addresses.	Check to make sure that address settings for the remote control and indoor unit are correct.	—
Operation sometimes stops.	Check the power supply.	A power failure of 2 to 10 cycles can stop air conditioner operation. (Operation lamp OFF)	—
	Check the outdoor air temperature.	Heating operation cannot be used when the outdoor air temperature is 21°C or higher (only for heat pump model), and cooling operation cannot be used when the outdoor air temperature is below -10°C	—
	Diagnosis with indoor unit LED indication	—	211
	Diagnosis with outdoor unit LED indication	—	212
Some indoor units do not operate.	Check the type of the indoor units.	Check to make sure that the indoor unit type is compatible with the outdoor unit.	—
	Diagnosis with indoor unit LED indication	—	211
	Diagnosis with outdoor unit LED indication	—	212
Equipment operates but does not cool, or does not heat (only for heat pump model).	Check for wiring and piping errors in the indoor and outdoor units connection wires and pipes.	Conduct the wiring/piping error check described on the product diagnosis nameplate.	—
	Check for thermistor detection errors.	Check to make sure that the main unit's thermistor has not dismantled from the pipe holder.	—
	Check for faulty operation of the electronic expansion valve.	Set the units to cooling operation, and compare the temperatures of the liquid side connection pipes of the connection section among rooms to check the opening and closing operation of the electronic expansion valves of the individual units.	—
	Diagnosis with indoor unit LED indication	—	211
	Diagnosis with outdoor unit LED indication	—	212
	Diagnosis by service port pressure and operating current	Check for insufficient gas.	258
Large operating noise and vibrations	Check the output voltage of the power transistor.	—	259
	Check the power transistor.	—	—
	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the Engineering Data book, etc.) are provided.	—

### 3. Service Check Function

In the ARC433A series remote control, the temperature display sections on the main unit indicate corresponding codes.

#### Check Method 1

1. When the timer cancel button is held down for 5 seconds, a "00" indication flashes on the temperature display section.

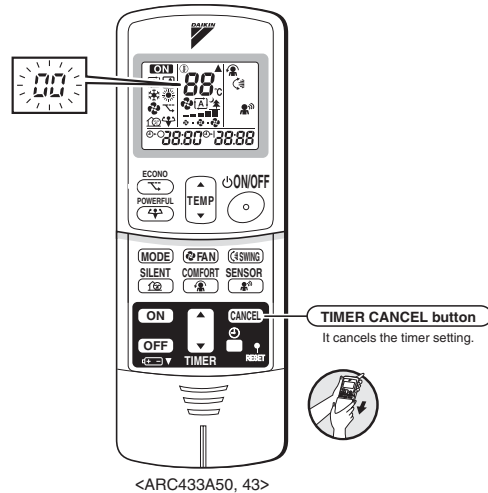

(R4271)

2. Press the timer cancel button repeatedly until a continuous beep is produced.
  - The code indication changes in the sequence shown below, and notifies with a long beep.

No.	Code	No.	Code	No.	Code
1	00	12	C7	23	H0
2	U4	13	H8	24	E1
3	F3	14	J3	25	P4
4	E6	15	R3	26	L3
5	L5	16	R1	27	L4
6	R6	17	C4	28	H6
7	E5	18	C5	29	H7
8	F6	19	H9	30	U2
9	C9	20	J6	31	UH
10	U0	21	UR	32	ER
11	E7	22	R5	33	RH

#### <In case of ARC433A50, 43>

No.	Code	No.	Code	No.	Code
1	00	12	F6	23	R1
2	U4	13	C7	24	E1
3	L5	14	R3	25	UR
4	E6	15	H8	26	UH
5	H6	16	H9	27	P4
6	H0	17	C9	28	L3
7	R6	18	C4	29	L4
8	E7	19	C5	30	H7
9	U0	20	J3	31	U2
10	F3	21	J6	32	ER
11	R5	22	E5	33	RH




#### Note:

1. A short beep and two consecutive beeps indicate non-corresponding codes.
2. To cancel the code display, hold the timer cancel button down for 5 seconds. The code display also cancels itself if the button is not pressed for 1 minute.


## Check Method 2

1. Enter the diagnosis mode.  
Press the 3 buttons (TEMP▲,TEMP▼, MODE) simultaneously.

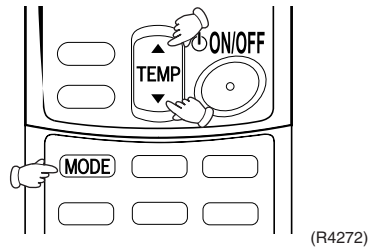


The digit of the number of tens blinks.

★Try again from the start when the digit does not blink.

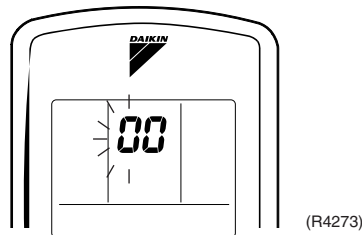


2. Press the TEMP button.  
Press TEMP▲ or TEMP▼ and change the digit until you hear the sound of “beep” or “pi pi”.

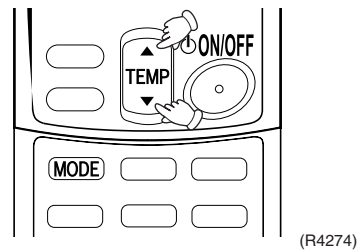


3. Diagnose by the sound.
  - ★“pi” : The number of tens does not accord with the error code.
  - ★“pi pi” : The number of tens accords with the error code.
  - ★“beep” : The both numbers of tens and units accord with the error code. (→ See 7.)


4. Enter the diagnosis mode again.  
Press the MODE button.

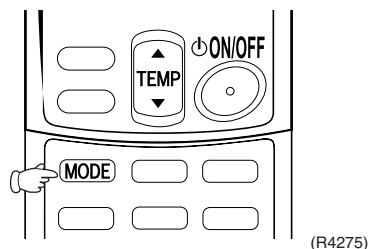

The digit of the number of units blinks.

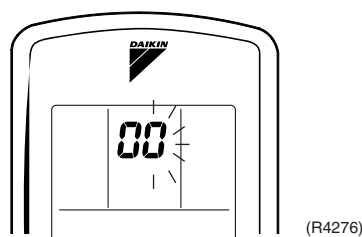


5. Press the TEMP button.  
Press TEMP▲ or TEMP▼ and change the digit until you hear the sound of “beep”.

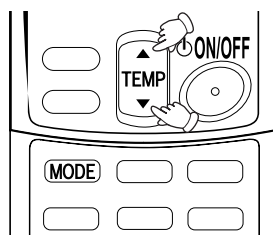

(R4277)

6. Diagnose by the sound.
  - ★“pi” : The both numbers of tens and units do not accord with the error code.
  - ★“pi pi” : The number of tens accords with the error code.
  - ★“beep” : The both numbers of tens and units accord with the error code.
7. Determine the error code.  
The digits indicated when you hear the “beep” sound are error code.  
(Error codes and description → Refer to page 210.)
8. Exit from the diagnosis mode.  
Press the MODE button.

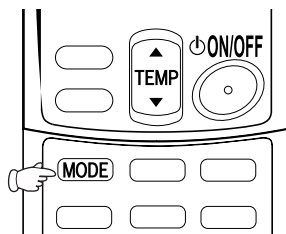

(R4278)

## 4. Code Indication on the remote control

### 4.1 Error Codes and Description of Fault

	Code Indication	Description of Problem
System	<i>00</i>	Normal
	<i>U0</i>	Insufficient gas
	<i>U2</i>	Low-voltage detection or over-voltage detection
	<i>U4</i>	Signal transmission error (between indoor and outdoor units)
	<i>U7</i>	Signal transmission error (on outdoor unit PCB)
	<i>UR</i>	Unspecified voltage (between indoor and outdoor units)
	<i>UH</i>	Anti-icing function in other rooms
Indoor Unit	<i>R1</i>	Indoor unit PCB abnormality
	<i>R5</i>	Freeze-up protection function or high pressure control
	<i>R6</i>	Fan motor or related abnormality
	<i>C4</i>	Heat exchanger temperature thermistor abnormality
	<i>C7</i>	Shutter drive motor / shutter limit switch abnormality
	<i>C9</i>	Room temperature thermistor abnormality
Outdoor Unit	<i>R5</i>	Freeze-up protection control
	<i>E1</i>	Outdoor unit PCB abnormality
	<i>E5</i>	OL activation (compressor overloaded)
	<i>E6</i>	Compressor lock
	<i>E7</i>	DC fan lock
	<i>E8</i>	Input over current detection
	<i>F3</i>	Discharge pipe temperature control
	<i>F6</i>	High pressure control in cooling
	<i>H0</i>	Compressor sensor system abnormality
	<i>H5</i>	Position sensor abnormality
	<i>H8</i>	CT or related abnormality
	<i>H9</i>	Outdoor air thermistor or related abnormality
	<i>J3</i>	Discharge pipe thermistor or related abnormality
	<i>J6</i>	Heat exchanger thermistor or related abnormality
	<i>J8</i>	Liquid pipe thermistor or related abnormality
	<i>J9</i>	Gas pipe thermistor or related abnormality
	<i>L3</i>	Electrical box temperature rise
	<i>L4</i>	Radiation fin temperature rise
	<i>L5</i>	Output over current detection
	<i>P4</i>	Radiation fin thermistor or related abnormality

## 5. Troubleshooting

### 5.1 Indoor Units

- : Not used for troubleshooting

\* : Varies depending on the cases.

Indication on the remote control	Description of the Fault		Details of fault (Refer to the indicated page.)
<i>00</i>	Indoor unit in normal condition (Conduct a diagnosis of the outdoor unit.)		—
<i>R1</i>	Indoor unit PCB abnormality		213
<i>R5</i>	Freeze-up protection control or high pressure control (heat pump model only)		214
<i>R6</i>	Fan motor or related abnormality	AC motor (Wall : 20~35 C series, Duct, Floor / Ceiling)	216
		DC motor (Wall : 20~50 D, E series) ★	217
<i>L4</i>	Heat exchanger thermistor or related abnormality		219
<i>L7</i>	Shutter drive motor / shutter limit switch abnormality		220
<i>L9</i>	Room temperature thermistor abnormality		219
<i>U4</i>	Signal transmission error (between indoor and outdoor units)		221
<i>UR</i>	Unspecified voltage (between indoor and outdoor units)		222

★ ATXS20~25DAVMB have the AC motor.



## 5.2 Outdoor Units

☉: ON, ●: OFF, ⦿: Blinks

Green : Flashes when in normal condition

Red : OFF in normal condition

- : Not used for troubleshooting

\* : Varies depending on the cases.

Outdoor Unit LED Indication					Indication on the remote control	Description of The Fault	Reference Page
Green	Red						
A	1	2	3	4			
⦿	●	●	●	●	00	Outdoor unit in normal condition (Conduct a diagnosis of the indoor unit.)	—
					UR	Unspecified voltage (between indoor and outdoor units)	251
					UH	Anti-icing function in other rooms	251
⦿	●	●	☉	☉	(UD)	Insufficient gas	247
⦿	☉	●	●	☉	U2	Low-voltage detection or over-voltage detection	249
⦿	●	☉	☉	☉	U7	Signal transmission error (on outdoor unit PCB)	250
⦿	☉	●	☉	☉	R5	Freeze-up protection control	223
⦿	☉	☉	☉	●	E1	Outdoor unit PCB abnormality	225
⦿	☉	●	☉	●	(E5)	OL activation (compressor overload)	226
⦿	●	☉	☉	●	(E6)	Compressor lock	227
⦿	☉	☉	☉	☉	E7	DC fan lock	228
⦿	●	☉	●	☉	E8	Input over current detection	229
⦿	☉	●	☉	●	F3	Discharge pipe temperature control	231
⦿	☉	●	☉	☉	F6	High pressure control in cooling	232
⦿	☉	☉	●	●	H0	Compressor sensor system abnormality	234
					H8	CT or related abnormality	237
⦿	☉	☉	●	●	H5	Position sensor abnormality	236
					H9	Outdoor air thermistor or related abnormality	239
					J3	Discharge pipe thermistor or related abnormality	239
					J6	Heat exchanger thermistor or related abnormality	239
					J8	Liquid pipe thermistor or related abnormality	239
					J9	Gas pipe thermistor or related abnormality	239
⦿	☉	☉	●	☉	P4	Radiation fin thermistor or related abnormality	239
					L3	Electrical box temperature rise	241
⦿	●	●	●	☉	L4	Radiation fin temperature rise (Protection of driver overheating)	243
⦿	●	●	☉	●	L5	Output over current detection	245



**Note:**

- The indications in the parenthesis ( ) in the remote control display column are displayed only when system-down occurs.
- When a sensor error occurs, check the remote control display to determine which sensor is malfunctioning.  
If the remote control does not indicate the error type, conduct the following operation.  
\*Turn the power switch off and back on again. If the same LED indication appears again immediately after the power is turned on, the fault is in the thermistor.  
\*If the above condition does not result, the fault is in the CT.
- The indoor unit error indication may take the precedence in the remote control display.

## 5.3 Indoor Unit PCB Abnormality

remote control  
Display

*A1*

Method of  
Malfunction  
Detection

Evaluation of zero-cross detection of power supply by indoor unit.


Malfunction  
Decision  
Conditions

When there is no zero-cross detection in approximately 10 continuous seconds.

Supposed  
Causes

- Faulty indoor unit PCB
- Faulty connector connection

Troubleshooting

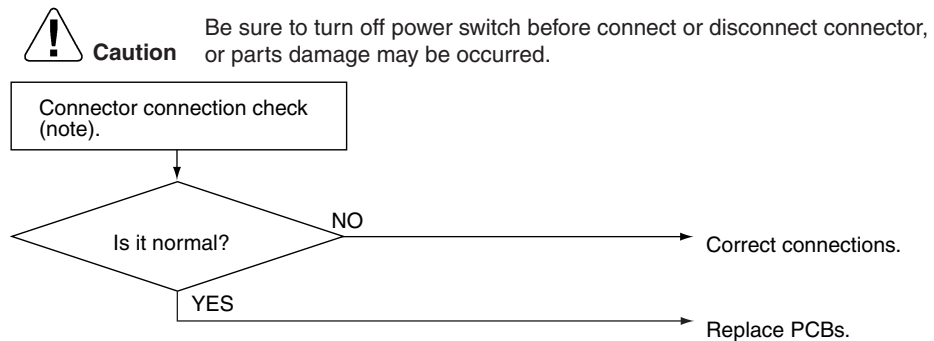

(R1400)



**Note:** Connector Nos. vary depending on models.  
Control connector

Model Type	Connector No.
Wall Mounted Type 20 / 25 / 35 class	Terminal strip~Control PCB
Wall Mounted Type 50 / 60 / 71 class	Terminal strip~Control PCB
Duct Connected Type	Terminal strip~Control PCB
Floor / Ceiling Suspended Dual Type	S37
Floor Standing Type	Control PCB : S7, S201, S203 Power Supply PCB : S8, S202, S204

## 5.4 Freeze-up Protection Control or High Pressure Control

remote control  
Display

*A5*

**Method of  
Malfunction  
Detection**

- High pressure control (heat pump model only)  
During heating operations, the temperature detected by the indoor heat exchanger thermistor is used for the high pressure control (stop, outdoor fan stop, etc.)
- The freeze-up protection control (operation halt) is activated during cooling operation according to the temperature detected by the indoor unit heat exchanger thermistor.

**Malfunction  
Decision  
Conditions**

- High pressure control  
During heating operations, the temperature detected by the indoor heat exchanger thermistor is above 65°C
- Freeze-up protection  
When the indoor unit heat exchanger temperature is below 0°C during cooling operation.

**Supposed  
Causes**

- Operation halt due to clogged air filter of the indoor unit.
- Operation halt due to dust accumulation on the indoor unit heat exchanger.
- Operation halt due to short-circuit.
- Detection error due to faulty indoor unit heat exchanger thermistor.
- Detection error due to faulty indoor unit PCB.


## Troubleshooting



**Check No.06**  
Refer to P.255

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

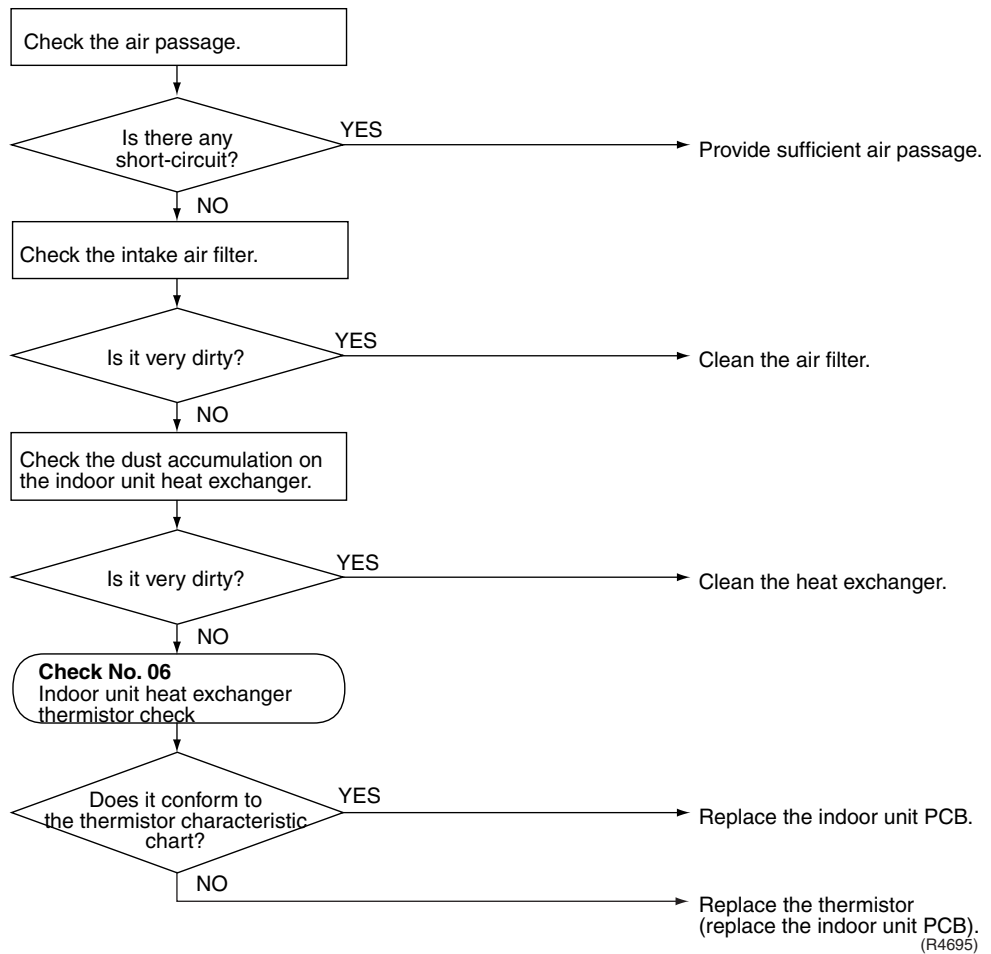**Note:**

If the outside temperature is below  $-10^{\circ}\text{C}$  in the cooling mode, the system may get interrupted with error *R5* displayed. The system will be reset itself, but this stop will be put in the error history memory.

## 5.5 Fan Motor or Related Abnormality

### 5.5.1 AC Motor

remote control  
Display

RG

Method of  
Malfunction  
Detection

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

Malfunction  
Decision  
Conditions

When the detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

Supposed  
Causes

- Operation halt due to short circuit inside the fan motor winding.
- Operation halt due to breaking of wire inside the fan motor.
- Operation halt due to breaking of the fan motor lead wires.
- Operation halt due to faulty capacitor of the fan motor.
- Detection error due to faulty control PCB.

#### Troubleshooting




Check No.16  
Refer to P.261



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

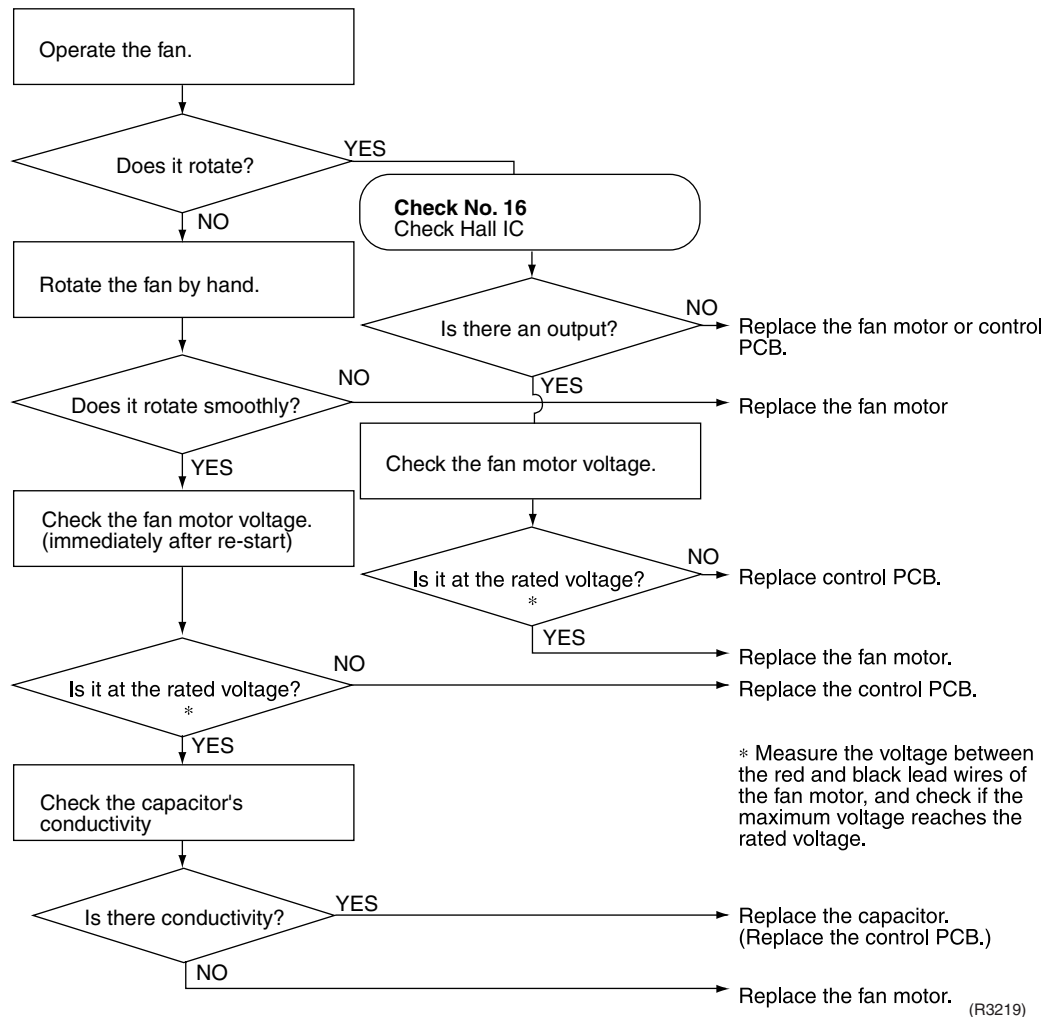

## 5.5.2 DC Motor

remote control  
Display

*RE*

**Method of  
Malfunction  
Detection**

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

**Malfunction  
Decision  
Conditions**

When the detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

**Supposed  
Causes**

- Operation halt due to short circuit inside the fan motor winding.
- Operation halt due to breaking of wire inside the fan motor.
- Operation halt due to breaking of the fan motor lead wires.
- Operation halt due to faulty capacitor of the fan motor.
- Detection error due to faulty indoor unit PCB (1).

Troubleshooting




**Check No.01**  
Refer to P.252



**Check No.02**  
Refer to P.252



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

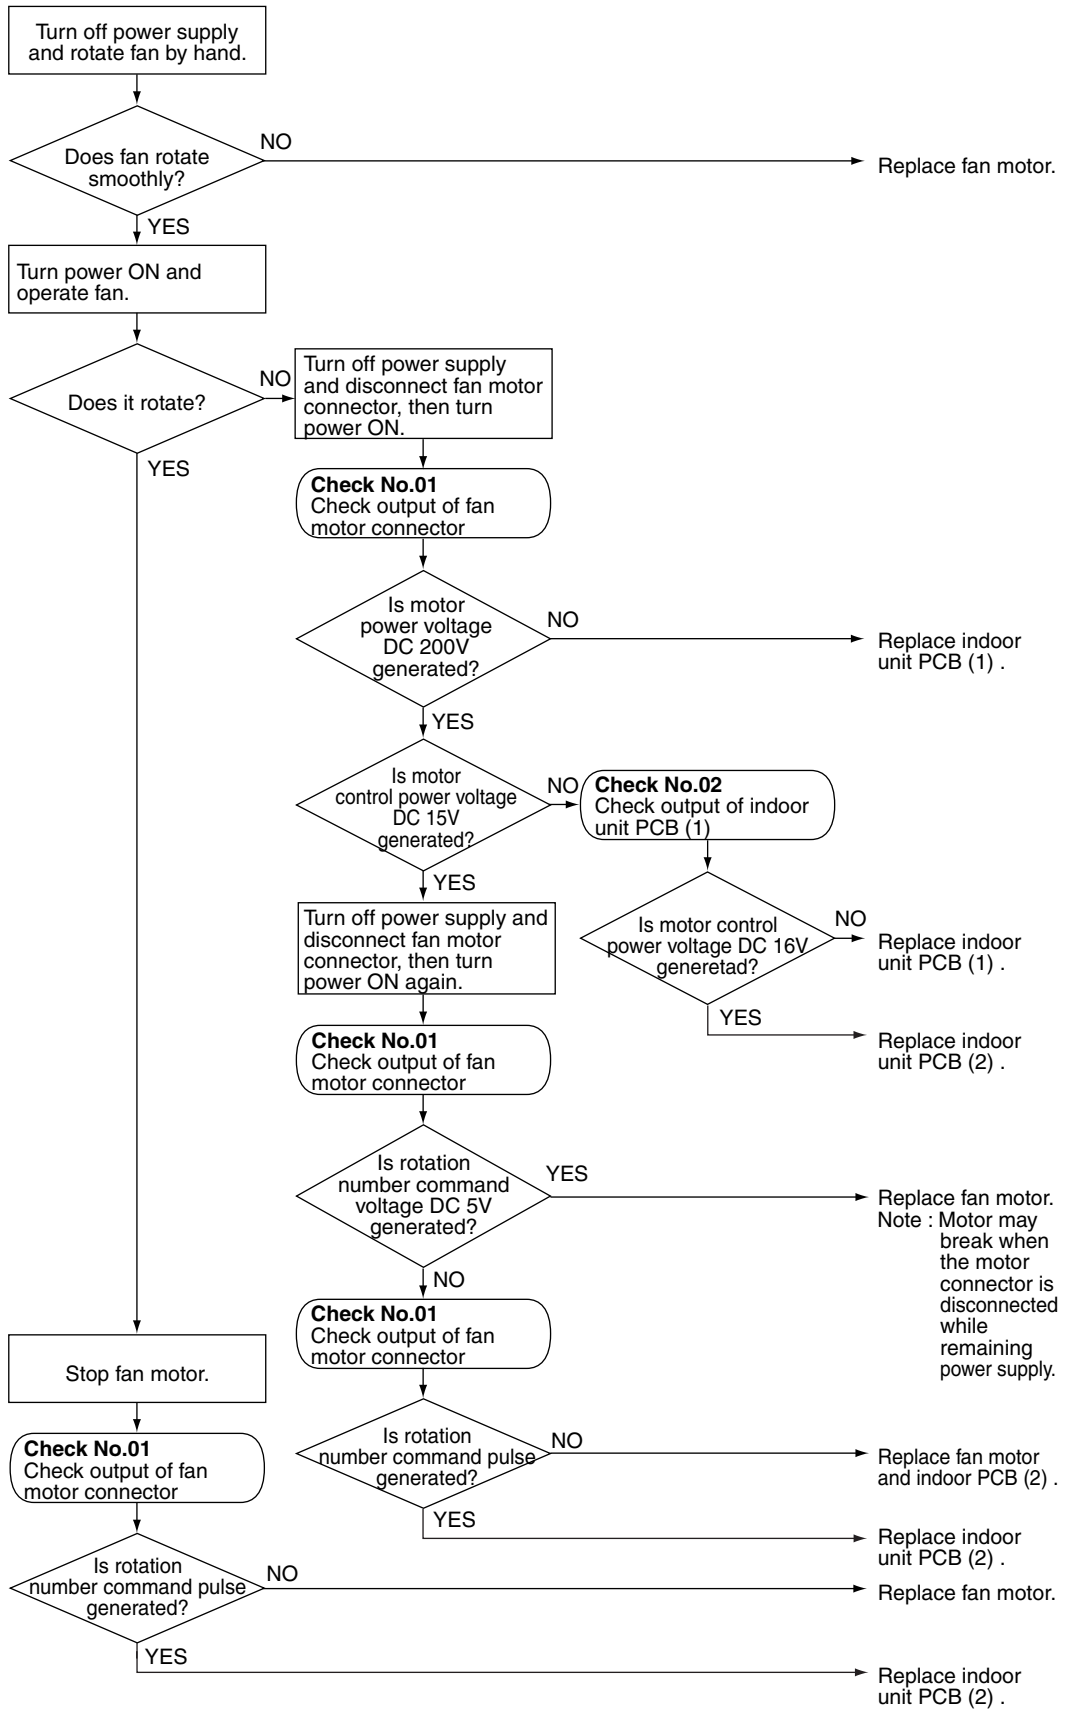

(R1214)

## 5.6 Thermistor or Related Abnormality (Indoor Unit)

remote control  
Display  $\overline{E4}, \overline{E9}$

### Method of Malfunction Detection

The temperatures detected by the thermistors are used to determine thermistor errors.

### Malfunction Decision Conditions

When the thermistor input is more than 4.96 V or less than 0.04 V during compressor operation\*.

\* (reference)

When above about 212°C (less than 120 ohms) or below about -50°C (more than 1,860 kohms).



**Note:** The values vary slightly in some models.

### Supposed Causes

- Faulty connector connection
- Faulty thermistor
- Faulty PCB

### Troubleshooting




**Check No.06**  
Refer to P.255



#### Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

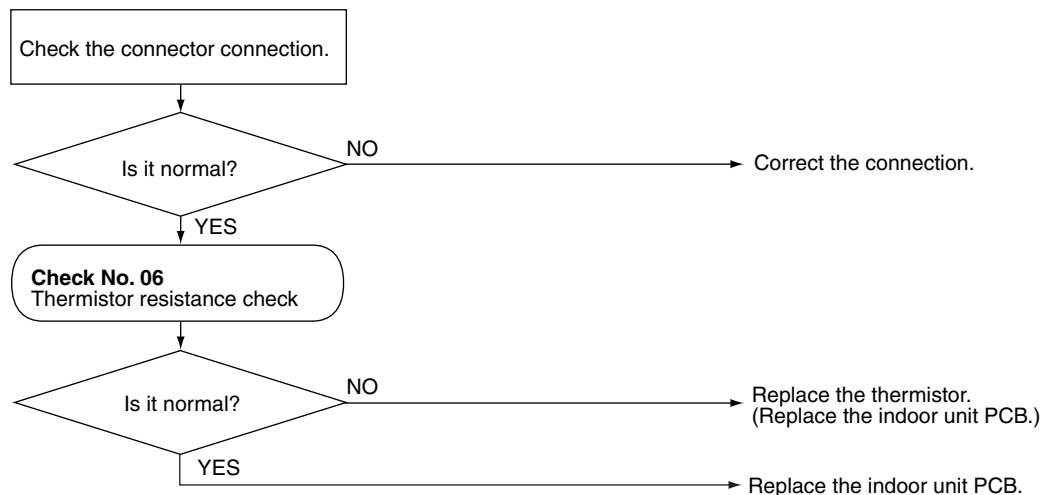

(R4696)

$\overline{E4}$  : Heat exchanger temperature thermistor

$\overline{E9}$  : Room temperature thermistor



## 5.7 Shutter Drive Motor / Shutter Limit Switch Abnormality

remote control  
Display



Method of  
Malfunction  
Detection

The shutter open / close performance is detected by the limit switch attached on its structure. In this way, the shutter drive motor and the shutter limit switch are checked for failure.

Malfunction  
Decision  
Conditions

When the shutter is open, the limit switch is closed.


Supposed  
Causes

- Shutter drive motor defective
- Shutter limit switch defective
- Shutter itself deformed (warped)
- Shutter's sealing material too thick
- Detection error by broken relay harness or disconnected connector
- Detection error due to defective PCB (2)
- Foreign substance in blow port

### Troubleshooting



Check No.03  
Refer to P.252

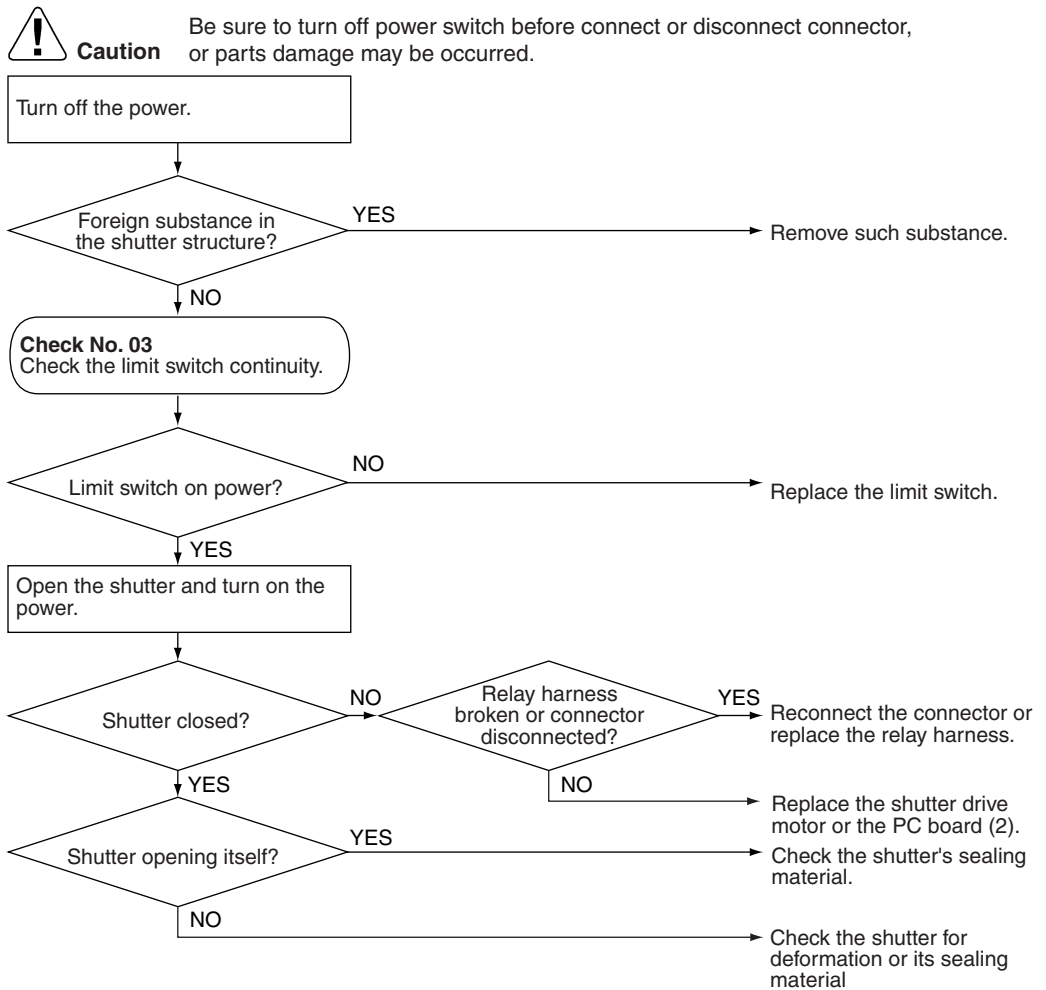

# 5.8 Signal Transmission Error (between Indoor and Outdoor Units)

remote control Display

U4

Method of Malfunction Detection

The data received from the outdoor unit in indoor unit-outdoor unit signal transmission is checked whether it is normal.

Malfunction Decision Conditions

When the data sent from the outdoor unit cannot be received normally, or when the content of the data is abnormal.


Supposed Causes

- Faulty outdoor unit PCB.
- Faulty indoor unit PCB.
- Indoor unit-outdoor unit signal transmission error due to wiring error.
- Indoor unit-outdoor unit signal transmission error due to disturbed power supply waveform.
- Indoor unit-outdoor unit signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units (wire No. 2).

Troubleshooting



Check No.10  
Refer to P.258

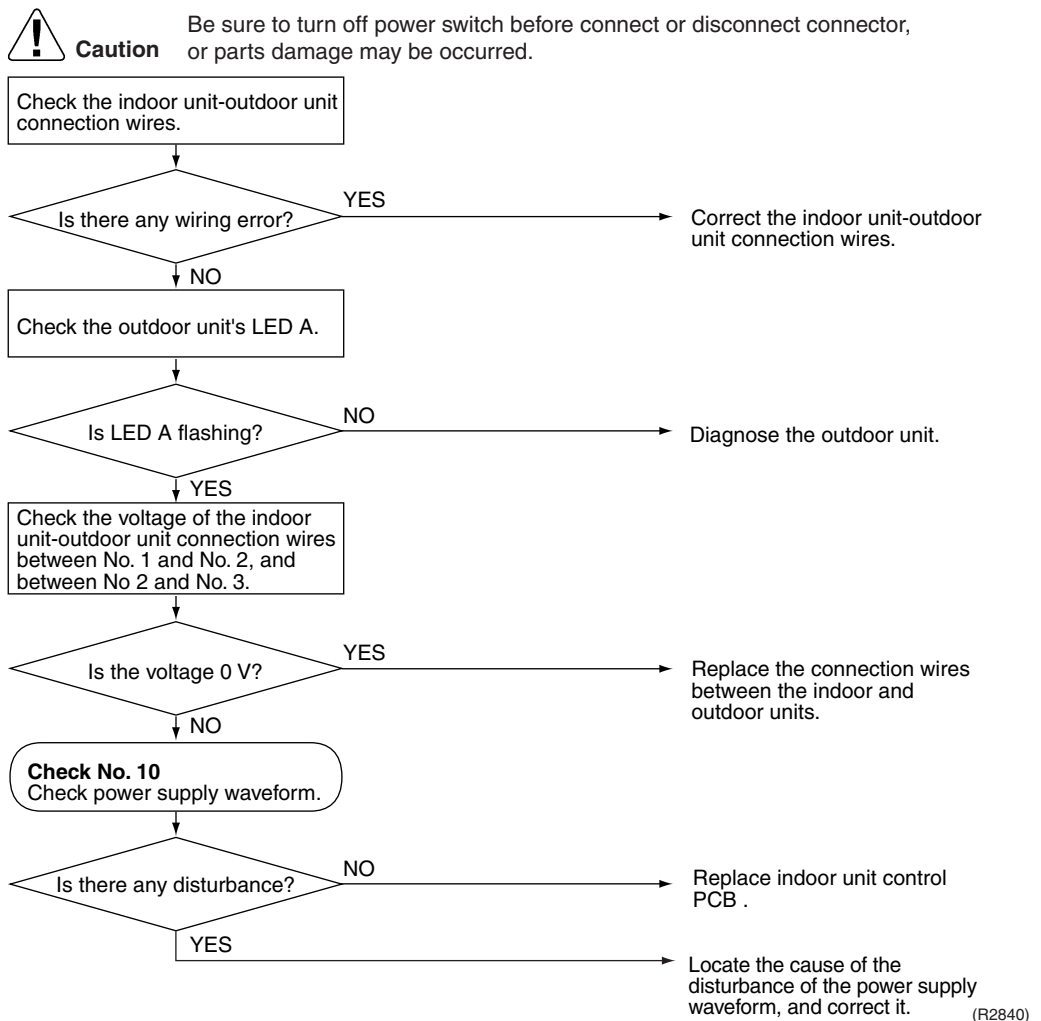

## 5.9 Unspecified Voltage (between Indoor and Outdoor Units)

remote control  
Display

*UR*

**Method of Malfunction Detection**

The supply power is detected for its requirements (different from pair type and multi type) by the indoor / outdoor transmission signal.


**Malfunction Decision Conditions**

The pair type and multi type are interconnected.

**Supposed Causes**

- Wrong models interconnected
- Wrong indoor unit PCB mounted
- Indoor unit PCB defective
- Wrong outdoor unit PCB mounted or defective

### Troubleshooting

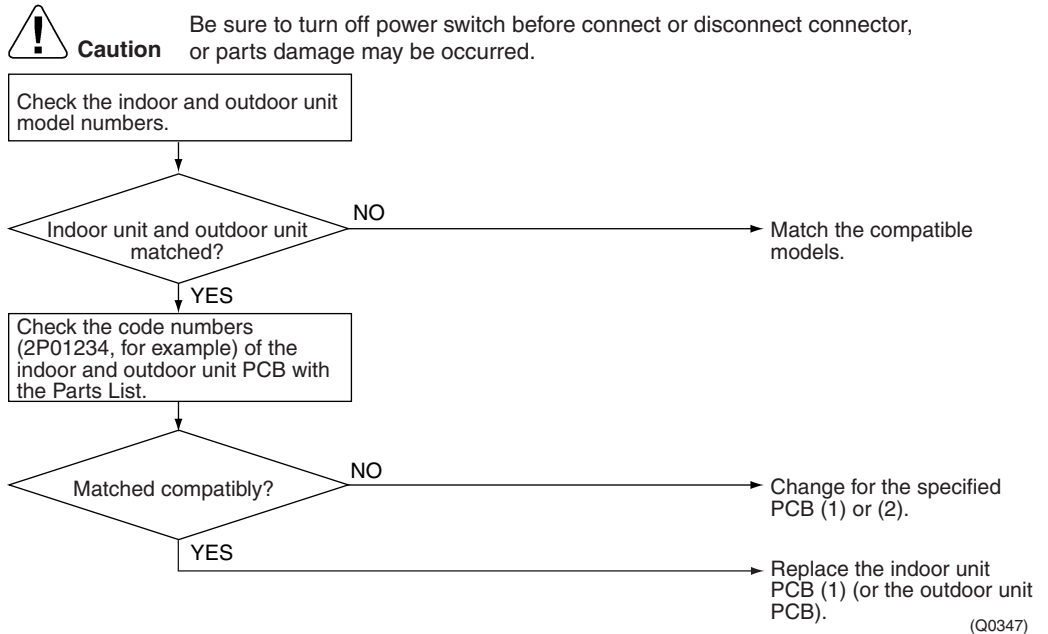


## 5.10 Freeze-up Protection Control

remote control  
Display

*RS*

Outdoor Unit LED  
Display

A  1  2  3  4 

**Method of  
Malfunction  
Detection**

Indoor unit icing, during cooling operation, is detected by checking the temperatures sensed by the indoor unit heat exchanger thermistor and room temperature thermistor that are located in a shut-down room.

**Malfunction  
Decision  
Conditions**

In the cooling mode, the following conditions (A) and (B) are kept together for 5 minutes.

(A) Indoor unit heat exchanger temperature  $\leq -1^{\circ}\text{C}$

(B) Indoor unit heat exchanger temperature  $\leq$  Room temperature  $-10^{\circ}\text{C}$

If the freeze-up protection control is activated 4 times continuously, the system will be shut down.

(The 4-time counter will reset itself if any of the following errors does not occur for 60 minutes: OL, radiation fin temperature rise, gas shortage, and compressor startup.)

**Supposed  
Causes**

- Wrong wiring or piping
- EV malfunctioning in each room
- Short-circuit
- Indoor unit heat exchanger thermistor defective
- Room temperature thermistor defective

Troubleshooting



**Check No.04**  
Refer to P.253




**Check No.06**  
Refer to P.255



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

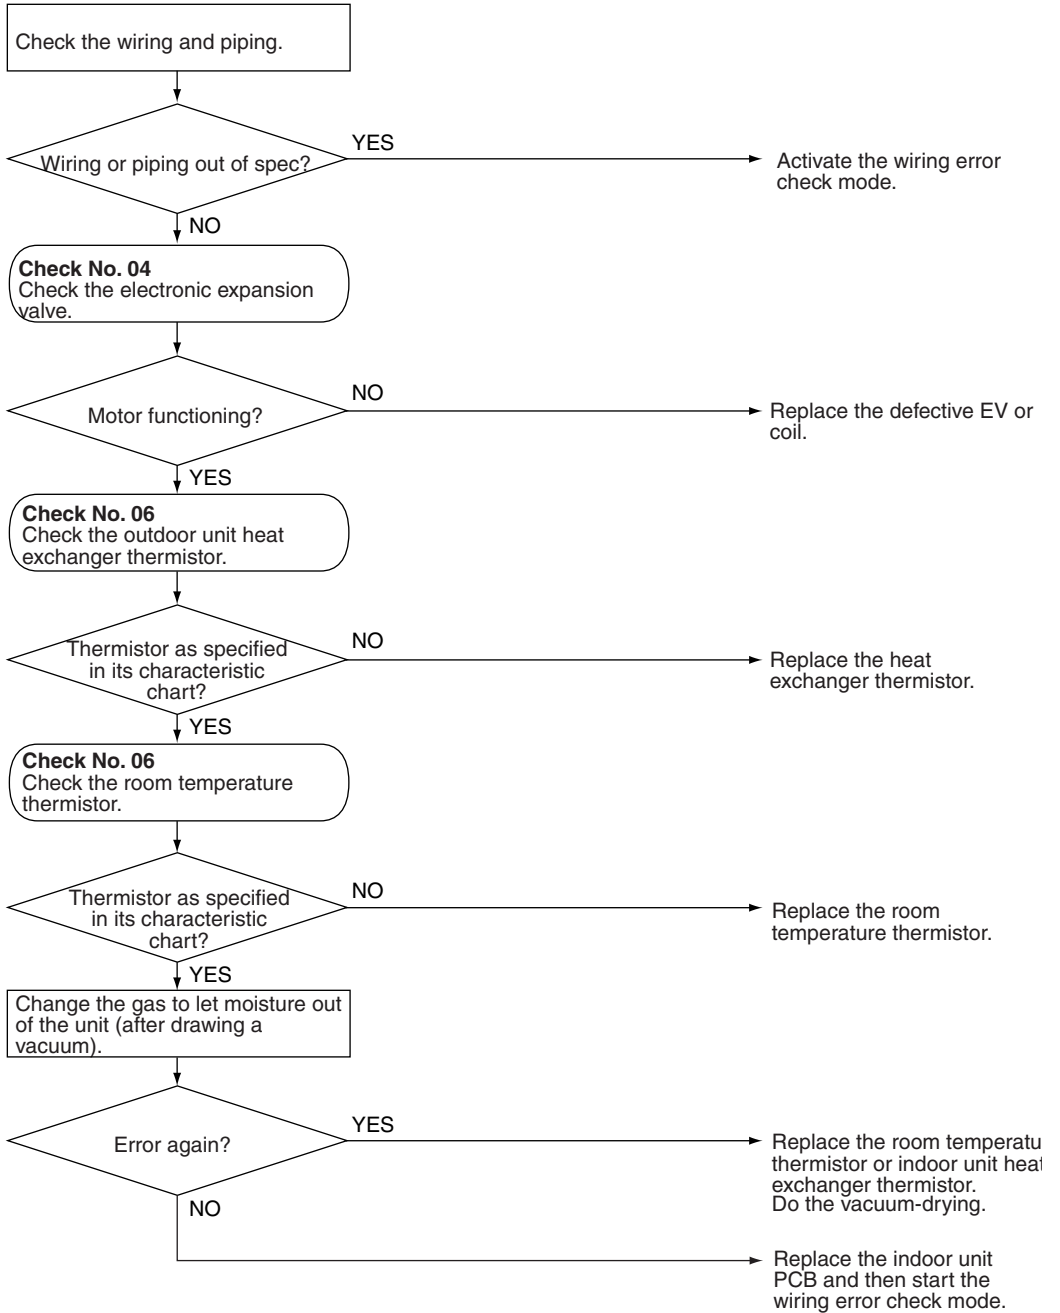






(R4715)

## 5.11 Outdoor Unit PCB Abnormality

remote control  
Display

E1

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

- Detect within the programme of the microcomputer that the programme is in normal running order.

Malfunction  
Decision  
Conditions

- When the programme of the microcomputer is in abnormal running order.

Supposed  
Causes


- Out of control of microcomputer caused by external factors
  - Noise
  - Momentary fall of voltage
  - Momentary power loss
- Defective outdoor unit PCB

### Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

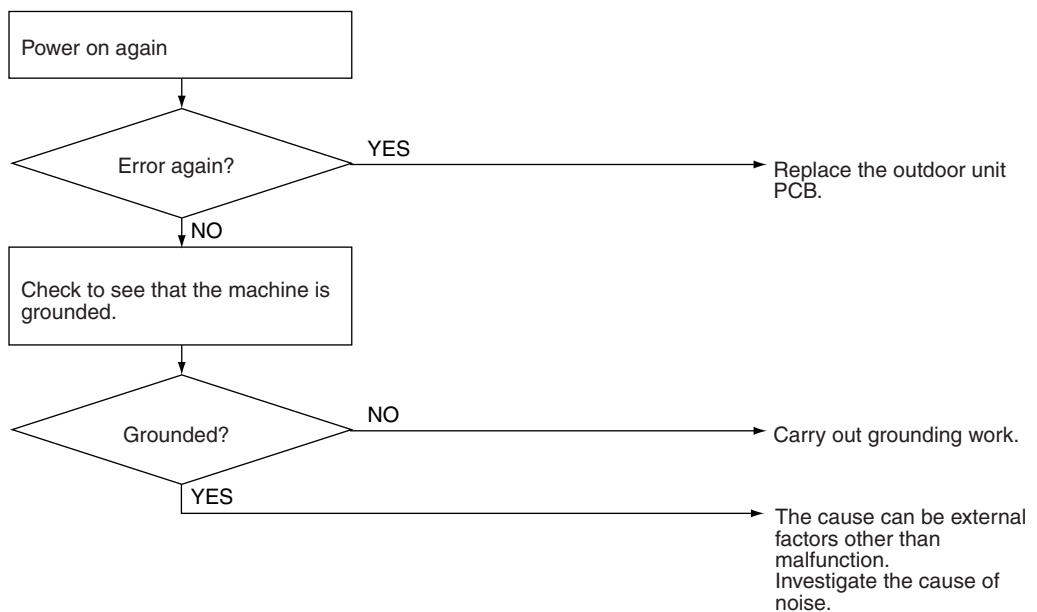






(R5142)

## 5.12 OL Activation (Compressor Overload)

remote control  
Display

ES

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

A compressor overload is detected through compressor OL.

Malfunction  
Decision  
Conditions

- If the compressor OL is activated twice, the system will be shut down.
  - The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).
- \* The operating temperature condition is not specified.

Supposed  
Causes

- Refrigerant shortage
- Four way valve malfunctioning
- Outdoor unit PCB defective
- Water mixed in the local piping
- Electronic expansion valve defective
- Stop valve defective

### Troubleshooting

  
Check No.04  
Refer to P.253

  
Check No.05  
Refer to P.254


  
Check No.06  
Refer to P.255

  
Check No.11  
Refer to P.258



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

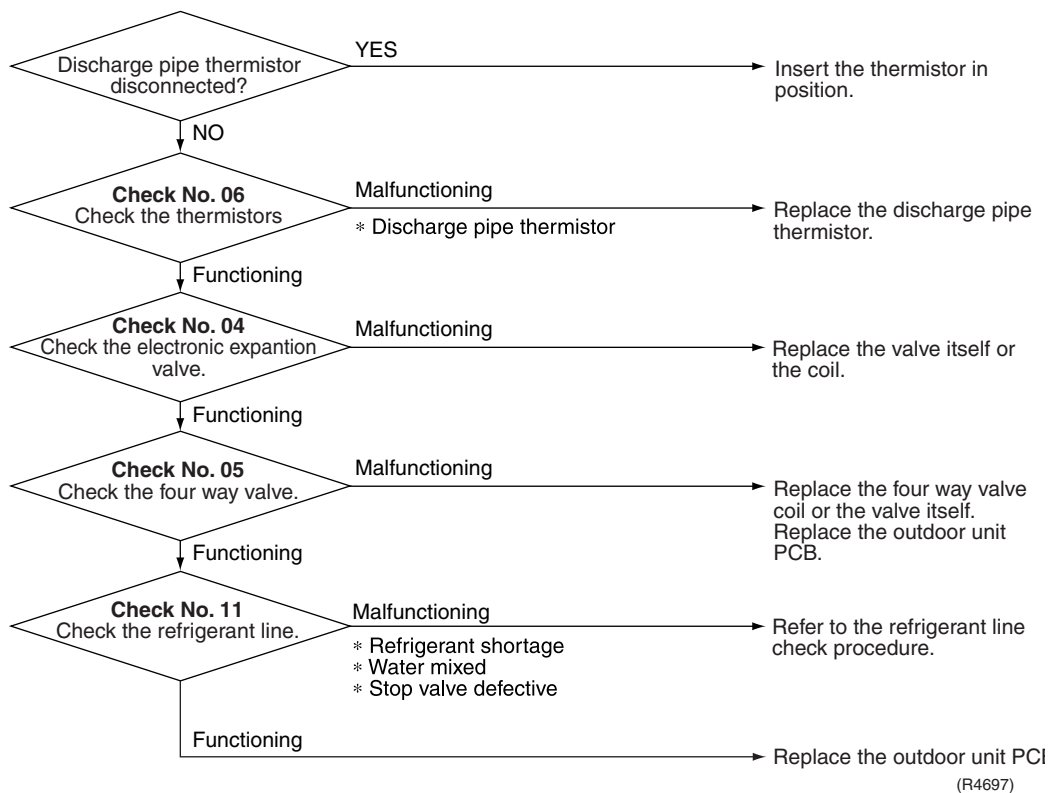





## 5.13 Compressor Lock

remote control  
Display

EE

Outdoor Unit LED  
Display

A  1  2  3  4

Method of  
Malfunction  
Detection

A compressor lock is detected by checking the compressor running condition through the position detection circuit.


Malfunction  
Decision  
Conditions

- Judging from current waveform generated when high-frequency voltage is applied to the compressor.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 5 minutes (normal)

Supposed  
Causes

- Compressor locked

Troubleshooting

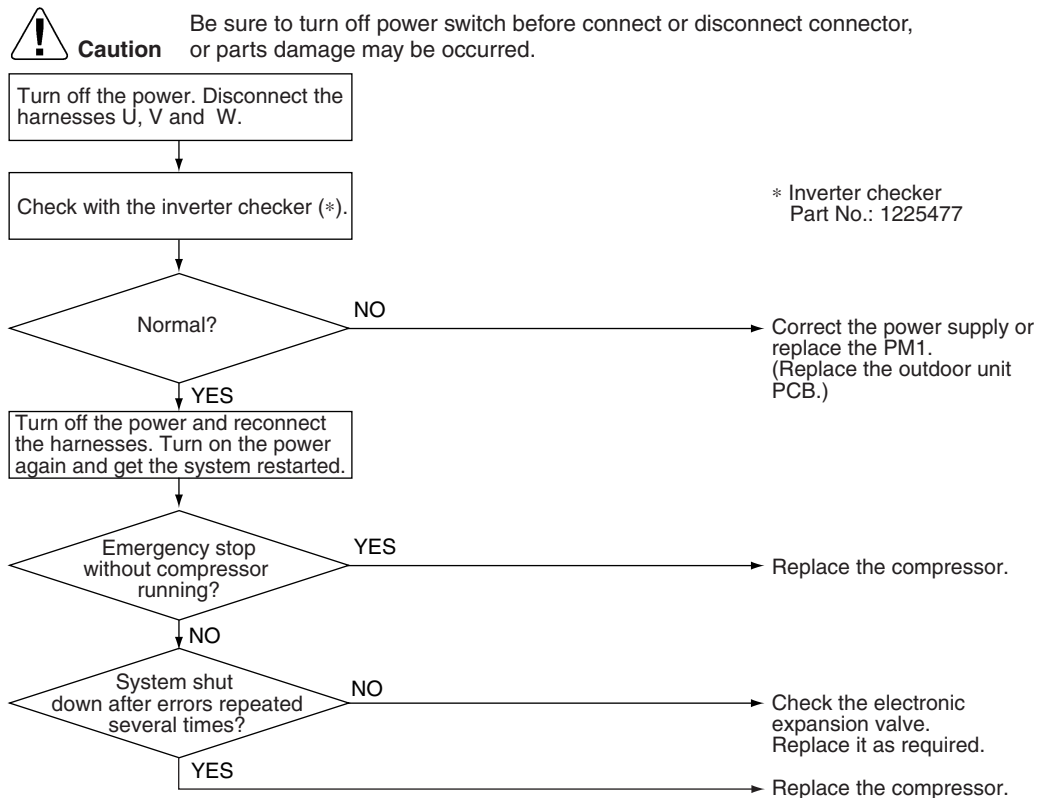

(R5143)




## 5.14 DC Fan Lock

remote control  
Display

E7

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

A fan motor line error is detected by checking the high-voltage fan motor rpm being detected by the Hall IC.

Malfunction  
Decision  
Conditions

- The fan does not start in 30 seconds even when the fan motor is running.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 5 minutes (normal)


Supposed  
Causes

- Fan motor breakdown
- Harness or connector disconnected between fan motor and PCB or in poor contact
- Foreign matters stuck in the fan

### Troubleshooting



Check No.15  
Refer to P.260

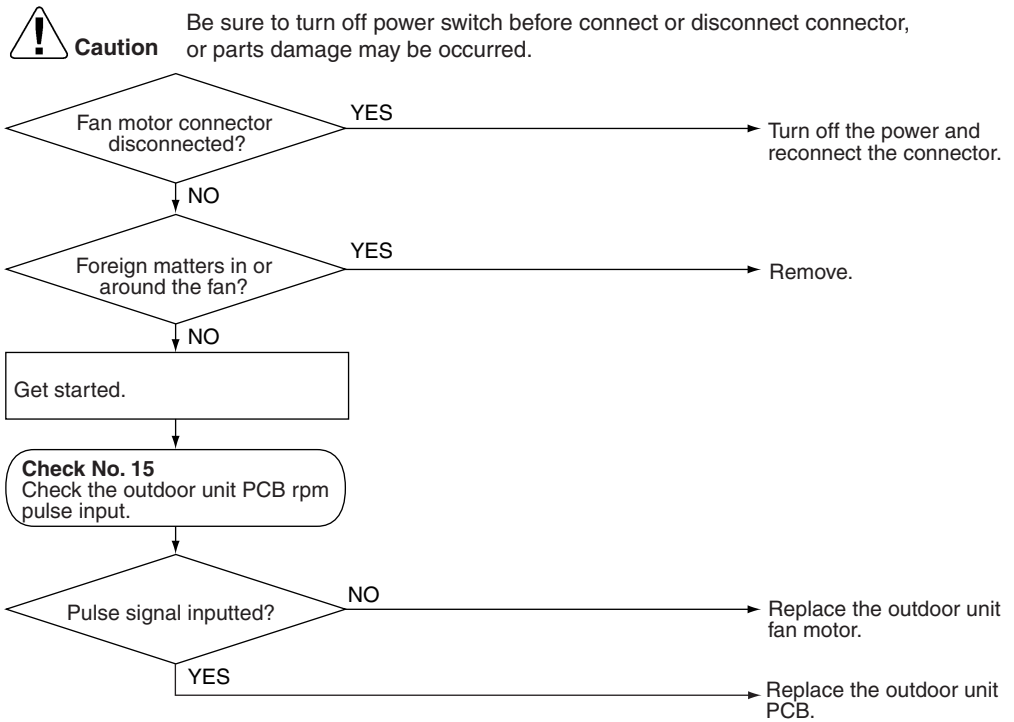

## 5.15 Input Over Current Detection

remote control  
Display

*EE*

Outdoor Unit LED  
Display

A  1  2  3  4

Method of  
Malfunction  
Detection

Malfunction is detected by checking the input current value.

Malfunction  
Decision  
Conditions

- The following condition continues for 2.5 seconds.  
Input current  $\geq 20\text{A}$  (typical value)
- The compressor halts if the error occurs, and restarts automatically after 3 minutes stand-by.

Supposed  
Causes

- Over-current due to compressor failure
- Over-current due to defective power transistor
- Over-current due to defective inverter main circuit electrolytic capacitor
- Over-current due to defective outdoor unit PCB
- Error detection due to outdoor unit PCB
- Over-current due to short-circuit

Troubleshooting



**Check No.07**  
Refer to P.256



**Check No.08**  
Refer to P.257




**Check No.14**  
Refer to P.260



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

\* An input over-current may result from wrong internal wiring. If the wires have been disconnected and reconnected for part replacement, for example, and the system is interrupted by an input over-current, take the following procedure.

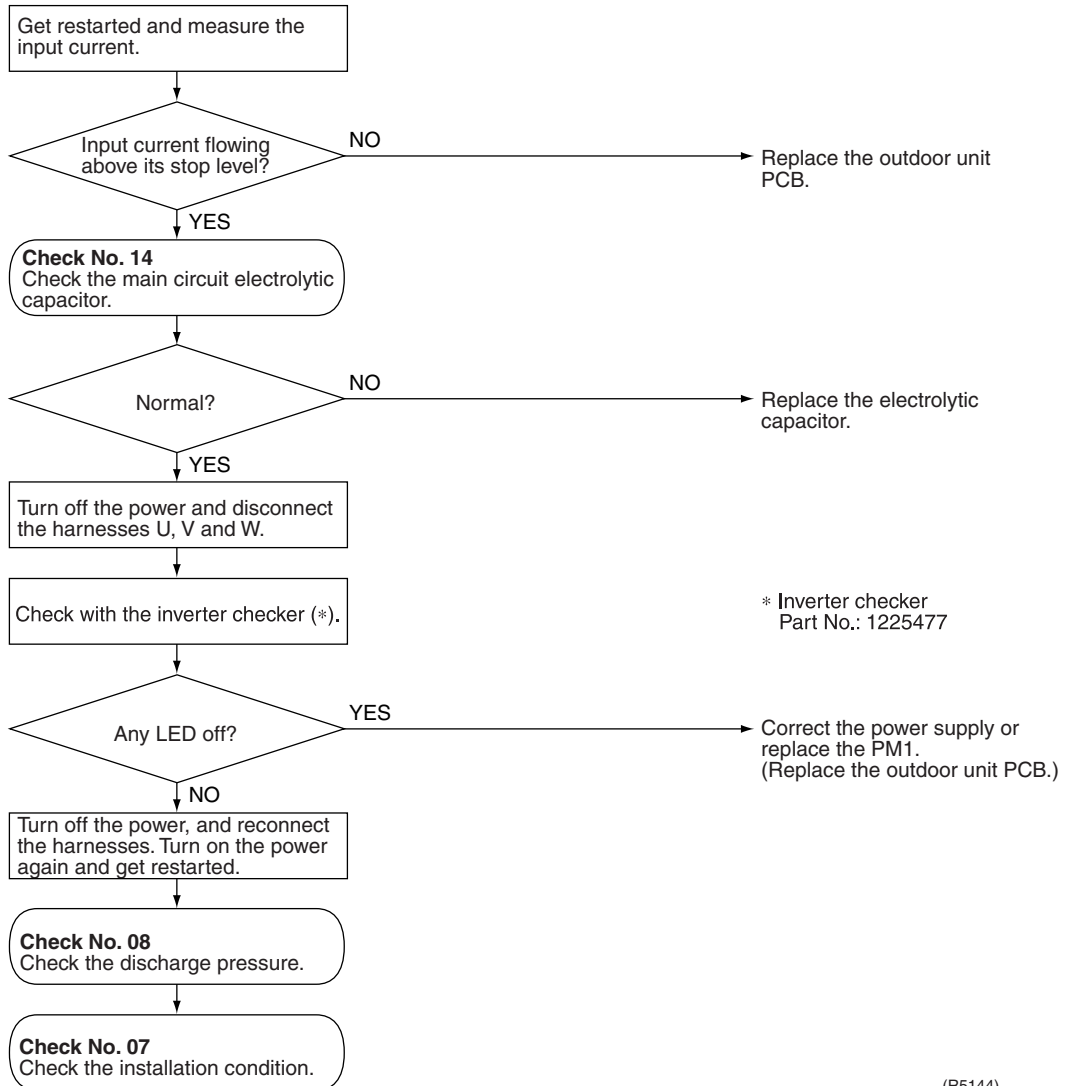




(R5144)

## 5.16 Discharge Pipe Temperature Control

remote control  
Display

F3

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

The discharge pipe temperature control (stop, frequency drooping, etc.) is checked with the temperature being detected by the discharge pipe thermistor.

Malfunction  
Decision  
Conditions

**2YC36**

If the temperature being detected by the discharge pipe thermistor rises above 110°C, the compressor will stop. (The error is cleared when the temperature has dropped below 95°C.)

- If the compressor stops 6 times straight due to abnormal discharge pipe temperature, the system will be shut down.
- The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

Supposed  
Causes

- Refrigerant shortage
- Four way valve malfunctioning
- Discharge pipe thermistor defective  
(heat exchanger or outdoor temperature thermistor defective)
- Outdoor unit PCB defective
- Water mixed in the local piping
- Electronic expansion valve defective
- Stop valve defective

### Troubleshooting




**Check No.04**  
Refer to P.253



**Check No.06**  
Refer to P.255



**Check No.11**  
Refer to P.258

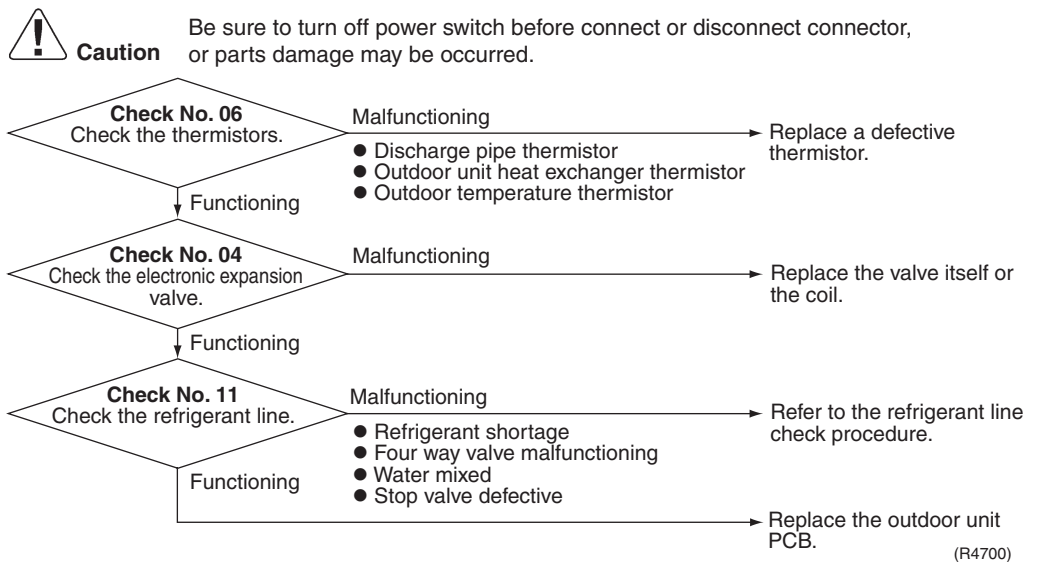






## 5.17 High Pressure Control in Cooling

remote control  
Display

*F6*

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

High-pressure control (stop, frequency drop, etc.) is activated in the cooling mode if the temperature being sensed by the heat exchanger thermistor exceeds the limit.

Malfunction  
Decision  
Conditions

- Activated when the temperature being sensed by the heat exchanger thermistor rises above 65°C.
- The error is cleared when the temperature drops below 50°C.

Supposed  
Causes

- The installation space is not large enough.
- Faulty outdoor unit fan
- Faulty electronic expansion valve
- Faulty outdoor unit heat exchanger thermistor
- Faulty outdoor unit PCB
- Faulty stop valve
- Dirty heat exchanger

## Troubleshooting



**Check No.04**  
Refer to P.253



**Check No.06**  
Refer to P.255




**Check No.07**  
Refer to P.256



**Check No.09**  
Refer to P.257



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

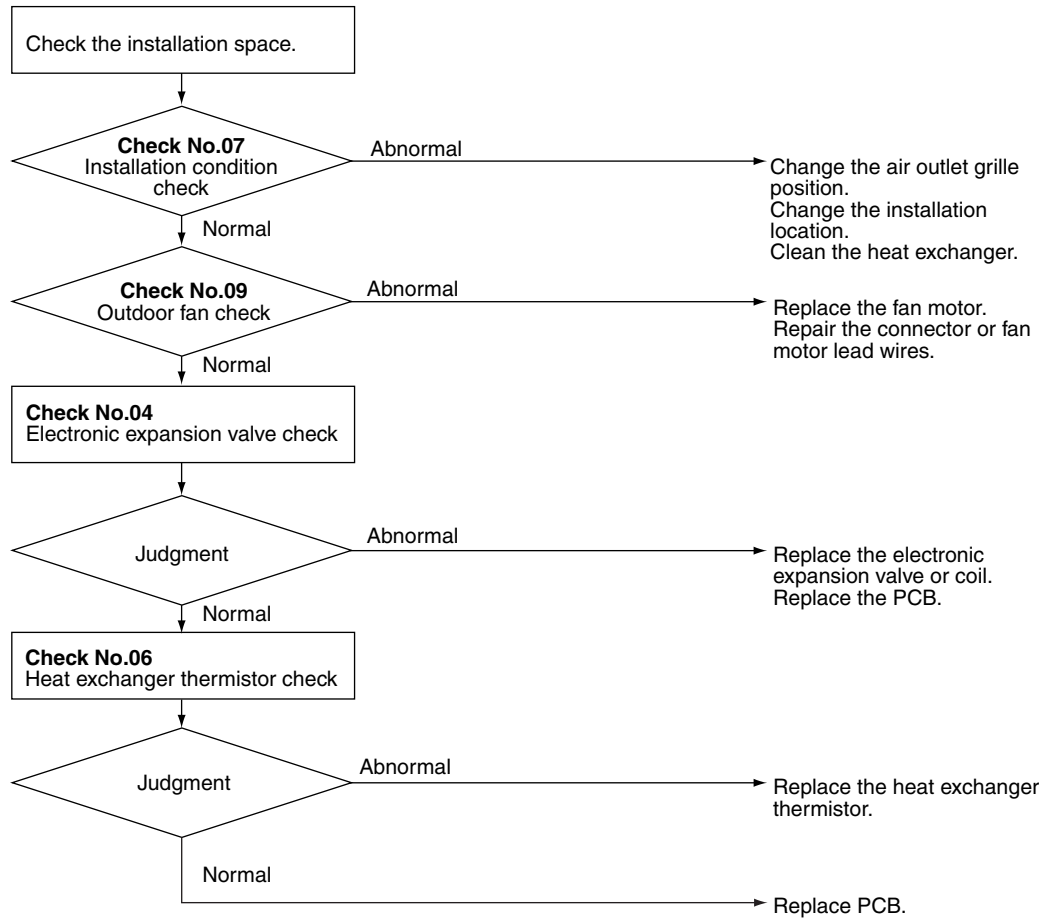






(R4701)

## 5.18 Compressor Sensor System Abnormality

remote control  
Display

*HO*

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

- Fault condition is identified by the supply voltage and the DC voltage which is detected before the compressor startup.
- Fault condition is identified by compressor current which is detected right after the compressor startup.


Malfunction  
Decision  
Conditions

- The detected value of the supply voltage and the DC voltage is obviously low or high.
- The compressor current doesn't run when the compressor is started.

Supposed  
Causes

- Reactor disconnection
- Compressor disconnection
- Outdoor unit PCB defective
- Compressor defective

## Troubleshooting

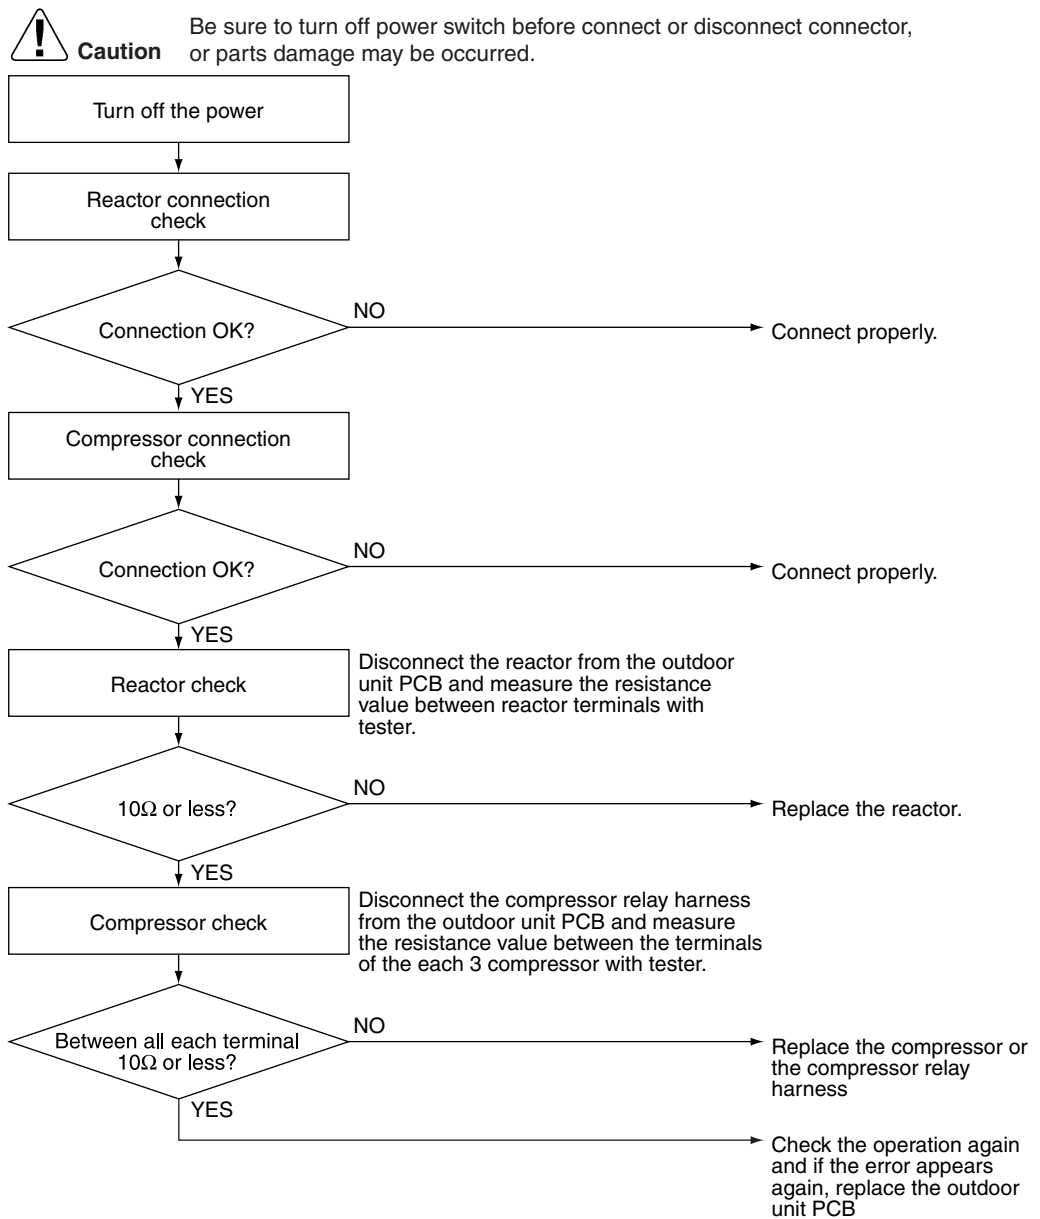

(R5131)








## 5.19 Position Sensor Abnormality

remote control  
Display

HE

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

A compressor startup failure is detected by checking the compressor running condition through the position detection circuit.

Malfunction  
Decision  
Conditions

- The compressor fails to start in about 15 seconds after the compressor run command signal is sent.
- Clearing condition: Continuous run for about 5 minutes (normal)
- The system will be shut down if the error occurs 16 times.

Supposed  
Causes

- Compressor relay cable disconnected
- Compressor itself defective
- Outdoor unit PCB defective
- Stop valve closed
- Input voltage out of specification

### Troubleshooting




Check No.13  
Refer to P.259



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Check No. 13  
Check for short-circuit.

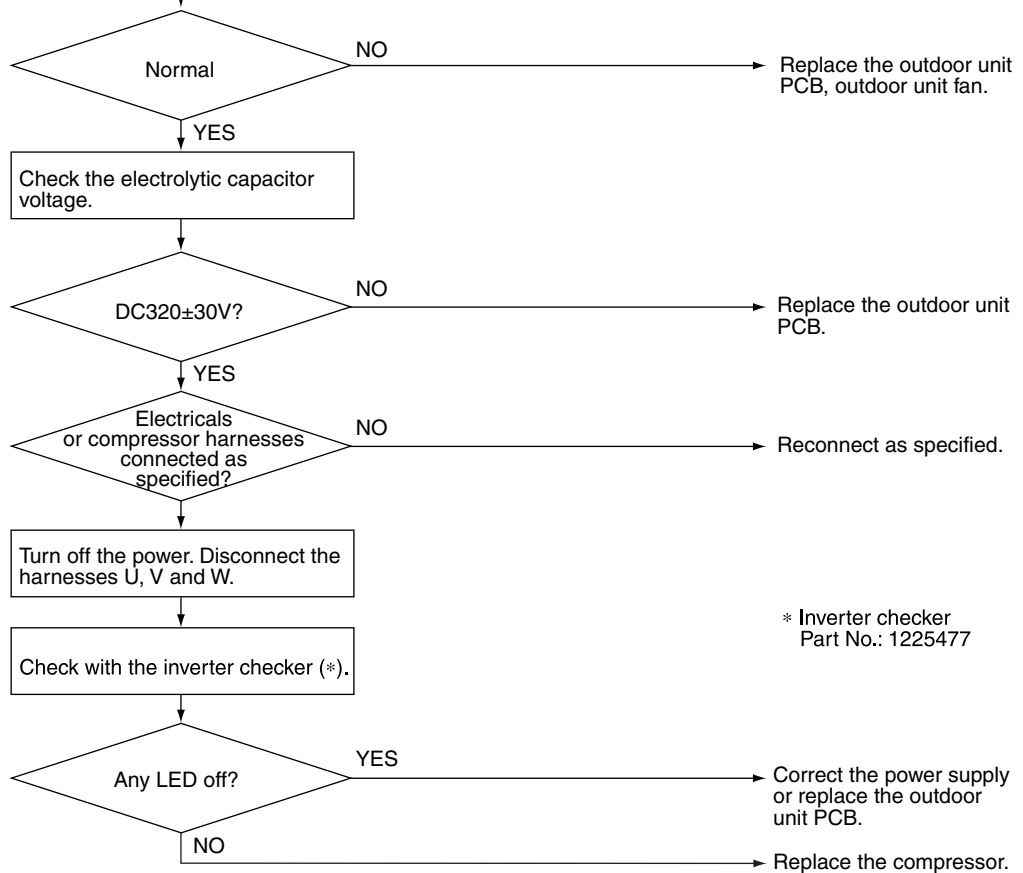




(R5145)

## 5.20 CT or Related Abnormality

remote control  
Display

*H8*

Outdoor Unit LED  
Display

A  1  2  3 ● 4 ●

Method of  
Malfunction  
Detection

A CT or related error is detected by checking the compressor running frequency and CT-detected input current.

Malfunction  
Decision  
Conditions

- The compressor running frequency is below 55 Hz and the CT input is below 0.1 V. (The input current is also below 0.5 A.)
- If this error repeats 4 times, the system will be shut down.
- The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

Supposed  
Causes

- Power transistor defective
- Internal wiring broken or in poor contact
- Reactor defective
- Outdoor unit PCB defective



Troubleshooting



**Check No.12**  
Refer to P.259



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

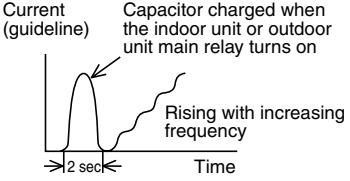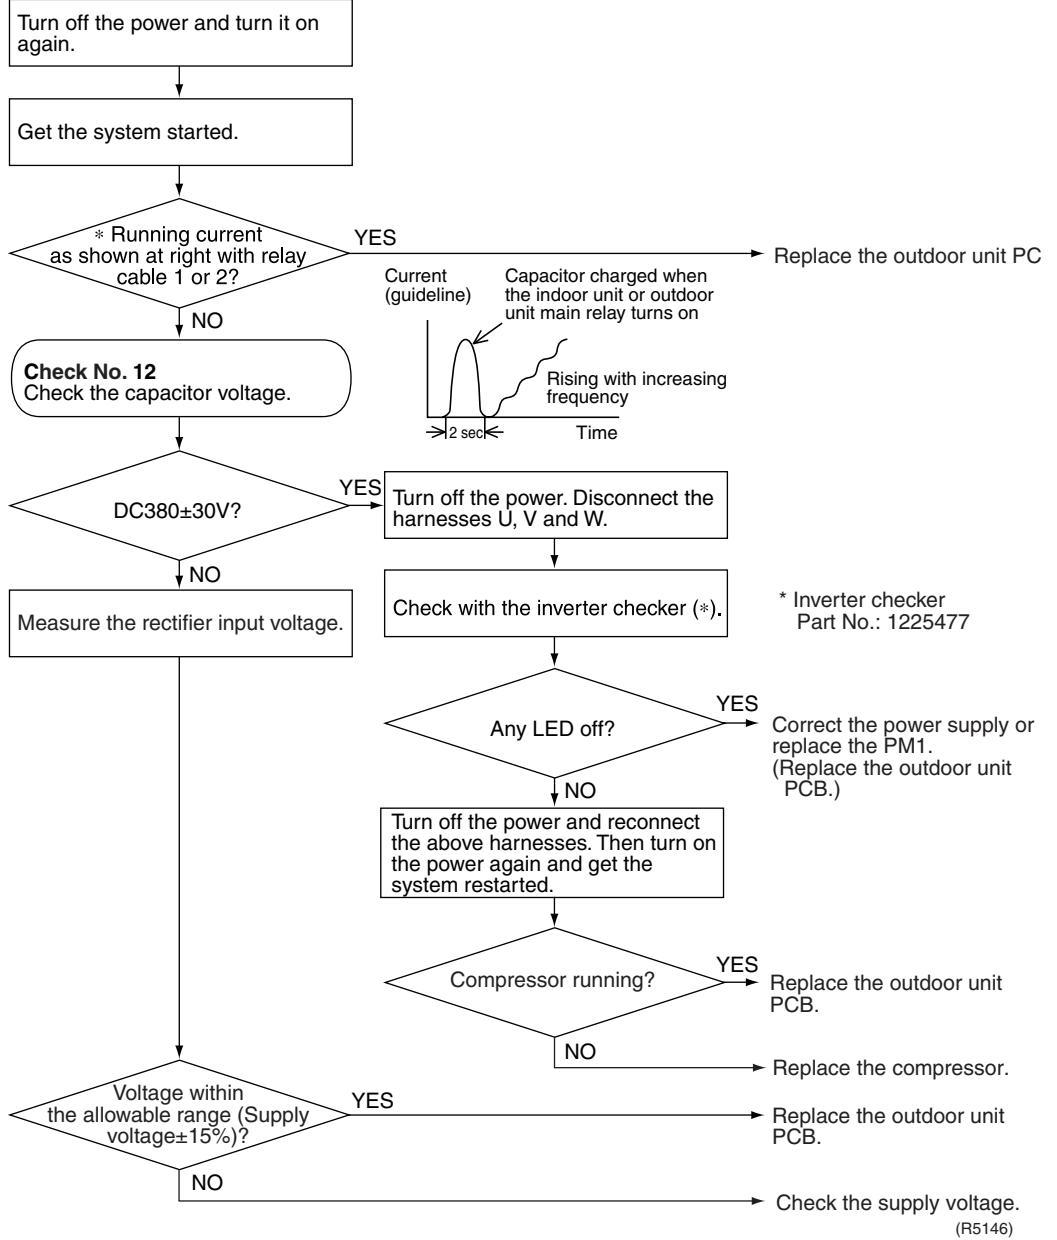






\* Inverter checker  
Part No.: 1225477

## 5.21 Thermistor or Related Abnormality (Outdoor Unit)

remote control  
Display

*P4, J3, J6, J8, J9, H9*

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

This type of error is detected by checking the thermistor input voltage to the microcomputer.  
[A thermistor error is detected by checking the temperature being detected by each thermistor.]

Malfunction  
Decision  
Conditions

When the thermistor input is above 4.96 V or below 0.04 V with the power on, the *J3* error is judged if the discharge pipe thermistor temperature is smaller than the condenser thermistor temperature, or the system will be shut down if all the units are judged with the *J8* error.

Supposed  
Causes

- Connector in poor contact
- Thermistor defective
- Outdoor unit PCB defective
- Indoor unit PCB defective
- Condenser thermistor defective in the case of *J3* error (outdoor unit heat exchanger thermistor in the cooling mode, or indoor unit heat exchanger thermistor in the heating mode)

Troubleshooting




**Check No.06**  
Refer to P.255



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

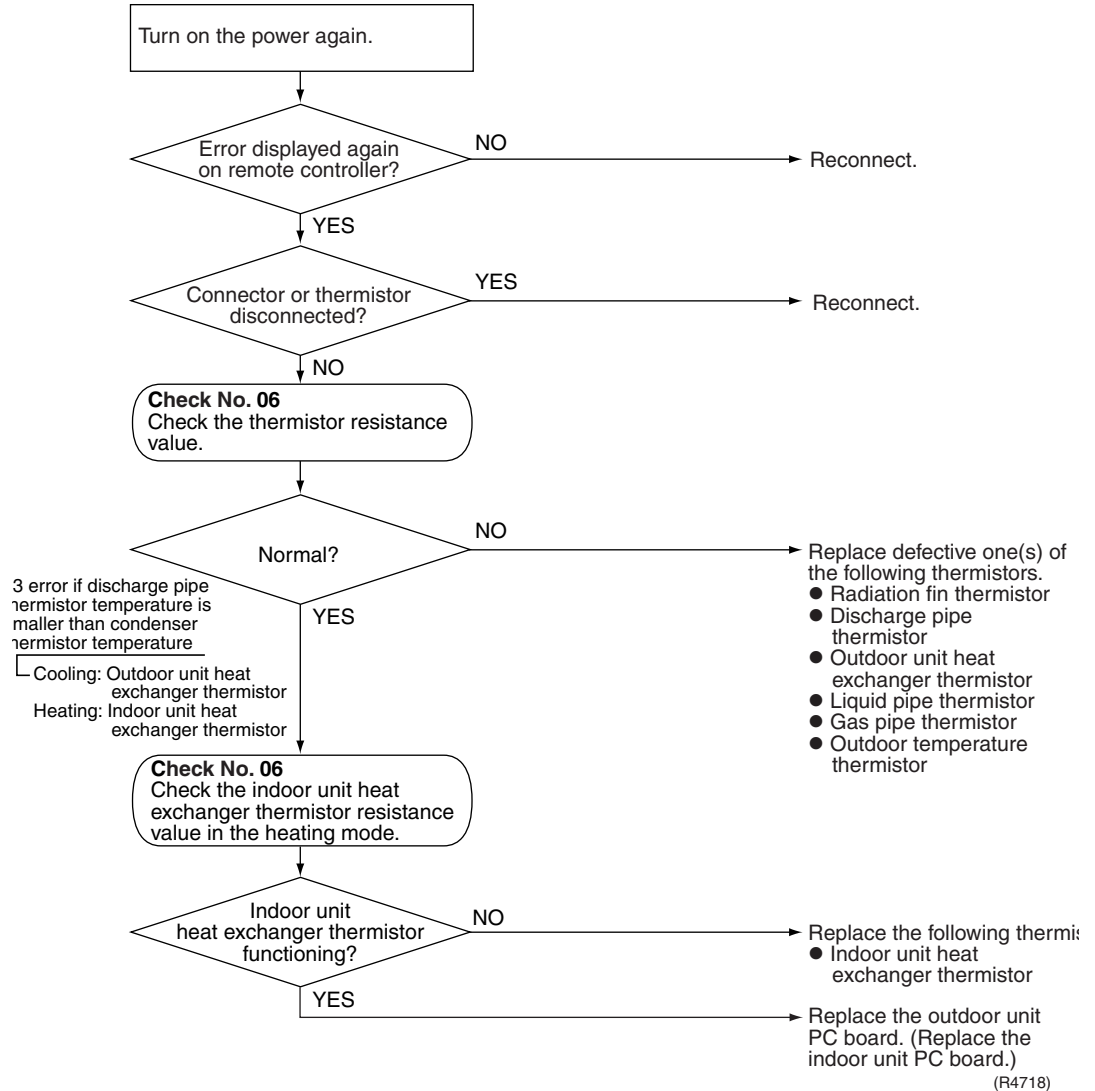

- P4 : Radiation fin thermistor
- J3 : Discharge pipe thermistor
- J5 : Outdoor unit heat exchanger thermistor
- J8 : Liquid pipe thermistor
- J9 : Gas pipe thermistor
- H9 : Outdoor temperature thermistor

## 5.22 Electrical Box Temperature Rise

remote control  
Display

L3

Outdoor Unit LED  
Display

A  1  2  3  4 

Method of  
Malfunction  
Detection

An electrical box temperature rise is detected by checking the radiation fin thermistor with the compressor off.

Malfunction  
Decision  
Conditions

- With the compressor off, the radiation fin temperature is above 100°C.
- The error is cleared when the temperature drops below 85°C.

Supposed  
Causes

- Fin temperature rise due to defective outdoor unit fan
- Fin temperature rise due to short-circuit
- Fin thermistor defective
- Connector in poor contact
- Outdoor unit PCB defective


Troubleshooting



**Check No.07**  
Refer to P.256



**Check No.09**  
Refer to P.257

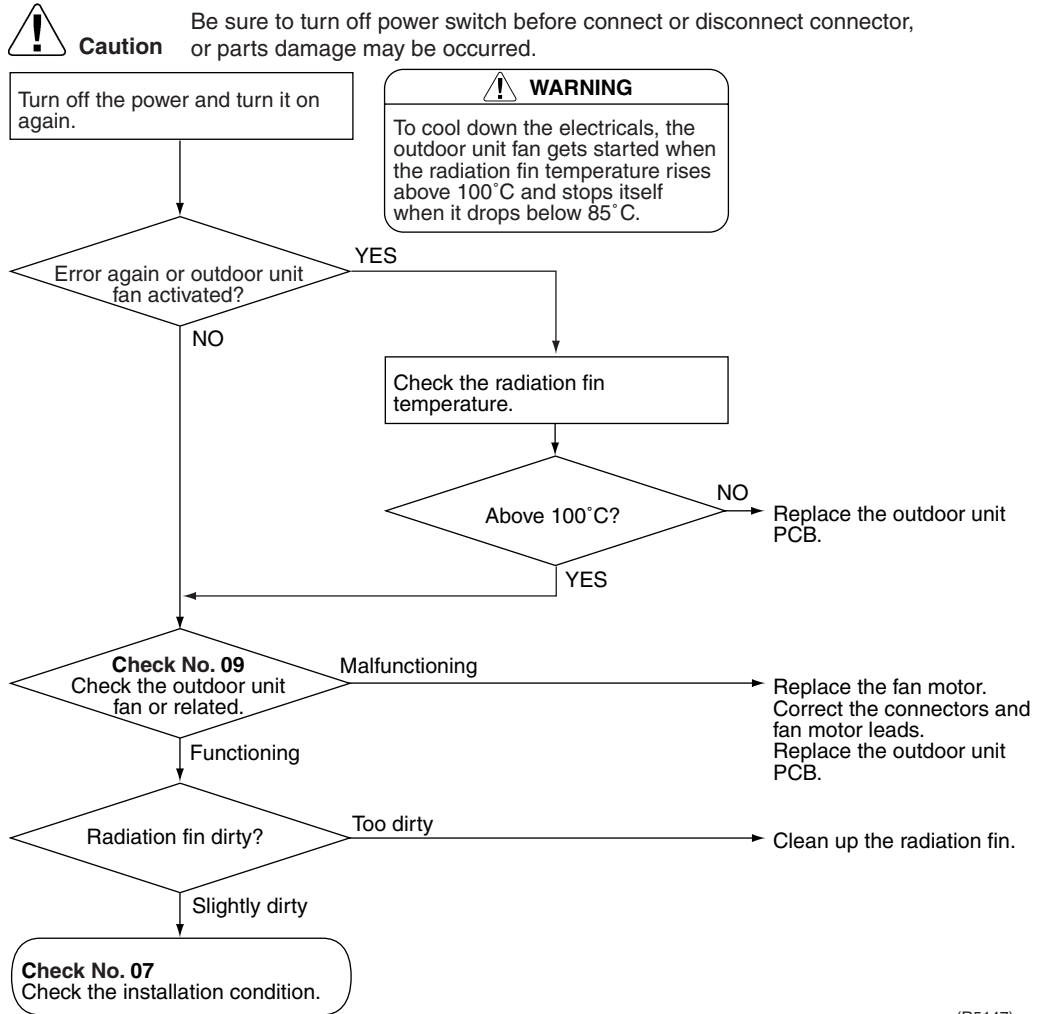



## 5.23 Radiation Fin Temperature Rise

remote control  
Display

L4

Outdoor Unit LED  
Display

A  1 ● 2 ● 3 ● 4 

**Method of  
Malfunction  
Detection**

A radiation fin temperature rise is detected by checking the radiation fin temperature being detected by the fin thermistor with the compressor on.

**Malfunction  
Decision  
Conditions**

- The radiation fin temperature with the compressor on is above 103°C.
- The error is cleared when the temperature drops below 95°C.
- If a radiation fin temperature rise takes place 255 times successively, the system will be shut down.
- The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

**Supposed  
Causes**

- Fin temperature rise due to defective outdoor unit fan
- Fin temperature rise due to short-circuit
- Fin thermistor defective
- Connector in poor contact
- Outdoor unit PCB defective



Troubleshooting



**Check No.07**  
Refer to P.256




**Check No.09**  
Refer to P.257



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

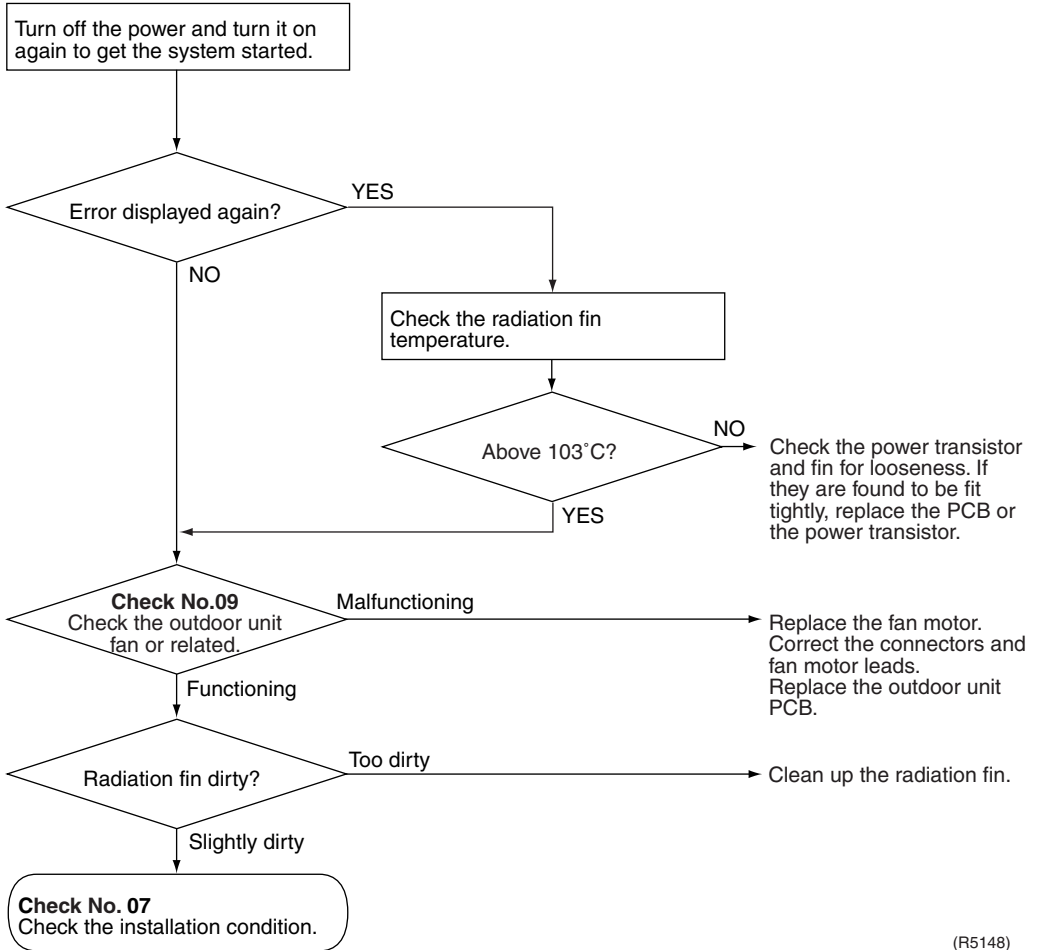



(R5148)

## 5.24 Output Over Current Detection

remote control  
Display

L5

Outdoor Unit LED  
Display

A  1 ● 2 ● 3  4 ●

Method of  
Malfunction  
Detection

An output over-current is detected by checking the current that flows in the inverter DC section.

Malfunction  
Decision  
Conditions

- A position signal error occurs while the compressor is running.
- A speed error occurs while the compressor is running.
- An output over-current input is fed from the output over-current detection circuit to the microcomputer.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 5 minutes (normal)

Supposed  
Causes

- Over-current due to defective power transistor
- Over-current due to wrong internal wiring
- Over-current due to abnormal supply voltage
- Over-current due to defective PCB
- Error detection due to defective PCB
- Over-current due to closed stop valve
- Over-current due to compressor failure
- Over-current due to poor installation condition

Troubleshooting



**Check No.07**  
Refer to P.256



**Check No.08**  
Refer to P.257




**Check No.13**  
Refer to P.259



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

\* An output over-current may result from wrong internal wiring. If the wires have been disconnected and reconnected for part replacement, for example, and the system is interrupted by an output over-current, take the following procedure.

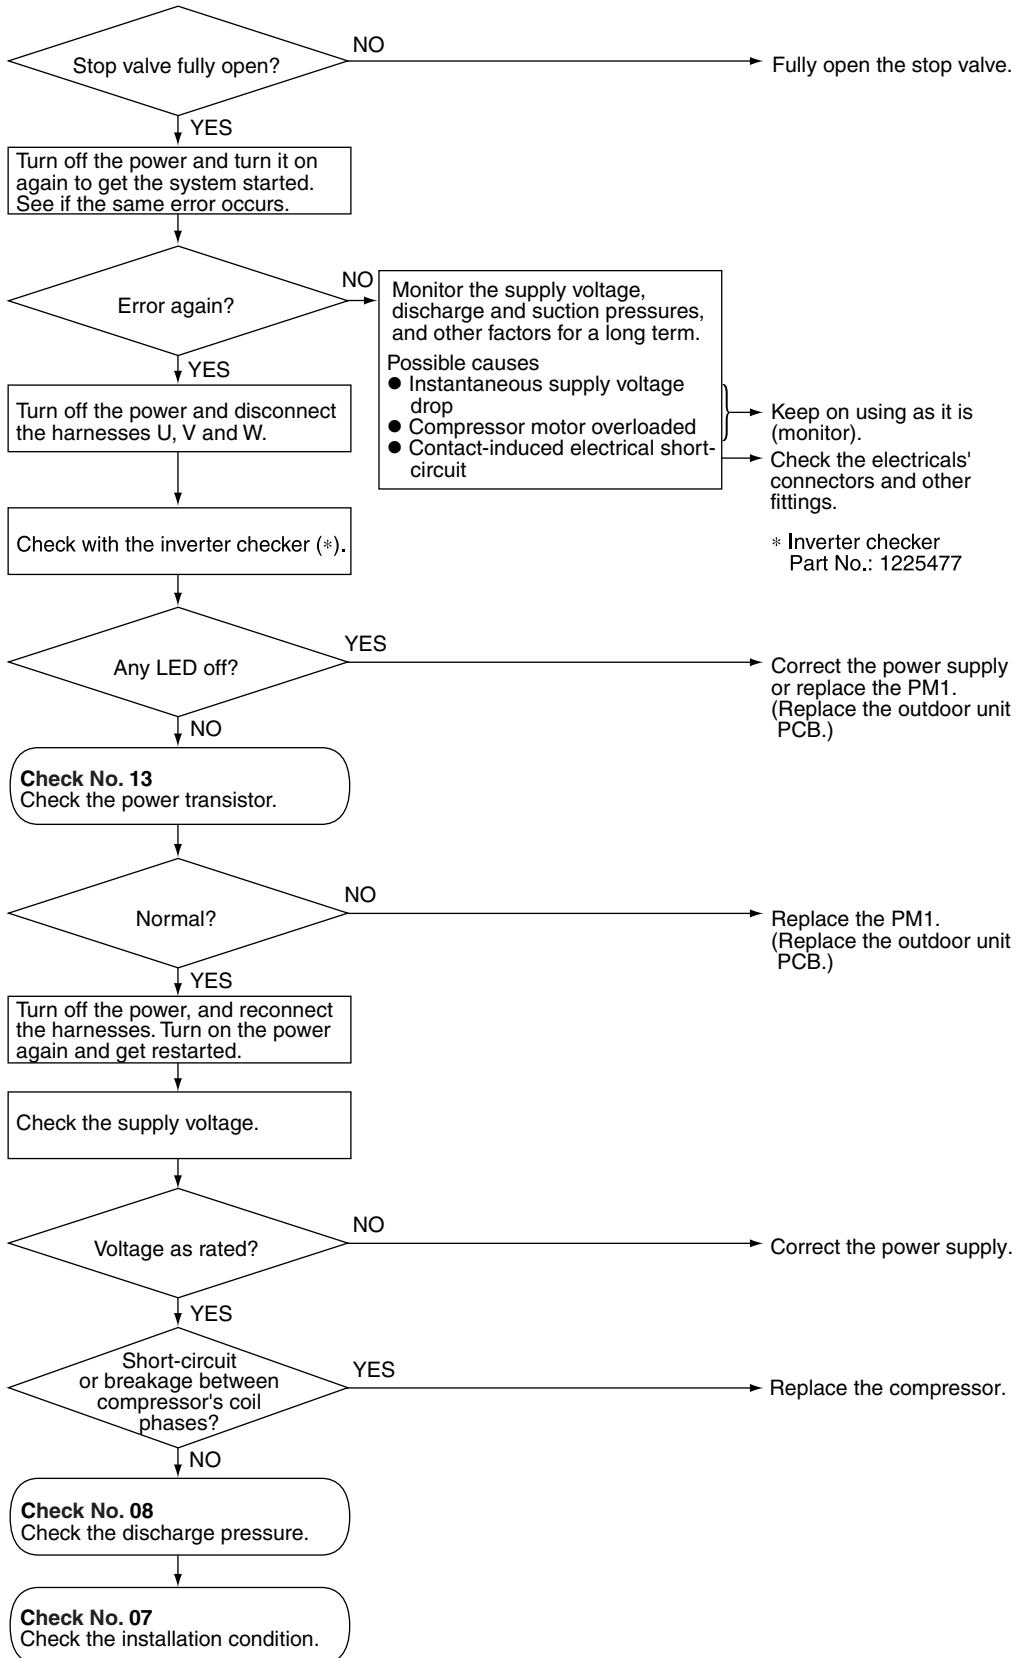

\* Inverter checker  
Part No.: 1225477




(R5149)

## 5.25 Insufficient Gas

remote control  
Display

U0

Outdoor Unit LED  
Display

A  1  2  3  4

Method of  
Malfunction  
Detection

**Gas shortage detection I:**

Gas shortage is detected by checking the input current value and the compressor running frequency. If the gas is short, the input current is smaller than the normal value.

**Gas shortage detection II:**

Gas shortage is detected by checking the discharge temperature and the opening of the electronic expansion valve. If the gas is short, the discharge temperature tends to rise.

Malfunction  
Decision  
Conditions

**Gas shortage detection I (typical value):**

The following conditions continue for 7 minutes.

- ◆ DC current  $\leq 0.01 \times \text{output frequency} + 0.3$
- ◆ Output frequency  $> 55$  (Hz)

**Gas shortage detection II:**

The following conditions continue for 80 seconds.

- ◆ Target opening of the electronic expansion valve  $\geq 450$  (pulse)
- ◆ Cooling: discharge temperature  $> 255 / 256 \times \text{target discharge temperature} + 20$  (°C)  
Heating: discharge temperature  $> 255 / 256 \times \text{target discharge temperature} + 40$  (°C)

If a gas shortage error takes place 4 times straight, the system will be shut down. The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

Supposed  
Causes

- Refrigerant shortage (refrigerant leakage)
- Poor compression performance of compressor
- Discharge pipe thermistor disconnected, or indoor unit or outdoor unit heat exchanger thermistor disconnected, room or outside air temperature thermistor disconnected
- Stop valve closed
- Electronic expansion valve defective

Troubleshooting



**Check No.04**  
Refer to P.253




**Check No.06**  
Refer to P.255





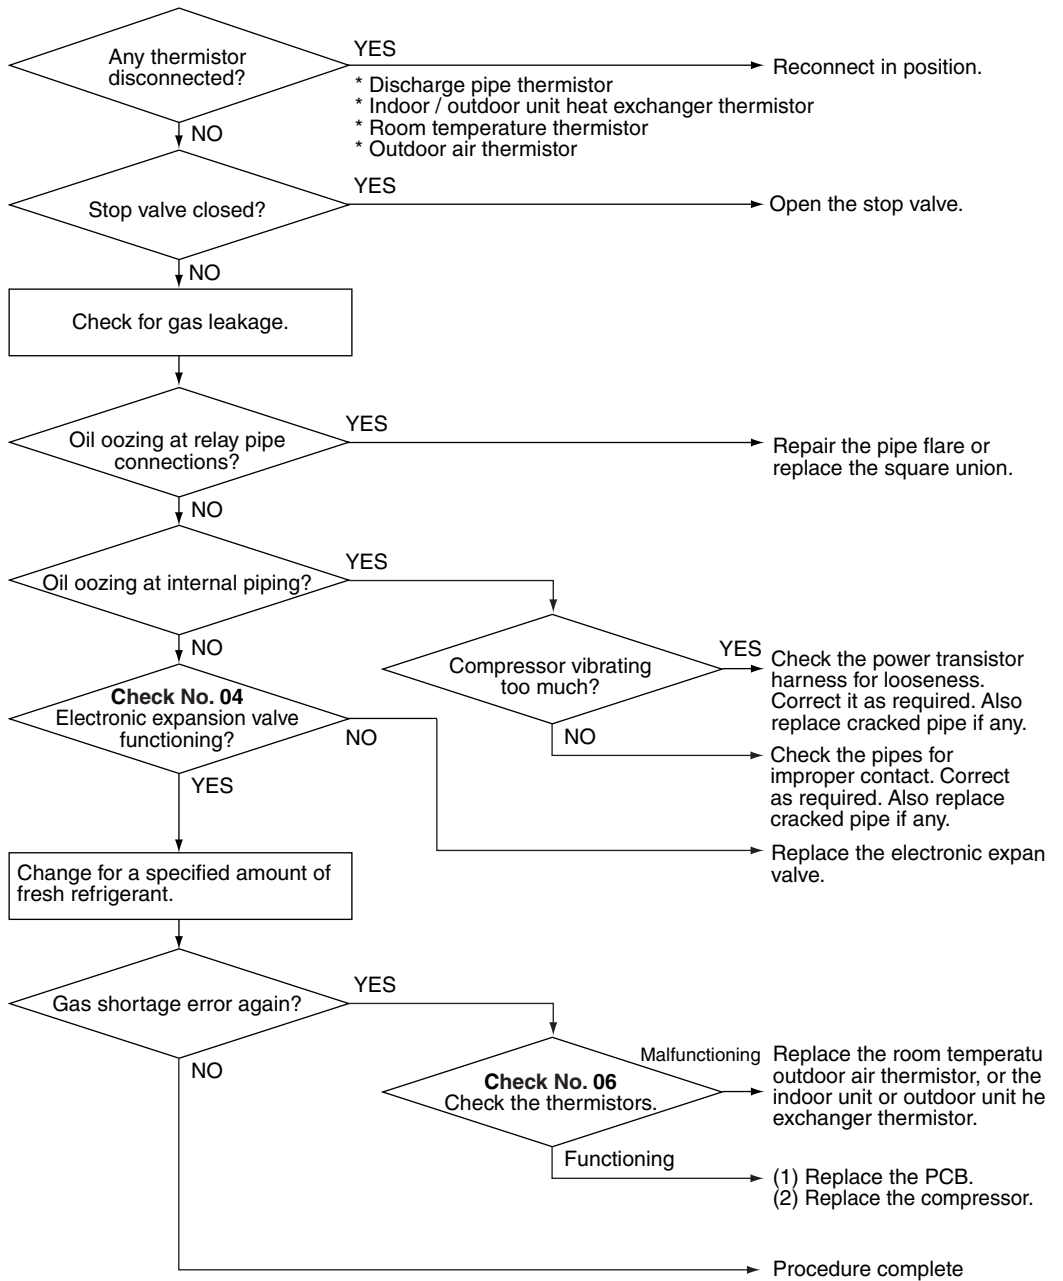

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.




(R5150)

## 5.26 Low-voltage Detection or Over-voltage Detection

remote control Display	U2
Outdoor Unit LED Display	A  1  2  3  4
Method of Malfunction Detection	An abnormal voltage rise or drop is detected by checking the detection circuit or DC voltage detection circuit.
Malfunction Decision Conditions	<ul style="list-style-type: none"> <li>■ An over-voltage signal is fed from the over-voltage detection circuit to the microcomputer, or the voltage being detected by the DC voltage detection circuit is judged to be below 150 V for 0.1 second.</li> <li>■ The system will be shut down if the error occurs 16 times.</li> <li>■ Clearing condition: Continuous run for about 60 minutes (normal)</li> </ul>
Supposed Causes	<ul style="list-style-type: none"> <li>■ Supply voltage not as specified</li> <li>■ Over-voltage detector or DC voltage detection circuit defective</li> <li>■ PAM control part(s) defective</li> </ul>

### Troubleshooting

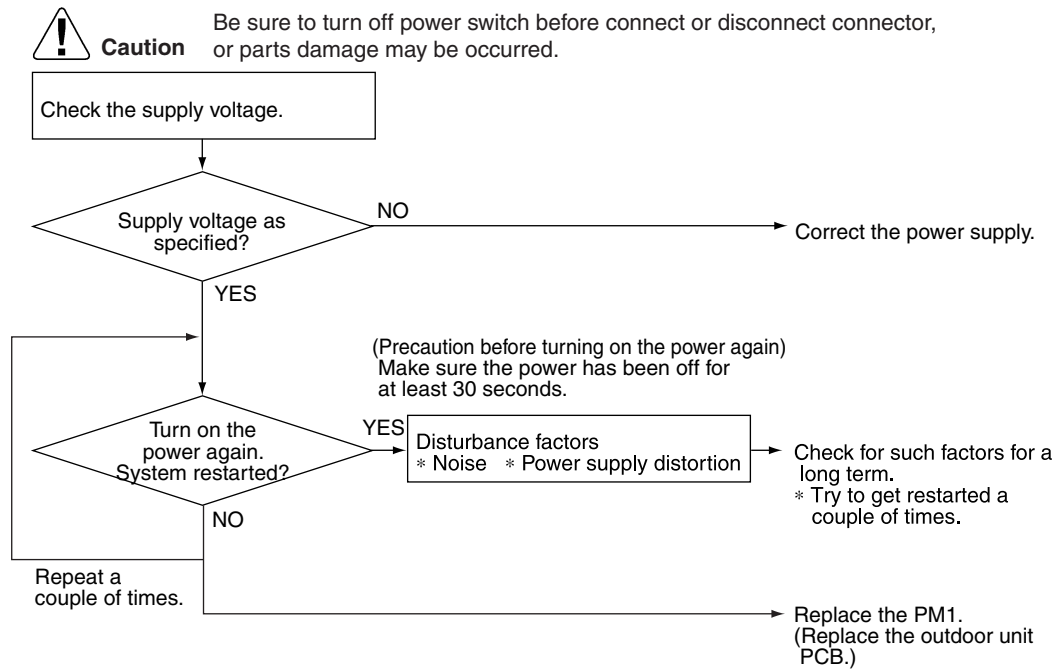

(R5151)

## 5.27 Signal Transmission Error (on Outdoor Unit PCB)

remote control  
Display

U7

Outdoor Unit LED  
Display

A 1 ● 2 ☉ 3 ☉ 4 ☉

Method of  
Malfunction  
Detection

Communication error between microcomputer mounted on the main PCB and PM1.

Malfunction  
Decision  
Conditions

- When the data sent from the PM1 can not be received successively for 9 sec.
- The abnormality is determined if the above fault conditions occurs once
- Fault counter is reset when the data from the PM1 can be successfully received.

Supposed  
Causes

- Defective outdoor unit PCB


Troubleshooting



**Caution**


Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Turn the power off and turn it on again.

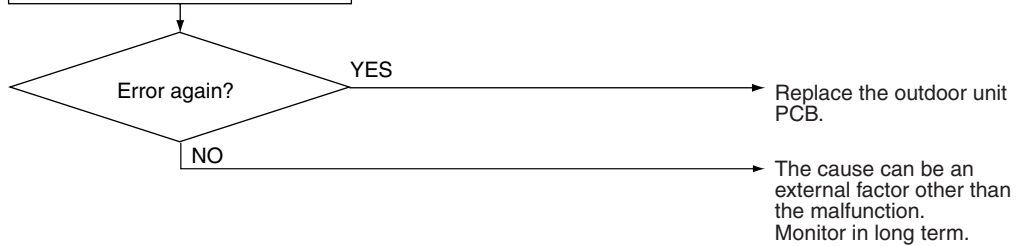


(R5152)

## 5.28 Anti-icing Function in Other Rooms / Unspecified Voltage (between Indoor and Outdoor Units)

remote control Display	UR, UH
Outdoor Unit LED Display	A  1 ● 2 ● 3 ● 4 ●
Method of Malfunction Detection	A wrong connection is detected by checking the combination of indoor and outdoor units on the microcomputer.
Malfunction Decision Conditions	<ul style="list-style-type: none"> <li>■ Operation halt due to the anti-icing function in other rooms</li> <li>■ Operation halt due to unspecified internal and/or external voltages</li> <li>■ Operation halt due to mismatching of indoor and outdoor units</li> </ul>
Supposed Causes	<ul style="list-style-type: none"> <li>■ Operation halt due to the anti-icing function in other rooms</li> <li>■ Wrong connections at the indoor unit</li> <li>■ PCB wrongly connected</li> </ul>

### Troubleshooting

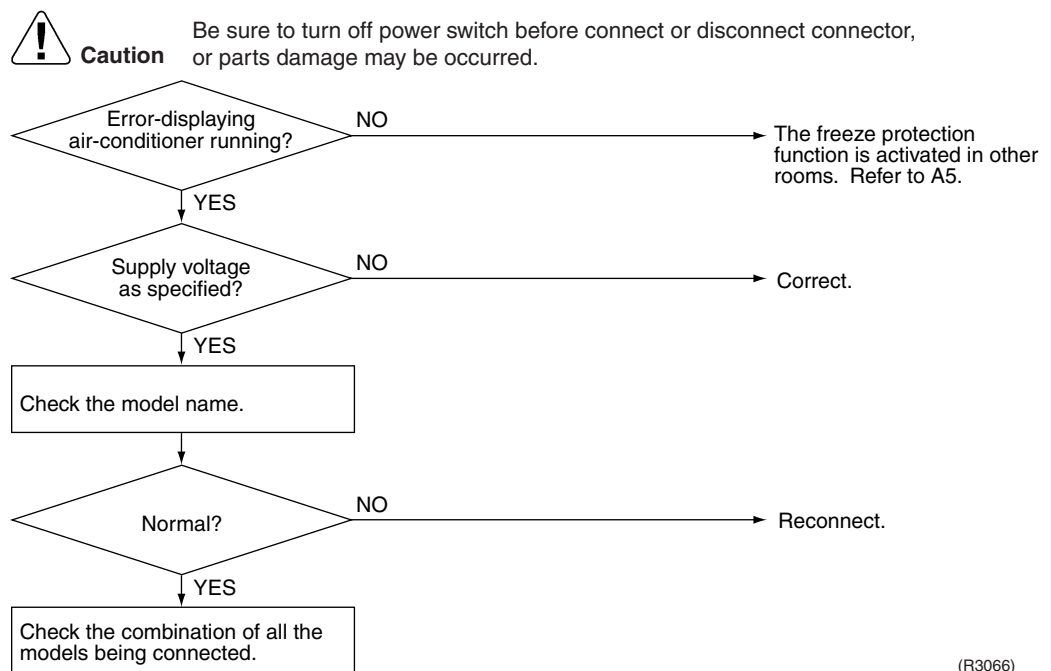



## 6. Check


### 6.1 How to Check

#### 6.1.1 Fan Motor Connector Output Check


**Check No.01**

1. Check connector connection.
2. Check motor power supply voltage output (pins 4-7 and 4-8).
3. Check motor control voltage (pins 4-3).
4. Check rotation command voltage output (pins 4-2).
5. Check rotation pulse input (pins 4-1).

S1 or S301

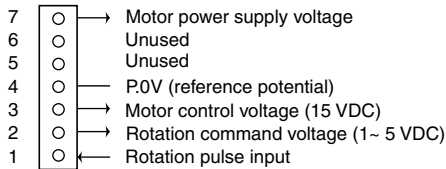

S302

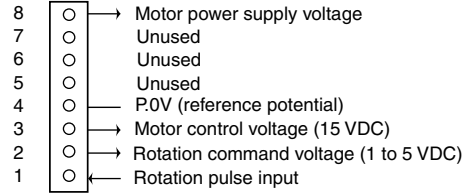


(R4684)

**Check No.02**

1. Check connector connection.
2. Check motor control voltage output (pins 2-1).

S202

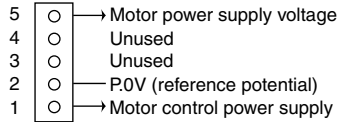


(R1073)

#### 6.1.2 Limit Switch Continuity Check

**Check No.03**

Remove the front grille. The limit switch is located at the left side of the drain pan assembly. Check the continuity of the switch connection.

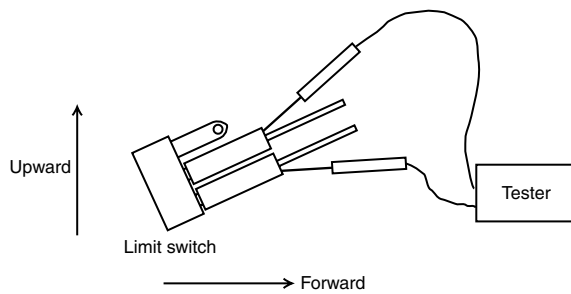

Shutter status	Open	Closed
Continuity	Continuity	No continuity

(Q0363)

- \* The shutter can be opened and closed with hand. Keep the shutter open and closed all the way for each continuity check steps.

### 6.1.3 Electronic Expansion Valve Check

**Check No.04**

Conduct the followings to check the electronic expansion valve (EV).

1. Check to see if the EV connector is correctly inserted in the PCB. Compare the EV unit and the connector number.
2. Turn the power off and back on again, and check to see if all the EVs generate latching sound.
3. If any of the EVs does not generate latching noise in the above step 2, disconnect that connector and check the conductivity using a tester.  
Check the conductivity between pins 1, 3 and 6, and between pins 2, 4 and 5. If there is no conductivity between the pins, the EV coil is faulty.
4. If no EV generates latching sound in the above step 2, the outdoor unit PCB is faulty.
5. If the conductivity is confirmed in the above step 2, mount a good coil (which generated latching sound) in the EV unit that did not generate latching sound, and check to see if that EV generates latching sound.  
\*If latching sound is generated, the outdoor unit PCB is faulty.  
\*If latching sound is not generated, the EV unit is faulty.





**Note:** Please note that the latching sound varies depending on the valve type.

Valve Body Condition (Symptom)	Check Method / Measure
<p>(1) Valve body catches at fully opened or half opened position. (Symptom)</p> <p>Cooling:                      ■Water leakage at the no-operation unit                      ■Flow noise of refrigerant in the no-operation unit                      ■Operation halt due to icing protection</p> <p>Heating:                      ■The unit does not heat                      ■Refrigerant flow rate vary by unit                      (Discharge air temperatures are different by room)                      ■Peak cut</p>	<p>Reset power supply and conduct cooling operation unit by unit.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">                     Check the liquid pipe temperature of no-operation unit.                 </div> <div style="text-align: center;">                     Is it almost same as the outside air temperature?                 </div> <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;"> <p>NO</p> <p>Replace the EVn of the room. (R1431)</p> </div> <div style="text-align: center;"> <p>YES</p> </div> </div>
<p>(2) Valve body catches at complete close position. (Symptom)</p> <p>Cooling:                      ■The only unit having problem does not cool the room .                      ■When the only faulty unit is in operation, the unit makes pump down.                      (The low pressure of the unit becomes vacuum)                      ■IT is activated.                      ■Abnormal discharge pipe temperature</p> <p>Heating:                      Insufficient gas due to liquid refrigerant stagnation inside the faulty indoor unit</p> <p>(Only for heat pump model)                      ■The unit does not heat the room.                      ■IT is activated.                      ■Abnormal discharge pipe temperature</p>	<p>Reset power supply and conduct cooling operation unit by unit.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">                     Check the low pressure                 </div> <div style="text-align: center;">                     Does the pressure become into vacuum zone?                 </div> <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;"> <p>NO</p> <p>Replace the EVn of the room (R1432)</p> </div> <div style="text-align: center;"> <p>YES</p> </div> </div>
<p>(3) Valve does not open fully. (Symptom)</p> <p>■The unit does not cool nor heat (only for heat pump model.)                      ■IT is actuated.                      ■Abnormal discharge pipe temperature</p>	<p>Check the number of rotation of shaft if it is 5 and half from full open to complete close using manual coil for electronic expansion valve. When the number of rotation of shaft is less than the above value, the valve may catch anywhere of the body.</p>

### 6.1.4 Four Way Valve Performance Check

Check No.05

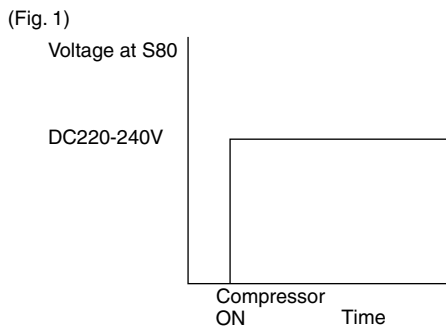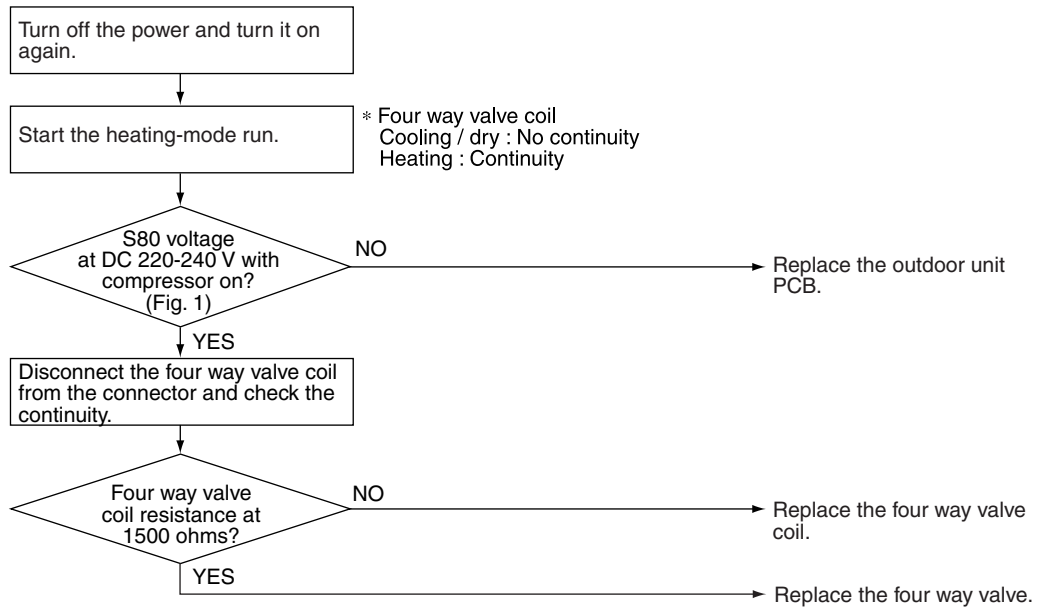

(R5153)


## 6.1.5 Thermistor Resistance Check

### Check No.06


Remove the connectors of the thermistors on the PCB, and measure the resistance of each thermistor using tester.

The relationship between normal temperature and resistance is shown in the graph and the table below.

Temperature (°C)	Thermistor R25°C=20kΩ B=3950
-20	211.0 (kΩ)
-15	150
-10	116.5
-5	88
0	67.2
5	51.9
10	40
15	31.8
20	25
25	20
30	16
35	13
40	10.6
45	8.7
50	7.2

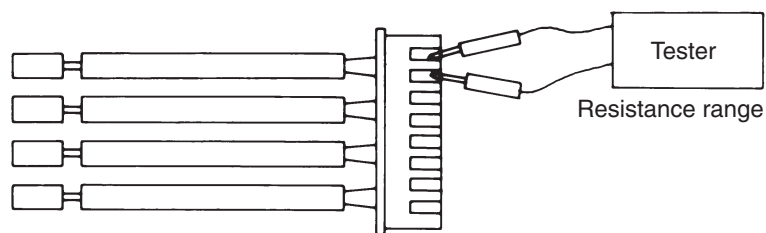


(R25=20kΩ, B=3950)

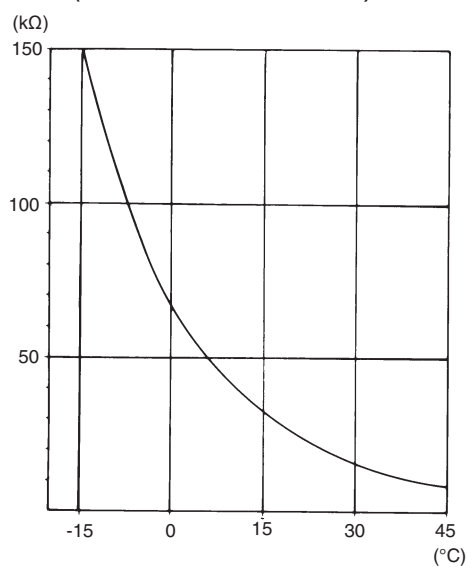

(R1437)


## 6.1.6 Installation Condition Check

### Check No.07

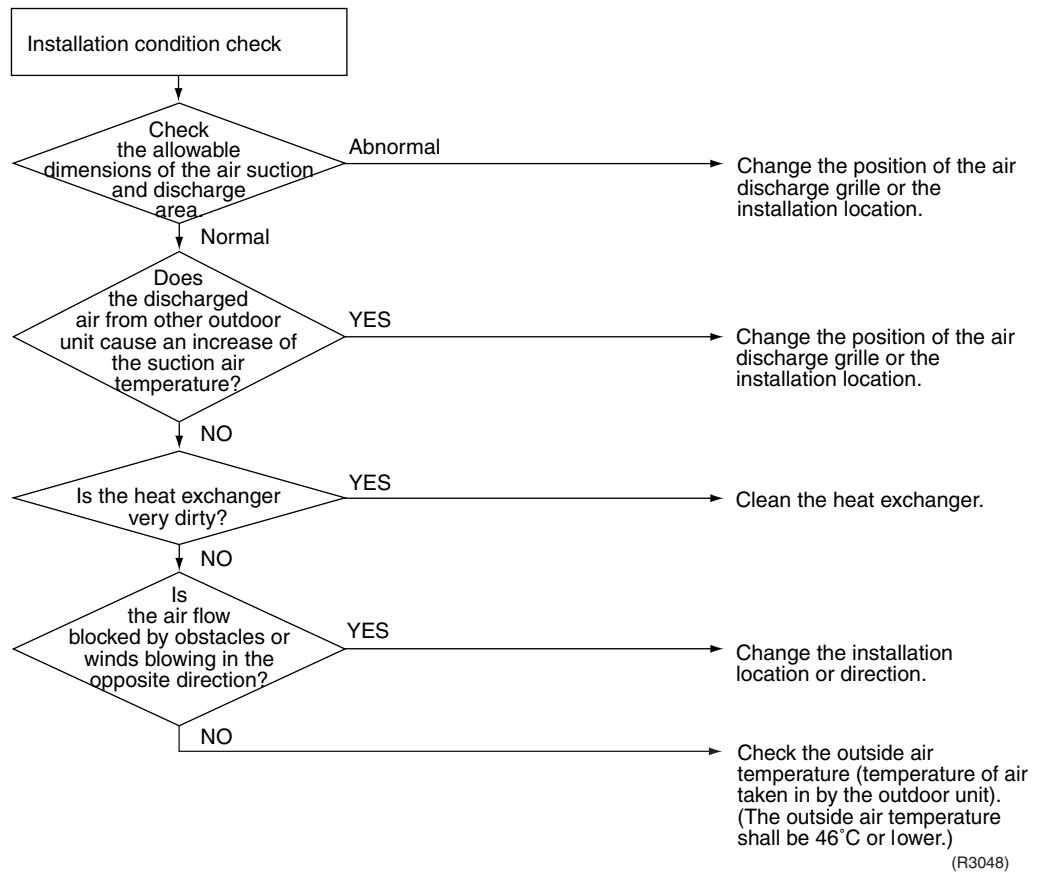


### 6.1.7 Discharge Pressure Check

Check No.08

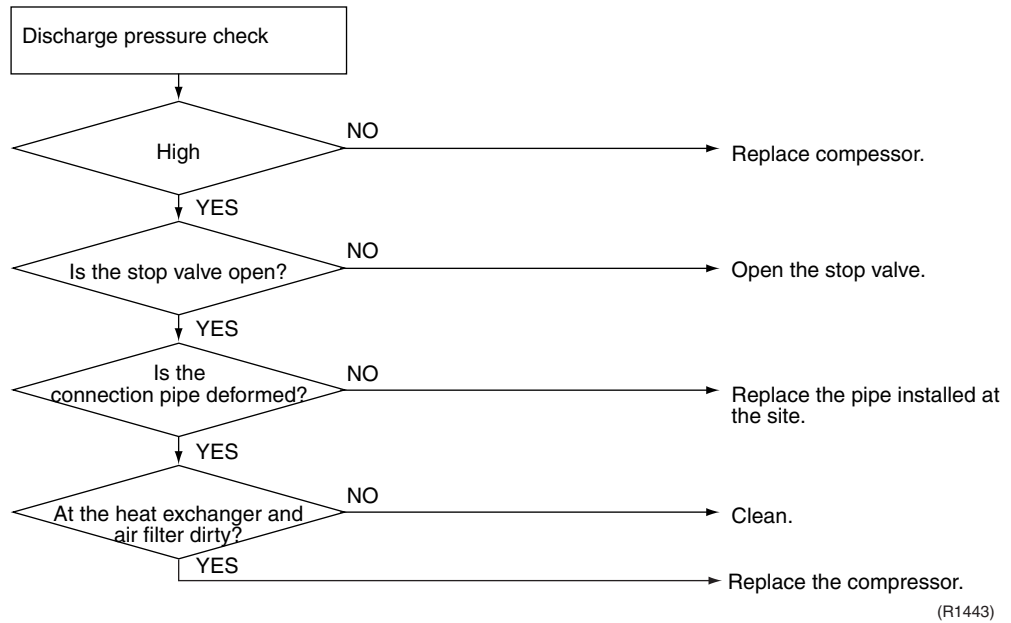

### 6.1.8 Outdoor Unit Fan System Check (With DC Motor)

Check No.09

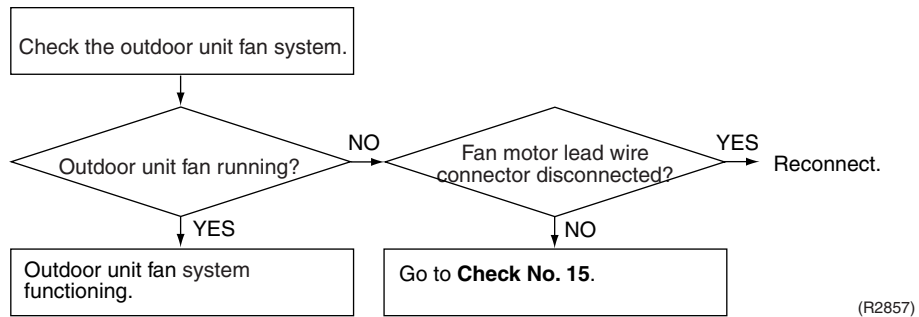

### 6.1.9 Power Supply Waveforms Check



**Check No.10**

Measure the power supply waveform between pins 1 and 3 on the terminal board, and check the waveform disturbance.

- Check to see if the power supply waveform is a sine wave (Fig.1).
- Check to see if there is waveform disturbance near the zero cross (sections circled in Fig.2)

[Fig.1]

[Fig.2]

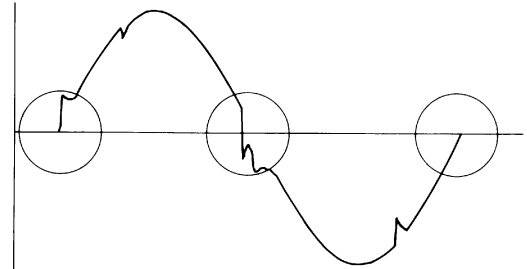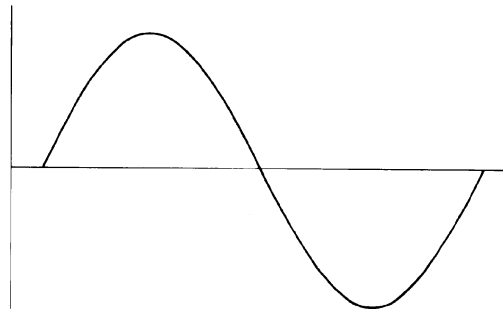


(R1736)

(R1444)

### 6.1.10 Inverter Units Refrigerant System Check

**Check No.11**

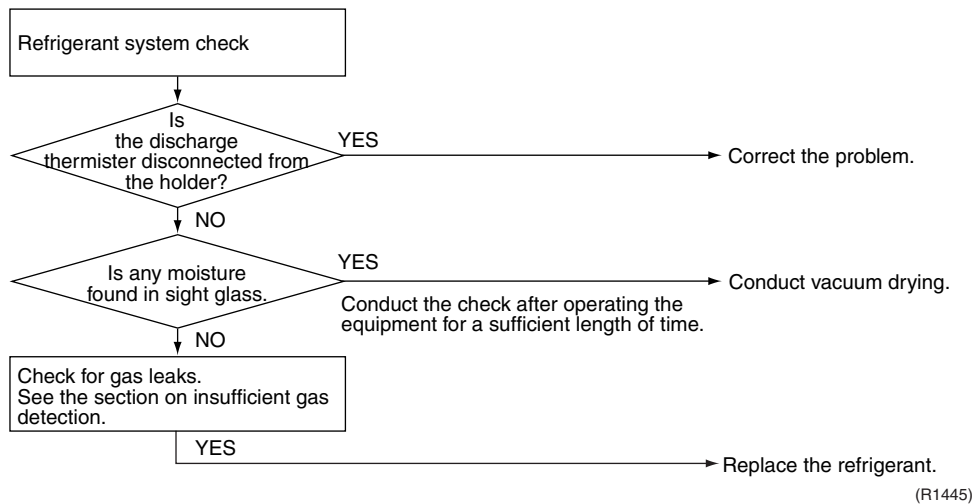


(R1445)

## 6.1.11 Capacitor Voltage Check

### Check No.12

Before this checking, be sure to check the main circuit for short-circuit.

- Checking the capacitor voltage
- With the circuit breaker still on, measure the voltage according to the drawing of the model in question. Be careful never to touch any live parts.

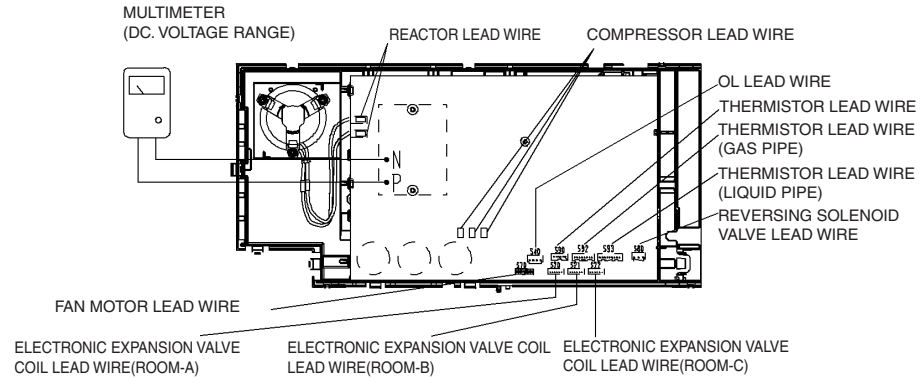

(R5154)

## 6.1.12 Power Transistor Check

### Check No.13

- Checking the power transistor
- Never touch any live parts for at least 10 minutes after turning off the circuit breaker.
- If unavoidably necessary to touch a live part, make sure the power transistor's supply voltage is below 50 V using the tester.
- For the UVW, make measurements at the Faston terminal on the board or the relay connector.


Tester's negative terminal	Power transistor (+)	UVW	Power transistor (-)	UVW
Tester's positive terminal	UVW	Power transistor (+)	UVW	Power transistor (-)
Normal resistance	Several kohms to several Mohms			
Abnormal resistance	0 or ∞			



### 6.1.13 Main Circuit Electrolytic Capacitor Check

**Check No.14**

- Checking the main circuit electrolytic capacitor
- Never touch any live parts for at least 10 minutes after turning off the circuit breaker.
- If unavoidably necessary to touch a live part, make sure there is no DC voltage using the tester.
- Check the continuity with the tester. Reverse the pins and make sure there is continuity.

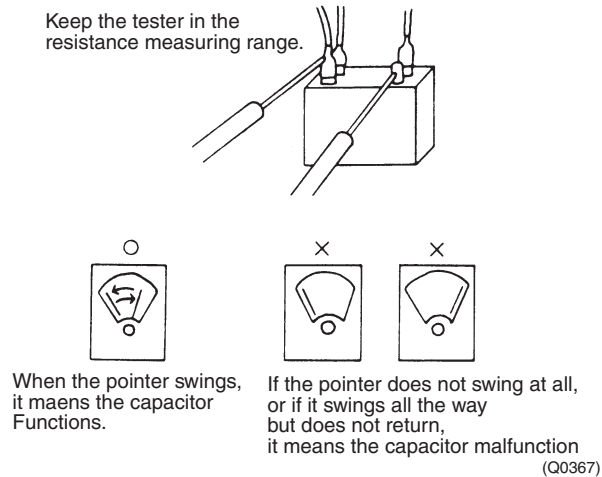

### 6.1.14 Turning Speed Pulse Input on the Outdoor Unit PCB Check

**Check No.15**

<Propeller fan motor>


Make sure the voltage of  $320\pm 30V$  is being applied.

- (1) Stop the operation first and then the power, and disconnect the connector S70.
- (2) Make sure there is about DC 320 V between pins 4 and 7.
- (3) With the system and the power still off, reconnect the connector S70.
- (4) Make a turn of the fan motor with a hand, and make sure the pulse (0-15 V) appears twice at pins 1 and 4.

If the fan motor protection fuse is blown out, the outdoor-unit fan may also be in trouble. Check the fan too.

If the voltage in Step (2) is not applied, it means the PCB is defective. Replace the PCB.

If the pulse in Step (4) is not available, it means the Hall IC is defective. Replace the DC fan motor. If there are both the voltage (2) and the pulse (4), replace the PCB.

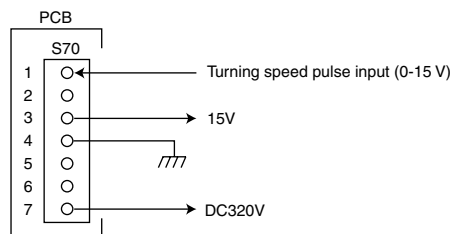

(R5223)

\* Propeller fan motor : S70

## 6.1.15 Hall IC Check

### Check No.16



1. Check the connector connection.
2. With the power ON, operation OFF, and the connector connected, check the following.
  - \*Output voltage of about 5 V between pins 1 and 3.
  - \*Generation of 3 pulses between pins 2 and 3 when the fan motor is operating.

Failure of (1) → faulty PCB → Replace the PCB.

Failure of (2) → faulty Hall IC → Replace the fan motor.

Both (1) and (2) result → Replace the PCB.

The connector has 3 pins, and there are two patterns of lead wire colors.

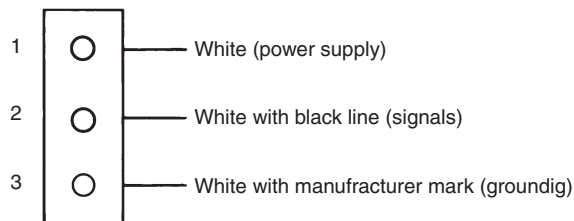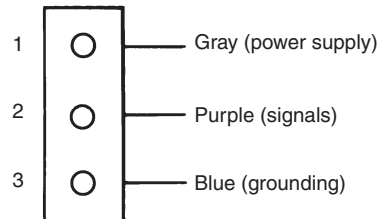

(R1990)



# Part 7

## Removal Procedure

1. Outdoor Unit.....	264
1.1 Removal of the Panels and Plates .....	264
1.2 Removal of the Electrical Box .....	269
1.3 Removal of the PCB.....	276
1.4 Removal of the Propeller Fan / Fan Motor .....	282
1.5 Removal of the Sound Blanket.....	284
1.6 Removal of Electronic Expansion Valve Coil, Four Way Valve Coil and Thermistor .....	288
1.7 Removal of the Distributor .....	291
1.8 Removal of the Four Way Valve.....	292
1.9 Removal of the Compressor.....	293

# 1. Outdoor Unit

## 1.1 Removal of the Panels and Plates





**Procedure**









**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.



Step	Procedure	Procedure	Points
1	External appearance.	<p>Top panel</p> <p>handle</p> <p>Discharge grille</p> <p>Stop valve cover</p> <p>Front panel (R5494)</p> <p>Outdoor air thermistor</p> <p>(R5495)</p>	<p>■ Take care not to cut your finger by the fins of the heat exchanger.</p>
2	Loosen the 4 screws (2 on both sides) of the top panel.	<p>Top panel</p> <p>Discharge grille</p> <p>Front panel (R5496)</p>	

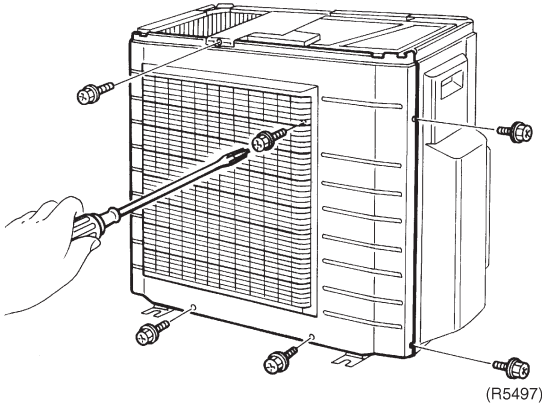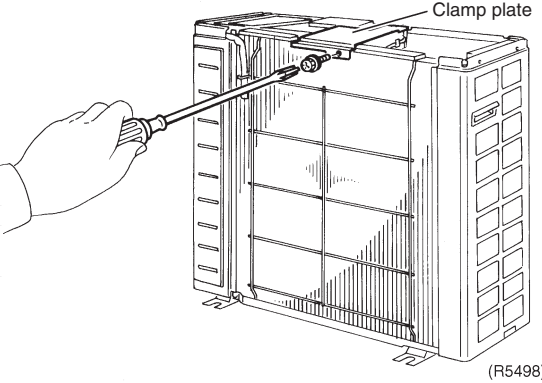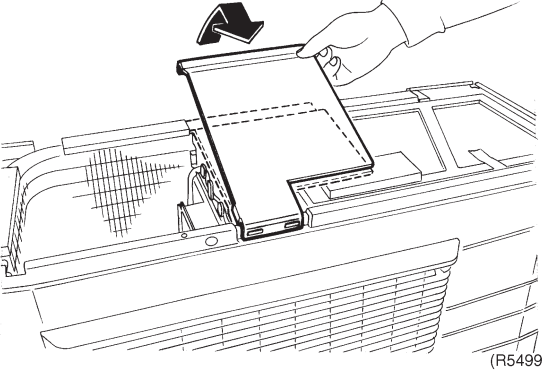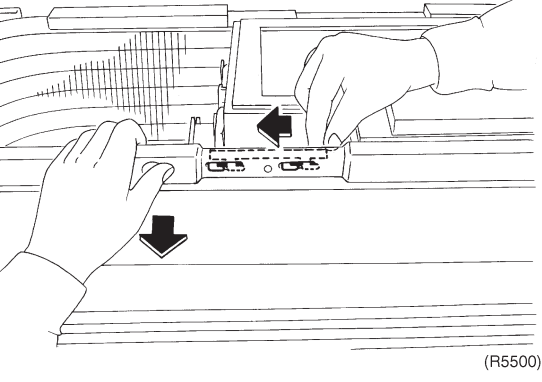Step	Procedure	Points
3	Loosen the 6 screws of the front panel.	
	 <p>(R5497)</p>	
4	Loosen the 2 screws (each 1 in front and back) of the clamp plate.	
	 <p>Clamp plate</p> <p>(R5498)</p>	
5	Slide the clamp plate to the left to undo the hooks and remove the plate.	
	 <p>(R5499)</p>	
6	Undo the upper 2 hooks to remove the front panel.	
	 <p>(R5500)</p>	<ul style="list-style-type: none"> <li>Align the position of hole of the upper hook to pull the front panel out.</li> </ul>

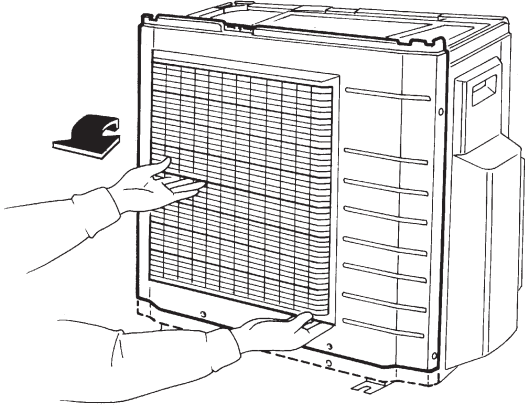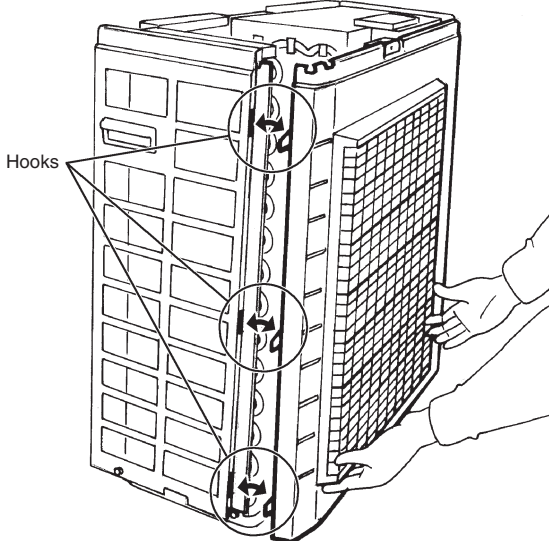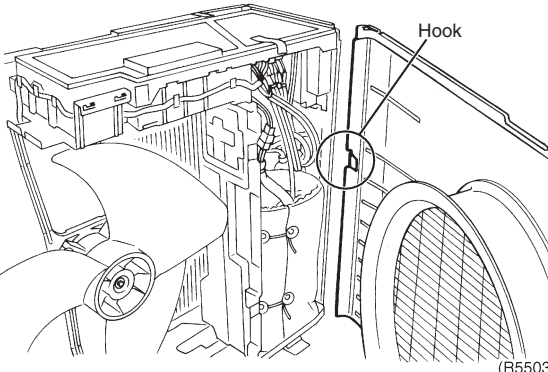Step	Procedure	Points
7	<p>Lift the front panel up to remove the left side hooks and open the panel.</p>  <p>(R5501)</p>	
8	<p>The front panel has the 3 hooks on the left.</p>  <p>(R5502)</p>	
9	<p>The front panel has the 1 hook on the right.</p>  <p>(R5503)</p>	

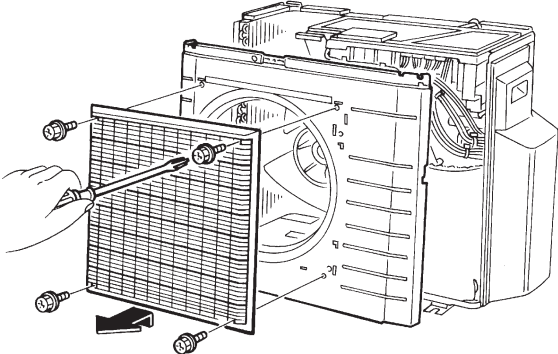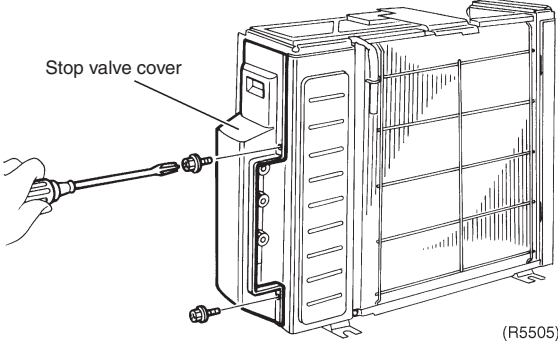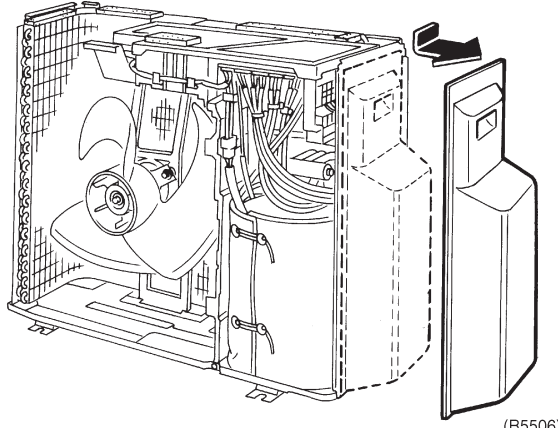Step	Procedure	Points
10	<p>Loosen the 4 screws of the discharge grille.</p>  <p>(R5504)</p>	
11	<p>Loosen the 2 screws of the stop valve cover. And then slide the cover downward to remove.</p>  <p>(R5505)</p>  <p>(R5506)</p>	

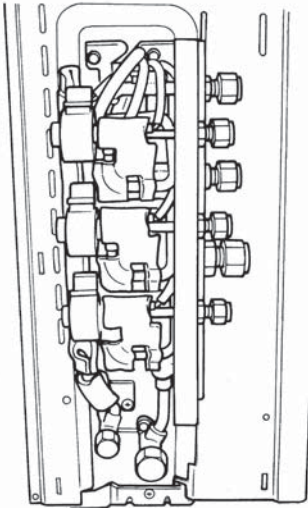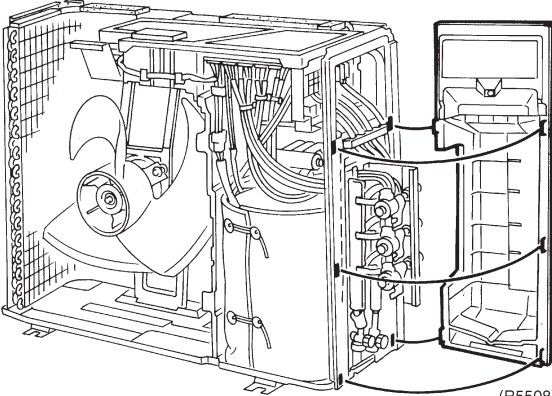

Step	Procedure	Points
	 <p>(R5507)</p>  <p>(R5508)</p>	<ul style="list-style-type: none"> <li>■ When assembling, make sure to catch the 5 hooks.</li> </ul>




# 1.2 Removal of the Electrical Box






**Procedure**











**Warning**





Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.


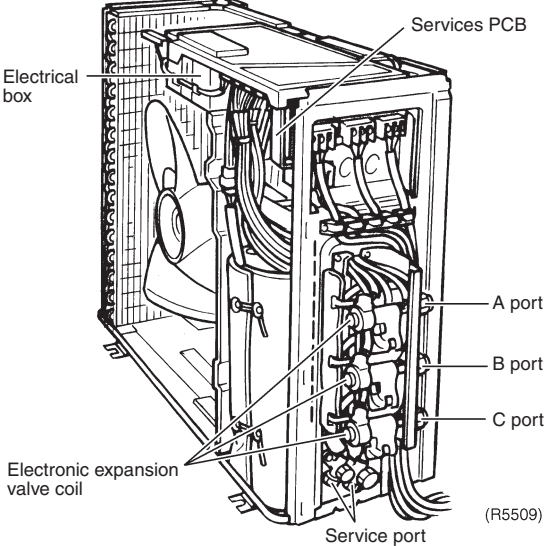
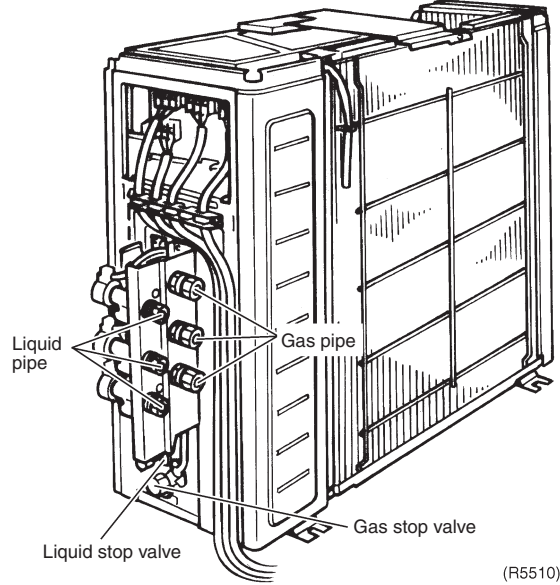
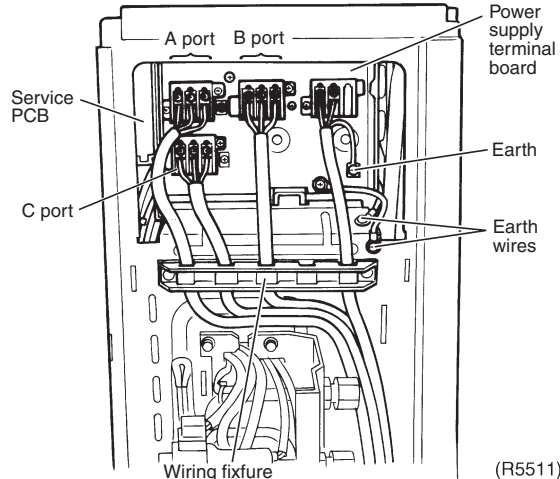
Step	Procedure	Points
1. Disconnect the connecting wires		★ Illustrations are for 3 room model.
1	<p>Inside structure.</p>  	
2	<p>Disconnect the connecting wires.</p> 	<ul style="list-style-type: none"> <li>■ Connecting wires of the A, B, C, D port                     <ul style="list-style-type: none"> <li>(1) - Black Power supply</li> <li>(2) - White Power supply</li> <li>(3) - Red Transmission</li> </ul> </li> <li>■ Power Supply wires                     <ul style="list-style-type: none"> <li>(L) - Black</li> <li>(N) - White</li> </ul> </li> <li>■ Fasten the wires on the terminal board with screws.</li> </ul>

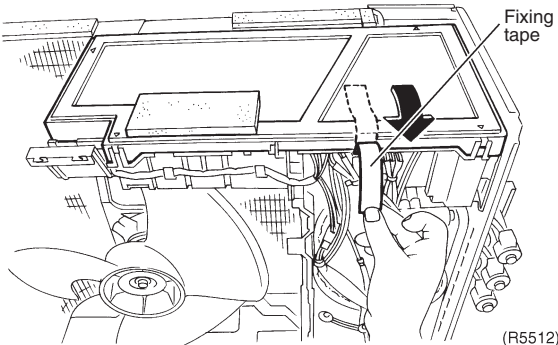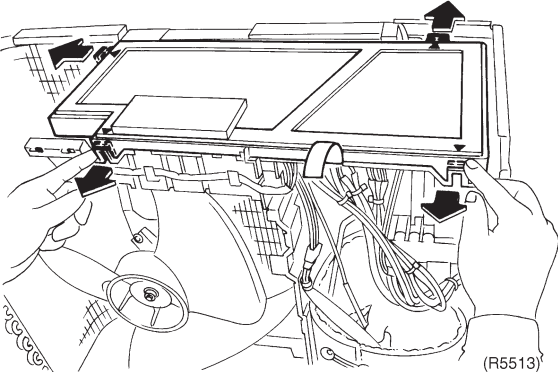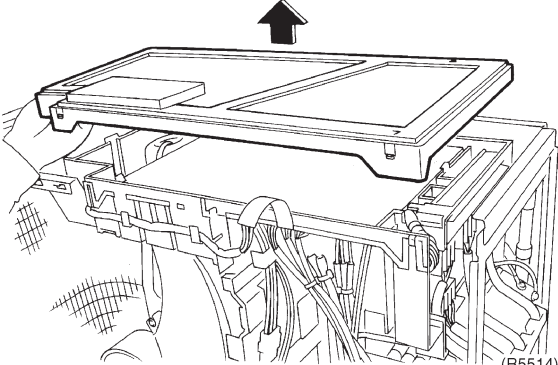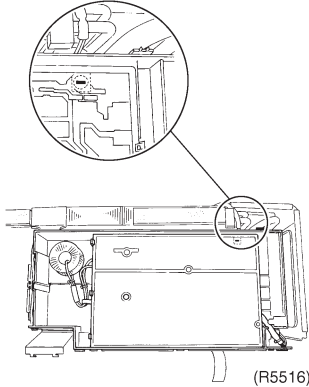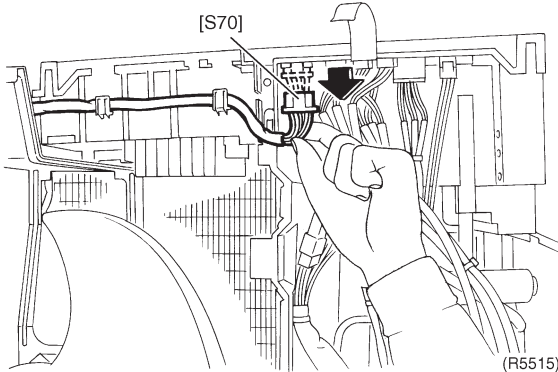Step	Procedure	Points
2. Disconnect the each harnesses		
1	<p>Detach the fixing tape for the electrical box (cover).</p>  <p>(R5512)</p>	
2	<p>Undo the 4 hooks at the ▲ mark of the drip proof cover.</p>  <p>(R5513)</p>	
3	<p>Lift the cover up to remove.</p>  <p>(R5514)</p>  <p>(R5516)</p>	<p>■ Check the LED through the slit.</p>
4	<p>Disconnect the connector for fan motor [S70] from the PCB.</p>  <p>(R5515)</p>	

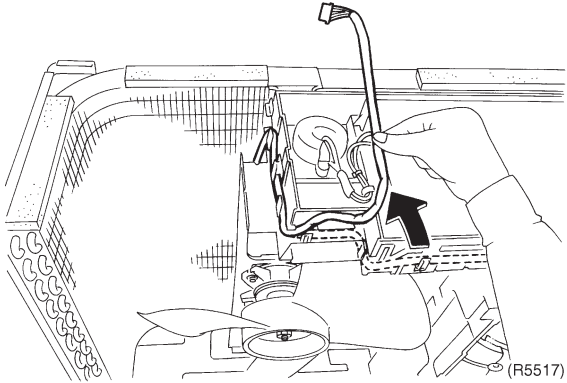
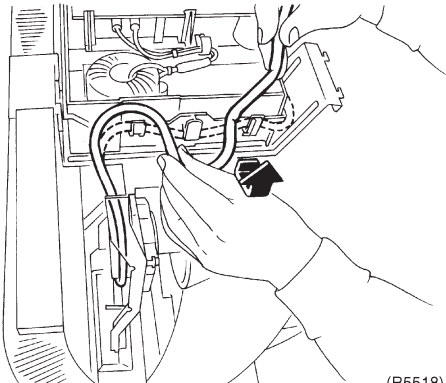
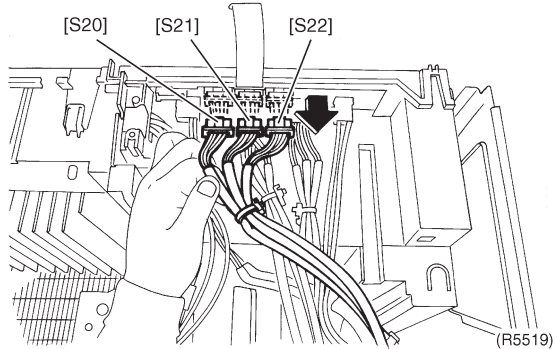
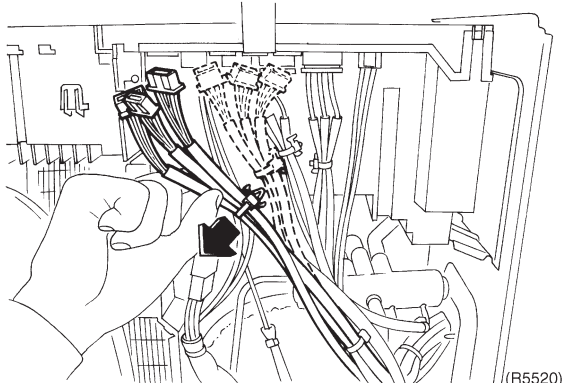
Step	Procedure	Points
5	<p>The figure shows the arrangement of the wire harness for fan motor.</p>  	
6	<p>Disconnect the connectors for electronic expansion valve coil.</p> <p>[S20] - White [S21] - Red [S22] - Blue [S23] - Yellow</p> 	<ul style="list-style-type: none"> <li>■ The number of the connectors are different according to the number of the connected indoor units.</li> </ul>
7	<p>Undo the wire clip.</p> 	

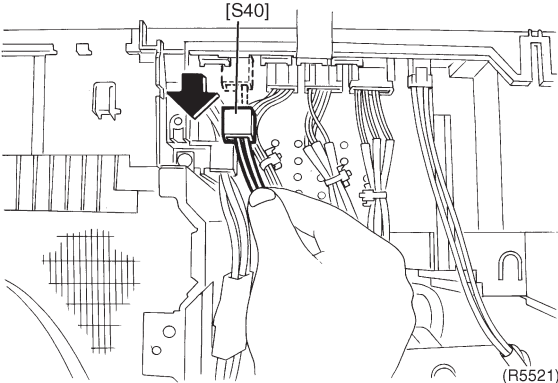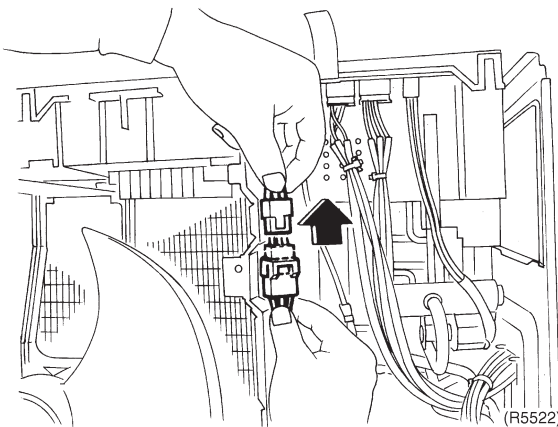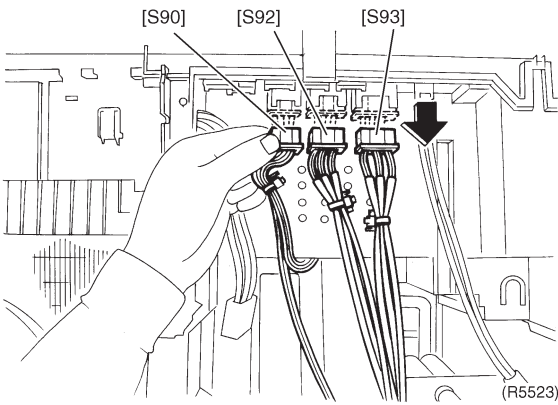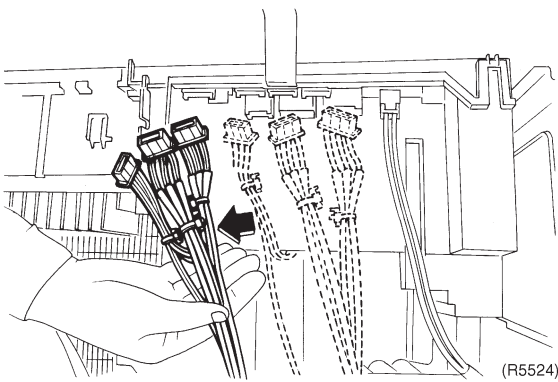Step	Procedure	Points
8	Disconnect the connector for overload protector [S40].	
	 <p style="text-align: right;">(R5521)</p>	
9	Disconnect the connector for relay harness of compressor.	
	 <p style="text-align: right;">(R5522)</p>	
10	Disconnect the each connector. [S90] : Outdoor air, heat exchanger, discharge pipe thermistor [S92] : Gas pipe thermistor [S93] : Liquid pipe thermistor	
	 <p style="text-align: right;">(R5523)</p>	
	 <p style="text-align: right;">(R5524)</p>	

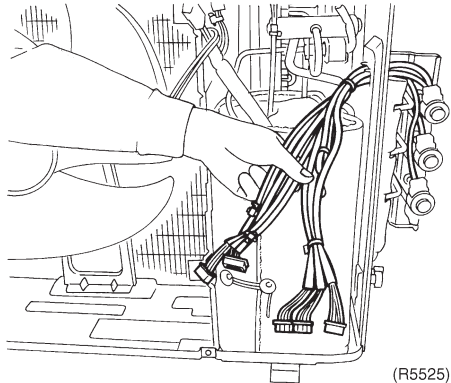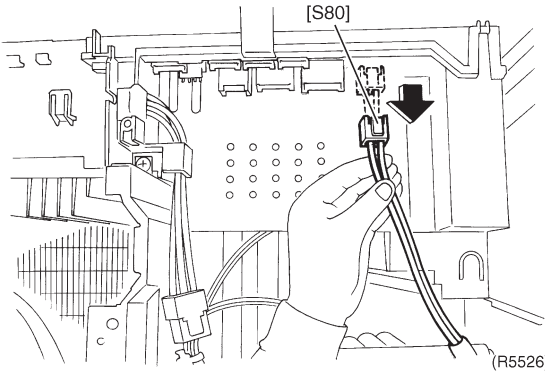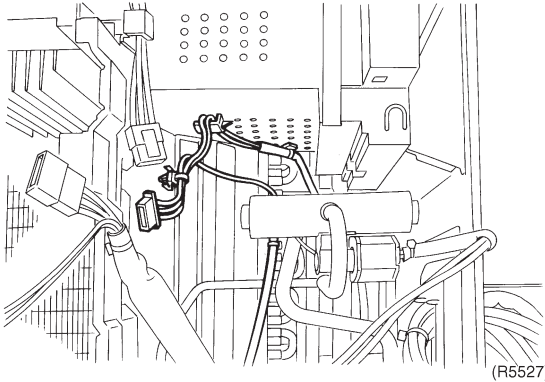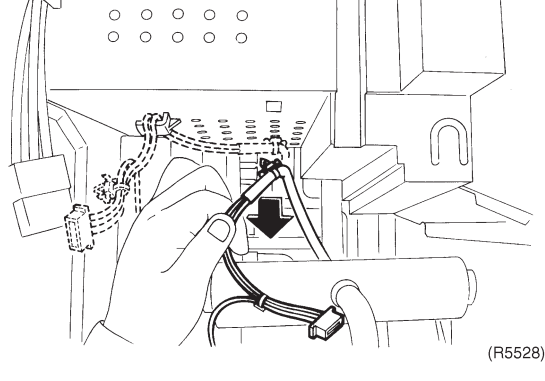Step		Procedure	Points
11	Disconnect the connector for four way valve [S80].	 <p>(R5525)</p>  <p>(R5526)</p>	
12	The figure shows the arrangement of the wire harness under the electrical box.	 <p>(R5527)</p>	
13	Undo the wire clip for the thermistor lead wire.	 <p>(R5528)</p>	

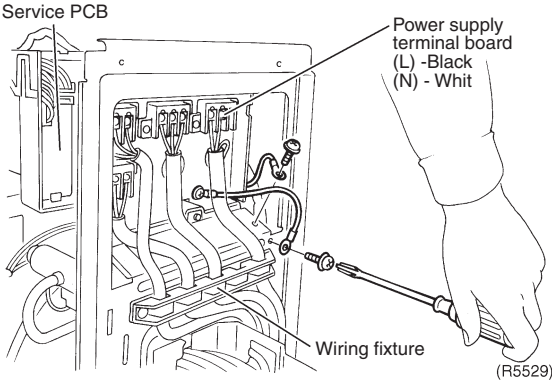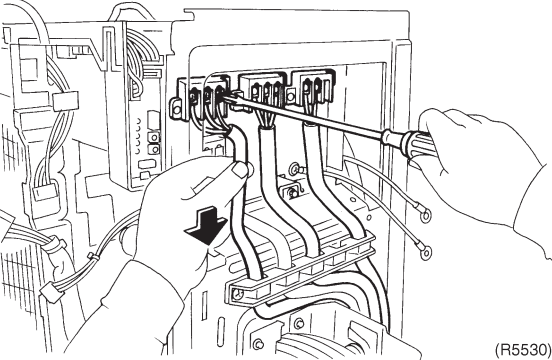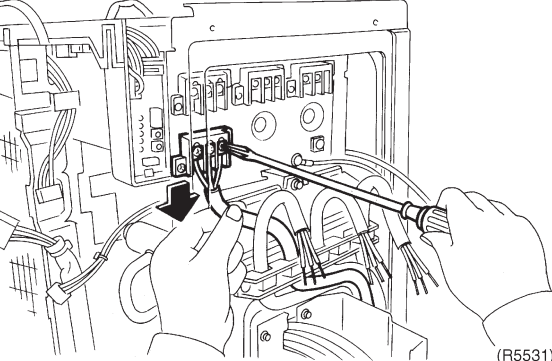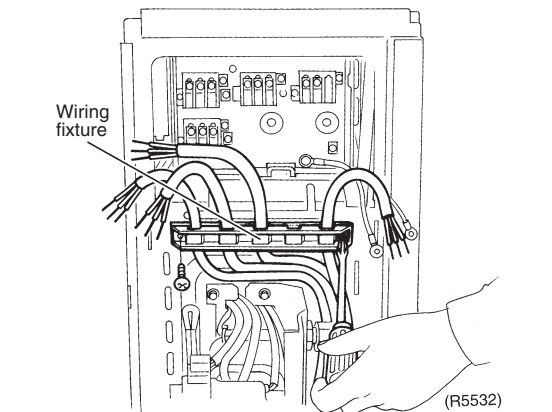Step	Procedure	Points
<p>3. Remove the electrical box</p> <p>1 Loosen the 2 screws of the earth terminal.</p>	 <p>Service PCB</p> <p>Power supply terminal board (L) - Black (N) - Whit</p> <p>Wiring fixture</p> <p>(R5529)</p>	
<p>4. Disconnect the power supply connecting wires</p> <p>1 Loosen the screws on the terminal board and disconnect the wires of A, B, C, and D port.</p>	 <p>(R5530)</p>  <p>(R5531)</p>  <p>Wiring fixture</p> <p>(R5532)</p>	

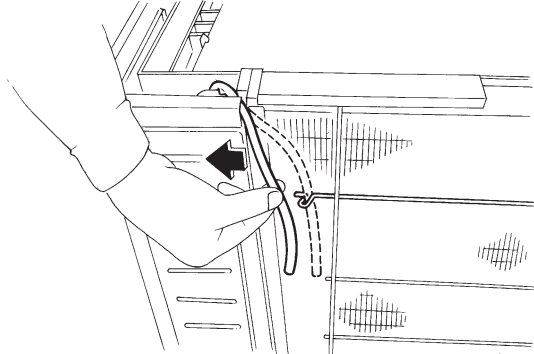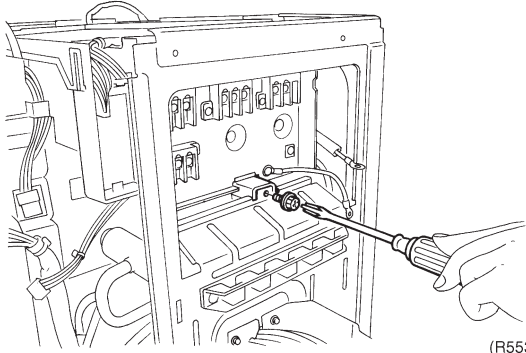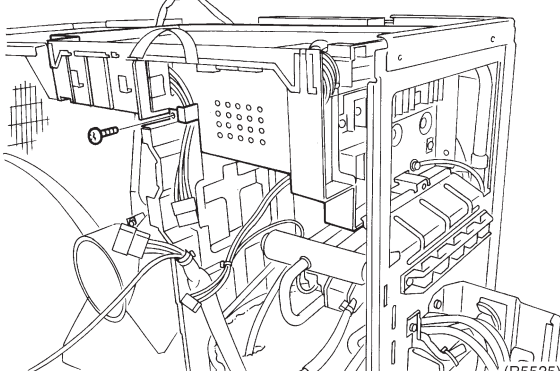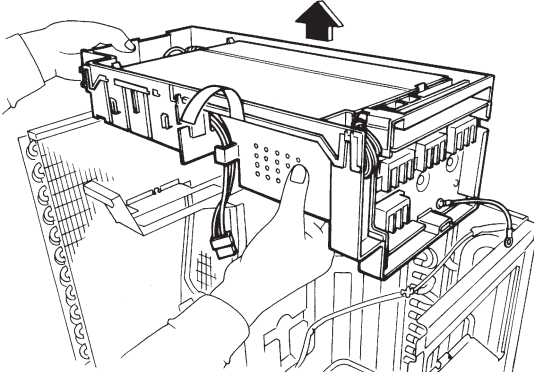

Step	Procedure	Procedure	Points
2	Detach the outdoor air thermistor.	 <p>(R5533)</p>	
3	Loosen the screw on the right side of the electrical box.	 <p>(R5534)</p>	
4	Loosen the 1 screw in front of the electrical box.	 <p>(R5535)</p>	
5	Lift up the electrical box to remove.	 <p>(R5536)</p>	



# 1.3 Removal of the PCB







**Procedure**










**Warning**





Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.


Step	Procedure	Points
1.	Remove the service PCB	
1	External appearance of the service PCB and the terminal board.	
2	Loosen the 1 screw of the terminal board and open it.	
3	Disconnect the connector [S52] and [S102] from the service PCB.	

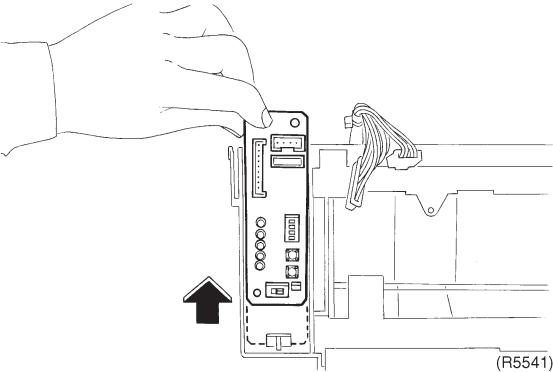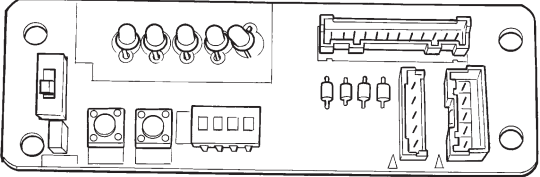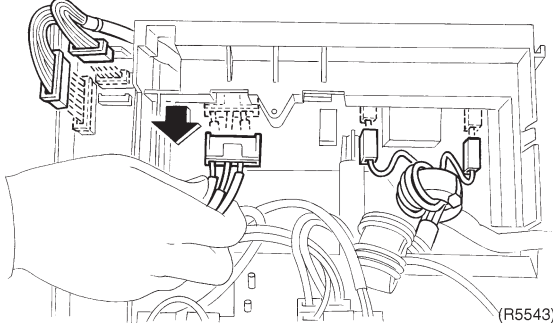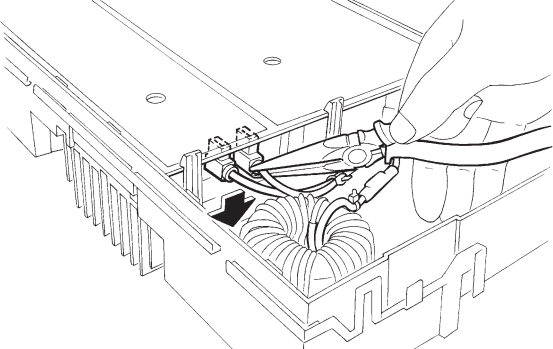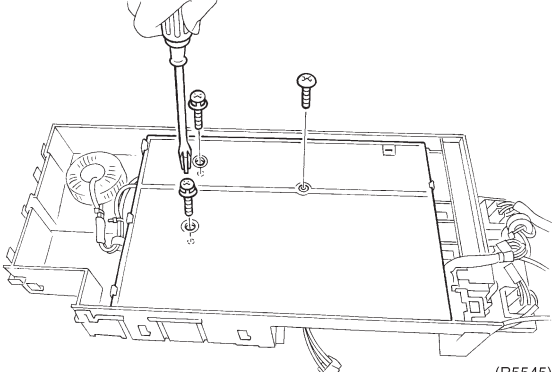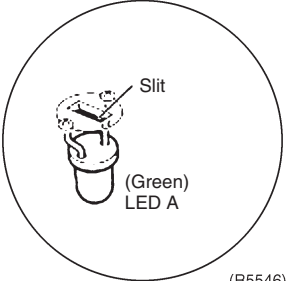Step	Procedure	Points
4	<p>Widen the upper hook and pull the service PCB upward to remove.</p>  	
2. Remove the control PCB		
1	<p>Disconnect the each connectors on the terminal board.</p> 	
2	<p>Disconnect the 2 connectors for reactor.</p> 	
3	<p>Loosen the 3 screws of the PCB.</p> 	 <p>(R5546)</p> <ul style="list-style-type: none"> <li>■ The PCB is down side up for improvement of quality.</li> <li>■ Service monitor (LED A).</li> <li>■ Check the LED through the slit.</li> </ul>

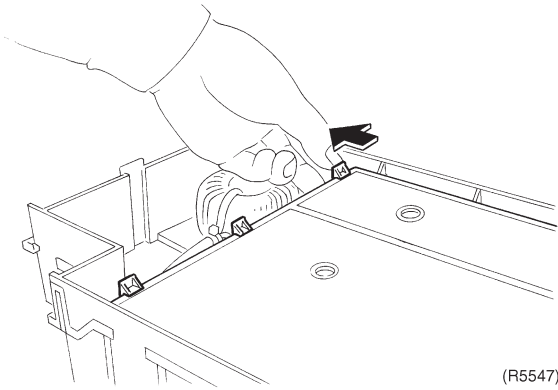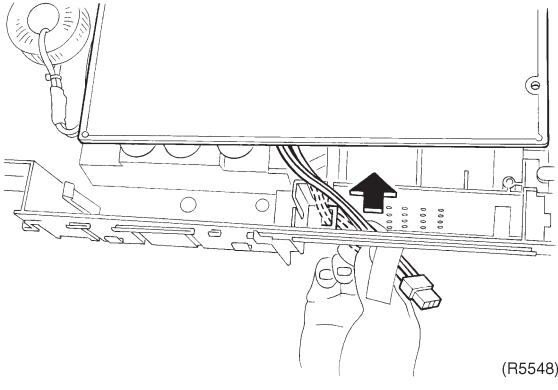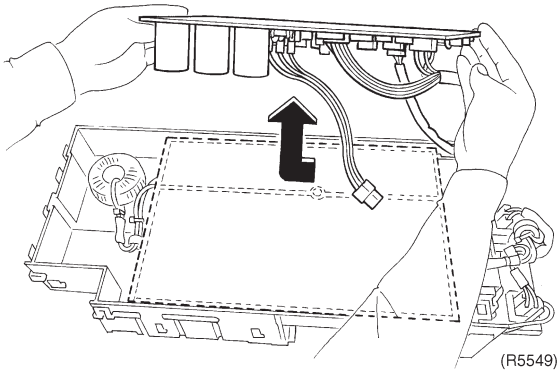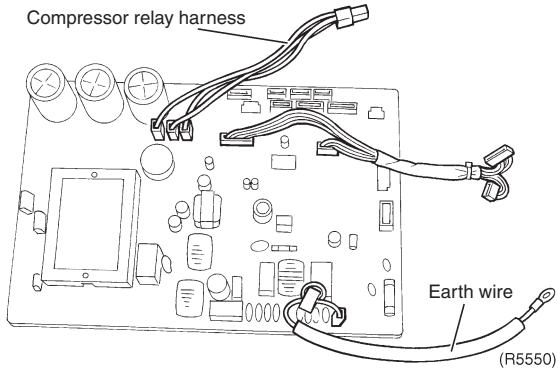Step	Procedure	Points
4	Undo the 3 hooks on the reactor side and slide the control PCB.	
	 <p>(R5547)</p>	
5	Undo the relay harness for compressor from the hook.	
	 <p>(R5548)</p>	
6	Lift up the control PCB to remove.	
	 <p>(R5549)</p>	<ul style="list-style-type: none"> <li>■ In working, be careful not to break the control PCB with the excessive force because the PCB and the radiation fin are adhered to one another.</li> <li>■ When assembling, make sure to use the silicon material.</li> <li>■ Silicon material Part No.: 1172698</li> </ul>
7	Each wire harness.	
	 <p>Compressor relay harness</p> <p>Earth wire</p> <p>(R5550)</p>	

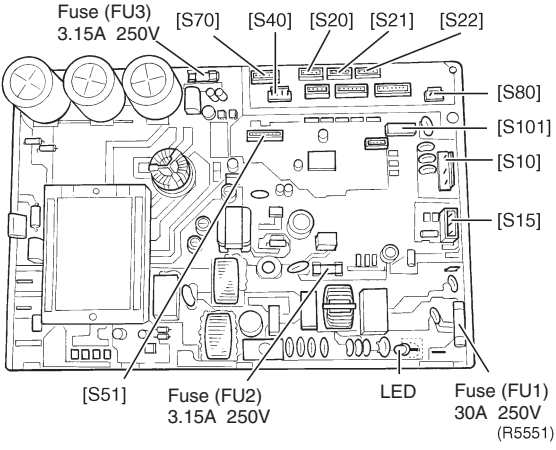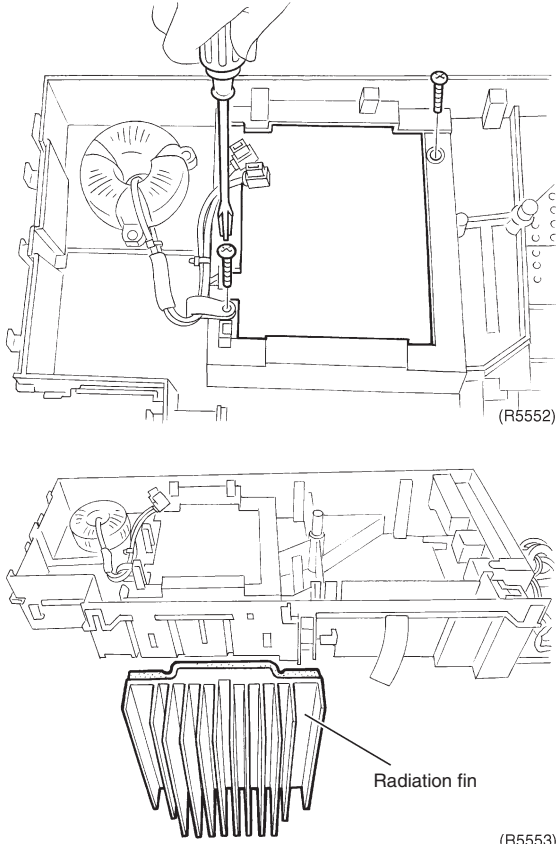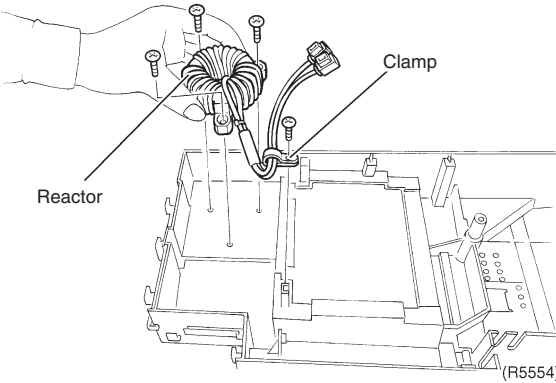Step		Procedure	Points
8	Names of parts on the control PCB.		
9	Loosen the 2 screws of the radiation fin.		
10	Loosen the 3 screws of the reactor and the 1 screw of the clamp.		

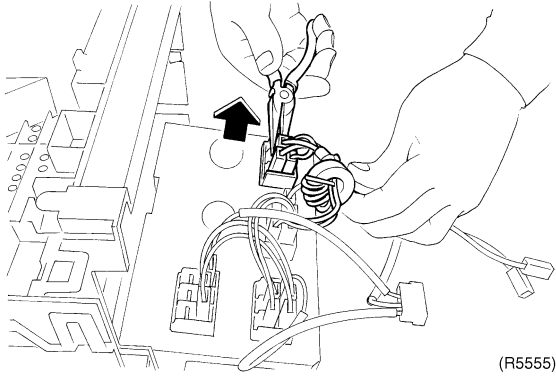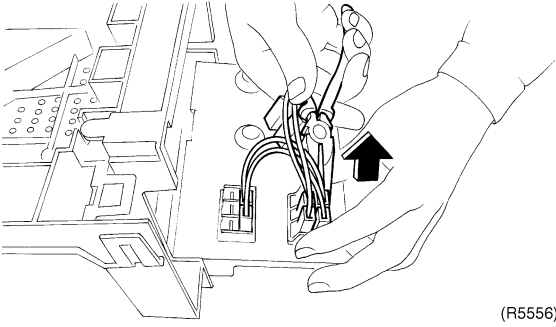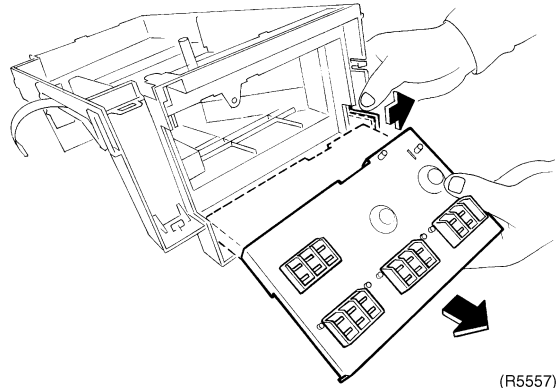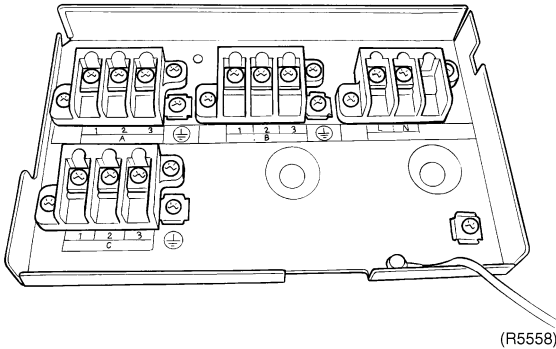Step	Procedure	Points
<p>3. Disconnect the wire harnesses</p>	 <p>(R5555)</p>  <p>(R5556)</p>	
<p>4. Remove the terminal board</p>	<p>1 Open the electrical box and remove the terminal board.</p>  <p>(R5557)</p>  <p>(R5558)</p>	

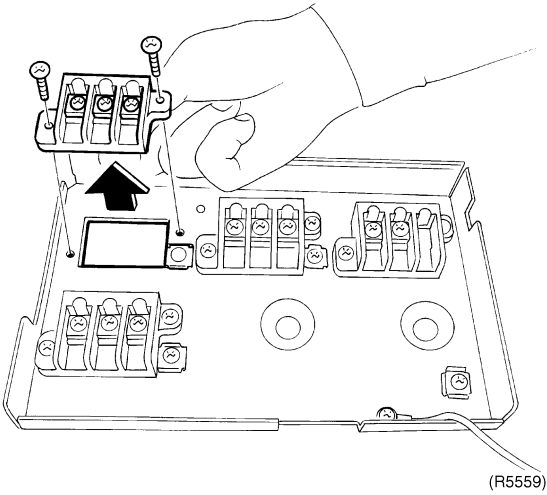Step	Procedure	Points
	 <p>(R5559)</p>	

# 1.4 Removal of the Propeller Fan / Fan Motor






**Procedure**



**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the fan motor fixing plate.	<p>(R5560)</p>	<ul style="list-style-type: none"> <li>■ Remove the outer panels and plates.</li> <li>■ Remove the electrical box.</li> </ul>
2	Take out the fan motor fixing plate toward yourself.	<p>(R5561)</p>	<p>(R5564)</p> <ul style="list-style-type: none"> <li>■ When assembling, fit the lower hooks.</li> </ul>
3	Loosen the washer fitted nut to remove the propeller fan.	<p>(R5562)</p> <p>(R5563)</p>	<p>(R5565)</p> <ul style="list-style-type: none"> <li>■ When assembling, align ▼ mark of the propeller fan with D-cut section of the motor shaft.</li> <li>■ When assembling, make sure ● mark of the fan motor goes up.</li> </ul>

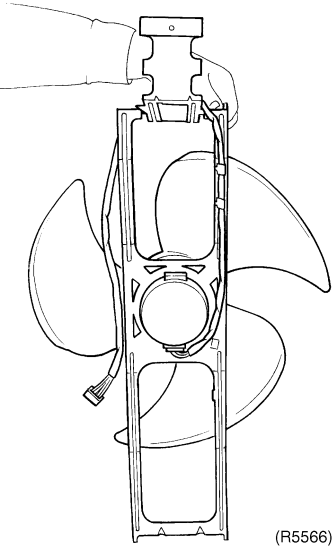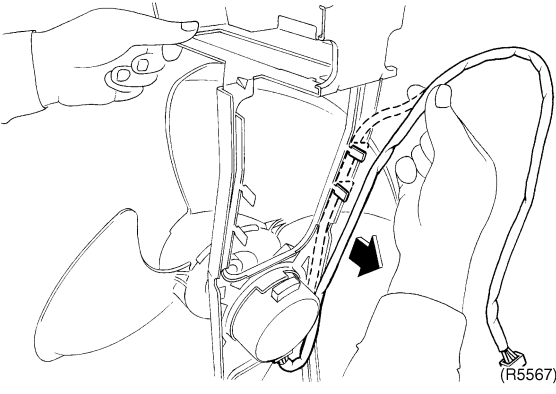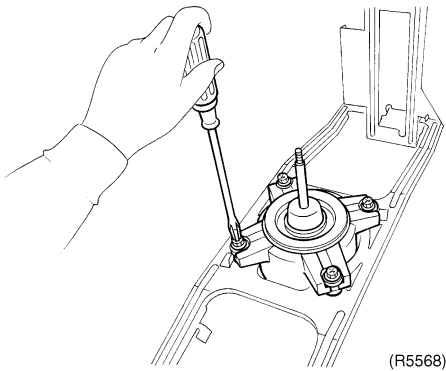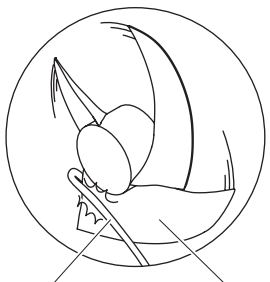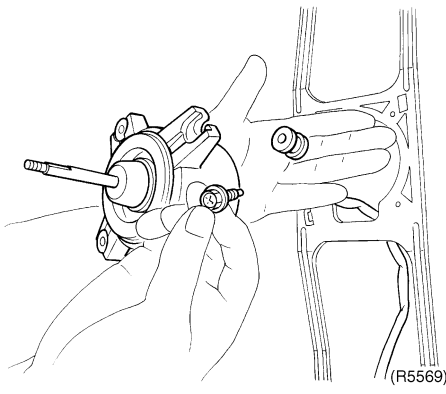Step	Procedure	Procedure	Points
4	Undo the 2 fixing hooks of the lead wire. Loosen the 4 screws of the fan motor.	 <p>(R5566)</p>  <p>(R5567)</p>  <p>(R5568)</p>	 <p>Lead wire      Propeller fan (R3249)</p> <ul style="list-style-type: none"> <li>■ When assembling, put the lead wire through the back of the motor. (so as not to be entangled with the propeller fan)</li> </ul>
5	Detach the 4 screws and 4 rubber vibration isolators.	 <p>(R5569)</p>	



# 1.5 Removal of the Sound Blanket





**Procedure**












**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the right side panel	<p>(R5570)</p>	<ul style="list-style-type: none"> <li>■ Remove the outer panels and plates.</li> <li>■ Remove the electrical box.</li> </ul>
1 Loosen the 3 screws on the right of the right side panel.	<p>(R5571)</p>	
2 Loosen the 2 screws on the back.	<p>Packing</p> <p>(R5572)</p>	
3 Remove the packing. There is a hook on the back.		

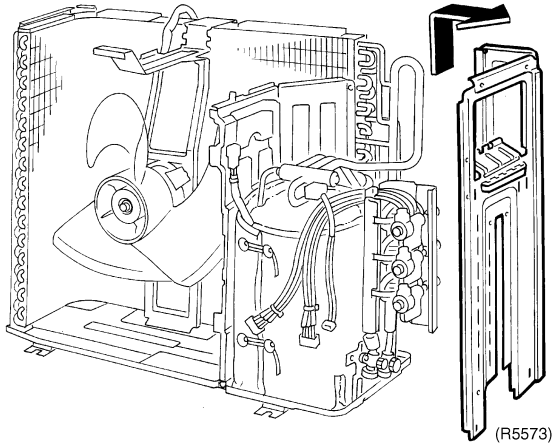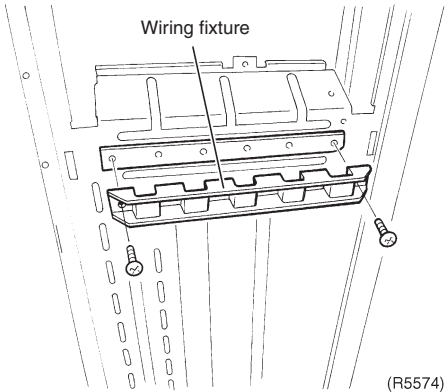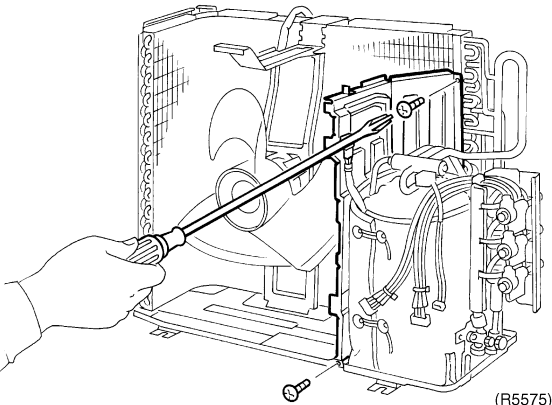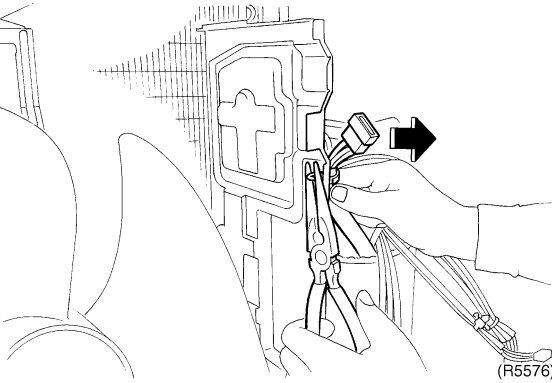Step	Procedure	Points
4	<p>Pull up the right side panel.</p> 	
	<p>5 Loosen the 2 screws of the wiring fixture.</p> 	
2. Remove the partition plate	<p>1 Loosen the 2 screws to remove the partition plate.</p>  <p>2 Detach the clamp of the relay harness for the compressor.</p> 	

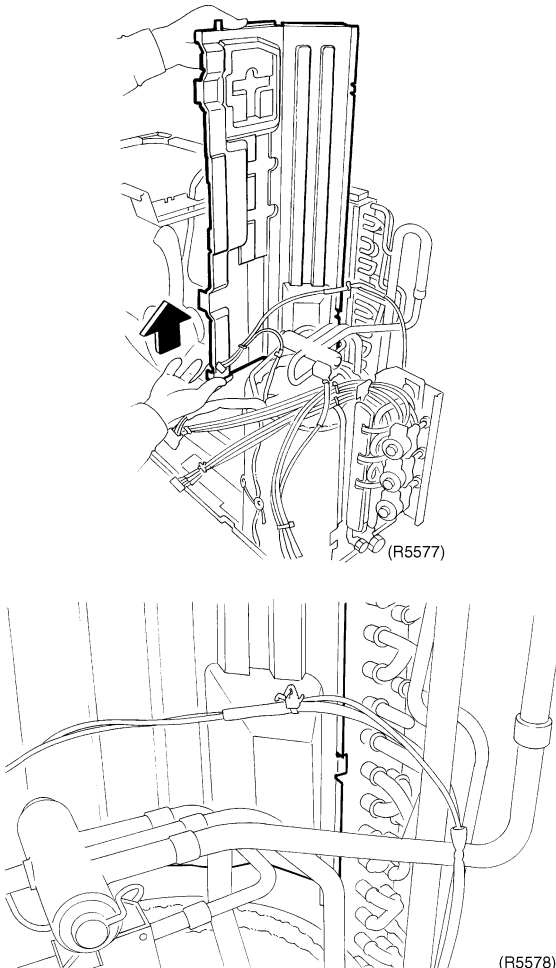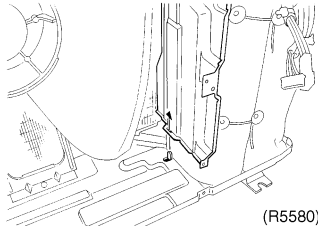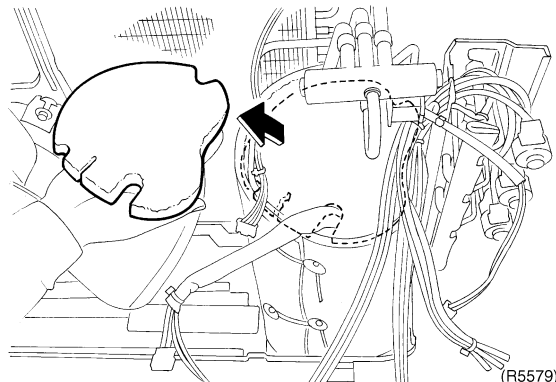Step		Procedure	Points
3	Pull up the partition plate.	 <p>(R5577)</p> <p>(R5578)</p>	 <p>(R5580)</p> <ul style="list-style-type: none"> <li>■ When assembling, make sure to catch the lower hook of the partition plate.</li> </ul>
3.	Remove the sound blanket	 <p>(R5579)</p> <p>(R5581)</p>	<ul style="list-style-type: none"> <li>■ Since the piping ports on the sound blanket are torn easily, remove the blanket carefully.</li> </ul>
1	Lift up the sound blanket (top-upper) to remove.		

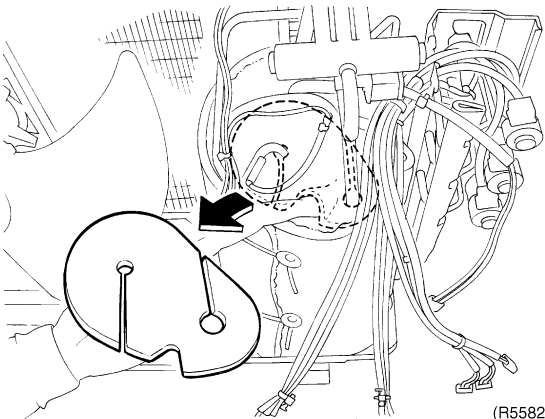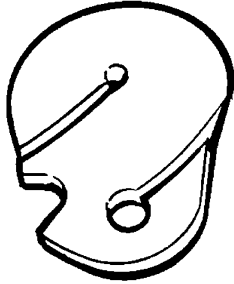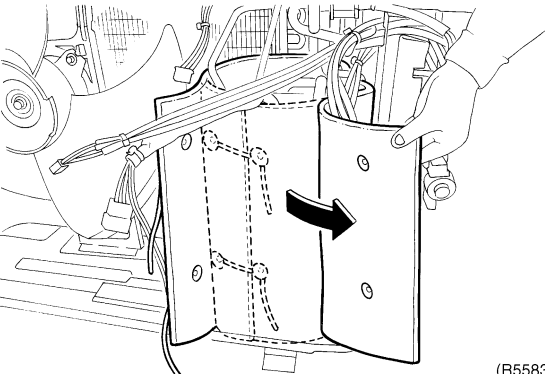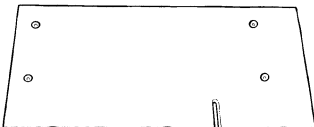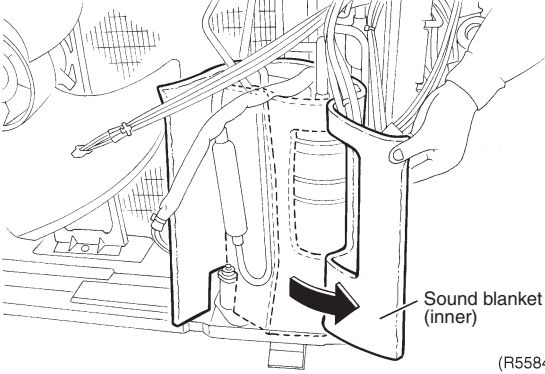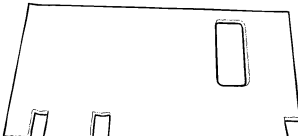Step		Procedure	Points
2	Remove the sound blanket (top-lower).	 <p>(R5582)</p>	 <p>(R5585)</p>
3	Undo the fixing strings, open the sound blanket (body) and pull it out.	 <p>(R5583)</p>	 <p>(R5586)</p>
4	Open the sound blanket (inner) and pull it out.	 <p>Sound blanket (inner)</p> <p>(R5584)</p>	 <p>(R5587)</p>



# 1.6 Removal of Electronic Expansion Valve Coil, Four Way Valve Coil and Thermistor



**Procedure**





**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

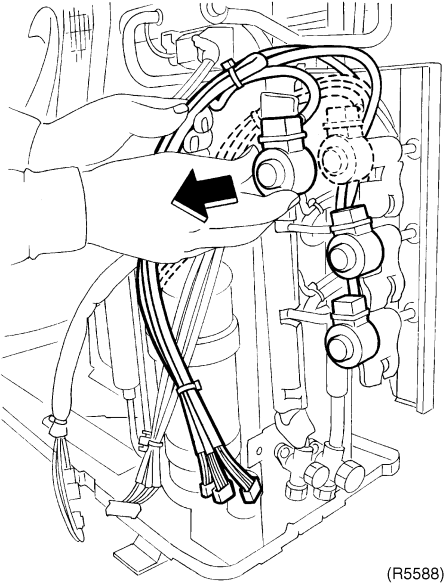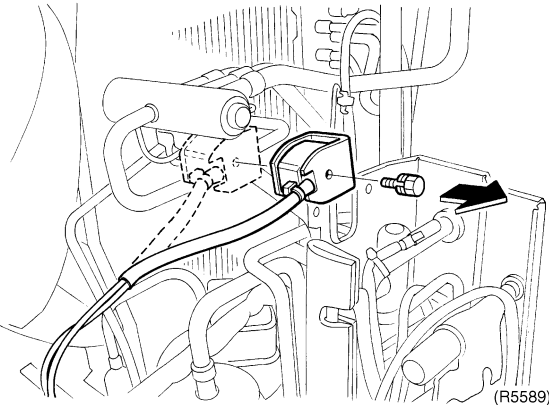Step	Procedure	Points
1. Remove the electronic expansion valve coil	<div data-bbox="193 483 475 1055"> <p>1 Remove the each electronic expansion valve coil.</p> </div> <div data-bbox="478 412 1086 1055">  <p>(R5588)</p> </div>	
2. Remove the four way valve coil	<div data-bbox="193 1126 475 2105"> <p>1 Loosen the 1 screw to remove the four way valve coil.</p> </div> <div data-bbox="478 1055 1086 2105">  <p>(R5589)</p> </div>	

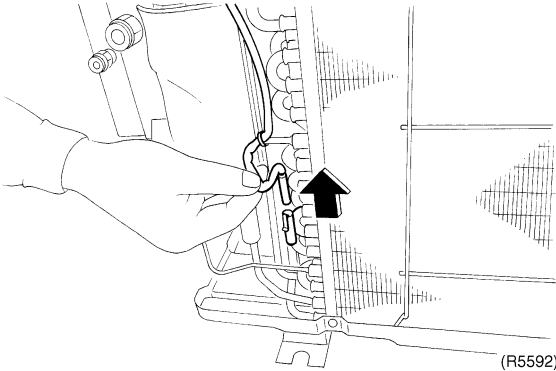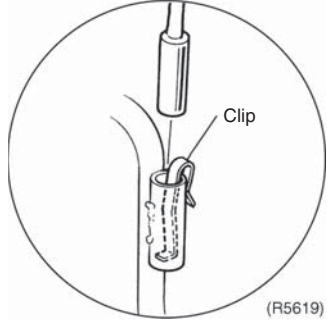Step	Procedure	Points
<p>3. Remove the liquid/gas pipe thermistor</p>	<p>1 Open the putty and remove the liquid pipe thermistor.                      [S90] : Outdoor air thermistor                      Heat exchanger thermistor                      Discharge pipe thermistor                      [S92] : Gas pipe thermistor                      Room A (Black)                      Room B (Gray)                      Room C (Brown)                      Room D (Red)                      [S93] : Liquid pipe thermistor                      Room A (Black)                      Room B (Gray)                      Room C (Yellow)                      Room D (Blue)</p> <p>2 Open the putty and remove the gas pipe thermistor.</p>	<ul style="list-style-type: none"> <li>■ Meet the edge of the thermistor and clip.</li> <li>■ The number of ports is different according to the models.</li> </ul>
<p>4. Remove the heat exchanger thermistor</p>	<p>1 Remove the heat exchanger thermistor.</p>	 

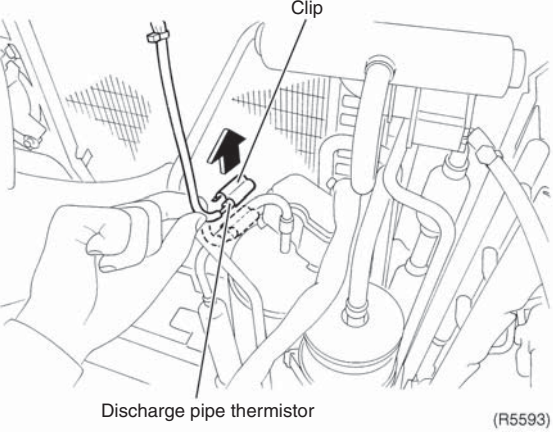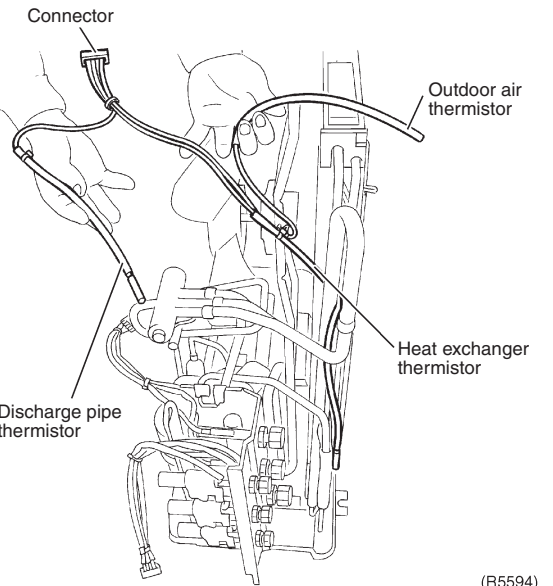Step	Procedure	Points
<p>5. Remove the discharge pipe thermistor</p>	<p>1 Undo the clip and remove the discharge pipe thermistor.</p> 	<ul style="list-style-type: none"> <li>■ Meet the edge of the thermistor and clip.</li> <li>■ Be careful not to loose the clip for the discharge pipe thermistor.</li> </ul>
<p>6. Remove the assembly of thermistor.</p>	<p>1 The figure shows the arrangement of the assembly of thermistor.</p> 	

# 1.7 Removal of the Distributor

**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the putty.	<p>Putty</p> <p>(R5595)</p> <p>Distributor</p> <p>Brazed parts</p> <p>(R5596)</p>	<p> <b>Warning</b> Ventilate when refrigerant leaks during the work. (If refrigerant contacts fire, it will cause to arise toxic gas.)</p> <p> <b>Caution</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas welding rod.</p> <p> <b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to recover the refrigerant gas with the recovery system.</p>







# 1.8 Removal of the Four Way Valve

**Procedure**



**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.


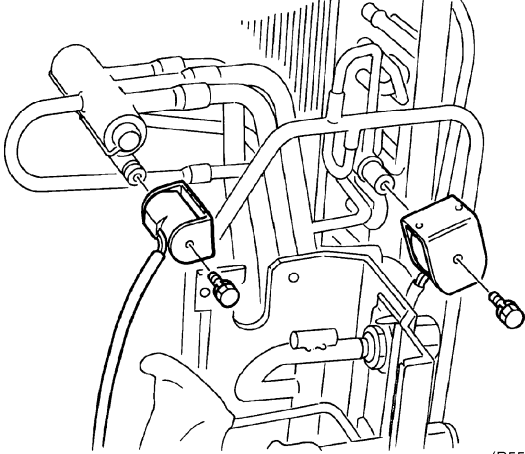
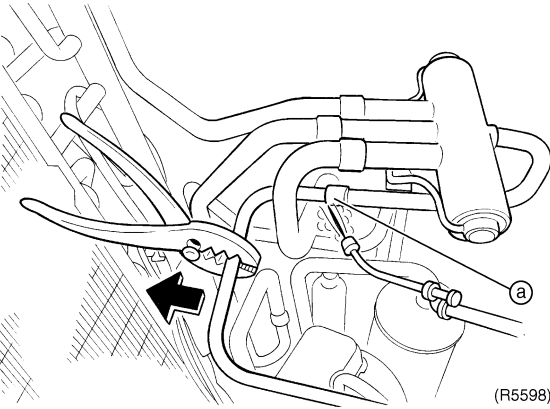
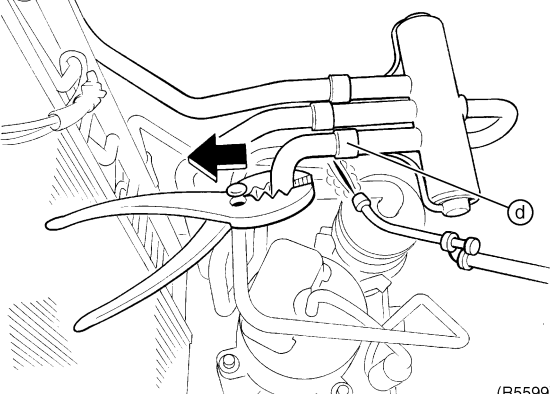
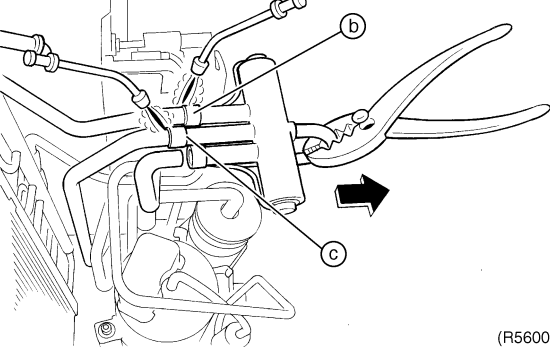
Step	Procedure	Points
<p>■ Be sure to apply nitrogen replacement when heating up the brazed part.</p>	 <p style="text-align: right;">(R5597)</p>	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing. In case of you cannot use the nitrogen gas, restore as quickly as possible.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth will not be dried and avoid excessive heating. (Keep below 120°C)</li> </ol>
<p>1 Loosen the 1 screw to remove the four way valve coil.</p> <p>2 Heat up the 4 brazed part of the four way valve. First, disconnect the part "a".</p> <p>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</p>	 <p style="text-align: right;">(R5598)</p>	<p>■ Be careful so as not to break the pipes by pressing it excessively by pliers when withdrawing it.</p> <p><b>In case of the difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit by a miniature copper tube cutter in order to make it easy to disconnect.</li> </ol>
<p>3 Disconnect the part "d".</p>	 <p style="text-align: right;">(R5599)</p>	<p><b>i Note:</b> Do not use a metal saw for cutting pipes by all means because the sawdust come into the circuit.</p>
<p>4 Disconnect the part "b" and "c".</p>	 <p style="text-align: right;">(R5600)</p>	




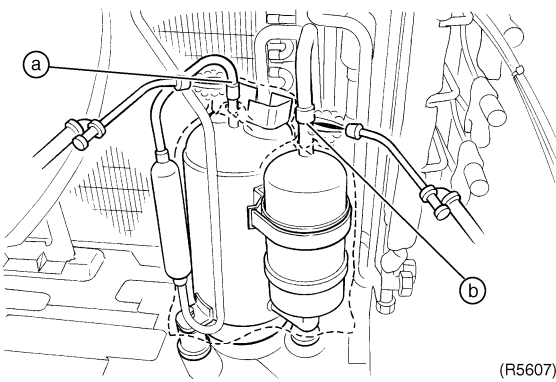
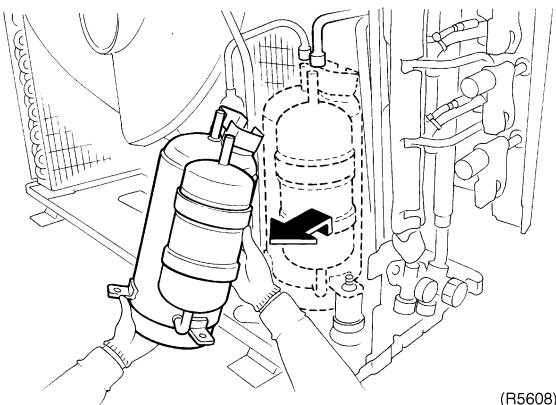
# 1.9 Removal of the Compressor

**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

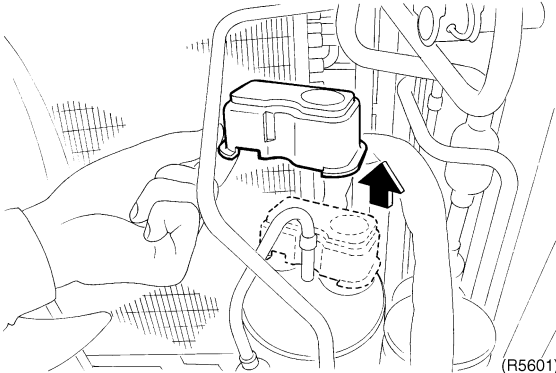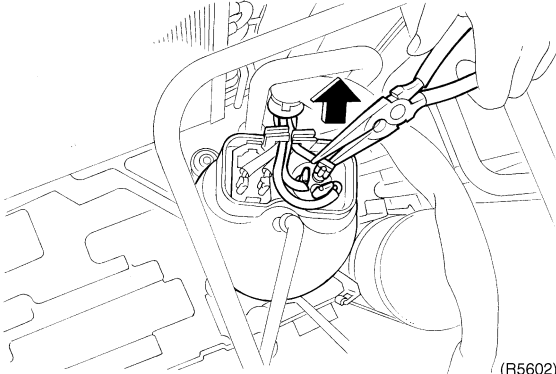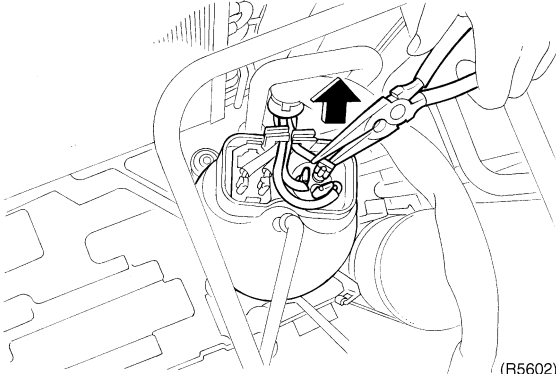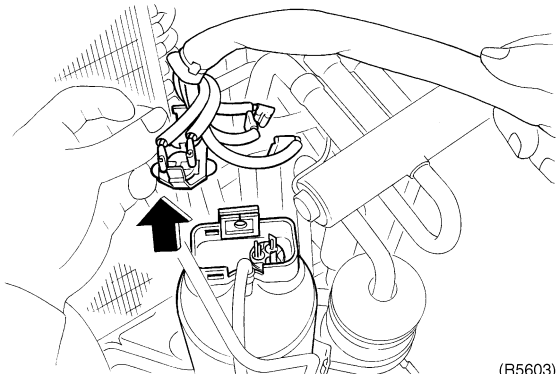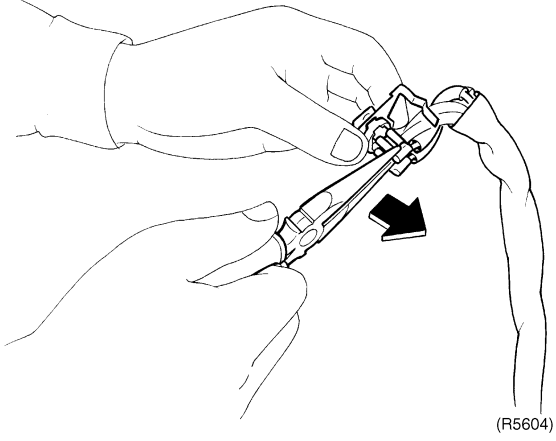Step	Procedure	Points
1. Remove the terminal cover		Make a note.
1 Remove the terminal cover.	 <p style="text-align: right;">(R5601)</p>	<ul style="list-style-type: none"> <li>■ Be careful so as not to burn the compressor terminals or the name plate.</li> </ul>
2 Disconnect the flag-shaped terminals.	 <p style="text-align: right;">(R5602)</p>	<p><b>Warning</b></p> <p>Since it may happen that refrigeration oil in the compressor will catch fire, prepare wet cloth so as to extinguish fire immediately.</p>
3 Detach the compressor lead wire.	 <p style="text-align: right;">(R5602)</p>	<p><b>Warning</b></p> <p>Ventilate when refrigerant leaks during the work. (If refrigerant contacts fire, it will cause to arise toxic gas.)</p>
4 Detach the overload protector.	 <p style="text-align: right;">(R5603)</p>	<p><b>Caution</b></p> <p>Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas welding rod.</p>
	 <p style="text-align: right;">(R5604)</p>	

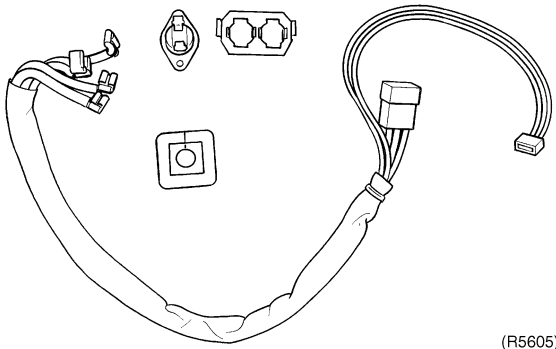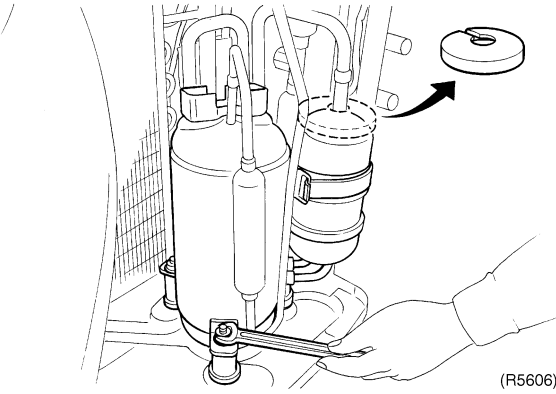Step	Procedure	Points
<p>5 Remove the 2 sheets of putty.</p> <p>6 There is one nut fixing the compressor. Remove the nut with an open-end spanner.</p>	 <p>(R5605)</p>  <p>(R5606)</p>	<p><b>Warning</b>   Ventilate when refrigerant leaks during the work.                      (If refrigerant contacts fire, it will cause to arise toxic gas.)</p>
<p>■ Before working, make sure that the refrigerant is empty in the circuit.</p>		
<p>■ Be sure to apply nitrogen replacement when heating up the brazed part.</p>		
<p>7 Heat up the brazed part of the discharge side and disconnect (part "a").</p> <p>8 Heat up the brazed part of the suction side and disconnect (part "b").</p>	 <p>(R5607)</p>	
<p>9 Lift the compressor up to remove.</p>	 <p>(R5608)</p>	

# Part 8 Others

1. Others .....	296
1.1 Test Run from the remote control.....	296
1.2 Jumper Settings .....	297

# 1. Others

## 1.1 Test Run from the remote control

### For Heat pump

In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

- Trial operation may be disabled in either mode depending on the room temperature.
- After trial operation is complete, set the temperature to a normal level.  
(26°C to 28°C in cooling mode, 20°C to 24°C in heating mode)
- For protection, the system disables restart operation for 3 minutes after it is turned off.

### For Cooling Only

Select the lowest programmable temperature.


- Trial operation in cooling mode may be disabled depending on the room temperature. Use the remote control for trial operation as described below.
- After trial operation is complete, set the temperature to a normal level (26°C to 28°C).
- For protection, the machine disables restart operation for 3 minutes after it is turned off.

#### Trial Operation and Testing

1. Measure the supply voltage and make sure that it falls in the specified range.
  2. Trial operation should be carried out in either cooling or heating mode.
  3. Carry out the test operation in accordance with the Operation Manual to ensure that all functions and parts, such as louver movement, are working properly.
- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
  - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

#### Trial operation from remote control

- (1) Press ON/OFF button to turn on the system.
- (2) Simultaneously press center of TEMP button and MODE buttons.
- (3) Press MODE button twice.  
(“T” will appear on the display to indicate that Trial Operation mode is selected.)
- (4) Trial run mode terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press ON/OFF button.

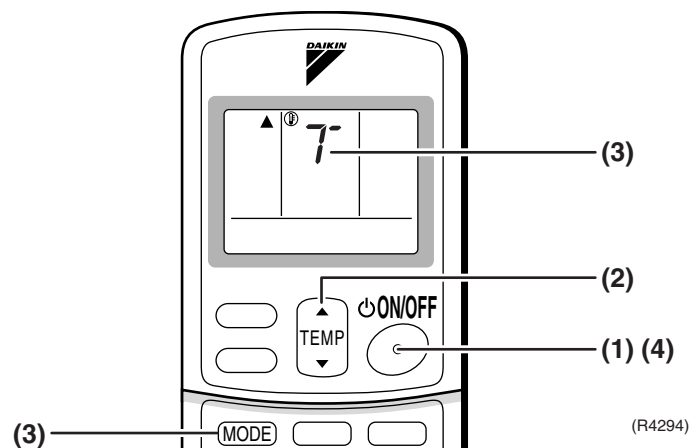


## 1.2 Jumper Settings

### 1.2.1 When Two Units are Installed in One Room

When two indoor units are installed in one room, the two infrared remote controls can be set for different addresses.

#### How to set the different addresses

- Control PCB of the indoor unit
  - (1) Remove the electrical box.
  - (2) Cut the address jumper JA on the control PCB.
  
- Infrared remote control
  - (1) Slide the front cover and take it off.
  - (2) Cut the address jumper J4.

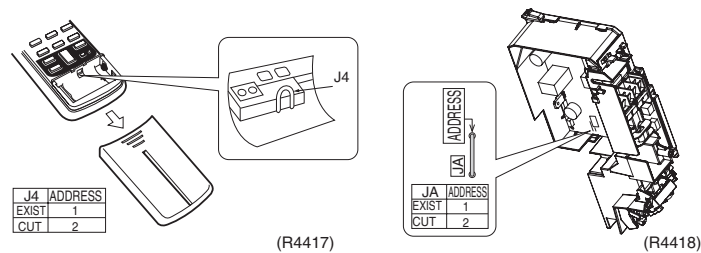


### 1.2.2 Jumper Setting

Jumper (On indoor PCB)	Function	When connected (factory set)	When cut
JC	Power failure recovery function	Auto start	Unit does not resume operation after recovering from a power failure. Timer ON-OFF settings are cleared.
JB	Fan speed setting when compressor is OFF on thermostat. (effective only at cooling operation)	Fan speed setting ; remote control setting	Fan rpm is set to "0" <Fan stop>


### 1.2.3 Adjusting the Angle of the Intelligent Eye Sensor

FTK(X)S20-35C, ATXS20-35D, ATXS20-35C

- Once installation of the indoor unit is complete, adjust the angle of the Intelligent eye sensor to ensure the detection area properly covers the room.  
(Adjustable angle : 15° to right and left of center)

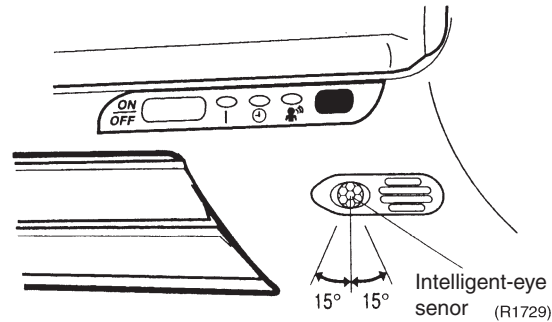

- Gently push and slide the sensor to adjust the angle. Aim so that the sensor is pointing to the center of the room, or to the part of the room that is most frequently used.

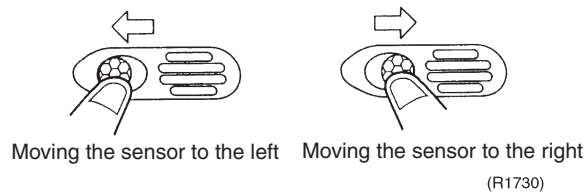

- After adjusting the angle, gently wipe the sensor with a clean cloth, being careful not to scratch the sensor.



#### Caution

- Do not hit or violently push the Intelligent eye sensor. This can lead to damage and malfunction.
- Do not place large objects near the sensor. Also keep heating units or humidifiers outside the sensor's detection area.

# Part 9 Appendix

1. Piping Diagrams .....	300
1.1 Indoor Units .....	300
1.2 Outdoor Units .....	306
2. Wiring Diagrams .....	308
2.1 Indoor Units .....	308
2.2 Outdoor Units .....	313




# 1. Piping Diagrams

## 1.1 Indoor Units


### 1.1.1 Wall Mounted Type

FTXG25EV1BW(S), FTXG35EV1BW(S),  
ATXG25EV1B, ATXG35EV1B

CTXG50EV1BW(S), ATXG50EV1B

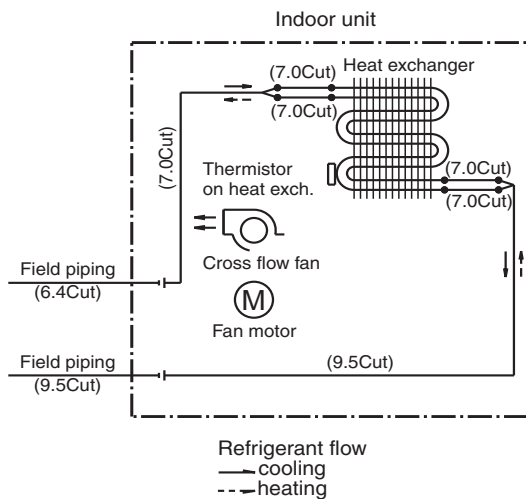


4D045301B

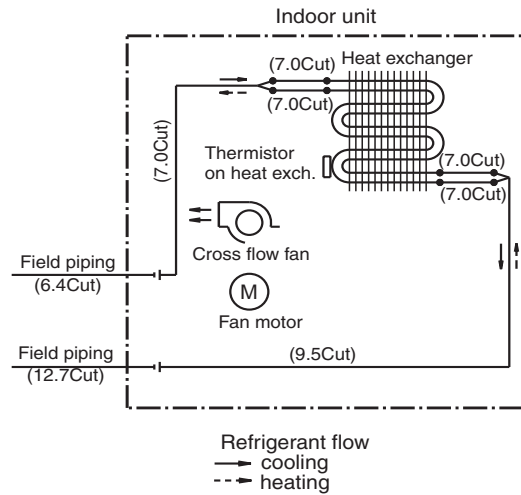


4D050924

FTKS20D3VMW(L), FTKS25D3VMW(L),  
FTKS35D3VMW(L)

FTXS20D3VMW(L), FTXS25D3VMW(L),  
FTXS35D3VMW(L), ATXS20E2V1B,  
ATXS25E2V1B, ATXS35E2V1B

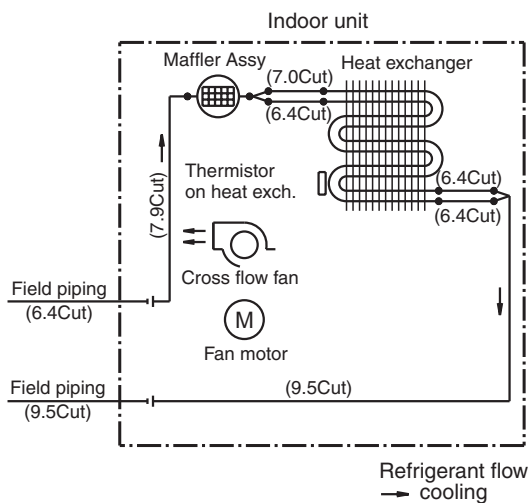


4D050757A

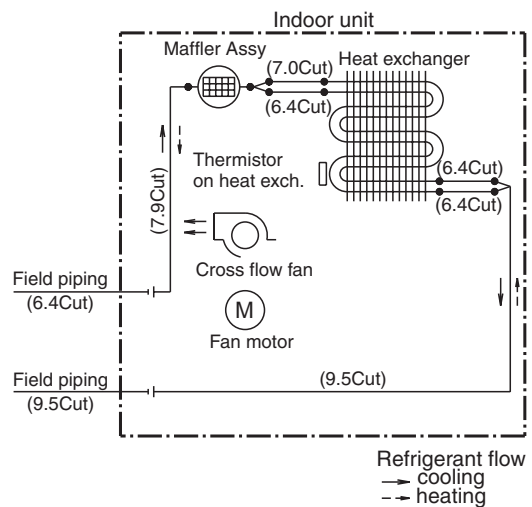


4D047912E

**FTKS50D2V1W(L)**

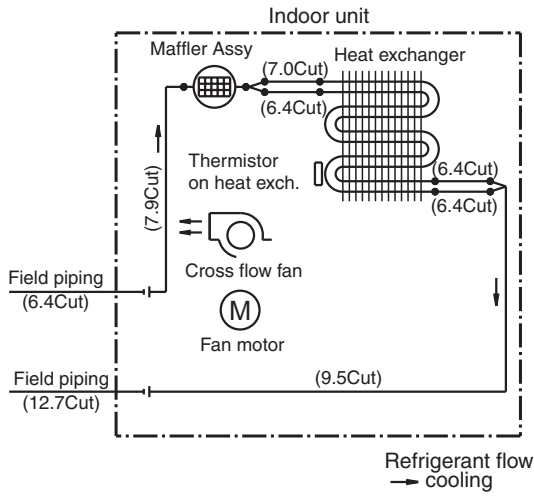


4D051577

**FTXS50D2V1W(L), ATXS50E2V1B**

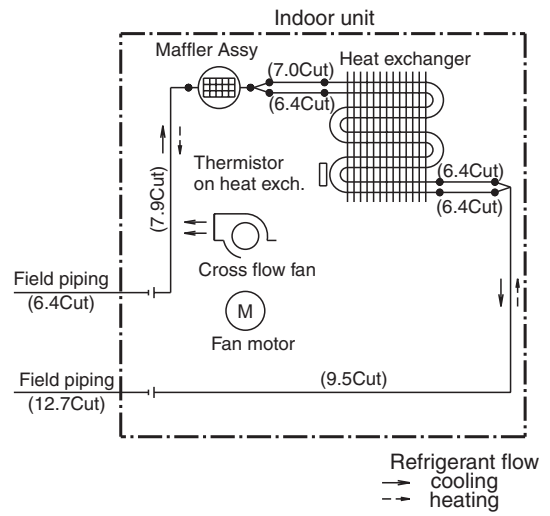


4D047913D

**FTKS20CAVMB, FTKS25CAVMB, FTKS35CAVMB**

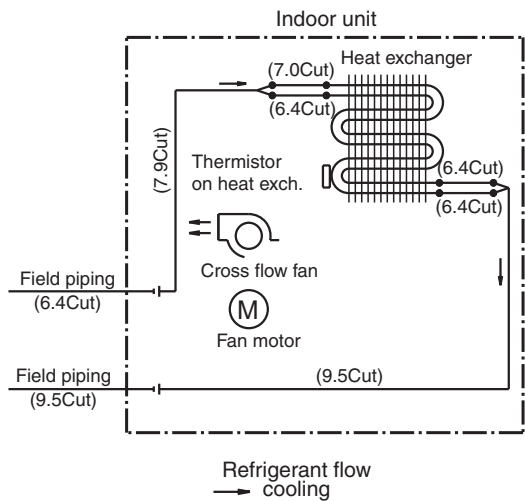


4D033698E

**FTXS20CAVMB, FTXS25CAVMB, FTXS35CAVMB, ATXS20DAVMB, ATXS25DAVMB, ATXS35DAVMB**

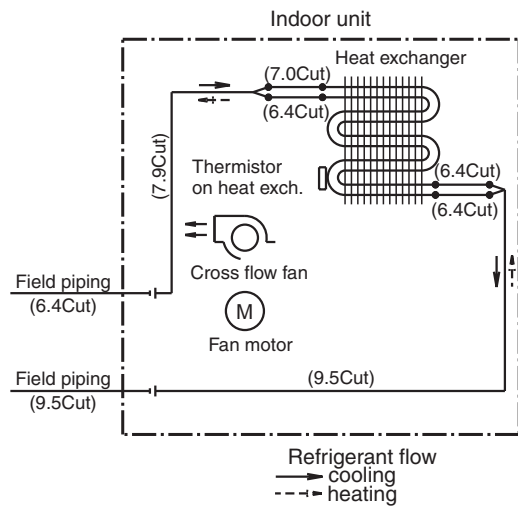

4D049319A


FTK(X)S50EV1B, ATX50EV1B

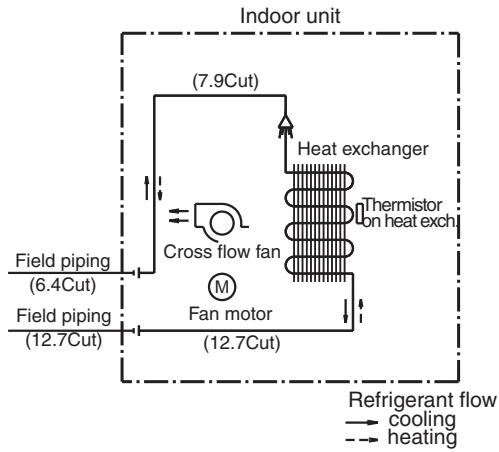

4D040081N

1.1.2 Duct Connected Type

FDK(X)S25CAVMB, FDK(X)S35CAVMB, FDK(X)S50CVMB, FDK(X)S25EAVMB, FDK(X)S35EAVMB

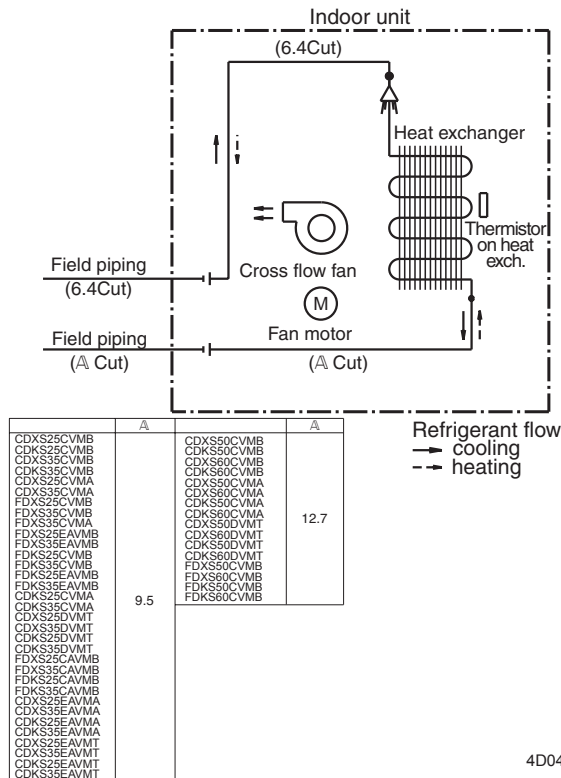


4D045449J


### 1.1.3 Floor / Ceiling Suspended Dual Type

FLKS25BAVMB, FLKS35BAVMB

FLKS50BAVMB

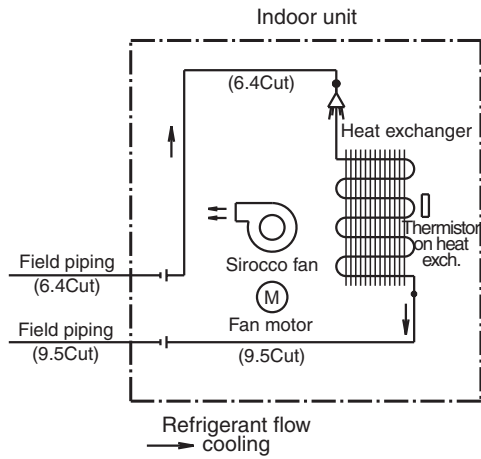


4D034012E

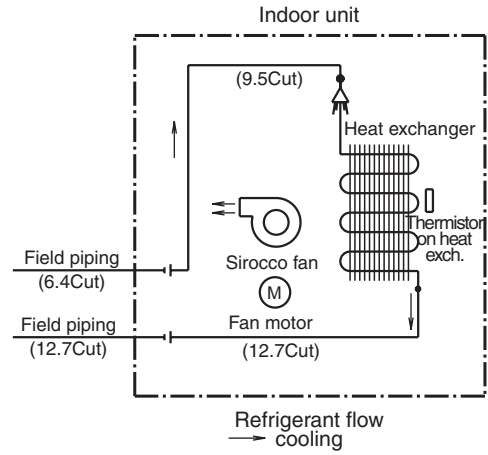


4D048723A

FLXS25BAVMB, FLXS35BAVMB

FLXS50BAVMB

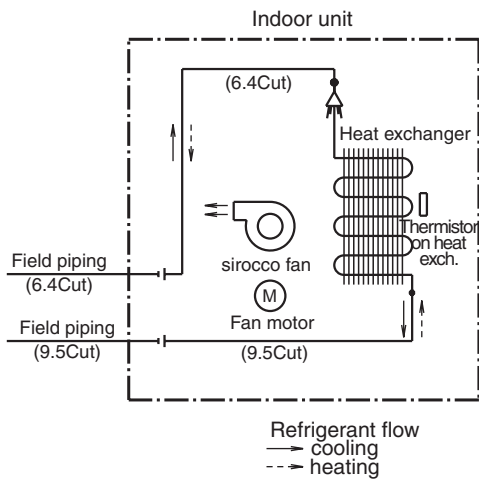


4D048722A

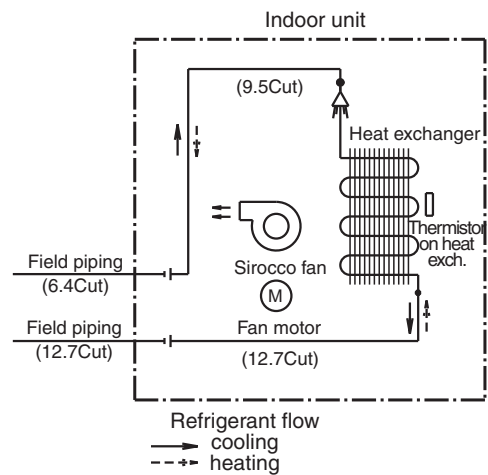

4D048724A

### 1.1.4 Floor Standing Type


FVKS25BAVMB, FVKS35BAVMB

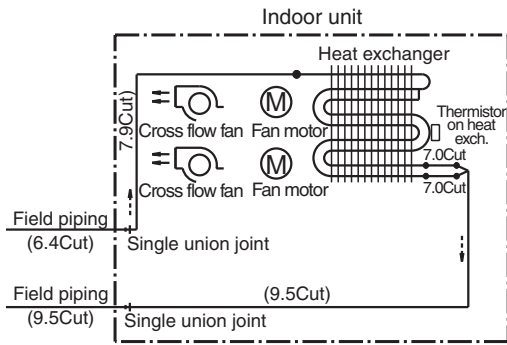

Refrigerant flow  
 --- cooling

4D050798


FVKS50BAVMB

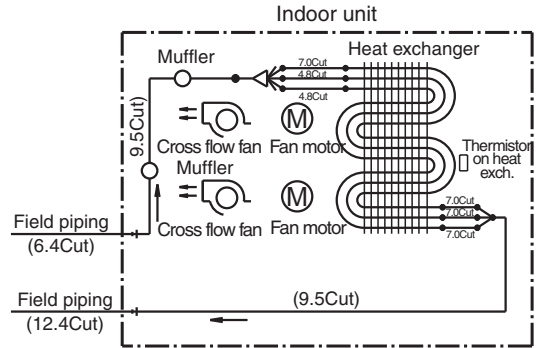

Refrigerant flow  
 → cooling

4D050804


FVXS25BAVMB, FVXS35BAVMB

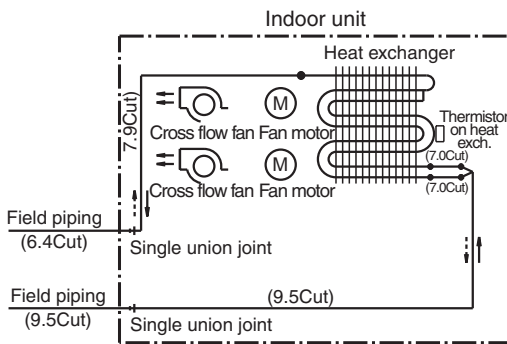

Refrigerant flow  
 --- cooling  
 → heating

4D034714C

FVXS50BAVMB

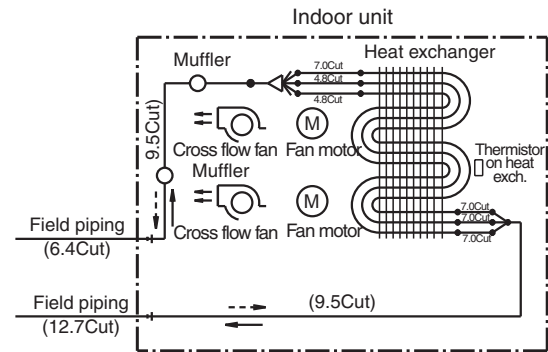


Refrigerant flow  
 → cooling  
 --- heating

4D020911D

## 1.1.5 Ceiling Suspended Type

### FHQ35/50BVV1B

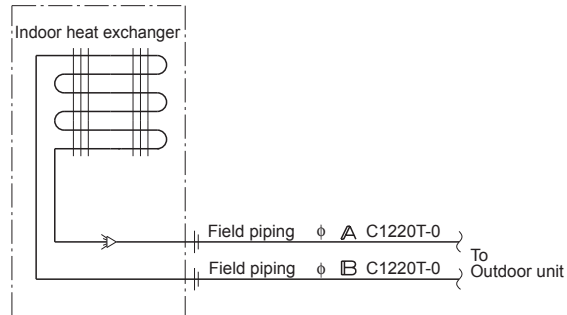


Indoor unit

MODEL	A	B
FHQ35BUV1B FHQ35BVV1B FCQ35BVE	6.4	9.5
FHQ50 • 60BUV1B FHQ50 • 60BVV1B FCQ50 • 60BVE FBQ60BV1, FBQ60BVL	6.4	12.7
FUQ71, 100, 125BUV1B FUQ71, 100, 125BVV1B FHQ71, 100, 125BUV1B FHQ71, 100, 125BVV1B FAQ71, 100BUV1B FAQ71, 100BVV1B FXUQ70, 100, 125MV1 FHQ71, 100, 125BAV3B FCQ71, 100, 125, 140DV3B FCQ71, 100, 125, 140DAV3B FCQ71BVE FBQ71BV1, FBQ71BVL	9.5	15.9

4D037995F


# 1.2 Outdoor Units

## 2MXS52E2(3)V1B, 2AMX52E2(3)V1B

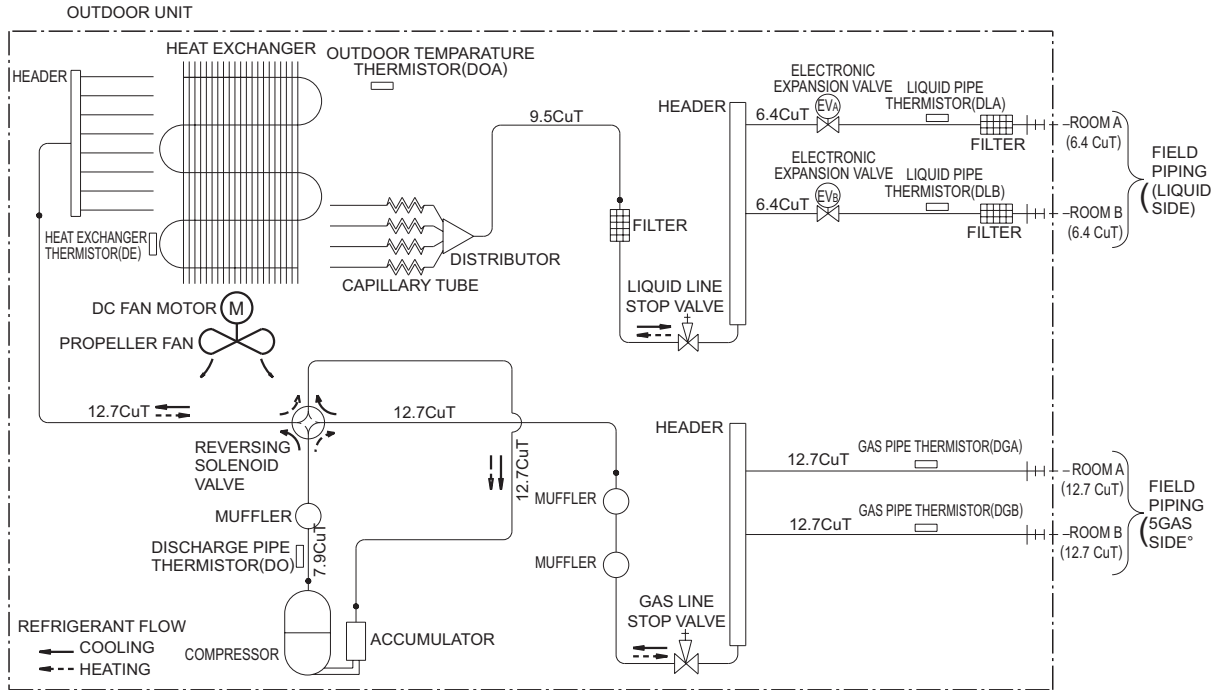


3D052054A

## 3MXS52E2(3)V1B, 3AMX52E2(3)V1B

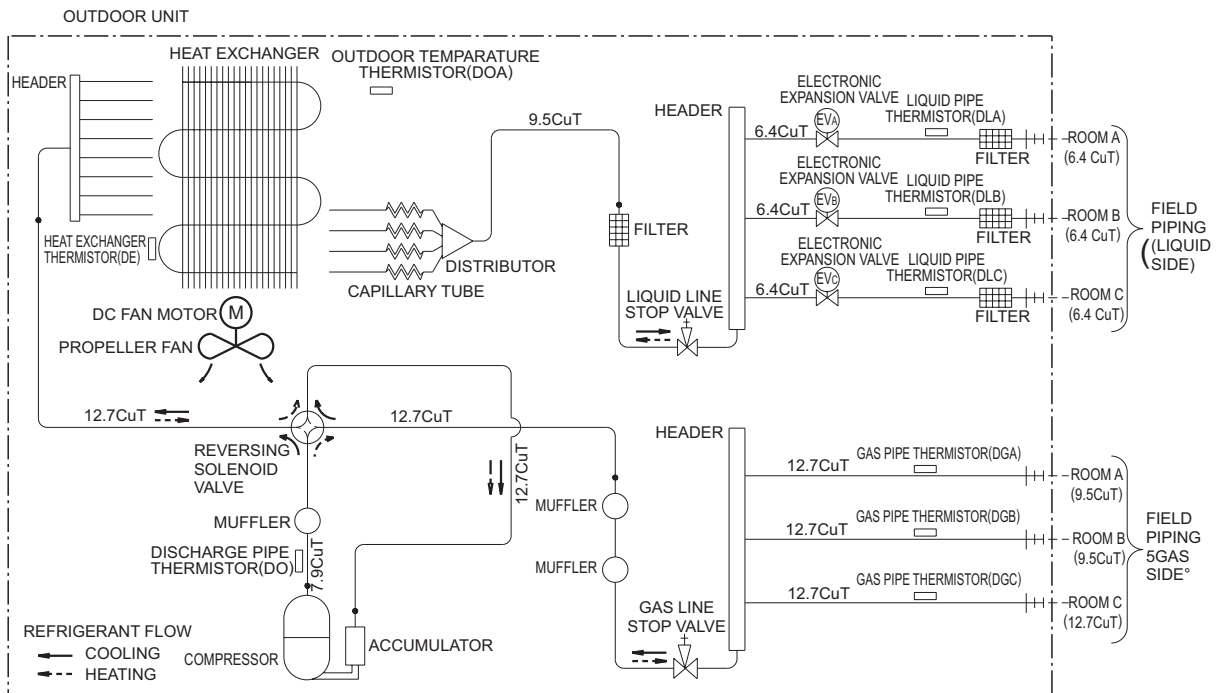


3D052055B

3MKS50E2(3)V1B

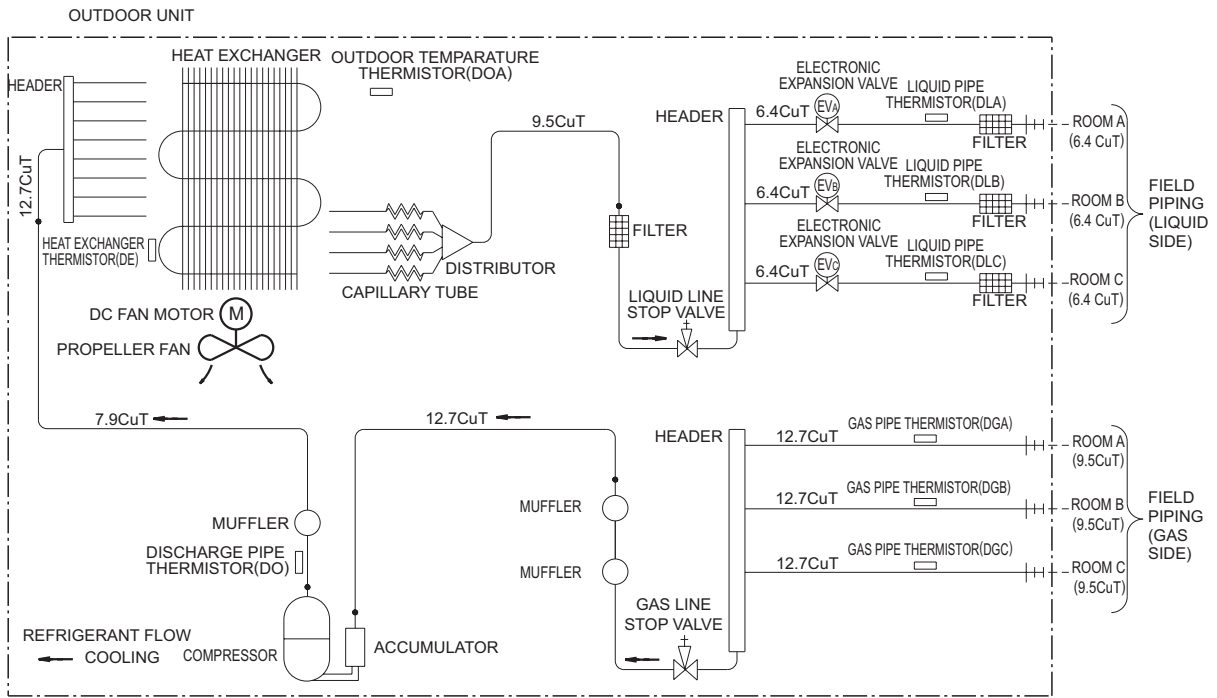

3D052056B

4MKS58E2(3)V1B

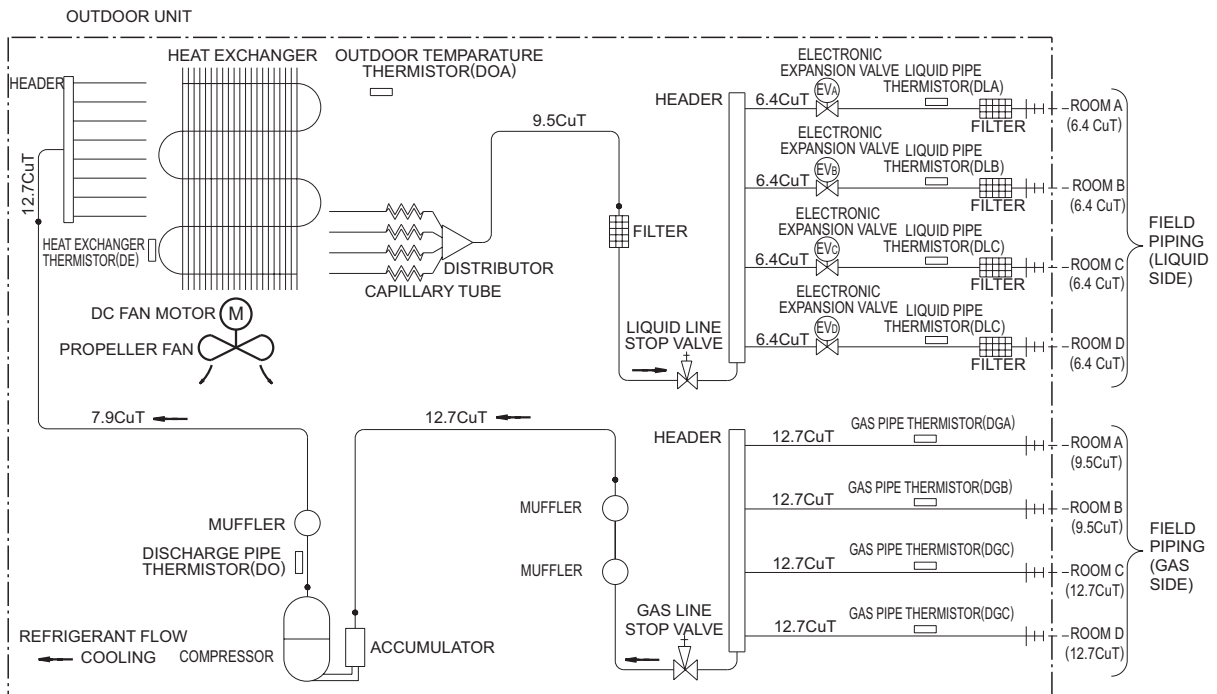

3D052057A




## 2. Wiring Diagrams

### 2.1 Indoor Units


#### 2.1.1 Wall Mounted Type

FTXG25EV1BW(S), FTXG35EV1BW(S), CTXG50EV1BW(S), ATXG25EV1B, ATXG35EV1B, ATXG50EV1B

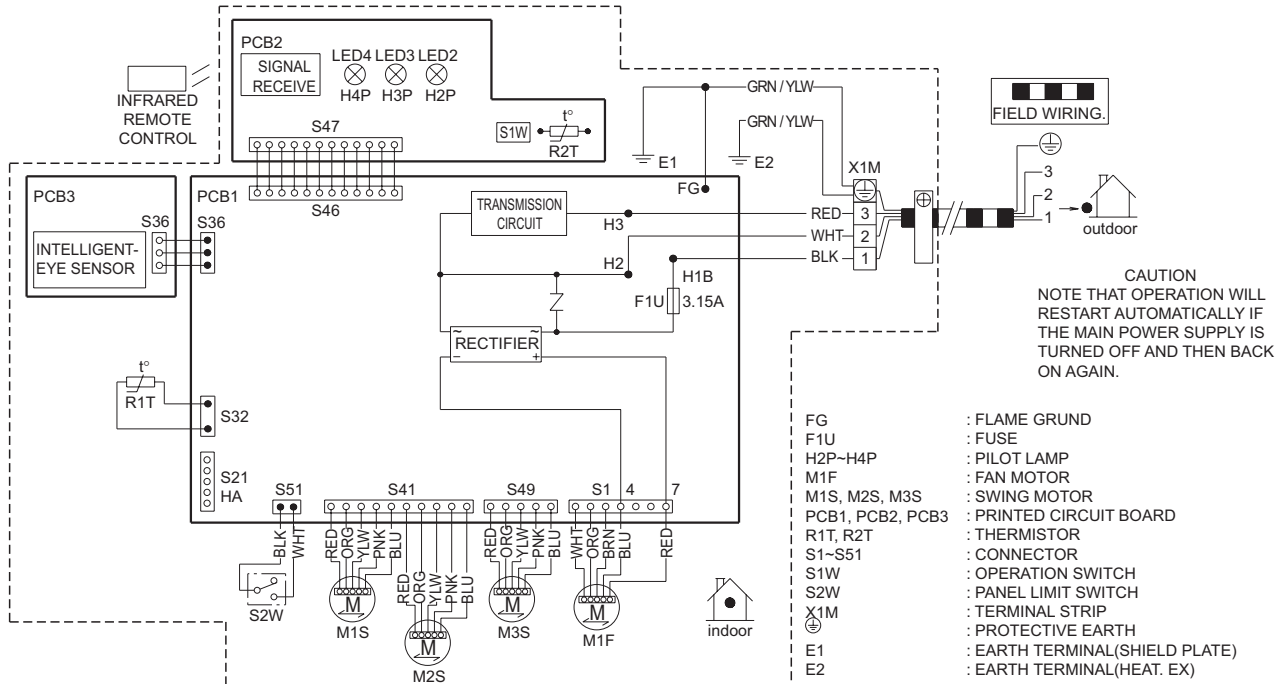


3D050493

FTK(X)S20D3VMW(L), FTK(X)S25D3VMW(L), FTK(X)S35D3VMW(L), ATXS20E2V1B, ATXS25E2V1B, ATXS35E2V1B

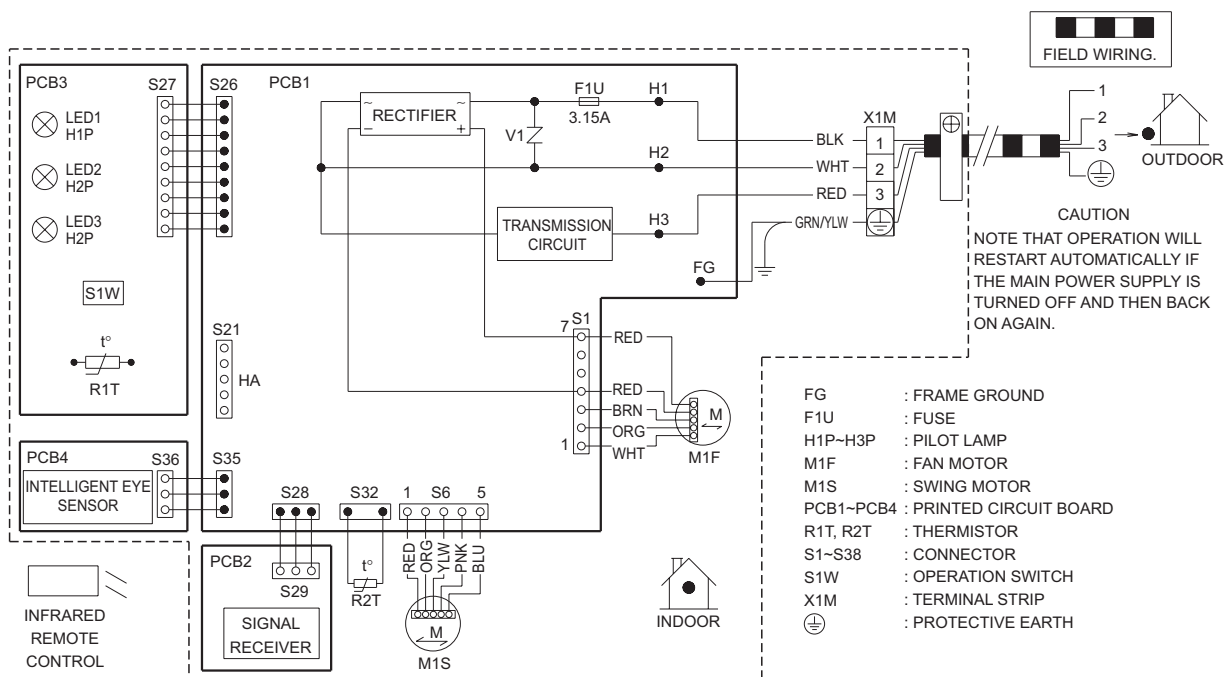


3D051268A

FTK(X)S50D2V1W(L), ATXS50E2V1B

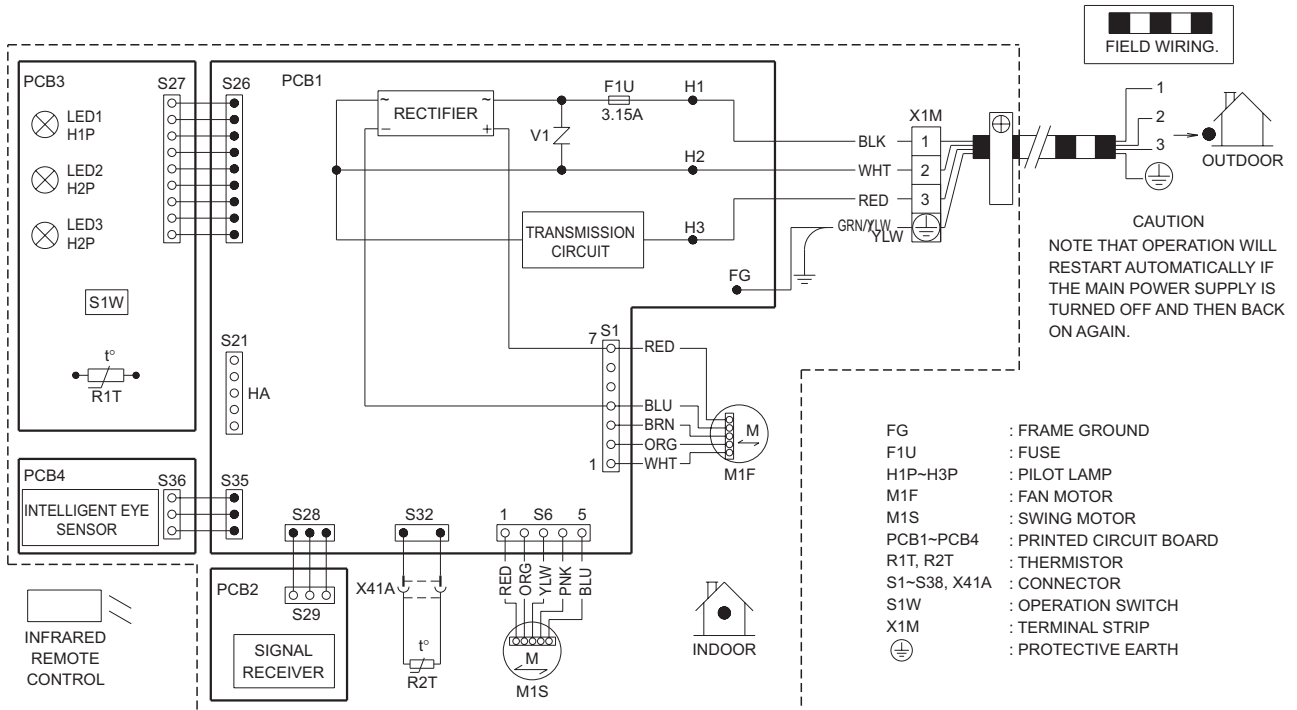


3D051652

FTK(X)S20CAVMB, FTK(X)S25CAVMB, FTK(X)S35CAVMB, ATXS20DAVMB, ATXS25DAVMB, ATXS35DAVMB

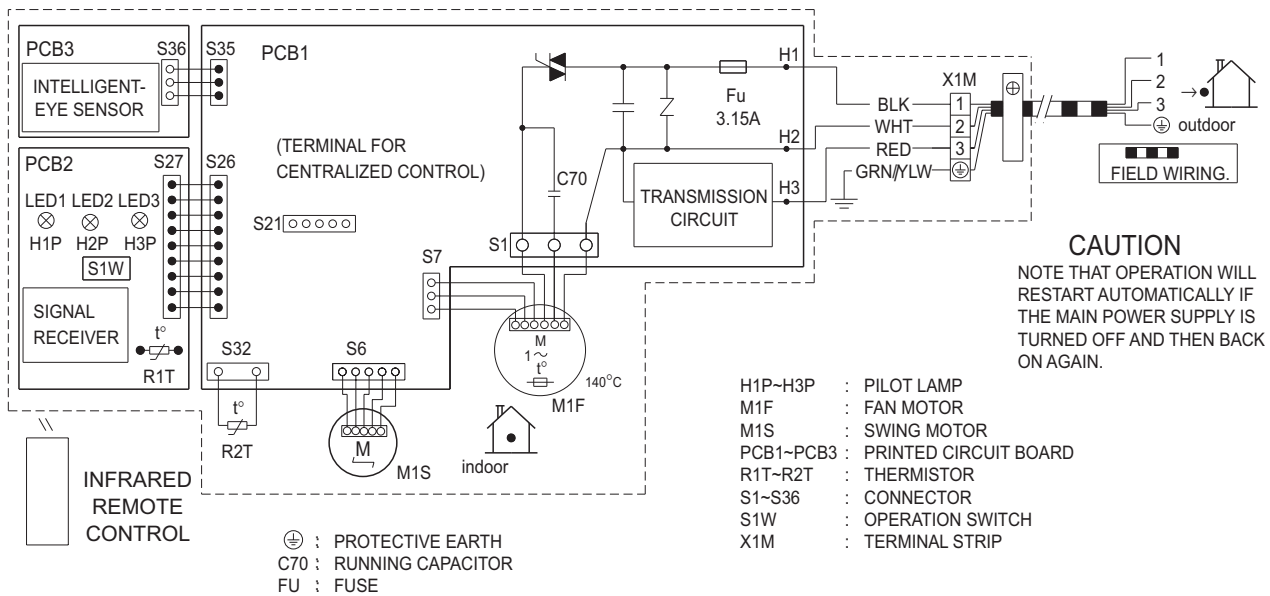

3D033599G


FTK(X)S50EV1B, ATX50EV1B

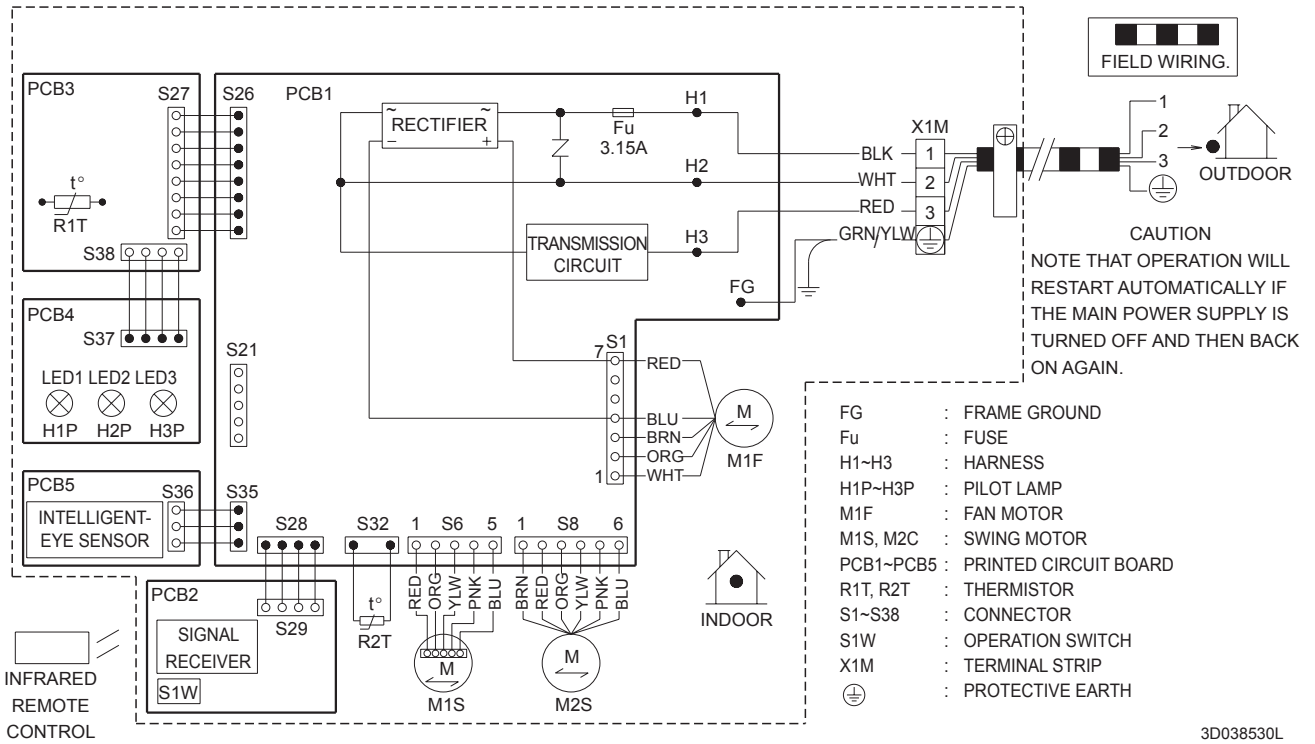

3D038530L

2.1.2 Duct Connected Type


FDK(X)S25CAVMB, FDK(X)S35CAVMB, FDK(X)S50CVMB, FDK(X)S25EAVMB, FDK(X)S35EAVMB

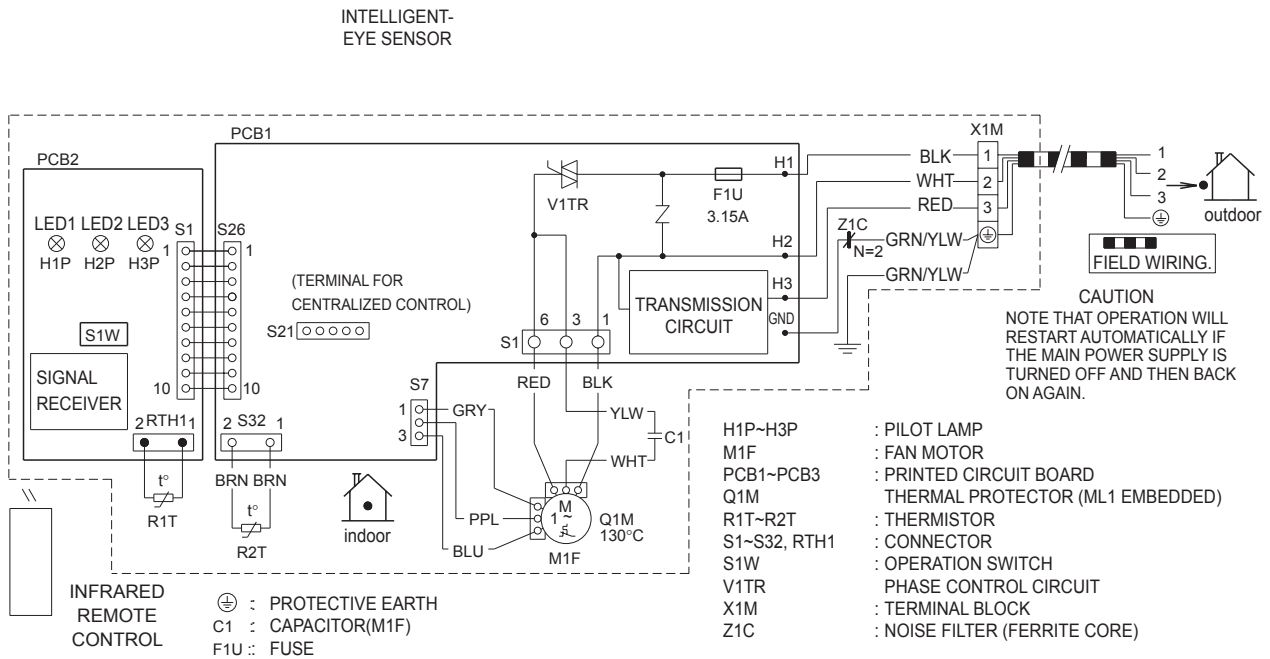

3D045012K

### 2.1.3 Floor / Ceiling Suspended Dual Type


FLK(X)S25BAVMB, FLK(X)S35BAVMB, FLK(X)S50BAVMB

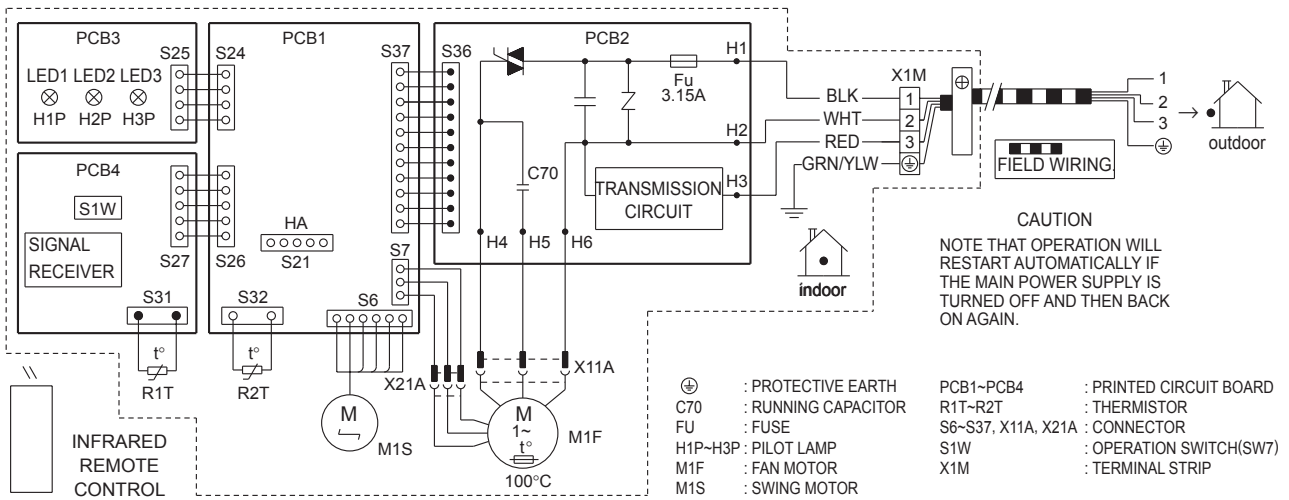

3D033909E

### 2.1.4 Floor Standing Type

FVK(X)S25BAVMB, FVK(X)S35BAVMB, FVK(X)S50BAVMB

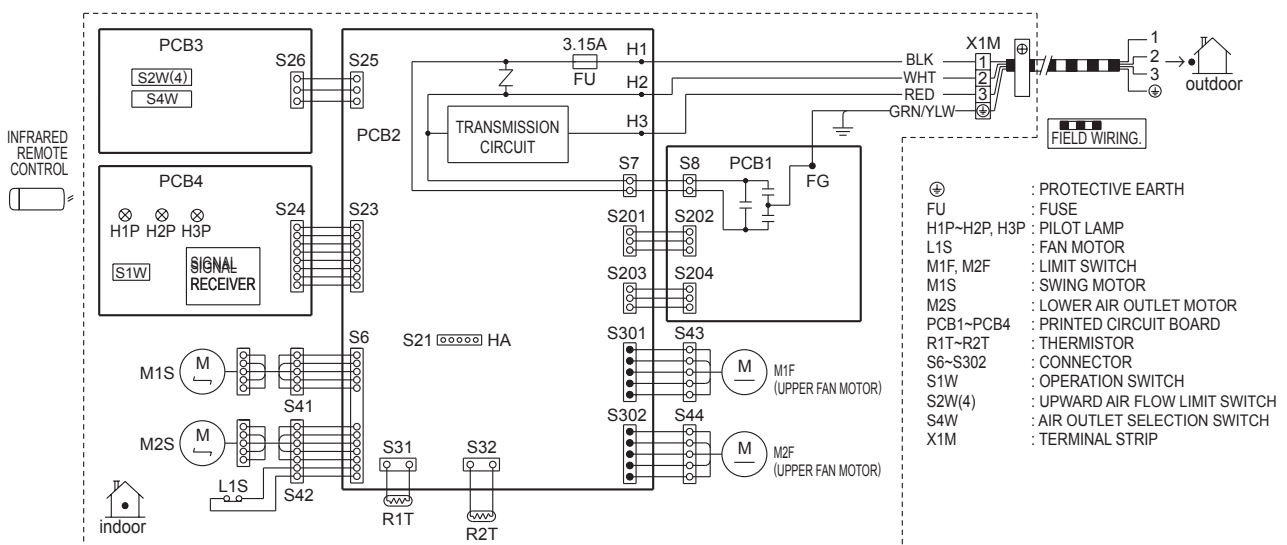


3D034713C

## 2.1.5 Ceiling Suspended Type



### FHQ35/50/60BVV1B

IN CASE OF SIMULTANEOUS OPERATION SYSTEM

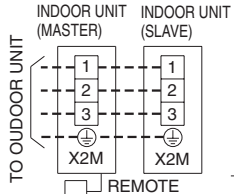

**NOTES**

1. [Symbol] TERMINAL  
[Symbol] : CONNECTOR
2. [Symbol] : FIELD WIRING
3. IN CASE USING CENTRAL REMOTE CONTROL. CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL
4. X24A IS CONNECTED WHEN THE INFRARED REMOTE CONTROL KIT IS BEING USED
5. REMOTE CONTROL MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM. CONFIRM ENGINEERING MATERIALS AND CATALOGS, ETC. BEFORE CONNECTING
6. IN CASE INSTALLING THE DRAIN PUMP(M1P), REMOVE THE JUMPER CONNECTOR OF X15A AND EXECUTE THE ADDITIONAL WIRING FOR FLOAT SWITCH AND DRAIN IN PUMP
7. SYMBOLS SHOW AS FOLLOWS: RED: RED BLK: BLACK WHT: WHITE YLW:YELLOW PRP: PURPLE GRY: GRAY BLU: BLUE

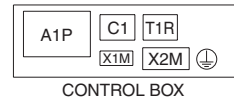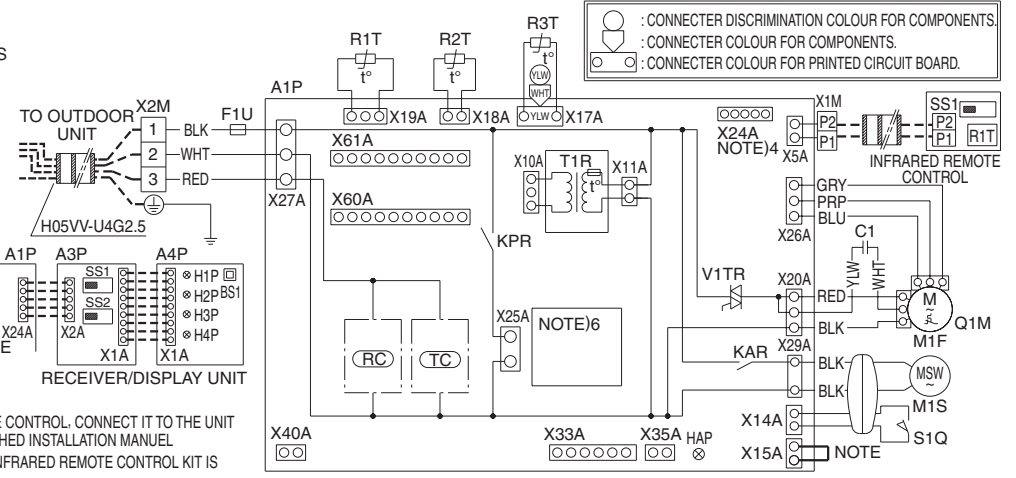


A1P	PRINTED CIRCUIT BOARD	BS1	PUSH BUTTON (ON/OFF)
C1	CAPACITOR (M1F)	H1P	LIGHT EMITTING DIODE (ON-RED)
F1U	FUSE (F5A 250V)	H2P	LIGHT EMITTING DIODE (TIMER GREEN)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
KAR	MAGNETIC RELAY (M1S)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
KPR	MAGNETIC RELAY (M1P)	SS1	SELECTOR SWITCH (MAIN/SUB)
M1F	MOTOR (INDOOR FAN)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
M1S	MOTOR (SWING FLAP)		
Q1M	THERMO SWITCH (M1F EMBEDDED)		
R1T	THERMISTOR (AIR)		
R2T	THERMISTOR (COIL-1)		
R3T	THERMISTOR (COIL-2)		
S1Q	LIMIT SWITCH (SWING FLAP)		
T1R	TRANSFORMER (220-240V/22V)	X15A	CONNECTOR (FLOAT SWITCH)
V1TR	PHASE CONTROL CIRCUIT	X25A	CONNECTOR (DRAIN PUMP)
X1M	TERMINAL BLOCK	X33A	CONNECTOR (ADAPTER FOR WIRING)
X2M	TERMINAL BLOCK	X35A	CONNECTOR (GROUP CONTROL ADAPTER)
[RC]	SIGNAL RECEIVER CIRCUIT	X40A	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)
[TC]	SIGNAL TRANSMISSION CIRCUIT	X60A	CONNECTOR (INTERFACER ADAPTER FOR SKY AIR SERIES)
		X61A	
A3P	PRINTED CIRCUIT BOARD		
A4P	PRINTED CIRCUIT BOARD		

3D037842C

## 2.2 Outdoor Units


### 2MXS52E2(3)V1B, 2AMX52E2(3)V1B

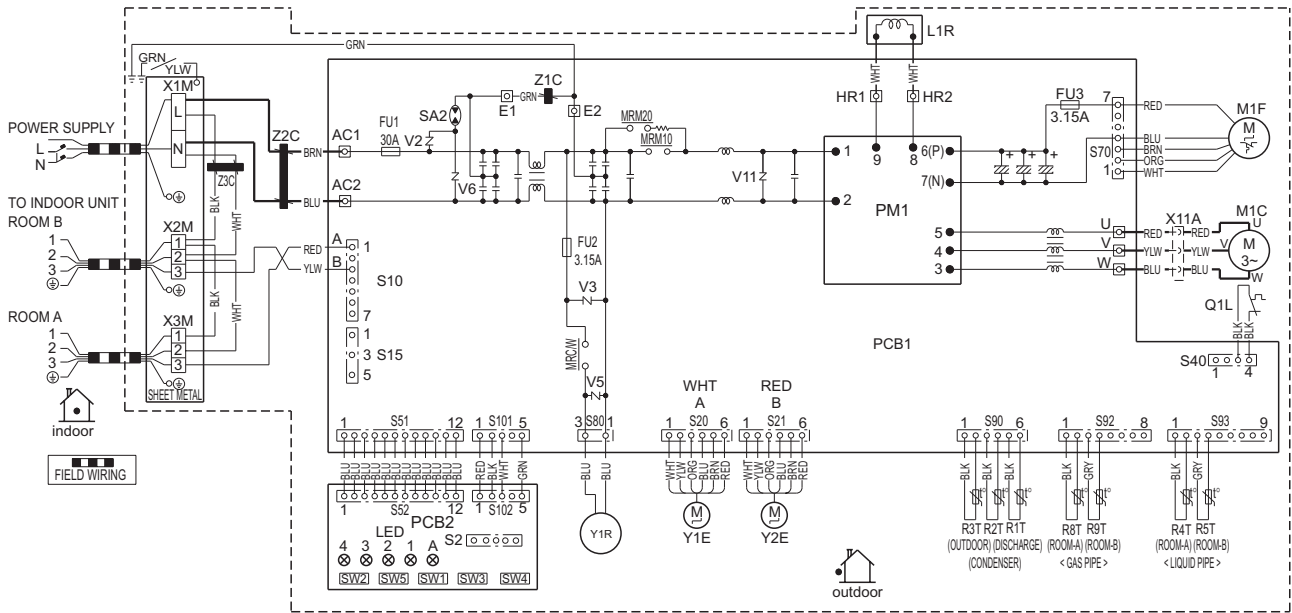

- |                     |                                   |              |                  |     |                                     |             |                                 |
|---------------------|-----------------------------------|--------------|------------------|-----|-------------------------------------|-------------|---------------------------------|
| Z1C - Z3C           | : FERRITE CORE                    | MRM10, MRM20 | : MAGNETIC RELAY | L   | : LIVE                              | M1C         | : COMPRESSOR MOTOR              |
| X1M - X3M           | : TERMINAL STRIP                  | MRC/W        | : MAGNETIC RELAY | N   | : NEUTRAL                           | M1F         | : FAN MOTOR                     |
| Y1E - Y2E           | : ELECTRONIC EXPANSION VALVE COIL | R1T - R5T    | : THERMISTOR     | SW1 | : FORCED OPERATION ON/OFF SW (SW1)  | L1R         | : REACTOR                       |
| V2, V3, V5, V6, V11 | : VARISTOR                        | R8T, R9T     | : THERMISTOR     | SW2 | : SELECT SW (SW2)                   | Q1L         | : OVERLOAD PROTECTOR            |
| SA2                 | : SURGE ARRESTER                  | S2 - S102    | : CONNECTOR      | SW3 | : WIRING ERROR CHECK SW (SW3)       | PM1         | : POWER MODULE                  |
| FU1, FU2, FU3       | : FUSE                            | LED1 - LED4  | : PILOT LAMP     | SW4 | : PRIORITY ROOM SETTING SW (SW4)    | PCB1, 2     | : PRINTED CIRCUIT BOARD         |
| AC1, AC2            | : CONNECTOR                       | LEDA         | : PILOT LAMP     | SW5 | : NIGHT QUIET MODE SETTING SW (SW5) | Y1R         | : REVERSING SOLENOID VALVE COIL |
| U, V, W, X11A       | : CONNECTOR                       |              |                  |     |                                     | SHEET METAL | : TERMINAL STRIP FIXED PLATE    |
| E1, E2              | : CONNECTOR                       |              |                  |     |                                     |             |                                 |
| HR1, HR2            | : CONNECTOR                       |              |                  |     |                                     |             |                                 |

3D051011A


### 3MXS52E2(3)V1B, 3AMX52E2(3)V1B

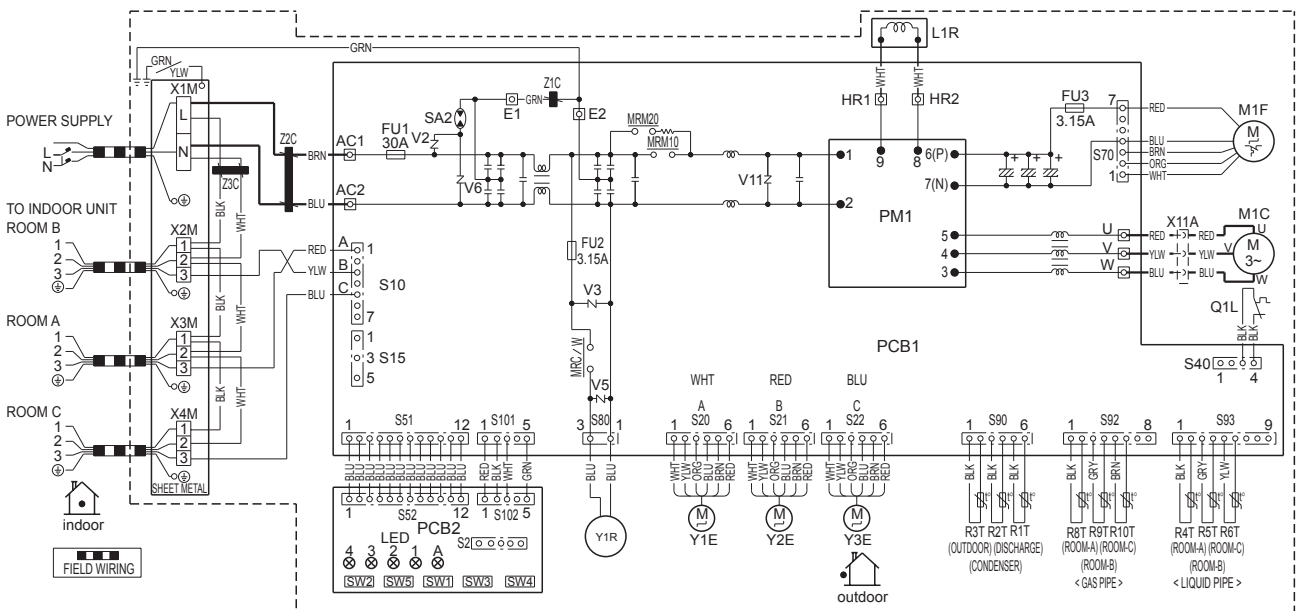


- |                     |                                   |              |                  |     |                                     |            |                                 |
|---------------------|-----------------------------------|--------------|------------------|-----|-------------------------------------|------------|---------------------------------|
| Z1C - Z3C           | : FERRITE CORE                    | MRM10, MRM20 | : MAGNETIC RELAY | L   | : LIVE                              | M1C        | : COMPRESSOR MOTOR              |
| X1M - X4M           | : TERMINAL STRIP                  | MRC/W        | : MAGNETIC RELAY | N   | : NEUTRAL                           | M1F        | : FAN MOTOR                     |
| Y1E - Y3E           | : ELECTRONIC EXPANSION VALVE COIL | R1T - R6T    | : THERMISTOR     | SW1 | : FORCED OPERATION ON/OFF SW (SW1)  | L1R        | : REACTOR                       |
| V2, V3, V5, V6, V11 | : VARISTOR                        | R8T - R10T   | : THERMISTOR     | SW2 | : SELECT SW (SW2)                   | Q1L        | : OVERLOAD PROTECTOR            |
| SA2                 | : SURGE ARRESTER                  | S2 - S102    | : CONNECTOR      | SW3 | : WIRING ERROR CHECK SW (SW3)       | PM1        | : POWER MODULE                  |
| FU1, FU2, FU3       | : FUSE                            | LED1 - LED4  | : PILOT LAMP     | SW4 | : PRIORITY ROOM SETTING SW (SW4)    | PCB1, 2    | : PRINTED CIRCUIT BOARD         |
| AC1, AC2            | : CONNECTOR                       | LEDA         | : PILOT LAMP     | SW5 | : NIGHT QUIET MODE SETTING SW (SW5) | Y1R        | : REVERSING SOLENOID VALVE COIL |
| U, V, W, X11A       | : CONNECTOR                       |              |                  |     |                                     | SHEETMETAL | : TERMINAL STRIP FIXED PLATE    |
| E1, E2              | : CONNECTOR                       |              |                  |     |                                     |            |                                 |
| HR1, HR2            | : CONNECTOR                       |              |                  |     |                                     |            |                                 |

3D051012B

3MKS50E2(3)V1B

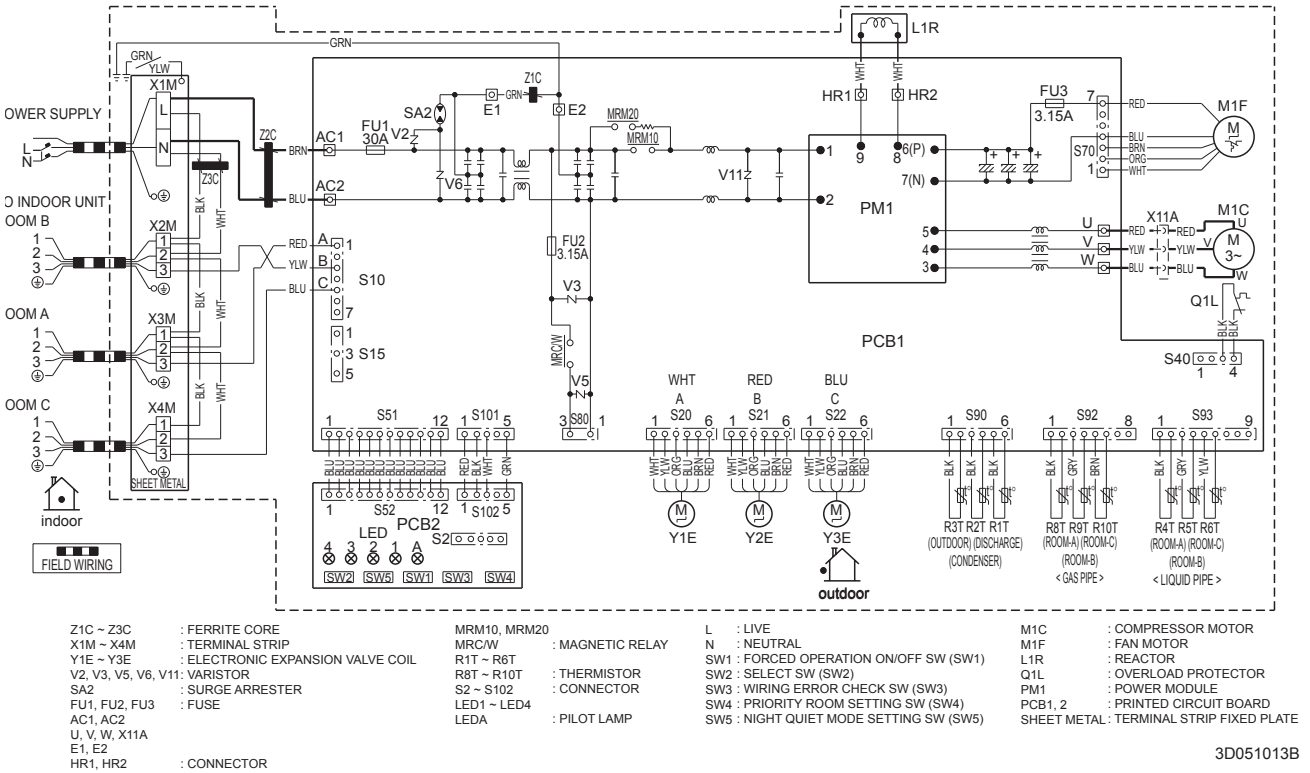

4MKS58E2(3)V1B

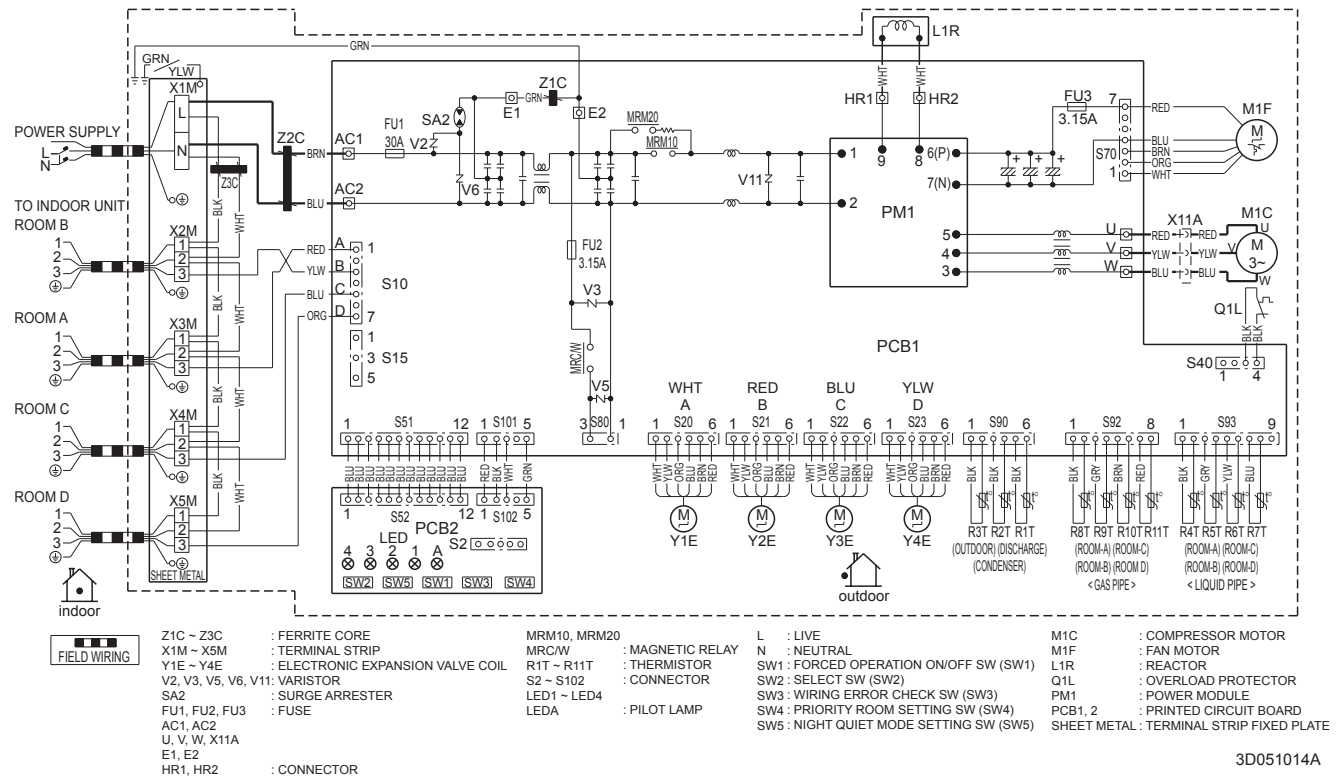

# Index

## Numerics

3 minutes stand-by ..... 90

## A

A1 ..... 213  
 A5 ..... 214, 223  
 A6 ..... 216, 217  
 AC1 ..... 61  
 AC2 ..... 61  
 address setting jumper ..... 42, 44, 46, 49, 51, 53, 56  
 adjusting the air flow direction ..... 138  
 air purifying filter ..... 81  
 air purifying filter with photocatalytic deodorizing  
 function ..... 81  
 anti-icing function in other rooms ..... 251  
 ARC433A ..... 207  
 AUTO operation ..... 136  
 automatic air flow control ..... 70  
 automatic operation ..... 72  
 auto-restart ..... 42, 44, 46, 49, 51, 53, 56  
 auto-restart function ..... 81  
 auto-swing ..... 68

## B

buzzer PCB ..... 50

## C

C4 ..... 219  
 C7 ..... 220  
 C9 ..... 219  
 capacitor voltage check ..... 259  
 care and cleaning ..... 165  
 centralized control ..... 42, 44, 46, 49, 51, 53, 56  
 changing operation room ..... 98  
 check  
 capacitor voltage check ..... 259  
 discharge pressure check ..... 257  
 electronic expansion valve check ..... 253  
 fan motor connector output check ..... 252  
 four way valve performance check ..... 254  
 Hall IC check ..... 261  
 installation condition check ..... 256  
 inverter units refrigerant system check ..... 258  
 limit switch continuity check ..... 252  
 main circuit electrolytic capacitor check ..... 260  
 outdoor unit fan system check  
 (with DC motor) ..... 257  
 power supply waveforms check ..... 258  
 power transistor check ..... 259  
 thermistor resistance check ..... 255  
 turning speed pulse input on the outdoor unit PCB  
 check ..... 260  
 check No.01 ..... 252  
 check No.02 ..... 252  
 check No.03 ..... 252

check No.04 ..... 253  
 check No.05 ..... 254  
 check No.06 ..... 255  
 check No.07 ..... 256  
 check No.08 ..... 257  
 check No.09 ..... 257  
 check No.10 ..... 258  
 check No.11 ..... 258  
 check No.12 ..... 259  
 check No.13 ..... 259  
 check No.14 ..... 260  
 check No.15 ..... 260  
 check No.16 ..... 261  
 compressor ..... 293  
 compressor lock ..... 227  
 compressor overload ..... 226  
 compressor protection function ..... 91  
 compressor sensor system abnormality ..... 234  
 connection pipe condensation preventing  
 function ..... 104  
 connectors ..... 42, 44, 46, 49, 51, 53, 56, 61  
 control PCB ..... 51, 54, 58, 277  
 control PCB (indoor unit) ..... 43, 45, 48, 50  
 control PCB (outdoor unit) ..... 62  
 COOL operation ..... 136  
 cooling / heating mode lock ..... 105  
 CT or related abnormality ..... 237

## D

DC fan lock ..... 228  
 defrost control ..... 95  
 diagnosis mode ..... 208  
 discharge grille ..... 267  
 discharge pipe ..... 99  
 discharge pipe control ..... 92  
 discharge pipe temperature control ..... 99, 231  
 discharge pipe thermistor ..... 83, 85, 99  
 discharge pressure check ..... 257  
 display PCB ..... 45, 50, 52, 55, 58  
 distributor ..... 291  
 DRY operation ..... 136

## E

E1 ..... 225  
 E5 ..... 226  
 E6 ..... 227  
 E7 ..... 228  
 E8 ..... 229  
 econo mode ..... 75  
 econo operation ..... 152  
 econo-mode-proof setting ..... 105  
 electrical box ..... 269  
 electrical box temperature rise ..... 241  
 electronic expansion valve check ..... 253  
 electronic expansion valve coil ..... 288



electronic expansion valve control .....	96	freeze-up protection control .....	93, 214, 223
error codes		frequency control.....	88
A1 .....	213	frequency principle .....	66
A5 .....	214, 223	front panel .....	265
A6 .....	216, 217	front panel control .....	69
C4 .....	219	front panel mechanism .....	42
C7 .....	220	FU .....	56
C9 .....	219	FU1 .....	42, 44, 46, 49, 51, 53, 61
E1 .....	225	FU2 .....	61
E5 .....	226	FU3 .....	61
E6 .....	227	functions, list of .....	2
E7 .....	228	fuse .....	42, 44, 46, 49, 51, 53, 56, 61
E8 .....	229		
F3 .....	231	G	
F6 .....	232	gas pipe isothermal control during cooling .....	98
H0 .....	234	gas pipe thermistor.....	83, 85
H6 .....	236		
H8 .....	237	H	
H9 .....	239	H0.....	234
J3 .....	239	H6.....	236
J6 .....	239	H8.....	237
J8 .....	239	H9.....	239
J9 .....	239	HA .....	42, 44, 49
L3 .....	241	Hall IC .....	70, 216, 217
L4 .....	243	Hall IC check .....	261
L5 .....	245	HAP .....	59
P4 .....	239	HEAT operation.....	136
U0 .....	247	heating peak-cut control.....	93
U2 .....	249	high pressure control.....	214
U4 .....	221	high pressure control in cooling .....	232
U7 .....	250	HOME LEAVE operation .....	78, 153
UA .....	222, 251	hot start function.....	80
UH .....	251	HR1 .....	61
error codes and description of fault.....	210	HR2 .....	61
F		I	
F3 .....	231	indoor heat exchanger thermistor .....	84, 86
F6 .....	232	indoor unit PCB abnormality .....	213
fan control .....	94	input current control .....	92
fan motor .....	282	input over current detection.....	229
fan motor connector output check.....	252	installation condition check .....	256
fan motor or related abnormality		instruction	
AC motor .....	216	ceiling suspended type .....	192
DC motor .....	217	duct connected type.....	109
FAN operation .....	136	floor standing type .....	109
fan speed control.....	70	floor/ceiling suspended dual type .....	109
fan speed setting.....	42, 44, 46, 49, 51, 53, 56	wall mounted type.....	109
filter		insufficient gas .....	247
air-purifying filter .....	81	insufficient gas control.....	100
mold proof air filter .....	81	INTELLIGENT EYE .....	76
photocatalytic deodorizing filter .....	81	INTELLIGENT EYE operation.....	155
titanium apatite photocatalytic		INTELLIGENT EYE sensor .....	298
air-purifying filter .....	80	INTELLIGENT EYE sensor PCB.....	43, 45, 48, 50
forced operation mode .....	101	inverter POWERFUL operation.....	79
forced operation ON/OFF switch		inverter units refrigerant system check.....	258
.....	42, 44, 46, 49, 51, 53, 56, 61		
four way valve .....	292	J	
four way valve coil.....	288	J3 .....	239
four way valve operation compensation.....	90	J4 .....	297
four way valve performance check.....	254	J6 .....	239
four way valve switching .....	90	J8 .....	239

J9 .....	239	power failure recovery function	42, 44, 46, 49, 51, 53, 56
JA .....	42, 44, 46, 49, 51, 53, 56, 297	power supply PCB .....	54, 57
JB .....	42, 44, 46, 49, 51, 53, 56, 297	power supply waveforms check .....	258
JC .....	42, 44, 46, 49, 51, 53, 56, 297	power transistor check .....	259
jumper setting .....	297	power-airflow dual flaps .....	68
L		POWERFUL operation .....	150
L3 .....	241	POWERFUL operation mode .....	104
L4 .....	243	preheating operation .....	90
L5 .....	245	preparation before operation .....	133
LED A .....	42, 44, 46, 49, 51, 53, 56, 61	pressure equalization control .....	98
LED1 .....	44, 46, 49, 51, 53, 61	preventing indoor freezing .....	101
LED11 .....	56	printed circuit board	
LED12 .....	56	ceiling suspended type .....	60
LED14 .....	56	printed circuit board (PCB)	
LED2 .....	42, 44, 46, 49, 51, 53, 61	buzzer PCB .....	50
LED3 .....	42, 44, 46, 49, 51, 53, 61	control PCB .....	51, 54, 58, 277
LED4 .....	42, 61	control PCB (indoor unit) .....	43, 45, 48, 50
limit switch .....	42	control PCB (outdoor unit) .....	62
limit switch continuity check .....	252	display PCB .....	45, 50, 52, 55, 58
liquid compression protection function 2 .....	94	INTELLIGENT EYE sensor PCB ...	43, 45, 48, 50
liquid pipe thermistor .....	84	main PCB (outdoor unit 50/60 models) .....	62
list of functions .....	2	power supply PCB .....	54, 57
low-voltage detection .....	249	removal procedure .....	276
M		service monitor PCB .....	63
main circuit electrolytic capacitor check .....	260	service PCB .....	276
main PCB (outdoor unit 50/60 models) .....	62	signal receiver PCB .....	43, 45, 48, 50, 55, 58
main structural parts .....	82	printed circuit board connector wiring diagram .....	42
mode hierarchy .....	87	priority room setting .....	104
mold proof air filter .....	81	problem symptoms and measures .....	206
motor		programme dry function .....	71
reduction motor .....	42	propeller fan .....	282
multi system .....	163	R	
N		radiation fin temperature rise .....	243
names of parts .....	112	reduction motor .....	42
night set mode .....	74	remote control .....	207
O		removal procedure	
oil recovery function .....	99	compressor .....	293
OL activation .....	226	distributor .....	291
ON/OFF button on indoor unit .....	80	electrical box .....	269
opening limit .....	98	electronic expansion valve coil .....	288
operation lamp .....	204	fan motor .....	282
outdoor air thermistor .....	275	four way valve .....	292
outdoor heat exchanger thermistor .....	83, 85	four way valve coil .....	288
outdoor unit fan system check (with DC motor) .....	257	panels and plates .....	264
outdoor unit PCB abnormality .....	225	PCB .....	276
outdoor unit silent operation .....	151	propeller fan .....	282
output over current detection .....	245	sound blanket .....	284
over current .....	100	thermistor .....	288
overload .....	100	right side panel .....	284
over-voltage detection .....	249	RTH1 .....	42, 44, 46, 49
P		RTH1 (R1T) .....	51
P4 .....	239	S	
PCB (ceiling suspended type) .....	60	S1 .....	42, 44, 46, 49, 51
photocatalytic deodorizing filter .....	81	S10 .....	61
PI control .....	89	S101 .....	61
position sensor abnormality .....	236	S102 .....	61, 276
		S15 .....	61
		S20 .....	61, 271

S201.....	56	SW7 .....	46
S202.....	56	T	
S203.....	56	target discharge pipe temperature control .....	99
S204.....	56	terminal board .....	280
S21.....	42, 44, 46, 49, 51, 53, 56, 61, 271	test run from the remote control .....	296
S22.....	61, 271	thermistor	
S23.....	56, 61, 271	discharge pipe thermistor .....	83, 85, 99, 288
S24.....	53, 56	gas pipe thermistor .....	83, 85, 288
S25.....	53, 56	heat exchanger thermistor .....	288
S26.....	44, 46, 49, 51, 53, 56	indoor heat exchanger thermistor .....	84, 86
S27.....	44, 46, 49, 53	liquid pipe thermistor.....	84, 288
S28.....	44, 49	outdoor air thermistor.....	288
S29.....	44, 49	outdoor heat exchanger thermistor.....	83, 85
S301.....	56	thermistor or related abnormality (indoor unit) .....	219
S302.....	56	thermistor or related abnormality (outdoor unit) ...	239
S31.....	53, 56	thermistor resistance check .....	255
S32.....	42, 44, 46, 49, 51, 53, 56	thermostat control .....	73
S35.....	44, 46, 49	TIMER operation .....	161
S36.....	42, 44, 46, 49, 53	titanium apatite photocatalytic air-purifying filter ....	80
S37.....	49, 53	top panel .....	264
S38.....	49	troubleshooting.....	187
S40.....	61, 272	indoor units .....	211
S41.....	42	outdoor units .....	212
S46.....	42	troubleshooting with the LED indication .....	205
S47.....	42	troubleshooting with the operation lamp .....	204
S49.....	42	turning speed pulse input on the outdoor unit PCB	
S51.....	42, 61	check.....	260
S52.....	61, 276	U	
S6.....	44, 46, 49, 53, 56	U0.....	247
S7.....	44, 46, 51, 53, 56	U2.....	249
S70.....	61, 270	U4.....	221
S8.....	49, 56	U7.....	250
S80.....	61, 273	UA .....	222, 251
S90.....	61, 272, 289	UH .....	251
S92.....	61, 272, 289	unspecified voltage (between indoor and outdoor	
S93.....	61, 272, 289	units) .....	222, 251
safety precautions .....	110	V	
SC control .....	98	V1 .....	42, 44, 46, 49, 51, 53, 56
self-diagnosis digital display.....	81	V11 .....	61
sensor malfunction detection .....	100	V2.....	61
service check function.....	207	V3.....	61
service monitor PCB .....	63	V5.....	61
service PCB .....	276	V6.....	61
shutter drive motor abnormality.....	220	varistor .....	42, 44, 46, 49, 51, 53, 56, 61
shutter limit switch abnormality .....	220	W	
signal receiver PCB.....	43, 45, 48, 50, 55, 58	wide-angle louvers .....	68
signal receiving sign.....	80	wiring-error check.....	102
signal transmission error (between indoor and outdoor		X	
units) .....	221	X14A .....	59
signal transmission error (on outdoor unit PCB) ...	250	X15A .....	59
sound blanket.....	284	X17A .....	59
specifications.....	16	X18A .....	59
starting control		X19A .....	59
indoor unit.....	69	X20A .....	59
starting operation control.....	98	X24A .....	59
stop valve cover .....	267	X25A .....	59
SW1 .....	42, 44, 49, 51, 53, 56, 61		
SW2 .....	53, 56		
SW3 .....	61		
SW4 .....	56, 61		
SW5 .....	61		

X26A .....	59
X27A .....	59
X29A .....	59
X33A .....	59
X35A .....	59
X40A .....	59
X5A .....	59
X60A .....	59
X61A .....	59

# Drawings & Flow Charts

<b>A</b>	
anti-icing function in other rooms .....	251
ARC433A .....	207
automatic air flow control .....	70
automatic operation.....	72
auto-swing.....	68
<b>B</b>	
buzzer PCB.....	50
<b>C</b>	
capacitor voltage check.....	259
check No.01 .....	252
check No.02 .....	252
check No.03 .....	252
check No.04 .....	253
check No.05 .....	254
check No.06 .....	255
check No.07 .....	256
check No.08 .....	257
check No.09 .....	257
check No.10 .....	258
check No.11 .....	258
check No.12 .....	259
check No.13 .....	259
check No.14 .....	260
check No.15 .....	260
check No.16 .....	261
compressor lock .....	227
compressor overload.....	226
compressor protection function .....	91
compressor sensor system abnormality.....	234
control PCB .....	51, 54, 58, 62
control PCB (indoor unit).....	43, 45, 48, 50
cooling / heating mode lock.....	105
CT or related abnormality.....	237
<b>D</b>	
DC fan lock.....	228
defrost control .....	95
diagnosis mode.....	208
discharge pipe control .....	92
discharge pipe temperature control.....	231
discharge pressure check .....	257
display PCB.....	45, 50, 52, 55, 58
<b>E</b>	
econo mode .....	75
electrical box temperature rise .....	241
electronic expansion valve check.....	253
electronic expansion valve control .....	96
<b>F</b>	
fan motor connector output check.....	252
fan motor or related abnormality	
AC motor.....	216
DC motor .....	217
four way valve performance check.....	254
freeze-up protection control .....	93, 214, 223
frequency control.....	88
frequency principle .....	66
function of thermistor	
cooling only model .....	85
heat pump model .....	83
<b>H</b>	
Hall IC check .....	261
heating peak-cut control.....	93
high pressure control.....	214
high pressure control in cooling .....	232
HOME LEAVE operation .....	78
<b>I</b>	
indoor unit PCB abnormality .....	213
input current control .....	92
input over current detection.....	229
installation condition check .....	256
insufficient gas .....	247
insufficient gas control.....	100
INTELLIGENT EYE .....	76
INTELLIGENT EYE sensor .....	298
INTELLIGENT EYE sensor PCB.....	43, 45, 48, 50
inverter features .....	67
inverter POWERFUL operation.....	79
inverter units refrigerant system check.....	258
<b>J</b>	
jumper settings .....	297
<b>L</b>	
limit switch continuity check .....	252
location of operation lamp .....	204
low-voltage detection .....	249
<b>M</b>	
main circuit electrolytic capacitor check .....	260
main PCB (outdoor unit 50/60 models).....	62
main structural parts.....	82
mode hierarchy .....	87
<b>N</b>	
night set mode.....	74
<b>O</b>	
OL activation .....	226
ON/OFF button on indoor unit.....	80
outdoor unit fan system check (with DC motor) ...	257
outdoor unit PCB abnormality .....	225
output over current detection .....	245

---

over-voltage detection .....	249
P	
PCB .....	47
PCB (ceiling suspended type) .....	60
piping diagrams	
ceiling suspended type, indoor unit .....	305
duct connected type, indoor unit .....	302
floor / ceiling suspended dual type,	
indoor unit .....	303
floor standing type, indoor unit .....	304
outdoor unit .....	306
wall mounted type, indoor unit .....	300
position sensor abnormality .....	236
power supply PCB .....	54
power supply PCB (25, 35 class) .....	57
power supply PCB (50 class) .....	57
power supply waveforms check .....	258
power transistor check .....	259
priority room setting .....	104
programme dry function .....	71
R	
radiation fin temperature rise .....	243
remote control .....	207
S	
service monitor PCB .....	63
shutter drive motor abnormality .....	220
shutter limit switch abnormality .....	220
signal receiver PCB .....	43, 45, 48, 50, 55, 58
signal transmission error (between indoor and outdoor	
units) .....	221
signal transmission error (on outdoor unit PCB) ...	250
starting control flow .....	69
starting timing chart .....	69
T	
target discharge pipe temperature control .....	99
thermistor or related abnormality (indoor unit) .....	219
thermistor or related abnormality (outdoor unit) ...	239
thermistor resistance check .....	255
thermostat control .....	73
trial operation from remote control .....	296
troubleshooting with the LED indication .....	205
turning speed pulse input on the outdoor unit PCB	
check .....	260
U	
unspecified voltage (between indoor and outdoor	
units) .....	222, 251
W	
wiring diagrams	
ceiling suspended type, indoor unit .....	312
duct connected type, indoor unit .....	310
floor standing type, indoor unit .....	311
outdoor unit .....	313
wall mounted type, indoor unit .....	308
wiring-error check .....	102



Daikin's unique position as a manufacturer of air conditioning equipment, compressors and refrigerants has led to its close involvement in environmental issues. For several years Daikin has had the intension to become a leader in the provision of **products that have limited impact on the environment.**

This challenge demands the eco design and development of a wide range of products and an energy management system, **resulting in energy conservation and a reduction of waste.**

**DAIKIN EUROPE N.V.**

Naamloze Vennootschap  
Zandvoordestraat 300  
B-8400 Oostende - Belgium  
www.daikineurope.com  
BTW: BE 0412 120 336  
RPR Oostende



Daikin Europe N.V. is approved by LRQA for its Quality Management System in accordance with the ISO9001 standard. ISO9001 pertains to quality assurance regarding design, development, manufacturing as well as to services related to the product.



ISO14001 assures an effective environmental management system in order to help protect human health and the environment from the potential impact of our activities, products and services and to assist in maintaining and improving the quality of the environment.




Daikin units comply with the European regulations that guarantee the safety of the product.



Daikin Europe N.V. participates in the Eurovent Certification Programme for Air Conditioners (AC), Liquid Chilling Packages (LCP) and Fan Coil Units (FC); the certified data of certified models are listed in the Eurovent Directory.

"The present publication is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V. Daikin Europe N.V. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Europe N.V."



S I E N B E 1 2 - 6 2 0