

Service Manual

Inverter Pair Wall Mounted Type B-Series



[Applied Models]

- Inverter Pair : Cooling Only
- Inverter Pair : Heat Pump
- Non-Inverter Pair : Cooling Only
- Non-Inverter Pair : Heat Pump

Inverter Pair B-Series

●Cooling Only Indoor Unit

<R410A>

FTKS50BVMA	FTKS50BVMB	FTS50BVMB	
FTKS60BVMA	FTKS60BVMB	FTS60BVMB	
FTKS71BVMA	FTKS71BVMB	FTKS71BAVMB	

<R22>

FTKD50BVM	FTKD50BVMA	FTKD50BVMT	FTKD18BVMS
FTKD60BVM	FTKD60BVMA	FTKD60BVMT	FTKD24BVMS
FTKD71BVM	FTKD71BVMA	FTKD71BVMT	FTKD28BVMS

Outdoor Unit

<R410A>

RKS50BVMA	RKS50BVMB(9)	RKS50B2VMB	RS50BVMB
RKS60BVMA	RKS60BVMB(9)	RKS60B2VMB	RS60BVMB
RKS71BVMA	RKS71BVMB(9)	RKS71B2VMB	RS50B2VMB
		RKS71B3VMB	RS60B2VMB

<R22>

RKD50BVM	RKD50BVMA	RKD50BVMT	RKD18BVMS
RKD60BVM	RKD60BVMA	RKD60BVMT	RKD24BVMS
RKD71BVM	RKD71BVMA	RKD71BVMT	RKD28BVMS

●Heat Pump

Indoor Unit

<R410A>

FTXS50BVMA	FTXS50BVMB	ATXS50CVMB	FTYS50BVMB
FTXS60BVMA	FTXS60BVMB	ATXS50DVMB	FTYS60BVMB
FTXS71BVMA	FTXS71BVMB	FTXS71BAVMB	

<R22>

FTXD50BVMA	FTXD50BVMT	FTXD50BV4	
FTXD60BVMA	FTXD60BVMT	FTXD80CV4	
FTXD71BVMA	FTXD71BVMT		

Outdoor Unit

<R410A>

RXS50BVMA	RXS50BVMB	ARXS50CVMB	RYS50BVMB
RXS60BVMA	RXS60BVMB	ARXS50C2VMB	RYS60BVMB
RXS71BVMA	RXS71BVMB	RXS50B2VMB	RYS50B2VMB
		RXS60B2VMB	RYS60B2VMB
		RXS71B2VMB	
		RXS71B3VMB	

<R22>

RXD50BVMA	RXD50BVMT	RXD50BV4	
RXD60BVMA	RXD60BVMT	RXD80CV4	
RXD71BVMA	RXD71BVMT		

1. Introduction	V
1.1 Safety Cautions	V
Part 1 List of Functions	1
1. List of Functions	2
1.1 R-410A Series	2
1.2 R22 Series	8
Part 2 Specifications	13
1. Specifications	14
1.1 Cooling Only - R-410A Series	14
1.2 Cooling Only - R22 Series	18
1.3 Heat Pump - R-410A Series	22
1.4 Heat Pump - R22 Series	29
Part 3 Printed Circuit Board Connector Wiring Diagram	35
1. Printed Circuit Board Connector Wiring Diagram	36
1.1 Indoor Unit	36
1.2 Outdoor Unit	38
Part 4 Function and Control	41
1. Main Functions	42
1.1 Frequency Principle	42
1.2 Power-Airflow Dual Flaps, Wide Angle Louvers and Auto-Swing	44
1.3 Fan Speed Control for Indoor Units	45
1.4 Programme Dry Function	46
1.5 Automatic Operation	47
1.6 Thermostat Control	48
1.7 Night Set Mode	49
1.8 INTELLIGENT EYE	50
1.9 HOME LEAVE Operation	52
1.10 Inverter POWERFUL Operation	53
1.11 Other Functions	54
2. Function of Main Structural Parts	55
2.1 Function of Thermistor	55
3. Control Specification	57
3.1 Mode Hierarchy	57
3.2 Frequency Control	58
3.3 Controls at Mode Changing / Start-up	60
3.4 Discharge Pipe Temperature Control	61
3.5 Input Current Control	61
3.6 Freeze-up Protection Control	62
3.7 Heating Peak-cut Control	62
3.8 Fan Control	63
3.9 Liquid Compression Protection Function 2	63
3.10 Low Hz High Pressure Limit	64
3.11 Defrost Control	64
3.12 Electronic Expansion Valve Control	65
3.13 Malfunctions	68

3.14 Forced Operation Mode	69
3.15 Additional Function	69
3.16 Facility Setting Switch (cooling at low outdoor temperature).....	70

Part 5 System Configuration..... 71

1. System Configuration.....	72
2. Instruction.....	73
2.1 Safety Precautions	73
2.2 Names of Parts.....	75
2.3 Preparation before Operation.....	78
2.4 AUTO · DRY · COOL · HEAT · FAN Operation	81
2.5 Adjusting the Air Flow Direction	83
2.6 POWERFUL Operation	85
2.7 OUTDOOR UNIT SILENT Operation	86
2.8 HOME LEAVE Operation	87
2.9 INTELLIGENT EYE Operation	89
2.10 TIMER Operation	91
2.11 Care and Cleaning	93
2.12 Troubleshooting.....	96

Part 6 Service Diagnosis..... 101





1. Caution for Diagnosis.....	102
2. Problem Symptoms and Measures	103
3. Service Check Function	104
4. Troubleshooting	107
4.1 Error Codes and Description	107
4.2 Indoor Unit PCB Abnormality	108
4.3 Freeze-up Protection Control or High Pressure Control.....	109
4.4 Fan Motor (DC Motor) or Related Abnormality.....	111
4.5 Thermistor or Related Abnormality (Indoor Unit).....	113
4.6 Signal Transmission Error (between Indoor and Outdoor Units).....	114
4.7 OL Activation (Compressor Overload)	115
4.8 Compressor Lock	116
4.9 DC Fan Lock	117
4.10 Input Over Current Detection	118
4.11 Four Way Valve Abnormality.....	120
4.12 Discharge Pipe Temperature Control.....	122
4.13 High Pressure Control in Cooling	123
4.14 Position Sensor Abnormality	125
4.15 CT or Related Abnormality	126
4.16 Thermistor or Related Abnormality (Outdoor Unit).....	128
4.17 Electrical Box Temperature Rise.....	130
4.18 Radiation Fin Temperature Rise	132
4.19 Output Over Current Detection.....	134
4.20 Insufficient Gas.....	136
4.21 Low-voltage Detection.....	138
5. Check	139
5.1 How to Check.....	139

Part 7 Removal Procedure	147
1. Indoor Unit.....	148
1.1 Removal of the Air Filter / Front Panel	148
1.2 Removal of the Front Grille	151
1.3 Removal of the Horizontal Blades / Vertical Blades	153
1.4 Removal of the Electrical Box / PCB / Swing Motor	155
1.5 Removal of the Heat Exchanger	161
1.6 Removal of the Fan Rotor / Fan Motor.....	164
2. Outdoor Unit.....	166
2.1 Removal of the Panels and Plates	166
2.2 Removal of the Fan Motor / Propeller Fan	170
2.3 Removal of the PCB / Electrical Box	174
2.4 Removal of the Reactor.....	182
2.5 Removal of the Sound Blanket.....	184
2.6 Removal of the Four Way Valve.....	186
2.7 Removal of the Electronic Expansion Valve.....	187
2.8 Removal of the Compressor.....	188
Part 8 Others	191
1. Others	192
1.1 Test Run from the remote control.....	192
1.2 Jumper Settings	193
Part 9 Appendix.....	195
1. Piping Diagrams	196
1.1 Indoor Units	196
1.2 Outdoor Units	197
2. Wiring Diagrams.....	203
2.1 Indoor Units	203
2.2 Outdoor Units	206
Index	i
Drawings & Flow Charts	v







1. Introduction








1.1 Safety Cautions

Cautions and Warnings


- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
 - △ This symbol indicates an item for which caution must be exercised.
The pictogram shows the item to which attention must be paid.
 - This symbol indicates a prohibited action.
The prohibited item or action is shown inside or near the symbol.
 - This symbol indicates an action that must be taken, or an instruction.
The instruction is shown inside or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.




1.1.1 Caution in Repair



 Warning	
<p>Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Working on the equipment that is connected to a power supply can cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.</p>	
<p>If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.</p>	
<p>When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it can cause injury.</p>	
<p>If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.</p>	
<p>The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.</p>	
<p>Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.</p>	

 Caution	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands can cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the refrigerating cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the refrigerating cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	




1.1.2 Cautions Regarding Products after Repair



 Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only



 Warning	
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A / R22) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	
When replacing the coin battery in the remote control, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	For integral units only

1.1.3 Inspection after Repair

 Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	





 Warning	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it can cause an electrical shock, excessive heat generation or fire.	

 Caution	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 Mohm or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

1.1.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

1.1.5 Using Icons List

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

Part 1

List of Functions

1. List of Functions	2
1.1 R-410A Series	2
1.2 R22 Series.....	8

1. List of Functions

1.1 R-410A Series

Category	Functions	FTKS50-60-71BVMA RKS50-60-71BVMA	FTXS50-60-71BVMA RXS50-60-71BVMA	Category	Functions	FTKS50-60-71BVMA RKS50-60-71BVMA	FTXS50-60-71BVMA RXS50-60-71BVMA	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	-5 -46	-5 -46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-15 -18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	○	○		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	○	○		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—		Timer	24-Hour On/Off Timer	○	○
	Wide-Angle Louvers	○	○			Night Set Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	
	Horizontal Auto-Swing (Right and Left)	○	○		Self-Diagnosis (Digital, LED) Display	○	○	
	3-D Airflow	○	○		Wiring Error Check	—	—	
Comfort Control	3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger	○	○		
	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Silent Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Silent Operation (Manual)	○	○		Chargeless	10m	10m	
	Intelligent Eye	○	○		Power Selection	—	—	
	Quick Warming Function	—	○		Remote Control	5-Rooms Centralized Controller (Option)	○	○
Hot-Start Function	—	○	Remote Control adapter (Normal Open-Pulse Contact) (Option)			○	○	
Automatic Defrosting	—	○	Remote Control adapter (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	—	○	Remote Control	DIII-NET Compatible (adapter) (Option)	○	○	
	Programme Dry Function	○	○		Wireless	○	○	
	Fan Only	○	○		Wired	—	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—					
	Inverter Powerful Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
	Temperature Display	—	—					
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTKS50-60-71BVMB FKS50-60-71BVMB(9)★	FTXS50-60-71BVMB FXS50-60-71BVMB	Category	Functions	FTKS50-60-71BVMB FKS50-60-71BVMB(9)★	FTXS50-60-71BVMB FXS50-60-71BVMB	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	-10★ -46	-10 -46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-15 -18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	○	○		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	○	○		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—		24-Hour On/Off Timer	○	○	
	Wide-Angle Louvers	○	○			Night Set Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Horizontal Auto-Swing (Right and Left)	○	○			Self-Diagnosis (Digital, LED) Display	○	○
3-D Airflow	○	○	Wiring Error Check			—	—	
3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger			○	○	
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Silent Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Silent Operation (Manual)	○	○		Chargeless	10m	10m	
	Intelligent Eye	○	○		Power Selection	—	—	
	Quick Warming Function	—	○		5-Rooms Centralized Controller (Option)	○	○	
	Hot-Start Function	—	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○	○
Automatic Defrosting	—	○	Remote Control adapter (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	—	○	Remote Control	DIII-NET Compatible (adapter) (Option)	○	○	
	Programme Dry Function	○	○		Wireless	○	○	
	Fan Only	○	○			Wired	—	—
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	Remote Control				
	Inverter Powerful Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
Temperature Display	—	—						
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

★: The models with suffix "9" work down to -15°C.

Category	Functions	FTKS50-60-71BVMB FKS50-60-71B2VMB	FTXS50-60-71BVMB FXS50-60-71B2VMB	Category	Functions	FTKS50-60-71BVMB FKS50-60-71B2VMB	FTXS50-60-71BVMB FXS50-60-71B2VMB	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)★	-10 -46	-10 -46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-15 -18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	○	○		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	○	○		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—		Timer	24-Hour On/Off Timer	○	○
	Wide-Angle Louvers	○	○			Night Set Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	
	Horizontal Auto-Swing (Right and Left)	○	○		Self-Diagnosis (Digital, LED) Display	○	○	
3-D Airflow	○	○	Wiring Error Check		—	—		
3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○	○		
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Silent Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Silent Operation (Manual)	○	○		Chargeless	10m	10m	
	Intelligent Eye	○	○		Power Selection	—	—	
	Quick Warming Function	—	○		Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Hot-Start Function	—	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○	○
Automatic Defrosting	—	○	Remote Control adapter (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	—	○	Remote Control	DIII-NET Compatible (adapter) (Option)	○	○	
	Programme Dry Function	○	○		Wireless	○	○	
	Fan Only	○	○		Wired	—	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—					
	Inverter Powerful Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
Temperature Display	—	—						
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

★ : Lower limit can be extended to -15°C by turning switch. (facility use only)

Category	Functions	FTKS71BAVMB RKS71B3VMB	FTXS71BAVMB RXS71B3VMB	Category	Functions	FTKS71BAVMB RKS71B3VMB	FTXS71BAVMB RXS71B3VMB	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)★	-10 ~46	-10 ~46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-15 ~18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	○	○		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	○	○		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—		Timer	24-Hour On/Off Timer	○	○
	Wide-Angle Louvers	○	○			Night Set Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	
	Horizontal Auto-Swing (Right and Left)	○	○		Self-Diagnosis (Digital, LED) Display	○	○	
	3-D Airflow	○	○		Wiring Error Check	—	—	
3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○	○		
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Silent Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Silent Operation (Manual)	○	○		Chargeless	10m	10m	
	Intelligent Eye	○	○		Power Selection	—	—	
	Quick Warming Function	—	○		Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Hot-Start Function	—	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○	○
Automatic Defrosting	—	○	Remote Control adapter (Normal Open Contact) (Option)	○		○		
			DIII-NET Compatible (adapter) (Option)	○		○		
Operation	Automatic Operation	—	○	Remote Control	Wireless	○	○	
	Programme Dry Function	○	○		Wired	—	—	
	Fan Only	○	○					
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—					
	Inverter Powerful Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
	Temperature Display	—	—					
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

★ : Lower limit can be extended to -15°C by turning switch. (facility use only)

Category	Functions	ATXS50CVMB ARXS50C(2)VMB	ATXS50DVMB ARXS50C(2)VMB	Category	Functions	ATXS50CVMB ARXS50C(2)VMB	ATXS50DVMB ARXS50C(2)VMB	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	-10 ~46	-10 ~46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	-15 ~18	-15 ~18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	○	○		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	—	○	
	Reluctance DC Motor	○	○		Washable Grille	○	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—	Timer	24-Hour On/Off Timer	○	○	
	Wide-Angle Louvers	○	○		Night Set Mode	○	○	
	Vertical Auto-Swing (Up and Down)	○	○		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Horizontal Auto-Swing (Right and Left)	○	○	Self-Diagnosis (Digital, LED) Display		○	○	
	3-D Airflow	○	○	Wiring Error Check		—	—	
3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger	○		○		
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Silent Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Silent Operation (Manual)	○	○		Chargeless	10m	10m	
	Intelligent Eye	○	○		Power Selection	—	—	
	Quick Warming Function	○	○		Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Hot-Start Function	○	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○	○
Automatic Defrosting	○	○	Remote Control adapter (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	○	○	Remote Control	DIII-NET Compatible (adapter) (Option)	○	○	
	Programme Dry Function	○	○		Wireless	○	○	
	Fan Only	○	○		Wired	—	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	Remote Control				
	Inverter Powerful Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
	Temperature Display	—	—					
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTS50-60BVMB RS50-60B(2)VMB	FTYS50-60BVMB RYS50-60B(2)VMB	Category	Functions	FTS50-60BVMB RS50-60B(2)VMB	FTYS50-60BVMB RYS50-60B(2)VMB	
Basic Function	Inverter (with Inverter Power Control)	—	—	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	-10 ~46	-10 ~46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-15 ~18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	—	—		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	—	—	
	Reluctance DC Motor	○	○		Washable Grille	○	○	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—		Timer	24-Hour On/Off Timer	○	○
	Wide-Angle Louvers	○	○			Night Set Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○	Auto-Restart (after Power Failure)		○	○	
	Horizontal Auto-Swing (Right and Left)	—	—	Worry Free "Reliability & Durability"	Self-Diagnosis (Digital, LED) Display	○	○	
	3-D Airflow	—	—		Wiring Error Check	—	—	
3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○	○		
Auto Fan Speed	○	○	Flexibility		Multi-Split / Split Type Compatible Indoor Unit	—	—	
Indoor Unit Silent Operation	—	—		Flexible Voltage Correspondence	○	○		
Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—		
Outdoor Unit Silent Operation (Manual)	—	—		Chargeless	10m	10m		
Intelligent Eye	—	—		Power Selection	—	—		
Quick Warming Function	—	○		Remote Control	5-Rooms Centralized Controller (Option)	○	○	
Hot-Start Function	—	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○	○	
Automatic Defrosting	—	○	Remote Control adapter (Normal Open Contact) (Option)		○	○		
Operation	Automatic Operation	—	○		DIII-NET Compatible (adapter) (Option)	—	—	
	Programme Dry Function	○	○	Remote Control	Wireless	○	○	
	Fan Only	○	○		Wired	—	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	○	○					
	Inverter Powerful Operation	—	—					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	—	—					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
	Temperature Display	—	—					
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

1.2 R22 Series

Category	Functions	FTKD50-60-71BVM(A) RKD50-60-71BVM(A)		Category	Functions	FTKD50-60-71BVM(A) RKD50-60-71BVM(A)		
		FTXD50-60-71BVM(A) RXD50-60-71BVM(A)				FTXD50-60-71BVM(A) RXD50-60-71BVM(A)		
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	-5 -46	-5 -46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-15 -18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	○	○		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	○	○		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—		Timer	24-Hour On/Off Timer	○	○
	Wide-Angle Louvers	○	○			Night Set Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○	Worry Free "Reliability & Durability"		Auto-Restart (after Power Failure)	○	○
	Horizontal Auto-Swing (Right and Left)	○	○		Self-Diagnosis (Digital, LED) Display	○	○	
	3-D Airflow	○	○		Wiring Error Check	—	—	
3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○	○		
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Silent Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Silent Operation (Manual)	○	○		Chargeless	10m	10m	
	Intelligent Eye	○	○		Power Selection	—	—	
	Quick Warming Function	—	○		Operation	5-Rooms Centralized Controller (Option)	○	○
	Hot-Start Function	—	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○	○
Automatic Defrosting	—	○	Remote Control adapter (Normal Open Contact) (Option)	○		○		
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—	Remote Control		DIII-NET Compatible (adapter) (Option)	○	○
	Inverter Powerful Operation	○	○			Wireless	○	○
	Priority-Room Setting	—	—			Wired	—	—
	Cooling / Heating Mode Lock	—	—	Remote Control				
	Home Leave Operation	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
	Temperature Display	—	—					
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTKD50-60-71BVMT FKD50-60-71BVMT	FTXD50-60-71BVMT FXD50-60-71BVMT	Category	Functions	FTKD50-60-71BVMT FKD50-60-71BVMT	FTXD50-60-71BVMT FXD50-60-71BVMT	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	—	
	Operation Limit for Cooling (°CDB)	-5 ~46	-5 ~46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-15 ~18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	○	
	PAM Control	○	○		Longlife Filter	—	—	
Compressor	Oval Scroll Compressor	—	—		Ultra-Longlife Filter (Option)	—	—	
	Swing Compressor	○	○		Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—		Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	○	○		Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		Filter Cleaning Indicator	—	—	
	Power-Airflow Dual Flaps	○	○		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—		Timer	24-Hour On/Off Timer	○	○
	Wide-Angle Louvers	○	○			Night Set Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○	Auto-Restart (after Power Failure)		○	○	
	Horizontal Auto-Swing (Right and Left)	○	○	Worry Free "Reliability & Durability"	Self-Diagnosis (Digital, LED) Display	○	○	
3-D Airflow	○	○	Wiring Error Check		—	—		
3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○	○		
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Silent Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Silent Operation (Manual)	○	○		Chargeless	10m	10m	
	Intelligent Eye	○	○		Power Selection	—	—	
	Quick Warming Function	—	○		Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Hot-Start Function	—	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○	○
Automatic Defrosting	—	○	Remote Control adapter (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	—	○	Remote Control	DIII-NET Compatible (adapter) (Option)	○	○	
	Programme Dry Function	○	○		Wireless	○	○	
	Fan Only	○	○		Wired	—	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—	—					
	Inverter Powerful Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	Home Leave Operation	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
Temperature Display	—	—						
Another Room Operation	—	—						

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTKD18-24-28BVMS FKD18-24-28BVMS	Category	Functions	FTKD18-24-28BVMS FKD18-24-28BVMS	
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	
	Operation Limit for Cooling (°CDB)	10~46		Photocatalytic Deodorizing Filter	—	
	Operation Limit for Heating (°CWB)	—		Air Purifying Filter with Photocatalytic Deodorizing Function	○	
	PAM Control	○		Longlife Filter	—	
Compressor	Oval Scroll Compressor	—		Ultra-Longlife Filter (Option)	—	
	Swing Compressor	○		Mold Proof Air Filter	○	
	Rotary Compressor	—		Wipe-clean Flat Panel	○	
	Reluctance DC Motor	○		Washable Grille	—	
Comfortable Airflow	Power-Airflow Flap	—		Filter Cleaning Indicator	—	
	Power-Airflow Dual Flaps	○		Good-Sleep Cooling Operation	—	
	Power-Airflow Diffuser	—		Timer	24-Hour On/Off Timer	○
	Wide-Angle Louvers	○			Night Set Mode	○
	Vertical Auto-Swing (Up and Down)	○		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○
	Horizontal Auto-Swing (Right and Left)	○			Self-Diagnosis (Digital, LED) Display	○
	3-D Airflow	○			Wiring Error Check	—
3-Step Airflow (H/P Only)	—	Anticorrosion Treatment of Outdoor Heat Exchanger			○	
Comfort Control	Auto Fan Speed	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	
	Indoor Unit Silent Operation	○		Flexible Voltage Correspondence	○	
	Night Quiet Mode (Automatic)	—		High Ceiling Application	—	
	Outdoor Unit Silent Operation (Manual)	○		Chargeless	10m	
	Intelligent Eye	○		Power Selection	—	
	Quick Warming Function	—		Remote Control	5-Rooms Centralized Controller (Option)	○
	Hot-Start Function	—			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○
Automatic Defrosting	—	Remote Control adapter (Normal Open Contact) (Option)	○			
Operation	Automatic Operation	—	Remote Control	DIII-NET Compatible (adapter) (Option)	○	
	Programme Dry Function	○		Wireless	○	
	Fan Only	○		Wired	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—				
	Inverter Powerful Operation	○				
	Priority-Room Setting	—				
	Cooling / Heating Mode Lock	—				
	Home Leave Operation	○				
	Indoor Unit On/Off Switch	○				
	Signal Reception Indicator	○				
	Temperature Display	—				
Another Room Operation	—					

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTXD50BV4 FXD50BV4	Category	Functions	FTXD50BV4 FXD50BV4	
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	
	Operation Limit for Cooling (°CDB)	-5 -46		Photocatalytic Deodorizing Filter	—	
	Operation Limit for Heating (°CWB)	-15 -18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	
	PAM Control	○		Longlife Filter	—	
Compressor	Oval Scroll Compressor	—		Ultra-Longlife Filter (Option)	—	
	Swing Compressor	○		Mold Proof Air Filter	○	
	Rotary Compressor	—		Wipe-clean Flat Panel	○	
	Reluctance DC Motor	○		Washable Grille	—	
Comfortable Airflow	Power-Airflow Flap	—		Filter Cleaning Indicator	—	
	Power-Airflow Dual Flaps	○		Good-Sleep Cooling Operation	—	
	Power-Airflow Diffuser	—		Timer	24-Hour On/Off Timer	○
	Wide-Angle Louvers	○			Night Set Mode	○
	Vertical Auto-Swing (Up and Down)	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	
	Horizontal Auto-Swing (Right and Left)	○		Self-Diagnosis (Digital, LED) Display	○	
	3-D Airflow	○		Wiring Error Check	—	
3-Step Airflow (H/P Only)	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○		
Comfort Control	Auto Fan Speed	○		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—
	Indoor Unit Silent Operation	○	Flexible Voltage Correspondence		—	
	Night Quiet Mode (Automatic)	—	High Ceiling Application		—	
	Outdoor Unit Silent Operation (Manual)	○	Chargeless		10m	
	Intelligent Eye	○	Power Selection		—	
	Quick Warming Function	○	Remote Control		5-Rooms Centralized Controller (Option)	○
	Hot-Start Function	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○
Automatic Defrosting	○	Remote Control adapter (Normal Open Contact) (Option)		○		
Operation	Automatic Operation	○		DIII-NET Compatible (adapter) (Option)	○	
	Programme Dry Function	○	Remote Control	Wireless	○	
	Fan Only	○		Wired	—	
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—				
	Inverter Powerful Operation	○				
	Priority-Room Setting	—				
	Cooling / Heating Mode Lock	—				
	Home Leave Operation	○				
	Indoor Unit On/Off Switch	○				
	Signal Reception Indicator	○				
	Temperature Display	—				
Another Room Operation	—					

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTXD80CV4 RXD80CV4	Category	Functions	FTXD80CV4 RXD80CV4	
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter with Bacteriostatic, Virustatic Functions	—	
	Operation Limit for Cooling (°CDB)	-5 ~46		Photocatalytic Deodorizing Filter	—	
	Operation Limit for Heating (°CWB)	-15 ~18		Air Purifying Filter with Photocatalytic Deodorizing Function	○	
	PAM Control	○		Longlife Filter	—	
Compressor	Oval Scroll Compressor	—		Ultra-Longlife Filter (Option)	—	
	Swing Compressor	○		Mold Proof Air Filter	○	
	Rotary Compressor	—		Wipe-clean Flat Panel	○	
	Reluctance DC Motor	○		Washable Grille	—	
Comfortable Airflow	Power-Airflow Flap	—		Filter Cleaning Indicator	—	
	Power-Airflow Dual Flaps	○		Good-Sleep Cooling Operation	—	
	Power-Airflow Diffuser	—		Timer	24-Hour On/Off Timer	○
	Wide-Angle Louvers	○			Night Set Mode	○
	Vertical Auto-Swing (Up and Down)	○		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○
	Horizontal Auto-Swing (Right and Left)	○	Self-Diagnosis (Digital, LED) Display		○	
	3-D Airflow	○	Wiring Error Check		—	
	3-Step Airflow (H/P Only)	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○	
Comfort Control	Auto Fan Speed	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	
	Indoor Unit Silent Operation	○		Flexible Voltage Correspondence	—	
	Night Quiet Mode (Automatic)	—		High Ceiling Application	—	
	Outdoor Unit Silent Operation (Manual)	○		Chargeless	10m	
	Intelligent Eye	○		Power Selection	—	
	Quick Warming Function	○		Remote Control	5-Rooms Centralized Controller (Option)	○
	Hot-Start Function	○			Remote Control adapter (Normal Open-Pulse Contact) (Option)	○
Automatic Defrosting	○	Remote Control adapter (Normal Open Contact) (Option)	○			
		DIII-NET Compatible (adapter) (Option)	○			
Operation	Automatic Operation	○	Remote Control	Wireless	○	
	Programme Dry Function	○		Wired	—	
	Fan Only	○				
Lifestyle Convenience	New Powerful Operation (Non-Inverter)	—				
	Inverter Powerful Operation	○				
	Priority-Room Setting	—				
	Cooling / Heating Mode Lock	—				
	Home Leave Operation	○				
	Indoor Unit On/Off Switch	○				
	Signal Reception Indicator	○				
	Temperature Display	—				
Another Room Operation	—					

Note: ○ : Holding Functions

— : No Functions

Part 2

Specifications

1. Specifications	14
1.1 Cooling Only - R-410A Series	14
1.2 Cooling Only - R22 Series	18
1.3 Heat Pump - R-410A Series	22
1.4 Heat Pump - R22 Series	29

1. Specifications

1.1 Cooling Only - R-410A Series

50Hz 240V

Model	Indoor Units		FTKS50BVMA	FTKS60BVMA	FTKS71BVMA
	Outdoor Units		RKS50BVMA	RKS60BVMA	RKS71BVMA
Capacity Rated (Min.~Max.)	kW		5.0 (0.9~5.8)	6.0 (0.9~6.7)	7.1 (0.9~8.0)
	Btu/h		17,070 (3,070~19,800)	20,480 (3,070~22,870)	24,240 (3,070~27,310)
	kcal/h		4,300 (770~4,990)	5,160 (770~5,760)	6,110 (770~6,880)
Moisture Removal	L/h		2.9	3.9	4.5
Running Current (Rated)	A		7.0	8.9	10.6
Power Consumption Rated (Min.~Max.)	W		1,660 (450~2,300)	2,120 (450~2,450)	2,530 (450~3,070)
Power Factor	%		98.8	99.3	99.4
COP	W/W		3.01	2.83	2.81
Piping Connections	Liquid	mm	φ 6.4	φ 6.4	φ 6.4
	Gas	mm	φ12.7	φ12.7	φ15.9
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKS50BVMA	FTKS60BVMA	FTKS71BVMA
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	11.4 (402)	16.2 (572)	16.8 (593)
		M	9.8 (346)	13.9 (491)	14.2 (501)
		L	8.7 (307)	11.9 (420)	11.9 (420)
		SL	7.7 (272)	10.7 (378)	11.2 (395)
Fan	Type		Cross Flow Fan	Cross Flow Fan	Cross Flow Fan
	Motor Output	W	40	43	43
	Speed	Steps	5 Steps, Silent and Auto	5 Steps, Silent and Auto	5 Steps, Silent and Auto
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current (Rated)	A		0.17	0.19	0.21
Power Consumption (Rated)	W		40	45	50
Power Factor	%		98.0	98.7	99.2
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x795x238	290x1,050x238	290x1,050x238
Packaged Dimensions (HxWxD)	mm		280x840x338	337x1,147x366	337x1,147x366
Weight	kg		9	12	12
Gross Weight	kg		13	17	17
Operation Sound	H/M/L/SL	dBA	44/40/35/32	45/41/36/33	46/42/37/34
Sound Power	H	dBA	63	63	63
Outdoor Unit			RKS50BVMA	RKS60BVMA	RKS71BVMA
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		2YC32HXD	2YC32HXD	2YC45BXD
	Motor Output	W	1,500	1,500	1,900
Refrigerant Oil	Type		FVC50K	FVC50K	FVC50K
	Charge	L	0.65	0.65	0.75
Refrigerant	Type		R-410A	R-410A	R-410A
	Charge	kg	1.20	1.70	1.70
Air Flow Rate	m ³ /min (cfm)	H	47.7(1,684)	47.6 (1,680)	51.5 (1,818)
		L	44.1(1,557)	44.1 (1,557)	41.5 (1,465)
Fan	Type		Propeller	Propeller	Propeller
	Motor Output	W	53	53	53
Running Current (Rated)	A		6.83	8.71	10.39
Power Consumption (Rated)	W		1,620	2,075	2,480
Power Factor	%		98.8	99.3	99.5
Starting Current	A		7	8.9	10.6
Dimensions (HxWxD)	mm		735x825x300	735x825x300	735x825x300
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	784x960x390
Weight	kg		48	52	54
Gross Weight	kg		53	57	59
Operation Sound	H/L	dBA	47/44	49/46	52/49
Sound Power	H	dBA	63	64	66
Drawing No.			3D040801	3D040802	3D040803

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Conversion Formula
kcal/h=kW×860
Btu/h=kW×3414
cfm=m ³ /min×35.3

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

50Hz 230V

Model	Indoor Units		FTKS50BVMB	FTKS60BVMB	FTKS71BVMB
	Outdoor Units		RKS50BVMB(9)	RKS60BVMB(9)	RKS71BVMB(9)
Capacity Rated (Min.-Max.)	kW		5.0 (0.9-5.8)	6.0 (0.9-6.7)	7.1 (0.9-8.0)
	Btu/h		17,070 (3,070-19,800)	20,480 (3,070-22,870)	24,240 (3,070-27,310)
	kcal/h		4,300 (770-4,990)	5,160 (770-5,760)	6,110 (770-6,880)
Moisture Removal	L/h		2.9	3.9	4.5
Running Current (Rated)	A		7.3	9.3	11.1
Power Consumption Rated (Min.-Max.)	W		1,660 (450-2,300)	2,120 (450-2,450)	2,530 (450-3,070)
Power Factor	%		98.9	99.1	99.1
COP	W/W		3.01	2.83	2.81
Piping Connections	Liquid	mm	φ 6.4	φ 6.4	φ 6.4
	Gas	mm	φ12.7	φ12.7	φ15.9
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKS50BVMB	FTKS60BVMB	FTKS71BVMB
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	11.4 (402)	16.2 (572)	16.7 (590)
		M	9.7 (342)	13.6 (480)	14.2 (501)
		L	8.0 (282)	11.4 (402)	11.6 (409)
		SL	7.1 (251)	10.2 (360)	10.6 (374)
Fan	Type		Cross Flow Fan	Cross Flow Fan	Cross Flow Fan
	Motor Output	W	40	43	43
	Speed	Steps	5 Steps, Silent and Auto	5 Steps, Silent and Auto	5 Steps, Silent and Auto
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current (Rated)	A		0.18	0.18	0.20
Power Consumption (Rated)	W		40	40	45
Power Factor	%		96.6	96.6	96.4
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x795x238	290x1,050x238	290x1,050x238
Packaged Dimensions (HxWxD)	mm		280x840x338	337x1,147x366	337x1,147x366
Weight	kg		9	12	12
Gross Weight	kg		13	17	17
Operation Sound	H/M/L/SL	dBA	44/40/35/32	45/41/36/33	46/42/37/34
Sound Power	H	dBA	63	63	63
Outdoor Unit			RKS50BVMB(9)	RKS60BVMB(9)	RKS71BVMB(9)
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		2YC32HXD	2YC32HXD	2YC45BXD
	Motor Output	W	1,500	1,500	1,900
Refrigerant Oil	Type		FVC50K	FVC50K	FVC50K
	Charge	L	0.65	0.65	0.75
Refrigerant	Type		R-410A	R-410A	R-410A
	Charge	kg	1.20	1.70	1.70
Air Flow Rate	m ³ /min (cfm)	H	47.7(1,684)	47.6 (1,680)	51.5 (1,818)
		L	44.1(1,557)	44.1 (1,557)	41.5 (1,465)
Fan	Type		Propeller	Propeller	Propeller
	Motor Output	W	53	53	53
Running Current (Rated)	A		6.82	9.12	10.90
Power Consumption (Rated)	W		1,620	2,080	2,485
Power Factor	%		99.0	99.2	99.1
Starting Current	A		7.3	9.3	11.1
Dimensions (HxWxD)	mm		735x825x300	735x825x300	735x825x300
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	784x960x390
Weight	kg		49	52	55
Gross Weight	kg		53	57	59
Operation Sound	H	dBA	47	49	52
Sound Power	H	dBA	63	64	66
Drawing No.			C:3D040781A	C:3D040782A	C:3D040783A

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50Hz 230V

Model	Indoor Units		FTKS50BVMB	FTKS60BVMB	FTKS71BVMB
	Outdoor Units		RKS50B2VMB	RKS60B2VMB	RKS71B2VMB
Capacity Rated	kW		5.0 (0.9-5.8)	6.0 (0.9-6.7)	7.1 (0.9-8.0)
	Btu/h		17,070 (3,070-19,800)	20,480 (3,070-22,870)	24,240 (3,070-27,310)
	kcal/h		4,300 (770-4,990)	5,160 (770-5,760)	6,110 (770-6,880)
Moisture Removal	L/h		2.9	3.9	4.5
Running Current (Rated)	A		7.3	9.3	11.1
Power Consumption Rated	W		1,660 (450-2,300)	2,120 (450-2,450)	2,530 (450-3,070)
Power Factor	%		98.9	99.1	99.1
COP	W/W		3.01	2.83	2.81
Piping Connections	Liquid	mm	φ 6.4	φ 6.4	φ 6.4
	Gas	mm	φ12.7	φ12.7	φ15.9
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKS50BVMB	FTKS60BVMB	FTKS71BVMB
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	11.4 (402)	16.2 (572)	16.7 (590)
		M	9.7 (342)	13.6 (480)	14.2 (501)
		L	8.0 (282)	11.4 (402)	11.6 (409)
		SL	7.1 (251)	10.2 (360)	—
Fan	Type	Cross Flow Fan			
	Motor Output	W	40	43	
	Speed	Steps	5 Steps, Silent and Auto	5 Steps, Silent and Auto	
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current (Rated)	A		0.18	0.18	0.20
Power Consumption (Rated)	W		40	40	45
Power Factor	%		96.6	96.6	96.4
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x795x238	290x1,050x238	290x1,050x238
Packaged Dimensions (HxWxD)	mm		280x840x338	337x1,147x366	337x1,147x366
Weight	kg		9	12	12
Gross Weight	kg		13	17	17
Operation Sound	H/L	dBA	44/40/35/32	45/41/36/33	46/42/37/34
Sound Power	H	dBA	63	63	63
Outdoor Unit			RKS50B2VMB	RKS60B2VMB	RKS71B2VMB
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type	Hermetically Sealed Swing Type			
	Model	2YC32HXD			
	Motor Output	W	1,500	1,900	
Refrigerant Oil	Type	FVC50K			
	Charge	L	0.65	0.75	
Refrigerant	Type	R-410A			
	Charge	kg	1.20	1.70	
Air Flow Rate	m ³ /min (cfm)	H	47.7(1,684)	47.6 (1,680)	
		L	44.1(1,557)	44.1 (1,557)	
Fan	Type	Propeller			
	Motor Output	W	53	53	
Running Current (Rated)	A		6.82	9.12	
Power Consumption (Rated)	W		1,620	2,080	
Power Factor	%		99.0	99.2	
Starting Current	A		7.3	9.3	
Dimensions (HxWxD)	mm		735x825x300	735x825x300	
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	
Weight	kg		49	52	
Gross Weight	kg		53	57	
Operation Sound	H	dBA	47	49	
Sound Power	H	dBA	63	64	
Drawing No.			C:3D040781A	C:3D040782A	C:3D040783A

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formula
kcal/h=kW×860 Btu/h=kW×3414 cfm=m ³ /min×35.3

50Hz 230V

Model	Indoor Units		FTKS71BAVMB	FTS50BVMB	FTS60BVMB
	Outdoor Units		RKS71B3VMB	RS50B(2)VMB	RS60B(2)VMB
Capacity Rated (Min.-Max.)	kW		7.1 (0.9-8.0)	5.0	6.0
	Btu/h		24,240 (3,070-27,310)	17,070	20,480
	kcal/h		6,110 (770-6,880)	4,300	5,160
Moisture Removal	L/h		4.5	2.9	3.9
Running Current (Rated)	A		11.1	7.3	9.3
Power Consumption Rated (Min.-Max.)	W		2,530 (450-3,070)	1,660	2,120
Power Factor	%		99.1	98.9	99.1
COP	W/W		2.81	3.01	2.83
Piping Connections	Liquid	mm	φ 6.4	φ 6.4	φ 6.4
	Gas	mm	φ15.9	φ12.7	φ12.7
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKS71BAVMB	FTS50BVMB	FTS60BVMB
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	16.7 (590)	11.5 (406)	16.4 (579)
		M	14.2 (501)	9.8 (346)	13.6 (491)
		L	11.6 (409)	8.3 (293)	11.6 (409)
		SL	10.6 (374)	—	—
Fan	Type	Cross Flow Fan			
	Motor Output	W	43	40	43
	Speed	Steps	5 Steps, Silent and Auto	5 Steps and Auto	5 Steps and Auto
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current (Rated)	A		0.20	0.18	0.18
Power Consumption (Rated)	W		45	40	40
Power Factor	%		96.4	96.6	96.6
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x1,050x238	290x795x230	290x1,050x230
Packaged Dimensions (HxWxD)	mm		337x1,147x366	280x840x338	337x1,147x366
Weight	kg		12	9	12
Gross Weight	kg		17	13	17
Operation Sound	H/M/L/SL	dBA	46/42/37/34	44/35	45/36
Sound Power	H	dBA	63	63	63
Outdoor Unit			RKS71B3VMB	RS50B(2)VMB	RS60B(2)VMB
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type	Hermetically Sealed Swing Type			
	Model	2YC45BXD			
	Motor Output	W	1,900	1,500	1,500
Refrigerant Oil	Type	FVC50K			
	Charge	L	0.75	0.65	0.65
Refrigerant	Type	R-410A			
	Charge	kg	1.70	1.20	1.70
Air Flow Rate	m ³ /min (cfm)	H	51.5 (1,818)	47.7 (1,684)	47.6 (1,680)
		L	41.5 (1,465)	44.1 (1,557)	44.1 (1,557)
Fan	Type	Propeller			
	Motor Output	W	53	53	53
Running Current (Rated)	A		10.90	7.12	9.12
Power Consumption (Rated)	W		2,485	1,620	2,080
Power Factor	%		99.1	98.9	99.2
Starting Current	A		11.1	7.3	9.3
Dimensions (HxWxD)	mm		735x825x300	735x825x300	735x825x300
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	784x960x390
Weight	kg		55	49	52
Gross Weight	kg		59	53	57
Operation Sound	H	dBA	52	47	49
Sound Power	H	dBA	66	63	64
Drawing No.			3D050879	3D040786A	3D040787A

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

1.2 Cooling Only - R22 Series

50Hz 220-230-240V / 60Hz 220-230V

Model	Indoor Units		FTKD50BVM	FTKD60BVM	FTKD71BVM
	Outdoor Units		RKD50BVM	RKD60BVM	RKD71BVM
Capacity Rated (Min.-Max.)	kW		5.2 (0.9-5.9)	6.2 (0.9-6.5)	7.1 (0.9-7.6)
	Btu/h		17,750 (3,070-20,140)	21,170 (3,070-22,190)	24,240 (3,070-25,950)
	kcal/h		4,470 (770-5,070)	5,330 (770-5,590)	6,110 (770-6,540)
Moisture Removal	L/h		2.9	3.9	4.5
Running Current (Rated)	A		7.3-7.0-6.7/7.3-7.0	9.6-9.2-8.8/9.6-9.2	11.7-11.2-10.7/11.7-11.2
Power Consumption Rated (Min.-Max.)	W		1,600 (450-2,300)	2,100 (450-2,700)	2,550 (450-3,210)
Power Factor	%		99.6-99.4-99.5/99.6-99.4	99.4-99.2-99.4/99.4-99.2	99.1-99.0-99.3/99.1-99.0
COP	W/W		3.25	2.95	2.78
Piping Connections	Liquid	mm	φ6.4	φ6.4	φ9.5
	Gas	mm	φ12.7	φ15.9	φ15.9
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKD50BVM	FTKD60BVM	FTKD71BVM
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	16.8 (593)	17.5 (618)	18.0 (635)
		M	14.0 (494)	14.6 (515)	15.1 (533)
		L	11.8 (417)	12.2 (431)	12.7 (448)
		SL	10.4 (367)	10.8 (381)	11.3 (399)
Fan	Type		Cross Flow Fan	Cross Flow Fan	Cross Flow Fan
	Motor Output	W	43	43	43
	Speed	Steps	5 Steps, Silent and Auto	5 Steps, Silent and Auto	5 Steps, Silent and Auto
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current (Rated)	A		0.19-0.18-0.17/0.19-0.18	0.21-0.20-0.19/0.21-0.20	0.23-0.22-0.21/0.23-0.22
Power Consumption (Rated)	W		40	45	50
Power Factor	%		95.7-96.6-98.0/95.7-96.6	97.4-97.8-98.7/97.4-97.8	98.8-98.8-99.2/98.8-98.8
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x1,050x238	290x1,050x238	290x1,050x238
Packaged Dimensions (HxWxD)	mm		337x1,147x366	337x1,147x366	337x1,147x366
Weight	kg		12	12	12
Gross Weight	kg		17	17	17
Operation Sound	H/M/L/SL	dBA	44/40/35/32	45/41/36/33	46/42/37/34
Outdoor Unit			RKD50BVM	RKD60BVM	RKD71BVM
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		2YC32UXD	2YC32UXD	2YC45ZXD
	Motor Output	W	1,500	1,500	1,900
Refrigerant Oil	Type		SE50P	SE50P	SUNISO 4GSD.I.
	Charge	L	0.65	0.65	0.8
Refrigerant	Type		R22	R22	R22
	Charge	kg	1.25	1.60	1.80
Air Flow Rate	m ³ /min (cfm)	H	42.8(1,511)	46.3 (1,634)	51.5 (1,818)
		L	40.7(1,437)	42.9 (1,514)	41.5 (1,465)
Fan	Type		Propeller	Propeller	Propeller
	Motor Output	W	53	53	53
Running Current (Rated)	A		7.11-6.82-6.53/7.11-6.82	9.39-9.00-8.61/9.39-9.00	11.47-10.98-10.49/11.47-10.98
Power Consumption (Rated)	W		1,560	2,055	2,500
Power Factor	%		99.7-99.5-99.5/99.7-99.5	99.5-99.3-99.4/99.5-99.3	99.1-99.0-99.3/99.1-99.0
Starting Current	A		6.7	8.8	10.7
Dimensions (HxWxD)	mm		735x825x300	735x825x300	735x825x300
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	784x960x390
Weight	kg		48	52	54
Gross Weight	kg		53	57	59
Operation Sound	H/L	dBA	47/44	49/46	52/49
Drawing No.			3D040814	3D040815	3D040816

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m : 20g/m(50/60class), 50g/m(71class)
- The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formula
kcal/h=kWx860 Btu/h=kWx3414 cfm=m ³ /minx35.3

50Hz 220-230-240V / 60Hz 220-230V

Model	Indoor Units		FTKD50BVMA	FTKD60BVMA	FTKD71BVMA
	Outdoor Units		RKD50BVMA	RKD60BVMA	RKD71BVMA
Capacity Rated (Min.-Max.)	kW		5.2 (0.9-5.9)	6.2 (0.9-7.6)	7.1 (0.9-8.0)
	Btu/h		17,750 (3,070-20,140)	21,170 (3,070-22,190)	24,240 (3,070-25,950)
	kcal/h		4,470 (770-5,070)	5,330 (770-5,590)	6,110 (770-6,540)
Moisture Removal	L/h		2.9	3.9	4.5
Running Current (Rated)	A		7.4-7.0-6.7/7.4-7.0	9.6-9.2-8.8/9.6-9.2	11.9-11.4-10.9/11.9-11.4
Power Consumption Rated (Min.-Max.)	W		1,600 (450-2,300)	2,100 (450-3,210)	2,600 (450-3,350)
Power Factor	%		98.3-99.4-99.5/98.3-99.4	99.4-99.2-99.4/99.4-99.2	99.3-99.2-99.4/99.3-99.2
COP	W/W		3.25	2.95	2.73
Piping Connections	Liquid	mm	φ6.4	φ6.4	φ9.5
	Gas	mm	φ12.7	φ15.9	φ15.9
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKD50BVMA	FTKD60BVMA	FTKD71BVMA
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	16.8 (593)	17.5 (618)	18.3 (646)
		M	14.0 (494)	14.6 (515)	15.3 (540)
		L	11.8 (417)	12.2 (431)	12.7 (448)
		SL	10.4 (367)	10.8 (381)	11.3 (399)
Fan	Type	Cross Flow Fan			
	Motor Output	W	43	43	
	Speed	Steps	5 Steps, Silent and Auto	5 Steps, Silent and Auto	
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current (Rated)	A		0.19-0.18-0.17/0.19-0.18	0.21-0.20-0.19/0.21-0.20	0.23-0.22-0.21/0.23-0.22
Power Consumption (Rated)	W		40	45	50
Power Factor	%		95.7-96.6-98.0/95.7-96.6	97.4-97.8-98.7/97.4-97.8	98.8-98.8-99.2/98.8-98.8
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x1,050x238	290x1,050x238	290x1,050x238
Packaged Dimensions (HxWxD)	mm		337x1,147x366	337x1,147x366	337x1,147x366
Weight	kg		12	12	12
Gross Weight	kg		17	17	17
Operation Sound	H/M/L/SL	dBA	44/40/35/32	45/41/36/33	46/42/37/34
Sound Power	H	dBA	63	63	63
Outdoor Unit			RKD50BVMA	RKD60BVMA	RKD71BVMA
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type	Hermetically Sealed Swing Type			
	Model	2YC32UXD			
	Motor Output	W	1,500	1,900	
Refrigerant Oil	Type	SE50P			
	Charge	L	0.65	0.75	
Refrigerant	Type	R22			
	Charge	kg	1.25	1.80	
Air Flow Rate	m ³ /min (cfm)	H	42.8(1,511)	46.3 (1,634)	
		L	40.7(1,437)	42.9 (1,514)	
Fan	Type	Propeller			
	Motor Output	W	53	53	
Running Current (Rated)	A		7.21-6.82-6.53/7.21-6.82	9.39-9.00-8.61/9.39-9.00	11.67-11.18-10.69/11.67-11.18
Power Consumption (Rated)	W		1,560	2,055	2,550
Power Factor	%		98.3-99.5-99.5/98.3-99.5	99.5-99.3-99.4/99.5-99.3	99.3-99.2-99.4/99.3-99.2
Starting Current	A		6.7	8.8	10.7
Dimensions (HxWxD)	mm		735x825x300	735x825x300	735x825x300
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	784x960x390
Weight	kg		48	54	56
Gross Weight	kg		53	59	61
Operation Sound	H/L	dBA	47/44	49/46	52/49
Sound Power	H	dBA	63	64	66
Drawing No.			3D040794	3D040795	3D040796

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m : 20g/m(50/60class), 50g/m(71class)
- The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

60Hz 220V

Model	Indoor Units		FTKD50BVMT	FTKD60BVMT	FTKD71BVMT
	Outdoor Units		RKD50BVMT	RKD60BVMT	RKD71BVMT
Cooling Capacity (Min.-Max.)	kW		0.9-5.9	0.9-6.5	0.9-7.6
	kcal/h		775-5,070	775-5,590	775-6,540
Moisture Removal	L/h		2.9	3.9	4.5
Running Current	A		8.0	9.6	14.0
Power Consumption (Min.-Max.)	W		450-2,300	460-2,710	470-3,210
Power Factor	%		99.4	99.0	99.0
COP	W/W		2.86	2.79	2.48
Piping Connections	Liquid	mm	φ 6.4	φ 6.4	φ 9.5
	Gas	mm	φ12.7	φ15.9	φ15.9
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKD50BVMT	FTKD60BVMT	FTKD71BVMT
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	15.4 (545)	16.2 (572)	16.6 (585)
		M	12.9 (456)	13.6 (480)	13.9 (490)
		L	10.8 (383)	11.4 (402)	11.7 (412)
		SL	9.6 (339)	10.2 (358)	10.4 (368)
Fan	Type		Cross Flow Fan	Cross Flow Fan	Cross Flow Fan
	Motor Output	W	43	43	43
	Speed	Steps	5 Steps, Silent and Auto	5 Steps, Silent and Auto	5 Steps, Silent and Auto
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current	A		0.19	0.21	0.23
Power Consumption	W		40	45	50
Power Factor	%		95.7	97.4	98.8
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x1,050x238	290x1,050x238	290x1,050x238
Packaged Dimensions (HxWxD)	mm		337x1,147x366	337x1,147x366	337x1,147x366
Weight	kg		12	12	12
Gross Weight	kg		17	17	17
Operation Sound	H/M/L/SL	dBA	44/40/35/32	45/41/36/33	46/42/37/34
Outdoor Unit			RKD50BVMT	RKD60BVMT	RKD71BVMT
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		2YC32UXD	2YC32UXD	2YC45ZXD
	Motor Output	W	1,500	1,500	1,900
Refrigerant Oil	Type		SE50P	SE50P	SUNISO 4GSD.I.
	Charge	L	0.65	0.65	0.75
Refrigerant	Type		R22	R22	R22
	Charge	kg	1.25	1.60	1.80
Air Flow Rate	m ³ /min (cfm)	H	42.8 (1,511)	46.3 (1,634)	51.5 (1,818)
		L	40.7 (1,437)	42.9 (1,514)	41.5 (1,465)
Fan	Type		Propeller	Propeller	Propeller
	Motor Output	W	53	53	53
Running Current	A		7.81	9.43	13.77
Power Consumption	W		1,710	2,055	3,000
Power Factor	%		99.5	99.1	99.0
Starting Current	A		8.3	9.6	14.0
Dimensions (HxWxD)	mm		735x825x300	735x825x300	735x825x300
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	784x960x390
Weight	kg		48	52	54
Gross Weight	kg		53	57	59
Operation Sound	H/L	dBA	47/44	48/45	52/49
Drawing No.			3D040811A	3D040812A	3D040813A

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m: 20g/m(50/60 class), 50g/m(71 class)
- The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formula
kcal/h=kW×860 Btu/h=kW×3414 cfm=m ³ /min×35.3

50Hz 220V

Model	Indoor Units		FTKD18BVMS	FTKD24BVMS	FTKD28BVMS
	Outdoor Units		RKD18BVMS	RKD24BVMS	RKD28BVMS
Capacity Rated (Min.-Max.)	kW		5.2 (0.9~5.8)	6.1 (0.9~7.0)	7.5 (0.9~7.8)
	Btu/h		17,700 (3,070~19,800)	20,800 (3,070~23,900)	25,600 (3,070~26,600)
	kcal/h		4,470 (770~4,990)	5,250 (770~6,020)	6,450 (775~6,710)
Moisture Removal	L/h		2.9	3.9	4.5
Running Current (Rated)	A		6.9	8.5	13.7
Power Consumption Rated (Min.-Max.)	W		1,500 (450~2,300)	1,850 (450~2,900)	2,970 (450~3,270)
Power Factor	%		98.8	98.9	98.5
COP (Rated)	W/W		3.47	3.30	2.53
Piping Connections	Liquid	mm	φ6.4	φ9.5	φ9.5
	Gas	mm	φ15.9	φ15.9	φ15.9
	Drain	mm	φ18.0	φ18.0	φ18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Indoor Unit			FTKD18BVMS	FTKD24BVMS	FTKD28BVMS
Front Panel Color			White	White	White
Air Flow Rate	m ³ /min (cfm)	H	17.4 (614)	17.9 (632)	19.0 (671)
		M	14.6 (515)	15.0 (530)	15.9 (561)
		L	12.2 (431)	12.4 (438)	13.1 (462)
		SL	10.8 (381)	11.0 (388)	11.8 (417)
Fan	Type		Cross Flow Fan	Cross Flow Fan	Cross Flow Fan
	Motor Output	W	43	43	43
	Speed	Steps	5 Steps, Silent and Auto	5 Steps, Silent and Auto	5 Steps, Silent and Auto
Air Direction Control			Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward	Right, Left, Horizontal and Downward
Air Filter			Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof	Removable/Washable/Mildew Proof
Running Current	A		0.21	0.23	0.24
Power Consumption	W		45	50	52
Power Factor	%		97.4	98.8	98.5
Temperature Control			Microcomputer Control	Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)	mm		290x1,050x238	290x1,050x238	290x1,050x238
Packaged Dimensions (HxWxD)	mm		337x1,147x366	337x1,147x366	337x1,147x366
Weight	kg		12	12	12
Gross Weight	kg		17	17	17
Operation Sound	H/M/L/SL	dBA	45/41/36/33	46/42/37/34	47/43/38/35
Outdoor Unit			RKD18BVMS	RKD24BVMS	RKD28BVMS
Casing Color			Ivory White	Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		2YC32UXD	2YC45ZXD	2YC63ZXD
Refrigerant Oil	Motor Output	W	1,500	1,900	1,900
	Type		SE50P	SUNISO 4GSD.I.	SUNISO 4GSD.I.
Refrigerant	Charge	L	0.65	0.75	0.65
	Type		R22	R22	R22
Air Flow Rate	m ³ /min (cfm)	H	46.3 (1,634)	51.5 (1,818)	56.0 (1,977)
		L	42.9 (1,514)	41.5 (1,465)	44.5 (1,571)
Fan	Type		Propeller	Propeller	Propeller
	Motor Output	W	53	53	53
Running Current	A		6.69	8.27	13.46
Power Consumption	W		1,455	1,800	2,918
Power Factor	%		98.9	98.9	98.5
Starting Current	A		6.9	8.5	13.7
Dimensions (HxWxD)	mm		735x825x300	735x825x300	735x825x300
Packaged Dimensions (HxWxD)	mm		784x960x390	784x960x390	784x960x390
Weight	kg		52	54	56
Gross Weight	kg		57	59	61
Operation Sound	H/L	dBA	49/46	52/49	52/49
Drawing No.			3D040821	3D040822	3D042234

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m :20g/m(18 class), 50g/m(24-28 class)
- The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formula
kcal/h=kWx860 Btu/h=kWx3414 cfm=m ³ /minx35.3

1.3 Heat Pump - R-410A Series

50Hz 240V

Model	Indoor Units		FTXS50BVMA		FTXS60BVMA	
	Outdoor Units		RXS50BVMA		RXS60BVMA	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min.~Max.)	kW		5.0 (0.9~5.8)	5.8 (0.9~7.5)	6.0 (0.9~6.7)	7.0 (0.9~8.0)
	Btu/h		17,070 (3,070~19,800)	19,800 (3,070~25,610)	20,480 (3,070~22,870)	23,900 (3,070~27,310)
	kcal/h		4,300 (770~4,990)	4,990 (770~6,450)	5,160 (770~5,760)	6,020 (770~6,880)
Moisture Removal	L/h		2.9	—	3.9	—
Running Current (Rated)	A		7.0	7.2	8.9	8.8
Power Consumption Rated (Min.~Max.)	W		1,660 (450~2,300)	1,700 (450~2,580)	2,120 (450~2,450)	2,090 (450~3,100)
Power Factor	%		98.8	98.4	99.3	99.0
COP	W/W		3.01	3.41	2.83	3.35
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ12.7		φ12.7	
	Drain	mm	φ18.0		φ18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Indoor Unit		FTXS50BVMA		FTXS60BVMA		
Front Panel Color		White		White		
Air Flow Rate	m ³ /min (cfm)	H	11.4 (402)	12.6 (445)	16.2 (572)	17.4 (614)
		M	9.8 (346)	10.9 (385)	13.9 (491)	15.3 (540)
		L	8.7 (307)	9.3 (328)	11.9 (420)	13.1 (462)
		SL	7.7 (272)	8.2 (289)	10.7 (378)	11.7 (413)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		43	
	Speed	Steps	5 Steps, Silent and Auto		5 Steps, Silent and Auto	
Air Direction Control		Right, Left, Horizontal and Downward		Right, Left, Horizontal and Downward		
Air Filter		Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof		
Running Current (Rated)	A	0.17	0.17	0.19	0.19	
Power Consumption (Rated)	W	40	40	45	45	
Power Factor	%	98.0	98.0	98.7	98.7	
Temperature Control		Microcomputer Control		Microcomputer Control		
Dimensions (HxWxD)	mm	290x795x238		290x1,050x238		
Packaged Dimensions (HxWxD)	mm	280x840x338		337x1,147x366		
Weight	kg	9		12		
Gross Weight	kg	13		17		
Operation Sound	H/M/L/SL	dBA	44/40/35/32	42/38/33/30	45/41/36/33	44/40/35/32
Sound Power	H	dBA	63	60	63	62
Outdoor Unit		RXS50BVMA		RXS60BVMA		
Casing Color		Ivory White		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model	2YC32HXD		2YC32HXD		
Refrigerant Oil	Motor Output	W	1,500		1,500	
	Model	FVC50K		FVC50K		
Refrigerant	Charge	L	0.65		0.65	
	Model	R-410A		R-410A		
Air Flow Rate	m ³ /min (cfm)	H	47.7(1,684)	44.1(1,557)	47.6(1,680)	45.5(1,606)
		L	44.1(1,557)	44.1(1,557)	44.1(1,557)	45.5(1,606)
Fan	Type	Propeller		Propeller		
	Motor Output	W	53		53	
Running Current (Rated)	A	6.83	7.03	8.71	8.61	
Power Consumption (Rated)	W	1,620	1,660	2,075	2,045	
Power Factor	%	98.8	98.4	99.3	99.0	
Starting Current	A	7.2		8.9		
Dimensions (HxWxD)	mm	735x825x300		735x825x300		
Packaged Dimensions (HxWxD)	mm	784x960x390		784x960x390		
Weight	kg	49		53		
Gross Weight	kg	53		57		
Operation Sound	H/L	dBA	47/44	48/45	49/46	49/46
Sound Power	H	dBA	63	64	64	64
Drawing No.			3D040798		3D040799	

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Conversion Formula
kcal/h=kW×860
Btu/h=kW×3414
cfm=m ³ /min×35.3

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

50Hz 240V

Model	Indoor Units		FTXS71BVMA	
	Outdoor Units		RXS71BVMA	
			Cooling	Heating
Capacity Rated (Min.~Max.)	kW		7.1 (0.9~8.0)	8.5 (0.9~9.5)
	Btu/h		24,240 (3,070~27,310)	29,020 (3,070~32,430)
	kcal/h		6,110 (770~6,880)	7,310 (770~8,170)
Moisture Removal	L/h		4.5	—
Running Current (Rated)	A		10.6	11.1
Power Consumption Rated (Min.~Max.)	W		2,530 (450~3,070)	2,630 (450~3,800)
Power Factor	%		99.4	98.7
COP	W/W		2.81	3.23
Piping Connections	Liquid	mm	φ6.4	
	Gas	mm	φ15.9	
	Drain	mm	φ18.0	
Heat Insulation		Both Liquid and Gas Pipes		
Indoor Unit		FTXS71BVMA		
Front Panel Color		White		
Air Flow Rate	m ³ /min (cfm)	H	16.8 (593)	18.7
		M	14.2 (501)	16.1
		L	11.9 (420)	13.6
		SL	11.2 (395)	12.5
Fan	Type	Cross Flow Fan		
	Motor Output	W	43	
	Speed	Steps	5 Steps, Silent and Auto	
Air Direction Control		Right, Left, Horizontal and Downward		
Air Filter		Removable / Washable / Mildew Proof		
Running Current (Rated)	A		0.21	0.21
Power Consumption (Rated)	W		50	50
Power Factor	%		99.2	99.2
Temperature Control		Microcomputer Control		
Dimensions (HxWxD)	mm	290x1,050x238		
Packaged Dimensions (HxWxD)	mm	337x1,147x366		
Weight	kg	12		
Gross Weight	kg	17		
Operation Sound	H/M/L/SL	dBA	46/42/37/34	46/42/37/34
Sound Power	H	dBA	63	63
Outdoor Unit		RXS71BVMA		
Casing Color		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC45BXD		
	Motor Output	W	1,900	
Refrigerant Oil	Model	FVC50K		
	Charge	L	0.75	
Refrigerant	Model	R-410A		
	Charge	kg	1.70	
Air Flow Rate	m ³ /min (cfm)	H	51.5(1,818)	41.9(1,479)
		L	41.5(1,465)	37.4(1,320)
Fan	Type	Propeller		
	Motor Output	W	53	
Running Current (Rated)	A		10.39	10.89
Power Consumption (Rated)	W		2,480	2,580
Power Factor	%		99.5	98.7
Starting Current	A		11.1	
Dimensions (HxWxD)	mm	735x825x300		
Packaged Dimensions (HxWxD)	mm	784x960x390		
Weight	kg	55		
Gross Weight	kg	59		
Operation Sound	H/L	dBA	52/49	52/49
Sound Power	H	dBA	66	66
Drawing No.		3D040800		

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

Model	Indoor Units		FTXS50BVMB		FTXS60BVMB	
	Outdoor Units		RXS50B(2)VMB		RXS60B(2)VMB	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min.-Max.)	kW		5.0 (0.9-5.8)	5.8 (0.9-7.5)	6.0 (0.9-6.7)	7.0 (0.9-8.0)
	Btu/h		17,070 (3,070-19,800)	19,800 (3,070-25,610)	20,480 (3,070-22,870)	23,900 (3,070-27,310)
	kcal/h		4,300 (770-4,990)	4,990 (770-6,450)	5,160 (770-5,760)	6,020 (770-6,880)
Moisture Removal	L/h		2.9	—	3.9	—
Running Current (Rated)	A		7.3	7.5	9.3	9.2
Power Consumption Rated (Min.-Max.)	W		1,660 (450-2,300)	1,700 (450-2,580)	2,120 (450-2,450)	2,090 (450-3,100)
Power Factor	%		98.9	98.6	99.1	98.8
COP	W/W		3.01	3.41	2.83	3.35
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ12.7		φ12.7	
	Drain	mm	φ18.0		φ18.0	
Heat Insulation	Both Liquid and Gas Pipes				Both Liquid and Gas Pipes	
Indoor Unit	FTXS50BVMB				FTXS60BVMB	
Front Panel Color	White				White	
Air Flow Rate	m ³ /min (cfm)	H	11.4 (402)	12.6 (445)	16.2 (572)	17.4 (614)
		M	9.7 (342)	10.8 (381)	13.6 (480)	15.1 (533)
		L	8.0 (282)	8.9 (314)	11.4 (402)	12.7 (448)
		SL	7.1 (251)	7.7 (272)	10.2 (360)	11.4 (402)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	40		43	
	Speed	Steps	5 Steps, Silent and Auto		5 Steps, Silent and Auto	
Air Direction Control	Right, Left, Horizontal and Downward				Right, Left, Horizontal and Downward	
Air Filter	Removable / Washable / Mildew Proof				Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.18	0.20	0.18	0.20
Power Consumption (Rated)	W		40	45	40	45
Power Factor	%		96.6	97.8	96.6	97.8
Temperature Control	Microcomputer Control				Microcomputer Control	
Dimensions (HxWxD)	mm		290x795x238		290x1,050x238	
Packaged Dimensions (HxWxD)	mm		280x840x338		337x1,147x366	
Weight	kg		9		12	
Gross Weight	kg		13		17	
Operation Sound	H/M/L/SL	dBA	44/40/35/32	42/38/33/30	45/41/36/33	44/40/35/32
Sound Power	H	dBA	63	60	63	62
Outdoor Unit	RXS50B(2)VMB				RXS60B(2)VMB	
Casing Color	Ivory White				Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		2YC32HxD		2YC32HxD	
Refrigerant	Motor Output	W	1,500		1,500	
	Model		FVC50K		FVC50K	
Refrigerant Oil	Charge	L	0.65		0.65	
	Model		R-410A		R-410A	
Refrigerant	Charge	kg	1.20		1.70	
	Air Flow Rate	m ³ /min (cfm)	H	47.7(1,684)	44.1(1,557)	47.6(1,680)
L			44.1(1,557)	44.1(1,557)	44.1(1,557)	45.5(1,606)
Fan	Type		Propeller		Propeller	
	Motor Output	W	53		53	
Running Current (Rated)	A		6.82	7.30	9.12	9.00
Power Consumption (Rated)	W		1,620	1,655	2,080	2,045
Power Factor	%		99.0	98.6	99.2	98.8
Starting Current	A		7.5		9.3	
Dimensions (HxWxD)	mm		735x825x300		735x825x300	
Packaged Dimensions (HxWxD)	mm		784x960x390		784x960x390	
Weight	kg		49		53	
Gross Weight	kg		53		57	
Operation Sound	H	dBA	47	48	49	49
Sound Power	H	dBA	63	64	64	64
Drawing No.	3D040778A				3D040779	

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Conversion Formula
kcal/h=kW×860
Btu/h=kW×3414
cfm=m ³ /min×35.3

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

50Hz 230V

Model	Indoor Units		FTXS71BVMB		FTXS71BAVMB		
	Outdoor Units		RXS71B(2)VMB		RXS71B3VMB		
			Cooling	Heating	Cooling	Heating	
Capacity Rated (Min.~Max.)	kW		7.1 (0.9~8.0)	8.5 (0.9~9.5)	7.1 (0.9~8.0)	8.5 (0.9~9.5)	
	Btu/h		24,240 (3,070~27,310)	29,020 (3,070~32,430)	24,240 (3,070~27,310)	29,020 (3,070~32,430)	
	kcal/h		6,110 (770~6,880)	7,310 (770~8,170)	6,110 (770~6,880)	7,310 (770~8,170)	
Moisture Removal	L/h		4.5	—	4.5	—	
Running Current (Rated)	A		11.1	11.6	11.1	11.6	
Power Consumption Rated (Min.~Max.)	W		2,530 (450~3,070)	2,630 (450~3,800)	2,530 (450~3,070)	2,630 (450~3,800)	
Power Factor	%		99.1	98.6	99.1	98.6	
COP	W/W		2.81	3.23	2.81	3.23	
Piping Connections	Liquid	mm	φ6.4		φ6.4		
	Gas	mm	φ15.9		φ15.9		
	Drain	mm	φ18.0		φ18.0		
Heat Insulation	Both Liquid and Gas Pipes				Both Liquid and Gas Pipes		
Indoor Unit	FTXS71BVMB				FTXS71BAVMB		
Front Panel Color	White				White		
Air Flow Rate	m ³ /min (cfm)	H	16.7 (590)	18.5 (653)	16.7 (590)	18.5 (653)	
		M	14.2 (501)	15.1 (533)	14.2 (501)	15.1 (533)	
		L	11.6 (409)	13.5 (477)	11.6 (409)	13.5 (477)	
		SL	10.6 (374)	12.1 (427)	10.6 (374)	12.1 (427)	
Fan	Type	Cross Flow Fan				Cross Flow Fan	
	Motor Output	W	43				
	Speed	Steps	5 Steps, Silent and Auto				
Air Direction Control	Right, Left, Horizontal and Downward				Right, Left, Horizontal and Downward		
Air Filter	Removable / Washable / Mildew Proof				Removable / Washable / Mildew Proof		
Running Current (Rated)	A		0.20	0.22	0.20	0.22	
Power Consumption (Rated)	W		45	50	45	50	
Power Factor	%		96.4	97.6	96.4	97.6	
Temperature Control	Microcomputer Control				Microcomputer Control		
Dimensions (HxWxD)	mm		290x1,050x238		290x1,050x238		
Packaged Dimensions (HxWxD)	mm		337x1,147x366		337x1,147x366		
Weight	kg		12		12		
Gross Weight	kg		17		17		
Operation Sound	H/M/L/SL	dBA	46/42/37/34		46/42/37/34		
Sound Power	H	dBA	63		63		
Outdoor Unit	RXS71B(2)VMB				RXS71B3VMB		
Casing Color	Ivory White				Ivory White		
Compressor	Type	Hermetically Sealed Swing Type				Hermetically Sealed Swing Type	
	Model	2YC45BXD				2YC45BXD	
Refrigerant	Motor Output	W	1,900				
	Model	FVC50K				FVC50K	
Refrigerant Oil	Charge	L	0.75				
	Model	R-410A				R-410A	
Refrigerant	Charge	kg	1.70				
	Air Flow Rate	m ³ /min (cfm)	H	51.5(1,818)	41.9(1,479)	51.5(1,818)	41.9(1,479)
L			41.5(1,465)	37.4(1,320)	41.5(1,465)	37.4(1,320)	
Fan	Type	Propeller				Propeller	
	Motor Output	W	53				
Running Current (Rated)	A		10.90	11.40	10.90	11.40	
Power Consumption (Rated)	W		2,485	2,580	2,485	2,580	
Power Factor	%		99.1	98.4	99.1	98.4	
Starting Current	A		11.6		11.6		
Dimensions (HxWxD)	mm		735x825x300		735x825x300		
Packaged Dimensions (HxWxD)	mm		784x960x390		784x960x390		
Weight	kg		55		55		
Gross Weight	kg		59		59		
Operation Sound	H	dBA	52		52		
Sound Power	H	dBA	66		66		
Drawing No.	3D040780A				3D050880		

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50Hz 230V

Model	Indoor Units		ATXS50CVMB	
	Outdoor Units		ARXS50C(2)VMB	
			Cooling	Heating
Capacity Rated (Min.-Max.)	kW		5.0 (0.9~5.8)	5.8 (0.9~7.5)
	Btu/h		17,070 (3,070~19,800)	19,800 (3,070~25,610)
	kcal/h		4,300 (770~4,990)	4,990 (770~6,450)
Moisture Removal	L/h		2.9	—
Running Current (Rated)	A		7.3	7.5
Power Consumption Rated (Min.-Max.)	W		1,660 (450~2,300)	1,700 (450~2,580)
Power Factor	%		98.9	98.6
COP	W/W		3.01	3.41
Piping Connections	Liquid	mm	φ 6.4	
	Gas	mm	φ12.7	
	Drain	mm	φ18.0	
Heat Insulation		Both Liquid and Gas Pipes		
Indoor Unit		ATXS50CVMB		
Front Panel Color		White		
Air Flow Rate	m ³ /min (cfm)	H	11.4 (402)	12.6 (445)
		M	9.7 (342)	10.8 (381)
		L	8.0 (282)	8.9 (314)
		SL	7.1 (251)	7.7 (272)
Fan	Type	Cross Flow Fan		
	Motor Output	W	40	
	Speed	Steps	5 Steps, Silent and Auto	
Air Direction Control		Right, Left, Horizontal and Downward		
Air Filter		Removable / Washable / Mildew Proof		
Running Current (Rated)	A		0.18	0.20
Power Consumption (Rated)	W		40	45
Power Factor	%		96.6	97.8
Temperature Control		Microcomputer Control		
Dimensions (HxWxD)	mm	290x795x230		
Packaged Dimensions (HxWxD)	mm	280x840x338		
Weight	kg	9		
Gross Weight	kg	13		
Operation Sound	H/M/L/SL	dBA	44/40/35/32	42/38/33/30
Sound Power	H	dBA	63	60
Outdoor Unit		ARXS50C(2)VMB		
Casing Color		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC32HXD		
	Motor Output	W	1,500	
Refrigerant Oil	Model	FVC50K		
	Charge	L	0.65	
Refrigerant	Model	R-410A		
	Charge	kg	1.20	
Air Flow Rate	m ³ /min (cfm)	H	47.7(1,684)	44.1(1,557)
		L	44.1(1,557)	44.1(1,557)
Fan	Type	Propeller		
	Motor Output	W	53	
Running Current (Rated)	A		6.82	7.30
Power Consumption (Rated)	W		1,620	1,655
Power Factor	%		99.0	98.6
Starting Current	A		7.5	
Dimensions (HxWxD)	mm	735x825x300		
Packaged Dimensions (HxWxD)	mm	784x960x390		
Weight	kg	49		
Gross Weight	kg	53		
Operation Sound	H	dBA	47	48
Sound Power	H	dBA	63	64
Drawing No.		3D044869		

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Conversion Formula
kcal/h=kW×860
Btu/h=kW×3414
cfm=m ³ /min×35.3

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

50Hz 230V

Model	Indoor Units		ATXS50DVMB	
	Outdoor Units		ARXS50C(2)VMB	
			Cooling	Heating
Capacity Rated (Min.~Max.)	kW		5.0 (0.9~5.8)	5.8 (0.9~7.5)
	Btu/h		17,070 (3,070~19,800)	19,800 (3,070~25,610)
	kcal/h		4,300 (770~4,990)	4,990 (770~6,450)
Moisture Removal	L/h		2.9	—
Running Current (Rated)	A		7.3	7.5
Power Consumption Rated (Min.~Max.)	W		1,660 (450~2,300)	1,700 (450~2,580)
Power Factor	%		98.9	98.6
COP	W/W		3.01	3.41
Piping Connections	Liquid	mm	φ 6.4	
	Gas	mm	φ12.7	
	Drain	mm	φ18.0	
Heat Insulation	Both Liquid and Gas Pipes			
Indoor Unit		ATXS50DVMB		
Front Panel Color		White		
Air Flow Rate	m ³ /min (cfm)	H	11.4 (402)	12.6 (445)
		M	9.7 (342)	10.8 (381)
		L	8.0 (282)	8.9 (314)
		SL	7.1 (251)	7.7 (272)
Fan	Type	Cross Flow Fan		
	Motor Output	W	40	
	Speed	Steps	5 Steps, Silent and Auto	
Air Direction Control		Right, Left, Horizontal and Downward		
Air Filter		Removable / Washable / Mildew Proof		
Running Current (Rated)	A		0.18	0.20
Power Consumption (Rated)	W		40	45
Power Factor	%		96.6	97.8
Temperature Control		Microcomputer Control		
Dimensions (HxWxD)	mm	290x795x238		
Packaged Dimensions (HxWxD)	mm	280x840x338		
Weight	kg	9		
Gross Weight	kg	13		
Operation Sound	H/M/L/SL	dBA	44/40/35/32	42/38/33/30
Sound Power	H	dBA	63	60
Outdoor Unit		ARXS50C(2)VMB		
Casing Color		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC32HXD		
	Motor Output	W	1,500	
Refrigerant Oil	Model	FVC50K		
	Charge	L	0.65	
Refrigerant	Model	R-410A		
	Charge	kg	1.20	
Air Flow Rate (H/L)	m ³ /min		47.7/44.1	44.1/44.1
	cfm		1,684/1,557	1,557/1,557
Fan	Type	Propeller		
	Motor Output	W	53	
Running Current (Rated)	A		6.82	7.30
Power Consumption (Rated)	W		1,620	1,655
Power Factor	%		99.0	98.6
Starting Current	A		7.5	
Dimensions (HxWxD)	mm	735x825x300		
Packaged Dimensions (HxWxD)	mm	784x960x390		
Weight	kg	49		
Gross Weight	kg	53		
Operation Sound	H/L	dBA	47/—	48/—
Sound Power	H	dBA	63	64
Drawing No.	3D047938			

- Note:**
- MAX. interunit piping length: 30m
 - MIN. interunit piping length: 1.5m
 - MAX. interunit height difference: 20m
 - Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
 - The data are based on the conditions shown in the table below.

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

50Hz 230V

Model	Indoor Units		FTYS50BVMB		FTYS60BVMB		
	Outdoor Units		RYS50B(2)VMB		RYS60B(2)VMB		
			Cooling	Heating	Cooling	Heating	
Capacity Rated	kW		5.0	5.8	6.0	7.0	
	Btu/h		17,070	19,800	20,480	23,900	
	kcal/h		4,300	4,990	5,160	6,020	
Moisture Removal	L/h		2.9	—	3.9	—	
Running Current (Rated)	A		7.3	7.5	9.3	9.2	
Power Consumption Rated	W		1,660	1,700	2,120	2,090	
Power Factor	%		98.9	98.6	99.1	98.8	
COP	W/W		3.01	3.41	2.83	3.35	
Piping Connections	Liquid	mm	φ 6.4		φ 6.4		
	Gas	mm	φ12.7		φ12.7		
	Drain	mm	φ18.0		φ18.0		
Heat Insulation	Both Liquid and Gas Pipes				Both Liquid and Gas Pipes		
Indoor Unit	FTYS50BVMB				FTYS60BVMB		
Front Panel Color	White				White		
Air Flow Rate	m ³ /min (cfm)	H	11.5 (406)	12.2 (431)	16.4 (579)	17.5 (618)	
		M	9.8 (346)	10.5 (371)	13.9 (491)	15.2 (537)	
		L	8.3 (293)	8.8 (311)	11.6 (409)	12.8 (452)	
Fan	Type	Cross Flow Fan				Cross Flow Fan	
	Motor Output	W	40		43		
	Speed	Steps	5 Steps and Auto		5 Steps and Auto		
Air Direction Control	Right, Left, Horizontal and Downward				Right, Left, Horizontal and Downward		
Air Filter	Removable / Washable / Mildew Proof				Removable / Washable / Mildew Proof		
Running Current (Rated)	A		0.18	0.18	0.18	0.18	
Power Consumption (Rated)	W		40	40	40	40	
Power Factor	%		96.6	96.6	96.6	96.6	
Temperature Control	Microcomputer Control				Microcomputer Control		
Dimensions (HxWxD)	mm		290x795x230		290x1,050x230		
Packaged Dimensions (HxWxD)	mm		280x840x338		337x1,147x366		
Weight	kg		9		12		
Gross Weight	kg		13		17		
Operation Sound	H/L	dBa	44/35	42/—	45/36	44/—	
Sound Power	H	dBa	63	60	63	62	
Outdoor Unit	RYS50B(2)VMB				RYS60B(2)VMB		
Casing Color	Ivory White				Ivory White		
Compressor	Type	Hermetically Sealed Swing Type				Hermetically Sealed Swing Type	
	Model	2YC32HXD				2YC32HXD	
	Motor Output	W	1,500		1,500		
Refrigerant Oil	Model	FVC50K				FVC50K	
	Charge	L	0.65		0.65		
Refrigerant	Model	R-410A				R-410A	
	Charge	kg	1.20		1.70		
Air Flow Rate	m ³ /min (cfm)	H	47.7(1,684)	44.1(1,557)	47.6(1,680)	45.5(1,606)	
		L	44.1(1,557)	44.1(1,557)	44.1(1,557)	45.5(1,606)	
Fan	Type	Propeller				Propeller	
	Motor Output	W	53		53		
Running Current (Rated)	A		7.12	7.32	9.12	9.02	
Power Consumption (Rated)	W		1,620	1,660	2,080	2,050	
Power Factor	%		98.9	98.6	99.2	98.8	
Starting Current	A		7.5		9.3		
Dimensions (HxWxD)	mm		735x825x300		735x825x300		
Packaged Dimensions (HxWxD)	mm		784x960x390		784x960x390		
Weight	kg		49		53		
Gross Weight	kg		53		57		
Operation Sound	H	dBa	47	48	49	49	
Sound Power	H	dBa	63	64	64	64	
Drawing No.	3D040784A				3D040785		

Note:

- MAX. interunit piping length: 30m
- MIN. interunit piping length: 1.5m
- MAX. interunit height difference: 20m
- Amount of additional charge of refrigerant 20g/m for piping length exceeding 10m
- The data are based on the conditions shown in the table below.

Conversion Formula
kcal/h=kW×860
Btu/h=kW×3414
cfm=m ³ /min×35.3

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

1.4 Heat Pump - R22 Series

50Hz 220-230-240V / 60Hz 220-230V

Model	Indoor Units		FTXD50BVMA		FTXD60BVMA	
	Outdoor Units		RXD50BVMA		RXD60BVMA	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min.-Max.)	kW		5.2 (0.9-5.9)	6.5 (0.9-8.0)	6.2 (0.9-7.6)	7.2 (0.9-9.0)
	Btu/h		17,750 (3,070-20,140)	22,190 (3,070-27,310)	21,170 (3,070-25,950)	24,580 (3,070-30,730)
	kcal/h		4,470 (770-5,070)	5,590 (770-6,880)	5,330 (770-6,540)	6,190 (770-7,740)
Moisture Removal	L/h		2.9	—	3.9	—
Running Current (Rated)	A		7.4-7.0-6.7/7.4-7.0	8.5-8.1-7.7/8.5-8.1	9.6-9.2-8.8/9.6-9.2	9.7-9.3-8.9/9.7-9.3
Power Consumption Rated (Min.-Max.)	W		1,600 (450-2,300)	1,840 (450-2,800)	2,100 (450-3,210)	2,120 (450-3,230)
Power Factor	%		98.3-99.4-99.5/98.3-99.4	98.4-98.8-99.6/98.4-98.8	99.4-99.2-99.4/99.4-99.2	99.3-99.1-99.3/99.3-99.1
COP	W/W		3.25	3.53	2.95	3.40
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ12.7		φ15.9	
	Drain	mm	φ18.0		φ18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Indoor Unit			FTXD50BVMA		FTXD60BVMA	
Front Panel Color			White		White	
Air Flow Rate	m ³ /min (cfm)	H	16.8 (593)	17.5 (618)	17.5 (618)	18.7 (660)
		M	14.0 (494)	14.9 (526)	14.6 (515)	16.1 (568)
		L	11.8 (417)	12.5 (441)	12.2 (431)	13.6 (480)
		SL	10.4 (367)	11.0 (388)	10.8 (381)	11.8 (417)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	43		43	
	Speed	Steps	5 Steps, Silent and Auto		5 Steps, Silent and Auto	
Air Direction Control			Right, Left, Horizontal and Downward		Right, Left, Horizontal and Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.19-0.18-0.17/0.19-0.18	0.19-0.18-0.17/0.19-0.18	0.21-0.20-0.19/0.21-0.20	0.21-0.20-0.19/0.21-0.20
Power Consumption (Rated)	W		40	40	45	45
Power Factor	%		95.7-96.6-98.0/95.7-96.6	95.7-96.6-98.0/95.7-96.6	97.4-97.8-98.7/97.4-97.8	97.4-97.8-98.7/97.4-97.8
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)	mm		290x1,050x238		290x1,050x238	
Packaged Dimensions (HxWxD)	mm		337x1,147x366		337x1,147x366	
Weight	kg		12		12	
Gross Weight	kg		17		17	
Operation Sound	H/M/L/SL	dBA	44/40/35/32	42/38/33/30	45/41/36/33	44/40/35/32
Sound Power	H	dBA	63	60	63	62
Outdoor Unit			RXD50BVMA		RXD60BVMA	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		2YC32UXD		2YC45ZXD	
	Motor Output	W	1,500		1,500	
Refrigerant Oil	Model		SE50P		SUNISO 4GSD.I.	
	Charge	L	0.65		0.65	
Refrigerant	Model		R22		R22	
	Charge	kg	1.25		1.80	
Air Flow Rate	m ³ /min (cfm)	H	42.8(1,511)	40.7(1,437)	46.3(1,634)	44.2(1,560)
		L	40.7(1,437)	40.7(1,437)	42.9(1,514)	44.2(1,560)
Fan	Type		Propeller		Propeller	
	Motor Output	W	53		53	
Running Current (Rated)	A		7.21-6.82-6.53/7.21-6.82	8.31-7.92-7.53/8.31-7.92	9.39-9.00-8.61/9.39-9.00	9.49-9.10-8.71/9.49-9.10
Power Consumption (Rated)	W		1,560	1,800	2,055	2,075
Power Factor	%		98.3-99.5-99.5/98.3-99.5	98.5-98.8-99.6/98.5-98.8	99.5-99.3-99.4/99.5-99.3	99.4-99.1-99.3/99.4-99.1
Starting Current	A		7.7		9.0	
Dimensions (HxWxD)	mm		735x825x300		735x825x300	
Packaged Dimensions (HxWxD)	mm		784x960x390		784x960x390	
Weight	kg		49		55	
Gross Weight	kg		54		59	
Operation Sound	H/L	dBA	47/44	48/45	49/46	49/46
Sound Power	H	dBA	63	64	64	64
Drawing No.			3D040790		3D040791	

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m : 20g/m(50/60class), 50g/m(71class)
- The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50Hz 220-230-240V / 60Hz 220-230V

Model	Indoor Units		FTXD71BVMA	
	Outdoor Units		RXD71BVMA	
			Cooling	Heating
Capacity Rated (Min.-Max.)		kW	7.1 (0.9~8.0)	8.5 (0.9~9.7)
		Btu/h	24,240 (3,070~27,310)	29,020 (3,070~33,120)
		kcal/h	6,110 (770~6,880)	7,310 (770~8,340)
Moisture Removal		L/h	4.5	—
Running Current (Rated)		A	11.9-11.4-10.9/11.9-11.4	11.8-11.3-10.9/11.8-11.3
Power Consumption Rated (Min.-Max.)		W	2,600 (450~3,350)	2,580 (450~3,490)
Power Factor		%	99.3-99.2-99.4/99.3-99.2	99.4-99.3-98.6/99.4-99.3
COP		W/W	2.73	3.29
Piping Connections	Liquid	mm	φ 9.5	
	Gas	mm	φ15.9	
	Drain	mm	φ18.0	
Heat Insulation		Both Liquid and Gas Pipes		
Indoor Unit		FTXD71BVMA		
Front Panel Color		White		
Air Flow Rate	m ³ /min (cfm)	H	18.3 (646)	19.8 (699)
		M	15.3 (540)	17.1 (604)
		L	12.7 (448)	14.4 (508)
		SL	11.3 (399)	12.6 (445)
Fan	Type	Cross Flow Fan		
	Motor Output	W 43		
	Speed	Steps 5 Steps, Silent and Auto		
Air Direction Control		Right, Left, Horizontal and Downward		
Air Filter		Removable / Washable / Mildew Proof		
Running Current (Rated)		A	0.23-0.22-0.21/0.23-0.22	0.23-0.22-0.21/0.23-0.22
Power Consumption (Rated)		W	50	50
Power Factor		%	98.8-98.8-99.2/98.8-98.8	98.8-98.8-99.2/98.8-98.8
Temperature Control		Microcomputer Control		
Dimensions (HxWxD)		mm	290x1,050x238	
Packaged Dimensions (HxWxD)		mm	337x1,147x366	
Weight		kg	12	
Gross Weight		kg	17	
Operation Sound	H/M/L/SL	dBA	46/42/37/34	46/42/37/34
Sound Power	H	dBA	63	63
Outdoor Unit		RXD71BVMA		
Casing Color		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC63ZXD		
	Motor Output	W 1,900		
Refrigerant Oil	Model	SUNISO 4GSD.I.		
	Charge	L 0.75		
Refrigerant	Model	R22		
	Charge	kg 1.80		
Air Flow Rate	m ³ /min (cfm)	H	51.5(1,818)	41.9(1,479)
		L	41.5(1,465)	37.4(1,320)
Fan	Type	Propeller		
	Motor Output	W 53		
Running Current (Rated)		A	11.67-11.18-10.69/11.67-11.18	11.57-11.08-10.69/11.57-11.08
Power Consumption (Rated)		W	2,550	2,530
Power Factor		%	99.3-99.2-99.4/99.3-99.2	99.4-99.3-98.6/99.4-99.3
Starting Current		A	11.3	
Dimensions (HxWxD)		mm	735x825x300	
Packaged Dimensions (HxWxD)		mm	784x960x390	
Weight		kg	57	
Gross Weight		kg	61	
Operation Sound	H/L	dBA	52/49	52/49
Sound Power	H	dBA	66	66
Drawing No.	3D040792			

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m : 20g/m(50/60class), 50g/m(71class)
- The data are based on the conditions shown in the table below.

Conversion Formula
kcal/h=kW×860
Btu/h=kW×3414
cfm=m ³ /min×35.3

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

60Hz 220V

Model	Indoor Units		FTXD50BVMT		FTXD60BVMT	
	Outdoor Units		RXD50BVMT		RXD60BVMT	
			Cooling	Heating	Cooling	Heating
Capacity (Min.-Max.)	kW		0.9-5.9	0.9-8.0	0.9-6.5	0.9-8.1
	kcal/h		775-5,070	775-6,880	775-5,590	775-6,970
Moisture Removal	L/h		2.9	—	3.9	—
Running Current	A		8.00	9.10	9.60	9.60
Power Consumption (Min.-Max.)	W		450-2,300	450-2,800	460-2,710	460-2,600
Power Factor	%		99.4	98.9	99.4	99.4
COP	W/W		2.86	3.28	2.79	3.39
Piping Connections	Liquid	mm	φ6.4		φ6.4	
	Gas	mm	φ12.7		φ15.9	
	Drain	mm	φ18.0		φ18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Indoor Unit			FTXD50BVMT		FTXD60BVMT	
Front Panel Color			White		White	
Air Flow Rate	m ³ /min (cfm)	H	15.4 (545)	16.1 (569)	16.2 (572)	17.1 (605)
		M	12.9 (456)	13.7 (485)	13.6 (480)	14.8 (521)
		L	10.8 (383)	11.5 (406)	11.4 (402)	12.5 (443)
		SL	9.6 (339)	10.2 (359)	10.2 (358)	10.9 (385)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	43		43	
	Speed	Steps	5 Steps, Silent and Auto		5 Steps, Silent and Auto	
Air Direction Control		Right, Left, Horizontal and Downward		Right, Left, Horizontal and Downward		
Air Filter		Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof		
Running Current	A		0.19	0.19	0.21	0.21
Power Consumption	W		40	40	45	45
Power Factor	%		95.7	95.7	97.4	97.4
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)	mm		290x1,050x238		290x1,050x238	
Packaged Dimensions (HxWxD)	mm		337x1,147x366		337x1,147x366	
Weight	kg		12		12	
Gross Weight	kg		17		17	
Operation Sound	H/M/L/SL	dBA	44/40/35/32	42/38/33/30	45/41/36/33	44/40/35/32
Outdoor Unit			RXD50BVMT		RXD60BVMT	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		2YC32UXD		2YC32UXD	
Refrigerant Oil	Motor Output	W	1,500		1,500	
	Model		SE50P		SE50P	
Refrigerant	Charge	L	0.65		0.65	
	Model		R22		R22	
Air Flow Rate	m ³ /min (cfm)	H	42.8 (1,511)	40.7 (1,437)	46.3 (1,634)	44.2 (1,560)
		L	40.7 (1,437)	40.7 (1,437)	42.9 (1,514)	44.2 (1,560)
Fan	Type		Propeller		Propeller	
	Motor Output	W	53		53	
Running Current	A		7.81	8.91	9.39	9.39
Power Consumption	W		1,710	1,940	2,055	2,055
Power Factor	%		99.5	99.0	99.5	99.5
Starting Current	A		9.1		9.6	
Dimensions (HxWxD)	mm		735x825x300		735x825x300	
Packaged Dimensions (HxWxD)	mm		784x960x390		784x960x390	
Weight	kg		49		53	
Gross Weight	kg		54		57	
Operation Sound	H/L	dBA	47/44	48/45	49/46	49/46
Drawing No.			3D040808A		3D040809A	

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m: 20g/m(50/60 class), 50g/m(71 class)
- The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 21°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

Model	Indoor Units		FTXD71BVMT	
	Outdoor Units		RXD71BVMT	
			Cooling	Heating
Capacity (Min.-Max.)	kW		0.9~7.6	0.9~9.0
	kcal/h		775~6,540	775~7,740
Moisture Removal	L/h		4.5	—
Running Current	A		14.0	12.6
Power Consumption (Min.-Max.)	W		470~3,210	470~3,600
Power Factor	%		99.0	99.2
COP	W/W		2.48	3.09
Piping Connections	Liquid	mm	φ 9.5	
	Gas	mm	φ15.9	
	Drain	mm	φ18.0	
Heat Insulation	Both Liquid and Gas Pipes			
Indoor Unit		FTXD71BVMT		
Front Panel Color	White			
Air Flow Rate	m ³ /min (cfm)	H	16.6 (585)	18.2 (642)
		M	13.9 (490)	15.7 (553)
		L	11.7 (412)	13.3 (469)
		SL	10.4 (368)	11.7 (412)
Fan	Type	Cross Flow Fan		
	Motor Output	W	43	
	Speed	Steps	5 Steps, Silent and Auto	
Air Direction Control	Right, Left, Horizontal and Downward			
Air Filter	Removable / Washable / Mildew Proof			
Running Current	A	0.23		0.23
Power Consumption	W	50		50
Power Factor	%	98.8		98.8
Temperature Control	Microcomputer Control			
Dimensions (HxWxD)	mm	290x1,050x238		
Packaged Dimensions (HxWxD)	mm	337x1,147x366		
Weight	kg	12		
Gross Weight	kg	17		
Operation Sound	H/M/L/SL	dBA	46/42/37/34	46/42/37/34
Outdoor Unit		RXD71BVMT		
Casing Color	Ivory White			
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC45ZXD		
	Motor Output	W	1,900	
Refrigerant Oil	Model	SUNISO 4GSD.I.		
	Charge	L	0.75	
Refrigerant	Model	R22		
	Charge	kg	1.80	
Air Flow Rate	m ³ /min (cfm)	H	51.5 (1,818)	41.9 (1,479)
		L	41.5 (1,465)	37.4 (1,320)
Fan	Type	Propeller		
	Motor Output	W	53	
Running Current	A	13.77		12.37
Power Consumption	W	3,000		2,700
Power Factor	%	99.0		99.2
Starting Current	A	14.0		
Dimensions (HxWxD)	mm	735x825x300		
Packaged Dimensions (HxWxD)	mm	784x960x390		
Weight	kg	55		
Gross Weight	kg	59		
Operation Sound	H/L	dBA	52/49	52/49
Drawing No.	3D040810A			

Note:

- MAX. interunit piping length: 30m
- MAX. interunit height difference: 20m
- Amount of additional charge for piping length exceeding 10m: 20g/m(50/60 class), 50g/m(71 class)
- The data are based on the conditions shown in the table below.

Conversion Formula
kcal/h=kW×860
Btu/h=kW×3414
cfm=m ³ /min×35.3

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 21°CDB Outdoor ; 7°CDB/6°CWB	7.5m

50Hz 240V

Model	Indoor Unit		FTXD50BV4	
	Outdoor Unit		RXD50BV4	
			Cooling	Heating
Capacity Rated (Min.~Max.)	kW		4.8 (0.9~5.2)	6.0 (0.9~7.3)
	Btu/h		16,390 (3,070~17,750)	20,480 (3,070~24,920)
	kcal/h		4,130 (770~4,470)	5,160 (770~6,280)
Moisture Removal	L/h		2.9	—
Running Current (Rated)	A		7.3	8.2
Power Consumption Rated (Min.~Max.)	W		1,740 (450~1,950)	1,950 (450~2,300)
Power Factor	%		99.3	99.1
COP	W/W		2.76	3.08
Piping Connections	Liquid	mm	φ 6.4	
	Gas	mm	φ12.7	
	Drain	mm	φ18.0	
Heat Insulation	Both Liquid and Gas Pipes			
Indoor Unit		FTXD50BV4		
Front Panel Color		White		
Air Flow Rate	m ³ /min (cfm)	H	12.3 (433)	13.4 (474)
		M	10.4 (366)	11.4 (402)
		L	8.6 (303)	9.3 (329)
		SL	7.6 (268)	8.2 (291)
Fan	Type	Cross Flow Fan		
	Motor Output	W	40	
	Speed	Steps	5 Steps, Silent and Auto	
Air Direction Control		Right, Left, Horizontal and Downward		
Air Filter		Removable / Washable / Mildew Proof		
Running Current (Rated)	A		0.18	0.18
Power Consumption (Rated)	W		40	40
Power Factor	%		92.6	92.6
Temperature Control		Microcomputer Control		
Dimensions (HxWxD)	mm	290x795x238		
Packaged Dimensions (HxWxD)	mm	280x840x338		
Weight	kg	9		
Gross Weight	kg	13		
Operation Sound	H/M/L/SL	dBA	44/40/35/32	42/38/33/30
Sound Power	H	dBA	63	60
Outdoor Unit		RXD50BV4		
Casing Color		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC32UXD		
	Motor Output	W	1,500	
Refrigerant Oil	Model	SE50P		
	Charge	L	0.65	
Refrigerant	Model	R22		
	Charge	kg	1.25	
Air Flow Rate	m ³ /min (cfm)	H	42.8(1,511)	40.7(1,437)
		L	40.7(1,437)	40.7(1,437)
Fan	Type	Propeller		
	Motor Output	W	53	
Running Current (Rated)	A		7.12	8.02
Power Consumption (Rated)	W		1,700	1,910
Power Factor	%		99.5	99.2
Starting Current	A		7.2	
Dimensions (HxWxD)	mm	735x825x300		
Packaged Dimensions (HxWxD)	mm	784x960x390		
Weight	kg	49		
Gross Weight	kg	54		
Operation Sound	H/L	dBA	47/44	48/45
Sound Power	H	dBA	63	64
Drawing No.	3D040788			

- Note:**
- MAX. interunit piping length: 30m
 - MAX. interunit height difference: 20m
 - Amount of additional charge for piping length exceeding 10m : 20g/m
 - The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formula

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3414 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

Model	Indoor Units		FTXD80CV4	
	Outdoor Units		RXD80CV4	
			Cooling	Heating
Capacity Rated (Min.~Max.)		kW	8.0(0.9~8.5)	9.5 (0.9~10.2)
		Btu/h	27,310 (3,070~29,000)	32,420 (3,070~34,820)
		kcal/h	6,880 (770~7,310)	8,180 (770~8,780)
Moisture Removal		L/h	4.8	—
Running Current (Rated)		A	13.9	14.0
Power Consumption Rated (Min.~Max.)		W	3,300 (450~3,950)	3,320 (450~3,490)
Power Factor		%	98.9	98.8
COP		W/W	2.42	2.86
Piping Connections	Liquid	mm	φ 9.5	
	Gas	mm	φ15.9	
	Drain	mm	φ18.0	
Heat Insulation	Both Liquid and Gas Pipes			
Indoor Unit		FTXD80CV4		
Front Panel Color	White			
Air Flow Rate	m ³ /min (cfm)	H	20.9 (738)	20.8 (734)
		M	18.1 (637)	18.3 (646)
		L	15.2 (537)	15.8 (558)
		SL	13.4 (473)	14.2 (502)
Fan	Type	Cross Flow Fan		
	Motor Output	W	43	
	Speed	Steps	5 Steps, Silent and Auto	
Air Direction Control	Right, Left, Horizontal and Downward			
Air Filter	Removable / Washable / Mildew Proof			
Running Current (Rated)		A	0.30	0.27
Power Consumption (Rated)		W	70	64
Power Factor		%	98.2	98.8
Temperature Control	Microcomputer Control			
Dimensions (HxWxD)		mm	290x1,050x238	
Packaged Dimensions (HxWxD)		mm	337x1,147x366	
Weight		kg	12	
Gross Weight		kg	17	
Operation Sound	H/M/L/SL	dBA	49/45/40/37	47/43/38/35
Sound Power	H	dBA	65	63
Outdoor Unit		RXD80CV4		
Casing Color	Ivory White			
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC63ZXD		
	Motor Output	W	1,900	
Refrigerant Oil	Model	SUNISO 4GSD.I.		
	Charge	L	0.75	
Refrigerant	Model	R22		
	Charge	kg	1.80	
Air Flow Rate	m ³ /min (cfm)	H	51.5(1,818)	41.9(1,479)
		L	41.5(1,465)	41.9(1,479)
Fan	Type	Propeller		
	Motor Output	W	53	
Running Current (Rated)		A	13.6	13.7
Power Consumption (Rated)		W	3,230	3,250
Power Factor		%	99.0	98.8
Starting Current		A	11.3	
Dimensions (HxWxD)		mm	735x825x300	
Packaged Dimensions (HxWxD)		mm	784x960x390	
Weight		kg	57	
Gross Weight		kg	61	
Operation Sound	H/L	dBA	52/49	52/49
Sound Power	H	dBA	66	66
Drawing No.	3D043427			

- Note:**
- MAX. interunit piping length: 30m
 - MAX. interunit height difference: 20m
 - Amount of additional charge for piping length exceeding 10m : 50g/m
 - The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formula
kcal/h=kW×860 Btu/h=kW×3414 cfm=m ³ /min×35.3

Part 3

Printed Circuit Board

Connector Wiring Diagram

1. Printed Circuit Board Connector Wiring Diagram.....	36
1.1 Indoor Unit.....	36
1.2 Outdoor Unit.....	38

1. Printed Circuit Board Connector Wiring Diagram

1.1 Indoor Unit

Connectors

1) S1	Connector for fan motor
2) S6	Connector for swing motor (horizontal blades)
3) S8	Connector for swing motor (vertical blades)
4) S21	Connector for centralized control (HA)
5) S26, S37	Connector for buzzer PCB
6) S27, S29, S36	Connector for control PCB
7) S28	Connector for signal receiver PCB
8) S32	Connector for heat exchanger thermistor
9) S35	Connector for Intelligent Eye sensor PCB
10) S38	Connector for display PCB



Note: Other designations

1) V1	Varistor
2) JA	Address setting jumper
JB	Fan speed setting when compressor is OFF on thermostat
JC	Power failure recovery function
	* Refer to page 193 for detail.
3) SW1	Forced operation ON / OFF switch
4) LED1	LED for operation (green)
5) LED2	LED for timer (yellow)
6) LED3	LED for Home Leave operation (red)
7) LED A	Service monitor LED (green)
8) FU1	Fuse (3.15A)
9) RTH1	Room temperature thermistor




Note: Following parts are not on FT(Y)S 50 / 60B series:


- Intelligent Eye sensor PCB
- S8
- S35
- LED3

PCB Detail


PCB(1): Control PCB (indoor unit)

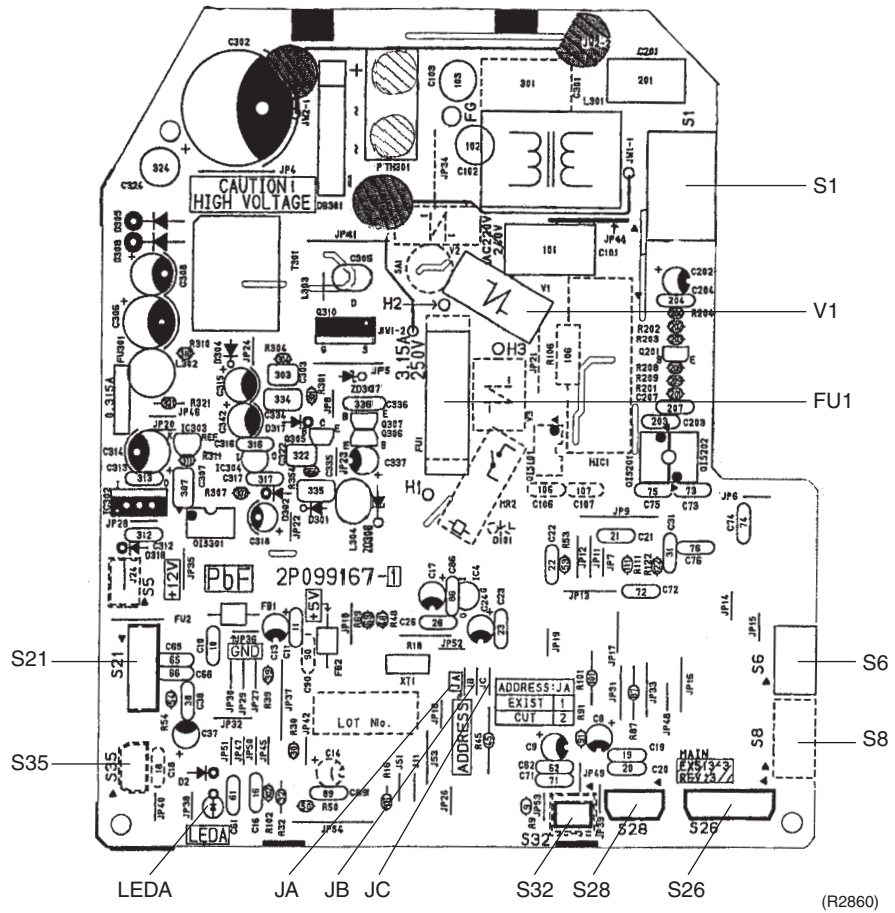


PCB(2): Signal Receiver PCB

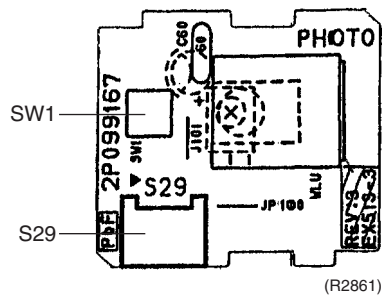


PCB(3): Buzzer PCB

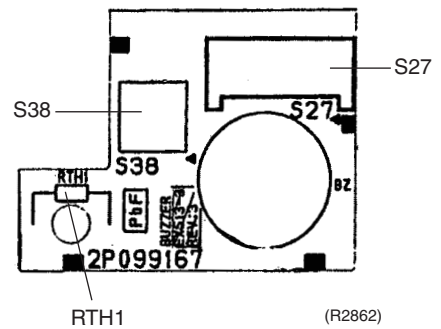

PCB(4): Display PCB

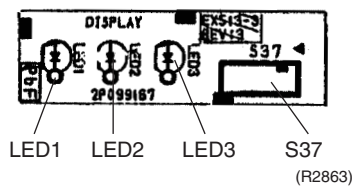

PCB(5): Intelligent Eye sensor PCB

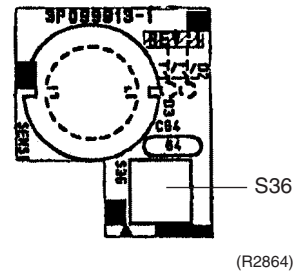

1.2 Outdoor Unit

Connectors

1) S10, AC2, HL	Connector for terminal strip
2) S20	Connector for electronic expansion valve coil
3) S31, S32	Connector for SPM
4) S33, S71	Connector for MID
5) S34, S52, S72, S102 CN11, CN14 HAC1, HE1	Connector for control PCB
6) S40	Connector for overload protector
7) S51, S101	Connector for service monitor PCB
8) S70	Connector for fan motor
9) S80	Connector for four way valve coil
10) S90	Connector for thermistors (outdoor air, heat exchanger, and discharge pipe)
11) S91	Connector for fin thermistor
12) AC1, E	Connector for power supply PCB
13) H1, H2	Connector for diode bridge
14) HE2	Connector for earth
15) L1, L2	Connector for reactor




Note: Other Designations


1) FU1	Fuse (30A)
2) FU2, FU201	Fuse (3.15A)
3) LED A	Service monitor LED
4) SW1	Forced operation ON/OFF switch
5) SW4	Field setting switch
	*Switch B is for the changeover of the lower limit for cooling. (OFF: -10°C, ON: -15°C) Refer to page 70 for detail.
6) V3	Varistor

PCB Detail


PCB(1): Control PCB (outdoor unit)

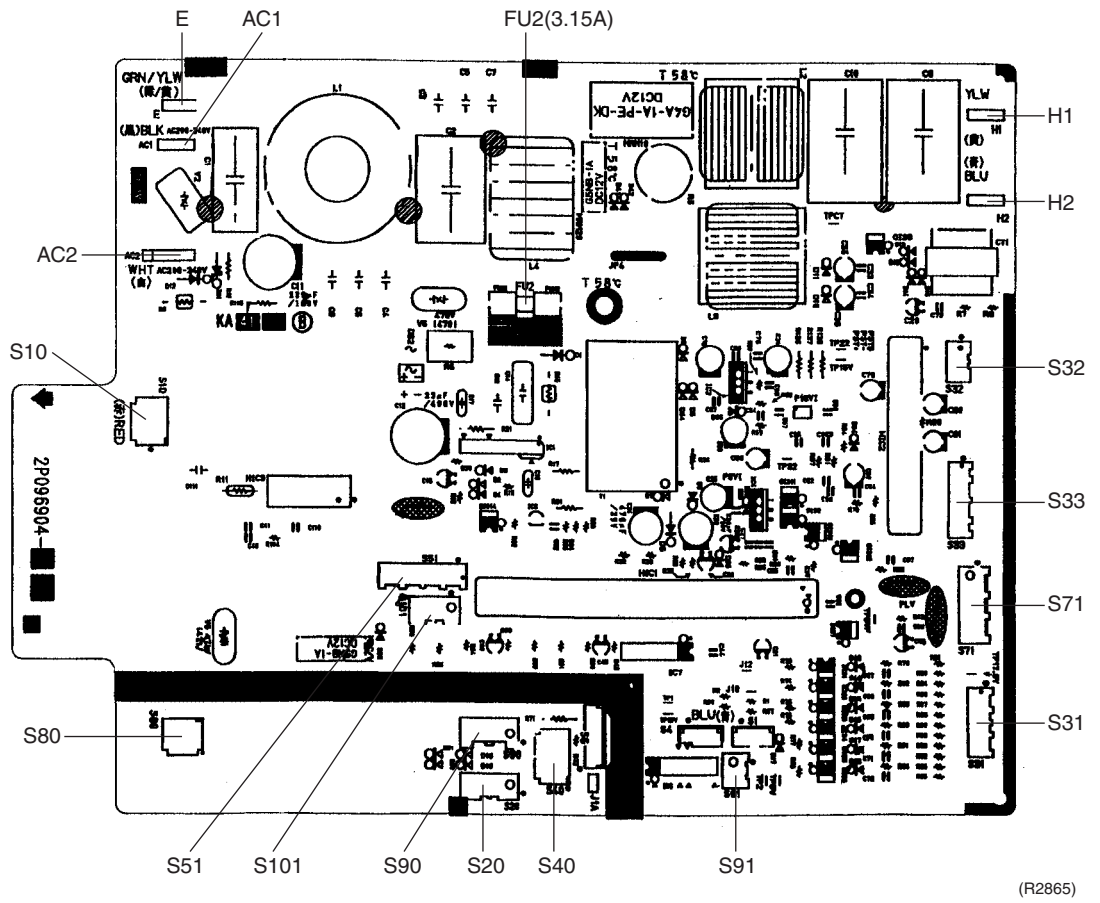

PCB(2): Power Supply PCB

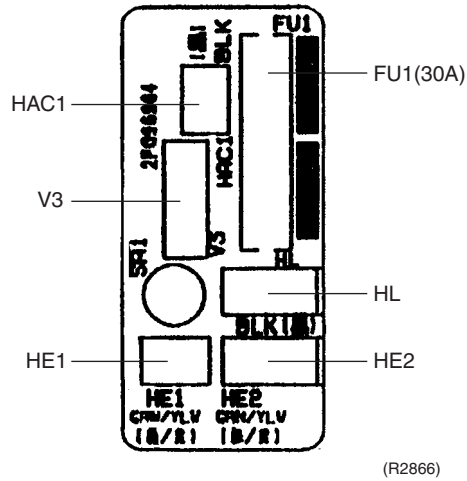

PCB(3): Service Monitor PCB

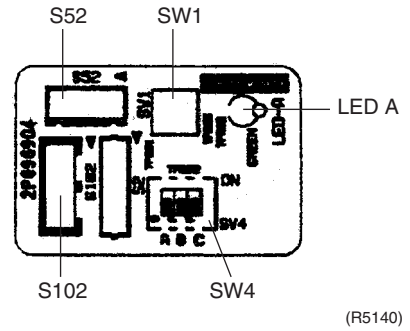

Part 4

Function and Control

1. Main Functions.....	42
1.1 Frequency Principle.....	42
1.2 Power-Airflow Dual Flaps, Wide Angle Louvers and Auto-Swing	44
1.3 Fan Speed Control for Indoor Units.....	45
1.4 Programme Dry Function	46
1.5 Automatic Operation.....	47
1.6 Thermostat Control.....	48
1.7 Night Set Mode.....	49
1.8 INTELLIGENT EYE	50
1.9 HOME LEAVE Operation	52
1.10 Inverter POWERFUL Operation	53
1.11 Other Functions.....	54
2. Function of Main Structural Parts.....	55
2.1 Function of Thermistor	55
3. Control Specification	57
3.1 Mode Hierarchy.....	57
3.2 Frequency Control.....	58
3.3 Controls at Mode Changing / Start-up.....	60
3.4 Discharge Pipe Temperature Control.....	61
3.5 Input Current Control.....	61
3.6 Freeze-up Protection Control	62
3.7 Heating Peak-cut Control	62
3.8 Fan Control.....	63
3.9 Liquid Compression Protection Function 2.....	63
3.10 Low Hz High Pressure Limit	64
3.11 Defrost Control	64
3.12 Electronic Expansion Valve Control	65
3.13 Malfunctions	68
3.14 Forced Operation Mode	69
3.15 Additional Function.....	69
3.16 Facility Setting Switch (cooling at low outdoor temperature).....	70

Part 5

System Configuration

1. System Configuration.....	72
2. Instruction.....	73
2.1 Safety Precautions	73
2.2 Names of Parts.....	75
2.3 Preparation before Operation.....	78
2.4 AUTO · DRY · COOL · HEAT · FAN Operation	81
2.5 Adjusting the Air Flow Direction	83
2.6 POWERFUL Operation	85
2.7 OUTDOOR UNIT SILENT Operation	86
2.8 HOME LEAVE Operation	87
2.9 INTELLIGENT EYE Operation	89
2.10 TIMER Operation	91
2.11 Care and Cleaning	93
2.12 Troubleshooting.....	96

1. Main Functions

i Note: See the list of functions for the functions applicable to different models.

1.1 Frequency Principle

Main Control Parameters

The compressor is frequency-controlled during normal operation. The target frequency is set by the following 2 parameters coming from the operating indoor unit:

- The load condition of the operating indoor unit
- The difference between the room temperature and the set temperature

Additional Control Parameters

The target frequency is adapted by additional parameters in the following cases:

- Frequency restrictions
- Initial settings
- Forced cooling operation


Inverter Principle

To regulate the capacity, a frequency control is needed. The inverter makes it possible to vary the rotation speed of the compressor. The following table explains the conversion principle:

Phase	Description
1	The supplied AC power source is converted into the DC power source for the present.
2	The DC power source is reconverted into the three phase AC power source with variable frequency. <ul style="list-style-type: none"> ■ When the frequency increases, the rotation speed of the compressor increases resulting in an increased refrigerant circulation. This leads to a higher amount of the heat exchange per unit. ■ When the frequency decreases, the rotation speed of the compressor decreases resulting in a decreased refrigerant circulation. This leads to a lower amount of the heat exchange per unit.

Drawing of Inverter

The following drawing shows a schematic view of the inverter principle:

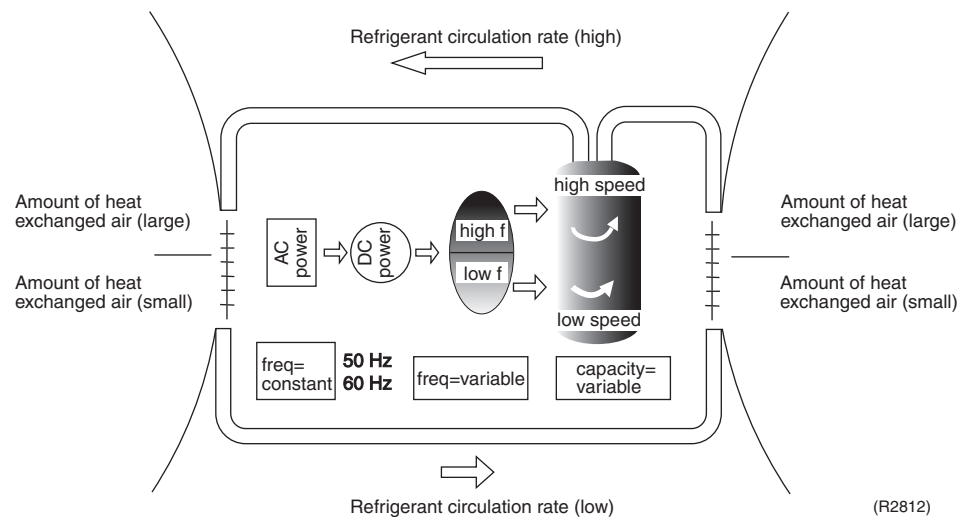


(R2812)

Inverter Features

The inverter provides the following features:

- The regulating capacity can be changed according to the changes in the outside temperature and cooling/heating load.
- Quick heating and quick cooling
The compressor rotational speed is increased when starting the heating (or cooling). This enables a quick set temperature.

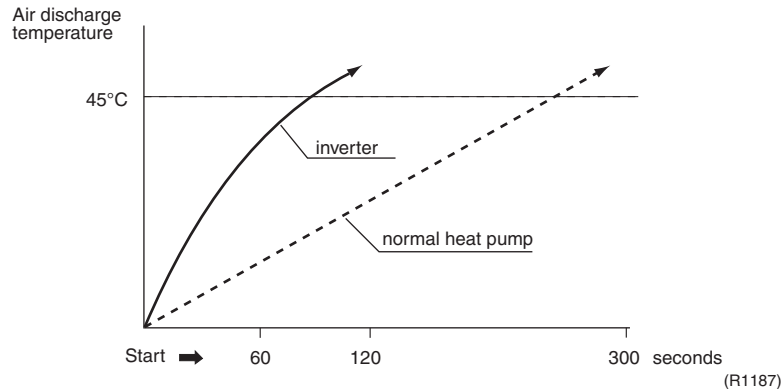

- Even during extreme cold weather, the high capacity is achieved. It is maintained even when the outside temperature is 2°C.
- Comfortable air conditioning
A detailed adjustment is integrated to ensure a fixed room temperature. It is possible to air condition with a small room temperature variation.
- Energy saving heating and cooling
Once the set temperature is reached, the energy saving operation enables to maintain the room temperature at low power.

Frequency Limits

The following table shows the functions that define the minimum and maximum frequency:

Frequency limits	Limited during the activation of following functions
Low	<ul style="list-style-type: none"> ■ Four way valve operation compensation. Refer to page 60.
High	<ul style="list-style-type: none"> ■ Input current control. Refer to page 61. ■ Compressor protection function. Refer to page 60. ■ Heating peak-cut control. Refer to page 62. ■ Freeze-up protection control. Refer to page 62. ■ Defrost control. Refer to page 64.

Forced Cooling Operation

For more information, refer to "Forced operation mode" on page 69.

1.2 Power-Airflow Dual Flaps, Wide Angle Louvers and Auto-Swing

Power-airflow Dual Flaps

The large flaps send a large volume of air downwards to the floor. The flap provides an optimum control area in cooling, heating and dry mode.

Heating Mode

During heating mode, the large flap enables direct warm air straight downwards. The flap presses the warm air above the floor to reach the entire room.

Cooling Mode






During cooling mode, the flap retracts into the indoor unit. Then, cool air can be blown far and pervaded all over the room.

Wide-Angle Louvers

The louvres, made of elastic synthetic resin, provide a wide range of airflow that guarantees a comfortable air distribution.

Auto-Swing

The following table explains the auto-swing process for heating, cooling, dry and fan :

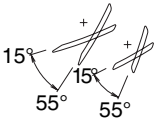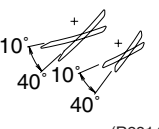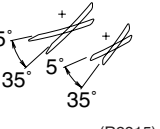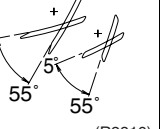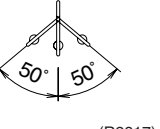
Vertical Swing (up and down)				Horizontal Swing (right and left)
Heating	Cooling	Dry	Fan	Heating, Cooling
 <p>(R2813)</p>	 <p>(R2814)</p>	 <p>(R2815)</p>	 <p>(R2816)</p>	 <p>(R2817)</p>

Outline of 3-D Airflow

Alternative repetition of vertical and horizontal swing motions enables uniform air-conditioning of the entire room. This function is effective for starting the air conditioner.

Detail of the Action

When the horizontal swing and vertical swing are both set to auto mode, the airflow become 3-D airflow and the horizontal swing and vertical swing motions are alternated. The order of swing motion is such that it turns counterclockwise, starting from the right upper point as viewed to the front side of the indoor unit.

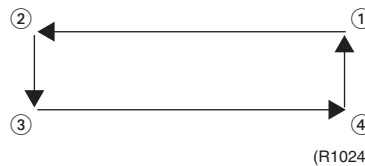

1.3 Fan Speed Control for Indoor Units

Control Mode

The airflow rate can be automatically controlled depending on the difference between the set temperature and the room temperature. This is done through phase control and Hall IC control.



For more information about Hall IC, refer to the troubleshooting for fan motor on page 111.

Phase Steps

Phase control and fan speed control contains 9 steps: LLL, LL, SL, L, ML, M, MH, H and HH.

Step	Cooling	Heating	Dry mode
LLL	 (R2818)	 (R5229)	50 · 60 · 71kW class : 750 - 1000 rpm (During powerful operation : 1050 rpm)
LL			
SL (Silent)			
L			
ML			
M			
MH			
H			
HH (Powerful)			

= Within this range the airflow rate is automatically controlled when the FAN setting button is set to automatic.




Note:

1. During powerful operation, fan operates H tap + 50 - 90 rpm.
2. Fan stops during defrost operation.
3. In time of thermostat OFF, the fan rotates at the following speed.
 Cooling: The fan keeps rotating at the set tap.
 Heating: The fan keeps rotating at LLL tap.


Automatic Air Flow Control for Heating

The following drawing explains the principle for fan speed control for heating:

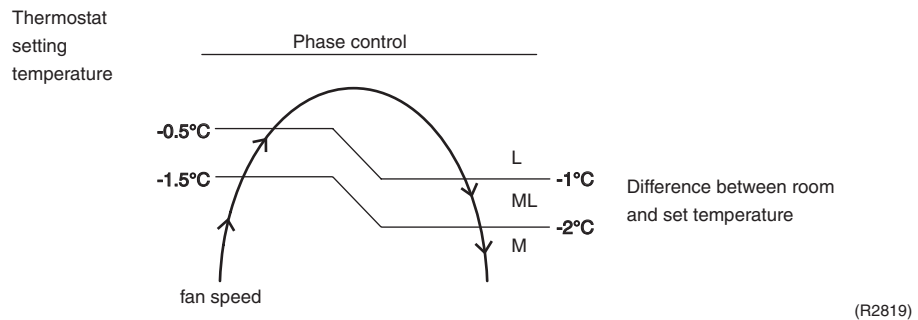

Automatic Air Flow Control for Cooling

The following drawing explains the principle of fan speed control for cooling:

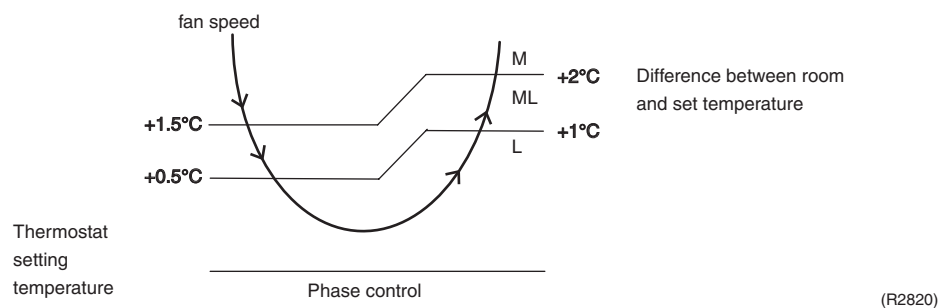

1.4 Programme Dry Function


Programme dry function removes humidity while preventing the room temperature from lowering.

Since the microcomputer controls both the temperature and air flow volume, the temperature adjustment and fan adjustment buttons are inoperable in this mode.

In Case of Inverter Units

The microcomputer automatically sets the temperature and fan settings. The difference between the room temperature at startup and the temperature set by the microcomputer is divided into two zones. Then, the unit operates in the dry mode with an appropriate capacity for each zone to maintain the temperature and humidity at a comfortable level.

Room temperature at startup	Temperature (ON point) at which operation starts	Frequency switching point	Temperature difference for operation stop
24°C	Room temperature at startup	0.5°C	1.5°C
18°C	18°C		1.0°C
17°C		—	

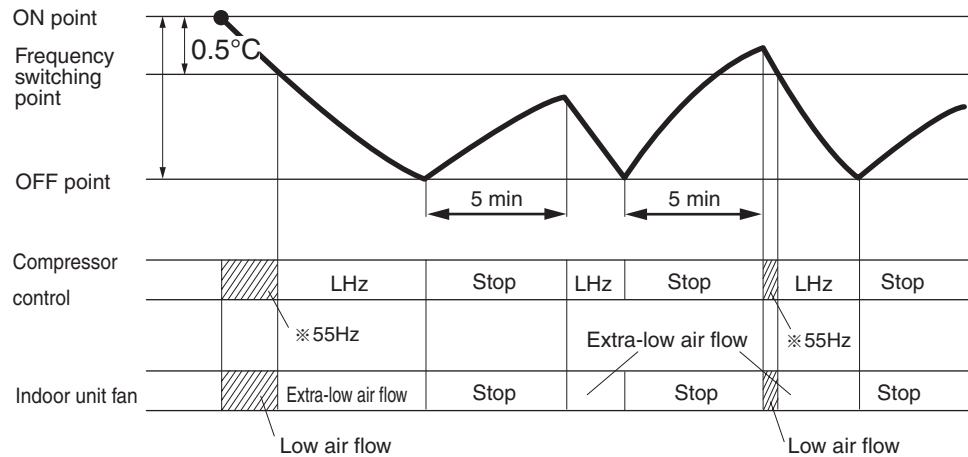

LHz indicates low frequency. Item marked with varies depending on models.

(R1359)

1.5 Automatic Operation


Automatic Cooling / Heating Function (Heat Pump Only)

When the AUTO mode is selected with the remote control, the microcomputer automatically determines the operation mode from cooling and heating according to the room temperature and setting temperature at the time of the operation startup, and automatically operates in that mode.

The unit automatically switches the operation mode to cooling or heating to maintain the room temperature at the main unit setting temperature.

Detailed Explanation of the Function

1. remote control setting temperature is set as automatic cooling / heating setting temperature (18 to 30°C).
2. Main unit setting temperature equals remote control setting temperature plus correction value (correction value / cooling: 0 deg, heating: 2 deg.).
3. Operation ON / OFF point and mode switching point are as follows.
 - ① Heating →Cooling switching point:
Room temperature \geq Main unit setting temperature +2.5 deg.
 - ② Cooling →Heating switching point:
Room temperature $<$ Main unit setting temperature -2.5 deg.
 - ③ Thermostat ON / OFF point is the same as the ON / OFF point of cooling or heating operation.
4. During initial operation
Room temperature \geq remote control setting temperature: Cooling operation
Room temperature $<$ remote control setting temperature: Heating operation

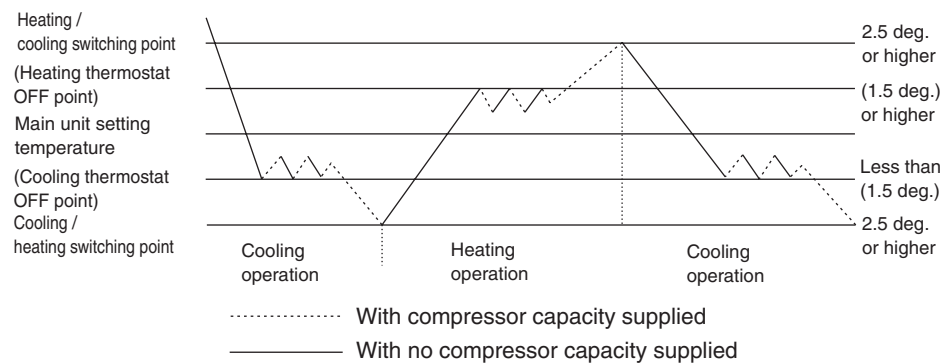

(R1360)

1.6 Thermostat Control

Thermostat control is based on the difference between the room temperature and the setpoint.


Thermostat OFF Condition

- ◆ The temperature difference is in the zone A.


Thermostat ON Condition

- ◆ The temperature difference is above the zone C after being in the zone A.
- ◆ The system resumes from defrost control in any zones except A.
- ◆ The operation turns on in any zones except A.
- ◆ The monitoring time has passed while the temperature difference is in the zone B.
(Cooling / Dry : 10 minutes, Heating : 10 seconds)

Cooling / Dry

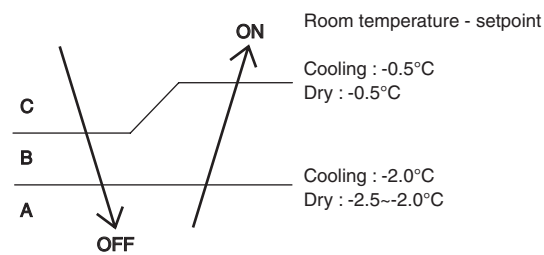

Heating

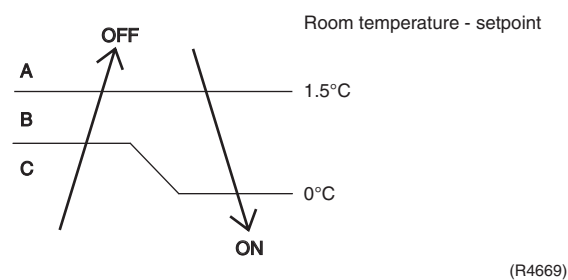


1.7 Night Set Mode

When the OFF timer is set, the Night Set circuit automatically activates. The Night Set circuit maintains the airflow setting made by users.

The Night Set Circuit


The Night Set circuit continues heating or cooling the room at the set temperature for the first one hour, then automatically raises the temperature setting slightly in the case of cooling, or lowers it slightly in the case of heating, for economical operations. This prevents excessive heating in winter and excessive cooling in summer to ensure comfortable sleeping conditions, and also conserves electricity.

Cooling Operation

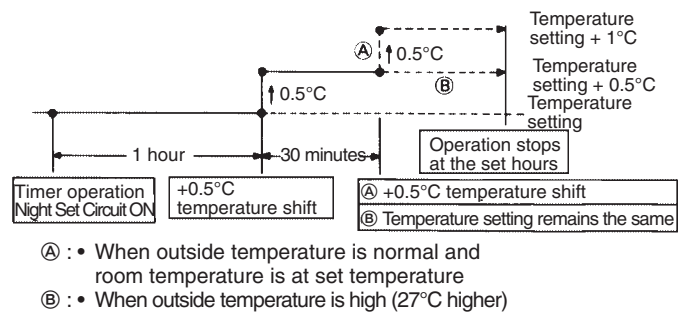

(R1361)

Heating Operation

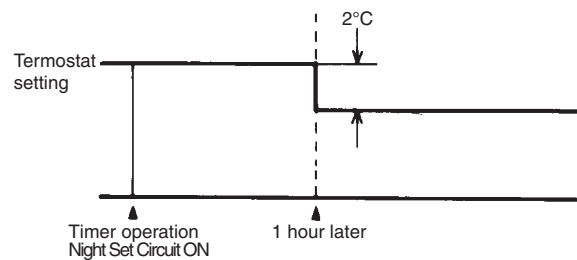


(R1362)

1.8 INTELLIGENT EYE

This is the function that detects existence of humans in the room by a human motion sensor (INTELLIGENT EYE) and reduces the capacity when there is no human in the room in order to save electricity.


Processing

1. Detection method by INTELLIGENT EYE

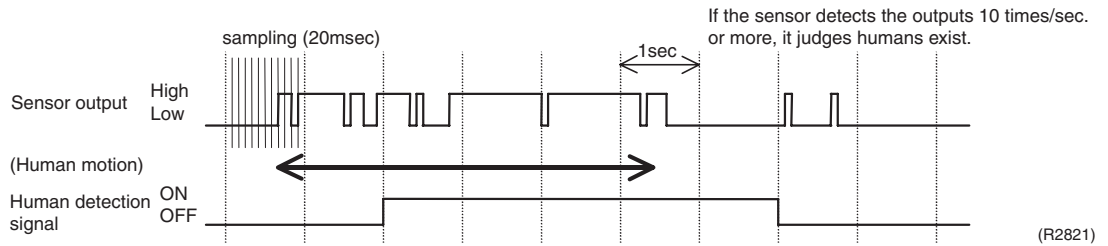

- This sensor detects human motion by receiving infrared rays and displays the pulse wave output.
- A microcomputer in an indoor unit carries out a sampling every 20 msec. and if it detects 10 cycles of the wave in one second in total (corresponding to $20\text{msec.} \times 10 = 100\text{msec.}$), it judges human is in the room as the motion signal is ON.

2. The motions (for example: in cooling)

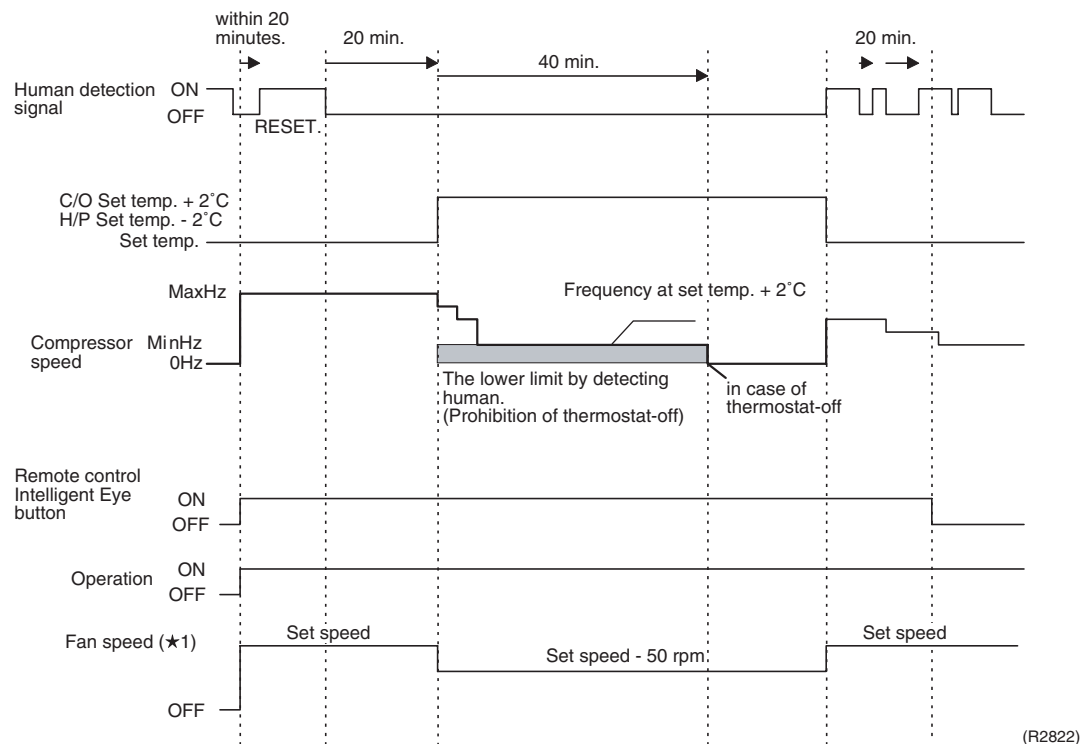

- When a microcomputer doesn't have a signal from the sensor in 20 minutes, it judges that nobody is in the room and operates the unit in temperature shifted 2°C from the set temperature. (Cooling : 2°C higher, Dry: 1°C higher and Auto : according to the operation mode at that time.)
- ★1 In case of Fan mode, the fan speed reduces by 50 rpm.

- Since the set temperature is shifted by 2°C higher for 40 minutes, compressor speed becomes low and can realize energy saving operation. But as thermostat is prone to be off by the fact that the set temperature has been shifted, the thermostat-off action is prohibited in 40 minutes so as to prevent this phenomena.
After this 40 minutes, the prohibition of the thermostat-off is cancelled and it can realize the conditions to conduct thermostat-off depending on the room temperature. In or after this forty minutes, if the sensor detects human motion detection signal, it let the set temperature and the fan speed return to the original set point, keeping a normal operation.

Others

- The dry operation can't command the setting temperature with a remote control, but internally the set temperature is shifted by 1°C.

1.9 HOME LEAVE Operation

Outline

In order to respond to the customer's need for immediate heating and cooling of the room after returning home or for house care, a measure to switch the temperature and air volume from that for normal time over to outing time by one touch is provided. (This function responds also to the need for keeping up with weak cooling or heating.)

This time, we seek for simplicity of operation by providing the special temperature and air volume control for outing to be set by the exclusive button.

Detail of the Control

1. Start of Function

The function starts when the [HOME LEAVE] button is pressed in cooling mode or heating mode (including stopping and powerful operation). If this button is pressed while the operation is stopped, the function becomes effective when the operation is started. If this button is pressed in powerful operation, the powerful operation is reset and this function becomes effective.

- The [HOME LEAVE] button is ineffective in dry mode and fan mode.

2. Details of Function


A mark representing [HOME LEAVE] is indicated on the liquid crystal display of the remote control. The indoor unit is operated according to the set temperature and air volume for HOME LEAVE which were pre-set in the memory of the remote control.

The LED (Red) of indoor unit representing [HOME LEAVE] lights up. (It goes out when the operation is stopped.)


3. End of Function

The function ends when the [HOME LEAVE] button is pressed again during [HOME LEAVE] operation or when the powerful operation button is pressed.

Scene <cooling>

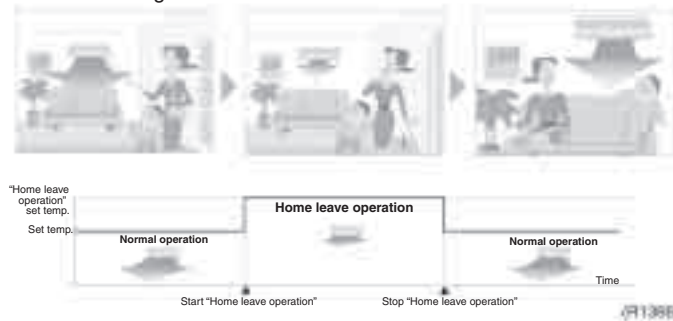

Scene <Heating>

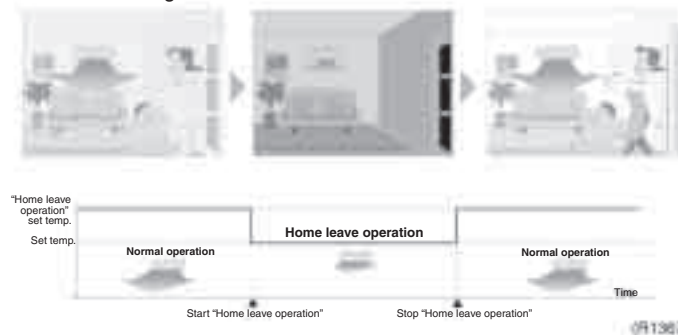

Others

The set temperature and set air volume are memorized in the remote control. When the remote control is reset due to replacement of battery, it is necessary to set the temperature and air volume again for [HOME LEAVE].

1.10 Inverter POWERFUL Operation

Outline


In order to exploit the cooling and heating capacity to full extent, operate the air conditioner by increasing the indoor fan rotating speed and the compressor frequency.

Details of the Control

When POWERFUL button is pushed in each operation mode, the fan speed/setting temperature will be converted to the following states in a period of twenty minutes.

Operation mode	Fan speed	Target set temperature
Cooling	H tap + 90 rpm	18°C
Dry	Dry rotating speed + 50 rpm	Normally targeted temperature in dry operation; Approx. -2°C
Heating	H tap + 90 rpm	30°C
Fan	H tap + 90 rpm	—
Automatic	Same as cooling / heating in Powerful operation	The target is kept unchanged

Ex.) : Powerful operation in cooling mode.

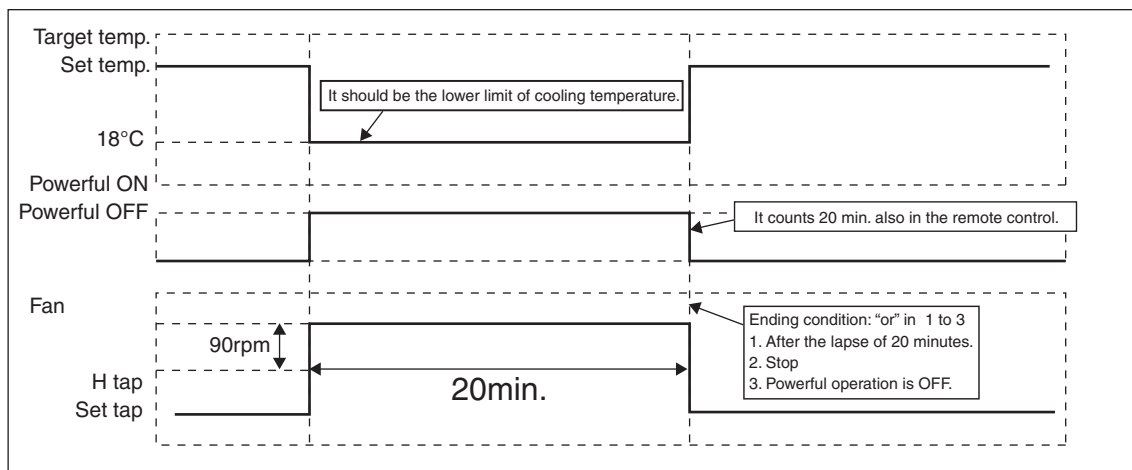

(R4984)

1.11 Other Functions

1.11.1 Hot Start Function

Heat Pump Only

In order to prevent the cold air blast that normally comes when heating is started, the temperature of the heat exchanger of the indoor unit is detected, and either the air flow is stopped or is made very weak thereby carrying out comfortable heating of the room.

*The cold air blast is also prevented using a similar control when the defrosting operation is started or when the thermostat gets turned ON.


1.11.2 Signal Receiving Sign

When the indoor unit receives a signal from the remote control, the unit emits a signal receiving sound.

1.11.3 ON/OFF Button on Indoor Unit

An ON/OFF switch is provided on the front panel of the unit. Use this switch when the remote control is missing or if its battery has run out.

Every press of the switch changes from Operation to Stop or from Stop to Operation

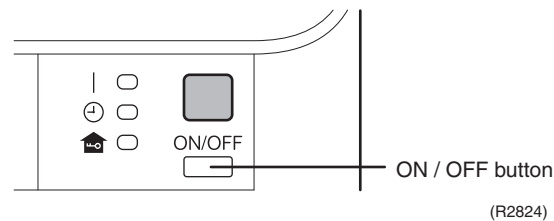

- Push this button once to start operation. Push once again to stop it.
- This button is useful when the remote control is missing.
- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
Cooling Only	COOL	22°C	AUTO
Heat Pump	AUTO	25°C	AUTO

- In the case of multi system operation, there are times when the unit does not activate with this button.

1.11.4 Air Purifying Filter with Photocatalytic Deodorizing Function

This filter incorporates the benefits the Air Purifying Filter and Photocatalytic Deodorizing Filter in a single unit. Combining the two filters in this way increases the active surface area of the new filter. This larger surface area allows the filter to effectively trap microscopic particles, decompose odours and deactivate bacteria and viruses even for the high volume of air required to air-condition large living rooms. The filter can be used for approximately 3 years if periodic maintenance is performed.

1.11.5 Mold Proof Air Filter

The filter net is treated with mold resisting agent TBZ (harmless, colorless, and odorless). Due to this treatment, the amount of mold growth is much smaller than that of normal filters.

1.11.6 Self-Diagnosis Digital Display

The microcomputer continuously monitors main operating conditions of the indoor unit, outdoor unit and the entire system. When an abnormality occur, the LCD remote control displays error code. These indications allow prompt maintenance operations.

1.11.7 Auto-restart Function


Even if a power failure (including one for just a moment) occurs during the operation, the operation restarts in the condition before power failure automatically when power is restored.

(Note) It takes 3 minutes to restart the operation because the 3-minute standby function is activated.

2. Function of Main Structural Parts

2.1 Function of Thermistor

2.1.1 Heat Pump Model

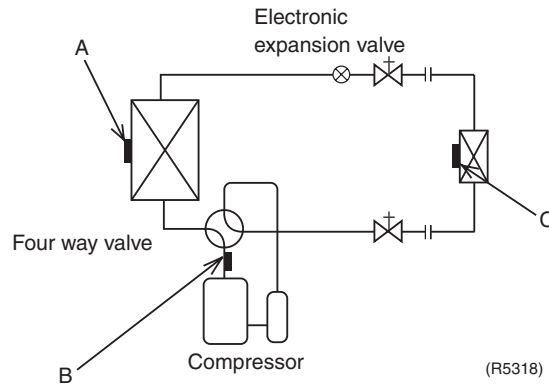

A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge temperature. Set a target discharge temperature depending on the outdoor and indoor heat exchanger temperature. Control the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The outdoor heat exchanger thermistor is used for detecting the discharge thermistor disconnected when cooling. When the temperature of the discharge piping is lower than the temperature of outdoor heat exchanger, a disconnected discharge thermistor can be detected.
3. The outdoor heat exchanger thermistor is used for high pressure protection during cooling operation.


B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used to control the discharge pipe. If the temperature of discharge pipe (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency drops or the operation must be halted.
2. The discharge pipe thermistor is used for detecting the discharge thermistor disconnected.

C Indoor Heat Exchanger Thermistor

1. The indoor heat exchanger thermistor is used for controlling target discharge pipe temperature. Set a target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature. Control the electronic expansion valve so that the target discharge pipe temperature can be obtained.
2. The indoor heat exchanger thermistor is used to prevent freezing. During the cooling operation, if the temperature drops abnormally, the operating frequency becomes lower, then the operation must be halted.
3. During heating: the indoor heat exchanger thermistor is used for detecting the discharge pipe thermistor disconnected. When the discharge pipe temperature become lower than an indoor heat exchanger temperature, a disconnected discharge pipe thermistor can be detected.

2.1.2 Cooling Only Model

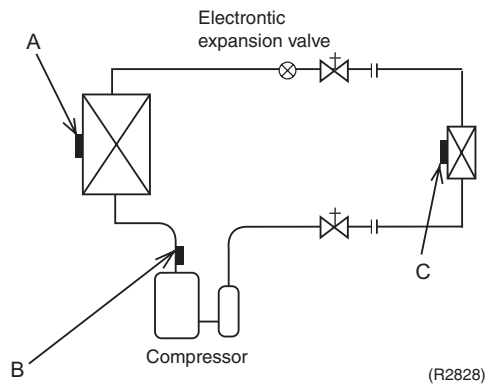

A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge temperature. Set a target discharge temperature depending on the outdoor and indoor heat exchanger temperature. Control the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. When cooling; an outdoor heat exchanger thermistor is used for detecting the discharge thermistor disconnected. When the temperature of the discharge piping is lower than the temperature of outdoor heat exchanger, a disconnected discharge thermistor can be detected.
3. The outdoor heat exchanger thermistor is used for high pressure protection during cooling operation.

B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used to control the discharge pipe. If the temperature of discharge pipe (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency drops or the operation must be halted.
2. The discharge pipe thermistor is used for detecting the discharge thermistor disconnected.

C Indoor Heat Exchanger Thermistor

1. The indoor heat exchanger thermistor is used for controlling target discharge pipe temperature. Set a target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature. Control the electronic expansion valve opening so that the target discharge pipe temperature can be obtained.
2. The indoor heat exchanger thermistor is used to prevent freezing. During the cooling operation, if the temperature drops abnormally, the operating frequency becomes lower, then the operation must be halted.

3. Control Specification

3.1 Mode Hierarchy


Outline

There are two modes; the mode selected in user's place (normal air conditioning mode) and forced operation mode for installation and providing service.

Detail

1. For heat pump model


There are following modes; stop, cooling (includes drying), heating (include defrosting)

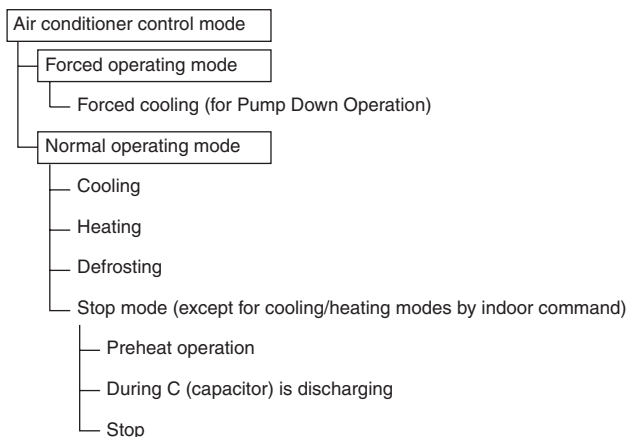

(R2829)

2. For cooling only model

There are following models; stop and cooling (including drying).

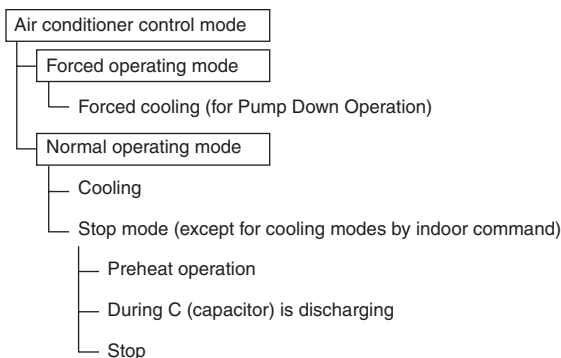

(R2830)




Note: Unless specified otherwise, an indoor dry operation command must be regarded as cooling operation.

3.2 Frequency Control

Outline

Frequency will be determined according to the difference between room and set temperature. The function is explained as follows.

1. How to determine frequency.
2. Frequency command from an indoor unit. (The difference between a room temperature and the temperature set by the remote control.)
3. Frequency command from an indoor unit.
4. Frequency initial setting.
5. PI control.

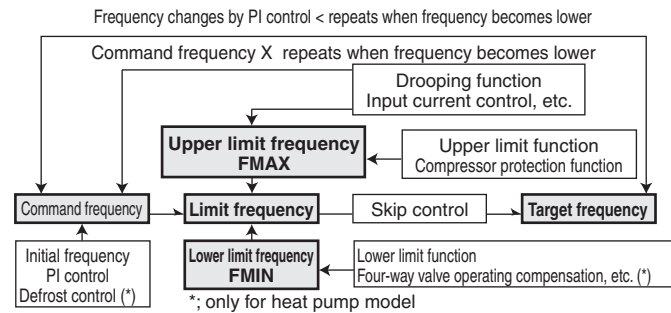

(R2831)

Detail

How to Determine Frequency

The compressor's frequency will finally be determined by taking the following steps.

For Heat Pump Model

1. Determine command frequency
 - Command frequency will be determined in the following order of priority.
 - 1.1 Limiting frequency by drooping function
 - Input current, discharge pipes, low Hz high pressure limit, peak cutting, freeze prevention, dew prevention, fin thermistor temperature.
 - 1.2 Limiting defrost control time
 - 1.3 Forced cooling
 - 1.4 Indoor frequency command
2. Determine upper limit frequency
 - Set a minimum value as an upper limit frequency among the frequency upper limits of the following functions:
 - Compressor protection, input current, discharge pipes, Low Hz high pressure, peak cutting, freeze prevention, defrost.
3. Determine lower limit frequency
 - Set a maximum value as an lower limit frequency among the frequency lower limits of the following functions:
 - Four way valve operating compensation, draft prevention, pressure difference upkeep.
4. Determine prohibited frequency
 - There is a certain prohibited frequency such as a power supply frequency.

For Cooling Only Model

1. Determine command frequency
 - Command frequency will be determined in the following order of priority.
 - 1.1 Limiting frequency by drooping function
 - Input current, discharge pipes, freeze prevention, dew prevention, fin thermistor temperature.
 - 1.2 Indoor frequency command
2. Determine upper limit frequency
 - Set a minimum value as an upper limit frequency among the frequency upper limits of the following functions:
 - Compressor protection, input current, discharge pipes, freeze prevention, dew prevention, fin thermistor temperature.

3. Determine lower limit frequency
 - Set a maximum value as an lower limit frequency among the frequency lower limits of the following functions:
Pressure difference upkeep.
4. Determine prohibited frequency
 - There is a certain prohibited frequency such as a power supply frequency.

Indoor Frequency Command (ΔD signal)

The difference between a room temperature and the temperature set by the remote control will be taken as the " ΔD signal" and is used for frequency command.

Temperature difference	ΔD signal	Temperature difference	ΔD signal	Temperature difference	ΔD signal	Temperature difference	ΔD signal
0	*Th OFF	2.0	4	4.0	8	6.0	C
0.5	1	2.5	5	4.5	9	6.5	D
1.0	2	3.0	6	5.0	A	7.0	E
1.5	3	3.5	7	5.5	B	7.5	F

*Th OFF = Thermostat OFF

Frequency Initial Setting

■ Outline

When starting the compressor, or when conditions are varied due to the change of the room, the frequency must be initialized according to the total of a maximum ΔD value of the indoor unit and the Q value of the indoor unit.

Q value: Indoor unit output determined from indoor unit volume, air flow rate and other factors.

PI Control (Determine Frequency Up/Down by ΔD Signal)

1. P control

Calculate ΔD value in each sampling time (20 seconds), and adjust the frequency according to its difference from the frequency previously calculated.
2. I control

If the operating frequency is not change more than a certain fixed time, adjust the frequency up and down according to the ΔD value, obtaining the fixed ΔD value.
When the ΔD value is small...lower the frequency.
When the ΔD value is large...increase the frequency.
3. Limit of frequency variation width

When the difference between input current and input current drooping value is less than 1.5 A, the frequency increase width must be limited.
4. Frequency management when other controls are functioning
 - When frequency is drooping;
Frequency management is carried out only when the frequency droops.
 - For limiting lower limit
Frequency management is carried out only when the frequency rises.
5. Upper and lower limit of frequency by PI control

The frequency upper and lower limits are set depending on indoor unit.
When low noise commands come from the indoor unit or when outdoor unit low noise or quiet commands come from indoor unit, the upper limit frequency must be lowered than the usual setting.

3.3 Controls at Mode Changing / Start-up

3.3.1 Preheating Operation

Outline Operate the inverter in the open phase operation with the conditions including the preheating command from the indoor, the outdoor air temperature and discharge pipe temperature.

Detail

Preheating ON Condition

- When outdoor air temperature is below 10.5°C and discharge pipe temperature is below 10.5°C, inverter in open phase operation starts.

OFF Condition

- When outdoor air temperature is higher than 12°C or discharge pipe temperature is higher than 12°C, inverter in open phase operation stops.

3.3.2 Four Way Valve Switching

Outline of heating operation

Heat Pump Only

During the heating operation current must be conducted and during cooling and defrosting current must not be conducted. In order to eliminate the switching sound (as the four way valve coil switches from ON to OFF) when the heating is stopped, the delay switch of the four way valve must be carried out after the operation stopped.

Detail

The OFF delay of four way valve
Energize the coil for 150 sec after unit operation is stopped.

3.3.3 Four Way Valve Operation Compensation

Outline

Heat Pump Only

At the beginning of the operation as the four way valve is switched, acquire the differential pressure required for activating the four way valve by having output the operating frequency, which is more than a certain fixed frequency, for a certain fixed time.

Detail

Starting Conditions

1. When starting compressor for heating.
2. When the operating mode changes from the previous time.
3. When starting compressor for starting defrosting or resetting.
4. When starting compressor for the first time after the reset with the power is ON.
Set the lower limit frequency to 55 (model by model) Hz for 70 seconds with any conditions 1 through 4 above.


3.3.4 3 Minutes Stand-by

Prohibit to turn ON the compressor for 3 minutes after turning it off.
(Except when defrosting. (Only for Heat Pump Model).)

3.3.5 Compressor Protection Function

When turning the compressor from OFF to ON, the upper limit of frequency must be set as follows. (The function must not be used when defrosting (only for heat pump model).)

	2YC63	Others
FCG 3	85	85
FCG 2	70	70
FCG 1	40	55

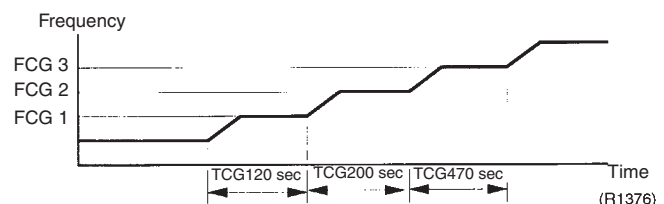


3.4 Discharge Pipe Temperature Control

Outline

The discharge pipe temperature is used as the compressor's internal temperature. If the discharge pipe temperature rises above a certain level, the operating frequency upper limit is set to keep this temperature from going up further.

Detail

Divide the Zone

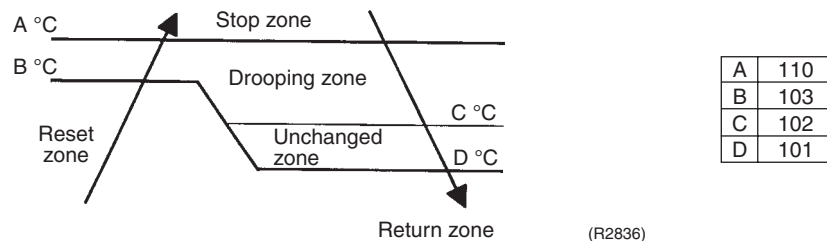

Management within the Zones

Zone	Control contents
Stop zone	When the temperature reaches the stop zone, stop the compressor and correct abnormality.
Drooping zone	Start the timer, and the frequency will be drooping.
Unchanged zone	Keep the upper limit of frequency.
Return / Reset zone	Cancel the upper limit of frequency.

3.5 Input Current Control


Outline

Detect an input current by the CT during the compressor is running, and set the frequency upper limit from such input current.

In case of heat pump model, this control is the upper limit control function of the frequency which takes priority of the lower limit of four way valve activating compensation.

Detail

The frequency control will be made within the following zones.

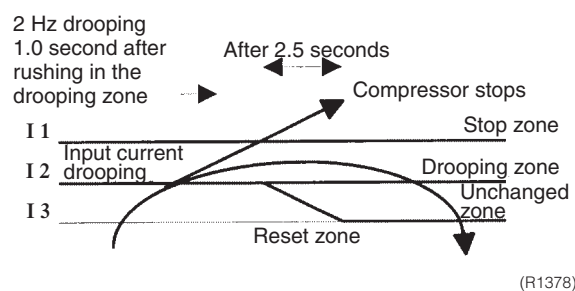

When a “stop current” continues for 2.5 seconds after rushing on the stop zone, the compressor operation stops.

If a “drooping current” is continues for 1.0 second after rushing on the drooping zone, the frequency will be 2 Hz drooping.

Repeating the above drooping continues until the current rushes on the drooping zone without change.

In the unchanged zone, the frequency limit will remain.

In the return / reset zone, the frequency limit will be cancelled.


Limitation of current drooping and stop value according to the outdoor air temperature

- In case the operation mode is cooling
 - The current droops when outdoor air temperature becomes higher than a certain level (model by model).
- In case the operation mode is heating (only for heat pump model)
 - The current droops when outdoor air temperature becomes higher than a certain level (model by model).

3.6 Freeze-up Protection Control

Outline During cooling operation, the signals being sent from the indoor unit allow the operating frequency limitation and then prevent freezing of the indoor heat exchanger. (The signal from the indoor unit must be divided into the zones as the followings.


Detail **Conditions for Start Controlling**
 Judge the controlling start with the indoor heat exchanger temperature after 2 sec from operation start.
Control in Each Zone

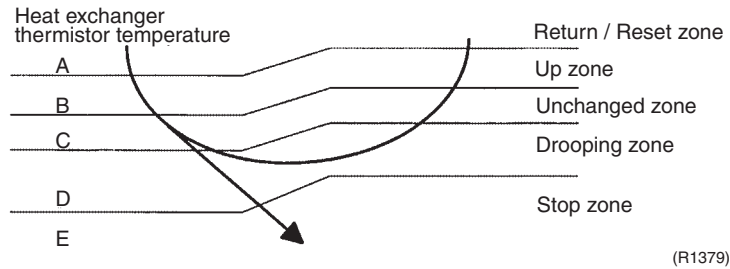

3.7 Heating Peak-cut Control

Outline **Heat Pump Only**
 During heating operation, the signals being sent from the indoor unit allow the operating frequency limitation and prevent abnormal high pressure. (The signal from the indoor unit must be divided as follows.)

Detail **Conditions for Start Controlling**
 Judge the controlling start with the indoor heat exchanger temperature after 2 min from operation start.
Control in Each Zone
 The heat exchange intermediate temperature of indoor unit controls the following.

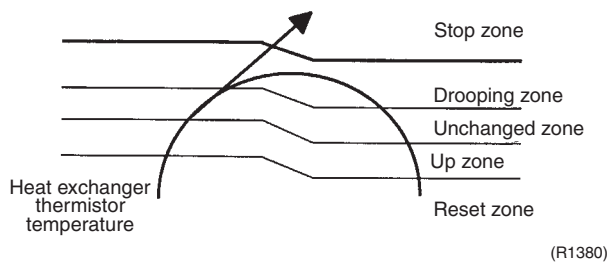

3.8 Fan Control

Outline

Fan control is carried out according to the following priority.

1. Fan ON control for electric component cooling fan
 2. Fan control when defrosting
 3. Fan OFF delay when stopped
 4. ON/OFF control in cooling operation
 5. Tap control when drooping function is working
 6. Fan control in forced operation
 7. Fan control in indoor/outdoor unit silent operation
 8. Fan control in powerful mode
 9. Fan control in normal operation
-

Detail

Fan OFF Control when Stopped

- Fan OFF delay for 60 seconds must be made when the compressor is stopped.

Tap Control in indoor/outdoor unit silent operation

1. When Cooling Operation
When the outdoor air temperature is lower than 37°C, the fan tap must be set to L.
2. When Heating Operation
When the outdoor air temperature is higher than 4°C, the fan tap must be turned to L (only for heat pump model).

3.9 Liquid Compression Protection Function 2

Outline

In order to obtain the dependability of the compressor, the compressor must be stopped according to the conditions of the temperature of the outdoor air and outdoor heat exchanger.

Detail

Heat Pump Model

- Operation stop depending on the outdoor air temperature
Compressor operation turns OFF under the conditions that the system is in cooling operation and outdoor air temperature is below -10°C (R-410A), -5°C (R22).

Cooling Only Model

- Operation stops depending on the outdoor air temperature.
Compressor operation turns OFF under the condition that outdoor air temperature is below -12°C (R-410A), -5°C (R22).

3.10 Low Hz High Pressure Limit


Outline

Heat Pump Only

Set the upper limit of high pressure in a low Hz zone. Set the upper limit of the indoor heat exchanger temperature by its operating frequency of Hz. Separate into three zones, reset zone, unchanged zone and drooping zone and the frequency control must be carried out in such zones.

Detail

Separate into Zones

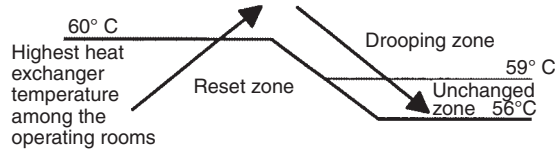

(R1382)



Note: Drooping: The system stops 2 minutes after staying in the drooping zone.

3.11 Defrost Control

Outline

Heat Pump Only

Defrosting is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than its fixed value when finishing.


Detail

Conditions for Starting Defrost

The starting conditions must be made with the outdoor air temperature and heat exchanger temperature. Under the conditions that the system is in heating operation, 6 minutes after the compressor is started and more than 44 minutes of accumulated time pass since the start of the operation or ending the defrosting.

Conditions for Canceling Defrost

The judgment must be made with heat exchanger temperature. (4°C~12°C)

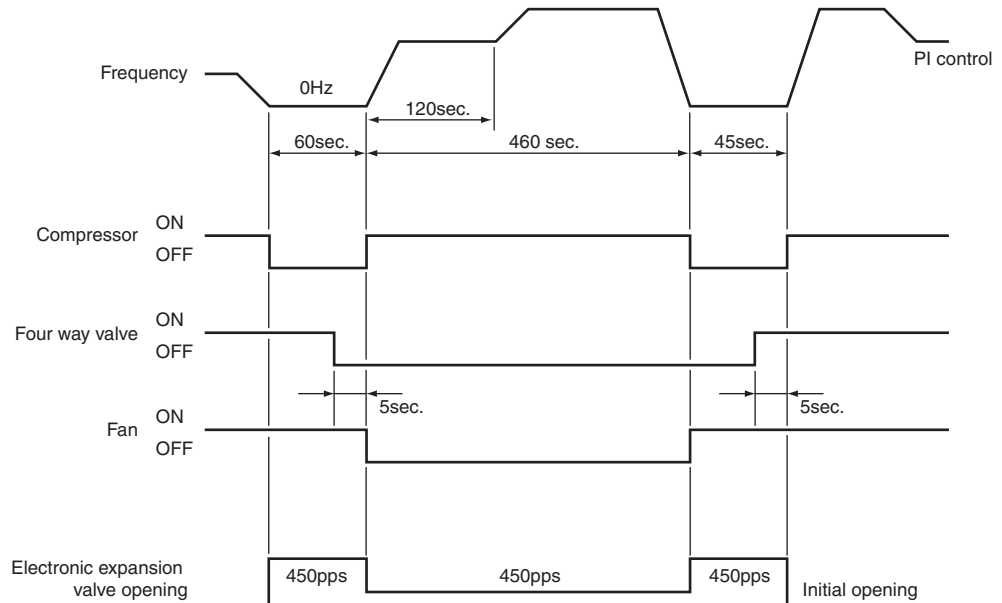

(R4082)

3.12 Electronic Expansion Valve Control

Outline

The following items are included in the electronic expansion valve control.

Electronic expansion valve is fully closed

1. Electronic expansion valve is fully closed when turning on the power.
2. Pressure equalizing control

Open Control

1. Electronic expansion valve control when starting operation
2. Control when frequency changed
3. Control for defrosting (only for heat pump model)
4. Control when a discharge pipe temperature is abnormally high
5. Control when the discharge pipe thermistor is disconnected

Feedback Control

1. Discharge pipe temperature control

Detail

The followings are the examples of control which function in each mode by the electronic expansion valve control.

Operation pattern		Control when frequency changed	Control for abnormally high discharge pipe temperature
When power is turned ON	○ : function × : not function		
↓	Fully closed when power is turned ON	×	×
↓	Cooling operation		
↓	Open control when starting	×	○
↓	(Control of target discharge pipe temperature)	○	○
↓	Stop		
↓	Pressure equalizing control	×	×
↓	Heating operation (only for heat pump model)		
↓	Open control when starting	×	○
↓	(Control of target discharge pipe temperature)	○	○
↓	(Defrost control FD=1) (only for heat pump model)	×	×
↓	Stop		
↓	Pressure equalizing control	×	×
↓	Heating operation (only for heat pump model)		
↓	Open control when starting	×	○
↓	Control of discharge pipe thermistor disconnection	↓	↓
↓	Continue	×	×
↓	Stop		
↓	Pressure equalizing control	×	×

(R2833)

3.12.1 Fully Closing with Power ON

Initialize the electronic expansion valve when turning on the power, set the opening position and develop pressure equalizing.

3.12.2 Pressure Equalization Control

When the compressor is stopped, open and close the electronic expansion valve and develop pressure equalization.

3.12.3 Opening Limit

Outline

Limit a maximum and minimum opening of the electronic expansion valve.

Detail

- A maximum electronic expansion valve opening : 450 pulses
 - A minimum electronic expansion valve opening : 54 pulses
- The electronic expansion valve is fully closed in the room where cooling is stopped and is opened with fixed opening during defrosting.

3.12.4 Starting Operation Control

Control the electronic expansion valve opening when the system is starting, and prevent the system to be super heated or moistened.

3.12.5 High Temperature of the Discharge Pipe

When the compressor is operating, if the discharge pipe temperature exceeds a certain value, open the electronic expansion valve and remove the refrigerant to the low pressure side and lower discharge temperature.

3.12.6 Disconnection of the Discharge Pipe Thermistor

Outline

Detect a disconnected discharge pipe thermistor by comparing the discharge pipe temperature with the condensation temperature. If any is disconnected, open the electronic expansion valve according to the outdoor air temperature and the operating frequency, and operate for a specified time, and then stop.

After 3 minutes of waiting, restart the unit and check if any is disconnected. If any is disconnected stop the system after operating for a specified time. If the disconnection is detected 4 times in succession, then the system will be down.

Detail

Detect Disconnection

If a 630-second timer for open control becomes over, and a 9-minute timer for the compressor operation continuation is not counting time, the following adjustment must be made.

1. When the operation mode is cooling
 - When the discharge pipe temperature is lower than the outdoor heat exchanger temperature, the discharge pipe thermistor disconnection must be ascertained.
2. When the operation mode is heating (only for heat pump model)
 - When the discharge pipe temperature is lower than the max temperature of operating room heat exchanger, the discharge pipe thermistor disconnection must be ascertained.

Adjustment when the thermistor is disconnected


When compressor stop repeats specified time, the system should be down.

3.12.7 Control when frequency is changed

When the target discharge pipe temperature control is active, if the target frequency is changed for a specified value in a certain time period, cancel the target discharge pipe temperature control and change the target opening of the electronic expansion valve according to the shift.

3.12.8 Target Discharge Pipe Temperature Control

Obtain the target discharge pipe temperature from the indoor and outdoor heat exchanger temperature, and adjust the electronic expansion valve opening so that the actual discharge pipe temperature become close to that temperature. (Indirect SH control using the discharge pipe temperature)

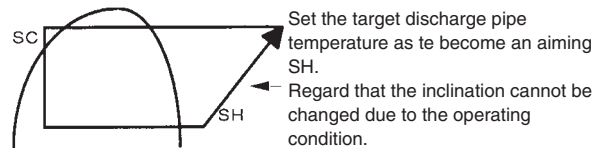

(R1389)

Determine a correction value of the electronic expansion valve compensation and drive it according to the deflection of the target discharge temperature and actual discharge temperature, and the discharge temperature variation by the 20 sec.

3.13 Malfunctions

3.13.1 Sensor Malfunction Detection

Sensor malfunction may occur either in the thermistor or current transformer (CT) system.

Relating to Thermistor Malfunction

1. Outdoor heat exchanger thermistor
2. Discharge pipe thermistor
3. Fin thermistor
4. Outside air thermistor

Relating to CT Malfunction

When the output frequency is more than 55 Hz and the input current is less than 1.25A, carry out abnormal adjustment.

3.13.2 Detection of Overload and Over Current

Outline

In order to protect the inverter, detect an excessive output current, and for protecting compressor, monitor the OL operation.

Detail


- If the OL (compressor head) temperature exceeds 120~130°C (depending on the model), the compressor gets interrupted.
- If the inverter current exceeds 30 A, the compressor gets interrupted too.

3.13.3 Insufficient Gas Control


Outline

If a power consumption is below the specified value in which the frequency is higher than the specified frequency, it must be regarded as gas insufficient.

In addition to such conventional function, if the discharge temperature is higher than the target discharge pipe temperature, and the electronic expansion valve is fully open (450 pulses) more than the specified time, it is considered as an insufficient gas.

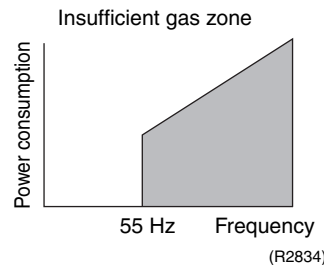

With the conventional function, a power consumption is weak comparing with that in the normal operation when gas is insufficient, and gas insufficiency is detected by checking a power consumption.

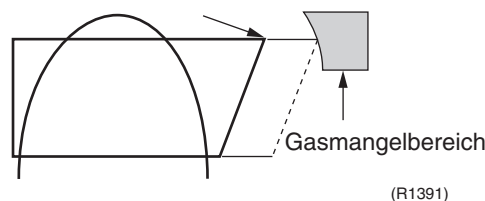

When operating with insufficient gas, although the rise of discharge pipe temperature is great and the electronic expansion valve is open, it is presumed as an insufficient gas if the discharge pipe temperature is higher than the target discharge pipe temperature.

Detail

Judgment by Input Current

When an output frequency is exceeds 55 Hz and the input current is less than specified value, the adjustment is made for insufficient gas.

Judgment by Discharge Pipe Temperature

When discharge pipe temperature is 20°C higher than target value and the electronic expansion valve opening is 450 plus (max.), the adjustment is made for insufficient gas.

3.14 Forced Operation Mode

Outline Forced operating mode includes only forced cooling.

Detail

Forced Cooling

Item	Forced Cooling
Forced operation allowing conditions	1) The outdoor unit is not abnormal and not in the 3-minute stand-by mode.
	2) The operating mode of the outdoor unit is the stop mode.
	3) The forced operation is ON. The forced operation is allowed when the above "and" conditions are met.
Starting/adjustment	If the forced operation switch is pressed as the above conditions are met.
1) Command frequency	■ 66 Hz
2) Electronic expansion valve opening	■ Depending on the capacity of the indoor unit.
3) Outdoor unit adjustment	■ Compressor is in operation
4) Indoor unit adjustment	■ Transmit the command of forced draft to the indoor unit.
End	1) When the forced operation switch is pressed again.
	2) The operation is to end automatically after 15 min.
Others	The protect functions are prior to all others in the forced operation.

3.15 Additional Function

3.15.1 POWERFUL Operation Mode

Compressor operating frequency is increased to PI Max. (Max. Hz of operating room) and outdoor unit airflow rate is increased.

3.15.2 Voltage Detection Function

Power supply voltage is detected each time equipment operation starts.

3.16 Facility Setting Switch (cooling at low outdoor temperature)


Outline

RKS50/60/71BVMB9, RK(X)S71B2(3)VMB models

This function is limited only for facilities (the target of air conditioning is equipment (such as computer)). Never use it in a residence or office (the space where there is a human).

Detail

You can expand the operation range to -15°C by turning on switch B (SW4) on the PCB. If the outdoor temperature falls to -20°C or lower, the operation will stop. If the outdoor temperature rises, the operation will start again.

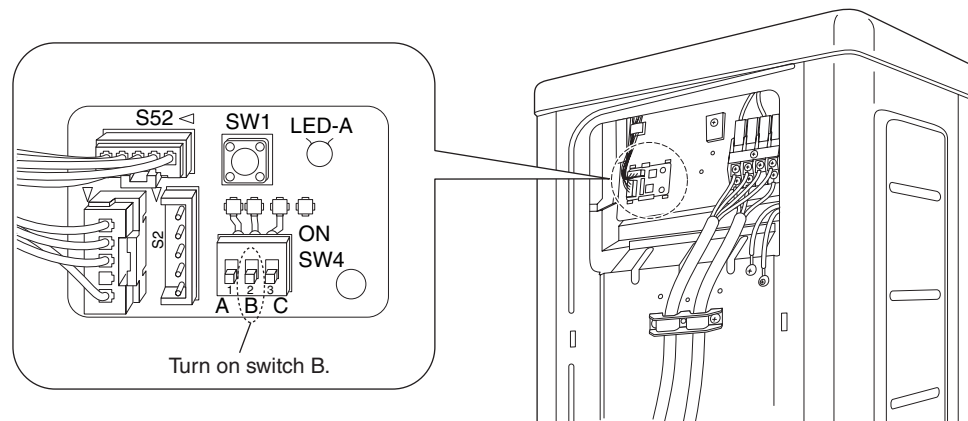

Caution

1. If the outdoor unit is installed where the heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
2. Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
3. Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used.
A humidifier might cause dew jumping from the indoor unit outlet vent.
4. Use the indoor unit at the highest level of air flow rate.

3. System Configuration

After the installation and test operation of the room air conditioner have been completed, it should be operated and handled as described below. Every user would like to know the correct method of operation of the room air conditioner, to check if it is capable of cooling (or heating) well, and to know a clever method of using it.



In order to meet this expectation of the users, giving sufficient explanations taking enough time can be said to reduce about 80% of the requests for servicing. However good the installation work is and however good the functions are, the customer may blame either the room air conditioner or its installation work because of improper handling. The installation work and handing over of the unit can only be considered to have been completed when its handling has been explained to the user without using technical terms but giving full knowledge of the equipment.

4. Instruction

Note: This instruction is appropriate for FTK(X)S 50/60/71 B(A)VMB models.



4.1 Safety Precautions

- Keep this manual where the operator can easily find them.
- Read this manual attentively before starting up the unit.
- For safety reason the operator must read the following cautions carefully.
- This manual classifies precautions into WARNINGS and CAUTIONS. Be sure to follow all precautions below: they are all important for ensuring safety.



 WARNING If you do not follow these instructions exactly, the unit may cause property damage, personal injury or loss of life.	 CAUTION If you do not follow these instructions exactly, the unit may cause minor or moderate property damage or personal injury.
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------




- | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">  Never do.  Be sure to earth the air conditioner.  Never touch the air conditioner (including the remote control) with a wet hand. | <ul style="list-style-type: none">  Be sure to follow the instructions.  Never cause the air conditioner (including the remote control) to get wet. |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

WARNING

- In order to avoid fire, explosion or injury, do not operate the unit when harmful, among which flammable or corrosive gases, are detected near the unit. 
- It is not good for health to expose your body to the air flow for a long time.
- Do not put a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury.
- Do not attempt to repair, relocate, modify or reinstall the air conditioner by yourself. Incorrect work will cause electric shocks, fire etc.
For repairs and reinstallation, consult your Daikin dealer for advice and information.
- The refrigerant used in the air conditioner is safe. Although leaks should not occur, if for some reason any refrigerant happens to leak into the room, make sure it does not come in contact with any flame as of gas heaters, kerosene heaters or gas range. 
- If the air conditioner is not cooling (heating) properly, the refrigerant may be leaking, so call your dealer. When carrying out repairs accompanying adding refrigerant, check the content of the repairs with our service staff.
- Do not attempt to install the air conditioner by your self. Incorrect work will result in water leakage, electric shocks or fire. For installation, consult the dealer or a qualified technician.
- In order to avoid electric shock, fire or injury, if you detect any abnormally such as smell of fire, stop the operation and turn off the breaker. And call your dealer for instructions.

CAUTION

- The air conditioner must be earthed. Incomplete earthing may result in electric shocks. Do not connect the earth line to a gas pipe, water pipe, lightning rod, or a telephone earth line. 
- In order to avoid any quality deterioration, do not use the unit for cooling precision instruments, food, plants, animals or works of art. 
- Never expose little children, plants or animals directly to the air flow.
- Do not place appliances which produce open fire in places exposed to the air flow from the unit or under the indoor unit. It may cause incomplete combustion or deformation of the unit due to the heat.
- Do not block air inlets nor outlets. Impaired air flow may result in insufficient performance or trouble.
- Do not stand or sit on the outdoor unit. Do not place any object on the unit to avoid injury, do not remove the fan guard.
- Do not place anything under the indoor or outdoor unit that must be kept away from moisture. In certain conditions, moisture in the air may condense and drip.
- After a long use, check the unit stand and fittings for damage.
- Do not touch the air inlet and aluminum fins of outdoor unit. It may cause injury.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

- To avoid oxygen deficiency, ventilate the room sufficiently if equipment with burner is used together with the air conditioner. 
 - Before cleaning, be sure to stop the operation, turn the breaker off or pull out the supply cord.
 - Do not connect the air conditioner to a power supply different from the one as specified. It may cause trouble or fire.
 - Depending on the environment, an earth leakage breaker must be installed. Lack of an earth leakage breaker may result in electric shocks.
 - Arrange the drain hose to ensure smooth drainage. Incomplete draining may cause wetting of the building, furniture etc.
 - Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.
Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.
-
- Do not operate the air conditioner with wet hands. 
-
- Do not wash the indoor unit with excessive water, only use a slightly wet cloth. 
 - Do not place things such as vessels containing water or anything else on top of the unit. Water may penetrate into the unit and degrade electrical insulations, resulting in an electric shock.
-

Installation site

- To install the air conditioner in the following types of environments, consult the dealer.
 - Places with an oily ambient or where steam or soot occurs.
 - Salty environment such as coastal areas.
 - Places where sulfide gas occurs such as hot springs.
 - Places where snow may block the outdoor unit.

The drain from the outdoor unit must be discharged to a place of good drainage.

Consider nuisance to your neighbours from noises

- For installation, choose a place as described below.
 - A place solid enough to bear the weight of the unit which does not amplify the operation noise or vibration.
 - A place from where the air discharged from the outdoor unit or the operation noise will not annoy your neighbours.

Electrical work

- For power supply, be sure to use a separate power circuit dedicated to the air conditioner.


System relocation

- Relocating the air conditioner requires specialized knowledge and skills. Please consult the dealer if relocation is necessary for moving or remodeling


4.2 Names of Parts

■ Indoor Unit


the illustration shows a 50-class unit

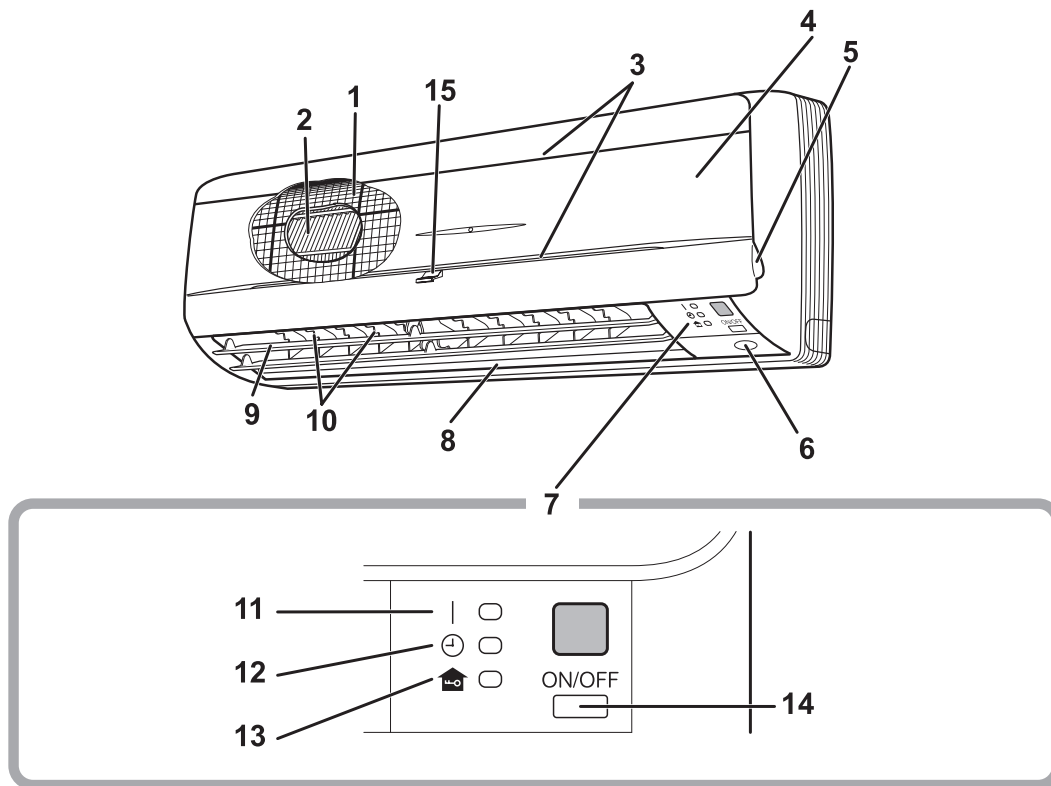

■ Main unit control panel

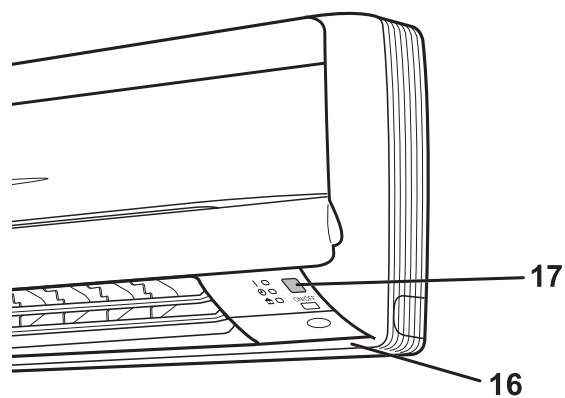

■ Outdoor Unit

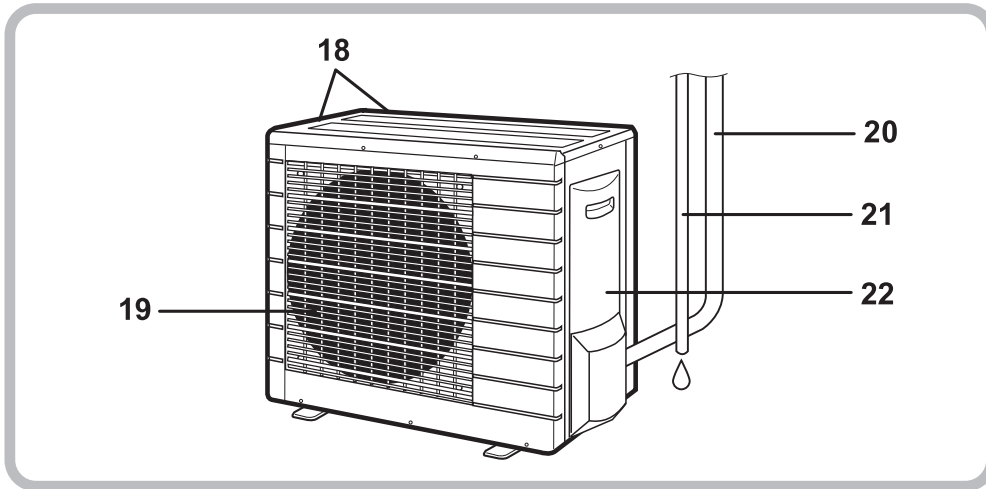

■ Indoor Unit

1. Air filter
2. Air-Purifying Filter with photocatalytic deodorizing function
 - These filters are attached to the inside of the air filters.
3. Air inlet
4. Front panel
5. Panel tab
6. INTELLIGENT EYE sensor:
 - It detects the movements of people and automatically switches between normal operation and energy saving operation. (page 18)
7. Display
8. Air outlet
9. Flap (horizontal blade): (page 12)
10. Louvers (vertical blades):
 - The Louvers are inside of the air outlet. (page 12)
11. Operation lamp (green)
12. TIMER lamp (yellow): (page 20)
13. HOME LEAVE lamp (red):
 - Lights up when you use HOME LEAVE Operation. (page 16)

14. Indoor Unit ON/OFF switch:

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refer to the following table:

	Mode	Temperature setting	Air flow rate
FTKS	COOL	22°C	AUTO
FTXS	AUTO	25°C	AUTO

- This switch is useful when the remote control is missing.

15. Packaging materials: 50 class only

- If any packaging materials are included, please remove before operating. (page 24)

16. Room temperature sensor:

- It senses the air temperature around the unit.

17. Signal receiver:

- It receives signals from the remote control.
- When the unit receives a signal, you will hear a short beep.
 - Operation startbeep-beep
 - Settings changed.....beep
 - Operation stop.....beeeeeep

■ Outdoor Unit


18. Air inlet: (Back and side)
19. Air outlet
20. Refrigerant piping and inter-unit cable

21. Drain hose
22. Earth terminal:

- It is inside of this cover.

Appearance of the outdoor unit may differ from some models.

■ Remote control

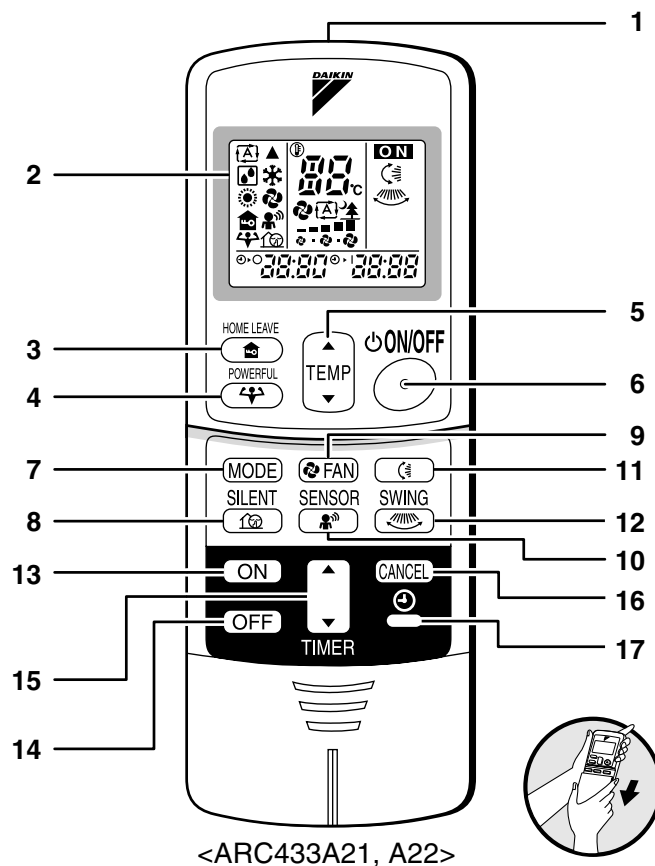


- | | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1. Signal transmitter:</p> <ul style="list-style-type: none"> • It sends signals to the indoor unit. <p>2. Display:</p> <ul style="list-style-type: none"> • It displays the current settings. (In this illustration, each section is shown with its displays ON for the purpose of explanation.) <p>3. HOME LEAVE button:
HOME LEAVE operation (page 16)</p> <p>4. POWERFUL button:
POWERFUL operation (page 14)</p> <p>5. TEMPERATURE adjustment buttons:</p> <ul style="list-style-type: none"> • It changes the temperature setting. <p>6. ON/OFF button:</p> <ul style="list-style-type: none"> • Press this button once to start operation. • Press once again to stop it. <p>7. MODE selector button:</p> <ul style="list-style-type: none"> • It selects the operation mode. (AUTO/DRY/COOL/HEAT/FAN) (page 10) | <p>8. SILENT button:
OUTDOOR UNIT SILENT operation (page 15)</p> <p>9. FAN setting button:</p> <ul style="list-style-type: none"> • It selects the air flow rate setting. <p>10. SENSOR button: INTELLIGENT EYE operation (page 18)</p> <p>11. SWING button: (page 12)</p> <ul style="list-style-type: none"> • Flap (Horizontal blade) <p>12. SWING button: (page 12)</p> <ul style="list-style-type: none"> • Louver (Vertical blades) <p>13. ON TIMER button: (page 21)</p> <p>14. OFF TIMER button: (page 20)</p> <p>15. TIMER Setting button:</p> <ul style="list-style-type: none"> • It changes the time setting. <p>16. TIMER CANCEL button:</p> <ul style="list-style-type: none"> • It cancels the timer setting. <p>17. CLOCK button: (page 9)</p> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

4.3 Preparation Before Operation

■ To set the batteries

1. Slide the front cover to take it off.
2. Set two dry batteries (AAA).
3. Set the front cover as before.

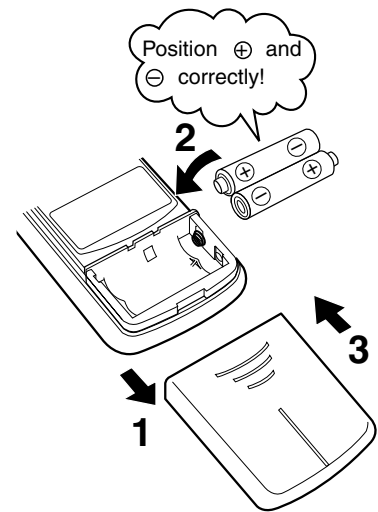

ATTENTION

■ About batteries


- When replacing the batteries, use batteries of the same type, and replace the two old batteries together.
- When the system is not used for a long time, take the batteries out.
- We recommend replacing once a year, although if the remote control display begins to fade or if reception deteriorates, please replace with new alkali batteries. Using manganese batteries reduces the lifespan.
- The attached batteries are provided for the initial use of the system.
- The usable period of the batteries may be short depending on the manufactured date of the air conditioner.

■ Replacing the batteries

- When replacing the battery, remove the old battery, wait one minute, and then insert the new battery.


■ To operate the remote control

- To use the remote control, aim the transmitter at the indoor unit. If there is anything to block signals between the unit and the remote control, such as a curtain, the unit will not operate.
- Do not drop the remote control. Do not get it wet.
- The maximum distance for communication is about 7m.

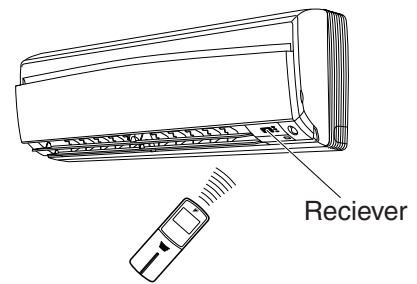

■ To fix the remote control holder on the wall

1. Choose a place from where the signals reach the unit.
2. Fix the holder to a wall, a pillar, or similar location with the screws procured locally.
3. Place the remote control in the remote control holder.

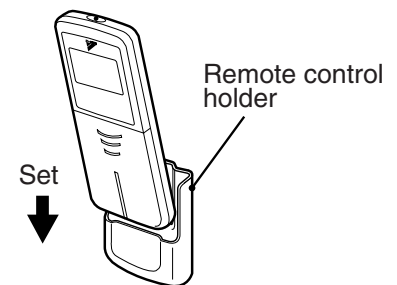

- To remove, pull it upwards.

ATTENTION

■ About remote control


- Never expose the remote control to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote control signals happen to operate another appliance, move that appliance to some-where else, or consult the shop.

■ To set the clock

1. Press “CLOCK button”.
0:00 is displayed.
⌚ blinks.
2. Press “TIMER setting button” to set the clock to the present time.
Holding down “▲” or “▼” button rapidly increases or decreases the time display.
3. Press “CLOCK button”.
: blinks.

■ Turn the breaker ON

- Turning ON the breaker opens the flap, then closes it again. (This is a normal procedure.)

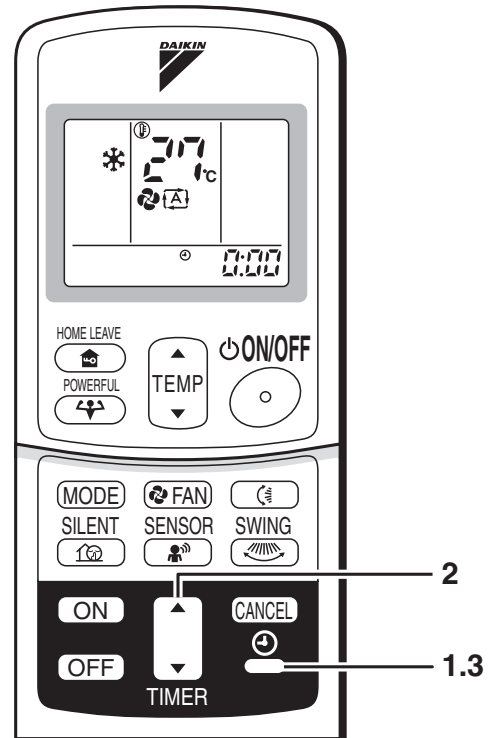

NOTE

■ Tips for saving energy

- Be careful not to cool (heat) the room too much. Keeping the temperature setting at a moderate level helps save energy.
- Cover windows with a blind or a curtain. Blocking sunlight and air from outdoors increases the cooling (heating) effect.
- Clogged air filters cause inefficient operation and waste energy. Clean them once in about every two weeks.

Recommended temperature setting
For cooling: 26°C – 28°C
For heating: 20°C – 24°C

■ Please note

- The air conditioner always consumes 15-35 watts of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker OFF.
- Use the air conditioner in the following conditions.

Mode	Operating conditions	If operation is continued out of this range
COOL	Outdoor temperature: [3/4MK(X)S] –10 to 46°C [RK(X)S –10] to 46°C Indoor temperature: 18 to 32°C Indoor humidity: 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. (In multi system, it may work to stop the operation of the outdoor unit only.) • Condensation may occur on the indoor unit and drip.
HEAT	Outdoor temperature: [3/4MXS] –15 to 21°C [RXS] –15 to 21°C Indoor temperature: 10 to 30°C	<ul style="list-style-type: none"> • A safety device may work to stop the operation.
DRY	Outdoor temperature: [3/4MK(X)S] –10 to 46°C [RK(X)S] –10 to 46°C Indoor temperature: 18 to 32°C Indoor humidity: 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

4.4 AUTO · DRY · COOL · HEAT · FAN Operation

The air conditioner operates with the operation mode of your choice. From the next time on, the air conditioner will operate with the same operation mode.

■ To start operation

1. Press “MODE selector button” and select a operation mode.

- Each pressing of the button advances the mode setting in sequence.

☐A : AUTO

☐B : DRY

❄ : COOL



☀ : HEAT

☐C : FAN



2. Press “ON/OFF button”.

- The OPERATION lamp lights up.

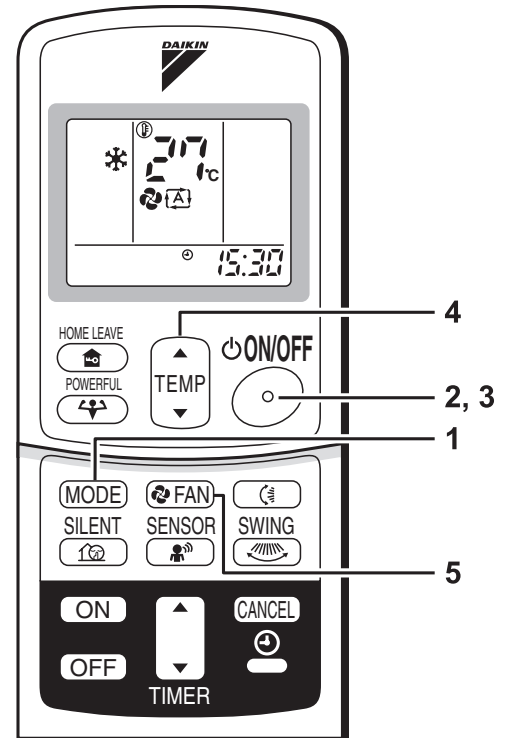

■ To stop operation

3. Press “ON/OFF button” again.

- Then OPERATION lamp goes off.






■ To change the temperature setting

4. Press “TEMPERATURE adjustment button”.


DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like

■ To change the air flow rate setting

5. Press “FAN setting button”.

DRY mode	AUTO or COOL or HEAT or FAN mode
The air flow rate setting is not variable	Five levels of air flow rate setting from “  ” to “  ” plus “  ” “  ” are available. 

- Indoor unit quiet operation

When the air flow is set to “”, the noise from the indoor unit will become quieter. Use this when making the noise quieter.

The unit might lose capacity when the air flow rate is set to a weak level.

NOTE

■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.

■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and fan strength, so manual adjustment of these functions is unavailable.

■ Note on AUTO operation

- In AUTO operation, the system selects an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, you can manually select the operation mode and setting you like.




■ Note on air flow rate setting


- At smaller air flow rates, the cooling (heating) effect is also smaller.

4.5 Adjusting the Air Flow Direction




You can adjust the air flow direction to increase your comfort..

■ To adjust the horizontal blade (flap)

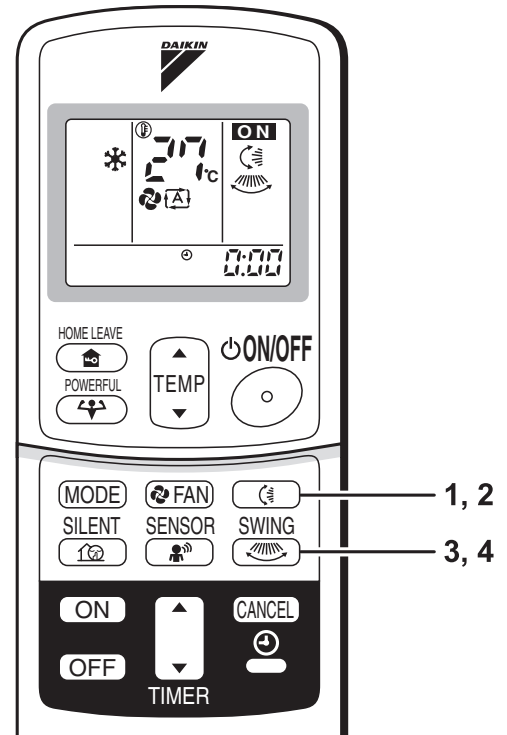



1. Press “SWING button ”.
 - “  ” is displayed on the LCD
2. When the flaps have reached the desired position, press “SWING button  ” once more.
 - The flap will stop moving.



■ To adjust the vertical blades (louvers)

3. Press “SWING button ”.
 - “  ” is displayed on the LCD
4. When the louvres have reached the desired position, press the “SWING button  ” once more.
 - The louvres will stop moving.

■ To 3-D Airflow

1. 3. Press the “SWING button ” and the “SWING button ”:
the “” and “” display will light up and the flap and louvers will move in turn.

■ To cancel 3-D Airflow


2. 4. Press either the “SWING button ” or the “SWING button ”.

Notes on louvers angles

■ ATTENTION

- Always use a remote control to adjust the louvers angles. Inside the air outlet, a fan is rotating at a high speed.

Notes on flap angle

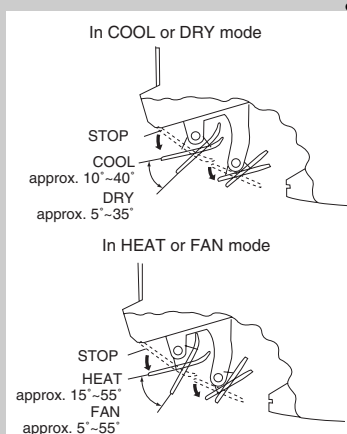

- When “**SWING button**” is selected, the flaps swinging range depends on the operation mode. (See the figure.)
 - Three-Dimensional (3-D) Airflow
 - Using three-dimensional airflow circulates cold air, which tends to collect at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.
- **ATTENTION**
- Always use a remote control to adjust the flaps angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
 - Be careful when adjusting the louvers. Inside the air outlet, fan is rotating at a high speed.

4.6 POWERFUL Operation


POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity

■ To start POWERFUL operation

1. Press "POWERFUL button".
 - POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the settings which were used before POWERFUL operation.
 - When using POWERFUL operation, there are some functions which are not available.

■ To cancel POWERFUL operation

2. Press "POWERFUL button" again.

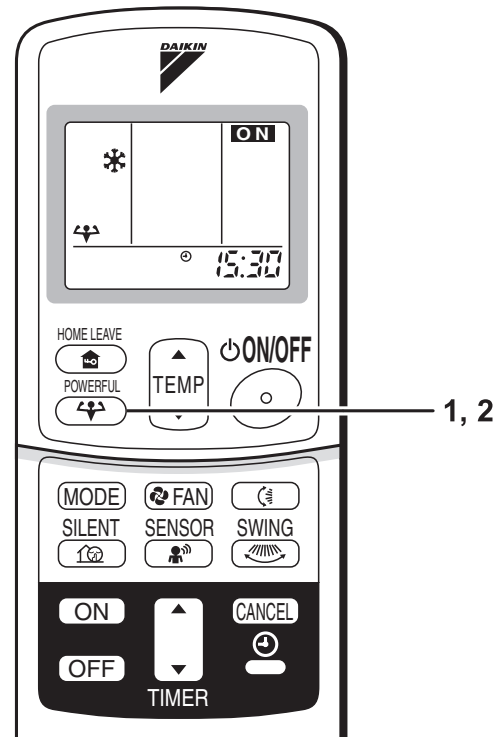

NOTE

■ Notes on POWERFUL operation

- **In COOL and HEAT mode**
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the air flow rate be fixed to the maximum setting.
The temperature and air flow settings are not variable.
- **In DRY mode**
The temperature setting is lowered by 2.5°C and the air flow rate is slightly increased.
- **In FAN mode**
The air flow rate is fixed to the maximum setting.

4.7 OUTDOOR UNIT SILENT Operation


OUTDOOR UNIT SILENT operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

■ To start OUTDOOR UNIT SILENT operation

1. Press "SILENT button".

■ To cancel OUTDOOR UNIT SILENT operation

2. Press "SILENT button".

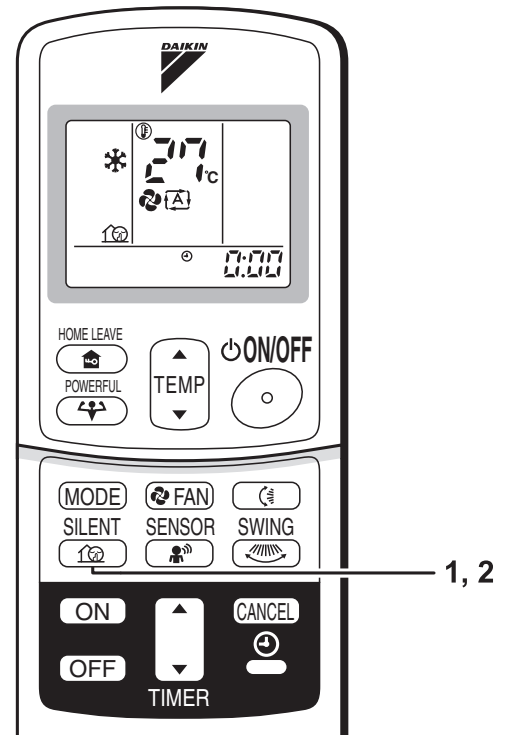

NOTE

■ Note on OUTDOOR UNIT SILENT operation


- This function is available in COOL, HEAT, and AUTO modes. (This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT SILENT operation cannot be used at the same time. Priority is given to POWERFUL operation.
- If operation is stopped using the remote control or the main unit ON/OFF switch when using OUTDOOR UNIT SILENT operation, "🏠" will remain on the remote control display.

4.8 HOME LEAVE Operation

HOME LEAVE operation is a function which allows you to record your preferred temperature and air flow rate settings.


■ To start HOME LEAVE operation

1. Press "HOME LEAVE button".
 - The HOME LEAVE lamp lights up.

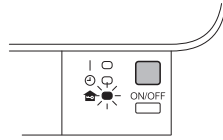

■ To cancel HOME LEAVE operation

2. Press "HOME LEAVE button" again.
 - The HOME LEAVE lamp goes off.

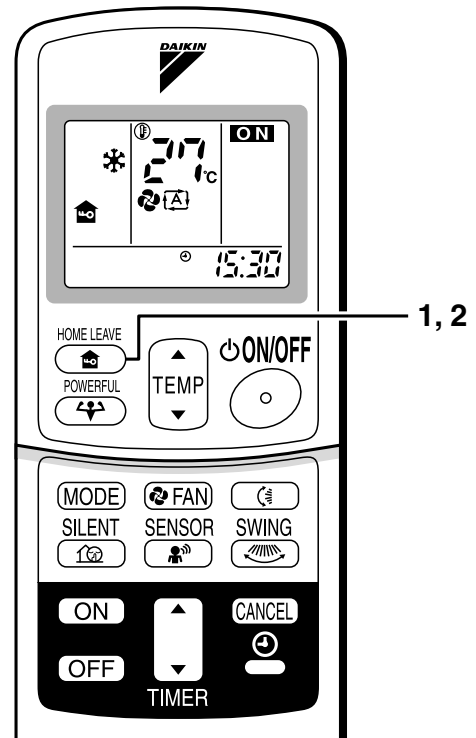

Before using HOME LEAVE operation

■ To set the temperature and air flow rate for HOME LEAVE operation

When using HOME LEAVE operation for the first time, please set the temperature and air flow rate for HOME LEAVE operation. Record your preferred temperature and air flow rate.

	Initial setting		Selectable range	
	temperature	Air flow rate	temperature	Air flow rate
Cooling	25°C	AUTO	18-32°C	5 step, AUTO and SILENT
Heating	25°C	AUTO	10-30°C	5 step, AUTO and SILENT

1. Press "HOME LEAVE button". Make sure "🏠" is displayed in the remote control display.
2. Adjust the set temperature with "▲" or "▼" as you like.
3. Adjust the air flow rate with "FAN" setting button as you like.

Home leave operation will run with these settings the next time you use the unit. To change the recorded information, repeat steps 1 – 3.

■ What's the HOME LEAVE operation


Is there a set temperature and air flow rate which is most comfortable, a set temperature and air flow rate which you use the most? HOME LEAVE operation is a function that allows you to record your favorite set temperature and air flow rate. You can start your favorite operation mode simply by pressing the HOME LEAVE button on the remote control. This function is convenient in the following situations.

■ Useful in these cases.

1. Use as an energy-saving mode

Set the temperature 2-3°C higher (cooling) or lower (heating) than normal. Setting the fan strength to the lowest setting allows the unit to be used in energy-saving mode. Also convenient for use while you are out or sleeping.


• Every day before you leave the house...

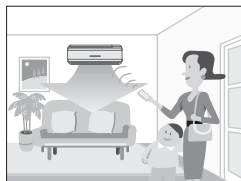

When you go out, push the "HOME LEAVE Operation" button, and the air conditioner will adjust capacity to reach the preset temperature for HOME LEAVE Operation.




When you return, you will be welcomed by a comfortably air conditioned room.

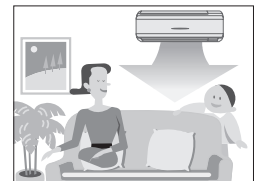

Push the "HOME LEAVE Operation" button again, and the air conditioner will adjust capacity to the set temperature for normal operation.


• Before bed...

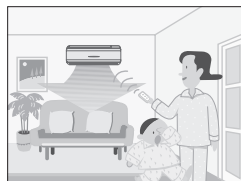

Set the unit to HOME LEAVE Operation before leaving the living room when going to bed.



The unit will maintain the temperature in the room at a comfortable level while you sleep.

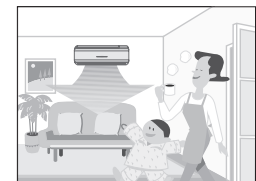


When you enter the living room in the morning, the temperature will be just right. Disengaging HOME LEAVE Operation will return the temperature to that set for normal operation. Even the coldest winters will pose no problem!

2. Use as a favorite mode

Once you record the temperature and air flow rate settings you most often use, you can retrieve them by pressing HOME LEAVE button. You do not have to go through troublesome remote control operations.

NOTE



- Once the temperature and air flow rate for HOME LEAVE operation are set, those settings will be used whenever HOME LEAVE operation is used in the future. To change these settings, please refer to the "Before using HOME LEAVE operation" section above.
- HOME LEAVE operation is only available in COOL and HEAT mode. Cannot be used in AUTO, DRY, and FAN mode.
- HOME LEAVE operation runs in accordance with the previous operation mode (COOL or HEAT) before using HOME LEAVE operation.
- HOME LEAVE operation and POWERFUL operation cannot be used at the same time. Last button that was pressed has priority.
- The operation mode cannot be changed while HOME LEAVE operation is being used.
- When operation is shut off during HOME LEAVE operation, using the remote control or the indoor unit ON/OFF switch,  will remain on the remote control display.

4.9 INTELLIGENT EYE Operation

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.

- **To start INTELLIGENT EYE operation**
 1. Press “SENSOR button”.
- **To cancel the INTELLIGENT EYE operation**
 2. Press “SENSOR button” again.

[EX.]

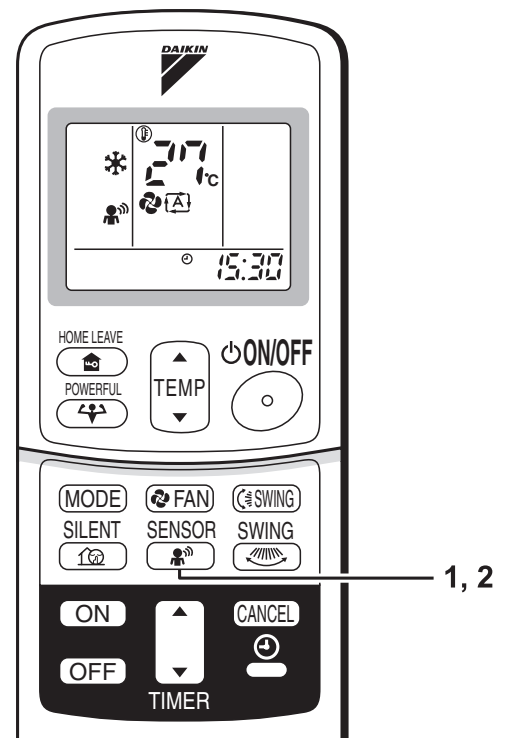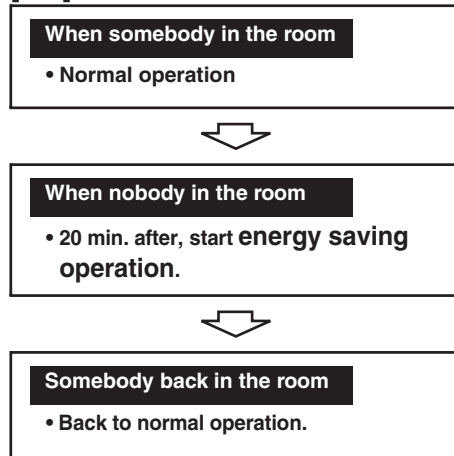


“INTELLIGENT EYE” is useful for Energy Saving

■ Energy saving operation

- Change the temperature -2°C in heating / $+2^{\circ}\text{C}$ in cooling / $+1^{\circ}\text{C}$ in dry mode from set temperature.
- Decrease the air flow rate slightly in fan operation. (In FAN mode only)

Notes on “INTELLIGENT EYE”

- Application range is as follows.

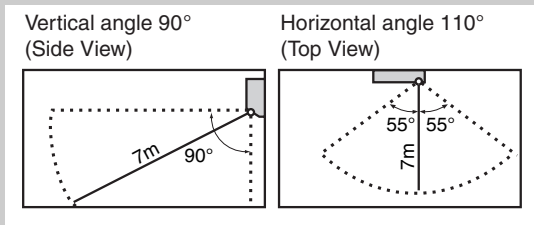

- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during powerful operation.
- Night set mode will not go on during you use INTELLIGENT EYE operation.

CAUTION


- Do not place large objects near the sensor. Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect objects it shouldn't as well as not detect objects it should.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

4.10 TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.


■ To use OFF TIMER operation

- Check that the clock is correct. If not, set the clock to the present time.
- 1. Press **“OFF TIMER button”**.
0:00 is displayed.
0:01 blinks.
- 2. Press **“TIMER Setting button”** until the time setting reaches the point you like.
 - Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.
- 3. Press **“OFF TIMER button”** again.
 - The TIMER lamp lights up.

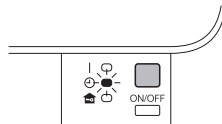

■ To cancel the OFF TIMER operation

- 4. Press **“CANCEL button”**.
 - The TIMER lamp goes off.

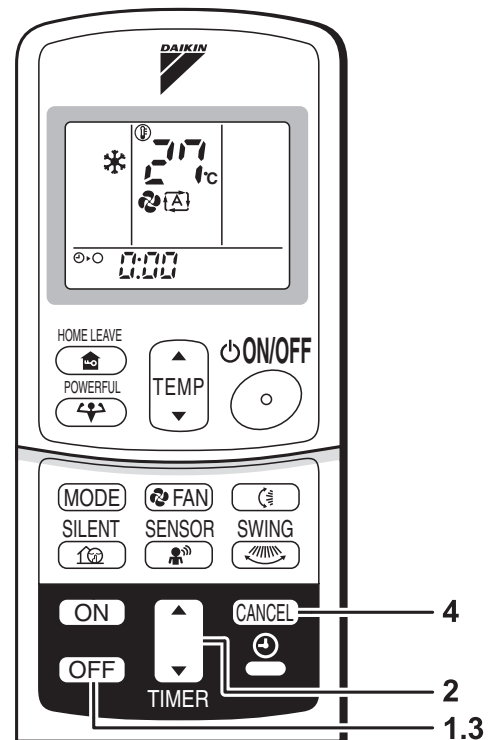


NOTE


- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote control batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes)

■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time. (page 9)
- 1. Press “ON TIMER button”.
 - 6:00 is displayed.
 - “” blinks.
- 2. Press “TIMER Setting button” until the time setting reaches the point you like.
 - Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.
- 3. Press “ON TIMER button” again.
 - The TIMER lamp lights up..


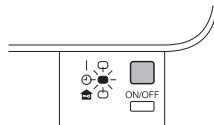


■ To cancel ON TIMER operation

- 4. Press “CANCEL button”.
 - The TIMER lamp goes off.

■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the two timers is shown below

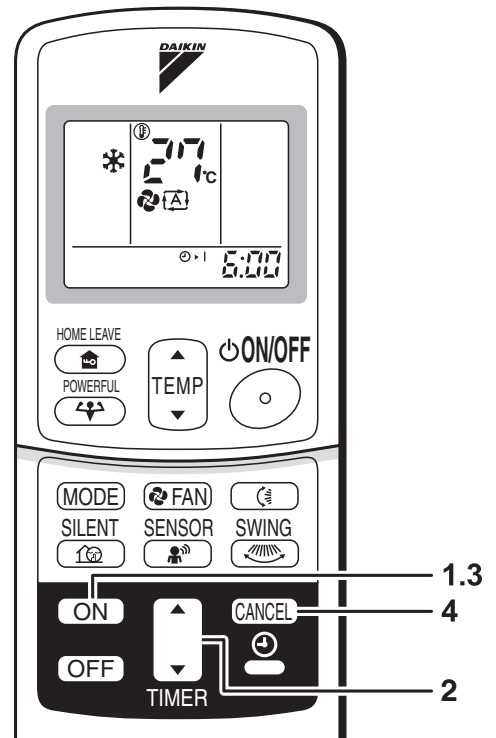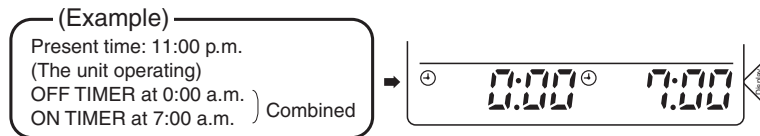

ATTENTION

■ In the following cases, set the timer again.

- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote control.

4.11 Care and cleaning

CAUTION Before cleaning, be sure to stop the operation and turn the breaker OFF.

UNITS


■ Indoor unit, Outdoor unit and Remote control

1. Wipe them with dry soft cloth.

■ Front grille


1. **Open the front grille.**

- Hold the grille by the tabs on the two sides and lift it until it stops with a click.

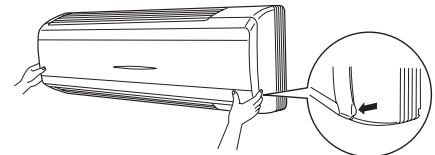

2. **Remove the front grille.**

- Open the front panel further while sliding it to either the left or right and pulling it toward you. This will disconnect the rotation dowel on one side. Then disconnect the rotation dowel on the other side in the same manner.

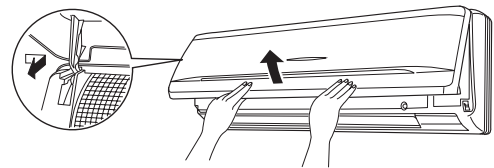


3. **Clean the front grille.**

- Wipe it with a soft cloth soaked in water.
- Only neutral detergent may be used.
- In case of washing the grille with water, dry it with cloth, dry it up in the shade after washing.


4. **Attach the front grille.**

- Align the rotation dowels on the left and right of the front panel with the slots, then push them all the way in.
- Close the front panel slowly.
(Press the panel at both sides and the center).

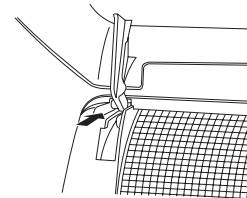


CAUTION

- When the packaging materials are attached to the front panel, please remove them.
- Don't touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front grille, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front grille, support the grille securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40 °C, benzene, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hand stuff.
- After cleaning, make sure that the front grille is securely fixed.



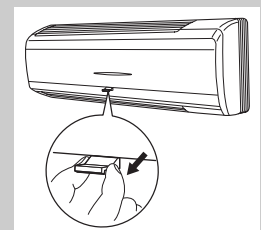


FILTERS


1. **Open the front panel.** (page 24)
2. **Pull out the air filters.**
 - Push a little upwards the tab at the center of each air filter, then pull it down.

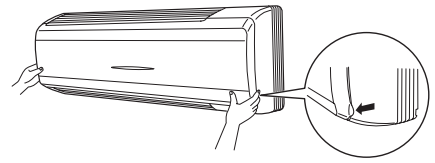

3. **Take off the Air purifying filter with photocatalytic deodorizing function.**
 - Press the top of the air-cleaning filter onto the tabs (3 tabs at top). Then press the bottom of the filter up slightly, and press it onto the tabs (2 at bottom) (3 at bottom).

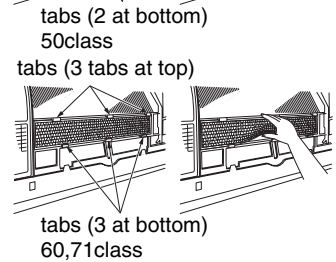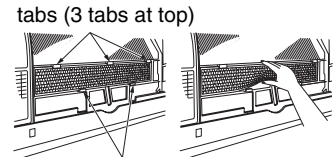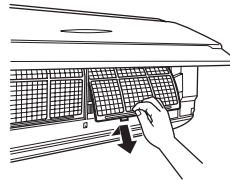


4. **Clean or replace each filter.**
See figure.
5. **Set the air filter, air purifying filter with photocatalytic deodorizing function as they were and close the front grille.**
 - Press the front panel at both sides and the center.

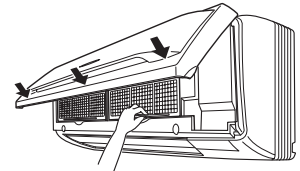

■ Air Filter

1. **Wash the air filters with water or clean them with vacuum cleaner.**
 - If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
 - It is recommended to clean the air filters every two weeks.

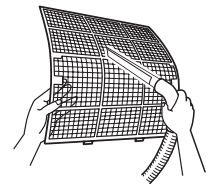

■ Air purifying filter with photocatalytic deodorizing function. (gray)

The air purifying filter with photocatalytic deodorizing function can be renewed by washing it with water once every 6 months. We recommend replacing it one every 3 years

[Maintenance]

1. **Remove dust with a vacuum cleaner and wash lightly with water.**
2. **If it is very dirty, soak it for 10 to 15 minutes in water mixed with a neutral cleaning agent.**
3. **After washing, shake off remaining water and dry in the shade.**
4. **Since the material is made out of paper, do not wring out the filter when removing water from it.**

[Replacement]

1. **Remove the tabs on the filter frame and replace with a new filter.**
 - Dispose of the old filter as flammable waste.

Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.

Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.

Check that the drain comes smoothly out of the drain hose during COOL or DRY operation

- | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case. |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

■ Before a long idle period

- Operate the “FAN only” for several hours on a fine day to dry out the inside.**
 - Press “MODE button” and select “FAN” operation.
 - Press “ON/OFF button” and start operation.
- After operation stops, turn off the breaker for the room air conditioner.**
- Clean the air filters and set them again.**
- Take out batteries from the remote control.**

NOTE

- Operation with dirty filters:
 - cannot deodorize the air.
 - cannot clean the air.
 - results in poor heating or cooling.
 - may cause odour.
- To order air purifying filter with photocatalytic deodorizing function contact to the service shop there you bought the air conditioner.
- Dispose of old filters as burnable waste..

Item	Part No.
Air purifying filter with photocatalytic deodorizing function. (without frame) 1 set	KAF952A42

4.12 Troubleshooting

These cases are not troubles

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Explanation
Operation does not start soon. <ul style="list-style-type: none"> • When ON/OFF button was pressed soon after operation was stopped. • When the mode was reselected. 	<ul style="list-style-type: none"> • This is to protect the air conditioner. You should wait for about 3 minutes.
Hot air does not flow out soon after the start of heating operation.	<ul style="list-style-type: none"> • The air conditioner is warming up. You should wait for 1 to 4 minutes. (The system is designed to start discharging air only after it has reached a certain temperature.)
The heating operation stops suddenly and a flowing sound is heard.	<ul style="list-style-type: none"> • The system is taking away the frost on the outdoor unit. You should wait for about 3 to 8 minutes.
The outdoor unit emits water or steam.	<ul style="list-style-type: none"> ■ In HEAT mode • The frost on the outdoor unit melts into water or steam when the air conditioner is in defrost operation. ■ In COOL or DRY mode • Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.
Mists come out of the indoor unit.	<ul style="list-style-type: none"> ■ This happens when the air in the room is cooled into mist by the cold air flow during cooling operation. ■ This is because the air in the room is cooled by the heat exchanger and becomes mist during defrost operation.
The indoor unit gives out odour	<ul style="list-style-type: none"> ■ This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the air flow. (If this happens, we recommend you to have the indoor unit washed by a technician. Consult the service shop where you bought the air conditioner.)
The outdoor fan rotates while the air conditioner is not in operation.	<ul style="list-style-type: none"> ■ After operation is stopped: <ul style="list-style-type: none"> • The outdoor fan continues rotating for another 60 seconds for system protection. ■ While the air conditioner is not in operation: <ul style="list-style-type: none"> • When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.
The operation stopped suddenly. (OPERATION lamp is on)	<ul style="list-style-type: none"> ■ For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.

Check again

Please check again before calling a repair person.

Case	Check
The air conditioner does not operate. (OPERATION lamp is off)	<ul style="list-style-type: none"> • Hasn't a breaker turned OFF or a fuse blown? • Isn't it a power failure? • Are batteries set in the remote control? • Is the timer setting correct?
Cooling (Heating) effect is poor	<ul style="list-style-type: none"> • Are the air filters clean? • Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? • Is the temperature setting appropriate? • Are the windows and doors closed? • Are the air flow rate and the air direction set appropriately?
Operation stops suddenly. (OPERATION lamp flashes.)	<ul style="list-style-type: none"> • Are the air filters clean? • Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? Clean the air filters or take all obstacles away and turn the breaker OFF. Then turn it ON again and try operating the air conditioner with the remote control. If the lamp still flashes, call the service shop where you bought the air conditioner.
An abnormal functioning happens during operation.	<ul style="list-style-type: none"> • The air conditioner may malfunction with lightning or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote control.

Call the service shop immediately.

 **WARNING**

- When an abnormality (such as a burning smell) occurs, stop operation and turn the breaker OFF. Continued operation in an abnormal condition may result in troubles, electric shocks or fire. Consult the service shop where you bought the air conditioner.
- Do not attempt to repair or modify the air conditioner by yourself. Incorrect work may result in electric shocks or fire. Consult the service shop where you bought the air conditioner.

If one of the following symptoms takes place, call the service shop immediately.

- **The power cord is abnormally hot or damaged.**
- **An abnormal sound is heard during operation.**
- **The safety breaker, a fuse, or the earth leakage breaker cuts off the operation frequently.**
- **A switch or a button often fails to work properly.**
- **There is a burning smell.**
- **Water leaks from the indoor unit.**



Turn the breaker OFF and call the service shop.

■ After a power failure
The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.

■ Lightning
If lightning may strike the neighbouring area, stop operation and turn the breaker OFF for system protection.

Disposal requirements



Your air conditioning product is marked with this symbol. This means that electrical and electronic products shall not be mixed with unsorted household waste.

Do not try to dismantle the system yourself: the dismantling of the air conditioning system, treatment of the refrigerant, of oil and of other parts must be done by a qualified installer in accordance with relevant local and national legislation.

Air conditioners must be treated at a specialized treatment facility for re-use, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. Please contact the installer or local authority for more information.

Batteries must be removed from the remote control and disposed of separately in accordance with relevant local and national legislation.

We recommend periodical maintenance


In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist aside from regular cleaning by the user. For specialist maintenance, contact the service shop where you bought the air conditioner.

The maintenance cost must be born by the user.

Fault diagnosis by remote control.

In the ARC433A series, the temperature display sections on the main unit indicate corresponding codes.

1. When the **TIMER CANCEL** button is held down for 5 seconds, a “00” indication flashes on the temperature display section.

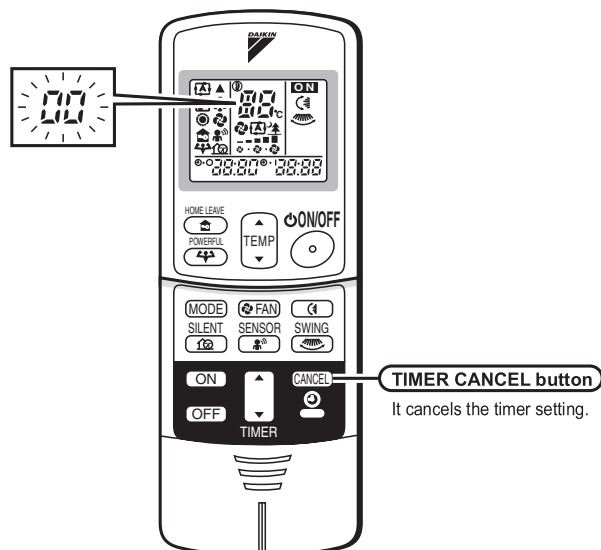

2. Press the **TIMER CANCEL** button repeatedly until a continuous beep is produced.

- The code indication changes as shown below, and notifies with a long beep.

	CODE	MEANING
SYSTEM	00	NORMAL
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
INDOOR UNIT	A1	INDOOR PCB DEFECTIVENESS
	A5	HIGH PRESSURE CONTROL OR FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
OUTDOOR UNIT	EA	COOLING-HEATING SWITCHING ERROR
	E5	OL STARTED
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	E8	OPERATION HALT DUE TO DETECTION OF INPUT OVER CURRENT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	CT ABNORMALITY
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

NOTE

1. A short beep and two consecutive beeps indicate non-corresponding codes.
2. To cancel the code display, hold the **TIMER CANCEL** button down for 5 seconds. The code display also cancel itself if the button is not pressed for 1 minute.

Part 6

Service Diagnosis


1. Caution for Diagnosis.....	102
2. Problem Symptoms and Measures	103
3. Service Check Function	104
4. Troubleshooting	107
4.1 Error Codes and Description	107
4.2 Indoor Unit PCB Abnormality	108
4.3 Freeze-up Protection Control or High Pressure Control.....	109
4.4 Fan Motor (DC Motor) or Related Abnormality.....	111
4.5 Thermistor or Related Abnormality (Indoor Unit).....	113
4.6 Signal Transmission Error (between Indoor and Outdoor Units).....	114
4.7 OL Activation (Compressor Overload)	115
4.8 Compressor Lock	116
4.9 DC Fan Lock	117
4.10 Input Over Current Detection	118
4.11 Four Way Valve Abnormality.....	120
4.12 Discharge Pipe Temperature Control.....	122
4.13 High Pressure Control in Cooling	123
4.14 Position Sensor Abnormality	125
4.15 CT or Related Abnormality	126
4.16 Thermistor or Related Abnormality (Outdoor Unit).....	128
4.17 Electrical Box Temperature Rise.....	130
4.18 Radiation Fin Temperature Rise	132
4.19 Output Over Current Detection.....	134
4.20 Insufficient Gas.....	136
4.21 Low-voltage Detection.....	138
5. Check.....	139
5.1 How to Check.....	139

1. Caution for Diagnosis

The Operation lamp flashes when any of the following errors is detected.


1. When a protection device of the indoor or outdoor unit is activated or when the thermistor malfunctions, disabling equipment operation.
 2. When a signal transmission error occurs between the indoor and outdoor units.
- In either case, conduct the diagnostic procedure described in the following pages.

Location of Operation Lamp

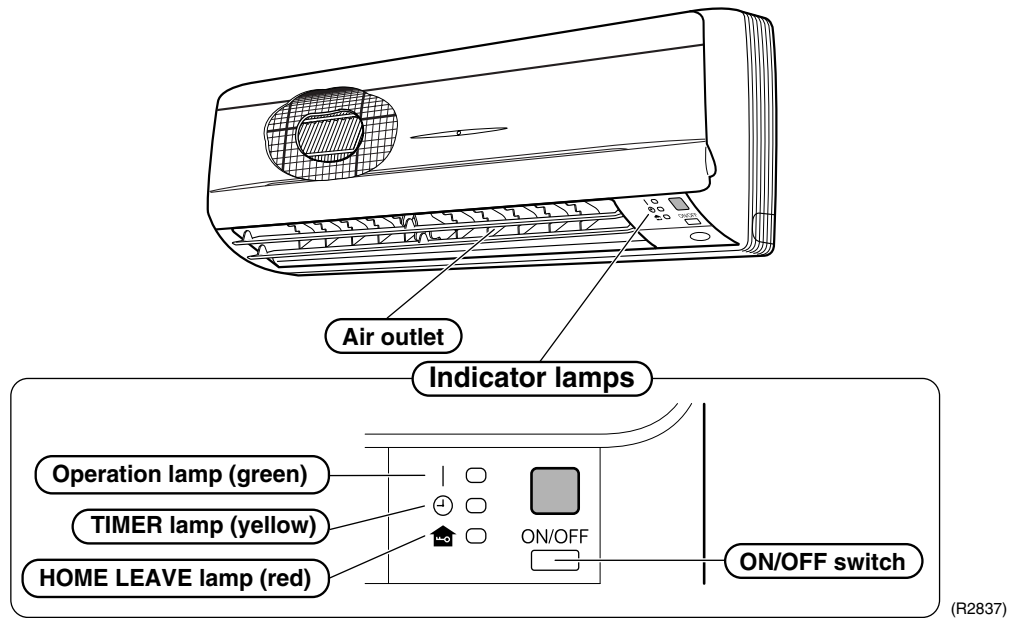

Troubleshooting with the LED Indication

Outdoor Unit

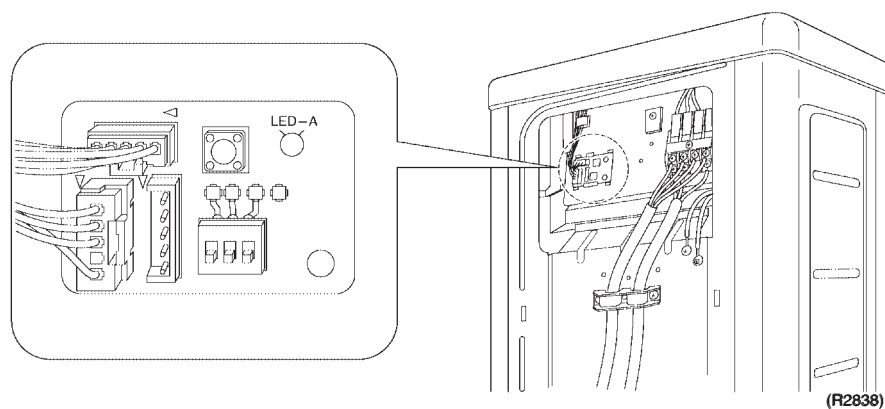

The outdoor unit has one green LED (LED A) on the PCB. The flashing green LED indicates normal condition of microcomputer operation.

2. Problem Symptoms and Measures


Symptom	Check Item	Details of Measure	Reference Page
None of the units operates.	Check the power supply.	Check to make sure that the rated voltage is supplied.	—
	Check the type of the indoor units.	Check to make sure that the indoor unit type is compatible with the outdoor unit.	—
	Check the outdoor air temperature.	Heating operation cannot be used when the outdoor air temperature is 24°C or higher (only for heat pump model), and cooling operation cannot be used when the outside temperature is below -5°C (-10°C for Europe).	—
	Diagnosis with remote control indication	—	107
	Check the remote control addresses.	Check to make sure that address settings for the remote control and indoor unit are correct.	—
Operation sometimes stops.	Check the power supply.	A power failure of 2 to 10 cycles can stop air conditioner operation. (Operation lamp OFF)	—
	Check the outdoor air temperature.	Heating operation cannot be used when the outdoor air temperature is 24°C or higher (only for heat pump model), and cooling operation cannot be used when the outside temperature is below -5°C (-10°C for Europe).	—
	Diagnosis with remote control indication	—	107
Equipment operates but does not cool, or does not heat (only for heat pump model).	Check for wiring and piping errors in the indoor and outdoor units connection wires and pipes.	Conduct the wiring/piping error check described on the product diagnosis nameplate.	—
	Check for thermistor detection errors.	Check to make sure that the main unit's thermistor has not dismounted from the pipe holder.	—
	Check for faulty operation of the electronic expansion valve.	Set the units to cooling operation, and compare the temperatures of the liquid side connection pipes of the connection section among rooms to check the opening and closing operation of the electronic expansion valves of the individual units.	—
	Diagnosis with remote control indication	—	107
	Diagnosis by service port pressure and operating current	Check for insufficient gas.	144
Large operating noise and vibrations	Check the output voltage of the power transistor.	—	145
	Check the power transistor.	—	—
	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the Technical Guide, etc.) are provided.	—

3. Service Check Function

In the ARC433A series remote control, the temperature display sections on the main unit indicate corresponding codes.

Check Method 1

1. When the timer cancel button is held down for 5 seconds, a "00" indication flashes on the temperature display section.

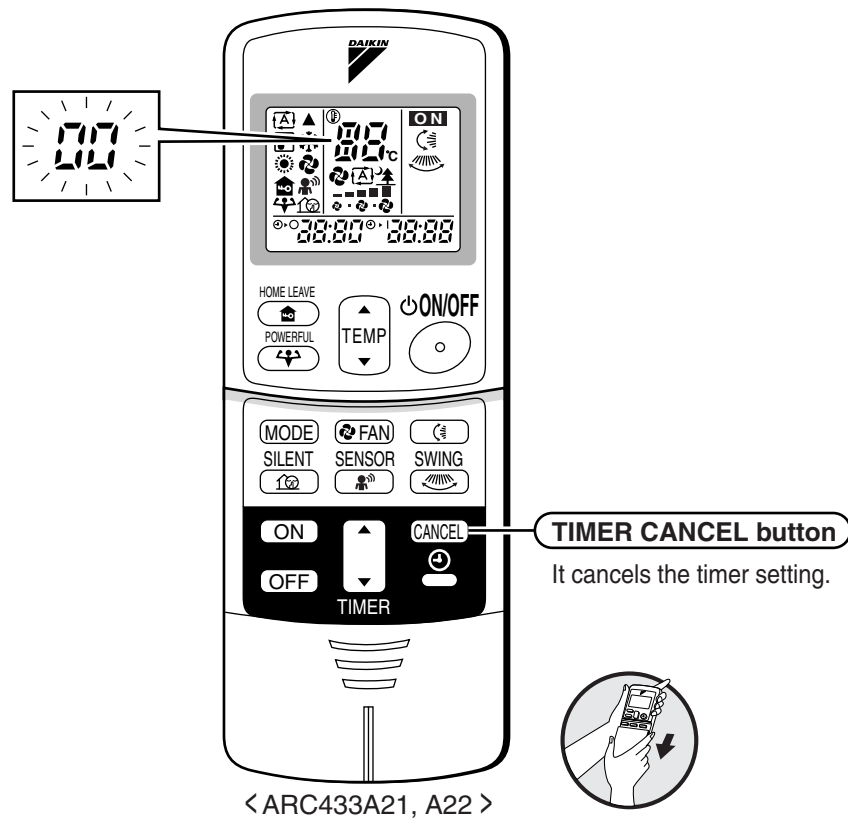

(R2839)

2. Press the timer cancel button repeatedly until a continuous beep is produced.
 - The code indication changes in the sequence shown below, and notifies with a long beep.

No.	Code	No.	Code	No.	Code
1	00	12	C7	23	H0
2	U4	13	H8	24	E1
3	F3	14	J3	25	P4
4	E6	15	R3	26	L3
5	L5	16	R1	27	L4
6	R6	17	C4	28	H6
7	E5	18	C5	29	H7
8	F6	19	H9	30	U2
9	C9	20	J6	31	UH
10	U0	21	UR	32	ER
11	E7	22	R5	33	RH




Note:

1. A short beep and two consecutive beeps indicate non-corresponding codes.
2. To cancel the code display, hold the timer cancel button down for 5 seconds. The code display also cancels itself if the button is not pressed for 1 minute.


Check Method 2

1. Enter the diagnosis mode.
Press the 3 buttons (TEMP▲,TEMP▼, MODE) simultaneously.

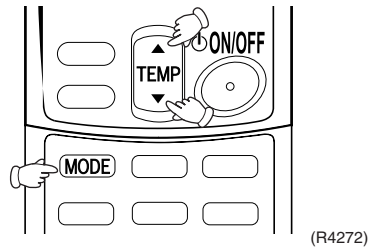


The digit of the number of tens blinks.

★Try again from the start when the digit does not blink.

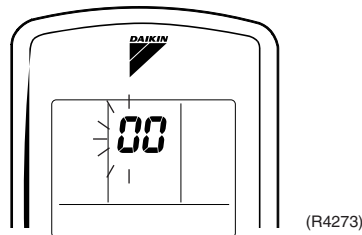


2. Press the TEMP button.
Press TEMP▲ or TEMP▼ and change the digit until you hear the sound of “beep” or “pi pi”.

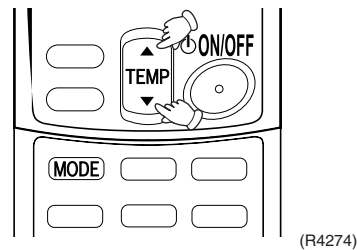


3. Diagnose by the sound.
 - ★“pi” : The number of tens does not accord with the error code.
 - ★“pi pi” : The number of tens accords with the error code.
 - ★“beep” : The both numbers of tens and units accord with the error code. (—See page 7.)


4. Enter the diagnosis mode again.
Press the MODE button.

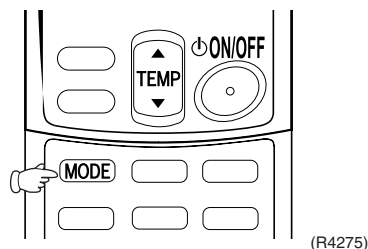

The digit of the number of units blinks.

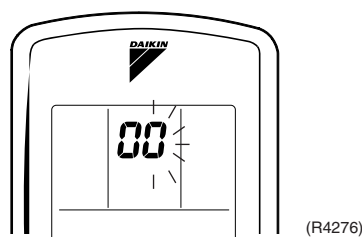


5. Press the TEMP button.
Press TEMP▲ or TEMP▼ and change the digit until you hear the sound of “beep”.

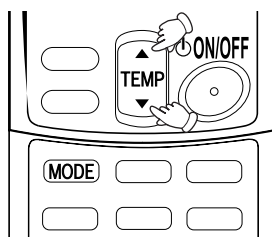

(R4277)

6. Diagnose by the sound.
 - ★“pi” : The both numbers of tens and units do not accord with the error code.
 - ★“pi pi” : The number of tens accords with the error code.
 - ★“beep” : The both numbers of tens and units accord with the error code.
7. Determine the error code.
The digits indicated when you hear the “beep” sound are error code.
(Error codes and description →Refer to page 107.)
8. Exit from the diagnosis mode.
Press the MODE button.

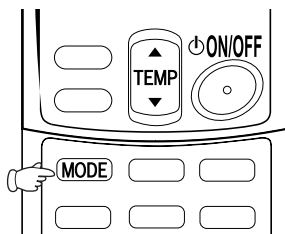

(R4278)

4. Troubleshooting

4.1 Error Codes and Description

	Code Indication	Description	Reference Page
System	<i>00</i>	Normal	—
	<i>U0</i> ★	Insufficient gas	136
	<i>U2</i>	Low-voltage detection	138
	<i>U4</i>	Signal transmission error (between indoor and outdoor units)	114
Indoor Unit	<i>R1</i>	Indoor unit PCB abnormality	108
	<i>R5</i>	Freeze-up protection control or high pressure control	109
	<i>R6</i>	Fan motor or related abnormality	111
	<i>C4</i>	Heat exchanger thermistor abnormality	113
	<i>C9</i>	Room temperature thermistor abnormality	113
Outdoor Unit	<i>E5</i> ★	OL activation (compressor overload)	115
	<i>E6</i> ★	Compressor lock	116
	<i>E7</i>	DC fan lock	117
	<i>E8</i>	Input over current detection	118
	<i>ER</i>	Four way valve abnormality	120
	<i>F3</i>	Discharge pipe temperature control	122
	<i>F6</i>	High pressure control in cooling	123
	<i>H6</i>	Position sensor abnormality	125
	<i>H8</i>	CT or related abnormality	126
	<i>H9</i>	Outdoor air thermistor or related abnormality	128
	<i>J3</i>	Discharge pipe thermistor or related abnormality	128
	<i>J6</i>	Heat exchanger thermistor or related abnormality	128
	<i>L3</i>	Electrical box temperature rise	130
	<i>L4</i>	Radiation fin temperature rise	132
	<i>L5</i>	Output over current detection	134
	<i>P4</i>	Radiation fin thermistor or related abnormality	128

★: Displayed only when system-down occurs.

4.2 Indoor Unit PCB Abnormality

remote control
Display

A1

Method of
Malfunction
Detection

Evaluation of zero-cross detection of power supply by indoor unit.


Malfunction
Decision
Conditions

When there is no zero-cross detection in approximately 10 continuous seconds.


Supposed
Causes

- Faulty indoor unit PCB
- Faulty connector connection

Troubleshooting

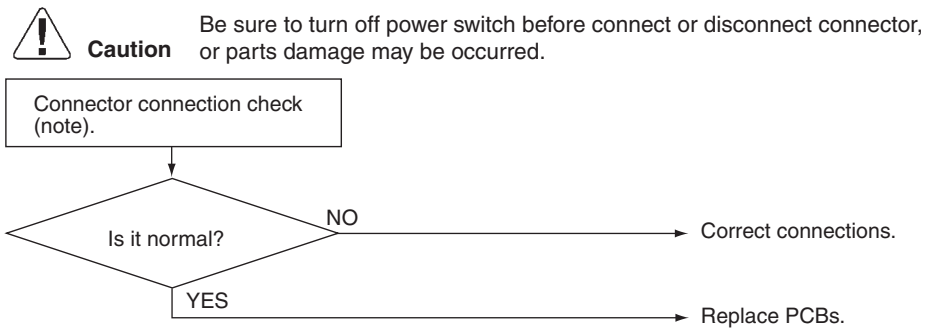

(R1400)

 **Note:** Connector Nos. vary depending on models.

Model Type	Connector No.
Wall Mounted Type 50 / 60 / 71 class	Terminal strip~Control PCB (indoor unit)

4.3 Freeze-up Protection Control or High Pressure Control

remote control
Display

A5

**Method of
Malfunction
Detection**

- High pressure control (heat pump model only)
During heating operations, the temperature detected by the indoor heat exchanger thermistor is used for the high pressure control (stop, outdoor fan stop, etc.)
- The freeze-up protection control (operation halt) is activated during cooling operation according to the temperature detected by the indoor unit heat exchanger thermistor.

**Malfunction
Decision
Conditions**

- High pressure control
During heating operations, the temperature detected by the indoor heat exchanger thermistor is above 65°C
- Freeze-up protection
When the indoor unit heat exchanger temperature is below 0°C during cooling operation.

**Supposed
Causes**

- Operation halt due to clogged air filter of the indoor unit.
- Operation halt due to dust accumulation on the indoor unit heat exchanger.
- Operation halt due to short-circuit.
- Detection error due to faulty indoor unit heat exchanger thermistor.
- Detection error due to faulty indoor unit PCB.

Troubleshooting




Check No.6
Refer to P.141



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

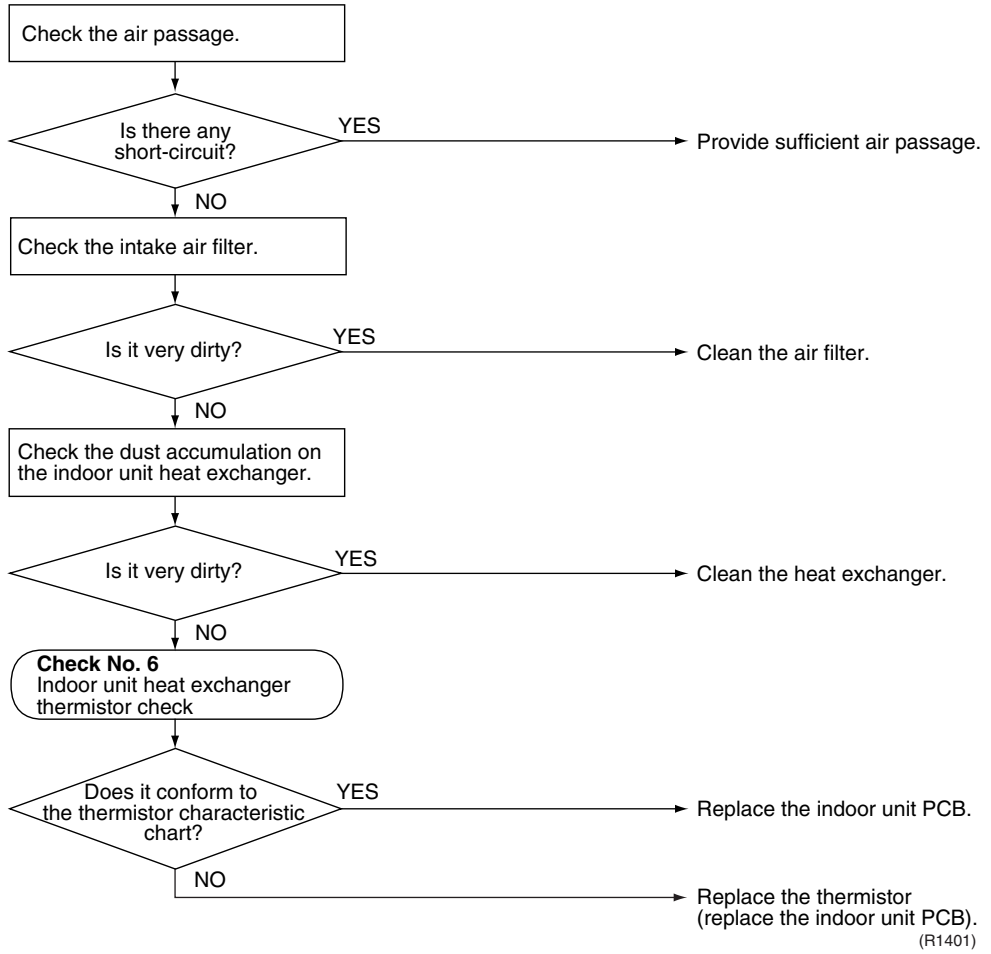

4.4 Fan Motor (DC Motor) or Related Abnormality

remote control
Display

AB

**Method of
Malfunction
Detection**

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

**Malfunction
Decision
Conditions**

When the detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

**Supposed
Causes**

- Operation halt due to short circuit inside the fan motor winding.
- Operation halt due to breaking of wire inside the fan motor.
- Operation halt due to breaking of the fan motor lead wires.
- Operation halt due to faulty capacitor of the fan motor.
- Detection error due to faulty indoor unit PCB.

Troubleshooting




Check No.01
Refer to P.139



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

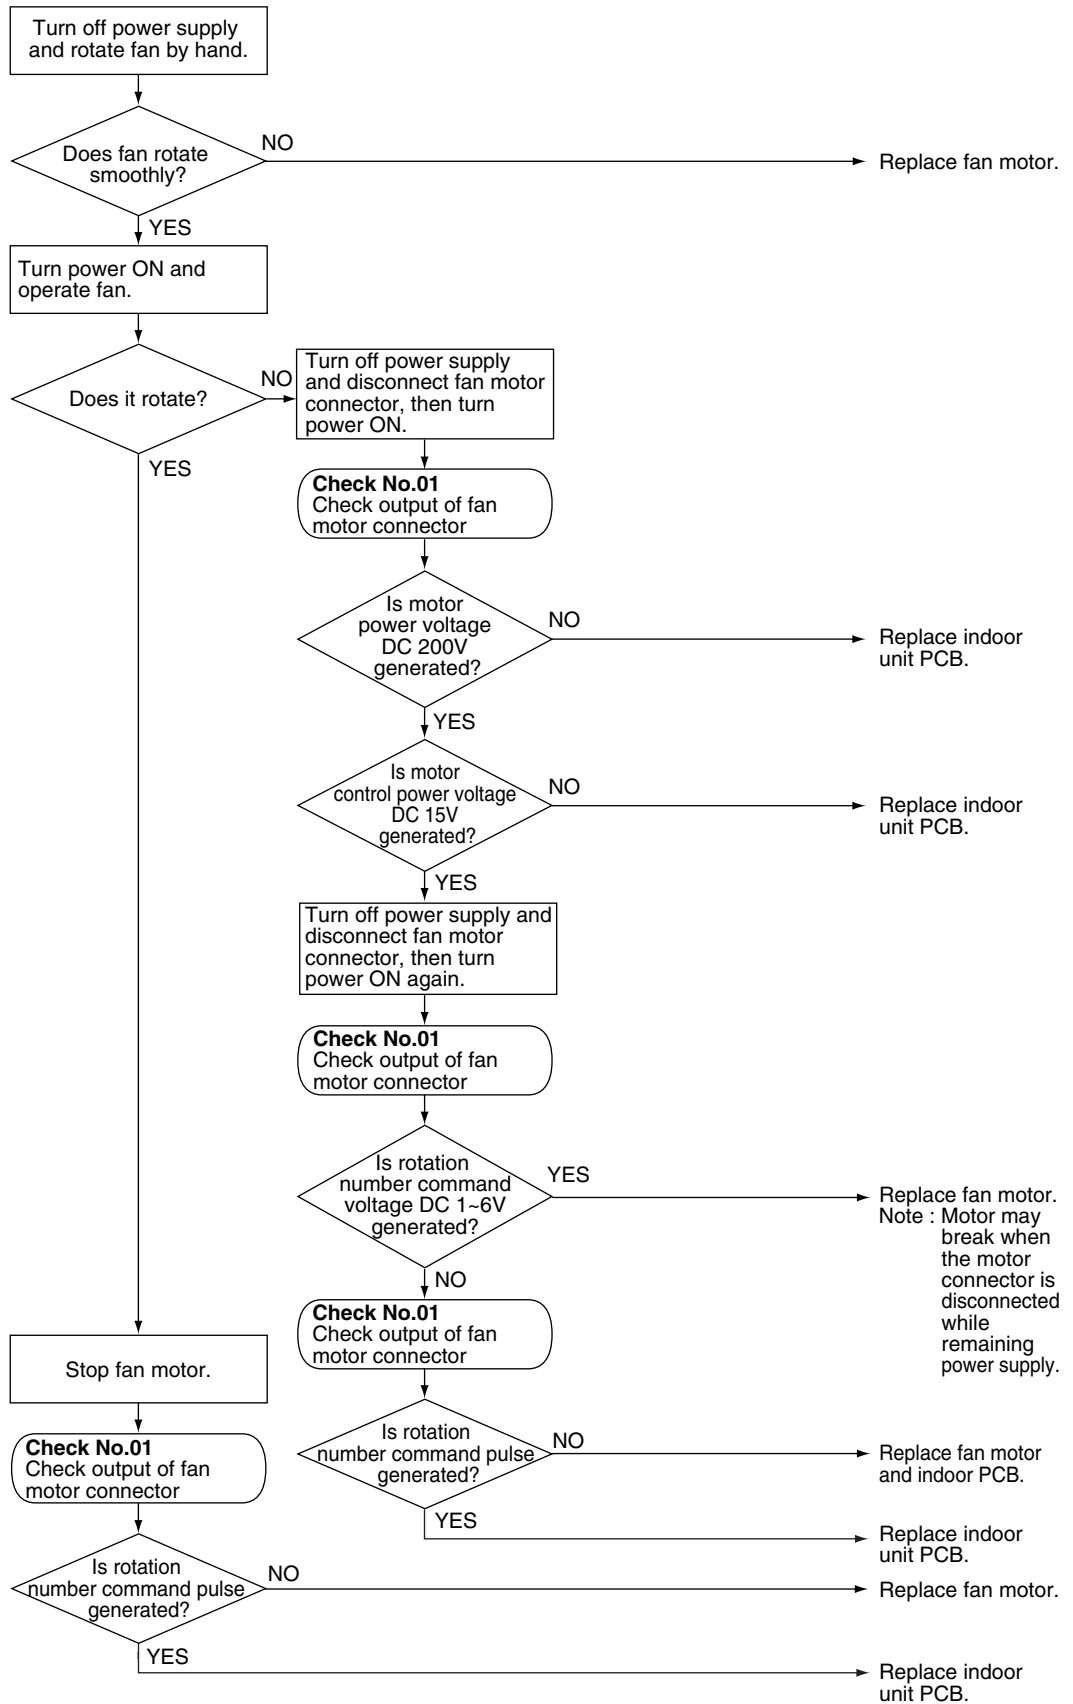

(R3098)

4.5 Thermistor or Related Abnormality (Indoor Unit)

remote control *C4, C9*
Display

Method of Malfunction Detection

The temperatures detected by the thermistors are used to determine thermistor errors.

Malfunction Decision Conditions

When the thermistor input is more than 4.96 V or less than 0.04 V during compressor operation*.

* (reference)

When above about 212°C (less than 120 ohms) or below about -50°C (more than 1,860 kohms).



Note: The values vary slightly in some models.

Supposed Causes

- Faulty connector connection
- Faulty thermistor
- Faulty PCB

Troubleshooting




Check No.6
Refer to P.141



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

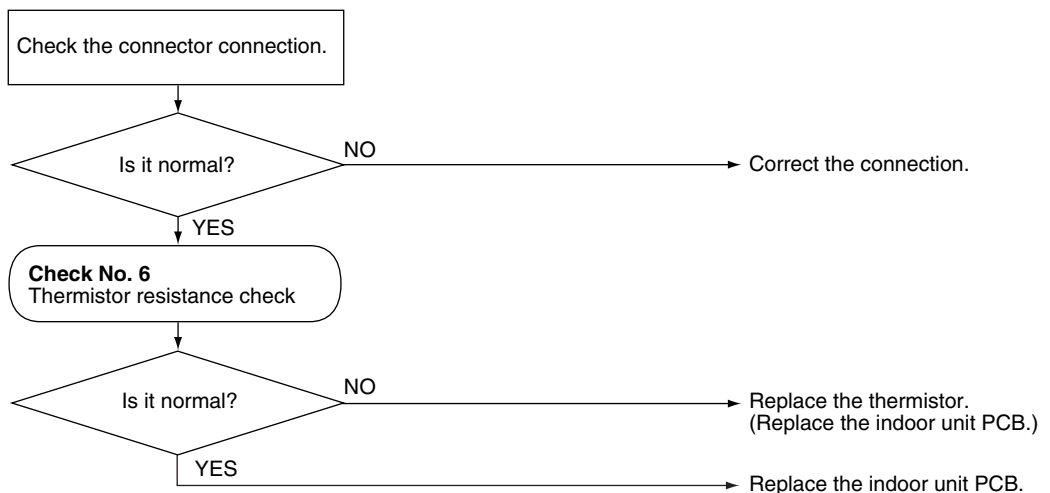

C

C9 : Room temperature thermistor

(R1403)

4.6 Signal Transmission Error (between Indoor and Outdoor Units)

remote control
Display

U4

Method of Malfunction Detection

The data received from the outdoor unit in indoor unit-outdoor unit signal transmission is checked whether it is normal.

Malfunction Decision Conditions

When the data sent from the outdoor unit cannot be received normally, or when the content of the data is abnormal.


Supposed Causes

- Faulty outdoor unit PCB.
- Faulty indoor unit PCB.
- Indoor unit-outdoor unit signal transmission error due to wiring error.
- Indoor unit-outdoor unit signal transmission error due to disturbed power supply waveform.
- Indoor unit-outdoor unit signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units (wire No. 2).

Troubleshooting



Check No.10
Refer to P.144

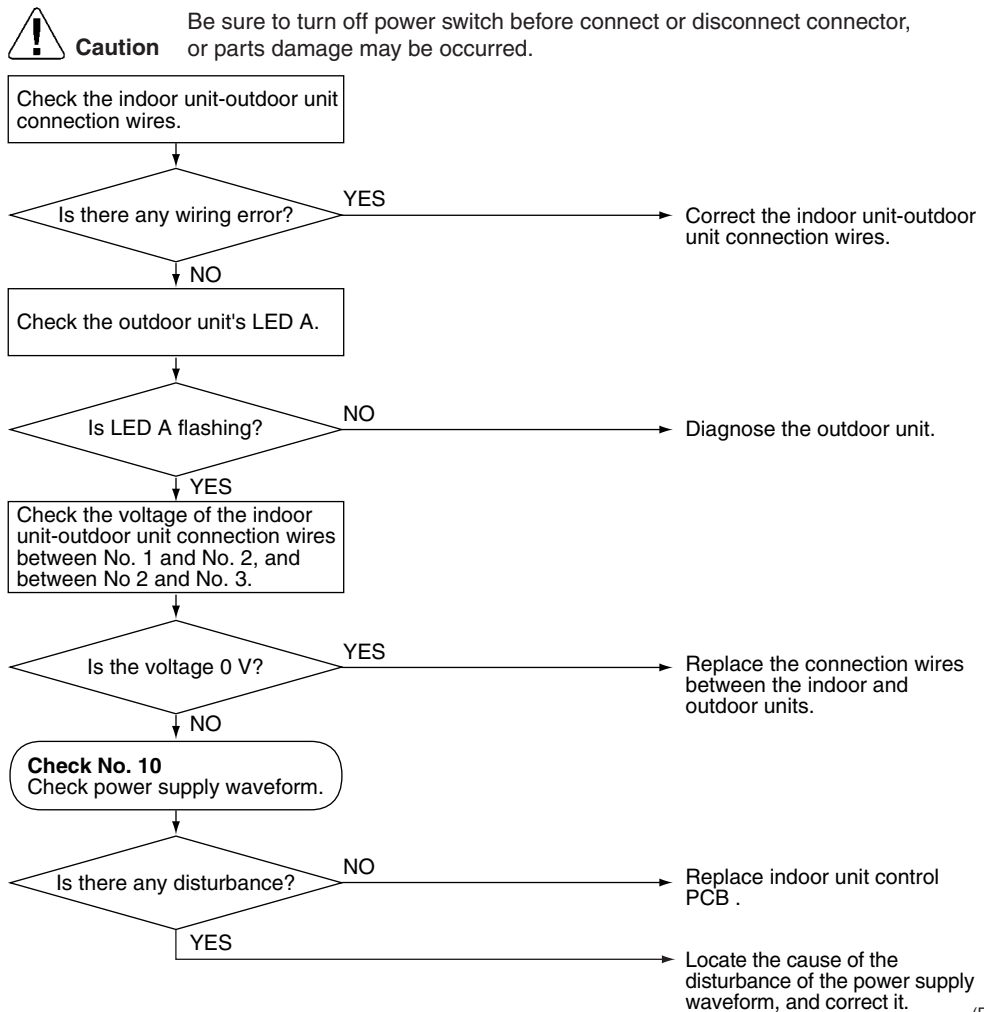

(R2840)

4.7 OL Activation (Compressor Overload)

remote control
Display

ES

Method of
Malfunction
Detection

A compressor overload is detected through compressor OL.

Malfunction
Decision
Conditions

- If the compressor OL is activated twice, the system will be shut down.
 - The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).
- * The operating temperature condition is not specified.

Supposed
Causes

- Refrigerant shortage
- Four way valve malfunctioning
- Outdoor unit PCB defective
- Water mixed in the local piping
- Electronic expansion valve defective
- Stop valve defective


Troubleshooting


Check No.4
Refer to P.139


Check No.5
Refer to P.140


Check No.6
Refer to P.141


Check No.11
Refer to P.144

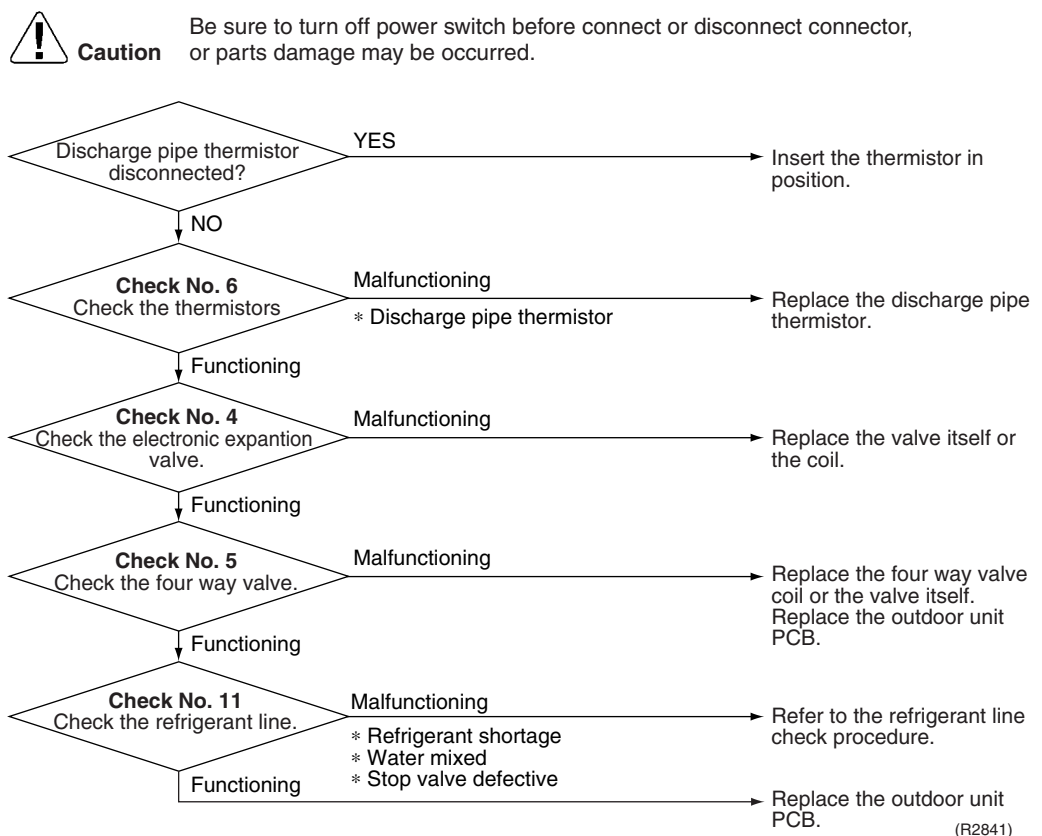

4.8 Compressor Lock

remote control
Display

EE

Method of
Malfunction
Detection

A compressor lock is detected by checking the compressor running condition through the position detection circuit.


Malfunction
Decision
Conditions

- The position detection circuit detects a compressor frequency of below 10 Hz for 20 seconds or a frequency of above 160 Hz.
- 40 seconds after the compressor has started, the position detection circuit detects a compressor frequency of above 180 Hz.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 5 minutes (normal)

Supposed
Causes

- Compressor locked

Troubleshooting

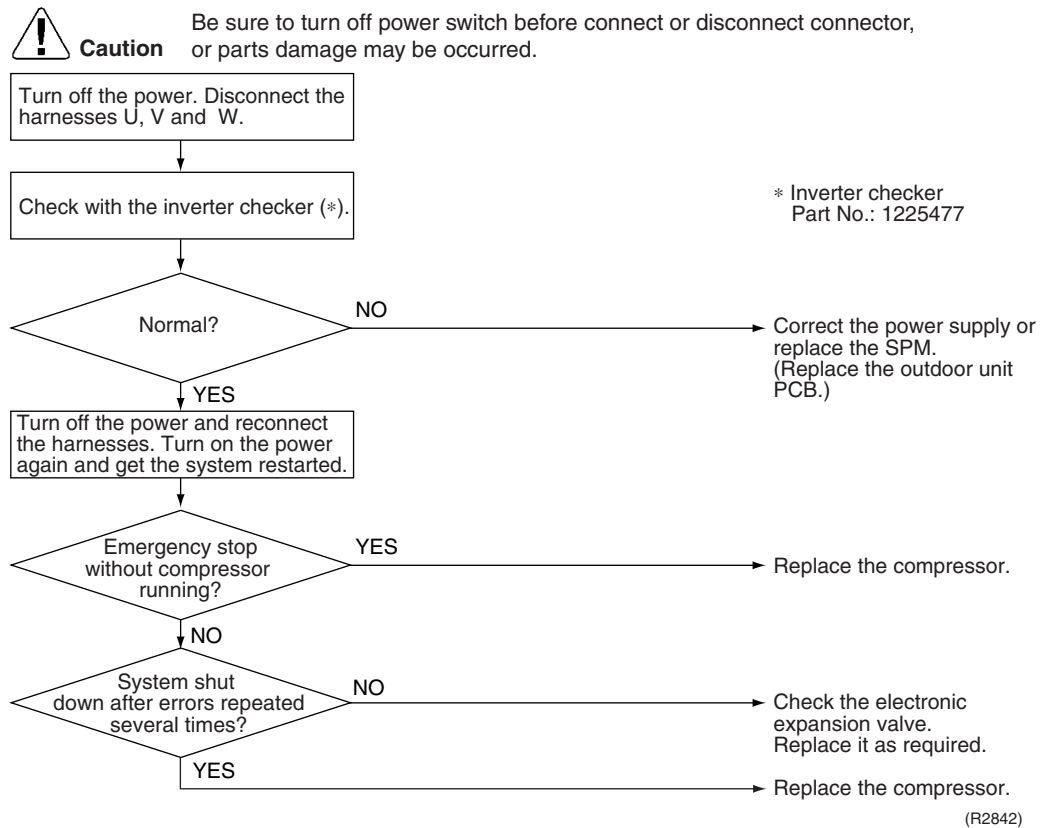

4.9 DC Fan Lock

remote control
Display

E7

**Method of
Malfunction
Detection**

A fan motor or related error is detected by checking the high-voltage fan motor rpm being detected by the Hall IC.

**Malfunction
Decision
Conditions**

- The fan does not start in 30 seconds even when the fan motor is running.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 5 minutes (normal)


**Supposed
Causes**

- Fan motor breakdown
- Harness or connector disconnected between fan motor and PCB or in poor contact
- Foreign matters stuck in the fan

Troubleshooting



Check No.15
Refer to P.146

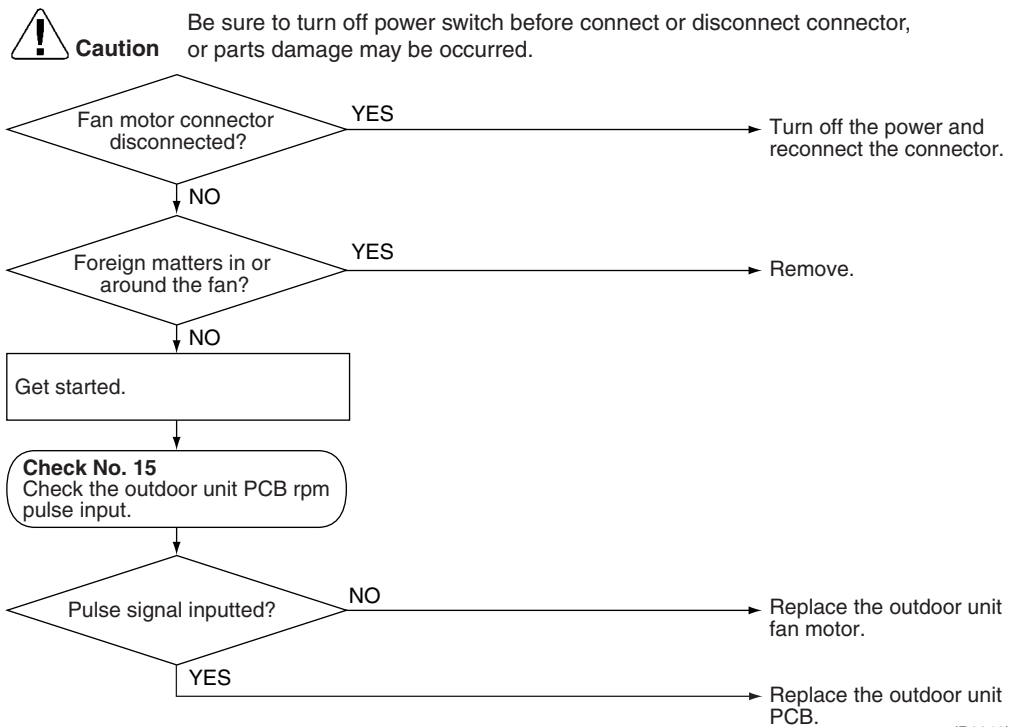

(R2843)

4.10 Input Over Current Detection

remote control
Display

EE

**Method of
Malfunction
Detection**

An input over-current is detected by checking the input current value being detected by CT with the compressor running.

**Malfunction
Decision
Conditions**

- The following CT input with the compressor running continues for 2.5 seconds.
CT input : Above 20 A
 - The system will be shut down if the error occurs 16 times.
 - Clearing condition : Continuous run for about 5 minutes (normal)
-

**Supposed
Causes**

- Over-current due to compressor failure
- Over-current due to defective power transistor
- Over-current due to defective inverter main circuit electrolytic capacitor
- Over-current due to defective outdoor unit PCB
- Error detection due to outdoor unit PCB
- Over-current due to short-circuit

Troubleshooting



Check No.7
Refer to P.142



Check No.8
Refer to P.143




Check No.14
Refer to P.146



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

* An input over-current may result from wrong internal wiring. If the wires have been disconnected and reconnected for part replacement, for example, and the system is interrupted by an input over-current, take the following procedure.

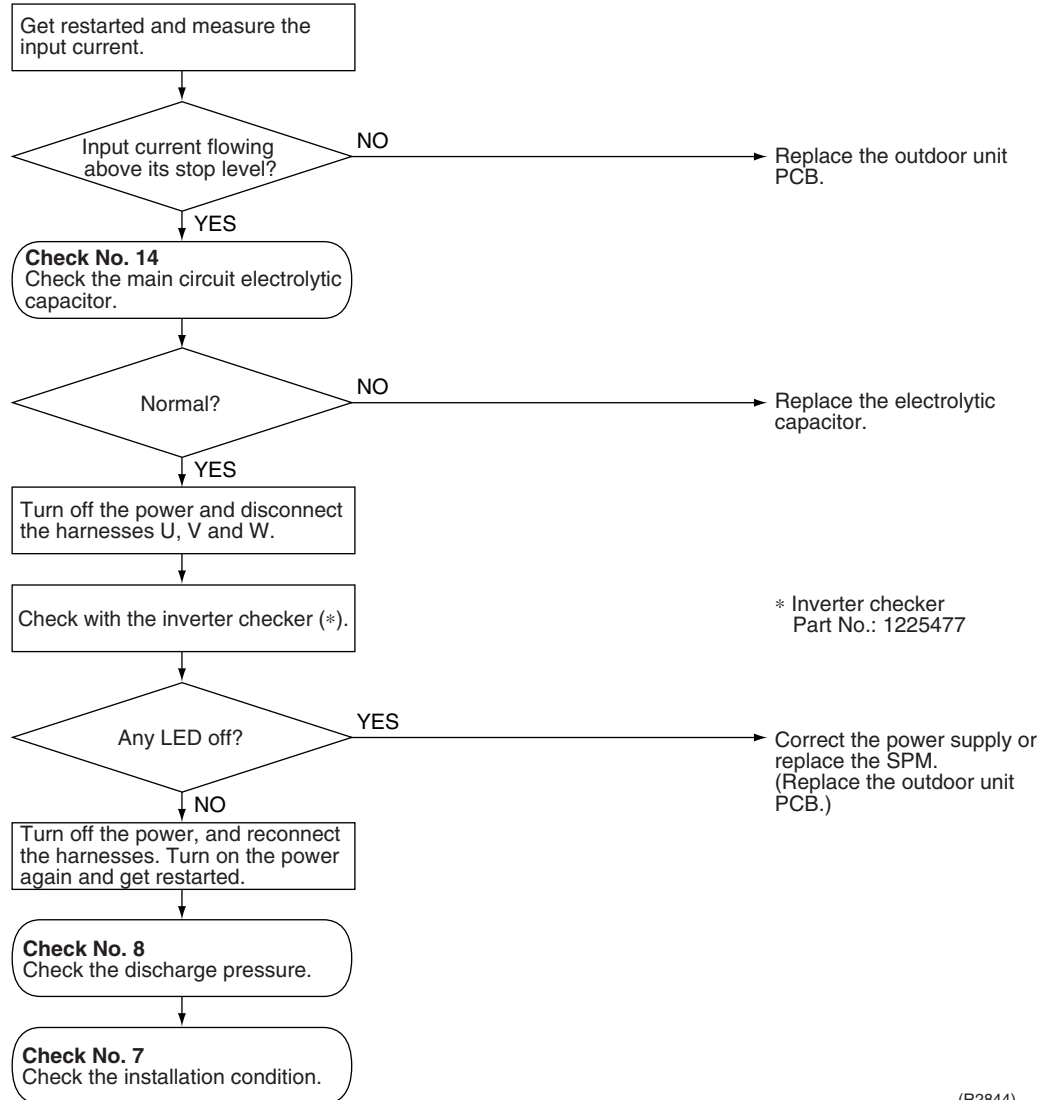

(R2844)

4.11 Four Way Valve Abnormality

remote control
Display

EA

**Method of
Malfunction
Detection**

The room temperature thermistor, the indoor unit heat exchanger thermistor, the outdoor temperature thermistor and the outdoor unit heat exchanger thermistor are checked to see if they function within their normal ranges in the operating mode.

**Malfunction
Decision
Conditions**

A following condition continues over 1 minute after operating 10 minutes.

- Cooling / dry operation
(room temp. – indoor heat exchanger temp.) < -10°C
- Heating
(indoor unit heat exchanger temp. – room temp.) < -10°C

**Supposed
Causes**

- Connector in poor contact
- Thermistor defective
- Outdoor unit PCB defective
- Four way valve coil or harness defective
- Four way valve defective
- Foreign substance mixed in refrigerant
- Insufficient gas

Troubleshooting



Check No.5
Refer to P.140




Check No.6
Refer to P.141



Check No.11
Refer to P.144

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

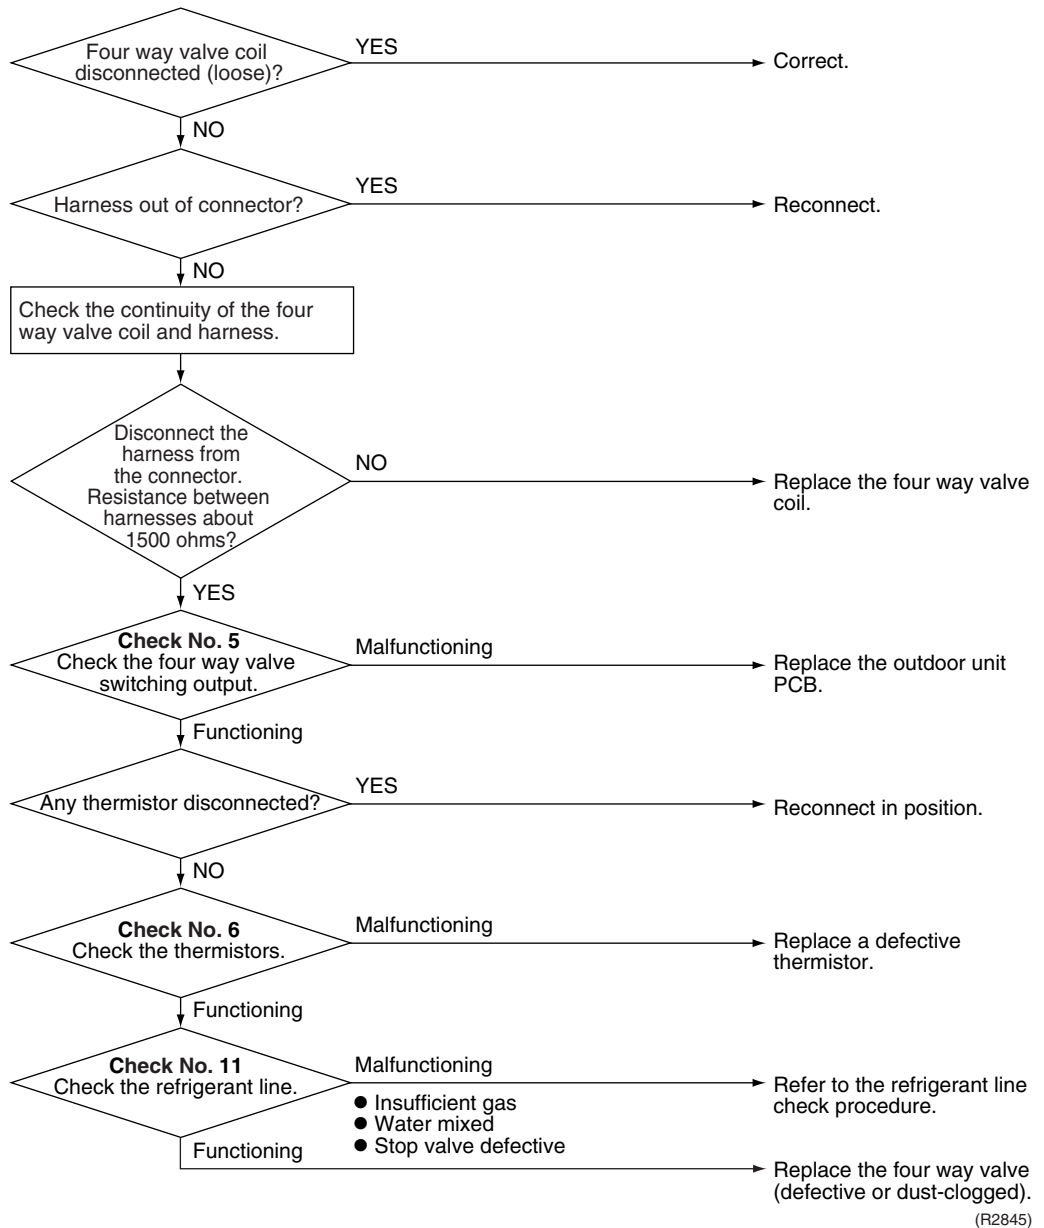

(R2845)

4.12 Discharge Pipe Temperature Control

remote control
Display

F3

Method of
Malfunction
Detection

The discharge pipe temperature control (stop, frequency drooping, etc.) is checked with the temperature being detected by the discharge pipe thermistor.

Malfunction
Decision
Conditions

- If a stop takes place 6 times successively due to abnormal discharge pipe temperature, the system will be shut down.
- If the temperature being detected by the discharge pipe thermistor rises above 120°C, the compressor will stop. (The error is cleared when the temperature has dropped below 107°C.)

Stop temperatures (in case of 5.0kW class)




- (1) 110°C : above 45Hz (rising), above 40Hz (dropping)
- (2) 102°C : 30~45Hz (rising), 25~40Hz (dropping)
- (3) 98°C : below 30Hz (rising), below 25Hz (dropping)


- The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

Supposed
Causes

- Refrigerant shortage
- Four way valve malfunctioning
- Discharge pipe thermistor defective (heat exchanger or outdoor temperature thermistor defective)
- Outdoor unit PCB defective
- Water mixed in the local piping
- Electronic expansion valve defective
- Stop valve defective

Troubleshooting

-  **Check No.4**
Refer to P.139
-  **Check No.6**
Refer to P.141
-  **Check No.11**
Refer to P.144

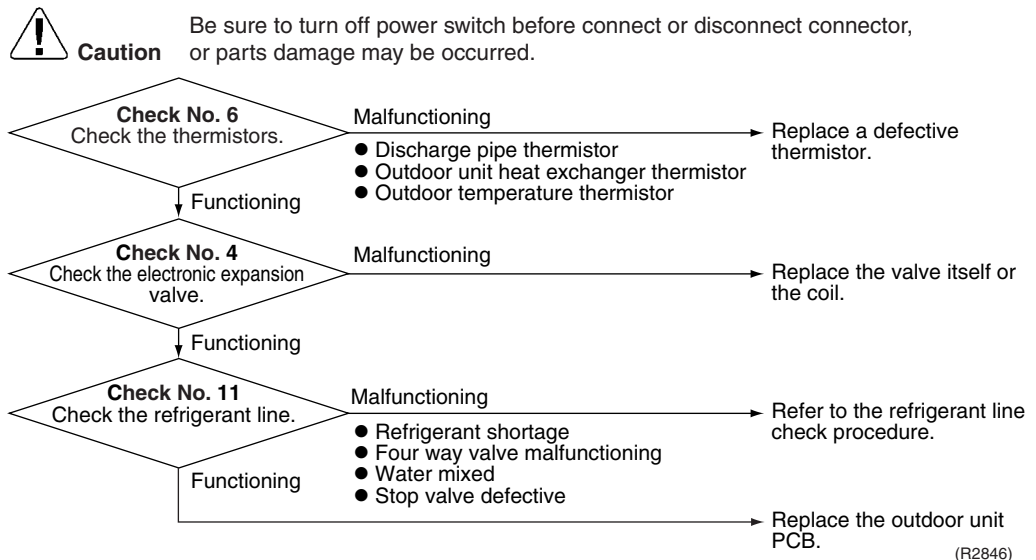

4.13 High Pressure Control in Cooling

remote control
Display

FB

**Method of
Malfunction
Detection**

High-pressure control (stop, frequency drop, etc.) is activated in the cooling mode if the temperature being sensed by the heat exchanger thermistor exceeds the limit.

**Malfunction
Decision
Conditions**

Activated when the temperature being sensed by the heat exchanger thermistor rises above 60°C. (Deactivated when the said temperature drops below 50°C.)

**Supposed
Causes**

- The installation space is not large enough.
- Faulty outdoor unit fan
- Faulty electronic expansion valve
- Faulty defrost thermistor
- Faulty outdoor unit PCB
- Faulty stop valve
- Dirty heat exchanger

Troubleshooting



Check No.4
Refer to P.139



Check No.6
Refer to P.141



Check No.7
Refer to P.142




Check No.9
Refer to P.143



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

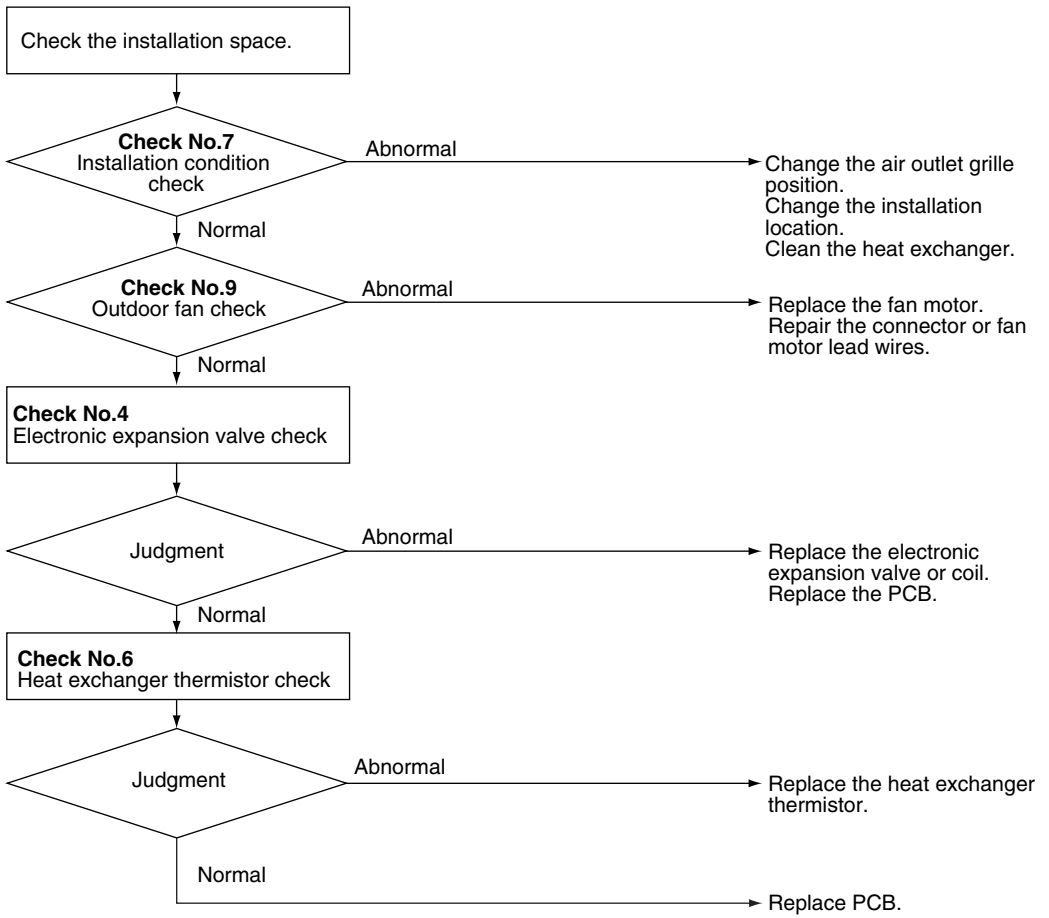

(R2855)

4.14 Position Sensor Abnormality

remote control
Display

H6

Method of
Malfunction
Detection

A compressor startup failure is detected by checking the compressor running condition through the position detection circuit.

Malfunction
Decision
Conditions

- The compressor fails to start in about 15 seconds after the compressor run command signal is sent.
- Clearing condition: Continuous run for about 5 minutes (normal)
- The system will be shut down if the error occurs 16 times.


Supposed
Causes

- Compressor relay cable disconnected
- Compressor itself defective
- Outdoor unit PCB defective
- Stop valve closed
- Input voltage out of specification

Troubleshooting



Check No.13
Refer to P.145

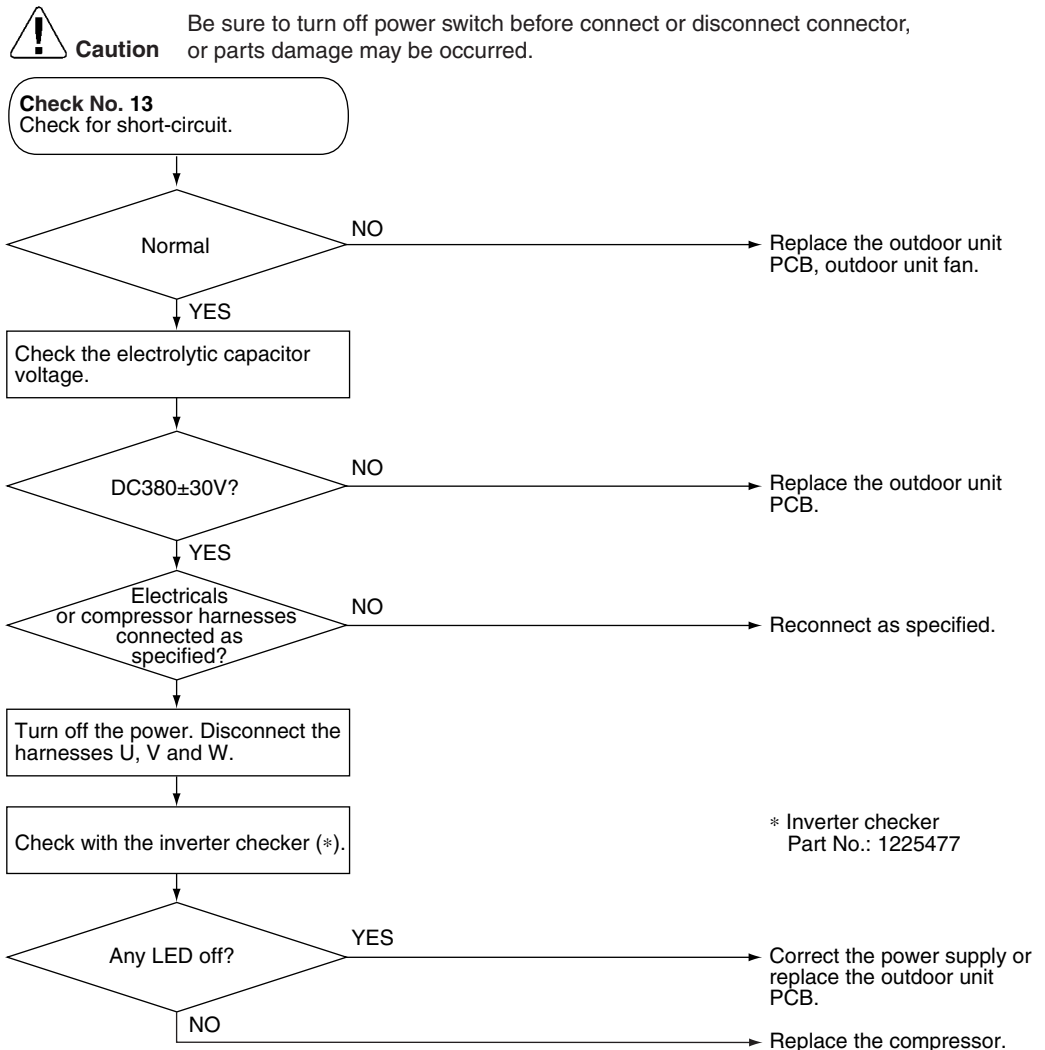

(R2847)

4.15 CT or Related Abnormality

remote control
Display

H8

**Method of
Malfunction
Detection**

A CT or related error is detected by checking the compressor running frequency and CT-detected input current.

**Malfunction
Decision
Conditions**

The compressor running frequency is below 55 Hz and the CT input is below 0.1 V.
(The input current is also below 1.25 A.)

- If this error repeats 4 times, the system will be shut down.
- The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

**Supposed
Causes**

- Power transistor defective
- Internal wiring broken or in poor contact
- Reactor defective
- Outdoor unit PCB defective


Troubleshooting



Check No.12
Refer to P.145



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

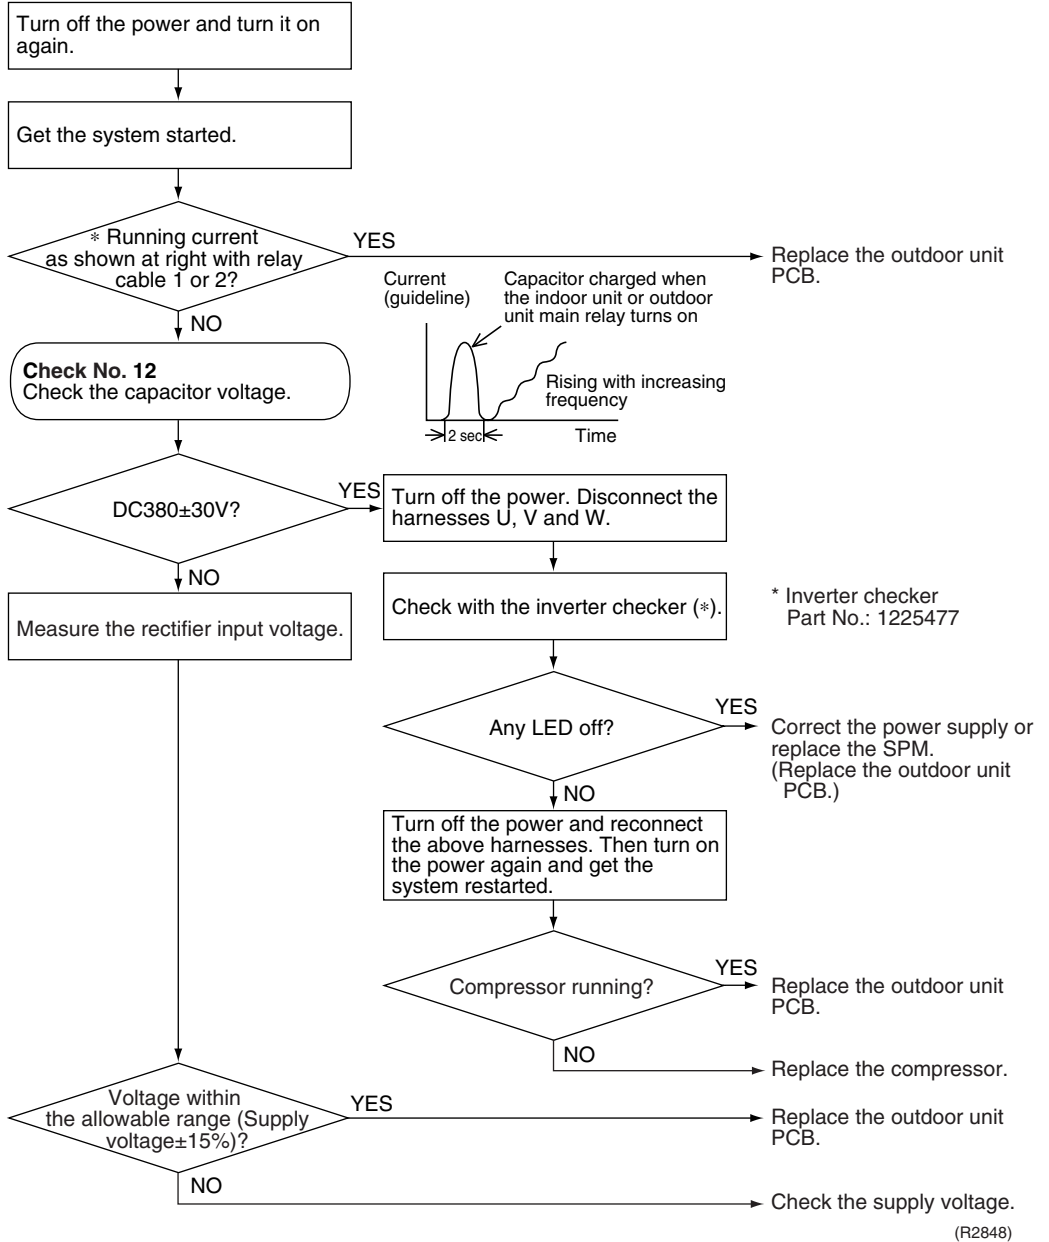

4.16 Thermistor or Related Abnormality (Outdoor Unit)

remote control
Display

P4, J3, J6, H9

**Method of
Malfunction
Detection**

This type of error is detected by checking the thermistor input voltage to the microcomputer.
[A thermistor error is detected by checking the temperature.]

**Malfunction
Decision
Conditions**

The thermistor input is above 4.96 V or below 0.04 V with the power on.
Error *J3* is judged if the discharge pipe thermistor temperature is smaller than the condenser thermistor temperature.

**Supposed
Causes**

- Connector in poor contact
- Thermistor defective
- Outdoor unit PCB defective
- Indoor unit PCB defective
- Condenser thermistor defective in the case of *J3* error (outdoor unit heat exchanger thermistor in the cooling mode, or indoor unit heat exchanger thermistor in the heating mode)


Troubleshooting



Check No.6
Refer to P.141

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

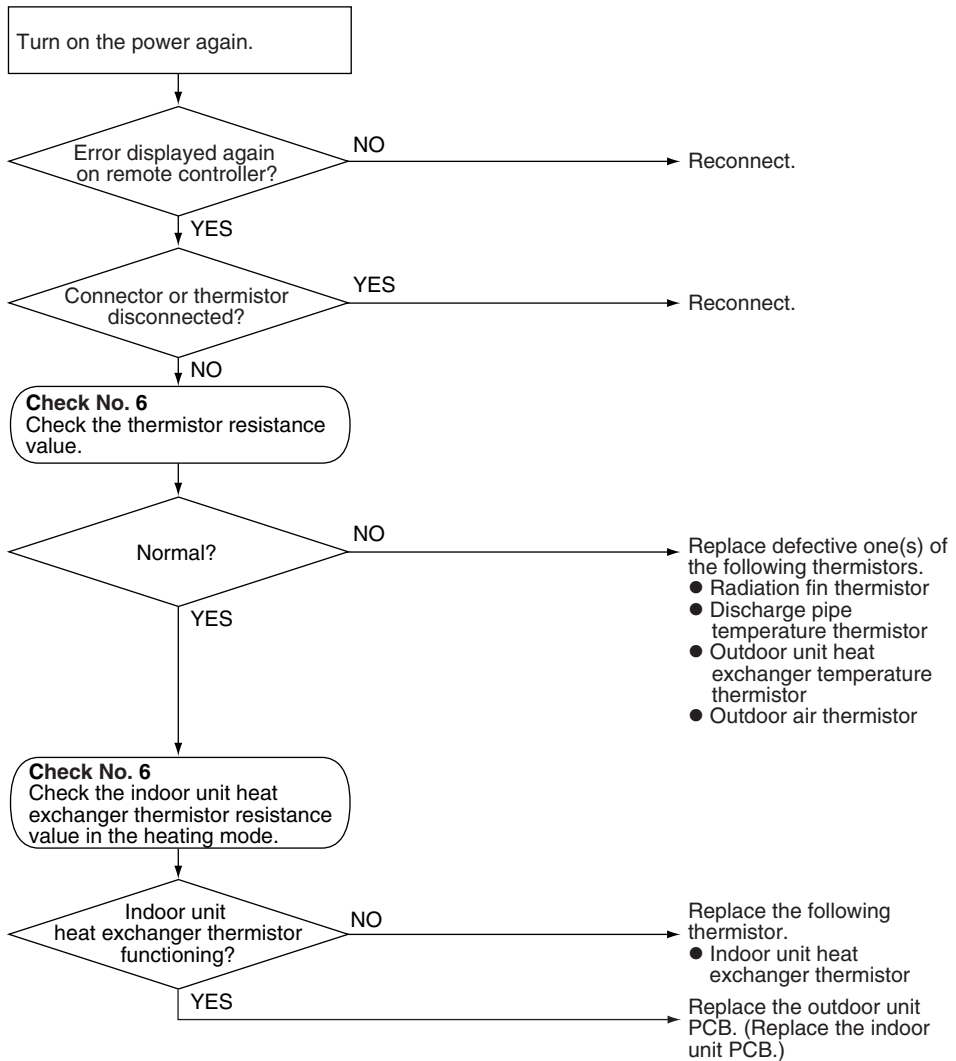

F7 : Radiation fin thermistor
J3 : Discharge pipe thermistor
J5 : Outdoor heat exchanger thermistor
H9 : Outdoor air thermistor

(R2849)

4.17 Electrical Box Temperature Rise

remote control
Display

L3

**Method of
Malfunction
Detection**

An electrical box temperature rise is detected by checking the radiation fin thermistor with the compressor off.

**Malfunction
Decision
Conditions**

With the compressor off, the radiation fin temperature is above 80°C (above 75°C in the case of 7.1kW class). (Reset is made when the temperature drops below 70°C.)

**Supposed
Causes**


- Fin temperature rise due to defective outdoor unit fan
- Fin temperature rise due to short-circuit
- Fin thermistor defective
- Connector in poor contact
- Outdoor unit PCB defective

Troubleshooting

 **Check No.6**
Refer to P.141

 **Check No.7**
Refer to P.142

 **Check No.9**
Refer to P.143

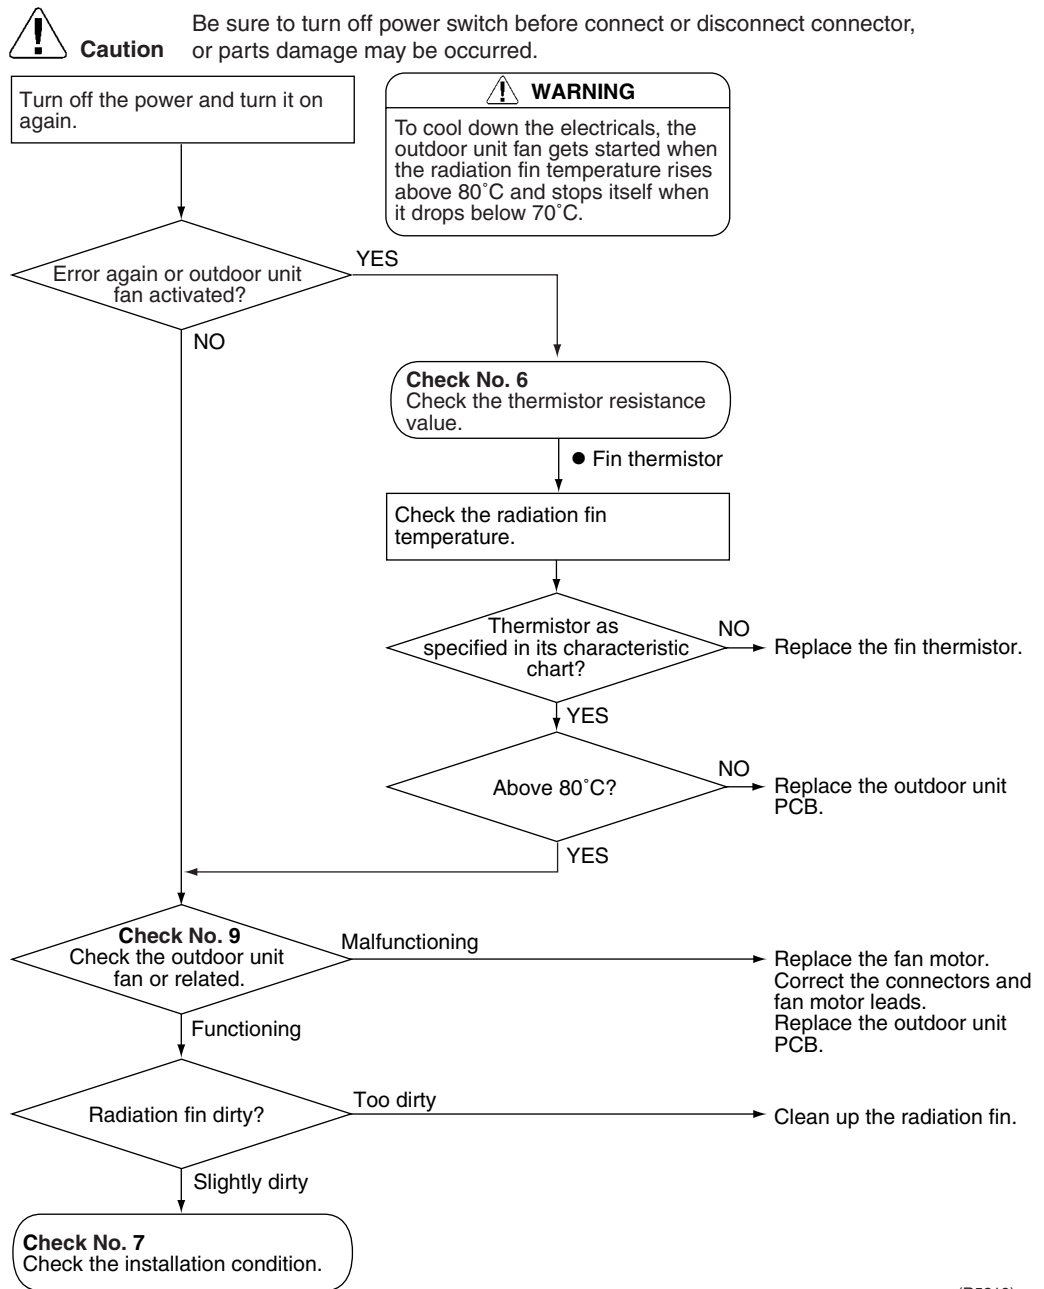

(R5319)

4.18 Radiation Fin Temperature Rise

remote control
Display

L4

**Method of
Malfunction
Detection**

A radiation fin temperature rise is detected by checking the radiation fin thermistor with the compressor on.

**Malfunction
Decision
Conditions**

If the radiation fin temperature with the compressor on is above 90°C,

- If a radiation fin temperature rise takes place 4 times successively, the system will be shut down.
 - The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).
-

**Supposed
Causes**

- Fin temperature rise due to defective outdoor unit fan
- Fin temperature rise due to short-circuit
- Fin thermistor defective
- Connector in poor contact
- Outdoor unit PCB defective

Troubleshooting



Check No.6
Refer to P.141



Check No.7
Refer to P.142




Check No.9
Refer to P.143



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Turn off the power and turn it on again to get the system started.

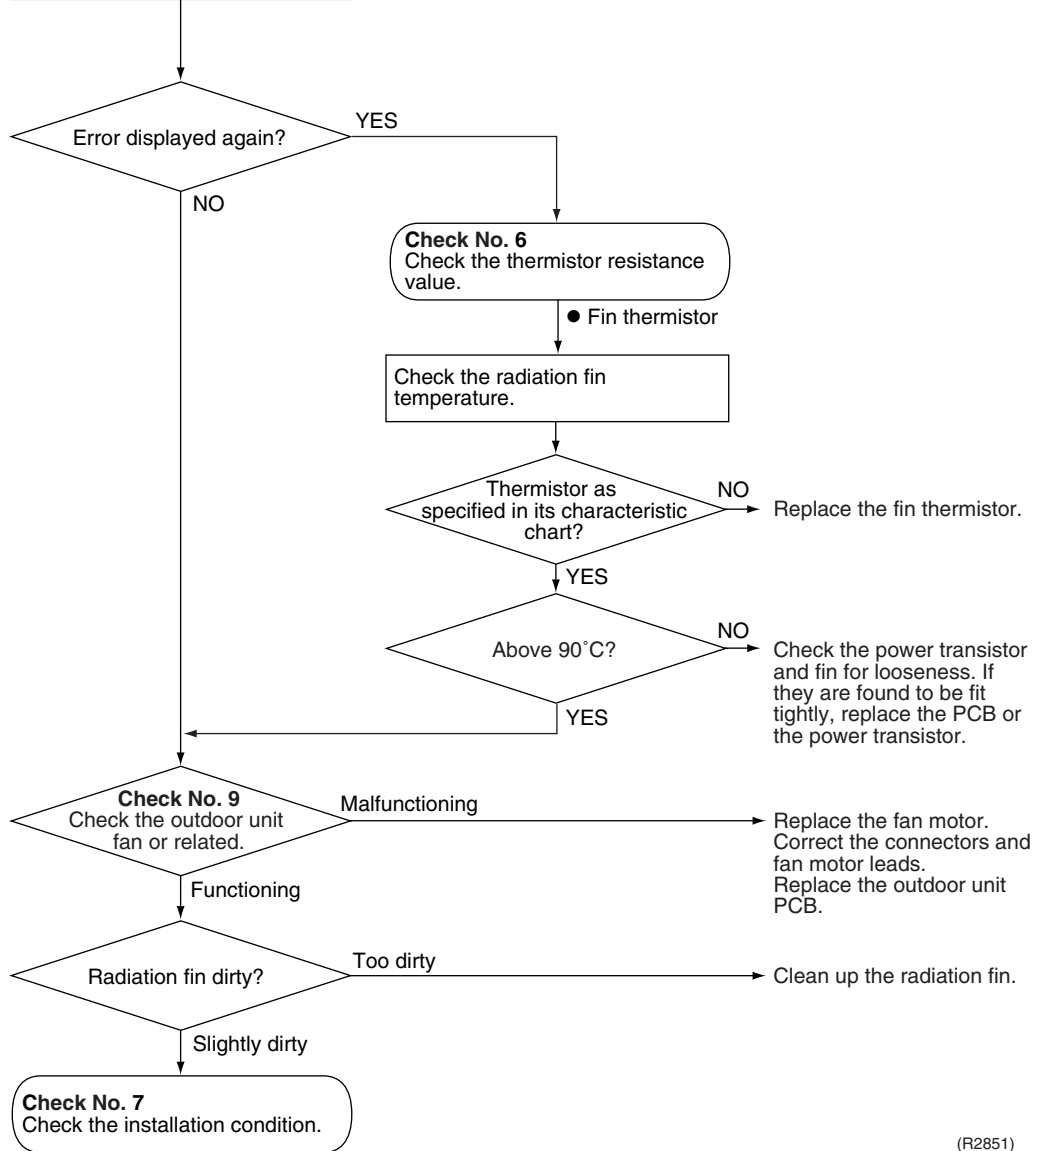

(R2851)

4.19 Output Over Current Detection

remote control
Display

L5

**Method of
Malfunction
Detection**

An output over-current is detected by checking the current that flows in the inverter DC section.

**Malfunction
Decision
Conditions**

- A position signal error occurs while the compressor is running.
- A speed error occurs while the compressor is running.
- An output over-current input is fed from the output over-current detection circuit to the microcomputer.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 5 minutes (normal)

**Supposed
Causes**

- Over-current due to defective power transistor
- Over-current due to wrong internal wiring
- Over-current due to abnormal supply voltage
- Over-current due to defective PCB
- Error detection due to defective PCB
- Over-current due to closed stop valve
- Over-current due to compressor failure
- Over-current due to poor installation condition

Troubleshooting



Check No.7
Refer to P.142



Check No.8
Refer to P.143




Check No.13
Refer to P.145



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

* An output over-current may result from wrong internal wiring. If the wires have been disconnected and reconnected for part replacement, for example, and the system is interrupted by an output over-current, take the following procedure.

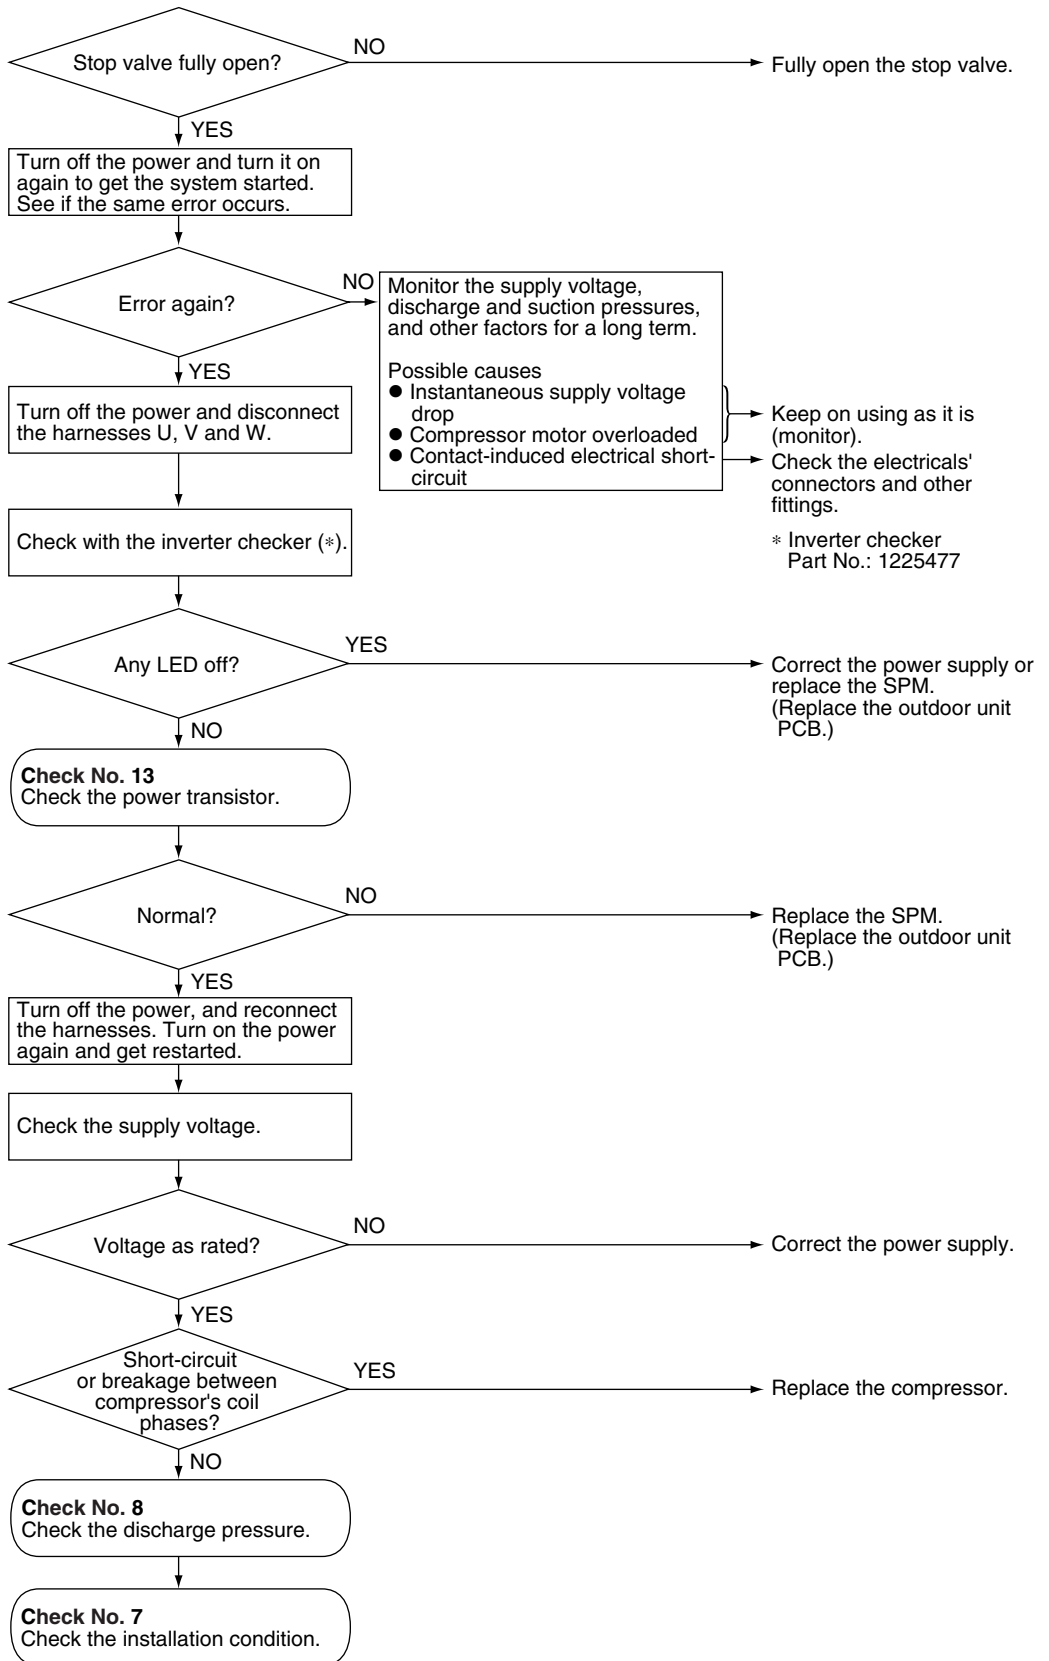

* Inverter checker
Part No.: 1225477

(R2852)

4.20 Insufficient Gas

remote control
Display

U0

**Method of
Malfunction
Detection**

Gas shortage detection I : A gas shortage is detected by checking the CT-detected input current value and the compressor running frequency.

Gas shortage detection II : A gas shortage is detected by checking the difference between indoor unit heat exchanger temperature and room temperature as well as the difference between outdoor unit heat exchanger temperature and room temperature.

**Malfunction
Decision
Conditions**

Gas shortage detection I :

$DC\ current \times DC\ voltage < A\ (A/Hz) \times Compressor\ running\ frequency + B$

However, when the status of running frequency > 55 (Hz) is kept on for a certain time.

Note : The values are different from model to model.

	A	B
R-410A	1756 / 256	-50
R22	2600 / 256	-300
2YC63	2420 / 256	55

Gas shortage detection II :

If a gas shortage error takes place 4 times successively, the system will be shut down. The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

**Supposed
Causes**

- Refrigerant shortage (refrigerant leakage)
- Poor compression performance of compressor
- Discharge pipe thermistor disconnected, or indoor unit or outdoor unit heat exchanger thermistor disconnected, room or outside air temperature thermistor disconnected
- Stop valve closed
- Electronic expansion valve defective

Troubleshooting



Check No.4
Refer to P.139




Check No.6
Refer to P.141



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

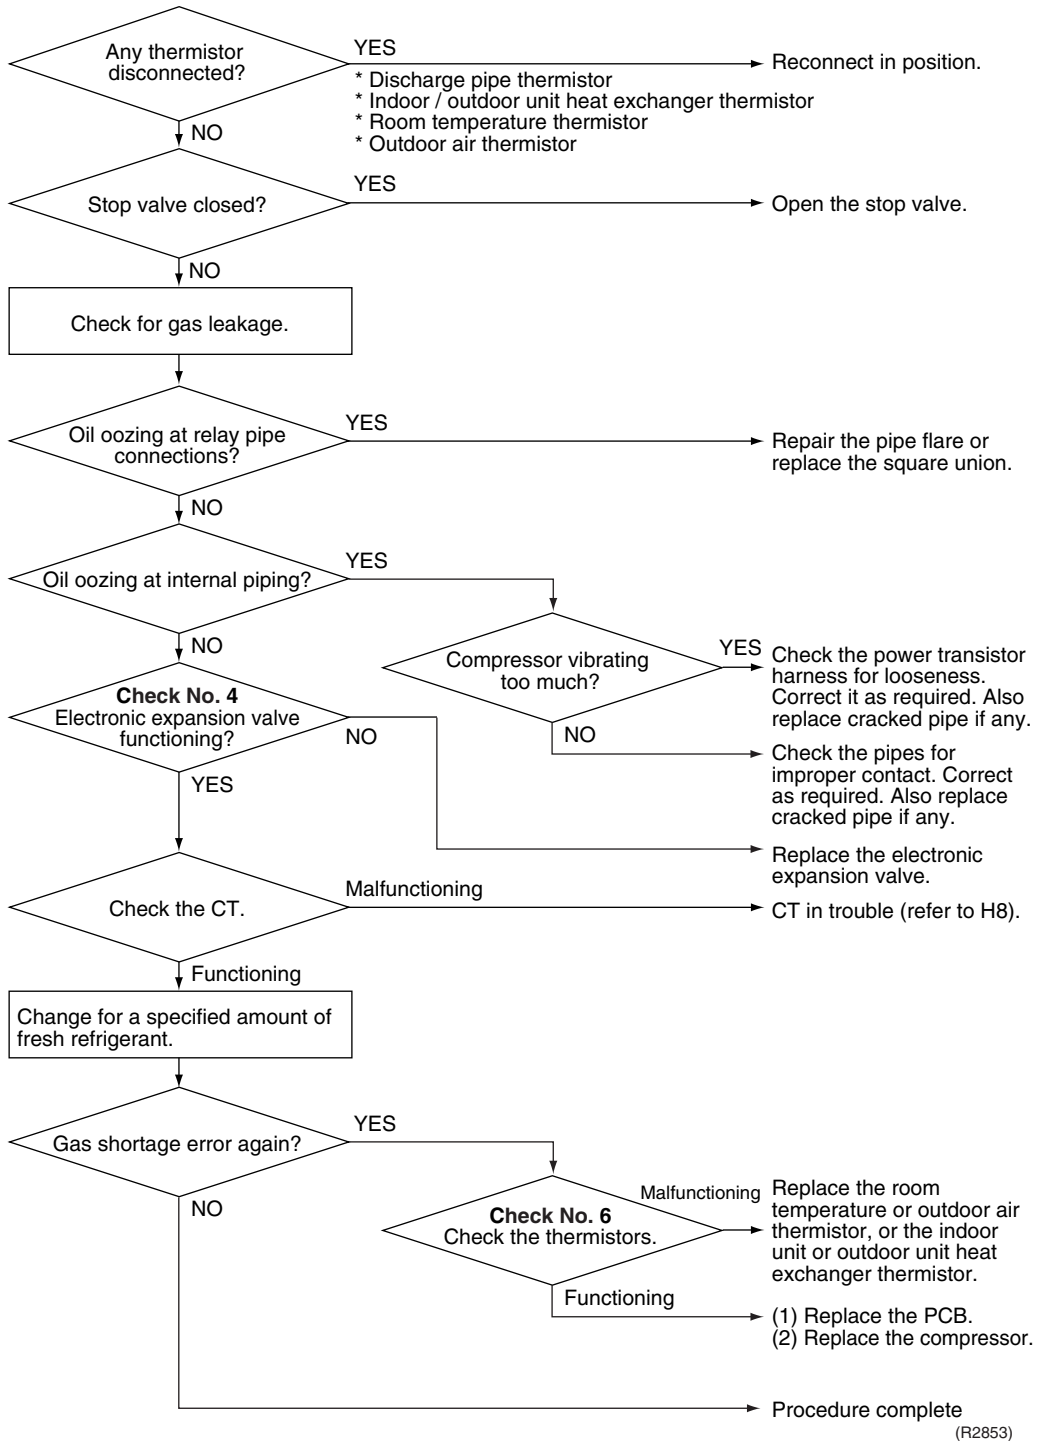

4.21 Low-voltage Detection

remote control
Display

U2

Method of
Malfunction
Detection

An abnormal voltage rise or drop is detected by checking the detection circuit or DC voltage detection circuit.


Malfunction
Decision
Conditions

- An over-voltage signal is fed from the over-voltage detection circuit to the microcomputer, or the voltage being detected by the DC voltage detection circuit is judged to be below 150 V for 0.1 second.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 60 minutes (normal)

Supposed
Causes

- Supply voltage not as specified
- Over-voltage detector or DC voltage detection circuit defective
- PAM control part(s) defective

Troubleshooting

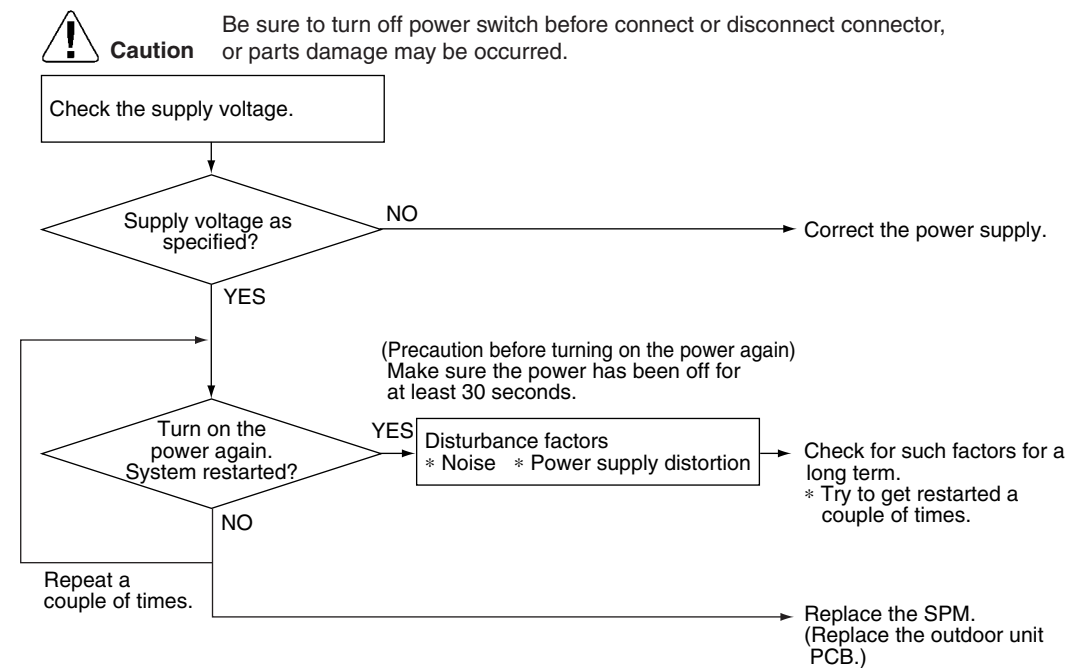

(R2854)


5. Check

5.1 How to Check

5.1.1 Fan Motor Connector Output Check

Check No.01

1. Check connector connection.
2. Check motor power supply voltage output (pins 4-7).
3. Check motor control voltage (pins 4-3).
4. Check rotation command voltage output (pins 4-2).
5. Check rotation pulse input (pins 4-1).

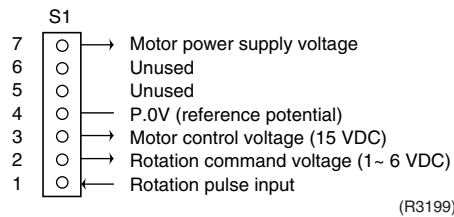


5.1.2 Electronic Expansion Valve Check

Check No.4

Conduct the followings to check the electronic expansion valve (EV).

1. Check to see if the EV connector is correctly inserted in the PCB. Compare the EV unit and the connector number.
2. Turn the power off and back on again, and check to see if all the EVs generate latching sound.
3. If any of the EVs does not generate latching noise in the above step 2, disconnect that connector and check the conductivity using a tester.
Check the conductivity between pins 1, 3 and 6, and between pins 2, 4 and 5. If there is no conductivity between the pins, the EV coil is faulty.

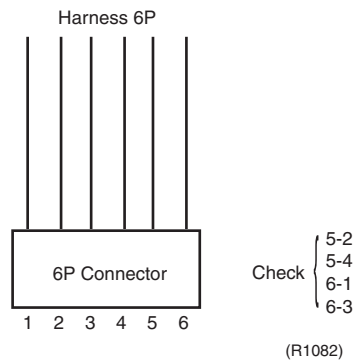


4. If no EV generates latching sound in the above step 2, the outdoor unit PCB is faulty.
5. If the conductivity is confirmed in the above step 2, mount a good coil (which generated latching sound) in the EV unit that did not generate latching sound, and check to see if that EV generates latching sound.
 - *If latching sound is generated, the outdoor unit PCB is faulty.
 - *If latching sound is not generated, the EV unit is faulty.




Note: Please note that the latching sound varies depending on the valve type.

5.1.3 Four Way Valve Performance Check

Check No.5

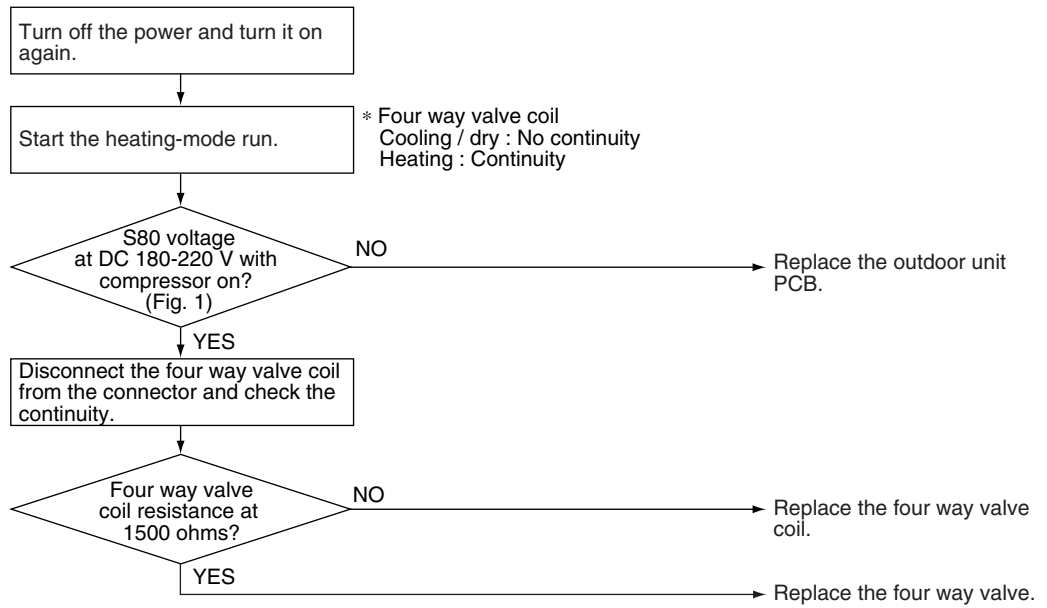

(Fig. 1)

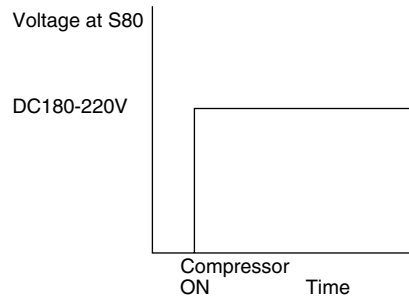

(R2856)


5.1.4 Thermistor Resistance Check

Check No.6


Remove the connectors of the thermistors on the PCB, and measure the resistance of each thermistor using tester.

The relationship between normal temperature and resistance is shown in the graph and the table below.

Temperature (°C)	Thermistor R25°C=20kΩ B=3950
-20	211.0 (kΩ)
-15	150
-10	116.5
-5	88
0	67.2
5	51.9
10	40
15	31.8
20	25
25	20
30	16
35	13
40	10.6
45	8.7
50	7.2

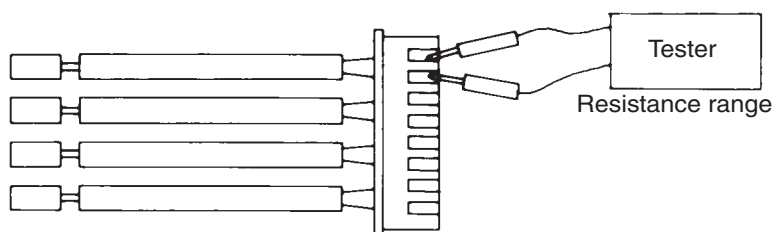


(R25=20kΩ, B=3950)

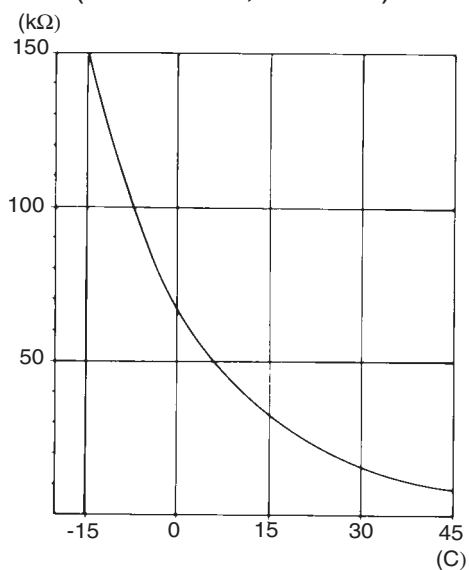

(1437)


5.1.5 Installation Condition Check

Check No.7

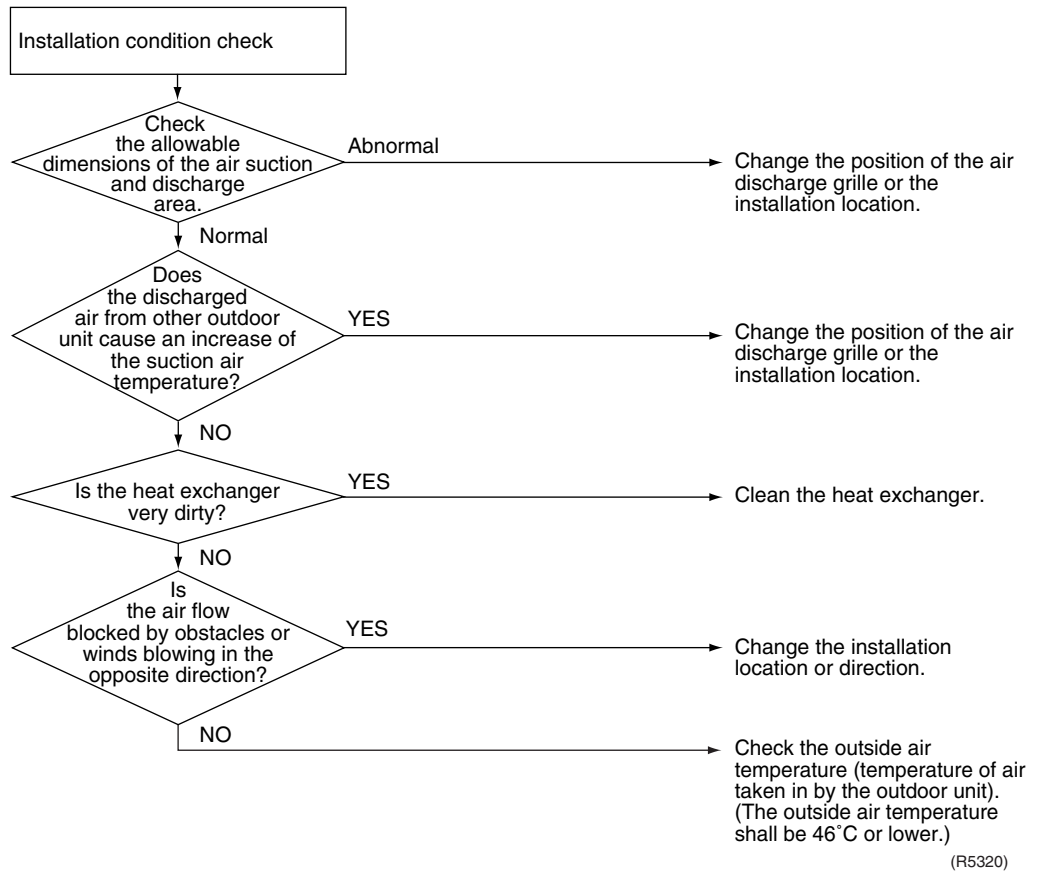


5.1.6 Discharge Pressure Check

Check No.8

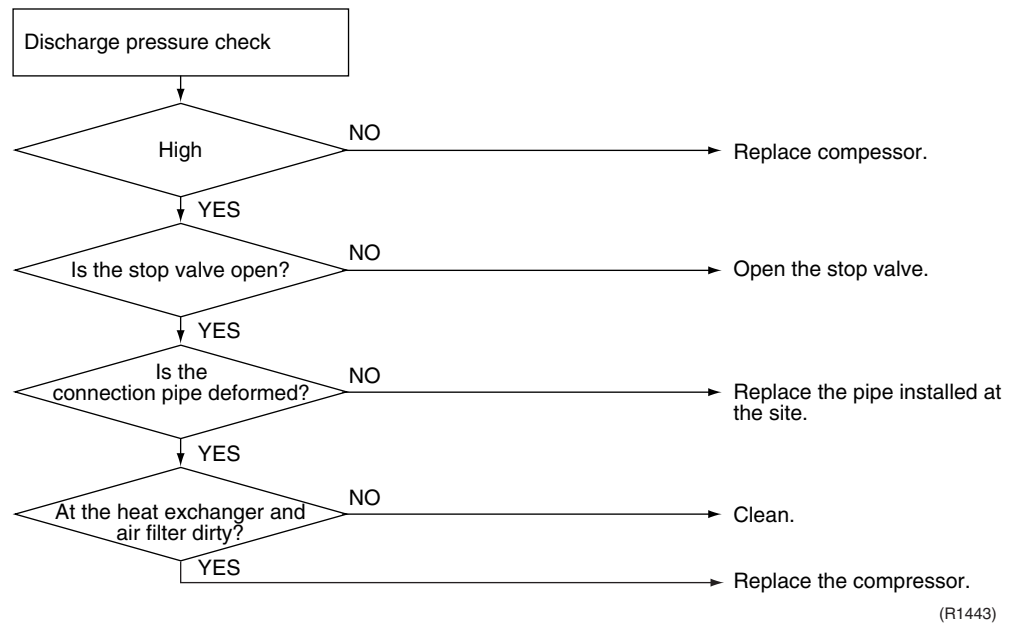

5.1.7 Outdoor Unit Fan System Check (With DC Motor)

Check No.9

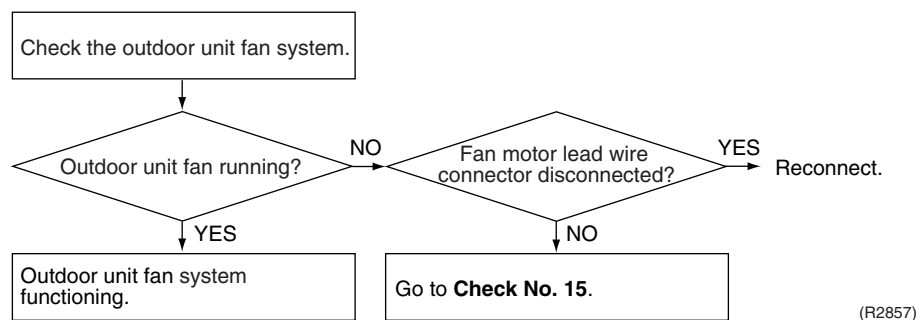

5.1.8 Power Supply Waveforms Check



Check No.10

Measure the power supply waveform between pins 1 and 3 on the terminal board, and check the waveform disturbance.

- Check to see if the power supply waveform is a sine wave (Fig.1).
- Check to see if there is waveform disturbance near the zero cross (sections circled in Fig.2)

[Fig.1]

[Fig.2]

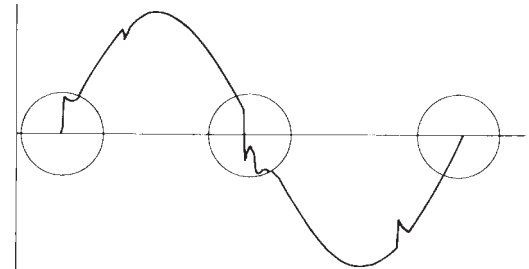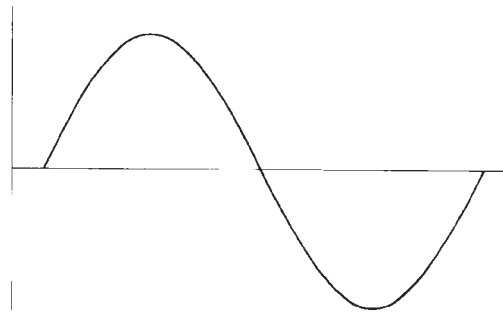


(R1736)

(R1444)

5.1.9 Inverter Units Refrigerant System Check

Check No.11

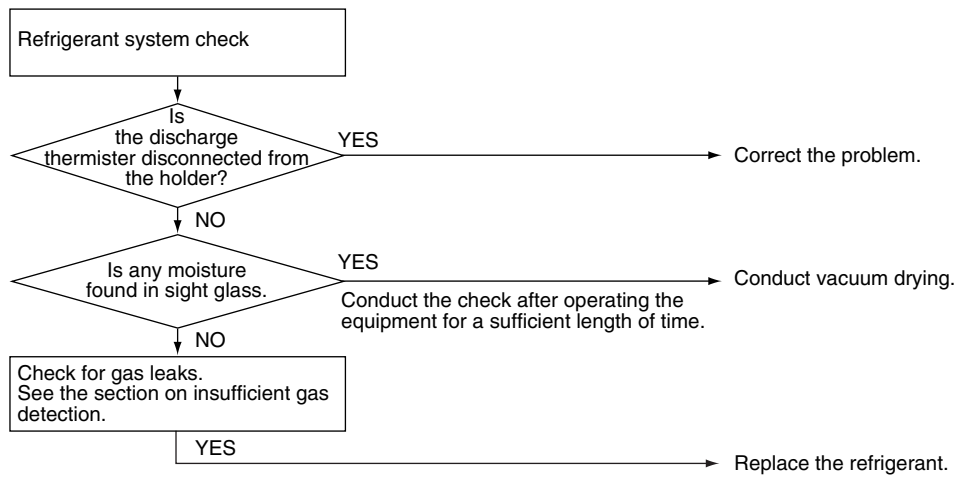


(R1445)

5.1.10 Capacitor Voltage Check

Check No.12

Before this checking, be sure to check the main circuit for short-circuit.

- Checking the capacitor voltage
- With the circuit breaker still on, measure the voltage according to the drawing of the model in question. Be careful never to touch any live parts.

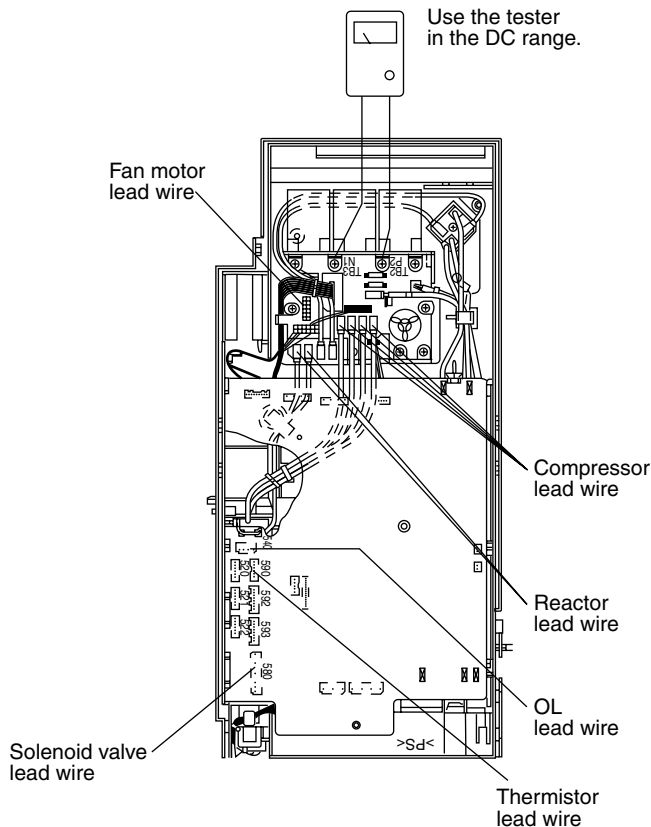

(R2858)

5.1.11 Power Transistor Check

Check No.13


- Checking the power transistor
- Never touch any live parts for at least 10 minutes after turning off the circuit breaker.
- If unavoidably necessary to touch a live part, make sure the power transistor's supply voltage is below 50 V using the tester.
- For the UVW, make measurements at the Faston terminal on the board or the relay connector.

Tester's negative terminal	Power transistor (+)	UVW	Power transistor (-)	UVW
Tester's positive terminal	UVW	Power transistor (+)	UVW	Power transistor (-)
Normal resistance	Several kohms to several Mohms			
Abnormal resistance	0 or ∞			

5.1.12 Main Circuit Electrolytic Capacitor Check

Check No.14

- Checking the main circuit electrolytic capacitor
- Never touch any live parts for at least 10 minutes after turning off the circuit breaker.
- If unavoidably necessary to touch a live part, make sure there is no DC voltage using the tester.
- Check the continuity with the tester. Reverse the pins and make sure there is continuity.

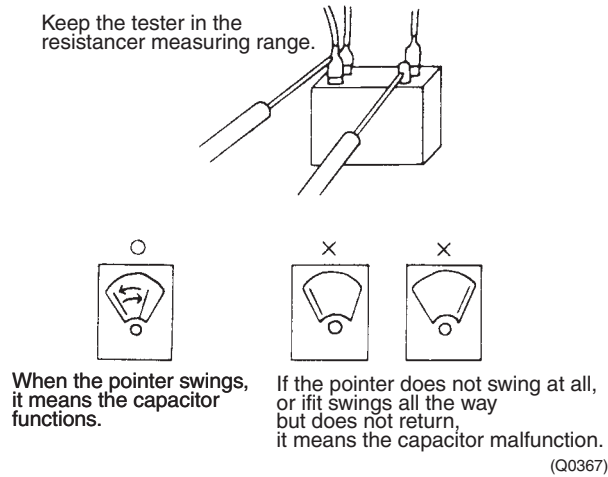

5.1.13 Turning Speed Pulse Input on the Outdoor Unit PCB Check


Check No.15

<Propeller fan motor>

Make sure the voltage of $270\pm 30V$ is being applied.

- (1) Stop the operation first and then the power off, and disconnect the connector S70.
- (2) Make sure there is about DC 270 V between pins 4 and 7.
- (3) With the system and the power still off, reconnect the connector S70.
- (4) Make a turn of the fan motor with a hand, and make sure the pulse (0-15 V) appears twice at pins 1 and 4.

If the fuse is blown out, the outdoor-unit fan may also be in trouble. Check the fan too.
 If the voltage in Step (2) is not applied, it means the PCB is defective. Replace the PCB.
 If the pulse in Step (4) is not available, it means the Hall IC is defective. Replace the DC fan motor. If there are both the voltage (2) and the pulse (4), replace the PCB.

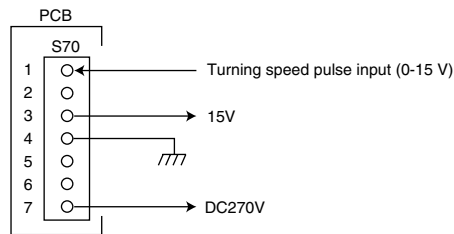

* Propeller fan motor : S70

Part 7

Removal Procedure

1. Indoor Unit.....	148
1.1 Removal of the Air Filter / Front Panel	148
1.2 Removal of the Front Grille	151
1.3 Removal of the Horizontal Blades / Vertical Blades	153
1.4 Removal of the Electrical Box / PCB / Swing Motor	155
1.5 Removal of the Heat Exchanger	161
1.6 Removal of the Fan Rotor / Fan Motor.....	164
2. Outdoor Unit.....	166
2.1 Removal of the Panels and Plates	166
2.2 Removal of the Fan Motor / Propeller Fan	170
2.3 Removal of the PCB / Electrical Box	174
2.4 Removal of the Reactor.....	182
2.5 Removal of the Sound Blanket.....	184
2.6 Removal of the Four Way Valve.....	186
2.7 Removal of the Electronic Expansion Valve.....	187
2.8 Removal of the Compressor.....	188




1. Indoor Unit




1.1 Removal of the Air Filter / Front Panel




Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

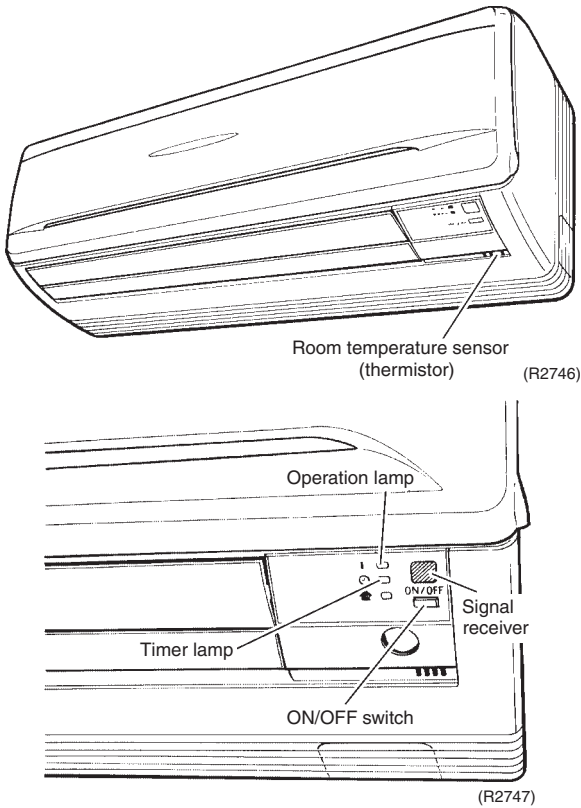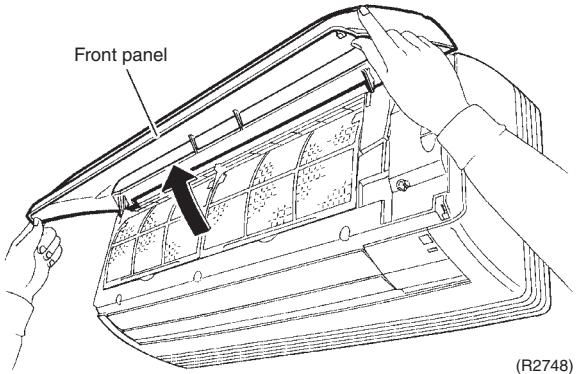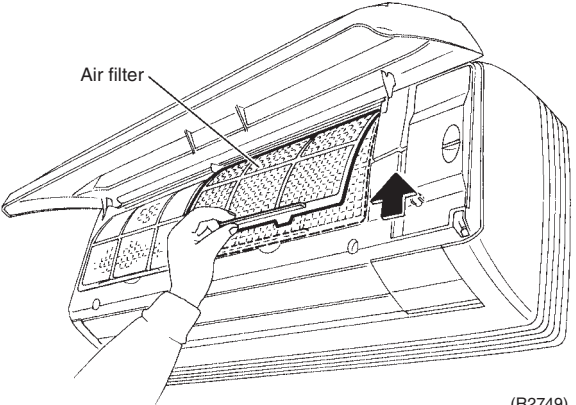Step	Procedure	Points
1. Features		<ul style="list-style-type: none"> When the signal receiver catches a signal from the remote control, it produces beep sound and the operation lamp blinks.
2. Remove the air filters.	<p>1 Hold the front panel by the tabs on the both sides and lift it until it stops with a click.</p>  <p>2 Lift an air filter upwards slightly by the center knob, and then pull it out downwards.</p> 	

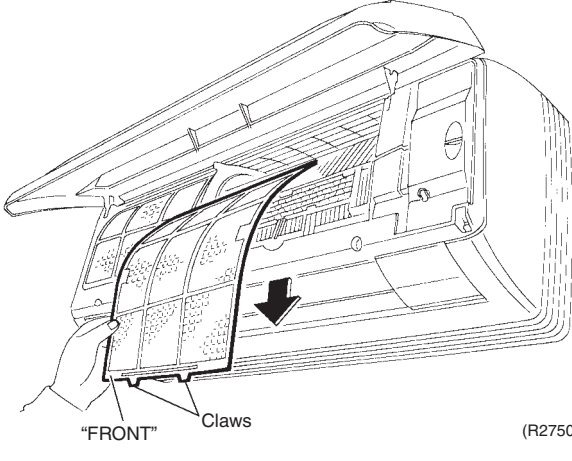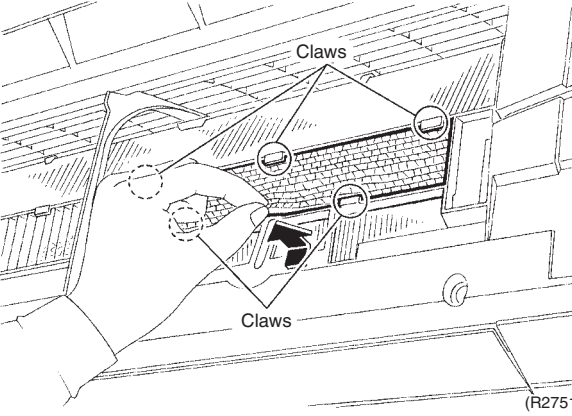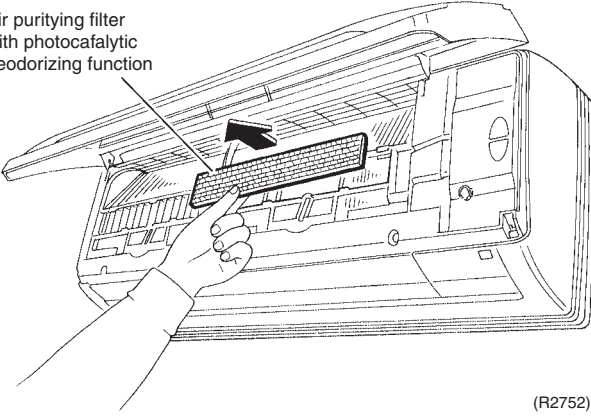Step	Procedure	Points
		<ul style="list-style-type: none"> ■ The right and left filters are interchangeable. ■ Insert the air filters along grooves when installing. ■ Set the air filters with displaying "FRONT" on the front side. ■ Insert two claws of the air filter completely.
<p>3. Remove an "air purifying filter with photocatalytic deodorizing function".</p>		
<p>1</p>	<p>Push up the bottom of an air purifying filter to undo the claws (2 on lower, 3 on upper) and take the filter out.</p>  	<ul style="list-style-type: none"> ■ The right and left filters are interchangeable.

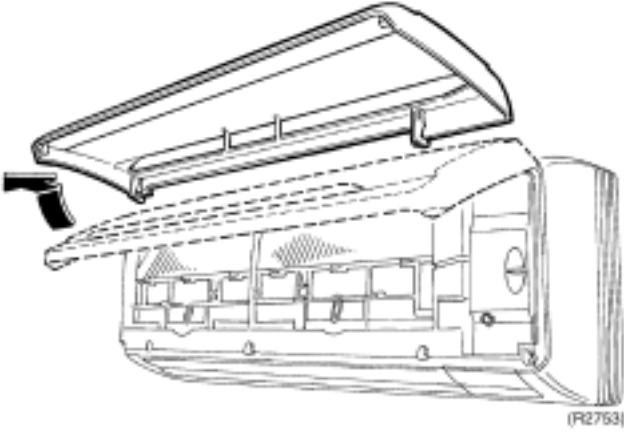
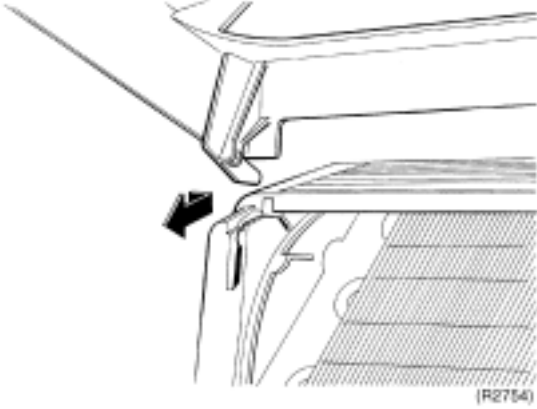
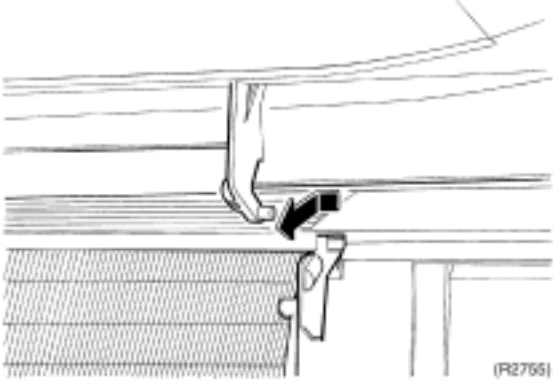
Step	Procedure	Points
<p>4. Remove the front panel.</p> <p>1</p>	<p>While opening the front panel further than it stops, release both axes and remove the front panel.</p>   	<ul style="list-style-type: none"> ■ Slide the front panel side to side to release each axis. ■ Align the right and left axes with grooves in turn and insert them to the end when installing.





1.2 Removal of the Front Grille

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

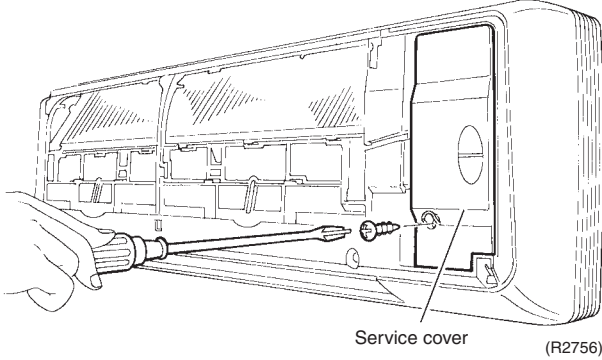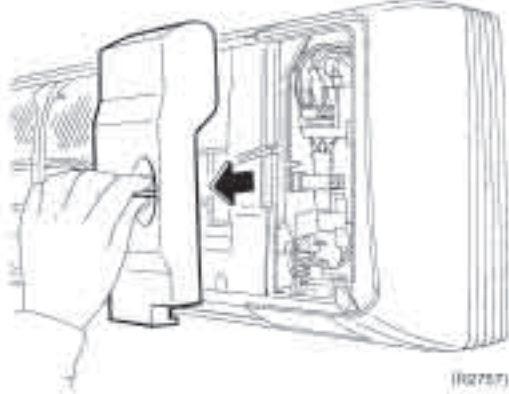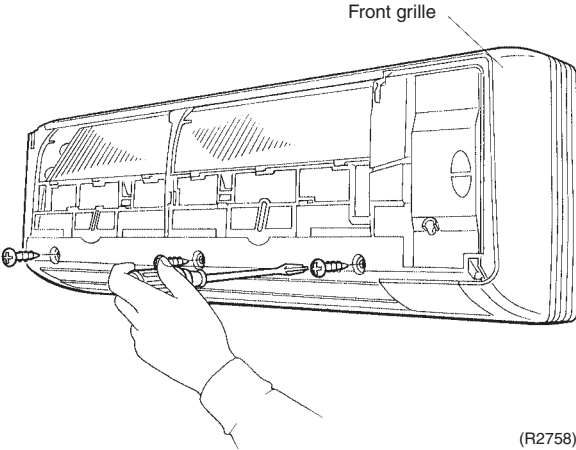Step	Procedure	Points
<p>1. Remove the service cover.</p> <p>1 Loosen the screw and remove the service cover by the knob.</p>	 	<ul style="list-style-type: none"> ■ No field setting switch is inside it. ■ You can remove the front grille without detaching the service cover.
<p>2. Remove the front grille.</p> <p>1 Loosen the three fixing screws of the front grille.</p>		<ul style="list-style-type: none"> ■ It has no fixing screws inside blades, though previous models had.

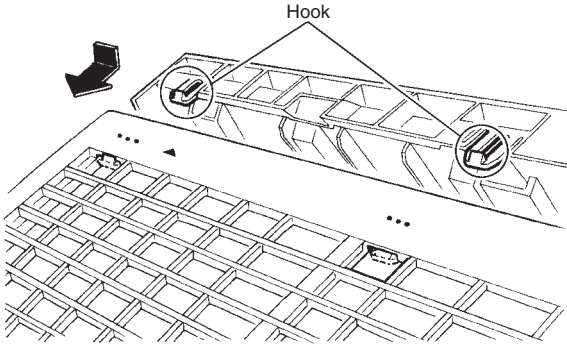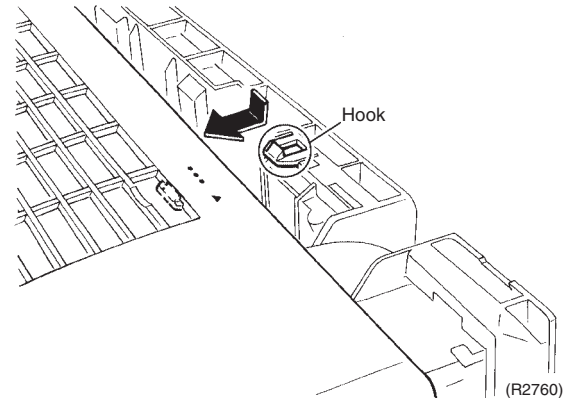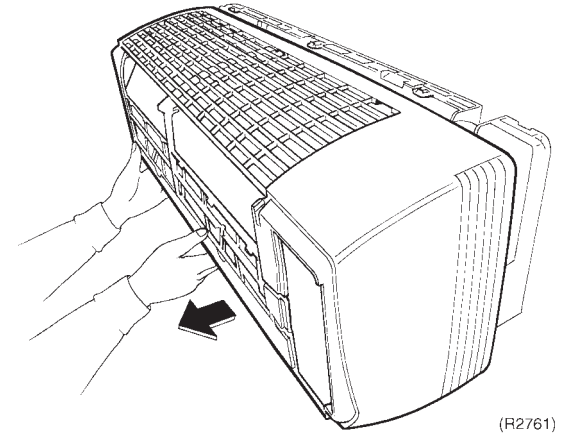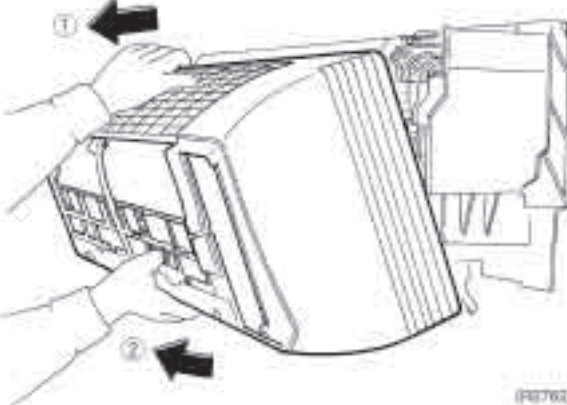Step	Procedure	Procedure	Points
<p>2</p> <p>Undo the three hooks on the top of the front grille.</p>		 <p>(R2759)</p>  <p>(R2760)</p>  <p>(R2761)</p>	<ul style="list-style-type: none"> ■ The front grille has three hooks on the center and the both sides of the upper part. ■ Refer to the removal procedure in a reverse way when reassembling.
<p>3</p> <p>Pull the upper part of the front grille out and lift the lower part up, and then remove the front grille.</p>		 <p>(R2762)</p>	<ul style="list-style-type: none"> ■ Make sure that all the hooks are placed securely when reassembling.




1.3 Removal of the Horizontal Blades / Vertical Blades

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the horizontal blades.		
1	Open the horizontal blades.	
	<p style="text-align: right;">(R2763)</p>	<ul style="list-style-type: none"> ■ It has no fixing screws inside blades, though previous models had.
2	Undo the left pivot of the horizontal blades.	
	<p style="text-align: right;">(R2764)</p>	
3	Bend the horizontal blades slightly and release the center pivots. Slide the horizontal blades to the left and release the right pivot.	
	<p style="text-align: right;">(R2765)</p> <p style="text-align: right;">(R2766)</p>	<ul style="list-style-type: none"> ■ Installation procedure <ol style="list-style-type: none"> 1. Since key pattern hook is provided, rotate the blades and fit it to the right pivot first. 2. Fit the blades to the center and left pivots.

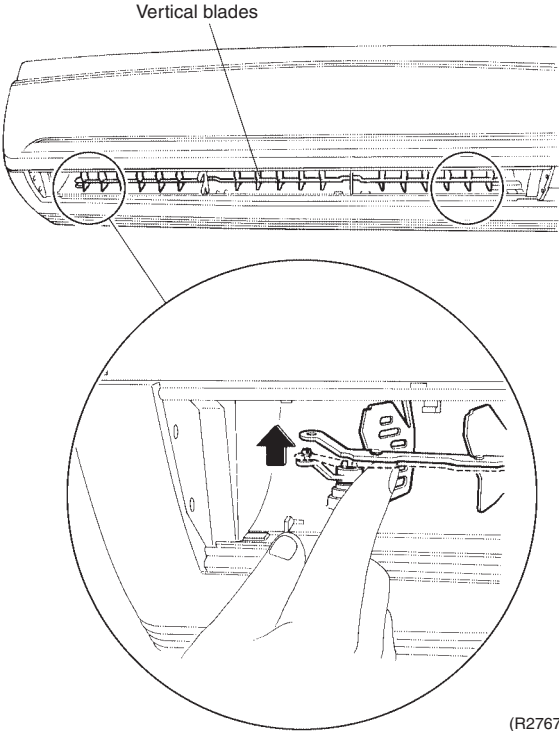
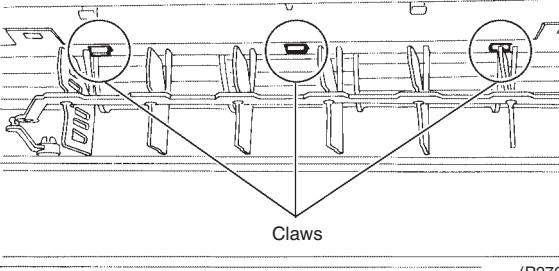
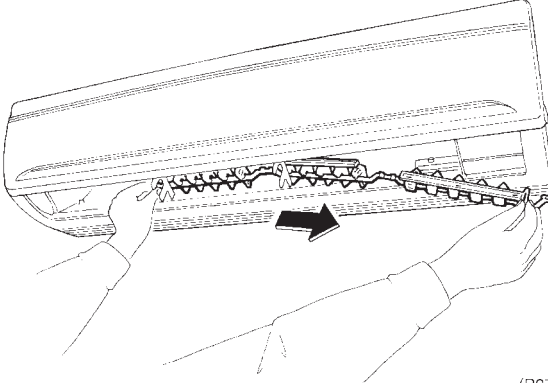
Step	Procedure	Points
2.	Remove the vertical blades.	
1	<p data-bbox="199 286 454 347">Undo the right and left pivots.</p> 	
2	<p data-bbox="199 1070 454 1104">Undo the three claws.</p> 	
3	<p data-bbox="199 1496 454 1590">Pull the vertical blades rightwards and remove it.</p> 	

1.4 Removal of the Electrical Box / PCB / Swing Motor





Procedure







Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

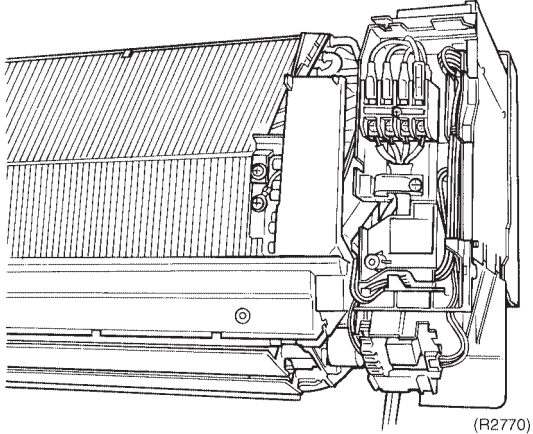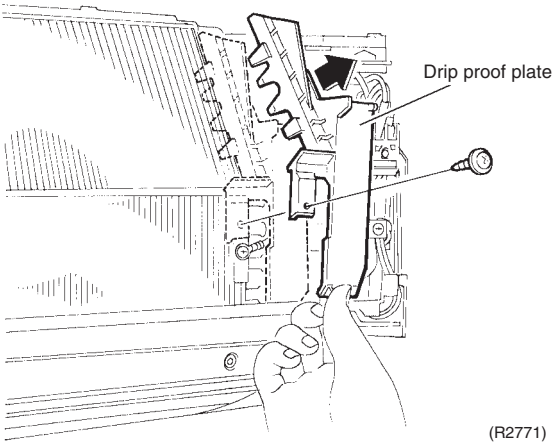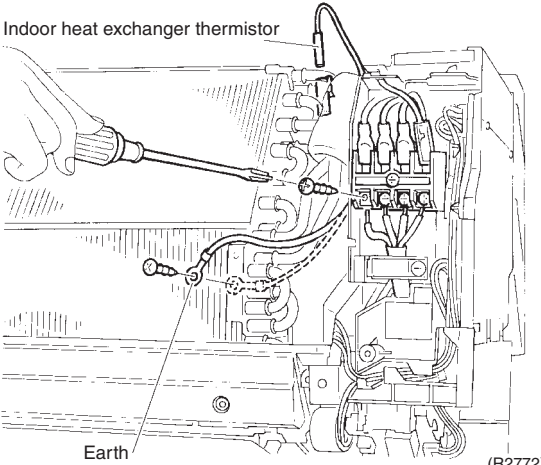Step	Procedure	Points
1. Remove the front grille.	 <p style="text-align: right;">(R2770)</p>	<ul style="list-style-type: none"> ■ Parts layout
2. Remove the drip proof plate.	<p>1 Loosen the screw.</p>  <p style="text-align: right;">(R2771)</p>	
3. Disconnect the indoor heat exchanger thermistor and the earth.	 <p style="text-align: right;">(R2772)</p>	<ul style="list-style-type: none"> ■ Mind that not to lose the clip for the thermistor.





Step	Procedure	Points
4.	Remove the electrical box.	
1	Disconnect the four connection wirings. Loosen the screw and remove the terminal strip board.	<ul style="list-style-type: none"> ■ You can remove the electrical box without detaching the terminal strip board. ■ Screw: M4×25
2	Disconnect the connectors for fan motor (S1).	
3	Disconnect the connectors for swing motor (S6, S8).	
4	Loosen the fixing screw of the electrical box.	

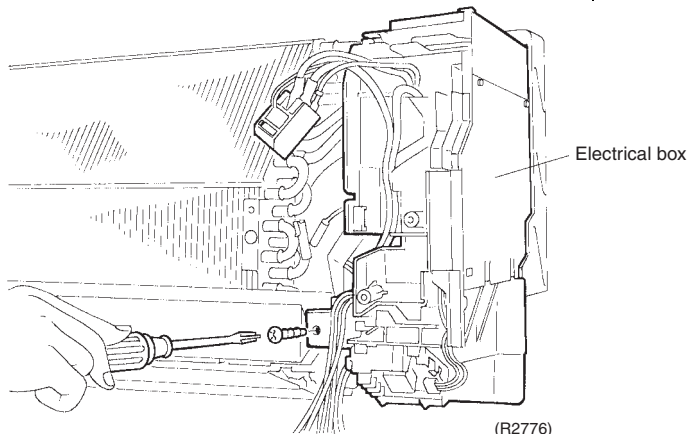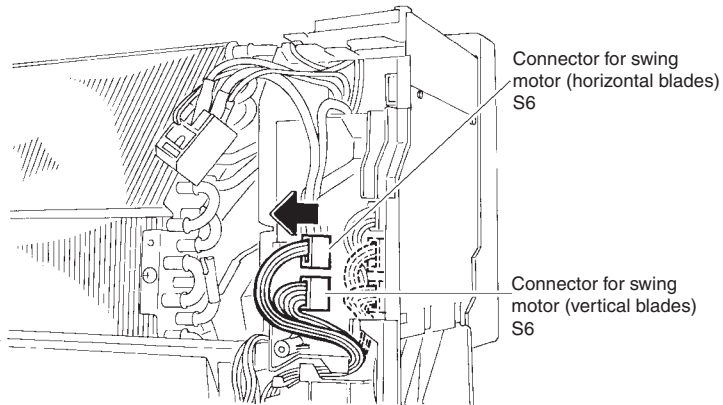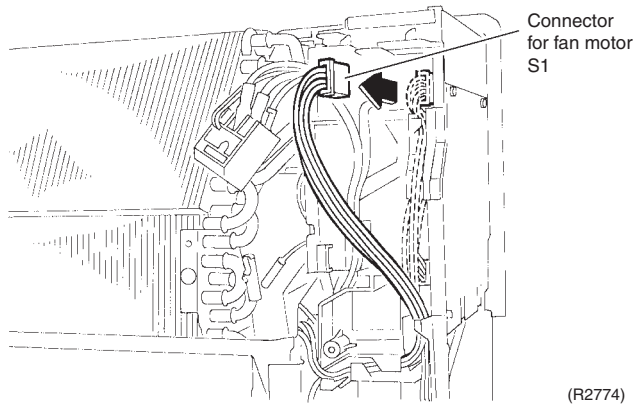
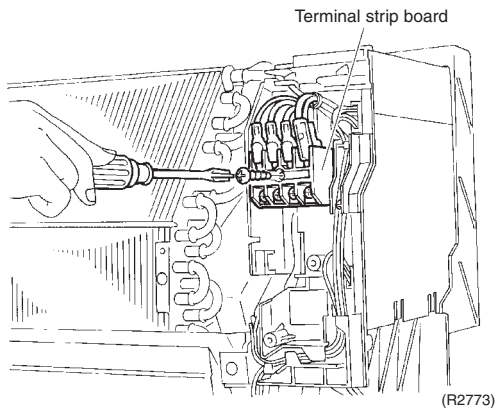






Step	Procedure	Points
5	Dislocate the electrical box to the left and undo the back claw.	<ul style="list-style-type: none"> ■ The electrical box has a claw on its back.
6	Pull the electrical box out towards you.	<ul style="list-style-type: none"> ■ Hook the back claw of the electrical box when reassembling.
7	Loosen the screw on the electrical box.	<ul style="list-style-type: none"> ■ Screw: M4×16
8	Push the shelter up and undo the claw.	

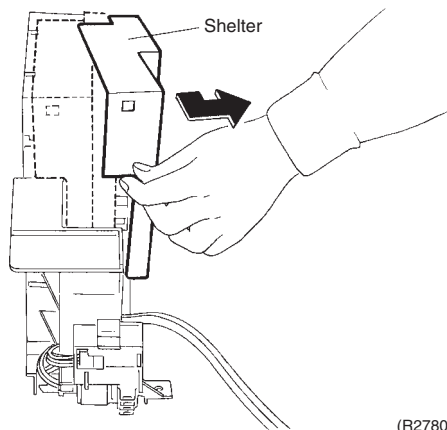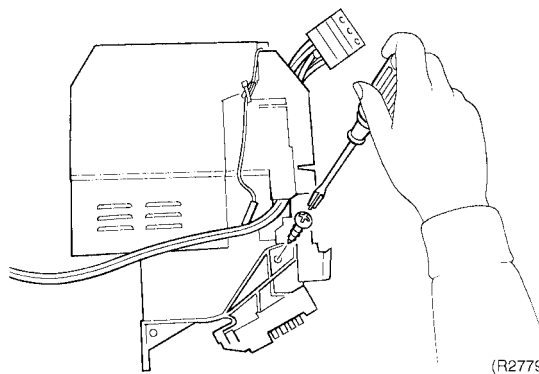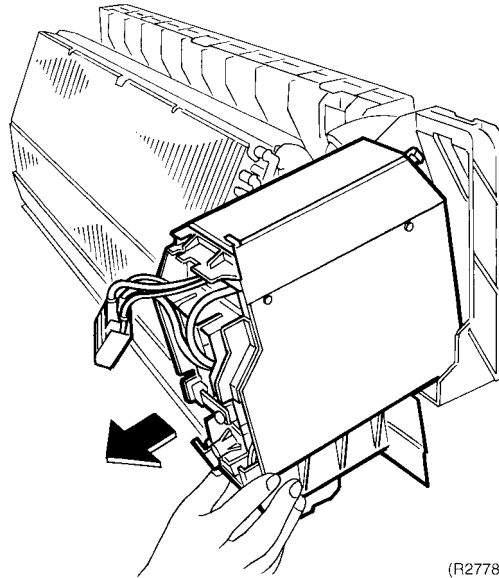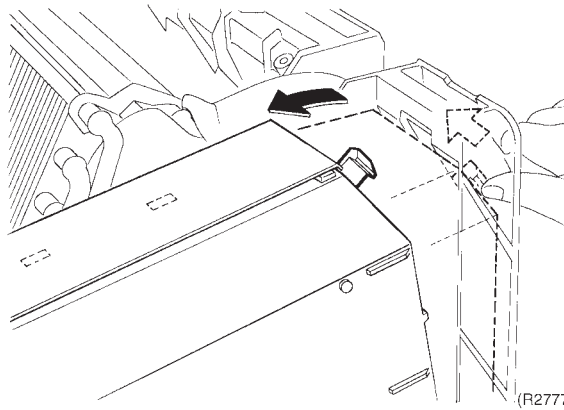

Step	Procedure	Points
9	Press the receiver units down and release the claws on the upper side, and then undo the claws on the lower side.	<ul style="list-style-type: none"> Release the claws on the upper side.
10	Cut the clamp.	<ul style="list-style-type: none"> Remove the receiver units while pushing the claws of connectors.
11	The receiver units contain four PCBs. Remove each PCB with releasing claws. Disconnect every connector from each PCB.	<ul style="list-style-type: none"> Clamps should be always available. Fix it as it was before.
12	Cut the clamp.	

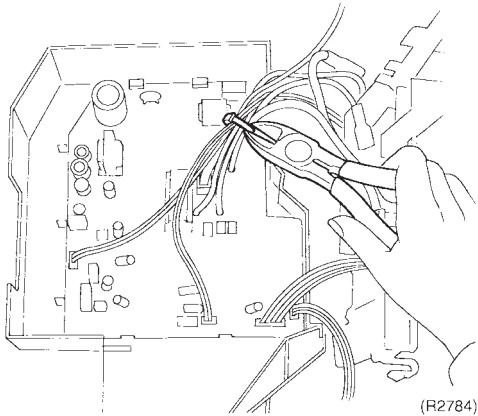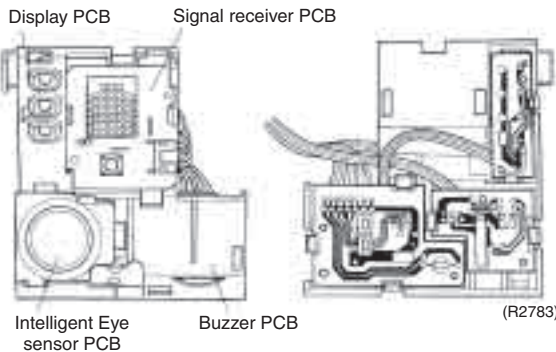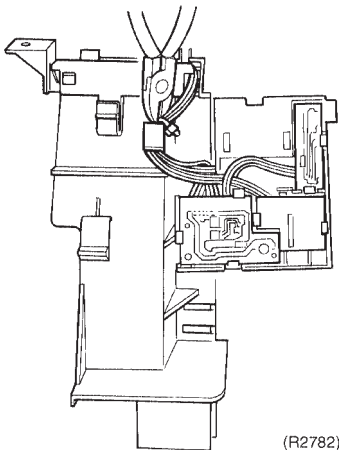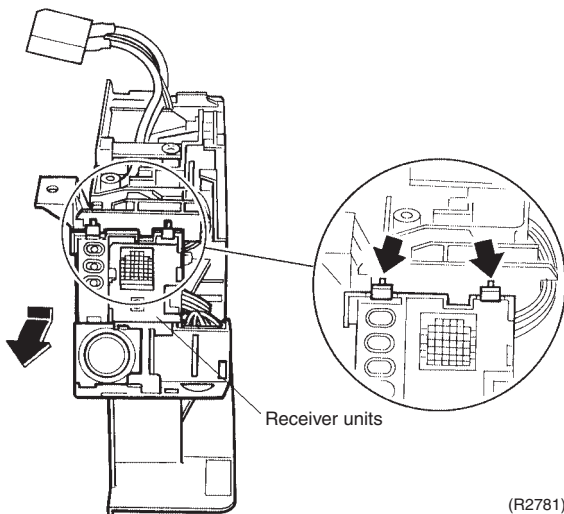

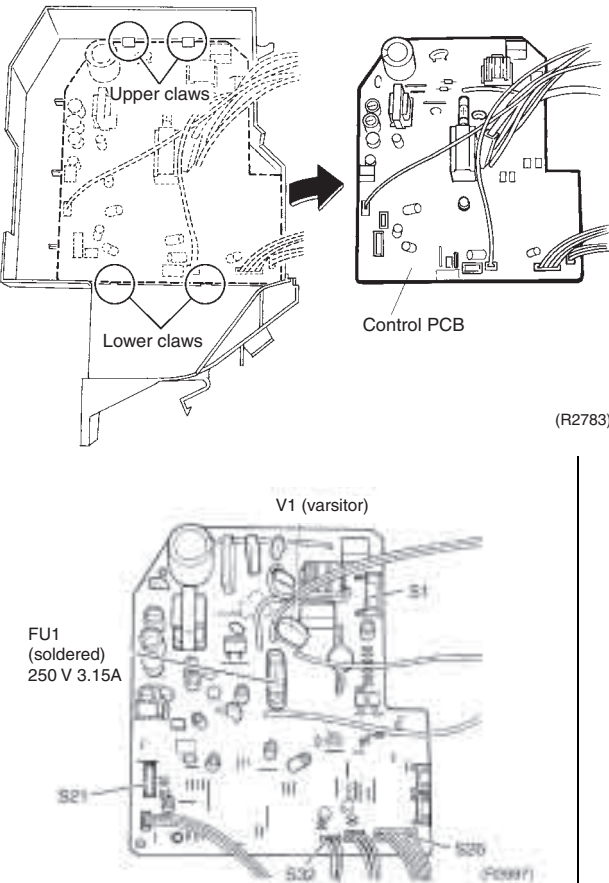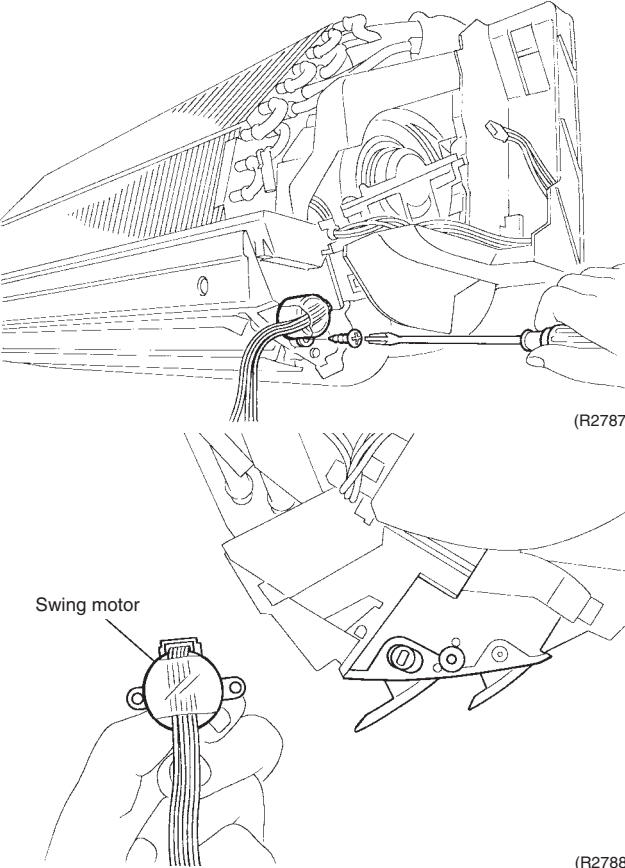Step	Procedure	Points
<p>5. Remove the control PCB.</p> <p>1 Undo the two claws on the lower side, and then the two claws on the upper side. Remove the control PCB.</p> <p>2 Control PCB (indoor unit) S1: connector for the fan motor S21: HA S26: connector for the room temperature thermistor S32: connector for the heat exchanger thermistor</p>	 <p>(R2783)</p>	
<p>6. Remove the swing motor for horizontal blades.</p> <p>1 Remove the screw of the swing motor.</p>	 <p>(R2787)</p> <p>Swing motor</p> <p>(R2788)</p>	

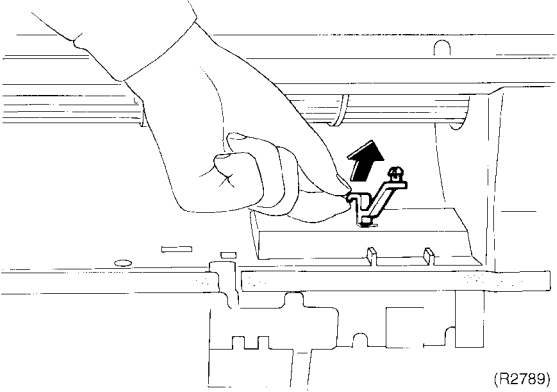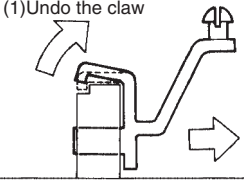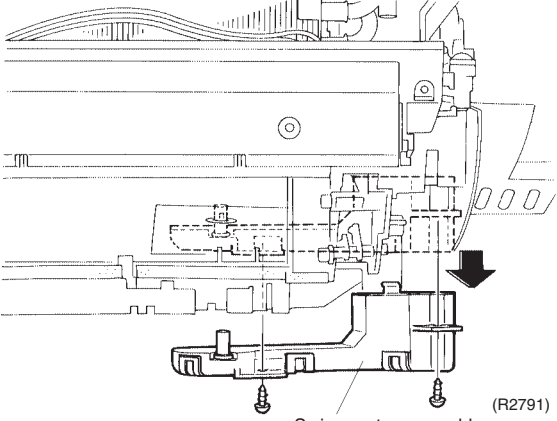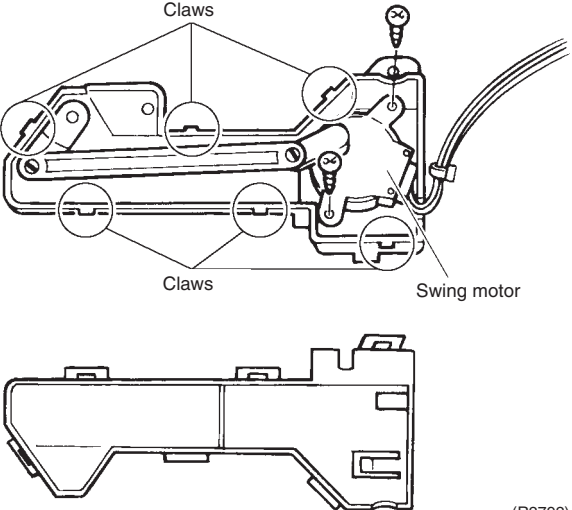Step	Procedure	Points
7. Remove the swing motor for vertical blades.		
1 Release the swing axis on the right side.	 <p>(R2789)</p>	<p>■ Releasing the swing axis</p> <p>(1) Undo the claw</p>  <p>(2) Pull it out</p> <p>(R2790)</p>
2 Loosen the two screws and detach the swing motor assembly.	 <p>Swing motor assembly</p> <p>(R2791)</p>	
3 Loosen the two screws and remove the swing motor.	 <p>Claws</p> <p>Claws</p> <p>Swing motor</p> <p>(R2792)</p>	<p>■ Six claws hold the assembly.</p>




1.5 Removal of the Heat Exchanger





Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>■ Remove the electrical box.</p> <p>1. Disconnect the refrigerant piping.</p>	<p>(R2793)</p>	<p>! Caution If gas leaks, repair the spot of leaking, then collect all refrigerant from the unit. After conducting vacuum drying, recharge proper amount of refrigerant.</p>
<p>1 Hold the indoor unit up by a piece of wood etc..</p>	<p>Drain</p> <p>(R2794)</p>	<p>! Caution Do not contaminate any gas (including air) other than the specified refrigerant (R22 or R410A, depending on the model) into refrigerant cycle. (Contaminating of air or other gas causes abnormal high pressure in refrigerating cycle, and this results in pipe breakage or personal injuries.)</p> <ul style="list-style-type: none"> ■ Pay attention so that the residual water in the drain will not make the floor wet. ■ In case that a drain hose is buried inside a wall, remove it after the drain hose in the wall is pulled out.
<p>2 Unscrew the flare nut for gas piping by two wrenches.</p>	<p>(R2795)</p>	<ul style="list-style-type: none"> ■ Use two wrenches to disconnected pipes. ■ When disconnecting pipes, cover every nozzle with caps so as not to let dust and moisture in.
<p>3 Unscrew the flare nut for liquid piping by two wrenches.</p>	<p>Liquid piping</p> <p>Gas piping</p> <p>(R2796)</p>	

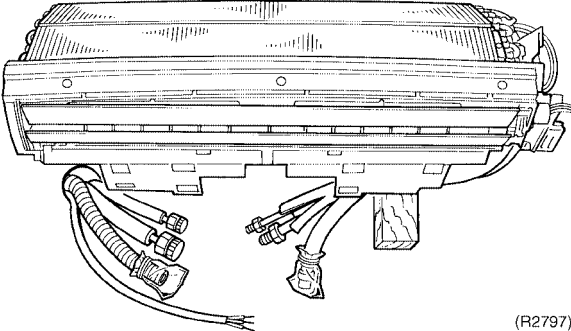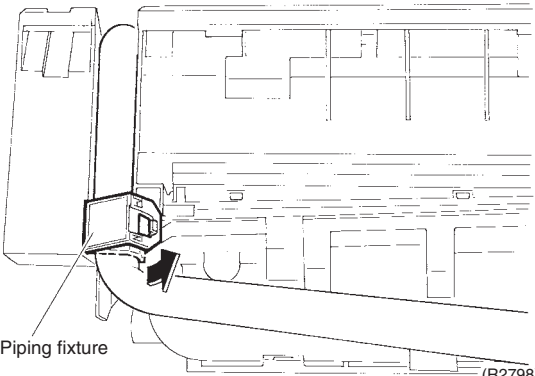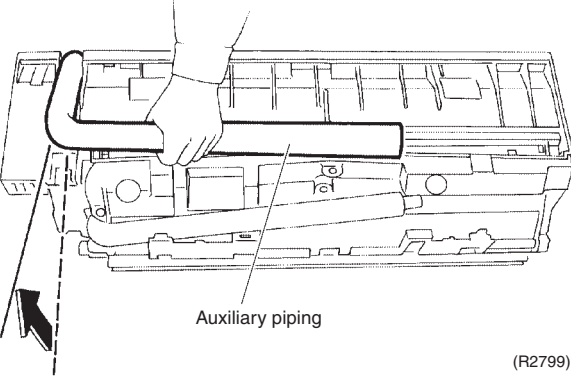Step	Procedure	Points
<p>2. Remove the indoor unit.</p> <p>1 Detach the indoor unit from the installation plate.</p>	 <p>(R2797)</p>	
<p>3. Remove the piping fixture.</p> <p>1 Release the claw on the upper side of the piping fixture on the back of the unit.</p>	 <p>Piping fixture</p> <p>(R2798)</p>	
<p>4. Remove the heat exchanger.</p> <p>1 Widen the auxiliary piping to the extent of 10°~20°.</p>	 <p>Auxiliary piping</p> <p>(R2799)</p>	<p>■ At an angle of 10°~20°</p>


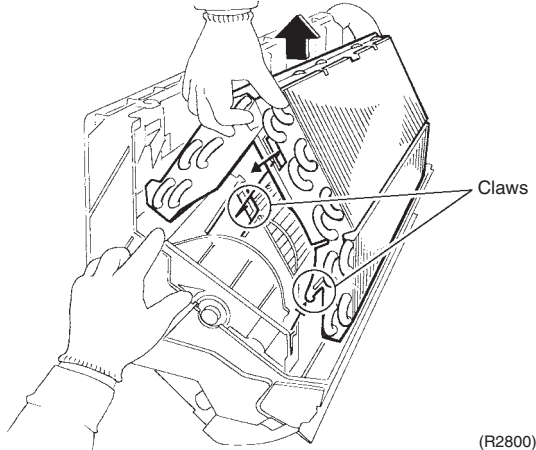
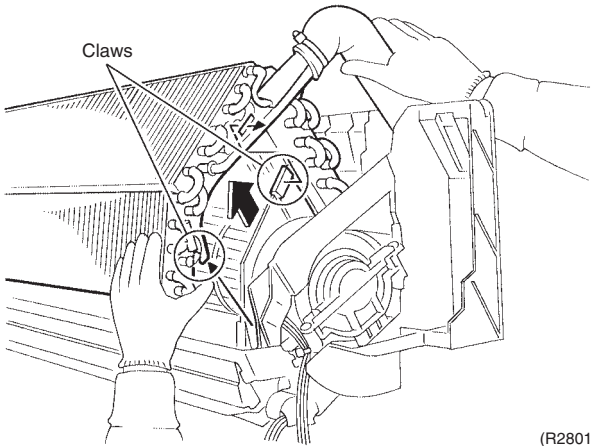
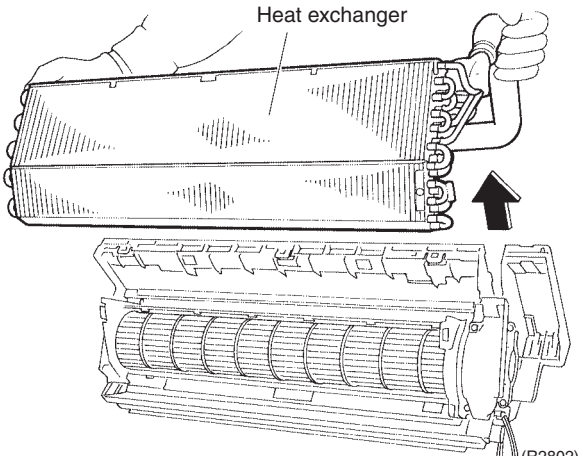
Step	Procedure	Points
2	<p>Release the claws on the left side.</p>  <p>(R2800)</p>	
3	<p>Push the fixing claws on the right side and release.</p>  <p>(R2801)</p>	
4	<p>Pull the heat exchanger to the front side and undo the claws completely, and then lift it.</p>  <p>(R2802)</p>	<p>Caution  When removing or reinstalling heat exchanger, be sure to wear protective gloves or wrap the heat exchanger with cloths. (Fins can cut fingers.)</p>






1.6 Removal of the Fan Rotor / Fan Motor

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

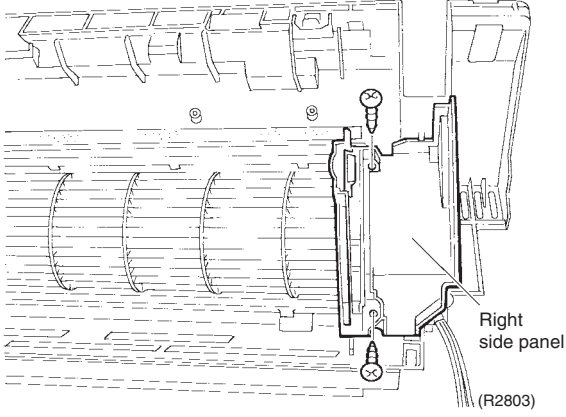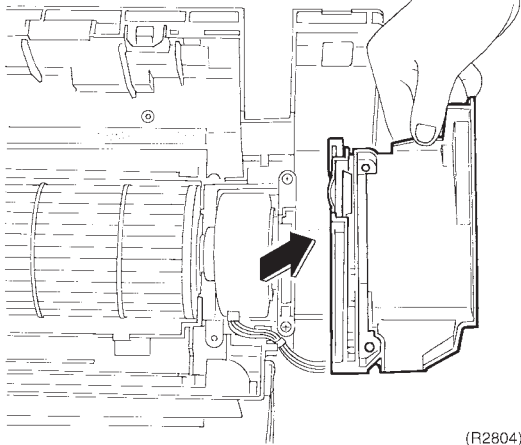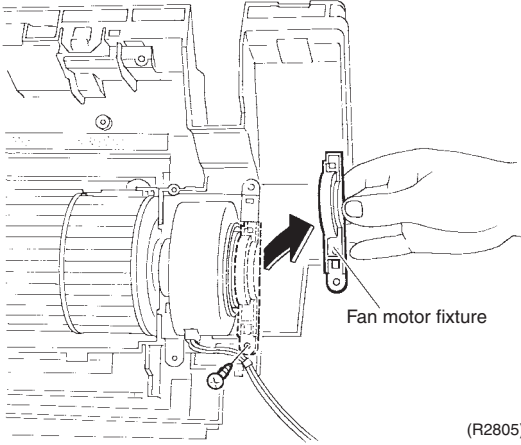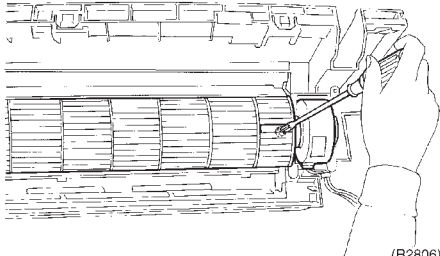Step	Procedure	Points
<p>1. Remove the right side panel.</p> <p>1 Loosen the two screws.</p> <p>2 Lift the right side panel and remove it.</p>	 <p>Right side panel (R2803)</p>  <p>(R2804)</p>	<p>■ You can remove the fan rotor without detaching the right side panel.</p>
<p>2. Remove the fan rotor.</p> <p>1 Loosen the screw and remove the fan motor fixture.</p> <p>2 Loosen the fixing screw of the fan rotor.</p>	 <p>Fan motor fixture (R2805)</p>  <p>(R2806)</p>	

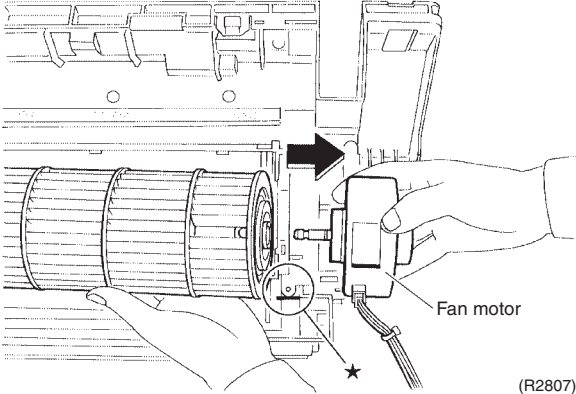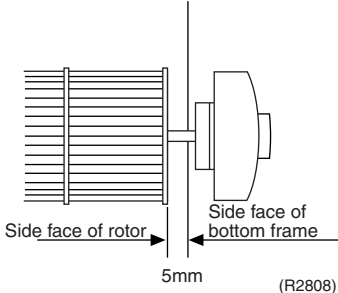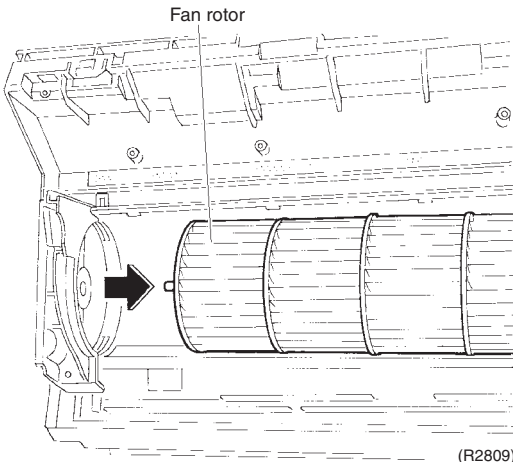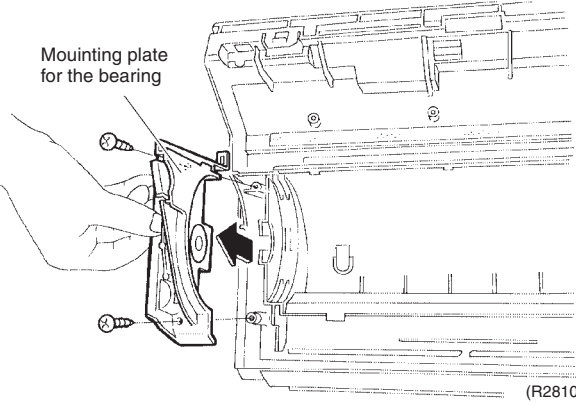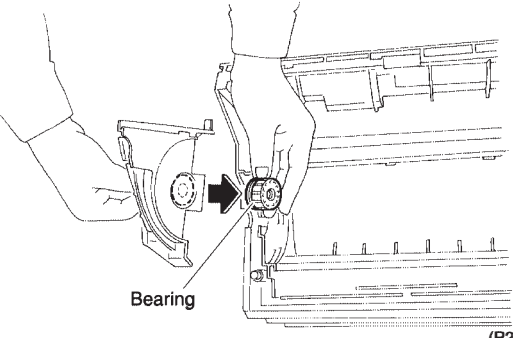Step	Procedure	Points
<p>3. Remove the fan motor.</p> <p>1 Remove the fan motor.</p>	 <p style="text-align: right;">(R2807)</p>	<p>■ Reassembling the fan motor</p> <p>(1) When reassembling the fan rotor, provide as much as 5mm of play between the side face of the rotor and the bottom frame.</p>  <p style="text-align: right;">(R2808)</p>
<p>4. Remove the bearing.</p> <p>1 Remove the fan rotor. The bearing is on the left side.</p> <p>2 Loosen the two screws and remove the mounting plate for the bearing.</p> <p>3 The bearing is made of rubber. Push it inwards firmly and remove it.</p>	 <p style="text-align: right;">(R2809)</p>  <p style="text-align: right;">(R2810)</p>  <p style="text-align: right;">(R2811)</p>	<p>(2) When reassembling the fan motor, align the end of the connector with the height of ★ for play.</p>




2. Outdoor Unit




2.1 Removal of the Panels and Plates




Procedure






Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

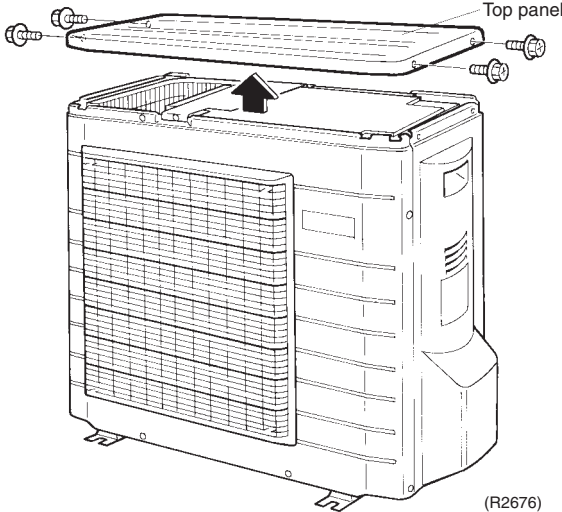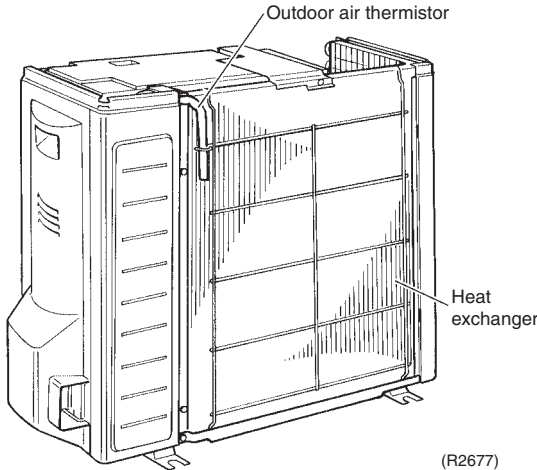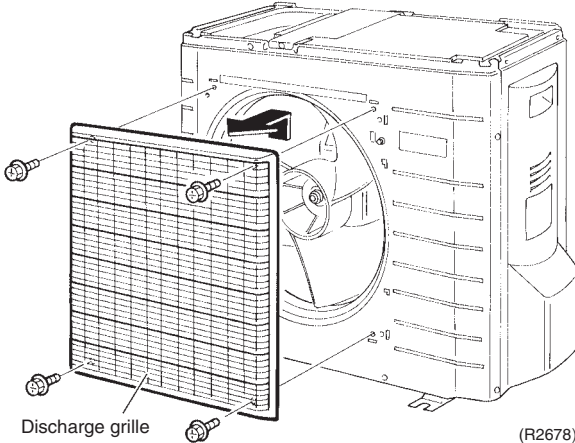Step	Procedure	Points
1. Remove the panels and plates.		
1	<p>Loosen the four screws and lift the top panel.</p>  <p>(R2676)</p>  <p>(R2677)</p>	<ul style="list-style-type: none"> ■ Take care not to cut your finger by the fins of the heat exchanger.
2	<p>Loosen the four screws and remove the discharge grille.</p>  <p>(R2678)</p>	

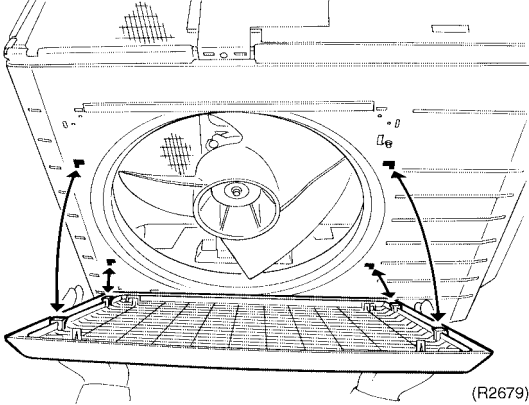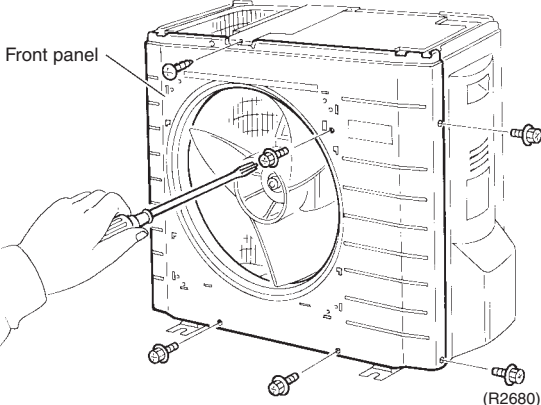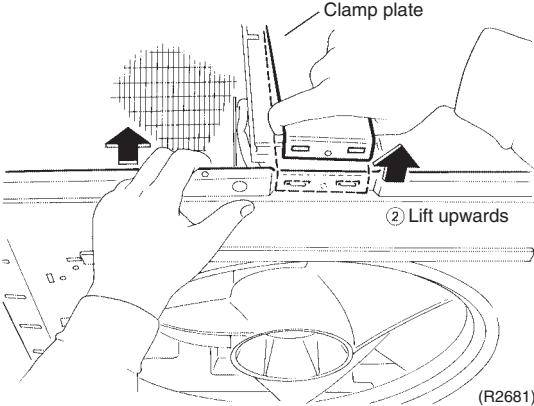Step		Procedure	Points
3	Loosen the six screws of the front panel.	 <p>(R2679)</p>  <p>Front panel</p> <p>(R2680)</p>	<ul style="list-style-type: none"> ■ The front grille has four claws. Slide the discharge grille upwards and remove it.
4	Push the front panel and undo the claw. Lift the clamp plate and remove it.	 <p>Clamp plate</p> <p>② Lift upwards</p> <p>(R2681)</p>	

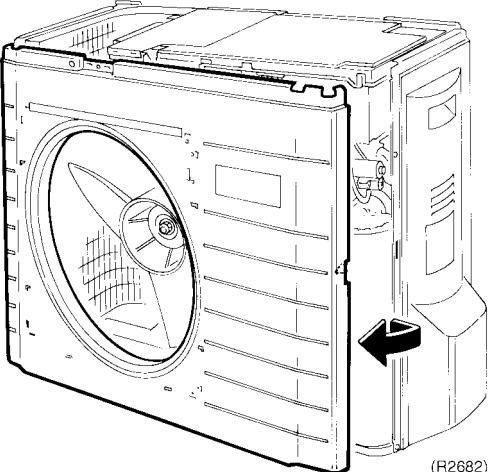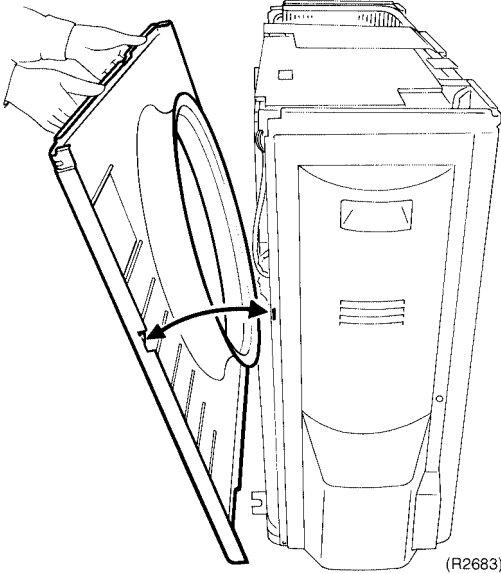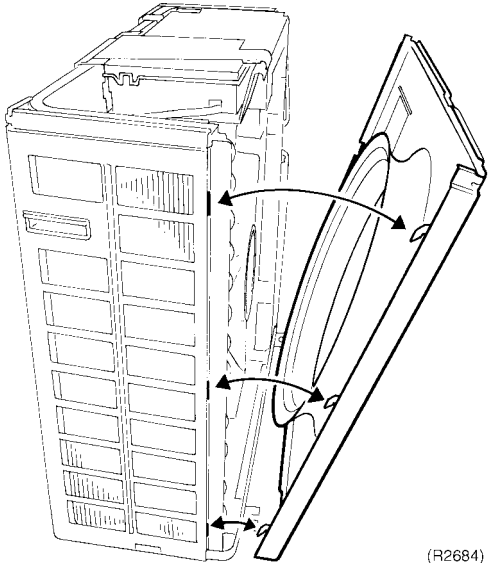Step	Procedure	Points
5	<p>Undo the right side claw, and then the left side claws. Remove the front panel.</p>	<ul style="list-style-type: none"> ■ Lift the front panel and remove it while pushing the right side panel inwards.
	 <p>(R2682)</p>	
	 <p>(R2683)</p>	
	 <p>(R2684)</p>	<ul style="list-style-type: none"> ■ Lift the front panel and undo the left side claws. ■ Fit the left side of the front panel first when installing.

Step	Procedure	Points
2.	Remove the stop valve cover.	
1	Loosen the screw of the stop valve cover.	
2	Pull down the stop valve cover to undo the claws and remove it.	<p>■ The stop valve cover has six claws.</p>

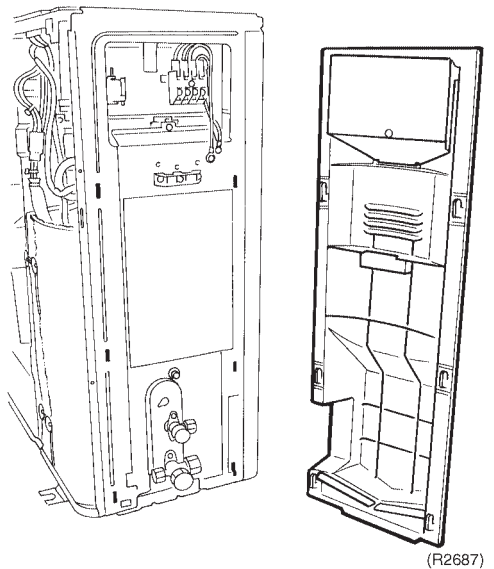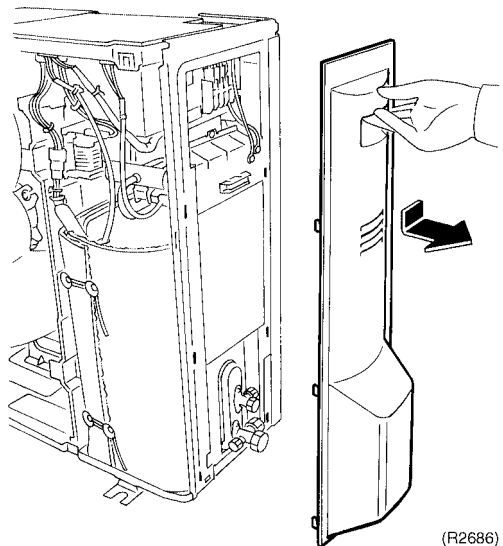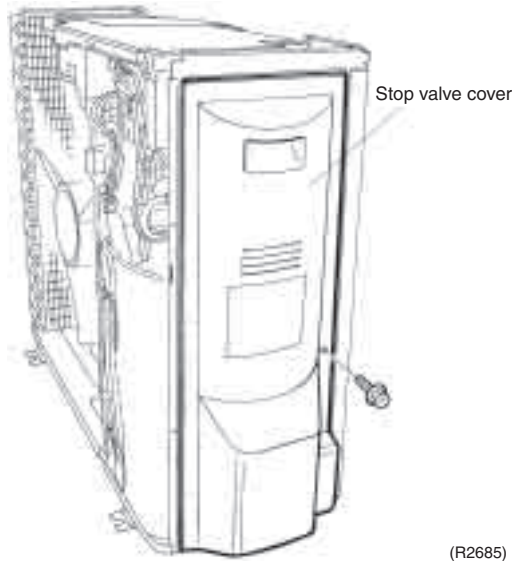




2.2 Removal of the Fan Motor / Propeller Fan

Procedure






Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>■ Remove the top panel and the front panel.</p>		
<p>1. Remove the electrical box cover.</p>		<p>■ This procedure is not necessary to remove the propeller fan only.</p>
<p>1 Loosen the screw on the back of the shelter.</p>		
<p>2 Undo the two claws and remove it.</p>		<p>■ The claws have been released since the front panel was removed.</p>
<p>3 Release the four claws of the electrical box cover and remove it.</p>		

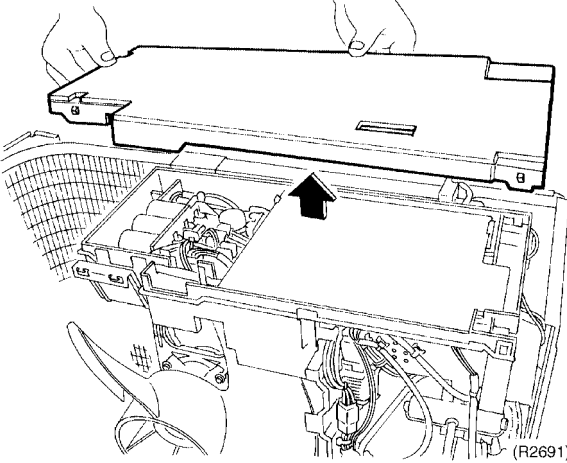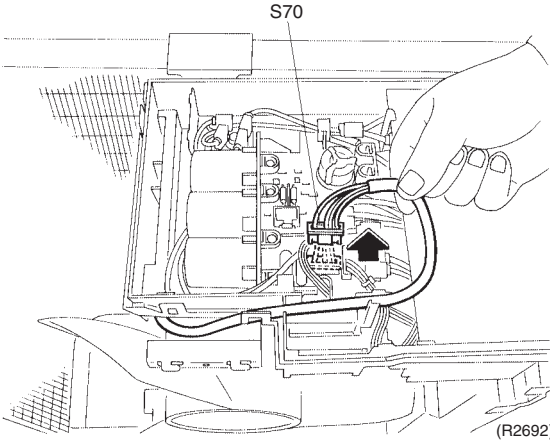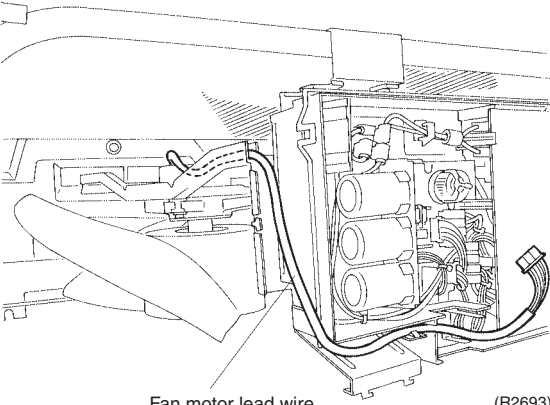Step	Procedure	Points
	 <p>(R2691)</p>	
<p>2. Remove the fan motor.</p> <p>1</p> <p>2</p>	<p>Disconnect the connector for fan motor (S70).</p>  <p>(R2692)</p>  <p>Fan motor lead wire (R2693)</p>	

Step	Procedure	Points
3	<p>Unscrew the washer-fitted nut (M10) of the propeller fan with a spanner.</p>	<ul style="list-style-type: none"> Align ▼ mark of the propeller fan with D-cut section of the motor shaft when reassembling.
4	<p>Remove the four screws from the fan motor.</p>	

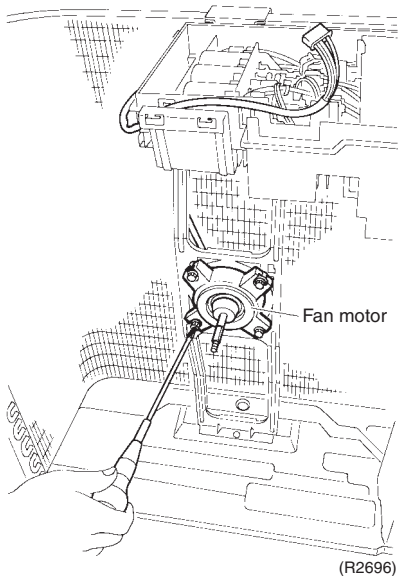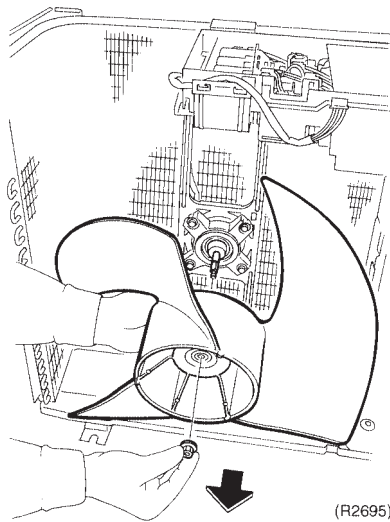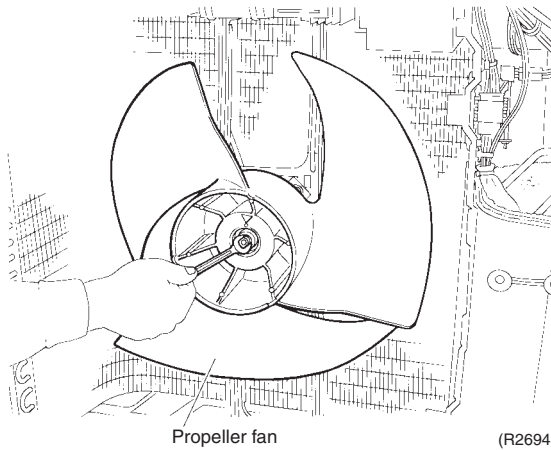

Step	Procedure	Points
5	Pull the fan motor out.	<ul style="list-style-type: none">■ Put the lead wire through the back of the motor when reassembling. (so as not to be entangled with the propeller fan)




(R2697)




2.3 Removal of the PCB / Electrical Box





Procedure






Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

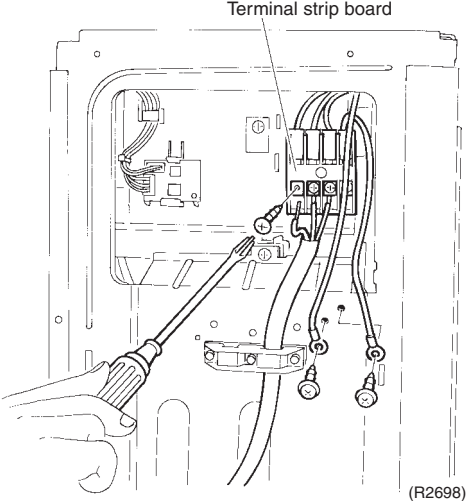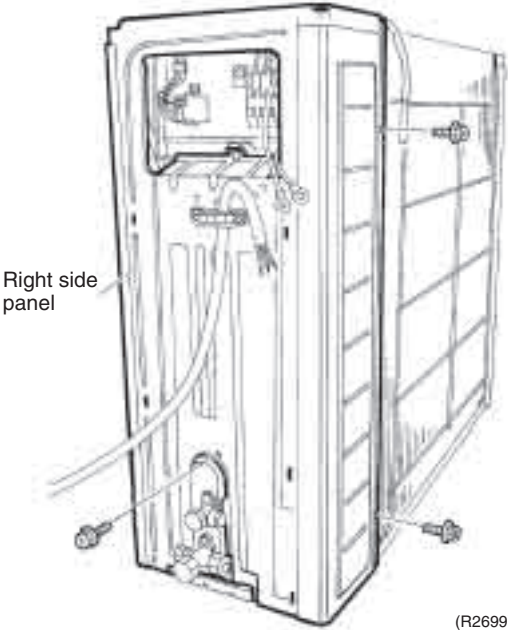
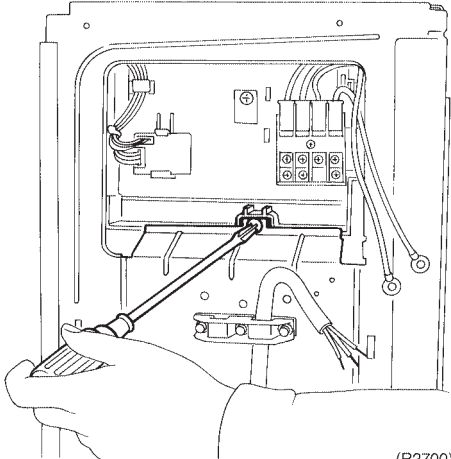
Step	Procedure	Points
<p>■ Remove the top panel and the front panel.</p>		
<p>1. Remove the right side panel.</p>		
<p>1 Disconnect the three connection wirings and the two earth wires.</p>	 <p style="text-align: right;">(R2698)</p>	<p>Terminal strip number black (1) ----- power supply white (2) ----- power supply red (3) ----- transmission yellow / green (⊥) ----- earth</p>
<p>2 Loosen the three screws of the right side panel.</p>	 <p style="text-align: right;">(R2699)</p>	
<p>3 Loosen the fixing screw of the electrical box.</p>	 <p style="text-align: right;">(R2700)</p>	

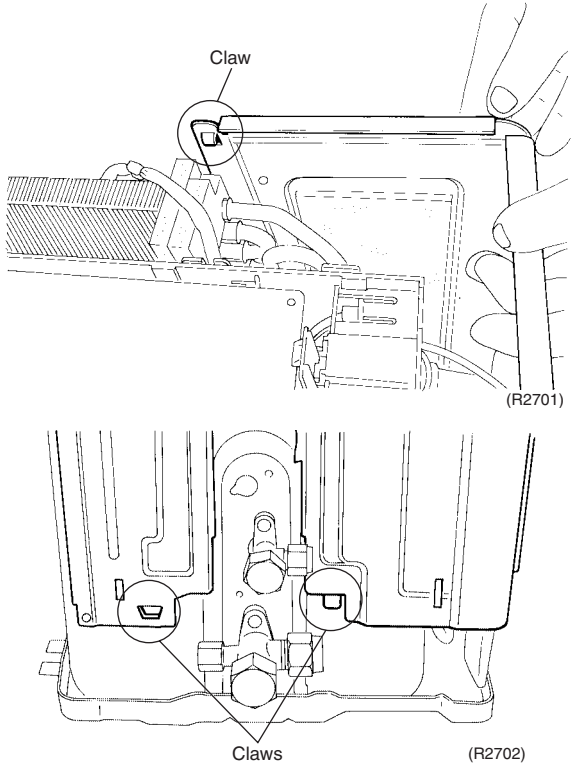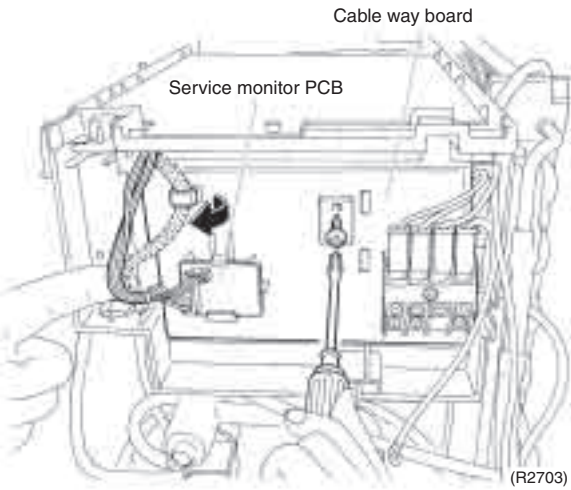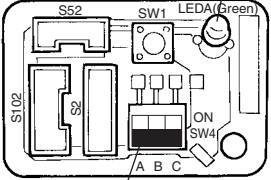Step	Procedure	Points
	 <p style="text-align: center;">Claw</p> <p style="text-align: center;">Claws</p> <p style="text-align: right;">(R2701)</p> <p style="text-align: right;">(R2702)</p>	<ul style="list-style-type: none"> ■ the t when reassembling.
<p>2. Disconnect harnesses.</p> <p>1</p>	<p>Loosen the fixing screw of the cable way board.</p>  <p style="text-align: center;">Cable way board</p> <p style="text-align: center;">Service monitor PCB</p> <p style="text-align: right;">(R2703)</p>	<ul style="list-style-type: none"> ■ Service monitor PCB  <p style="text-align: right;">LED A (Green)</p> <p style="text-align: right;">SW4 (Initial setting: OFF)</p> <p style="text-align: right;">(R2704)</p>

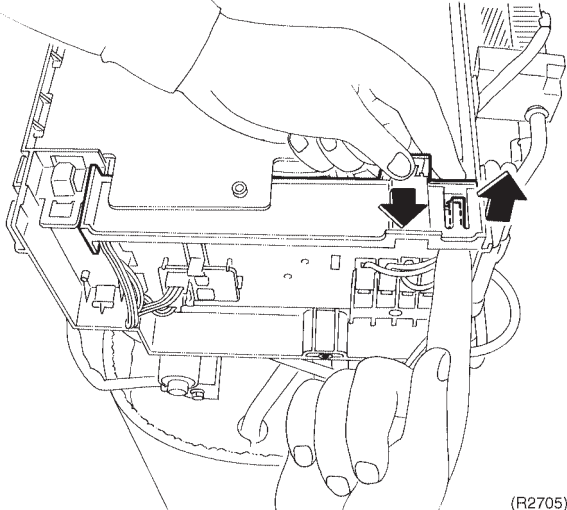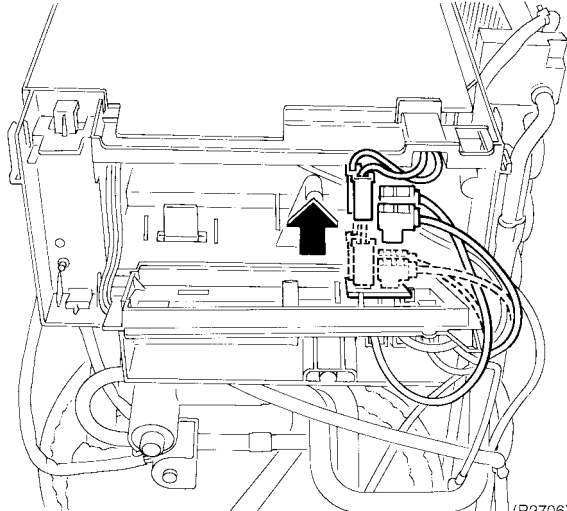
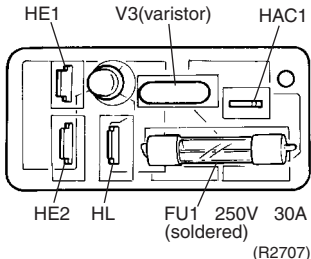
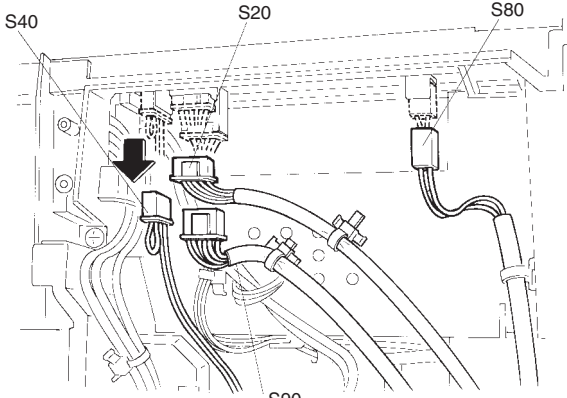
Step	Procedure	Points
2	<p>Push the claw up to release the cable way board. Open the cable way board.</p>  <p>(R2705)</p>	
3	<p>Disconnect the harnesses from the power supply PCB. HL (black) to the terminal strip HE2 (yellow / green) to the terminal strip (earth) HAC1 (black) from the control PCB (AC1) HE1 (yellow / green) from the control PCB (E)</p>  <p>(R2706)</p>	<p>■ Power supply PCB</p>  <p>(R2707)</p>
4	<p>Disconnect the connectors of the front side. S20: electronic expansion valve S40: overload protector S80: four way valve S90: thermistors (discharge pipe, outdoor air, heat exchanger)</p>  <p>(R2708)</p>	




Step	Procedure	Points
5	Loosen the screw of the control PCB.	
6	Undo the two claws and release the control PCB from the ditch of the front side.	
7	Disconnect the harnesses while opening the control PCB. S10: to the terminal strip AC2: to the terminal strip	
8	Disconnect the connectors. S51: to the service monitor PCB S101: to the service monitor PCB	

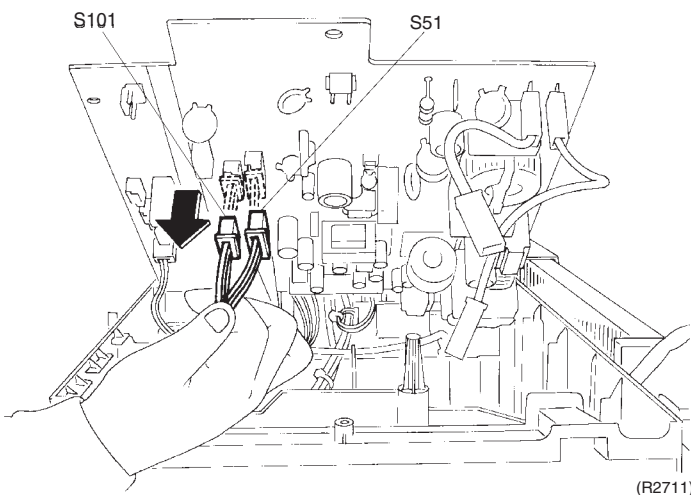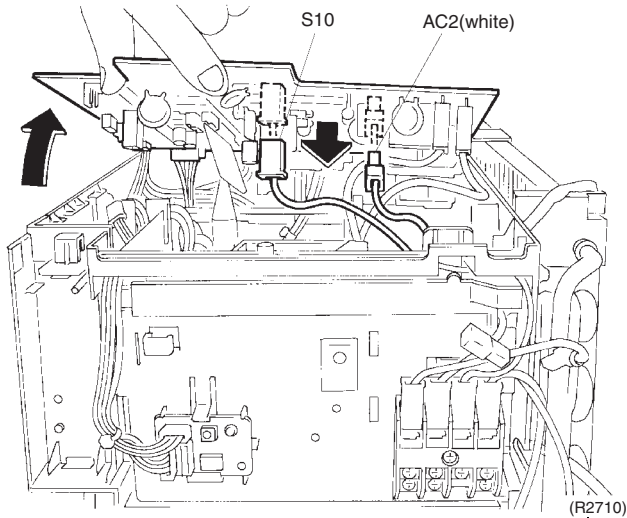
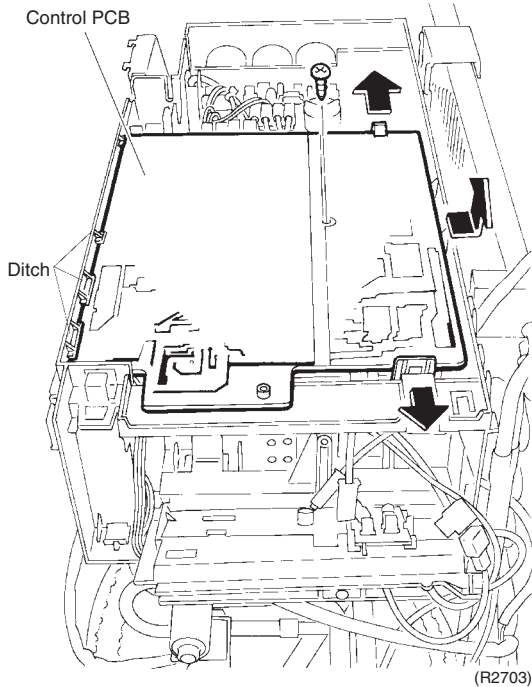


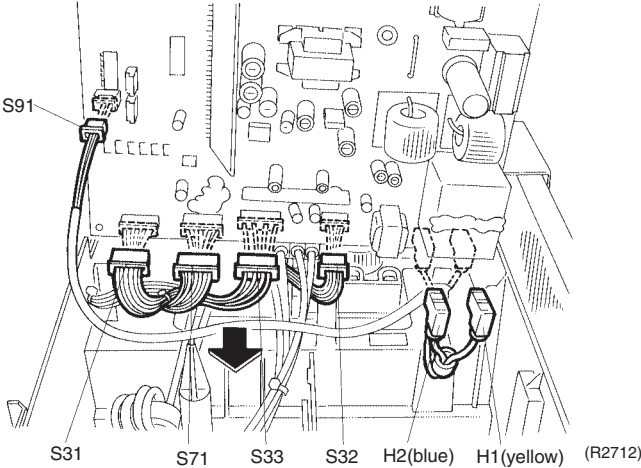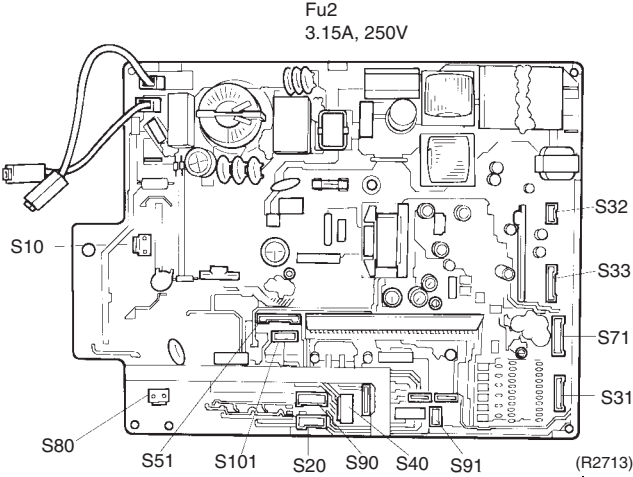
Step		Procedure	Points
9	<p>Disconnect the connectors.</p> <p>S31: to the SPM</p> <p>S32: to the SPM</p> <p>S33: to the MID</p> <p>S71: to the MID</p> <p>S91: fin thermistor</p>		
10	<p>Control PCB (outdoor unit)</p> <p>S10: to the terminal strip</p> <p>S20: electronic expansion valve</p> <p>S31: to CN14 of the SPM</p> <p>S32: to CN11 of the SPM</p> <p>S33: to S34 of the MID</p> <p>S40: overload protector</p> <p>S51: to S52 of the service monitor PCB</p> <p>S71: to S72 of the MID</p> <p>S80: four way valve</p> <p>S90: thermistors (discharge pipe, outdoor air, heat exchanger)</p> <p>S91: fin thermistor</p> <p>S101: to S102 of the service monitor PCB</p>		

Step	Procedure	Points
11	Disconnect the relaying wire connector for the compressor.	
12	Release the clamp by pliers.	
13	Disconnect the reactor harness.	

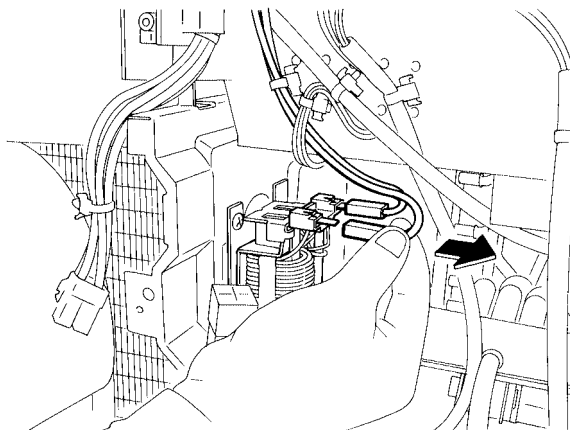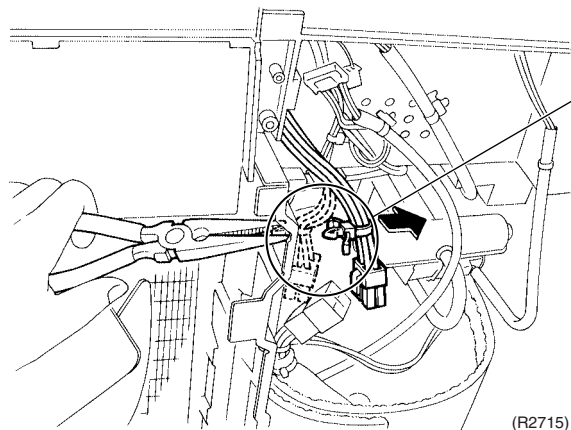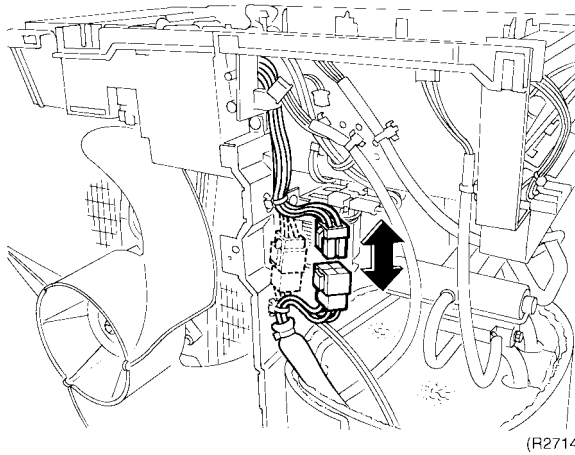


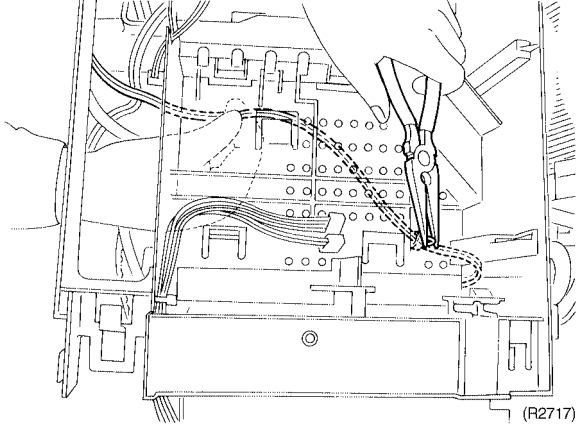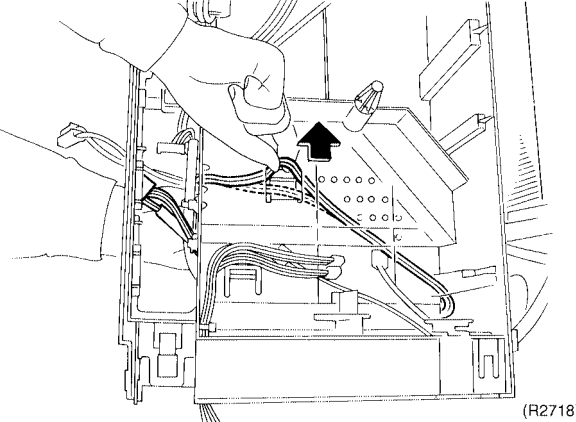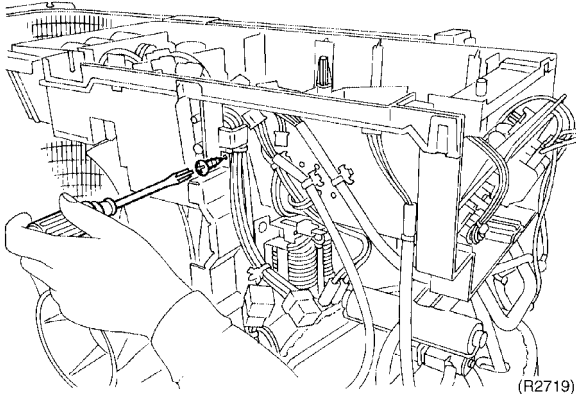Step	Procedure	Points
14	<p data-bbox="199 217 467 342">Pull the clamp and draw the thermistor harness out from the back of the electrical box.</p>  	
15	<p data-bbox="199 1216 467 1274">Loosen the screw of the electrical box.</p> 	

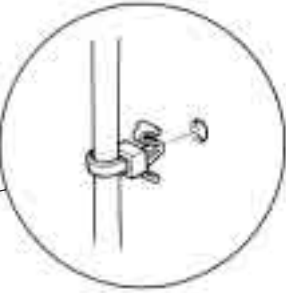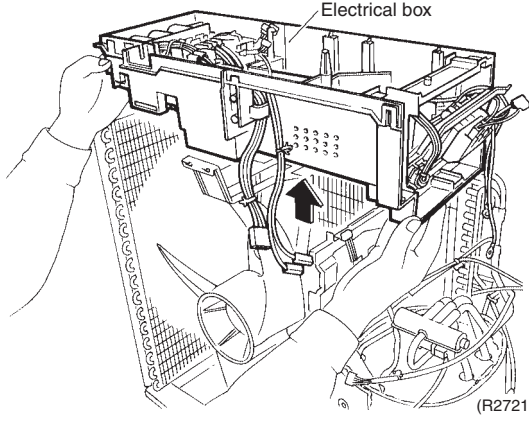Step	Procedure	Points
16	Release the clamp of the four way valve harness.	
17	Lift the electrical box and remove it.	

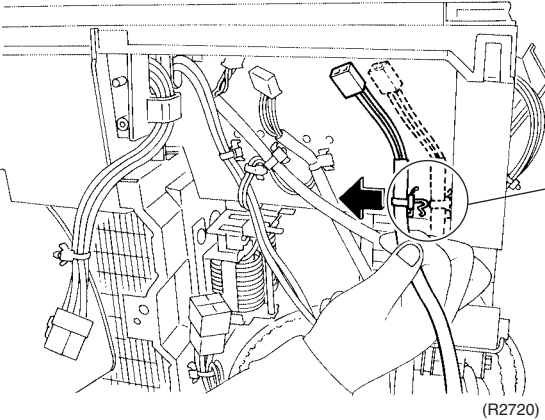

(R2720)

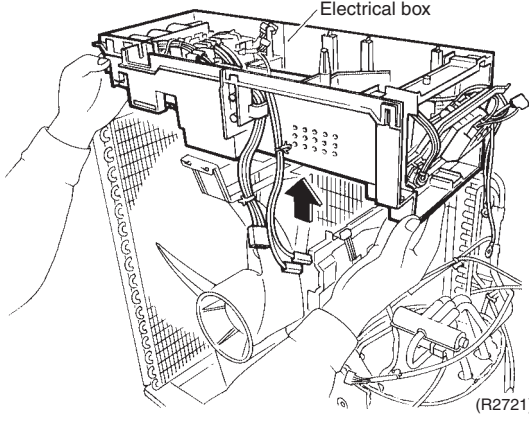

(R2721)

2.4 Removal of the Reactor



Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>■ Remove the electrical box.</p>		
<p>1. Remove the partition plate.</p>		
<p>1</p>	<p>Release the clamp by pliers.</p>	
	<p style="text-align: right;">(R2722)</p>	
<p>2</p>	<p>Loosen the two screws of the partition plate.</p>	
	<p style="text-align: right;">(R2723)</p>	
	<p style="text-align: right;">(R2724)</p>	
		<p>■ The partition plate is fixed to the bottom frame with a claw.</p>

Step	Procedure	Points
3	Lift the partition plate and remove it.	
4	Loosen the screw. Slide the reactor and remove it from the partition plate.	

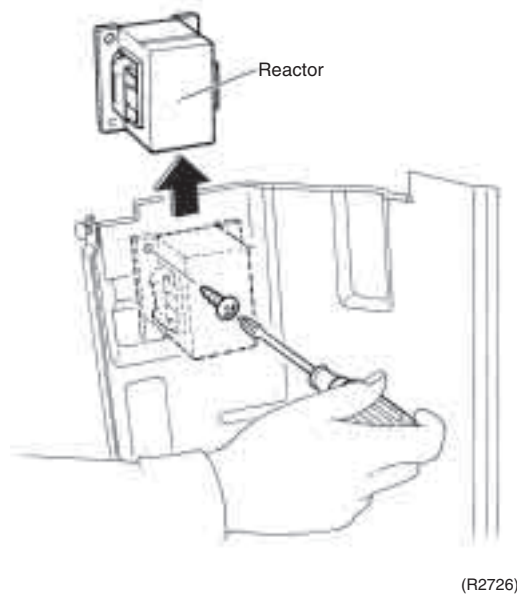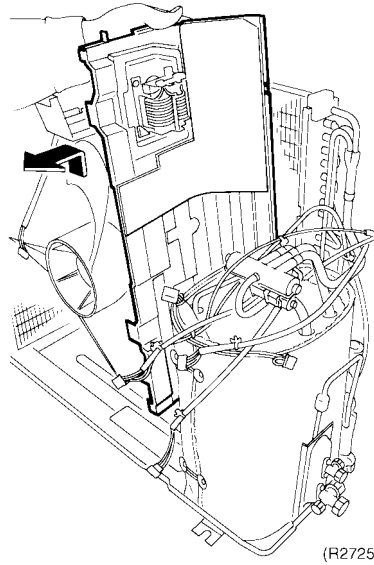

2.5 Removal of the Sound Blanket





Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Disconnect the harness of each thermistor.	<p style="text-align: right;">(R2727)</p>	
2	Release the discharge pipe thermistor.	<p style="text-align: right;">(R2728)</p>	<ul style="list-style-type: none"> ■ Pay attention to the direction of the clip so as not to touch the lead wire of the thermistor when reassembling.
3	Cut the clamp by nippers. Disconnect the outdoor heat exchanger thermistor.	<p style="text-align: right;">(R2729)</p>	<ul style="list-style-type: none"> ■ Clamps should be always available. Fix it as it was before.

Step	Procedure	Points
4	Remove the sound blanket (side-outer).	<ul style="list-style-type: none"> Since the piping ports on the sound blanket (side-outer) are torn easily, remove the blanket carefully.
5	Remove the sound blanket (top-upper).	
6	Remove the sound blanket (top-lower).	
7	Remove the sound blanket (side-inner).	<ul style="list-style-type: none"> Since the piping ports on the sound blanket (side-inner) are torn easily, remove the blanket carefully.

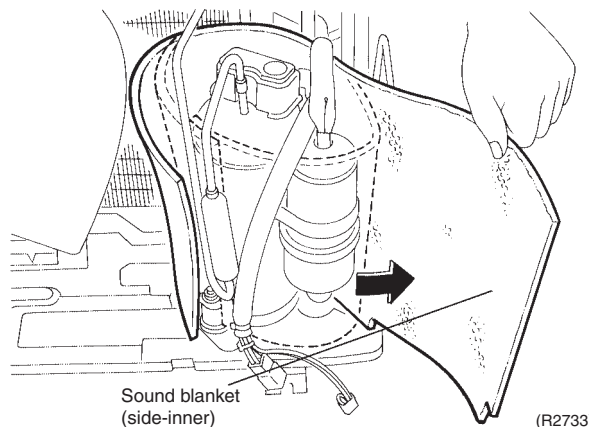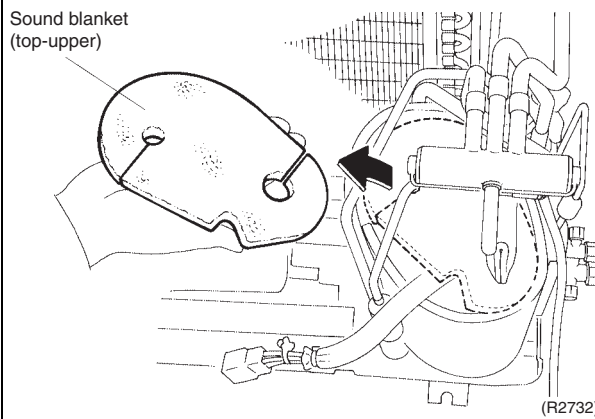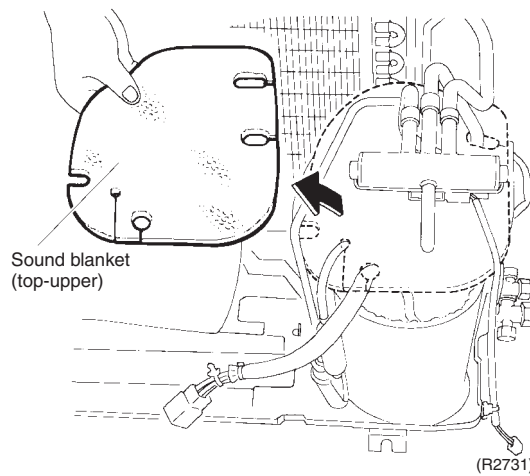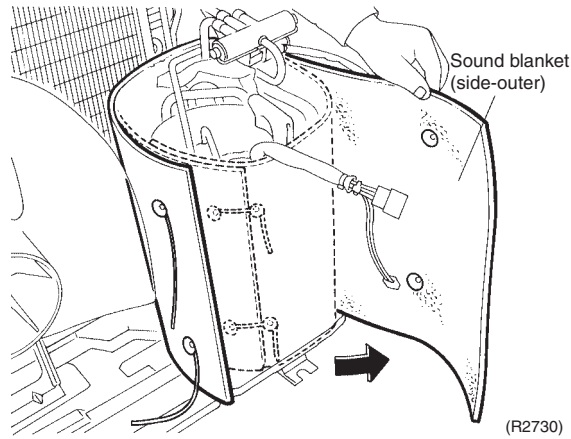

2.6 Removal of the Four Way Valve

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.






Step	Procedure	Procedure	Points
1	Loosen the screw of the four way valve coil.	<p>Four way valve</p> <p>Four way valve coil</p> <p>(R2734)</p>	<ul style="list-style-type: none"> ■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries. ■ Be careful so as not to break the pipes by pressing it excessively by pliers when withdrawing it. <p>Caution Be careful about the four way valve, pipes and so on, which were heated up by a gas brazing machine, so as not to get burnt your hands.</p>
2	Heat up the brazed part of the four way valve and disconnect. <ul style="list-style-type: none"> ■ Be sure to apply nitrogen replacement when heating up the brazed part. 	<p>(R2735)</p>	<p>Cautions for restoration</p> <ol style="list-style-type: none"> 1. Restore the piping by non-oxidation brazing. Braze it quickly when no nitrogen gas can be used. 2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth will not be dried and avoid excessive heating. (Keep below 120°C) <p>In case of the difficulty with gas brazing machine</p> <ol style="list-style-type: none"> 1. Disconnect the brazed part where is easy to disconnect and restore. 2. Cut pipes on the main unit by a miniature copper tube cutter in order to make it easy to disconnect.
3	Heat up every brazed part in turn and disconnect.	<p>(R2736)</p>	<p>Note: Do not use a metal saw for cutting pipes by all means because the sawdust come into the circuit.</p>

2.7 Removal of the Electronic Expansion Valve

Procedure

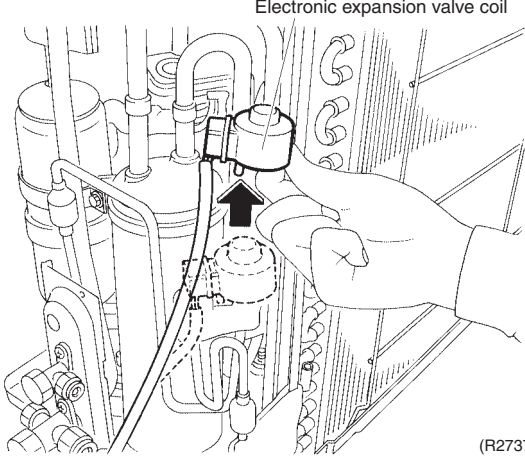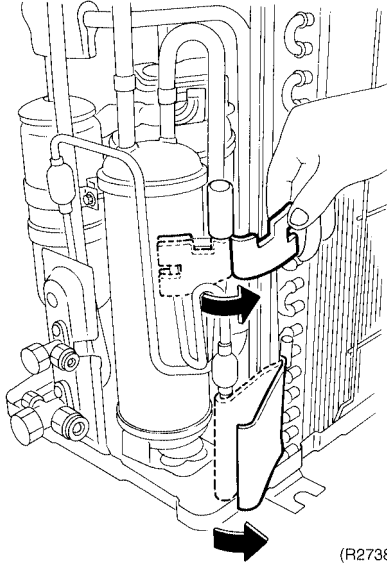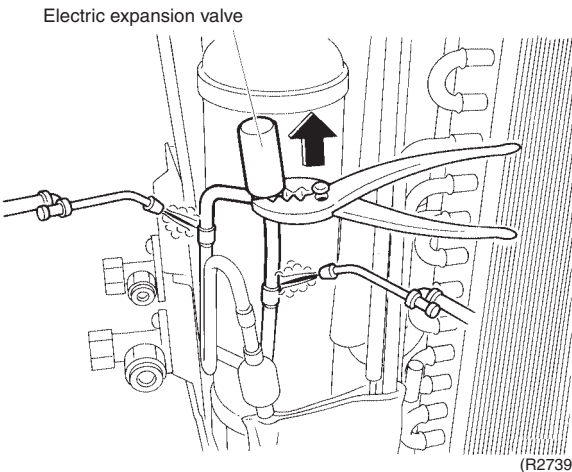

Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the electronic expansion valve coil.	 <p style="text-align: center;">Electronic expansion valve coil</p> <p style="text-align: right;">(R2737)</p>	
2	Remove the sheets of putty. <ul style="list-style-type: none"> ■ Before working, make sure that the refrigerant is empty in the circuit. 	 <p style="text-align: right;">(R2738)</p>	
3	Heat up the two brazed parts of the electronic expansion valve and disconnect. <ul style="list-style-type: none"> ■ Be sure to apply nitrogen replacement when heating up the brazed part. 	 <p style="text-align: center;">Electric expansion valve</p> <p style="text-align: right;">(R2739)</p>	<p> Caution Be careful about the electronic expansion valve, pipes and so on, which were heated up by a gas brazing machine, so as not to get burnt your hands.</p> <p> Warning Ventilate when refrigerant leaks during the work. (If refrigerant contacts fire, it will cause to arise toxic gas.)</p>

2.8 Removal of the Compressor




Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the terminal cover.	<p>(R2740)</p>	
2	Disconnect the lead wires of the compressor.	<p>(R2741)</p>	<p>■ Be careful so as not to burn the compressor terminals or the name plate.</p> <p>Make a note.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p style="text-align: center;">U V N W</p> </div> <p>U : red V : yellow W : blue N : brown</p>

Step	Procedure	Points
3	Unscrew the nut of the compressor.	
4	Remove the putty of the accumulator.	
5	Heat up the brazed part of the discharge side and disconnect.	
6	Heat up the brazed part of the suction side and disconnect.	
7	Lift the compressor up and remove it.	

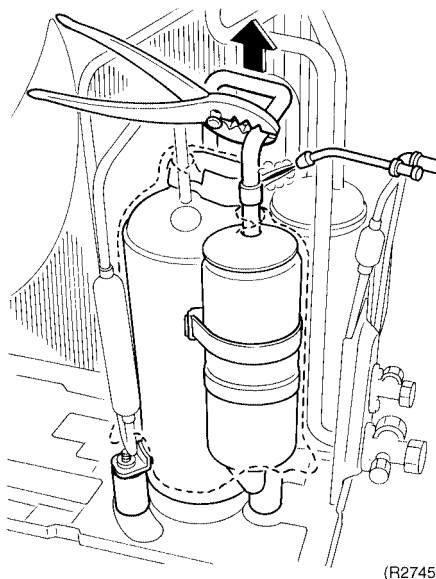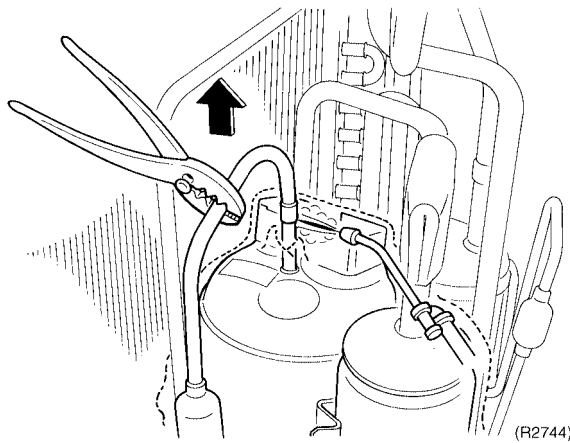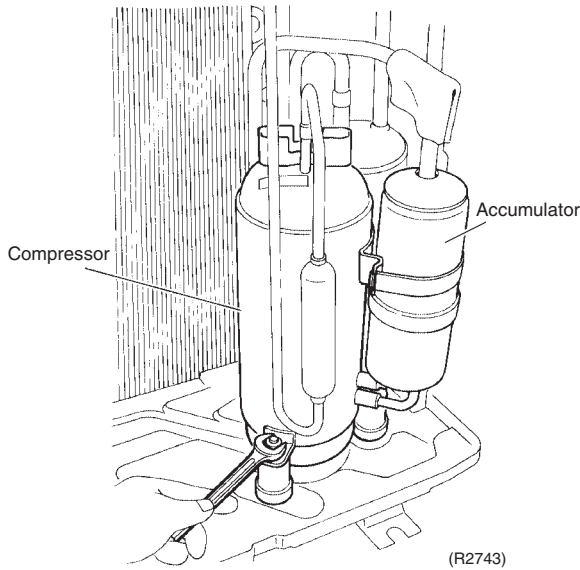

Warning
 Ventilate when refrigerant leaks during the work.
 (If refrigerant contacts fire, it will cause to arise toxic gas.)

- Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.
- Be careful so as not to burn the compressor terminals or the name plate.

- Be careful so as not to burn the heat exchanger fin.

Warning
 Since it may happen that refrigeration oil in the compressor will catch fire, prepare wet cloth so as to extinguish fire immediately.

Part 8 Others

1. Others	192
1.1 Test Run from the remote control.....	192
1.2 Jumper Settings	193

1. Others

1.1 Test Run from the remote control

For Heat pump

In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

- Trial operation may be disabled in either mode depending on the room temperature.
- After trial operation is complete, set the temperature to a normal level.
(26°C to 28°C in cooling mode, 20°C to 24°C in heating mode)
- For protection, the system disables restart operation for 3 minutes after it is turned off.

For Cooling Only

Select the lowest programmable temperature.


- Trial operation in cooling mode may be disabled depending on the room temperature.
Use the remote control for trial operation as described below.
- After trial operation is complete, set the temperature to a normal level (26°C to 28°C).
- For protection, the machine disables restart operation for 3 minutes after it is turned off.

Trial Operation and Testing

1. Measure the supply voltage and make sure that it falls in the specified range.
 2. Trial operation should be carried out in either cooling or heating mode.
 3. Carry out the test operation in accordance with the Operation Manual to ensure that all functions and parts, such as louver movement, are working properly.
- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
 - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

Trial operation from remote control

- (1) Press ON/OFF button to turn on the system.
- (2) Simultaneously press center of TEMP button and MODE buttons.
- (3) Press MODE button twice.
(“T” will appear on the display to indicate that Trial Operation mode is selected.)
- (4) Trial run mode terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press ON/OFF button.

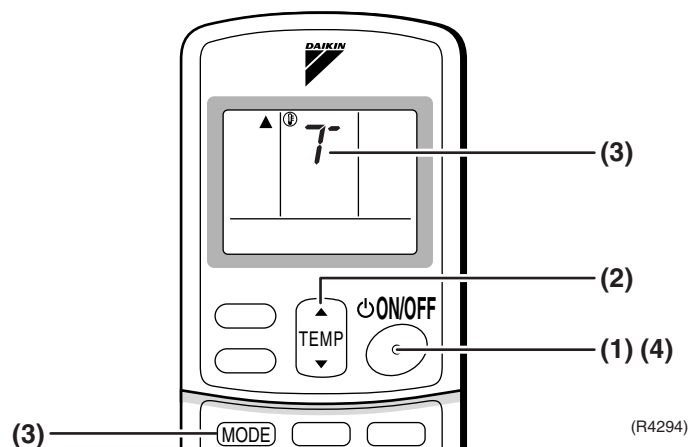

(R4294)

1.2 Jumper Settings

1.2.1 When Two Units are Installed in One Room

When two indoor units are installed in one room, the two infrared remote controls can be set for different addresses.


How to set the different addresses

■ Control PCB of the indoor unit

- (1) Remove the front grille. (3 screws)
- (2) Remove the electrical box (1-screw).
- (3) Remove the drip proof plate. (4 tabs)
- (4) Cut the address jumper JA on the control PCB.

■ infrared remote control

- (1) Slide the front cover and take it off.
- (2) Cut the address jumper J4.

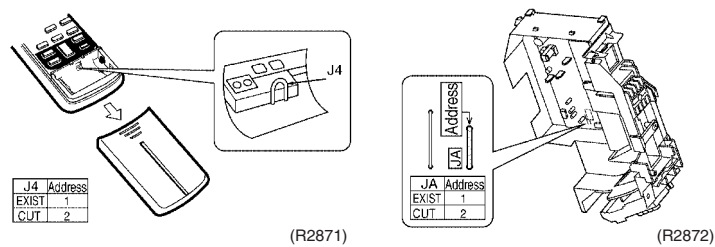

1.2.2 Jumper Setting

Jumper (On indoor control PCB)	Function	When connected (factory set)	When cut
JC	Power failure recovery function	Auto start	Unit does not resume operation after recovering from a power failure. Timer ON-OFF settings are cleared.
JB	Fan speed setting when compressor is OFF on thermostat.	Fan speed setting ; remote control setting	Fan rpm is set to "0" <Fan stop>

Part 9 Appendix


1. Piping Diagrams.....	196
1.1 Indoor Units.....	196
1.2 Outdoor Units.....	197
2. Wiring Diagrams.....	203
2.1 Indoor Units.....	203
2.2 Outdoor Units.....	206

1. Piping Diagrams


1.1 Indoor Units

FTK(X)S50/60BVMA, FTK(X)S50/60BVMB,
 FT(Y)S50/60BVMB, ATXS50CVMB, ATXS50DVMB
 FTKD50BVM, FTK(X)D50BVMA, FTK(X)D50BVMT,
 FTXD50BV4

FTKS71BVMA, FTKS71BVMB
 FTKD60BVM, FTKD60BVMA, FTKD60BVMT,
 FTKD18BVMS, FTKS71BAVMB

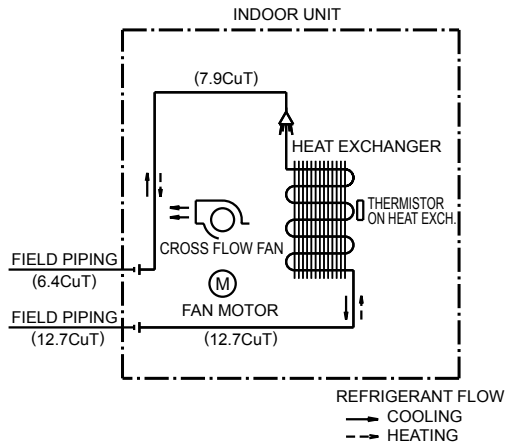


4D040081L

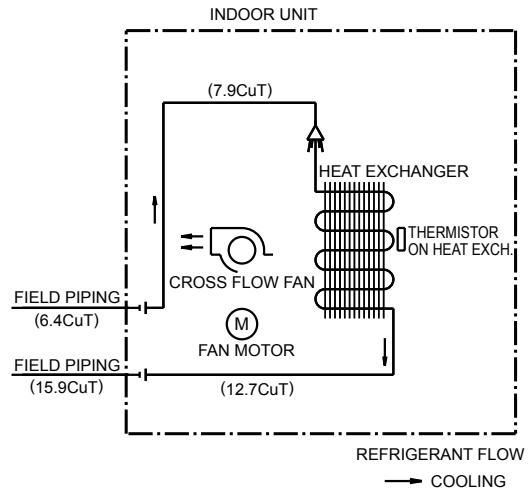


4D050919B

FTXS71BVMA, FTXS71BVMB, FTXD60BVMA,
 FTXD60BVMT, FTXS71BAVMB

FTKD71BVM, FTK(X)D71BVMA, FTK(X)D71BVMT,
 FTKD24/28BVMS, FTXD80CV4

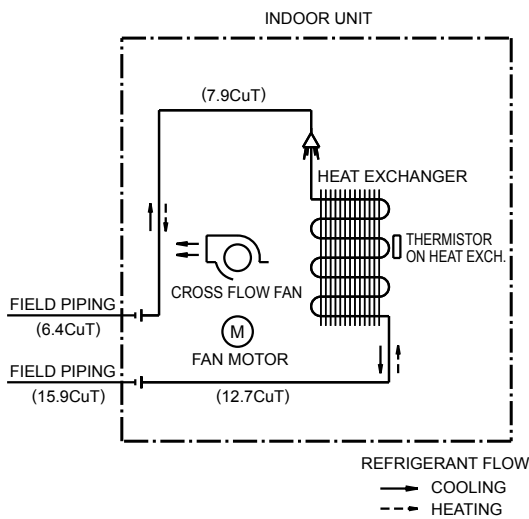

4D040082M

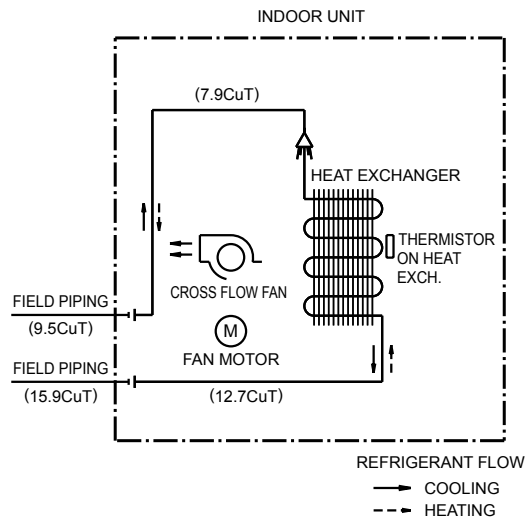


4D040083F


1.2 Outdoor Units

1.2.1 Cooling Only


RKS50BVMA, RKS50BVMB(9), RKS50B2VMB, RS50B(2)VMB

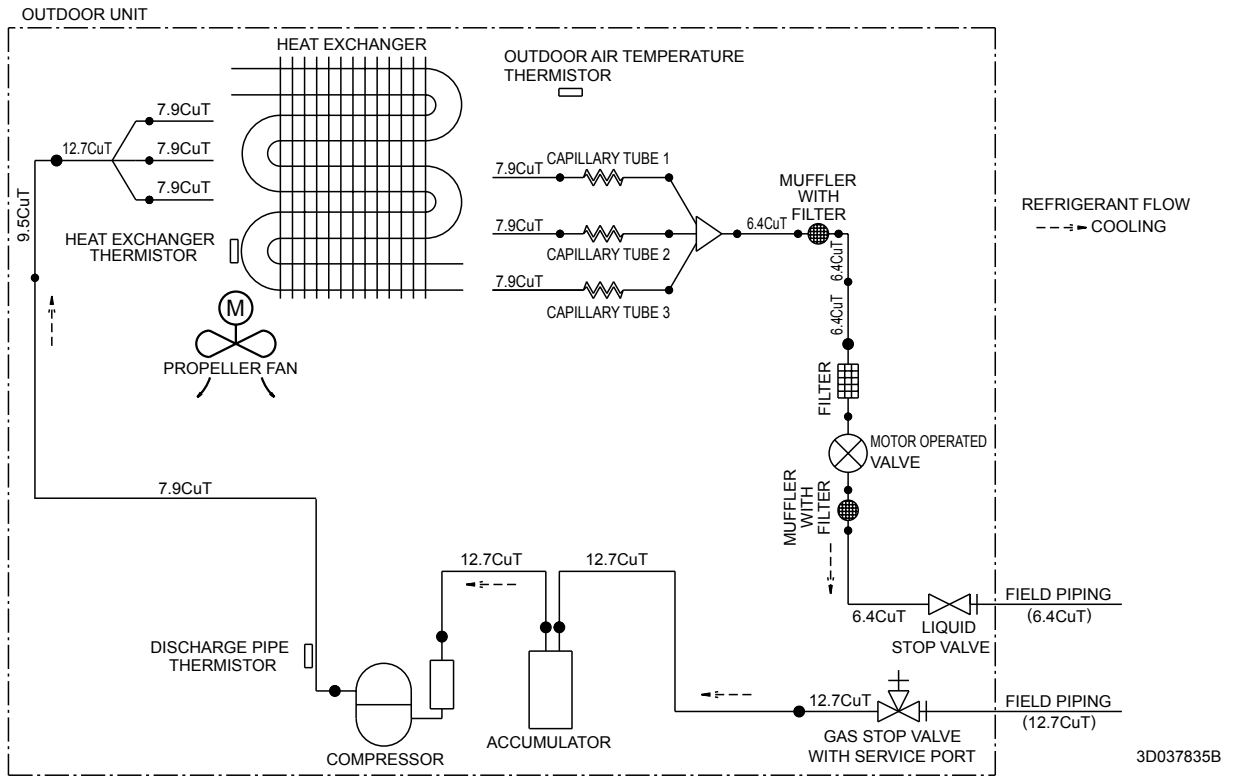

RKS60BVMA, RKS60BVMB(9), RKS60B2VMB, RS60B(2)VMB

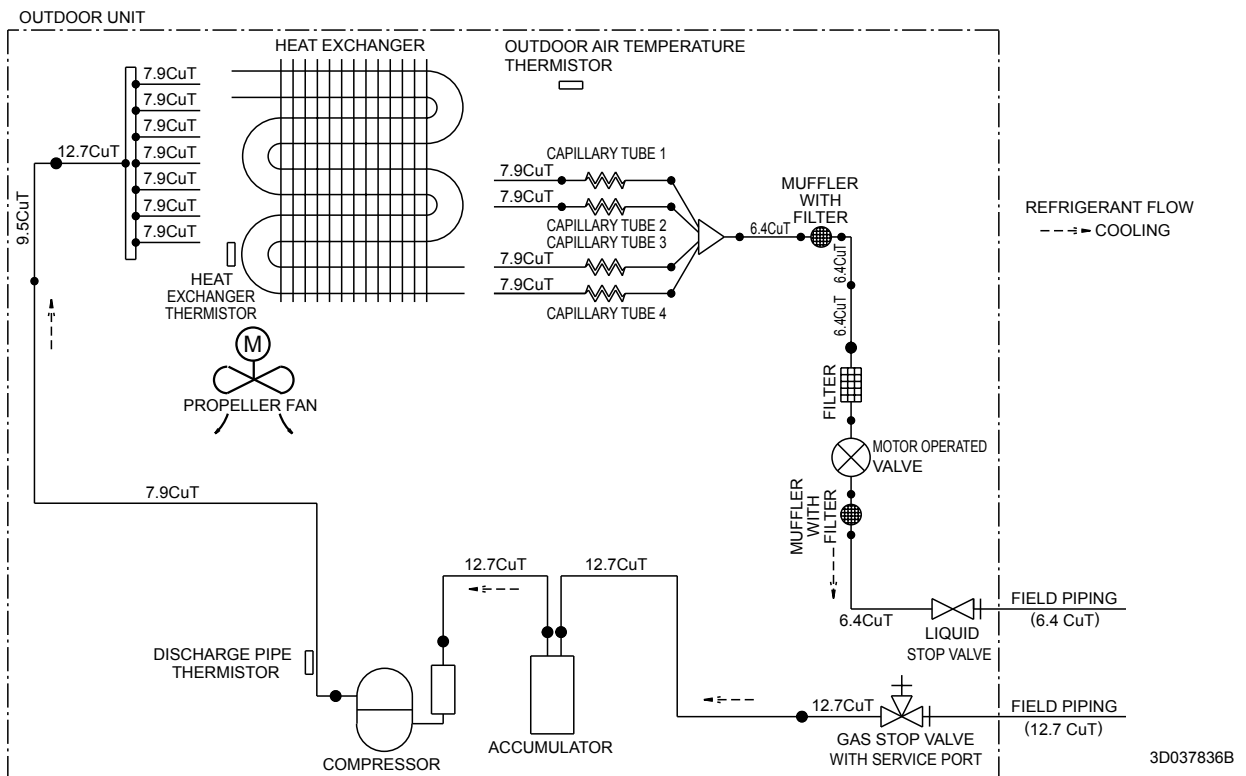


RKS71BVMA, RKS71BVMB(9), RKS71B2VMB, RKS71B3VMB

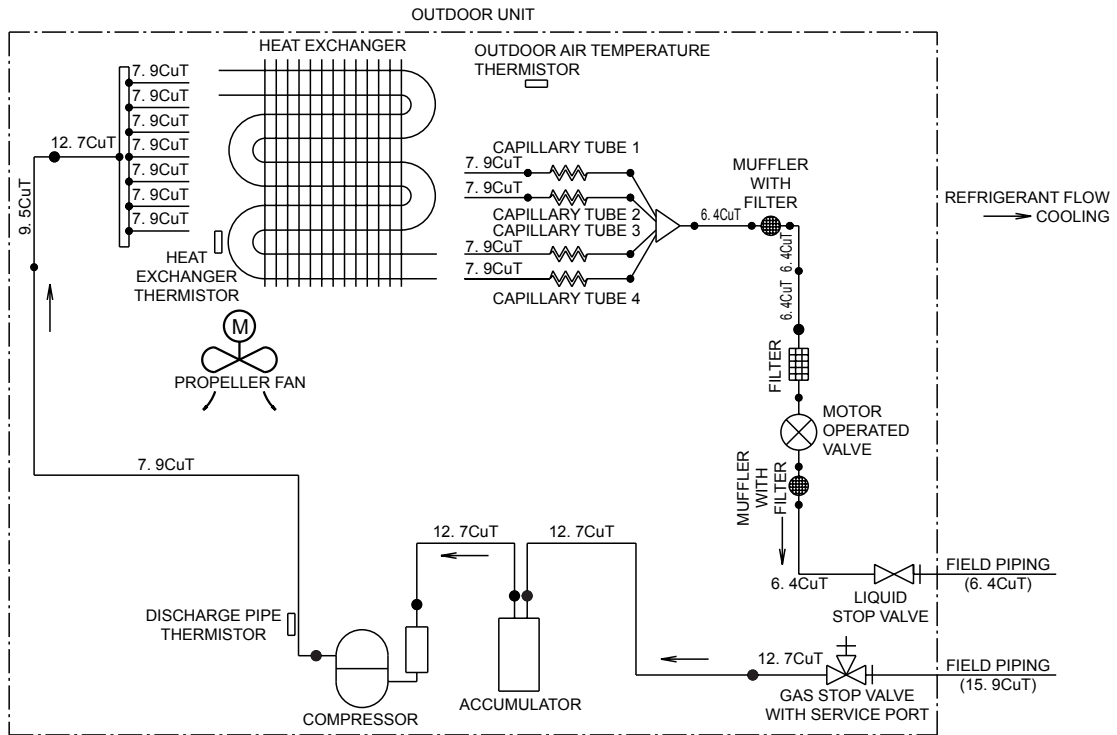


3D049272A

RKD50BVM, RKD50BVMA, RKD50BVMT

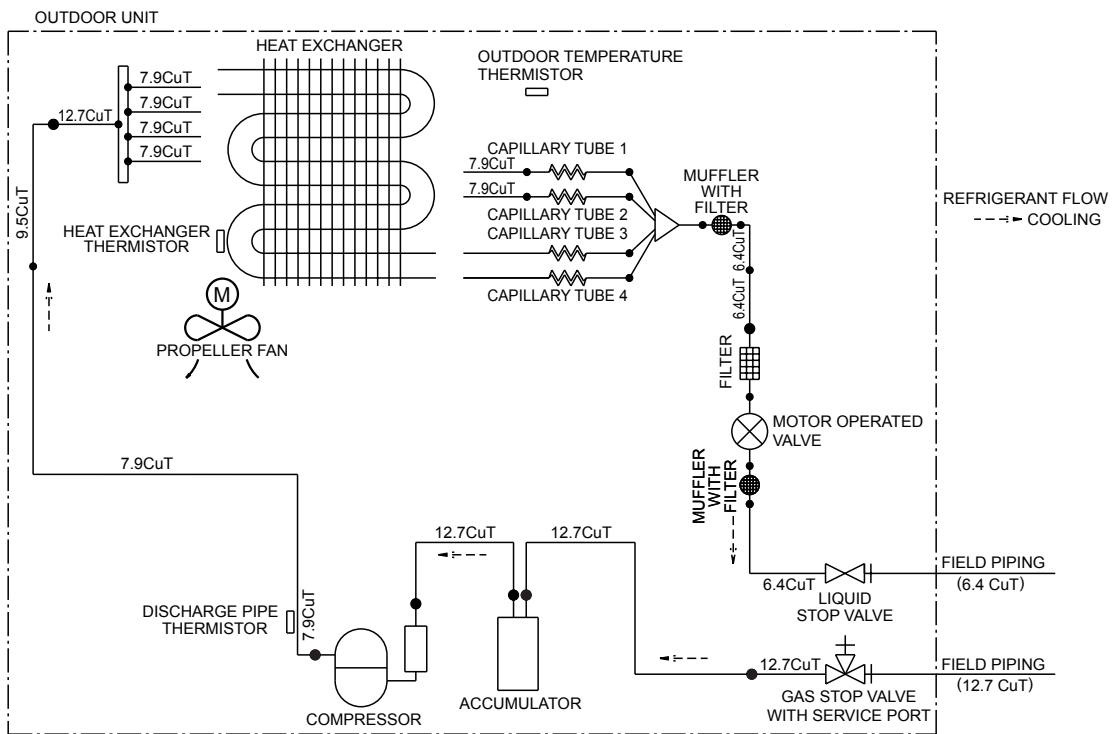


3D037851B

RKD60BVM, RKD60BVMA, RKD60BVMT, RKD18BVMS

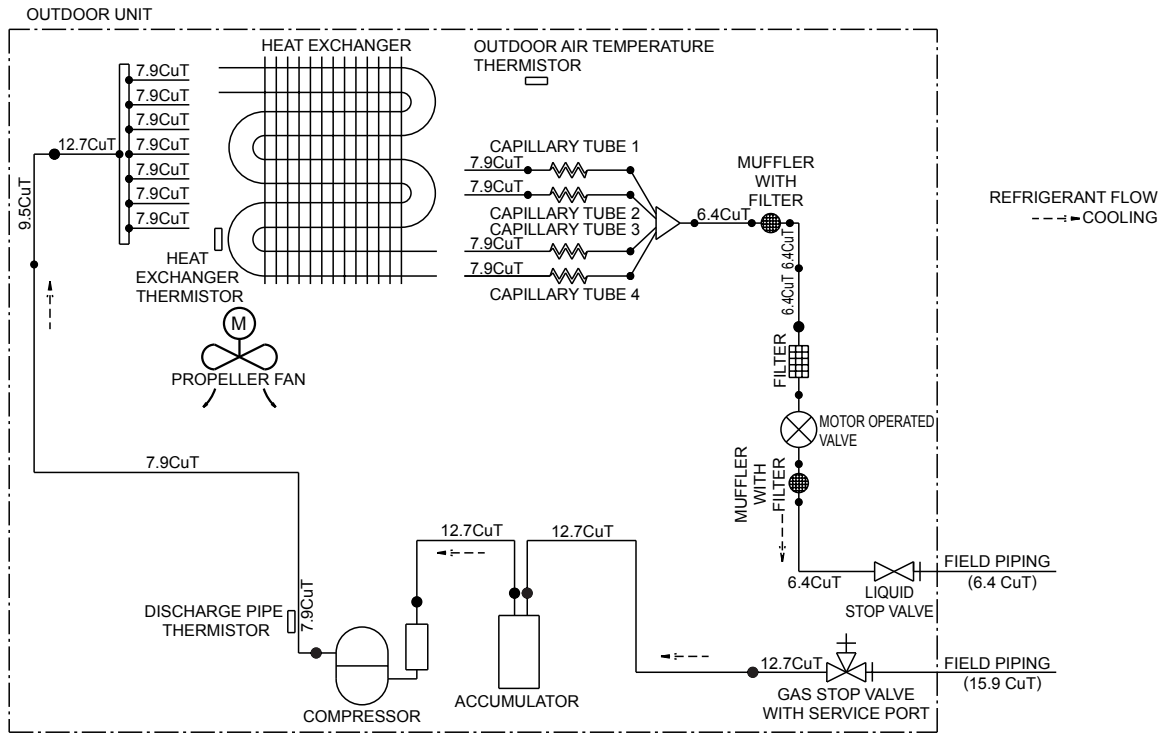


RKD71BVM, RKD71BVMA, RKD71BVMT, RKD24/28BVMS

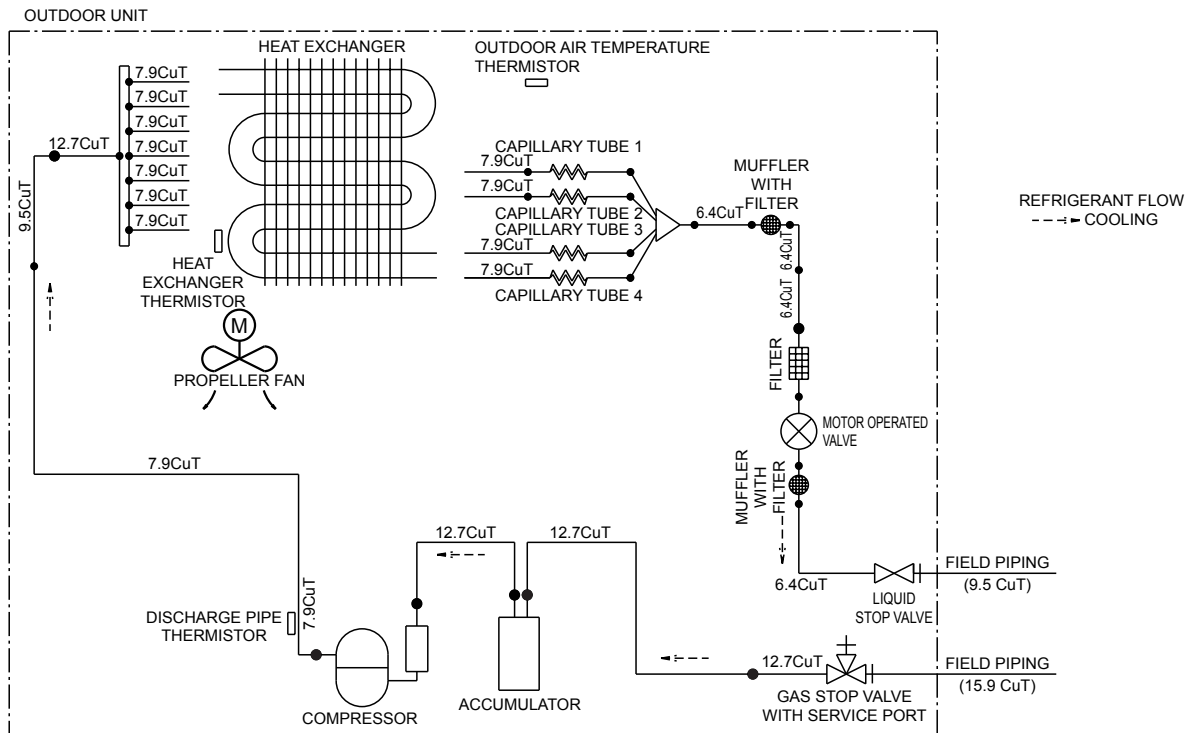


1.2.2 Heat Pump


RXS50BVMA, RXS50B(2)VMB, RYS50B(2)VMB, ARXS50C(2)VMB

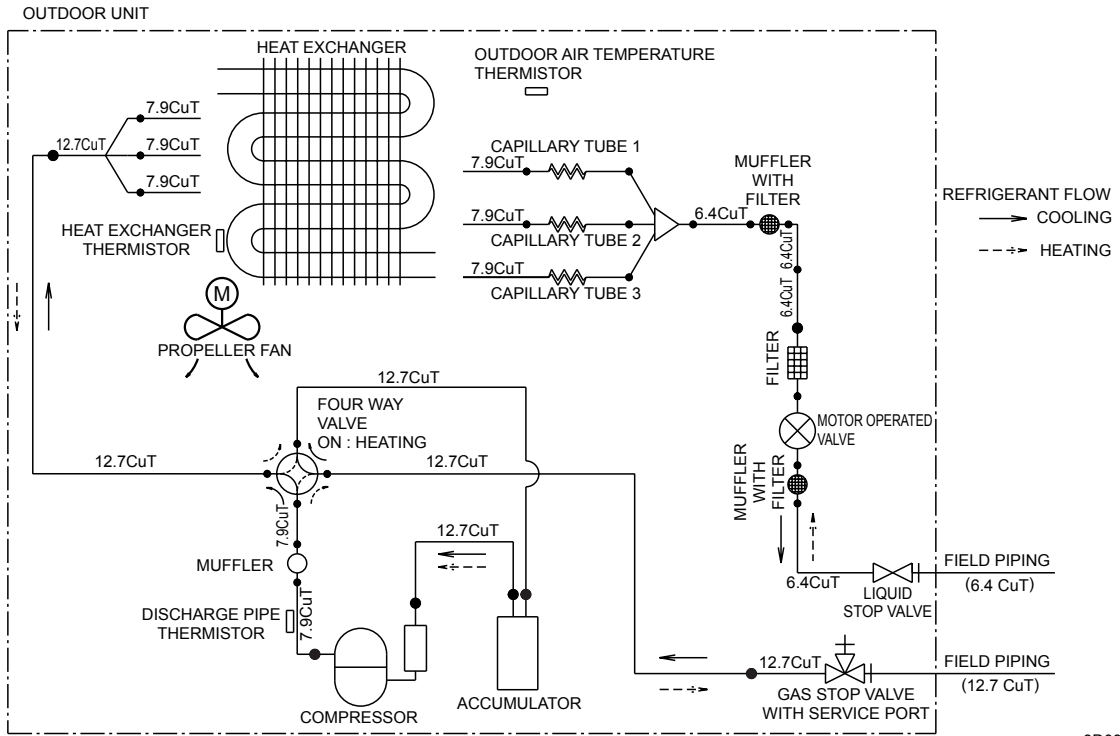

RXS60BVMA, RXS60B(2)VMB, RYS60B(2)VMB

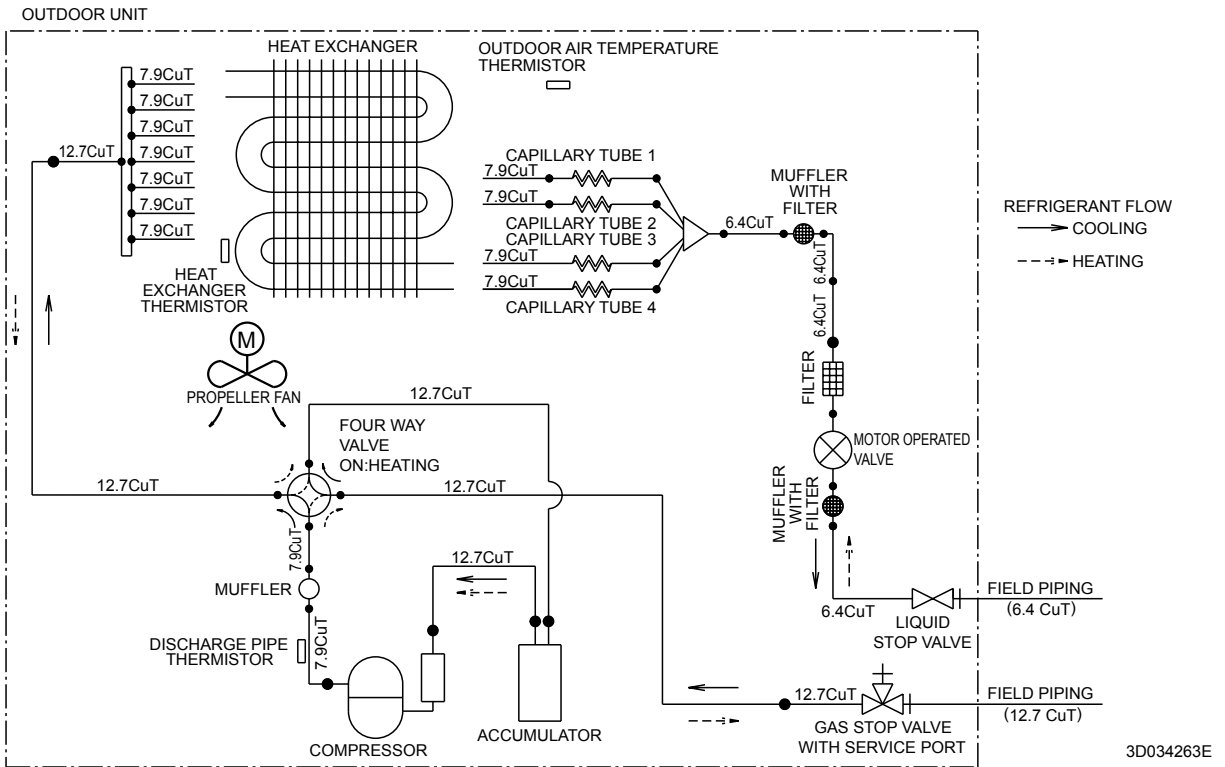


RXS71BVMA, RXS71BVMB, RXS71B2VMB, RXS71B3VMB

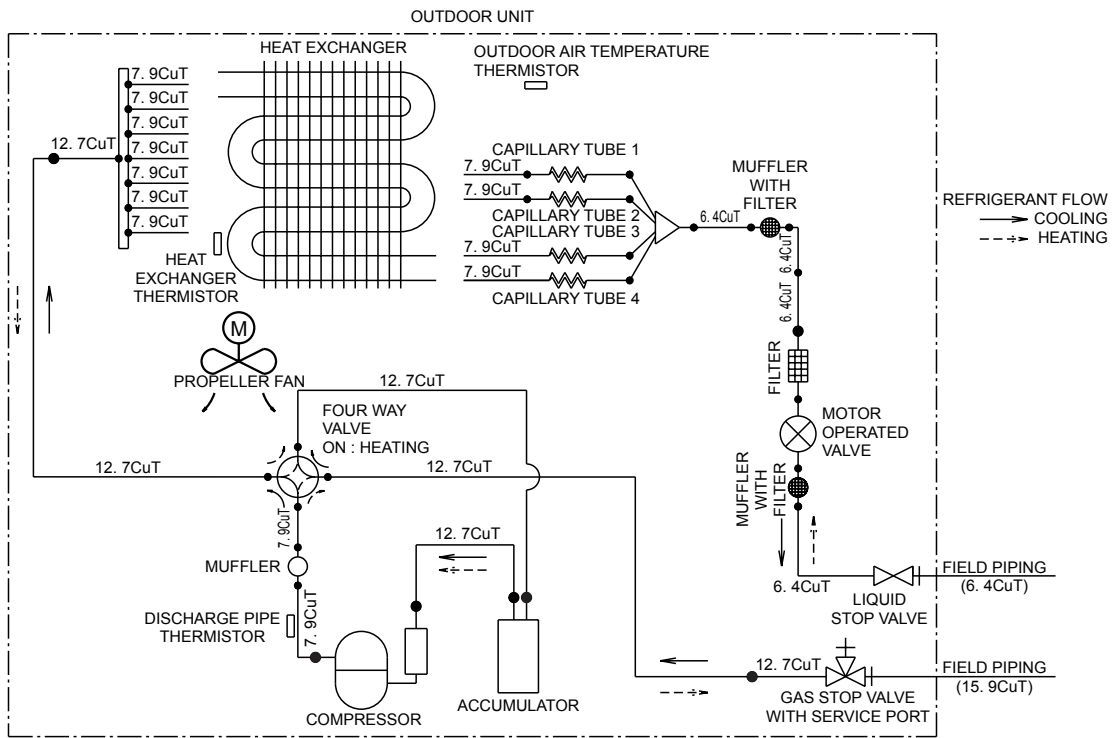


3D049271A

RXD50BVMA, RXD50BVMT, RXD50BV4

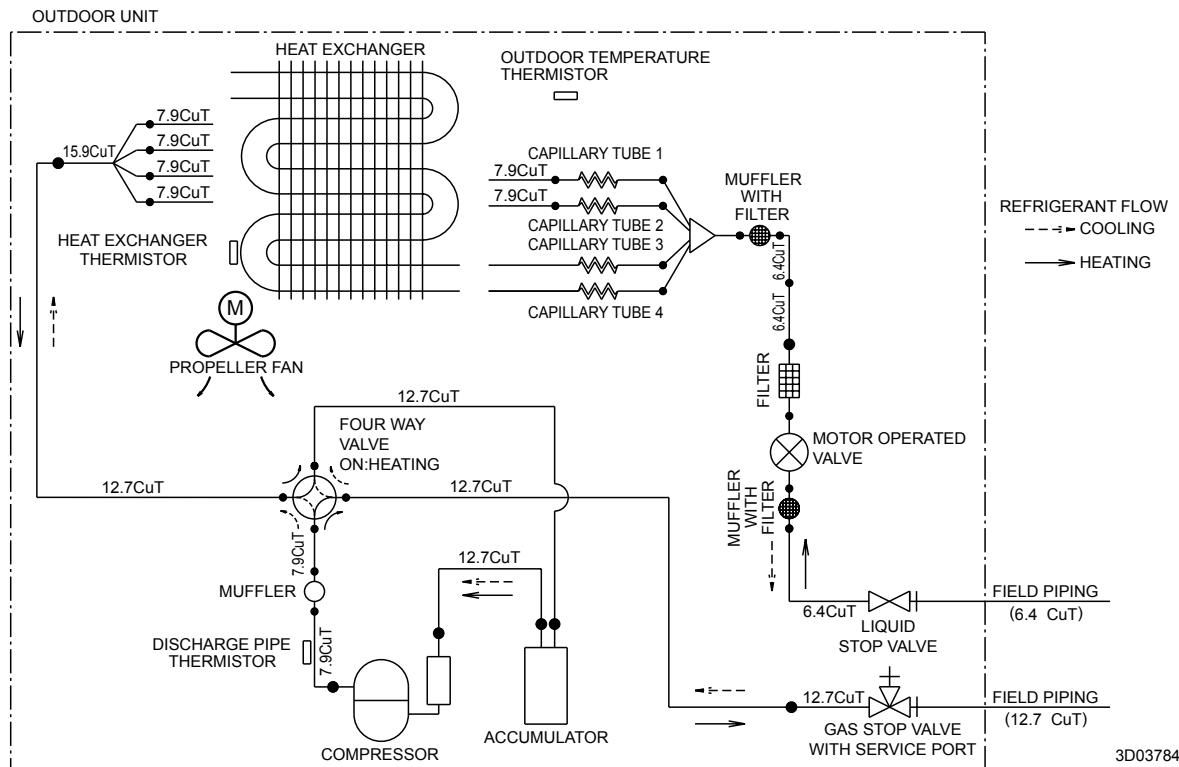


3D037849C

RXD60BVMA, RXD60BVMT

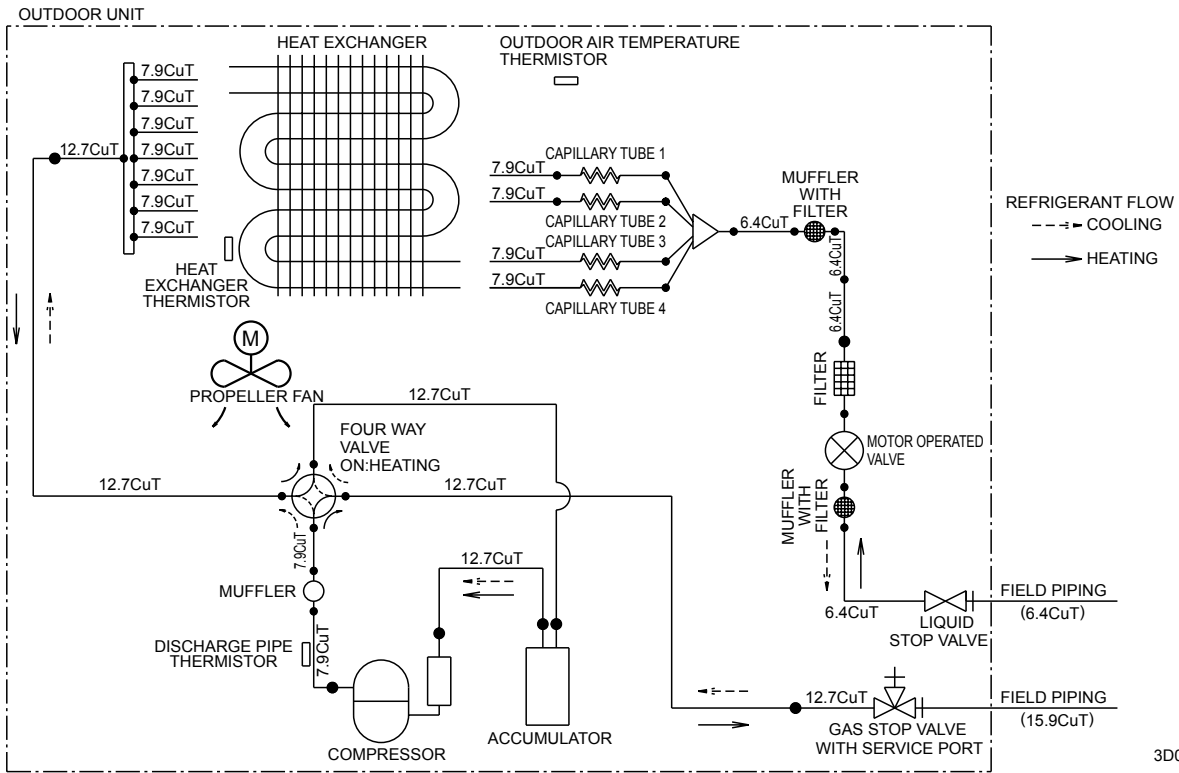


RXD71BVMA, RXD71BVMT, RXD80CV4

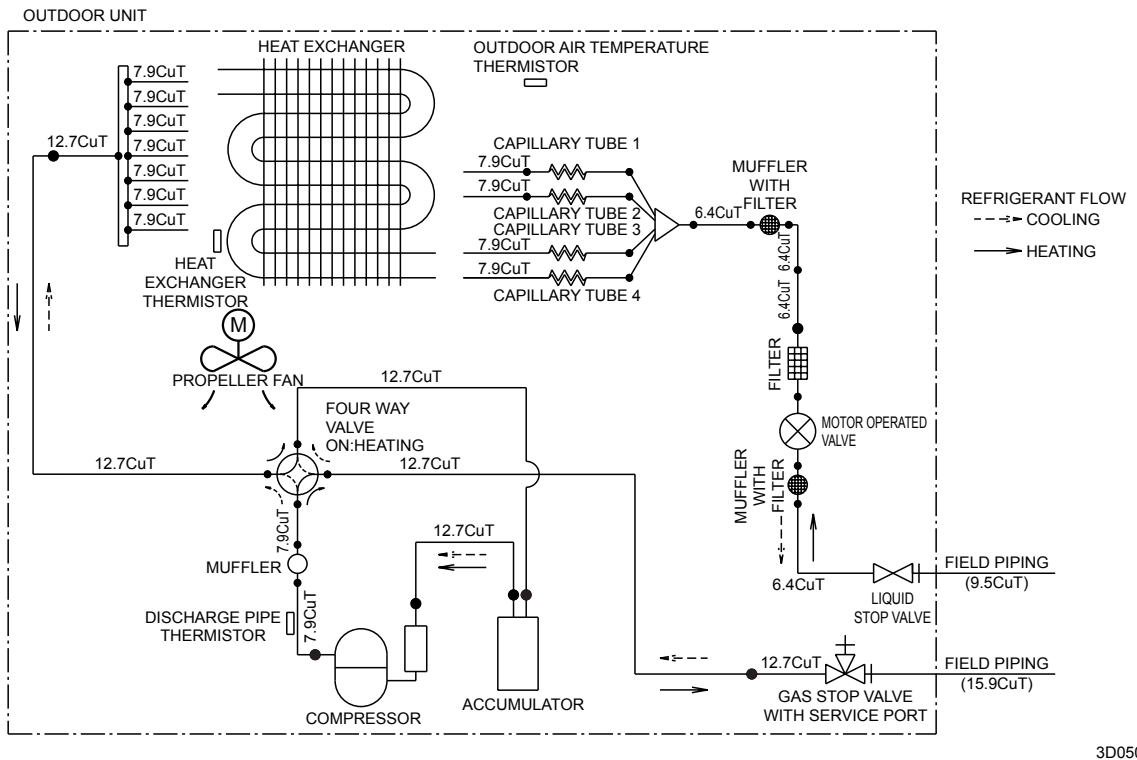


2. Wiring Diagrams

2.1 Indoor Units


FTK(X)S50BVMA, FTK(X)S50BVMB, ATXS50CVMB, ATXS50DVMB, FTXD50BV4

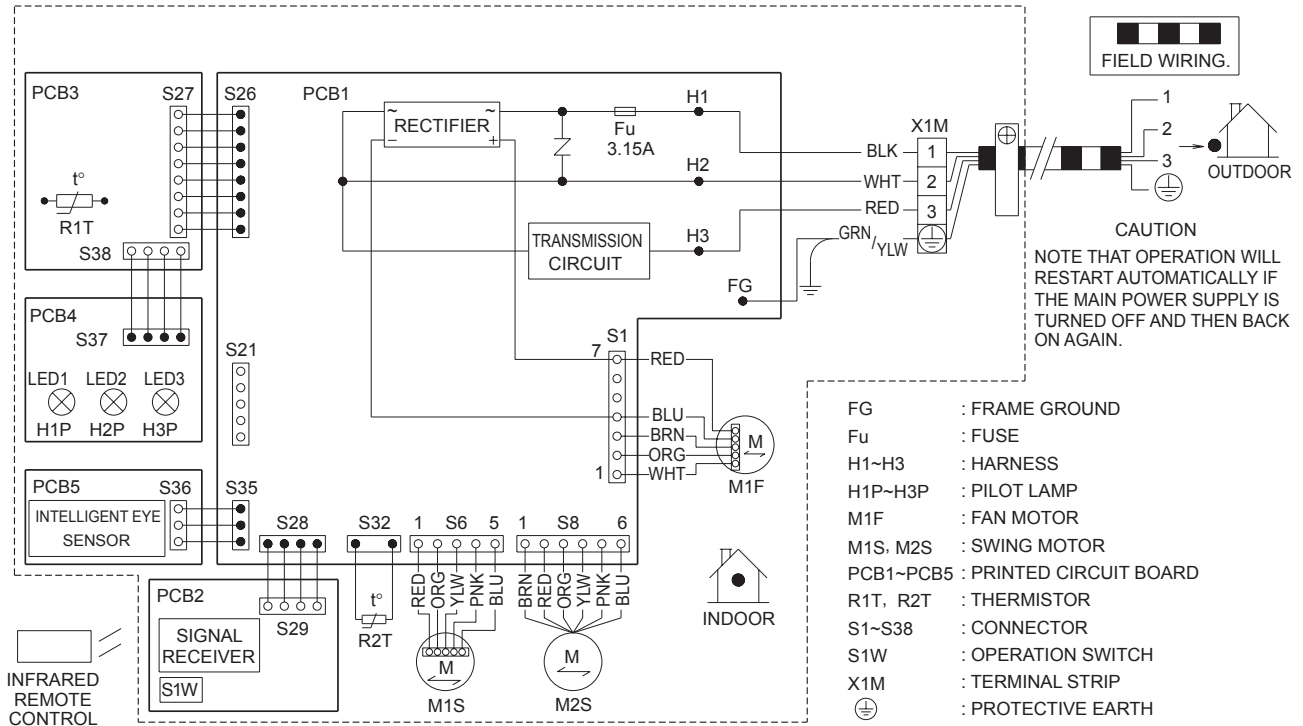

FTK(X)S60/71BVMA, FTK(X)S60/71BVMB
 FTKD50/60/71BVM, FTK(X)D50/60/71BVMA, FTK(X)D50/60/71BVMT, FTXD80CV4
 FTK(X)S71BAVMB

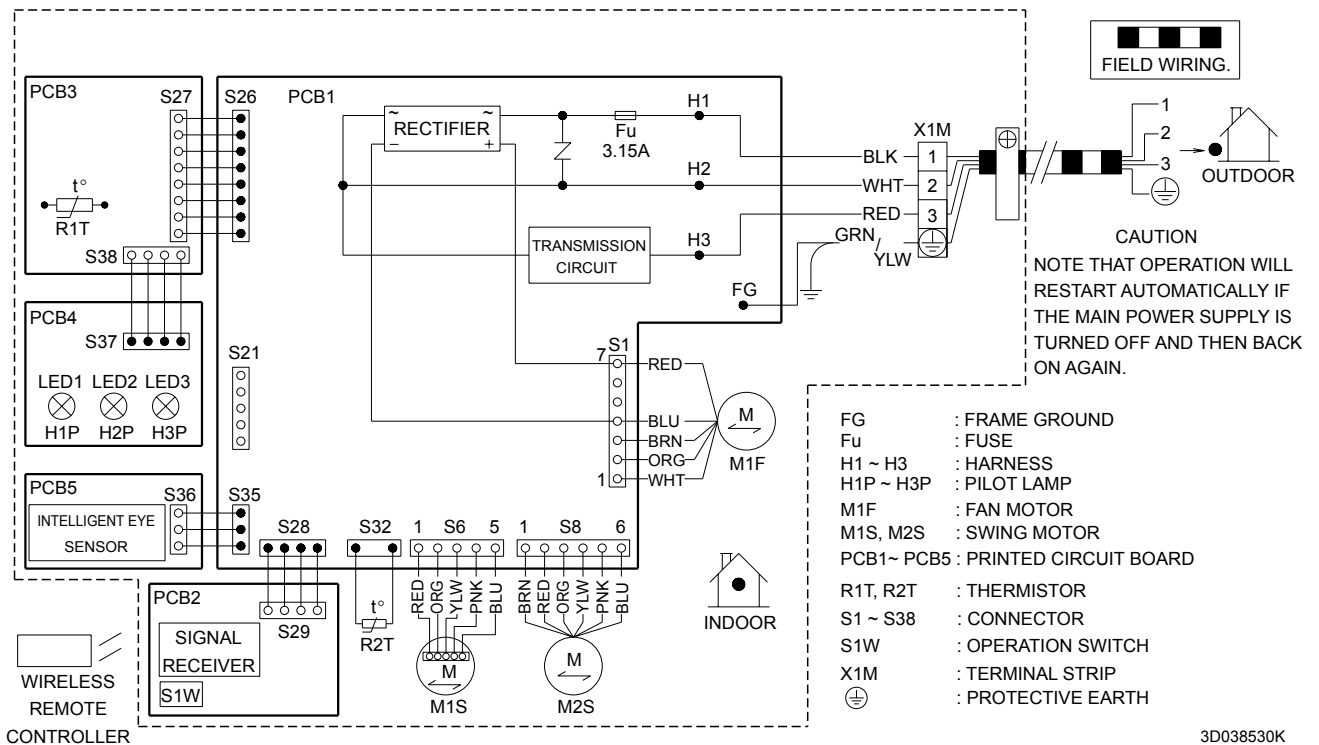


FT(Y)S50BVMB

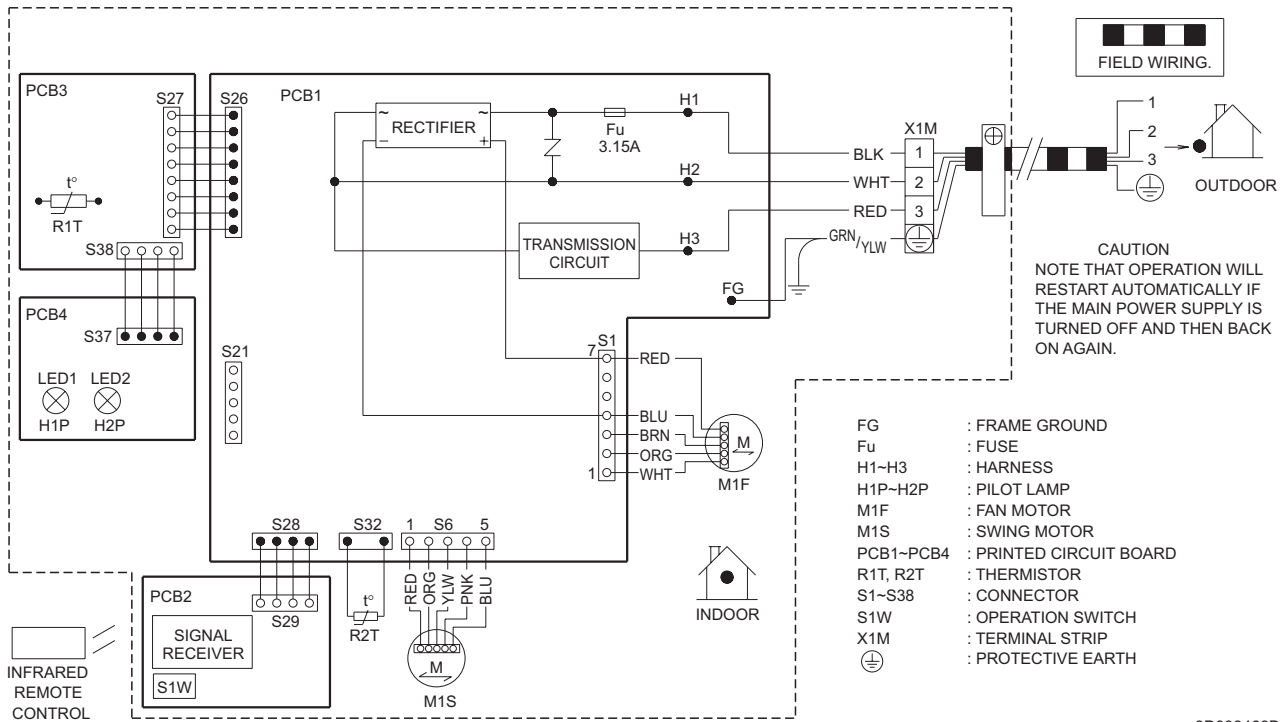


3D038466B

FT(Y)S60BVMB

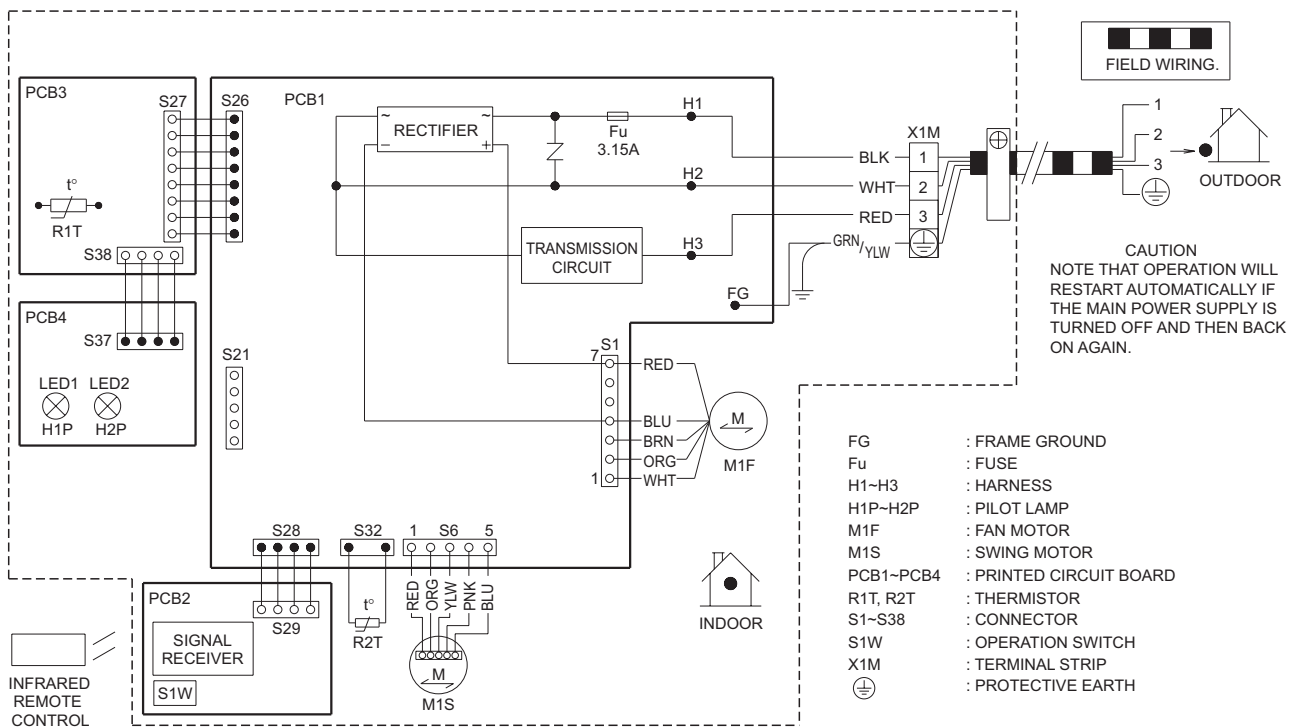

3D038532C


FTKD18/24/28BVMS

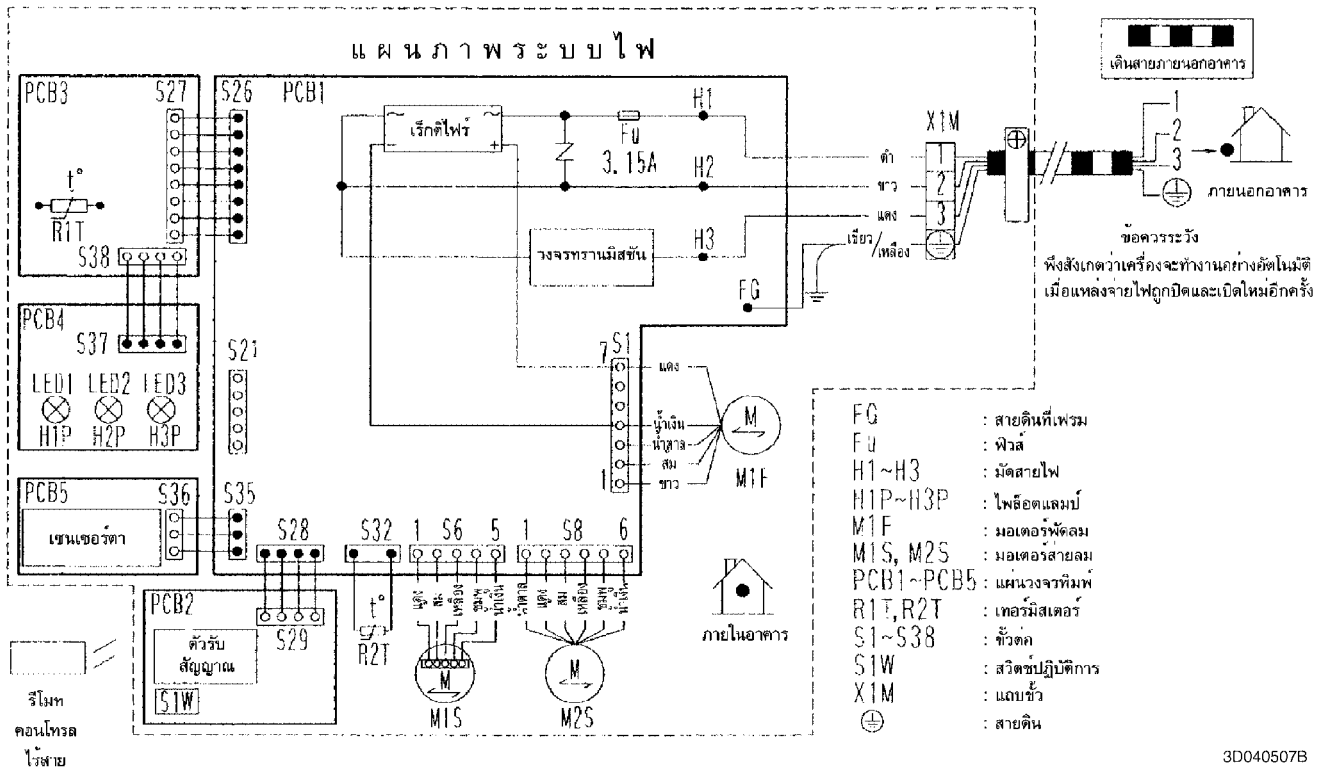


3D040507B

2.2 Outdoor Units

RKS50/60/71BVMA, RKS50/60/71BVMB(9), RS50/60B(2)VMB, RKS50/60/71B2VMB
 RKD50/60/71BVM, RKD50/60/71BVMA, RKD50/60/71BVMT, RKS71B3VMB

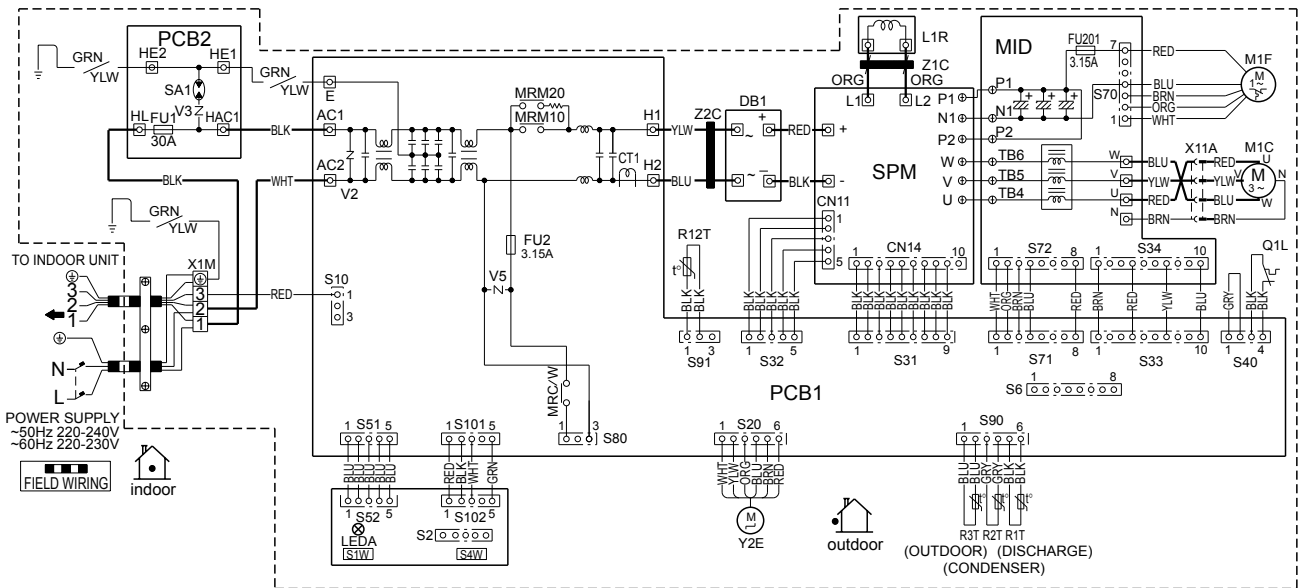


- | | | |
|---------------------------------------------|----------------------------------------|-----------------------------------|
| Z1C, Z2C : FERRITE CORE | S2-S102 : CONNECTOR | Q1L : OVERLOAD PROTECTOR |
| X1M : TERMINAL STRIP | LEDA : PILOT LAMP | Q1L : CURRENT TRANSFORMER |
| Y2E : ELECTRONIC EXPANSION VALVE | PCB1, PCB2 : PRINTED CIRCUIT BOARD | MID : MOLDED INTER CONNECT DEVICE |
| L : LIVE | N : NEUTRAL | SPM : SYSTEM POWER MODULE |
| FU1, FU2, FU201 : FUSE | S1W : FORCED OPERATION ON/OFF SW (SW1) | |
| HE1, HE2, HAC1 : ELECTRONIC EXPANSION VALVE | S4W : LOCAL SETTING SW (SW4) | |
| E, AC1, AC2 : SURGE ARRESTER | SA1 : SURGE ARRESTER | |
| H1, H2, HL : CONNECTOR | DB1 : DIODE BRIDGE | |
| L1, L2, X11A : CONNECTOR | M1C : COMPRESSOR MOTOR | |
| MRM10, MRM20 : MAGNETIC RELAY | M1F : FAN MOTOR | |
| MRC/W : THERMISTOR | L1R : REACTOR | |




3D037866H

RXS50/60/71BVMA, RXS50/60/71B(2)VMB, RYS50/60B(2)VMB, ARXS50C(2)VMB
 RXD50/60/71BVMA, RXD50/60/71BVMT, RXD80CV4, RXD50BV4, RXS71B3VMB

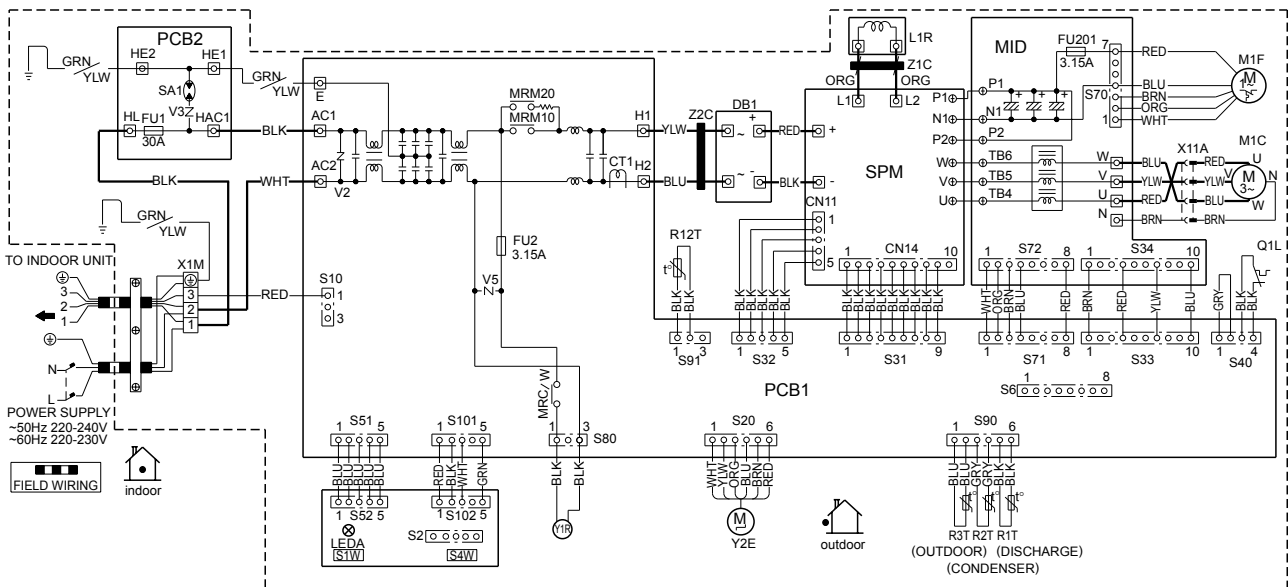


- | | | |
|---------------------------------------------|----------------------------------------|-----------------------------------|
| Z1C, Z2C : FERRITE CORE | S2-S102 : CONNECTOR | L1R : REACTOR |
| X1M : TERMINAL STRIP | LEDA : PILOT LAMP | Q1L : OVERLOAD PROTECTOR |
| Y2E : ELECTRONIC EXPANSION VALVE | PCB1, PCB2 : PRINTED CIRCUIT BOARD | Q1L : CURRENT TRANSFORMER |
| L : LIVE | N : NEUTRAL | MID : MOLDED INTER CONNECT DEVICE |
| FU1, FU2, FU201 : FUSE | S1W : FORCED OPERATION ON/OFF SW (SW1) | SPM : SYSTEM POWER MODULE |
| HE1, HE2, HAC1 : ELECTRONIC EXPANSION VALVE | S4W : LOCAL SETTING SW (SW4) | |
| E, AC1, C2 : SURGE ARRESTER | SA1 : SURGE ARRESTER | |
| H1, H2, HL : CONNECTOR | Y1R : REVERSING SOLENOID VALVE COIL | |
| L1, L2, X11A : CONNECTOR | DB1 : DIODE BRIDGE | |
| MRM10, MRM20 : MAGNETIC RELAY | M1C : COMPRESSOR MOTOR | |
| MRC/W : THERMISTOR | M1F : FAN MOTOR | |



3D037854J

RKD18/24/28BVMS

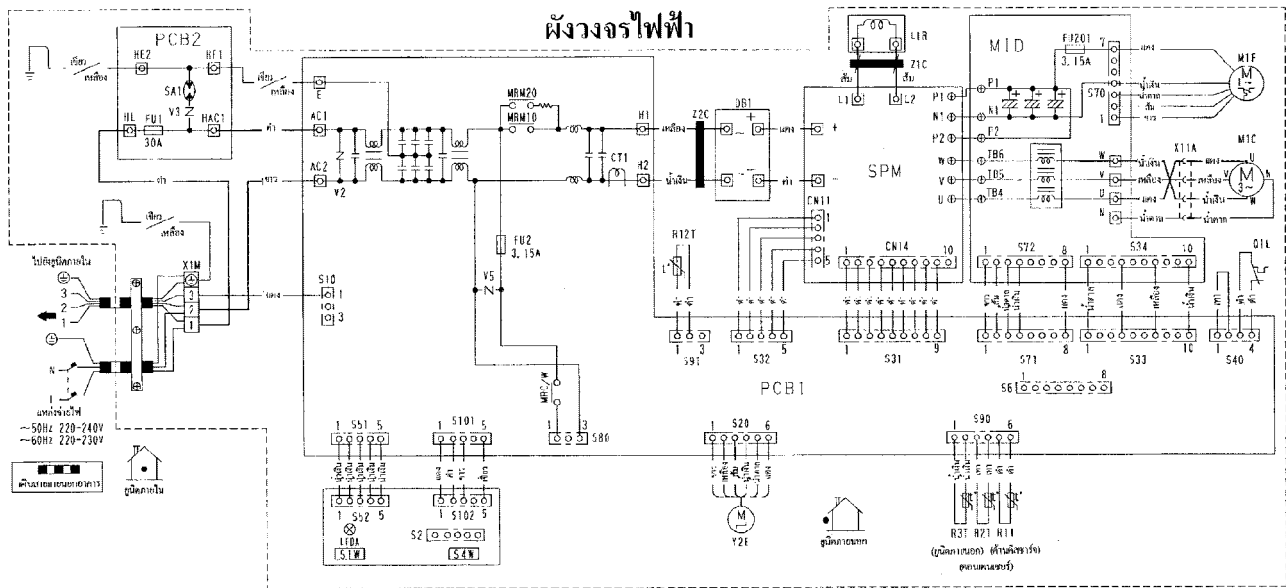

- | | | |
|-------------------------------------|------------------------------------|-------------------------------------|
| Z2C, Z2C : หม้อแปลงไฟฟ้า | S2-S102 : จุดต่อสายไฟ | Q1L : ตัวป้องกันโหลดเกิน |
| X1M : ตัวต่อสายไฟ | F1201A : ฟิลเตอร์ไฟ | CT1 : หม้อแปลงกระแส |
| Y2E : วงจรควบคุมการทำงานด้วยไฟฟ้า | PCB1, PCB2 : แผงรวมวงจรไฟฟ้า | MID : ชุดประกอบวงจรภายในแบบพิมพ์รูป |
| V2-V5 : รีเลย์ต่อสวิตช์ | L : โหลด | SPM : โมดูลระบบอิเล็กทรอนิกส์ไฟฟ้า |
| FU1, FU2, FU201 : ฟิวส์ | N : นิวทรัล | |
| IE1, IE2, IAC1 : รีเลย์ | SAW : ตัวจับสัญญาณเสียงเตือน (SW1) | |
| H, AC1, AC2 : รีเลย์ | S4W : ตัวจับสัญญาณเสียงเตือน (SW4) | |
| H1, H2, HL : รีเลย์ | SA : อุปกรณ์ป้องกันไฟกระชาก | |
| L1, L2, X11A : ชุดต่อสายไฟ | DB1 : แบตเตอรี่ไดโอด | |
| MRM10, MRM20 : ตัววัดค่าแรงดันไฟฟ้า | MIC : มอเตอร์ควบคุมการเคลื่อนที่ | |
| MRC5W : ตัววัดอุณหภูมิ | M1F : มอเตอร์พัดลม | |
| R1F-R1T : ตัววัดอุณหภูมิ | L1R : ตัวเหนี่ยวนำ | |



3D040606C

Index

Numerics

00	107
3 minutes stand-by	54, 60
3-D airflow	44

A

A1	108
A5	109
A6	111
AC1	38, 176
AC2	38, 177
accumulator	189
address setting jumper	36
air filter	54, 148
air flow direction	83
air purifying filter with photocatalytic deodorizing function	54, 149
ARC433A series	104
AUTO · DRY · COOL · HEAT · FAN operation	81
automatic air flow control	45
automatic operation	47
auto-restart function	54
auto-swing	44
auxiliary piping	162

B

bearing	165
blades	153
buzzer PCB	37

C

C4	113
C9	113
cable way board	175
capacitor voltage check	145
care and cleaning	93
centralized control	36
check	
capacitor voltage check	145
discharge pressure check	143
electronic expansion valve check	139
fan motor connector output check	139
four way valve performance check	140
installation condition check	142
inverter units refrigerant system check	144
main circuit electrolytic capacitor check	146
outdoor unit fan system check	143
power supply waveforms check	144
power transistor check	145
thermistor resistance check	141
turning speed pulse input on the outdoor unit PCB check	146
check No.01	139
check No.04	139
check No.05	140
check No.06	141

check No.07	142
check No.08	143
check No.09	143
check No.10	144
check No.11	144
check No.12	145
check No.13	145
check No.14	146
check No.15	146
clamp plate	167
CN11	38, 178
CN14	38, 178
compressor	189
compressor lock	116
compressor overload	115
compressor protection function	60
connectors	36, 38
control PCB (indoor unit)	37, 108, 159
control PCB (outdoor unit)	39, 178
CT or related abnormality	126

D

DC fan lock	117
defrost control	64
diagnosis mode	105
diode bridge	38
discharge grille	166
discharge pipe	66
discharge pipe temperature control	61, 67, 122
discharge pipe thermistor	55, 56, 66, 129, 184
discharge pressure check	143
display PCB	37
drain	161
drip proof plate	155

E

E	38, 176
E5	115
E6	116
E7	117
E8	118
EA	120
earth	155, 174
electrical box	156, 181
electrical box cover	170
electrical box temperature rise	130
electronic expansion valve	187
electronic expansion valve check	139
electronic expansion valve coil	187
electronic expansion valve control	65
error codes	
00	107
A1	108
A5	109
A6	111
C4	113

C9	113	H6	125
E5	115	H8	126
E6	116	H9	128
E7	117	HA	36, 159
E8	118	HAC1	38, 176
EA	120	Hall IC	45, 111
F3	122	HE1	38, 176
F6	123	HE2	38, 176
H6	125	heat exchanger	163, 166
H8	126	heating peak-cut control	62
H9	128	high pressure control	109
J3	128	high pressure control in cooling	123
J6	128	HL	38, 176
L3	130	HOME LEAVE operation	52, 87
L4	132	horizontal blade	153
L5	134	hot start function	54
P4	128		
U0	136	I	
U2	138	indoor heat exchanger thermistor ...	55, 56, 113, 155
U4	114	indoor unit PCB abnormality	108
error codes and description	107	input current control	61
		input over current detection	118
F		installation condition check	142
F3	122	insufficient gas	136
F6	123	insufficient gas control	68
facility setting switch	70	INTELLIGENT EYE	50
fan control	63	INTELLIGENT EYE operation	89
fan motor	165, 172	INTELLIGENT EYE sensor PCB	37
fan motor (DC motor) or related abnormality	111	inverter POWERFUL operation	53
fan motor connector output check	139	inverter principle	42
fan motor fixture	164	inverter units refrigerant system check	144
fan rotor	165		
fan speed control	45	J	
fan speed setting	36, 193	J3	128
field setting switch	38	J4	193
forced cooling operation	43	J6	128
forced operation mode	69	JA	36, 193
forced operation ON/OFF switch	36, 38	JB	36, 193
four way valve	186	JC	36, 193
four way valve abnormality	120	jumper settings	193
four way valve coil	186		
four way valve operation compensation	60	L	
four way valve performance check	140	L1	38
four way valve switching	60	L2	38
freeze-up protection control	62, 109	L3	130
frequency control	42, 58	L4	132
frequency principle	42	L5	134
front grille	151	LED A	36, 38
front panel	148, 167	LED1	36
FU1	36, 38	LED2	36
FU2	38	LED3	36
FU201	38	liquid compression protection function 2	63
functions, list of	2	liquid piping	161
fuse	36, 38	list of functions	2
		low Hz high pressure limit	64
G		lower limit for cooling	38, 70
gas piping	161	low-voltage detection	138
H		M	
H1	38	main circuit electrolytic capacitor check	146
H2	38	MID	40

mode hierarchy	57
mold proof air filter	54
mounting plate for the bearing	165

N

names of parts	75
night set mode	49

O

OL activation	115
ON/OFF button on indoor unit	54
operation lamp	102
outdoor air thermistor	129
outdoor heat exchanger thermistor	55, 56, 129, 184
outdoor unit fan system check	143
OUTDOOR UNIT SILENT operation	86
output over current detection	134
over current	68, 118
overload	68, 115

P

P4	128
partition plate	182
PI control	59
pipng diagrams	196
pipng fixture	162
position sensor abnormality	125
power failure recovery function	36, 193
power supply PCB	39, 176
power supply waveforms check	144
power transistor check	145
power-airflow dual flaps	44
POWERFUL operation	53, 69, 85
preheating operation	60
preparation before operation	78
printed circuit board (PCB)	
buzzer PCB	37
control PCB (indoor unit)	37, 108, 159
control PCB (outdoor unit)	39, 178
display PCB	37
INTELLIGENT EYE sensor PCB	37
MID	40
power supply PCB	39, 176
service monitor PCB	39, 175
signal receiver PCB	37
SPM	40
problem symptoms and measures	103
programme dry function	46
propeller fan	172

R

radiation fin temperature rise	132
radiation fin thermistor	129
reactor	183
receiver units	158
remote control	104
right side panel	164, 174
room temperature thermistor	113
RTH1	36

S

S1	36, 156, 159
S10	38, 177, 178
S101	38, 177, 178
S102	38, 178
S20	38, 176, 178
S21	36, 159
S26	36, 159
S27	36
S28	36
S29	36
S31	38, 178
S32	36, 38, 159, 178
S33	38, 178
S34	38, 178
S35	36
S36	36
S37	36
S38	36
S40	38, 176, 178
S51	38, 177, 178
S52	38, 178
S6	36, 156
S70	38, 171
S71	38, 178
S72	38, 178
S8	36, 156
S80	38, 176, 178
S90	38, 176, 178
S91	38, 178
self-diagnosis digital display	54
sensor malfunction detection	68
service check function	104
service cover	151
service monitor LED	36
service monitor PCB	39, 175
shelter	157, 170
signal receiver	148
signal receiver PCB	37
signal receiving sign	54
signal transmission error	114
sound blanket	185
specifications	14
SPM	40
stop valve cover	169
SW1	36, 38
SW4	38
swing motor assembly	160
swing motor for horizontal blades	159
swing motor for vertical blades	160
switch B	38, 70

T

terminal cover	188
terminal strip	108, 156, 174
test run	192
thermistor	
discharge pipe thermistor ...	55, 56, 66, 129, 184
indoor heat exchanger	
thermistor	55, 56, 113, 155
outdoor air thermistor	129

outdoor heat exchanger	
thermistor	55, 56, 129, 184
radiation fin thermistor	129
room temperature thermistor	113
thermistor or related abnormality (indoor unit)	113
thermistor or related abnormality (outdoor unit)	128
thermistor resistance check	141
thermostat control	48
TIMER operation	91
top panel	166
troubleshooting	96, 107
troubleshooting with the LED indication	102
turning speed pulse input on the outdoor unit PCB	
check	146

U

U0	136
U2	138
U4	114

V

V1	36
V3	38
varistor	36, 38
vertical blades	154
voltage detection function	69

W

wide-angle louvres	44
wiring diagrams	203

Drawings & Flow Charts

A		
ARC433A series	104	
automatic air flow control	45	
automatic operation	47	
auto-swing	44	
B		
buzzer PCB	37	
C		
capacitor voltage check	145	
check No.01	139	
check No.04	139	
check No.05	140	
check No.06	141	
check No.07	142	
check No.08	143	
check No.09	143	
check No.10	144	
check No.11	144	
check No.12	145	
check No.13	145	
check No.14	146	
check No.15	146	
compressor lock	116	
compressor protection function	60	
control PCB (indoor unit)	37	
control PCB (outdoor unit)	39	
CT or related abnormality	126	
D		
DC fan lock	117	
defrost control	64	
diagnosis mode	105	
discharge pipe temperature control	61, 122	
discharge pressure check	143	
display PCB	37	
E		
electrical box temperature rise	130	
electronic expansion valve check	139	
electronic expansion valve control	65	
F		
facility setting switch	70	
fan motor (DC motor) or related abnormality	111	
fan motor connector output check	139	
four way valve abnormality	120	
four way valve performance check	140	
freeze-up protection control	62	
freeze-up protection control or high pressure control	109	
frequency control	58	
frequency principle	42	
H		
heating peak-cut control	62	
high pressure control in cooling	123	
HOME LEAVE operation	52	
I		
indoor unit PCB abnormality	108	
input current control	61	
input over current detection	118	
installation condition check	142	
insufficient gas	136	
insufficient gas control	68	
INTELLIGENT EYE	50	
INTELLIGENT EYE sensor PCB	37	
inverter features	43	
inverter POWERFUL operation	53	
inverter units refrigerant system check	144	
J		
jumper settings	193	
L		
low Hz high pressure limit	64	
low-voltage detection	138	
M		
main circuit electrolytic capacitor check	146	
MID	40	
mode hierarchy	57	
N		
night set mode	49	
O		
OL activation (compressor overload)	115	
ON/OFF button on indoor unit	54	
operation lamp, location	102	
outdoor unit fan system check (with DC motor) ..	143	
output over current detection	134	
P		
piping diagrams		
ARXS50C(2)VMB	200	
ATXS50CVMB	196	
ATXS50DVMB	196	
FT(Y)S50/60BVMB	196	
FTK(X)D50BVMA	196	
FTK(X)D50BVMT	196	
FTK(X)D71BVMA	196	
FTK(X)D71BVMT	196	
FTK(X)S50/60BVMA	196	
FTK(X)S50/60BVMB	196	
FTKD18BVMS	196	
FTKD24/28BVMS	196	
FTKD50BVM	196	

FTKD60BVM	196
FTKD60BVMA	196
FTKD60BVMT	196
FTKD71BVM	196
FTKS71BAVMB	196
FTKS71BVMA	196
FTKS71BVMB	196
FTXD50BV4	196
FTXD60BVMA	196
FTXD60BVMT	196
FTXD80CV4	196
FTXS71BAVMB	196
FTXS71BVMA	196
FTXS71BVMB	196
RKD18BVMS	199
RKD24/28BVMS	199
RKD50BVM	198
RKD50BVMA	198
RKD50BVMT	198
RKD60BVM	199
RKD60BVMA	199
RKD60BVMT	199
RKD71BVM	199
RKD71BVMA	199
RKD71BVMT	199
RKS50B2VMB	197
RKS50BVMA	197
RKS50BVMB(9)	197
RKS60B2VMB	197
RKS60BVMA	197
RKS60BVMB(9)	197
RKS71B2VMB	198
RKS71B3VMB	198
RKS71BVMA	198
RKS71BVMB(9)	198
RS50B(2)VMB	197
RS60B(2)VMB	197
RXD50BV4	201
RXD50BVMA	201
RXD50BVMT	201
RXD60BVMA	202
RXD60BVMT	202
RXD71BVMA	202
RXD71BVMT	202
RXD80CV4	202
RXS50B(2)VMB	200
RXS50BVMA	200
RXS60B(2)VMB	200
RXS60BVMA	200
RXS71B2VMB	201
RXS71B3VMB	201
RXS71BVMA	201
RXS71BVMB	201
RYS50B(2)VMB	200
RYS60B(2)VMB	200
position sensor abnormality	125
power supply PCB	39
power supply waveforms check	144
power transistor check	145
programme dry function	46
R	
radiation fin temperature rise	132
remote control	104
S	
service monitor PCB	39
signal receiver PCB	37
signal transmission error (between indoor and outdoor units)	114
SPM	40
T	
target discharge pipe temperature control	67
thermistor	
cooling only model	56
heat pump model	55
thermistor or related abnormality (indoor unit)	113
thermistor or related abnormality (outdoor unit)	128
thermistor resistance check	141
thermostat control	48
trial operation from remote control	192
troubleshooting with the LED indication	102
turning speed pulse input on the outdoor unit PCB check	146
W	
wiring diagrams	
ARXS50C(2)VMB	206
ATXS50CVMB	203
ATXS50DVMB	203
FT(Y)S50BVMB	204
FT(Y)S60BVMB	204
FTK(X)D50/60/71BVMA	203
FTK(X)D50/60/71BVMT	203
FTK(X)S50BVMA	203
FTK(X)S50BVMB	203
FTK(X)S60/71BVMA	203
FTK(X)S60/71BVMB	203
FTK(X)S71BAVMB	203
FTKD18/24/28BVMS	205
FTKD50/60/71BVM	203
FTXD50BV4	203
FTXD80CV4	203
RKD18/24/28BVMS	207
RKD50/60/71BVM	206
RKD50/60/71BVMA	206
RKD50/60/71BVMT	206
RKS50/60/71B2VMB	206
RKS50/60/71BVMA	206
RKS50/60/71BVMB(9)	206
RKS71B3VMB	206
RS50/60B(2)VMB	206
RXD50/60/71BVMA	206
RXD50/60/71BVMT	206
RXD50BV4	206
RXD80CV4	206
RXS50/60/71B(2)VMB	206
RXS50/60/71BVMA	206
RXS71B3VMB	206
RYS50/60B(2)VMB	206

In all of us,
a green heart



Daikin's unique position as a manufacturer of air conditioning equipment, compressors and refrigerants has led to its close involvement in environmental issues. For several years Daikin has had the intension to become a leader in the provision of **products that have limited impact on the environment.**

This challenge demands the eco design and development of a wide range of products and an energy management system, **resulting in energy conservation and a reduction of waste.**

DAIKIN EUROPE N.V.

Naamloze Vennootschap
Zandvoordestraat 300
B-8400 Oostende, Belgium
www.daikin.eu
BTW: BE 0412 120 336
RPR Oostende



Daikin Europe N.V. is approved by LRQA for its Quality Management System in accordance with the ISO9001 standard. ISO9001 pertains to quality assurance regarding design, development, manufacturing as well as to services related to the product.



ISO14001 assures an effective environmental management system in order to help protect human health and the environment from the potential impact of our activities, products and services and to assist in maintaining and improving the quality of the environment.




Daikin units comply with the European regulations that guarantee the safety of the product.



Daikin Europe N.V. participates in the Eurovent Certification Programme for Air Conditioners (AC), Liquid Chilling Packages (LCP) and Fan Coil Units (FC); the certified data of certified models are listed in the Eurovent Directory.

"The present publication is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V.. Daikin Europe N.V. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Europe N.V."



SiEN04-306D