



Air Conditioning

Technical Data

Floor standing unit



EEDEN13-204

FXLQ-P

TABLE OF CONTENTS

FXLQ-P

1	Features	2
2	Specifications	3
	Technical Specifications	3
	Electrical Specifications	3
3	Safety device settings	5
	Safety Device Settings	5
4	Options	6
	Options	6
5	Capacity tables	7
	Cooling Capacity Tables	7
	Heating Capacity Tables	8
	Capacity Correction Factor	9
6	Dimensional drawings	11
	Dimensional Drawings	11
7	Centre of gravity	13
	Centre of Gravity	13
8	Piping diagrams	14
	Piping Diagrams	14
9	Wiring diagrams	15
	Wiring Diagrams - Single Phase	15
10	Sound data	16
	Sound Pressure Spectrum	16

1 Features

- Stylish modern casing finished in pure white (RAL9010) and iron grey (RAL7011)
- Unit can be installed as free standing model by use of optional back plate
- Its low height enables the unit to fit perfectly beneath a window
- Requires very little installation space
- Wall mounted installation facilitates cleaning beneath the unit where dust tends to accumulate
- Wired remote control can easily be integrated in the unit



3 steps



optional



optional



optional



optional



2 Specifications

2-1 Technical Specifications					FXLQ20P	FXLQ25P	FXLQ32 P	FXLQ40 P	FXLQ50P	FXLQ63P
Cooling capacity	Nom.			kW	2.2 (1)	2.8 (1)	3.6 (1)	4.5 (1)	5.6 (1)	7.1 (1)
Heating capacity	Nom.			kW	2.5 (2)	3.2 (2)	4.0 (2)	5.0 (2)	6.3 (2)	8.000 (2)
Power input - 50Hz	Cooling	Nom.	kW	0.049 (1)		0.090 (1)		0.110 (1)		
	Heating	Nom.	kW	0.049 (2)		0.090 (2)		0.110 (2)		
Power input - 60Hz	Cooling	Nom.	kW	0.047 (1)		0.079 (1)	0.084 (1)	0.105 (1)	0 (1)	
	Heating	Nom.	kW	0.047 (2)		0.079 (2)	0.084 (2)	0.105 (2)	0 (2)	
Casing	Colour				Fresh white (RAL9010) / Dark grey (RAL7011)					
Dimensions	Unit	Height	mm		600					
		Width	mm		1,000		1,140		1,420	
		Depth	mm		232					
	Packed unit	Height	mm		720					
		Width	mm		1,128		1,268		1,548	
		Depth	mm		346					
Weight	Unit		kg	27		32		38		
	Packed unit		kg	32		37		43		
Heat exchanger	Rows	Quantity			3					
	Fin pitch		mm		1.5					
	Face area		m²		0.159		0.200		0.282	
	Stages	Quantity			14					
	Fin	Type			Cross fin coil					
Fan	Type				Sirocco fan					
	Air flow rate - 50Hz	Cooling	High	m³/min	7		8	11	14	16
			Low	m³/min	6		8.5		11	12
	Air flow rate - 60Hz	Cooling	High	m³/min	7		8	11	14	16
			Low	m³/min	6		8.5		11	12
Fan motor	Output	High	W		15		25		35	
	Drive			Direct drive						
Sound pressure level	Cooling	High	dBA		35			38	39	40
		Low	dBA		32			33	34	35
Refrigerant	Type				R-410A					
	Control				Electronic expansion valve					
Piping connections	Liquid	Type		Flare connection						
		OD	mm		6.35					9.52
	Gas	Type		Flare connection						
		OD	mm		12.7					15.9
	Heat insulation				Glass Fiber/Urethane Foam					
	Sound absorbing insulation				Glass fiber / Urethane foam					
Temperature control					Microprocessor thermostat for cooling and heating					
Air filter	Type				Resin net					
Safety devices	Item	01			Fuse					
		02			Fan motor thermal protection					

2-2 Electrical Specifications				FXLQ20P	FXLQ25P	FXLQ32 P	FXLQ40 P	FXLQ50 P	FXLQ63P
Power supply	Name			VE					
	Phase			1~					
	Frequency		Hz	50/60					
	Voltage		V	220-240/220					
Voltage range	Min.		%	-10					
	Max.		%	10					
Current - 50Hz	Minimum circuit amps (MCA)		A	0.3		0.6			
	Maximum fuse amps (MFA)		A	15					
	Full load amps (FLA)	Total	A	0.2		0.5			
Current - 60Hz	Minimum circuit amps (MCA)		A	0.3		0.5		0.6	
	Maximum fuse amps (MFA)		A	15					
	Full load amps (FLA)	Total	A	0.2		0.4		0.5	

2 Specifications

Notes

- (1) Cooling: indoor temp. 27°CDB, 19°CWB; outdoor temp. 35°CDB; equivalent piping length: 7.5m (horizontal)
- (2) Heating: indoor temp. 20°CDB; outdoor temp. 7°CDB, 6°CWB; equivalent refrigerant piping: 7.5m (horizontal)
- (3) Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- (4) Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.
- (5) Maximum allowable voltage range variation between phases is 2%.
- (6) MCA/MFA: $MCA = 1.25 \times FLA$
- (7) $MFA \leq 4 \times FLA$
- (8) Next lower standard fuse rating minimum 15A
- (9) Select wire size based on the value of MCA
- (10) Instead of a fuse, use a circuit breaker

3 Safety device settings

3 - 1 Safety Device Settings

FXLQ-P							
	Safety devices	20	25	32	40	50	63
FXLQ-P	PC board fuse		250V 10A				
	Fan motor thermal protector	°C	OFF: 135 ^{±10} ON: 120 or less				

4 Options

4 - 1 Options

4

FXLQ-P

Item		Type	FXLQ20,25P	FXLQ32,40P	FXLQ50,63P
Remote control	Wired type		BRC1D52 / BRC1E51A*2 BRC1E52A7 *3 / BRC1E52B7 *4		
	Infrared type	HP	BRC4C65		
		CO	BRC4C66		
Simplified remote control			BRC2A51		
Remote control for hotel use			BRC3A61		
Adapter for wiring			KRP1B61		
Wiring adapter for electrical appendices (1)			KRP2A51		
Wiring adapter for electrical appendices (2)			KRP4A51		
Remote sensor			KRCS01-1		
Central remote control			DCS301BA51		
Electrical box with earth terminal (3 blocks)			KJB311A		
Unified ON/OFF controller			DCS301BA51		
Electrical box with earth terminal (2 blocks)			KJB212A		
Noise filter (for electromagnetic interface use only)			KEK26-1		
Schedule timer			DST301BA51		
External adapter for outdoor unit (installation on indoor unit)			DTA104A61		
Long life replacement filter			KAFJ361K28	KAFJ361K45	KAFJ361K71
Rear decoration panel			EKRDP25A	EKRDP40A	EKRDP63A
Multi tenant *1			EKMTAC		

NOTES

1.

This kit contains parts to connect with 10 multi tenant indoor units

2.

Included languages are: English, German, French, Dutch, Spanish, Italian, Greek, Portuguese, Russian and Turkish

3.

Included languages are: English, German, French, Dutch, Spanish, Italian, Greek, Portuguese, Russian, Turkish and Polish

4.

Included languages are: English, German, Albanian, Bulgarian, Croatian, Czech, Hungarian, Romanian, Serbian, Slovak and Slovenian

4TW32299-1C

4TW32299-1C

5 Capacity tables

5 - 1 Cooling Capacity Tables

FXLQ-P

TC: Total capacity; kW
SHC: Sensible heat capacity; kW

Unit size	Indoor air temp.													
	14.0 °CWB		16.0 °CWB		18.0 °CWB		19.0 °CWB		20.0 °CWB		22.0 °CWB		24.0 °CWB	
	20.0 °CDB		23.0 °CDB		26.0 °CDB		27.0 °CDB		28.0 °CDB		30.0 °CDB		32.0 °CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	1.5	1.3	1.8	1.5	2.1	1.7	2.2	1.7	2.3	1.7	2.4	1.6	2.4	1.5
25	1.9	1.6	2.3	1.8	2.6	2.0	2.8	2.1	3.0	2.1	3.0	2.0	3.1	1.9
32	2.4	2.1	2.9	2.2	3.4	2.5	3.6	2.5	3.8	2.5	3.9	2.4	4.0	2.3
40	3.0	2.5	3.6	2.7	4.2	3.1	4.5	3.1	4.7	3.2	4.9	3.1	5.0	2.9
50	3.8	3.0	4.5	3.4	5.2	3.8	5.6	3.9	5.9	4.0	6.0	3.8	6.2	3.6
63	4.8	3.7	5.7	4.2	6.6	4.8	7.1	4.9	7.5	4.9	7.7	4.7	7.8	4.3

CA03A095

5 Capacity tables

5 - 2 Heating Capacity Tables

FXLQ-P

Unit size	Indoor air temp. °CDB					
	16.0	18.0	20.0	21.0	22.0	24.0
	kW	kW	kW	kW	kW	kW
20	2.6	2.6	2.5	2.4	2.3	2.2
25	3.4	3.4	3.2	3.1	3.0	2.8
32	4.2	4.2	4.0	3.9	3.7	3.5
40	5.2	5.2	5.0	4.8	4.7	4.4
50	6.6	6.6	6.3	6.1	5.9	5.5
63	8.4	8.4	8.0	7.7	7.5	7.0

CA03A095

5 Capacity tables

5 - 3 Capacity Correction Factor

5

FXLQ-P

		Capacity correction factor Te = 9°C						
	Indoor air temperature	14.0 °CWB	16.0 °CWB	18.0 °CWB	19.0 °CWB	20.0 °CWB	22.0 °CWB	24.0 °CWB
		20.0 °CDB	23.0 °CDB	26.0 °CDB	27.0 °CDB	28.0 °CDB	30.0 °CDB	32.0 °CDB
FXLQ20	TC	0.650	0.709	0.767	0.788	0.808	0.842	0.866
	SHF	1.205	1.160	1.108	1.090	1.073	1.046	1.029
FXLQ25	TC	0.650	0.711	0.769	0.791	0.812	0.844	0.867
	SHF	1.206	1.158	1.108	1.088	1.071	1.046	1.029
FXLQ32	TC	0.647	0.709	0.767	0.787	0.807	0.842	0.866
	SHF	1.212	1.160	1.109	1.090	1.073	1.045	1.028
FXLQ40	TC	0.661	0.714	0.775	0.797	0.814	0.844	0.867
	SHF	1.184	1.154	1.103	1.084	1.071	1.047	1.036
FXLQ50	TC	0.654	0.709	0.768	0.790	0.809	0.842	0.865
	SHF	1.194	1.160	1.107	1.088	1.073	1.046	1.029
FXLQ63	TC	0.662	0.713	0.773	0.795	0.813	0.843	0.866
	SHF	1.179	1.155	1.103	1.084	1.071	1.049	1.039

4TW33912-6

NOTES - ANMERKUNGEN - Σημειώσεις - NOTAS - REMARQUES - NOTE - OPMERKINGEN - Примечания - NOTLAR

How to use this table - So verwenden Sie diese Tabelle - Πώς θα χρησιμοποιήσετε αυτό τον πίνακα - Cómo utilizar esta tabla - Utilisation de ce tableau - Come utilizzare questa tabella - Gebruik van deze tabel - Как пользоваться этой таблицей - Bu tablo nasıl kullanılmali?;

1. Capacity : Total capacity for High sensible mode = Total capacity for normal capacity table X TC ratio.

Leistung: Gesamtleistung für hochfühlbaren Leistungsmodus = Gesamtleistung für normale Leistungstabelle x GL-Verhältnis.

Απόδοση: Συνολική απόδοση για τη λειτουργία υψηλής ευαισθησίας = Συνολική απόδοση για τον πίνακα κανονικών αποδόσεων X αναλογία TC

Capacidad: Capacidad total para el modo de alta sensibilidad = Capacidad total para la tabla de capacidad normal X relación TC.

Capacité sensible (FCS (Facteur de chaleur sensible) – en anglais : SHF) : FCS pour le mode sensibilité élevée (« High ») = FCS du tableau des capacités normales x rapport FCS.

Capacità: Capacità totale per modalità ad alta capacità sensibile = Capacità totale per tabella capacità normali X rapporto TC.

Capaciteit: totale capaciteit in modus grote ("High") gevoeligheid = totale capaciteit uit de tabel met normale capaciteiten x TC-ratio.

Производительность: Общая производительность для режима с высоким коэфф. охлуждения = Общая производительность для нормального режима, таблица X коэфф. TC.

Kapasite: Yüksek algı modu için toplam kapasite = Normal kapasite tablosundaki toplam kapasite değeri x TC oranı.

2. Sensible capacity (SHF): SHF for High sensible mode = SHF for normal capacity table X SHF ratio .

Fühlbare Leistung (SHF): SHF für hochfühlbaren Leistungsmodus = SHF für normale Leistungstabelle x SHF-Verhältnis.

Αισθητή απόδοση (SHF): SHF για λειτουργία υψηλής ευαισθησίας = SHF για πίνακα κανονικών αποδόσεων X αναλογία SHF .

Capacidad sensible (FCS): SHF para el modo de alta sensibilidad = SHF para la tabla de capacidad normal X relación SHF.

Capacité sensible (FCS (Facteur de chaleur sensible) – en anglais : SHF) : FCS pour le mode sensibilité élevée (« High ») = FCS du tableau des capacités normales x rapport FCS.

Capacità sensibile (SHF): SHF per modalità ad alta capacità sensibile = SHF per tabella capacità normali X rapporto SHF.

Gevoeligheds capaciteit (WGF (warmtegevoelsfactor)– in het Engels "SHF"): WGF voor de modus grote ("High") gevoeligheid = WGF uit de tabel met normale capaciteiten x WGF-ratio.

Ощутимая производительность (SHF): SHF для режима с высоким коэфф.

ощутимого охлаждения = SHF для нормального режима, таблица X коэфф. SHF.

Algılanabilir kapasite (SHF): Yüksek algı modu için SHF = Normal kapasite tablosundaki

SHF değeri x SHF oranı.

3. In case of SHF is bigger than 1, SHF is "1"

Für den Fall, dass SHF größer als 1 ist, wird SHF als "1" angenommen.

Σε περίπτωση που το SHF είναι μεγαλύτερο από 1, το SHF είναι "1"

En caso de que SHF sea superior a 1, SHF equivale a "1"

Si FCS est supérieur à 1, utilisez « 1 » pour FCS.

Qualora il valore SHF sia maggiore di 1, SHF è "1"

Indien WGF groter is dan 1, neem dan "1" voor WGF.

Если SHF больше 1, то SHF равен "1"

SHF değeri 1'den büyükse, SHF değeri "1" kabul edilmelidir

5 Capacity tables

5 - 3 Capacity Correction Factor

FXLQ-P

		Capacity correction factor Te = 11°C						
		20°CDB	23°CDB	26°CDB	27°CDB	28°CDB	30°CDB	32°CDB
		14°CWB	16°CWB	18°CWB	19°CWB	20°CWB	22°CWB	24°CWB
20	TC ratio	0,527	0,540	0,601	0,638	0,671	0,727	0,768
	SHF ratio	1,205	1,300	1,249	1,196	1,157	1,101	1,063
25	TC ratio	0,527	0,542	0,604	0,642	0,675	0,730	0,771
	SHF ratio	1,206	1,301	1,247	1,194	1,155	1,099	1,063
32	TC ratio	0,525	0,538	0,600	0,637	0,669	0,725	0,769
	SHF ratio	1,212	1,308	1,249	1,197	1,158	1,100	1,061
40	TC ratio	0,533	0,553	0,610	0,648	0,681	0,731	0,771
	SHF ratio	1,184	1,274	1,238	1,187	1,150	1,100	1,070
50	TC ratio	0,530	0,545	0,601	0,639	0,672	0,727	0,768
	SHF ratio	1,194	1,288	1,247	1,195	1,156	1,101	1,064
63	TC ratio	0,535	0,553	0,608	0,646	0,678	0,729	0,769
	SHF ratio	1,179	1,269	1,238	1,188	1,151	1,103	1,075

4TW27232-9

NOTES - ANMERKUNGEN - Σημειώσεις - NOTAS - REMARQUES - NOTE - OPMERKINGEN - Примечания - NOTLAR

How to use this table - So verwenden Sie diese Tabelle - Πώς θα χρησιμοποιήσετε αυτό τον πίνακα - Cómo utilizar esta tabla - Utilisation de ce tableau - Come utilizzare questa tabella - Gebruik van deze tabel - Как пользоваться этой таблицей - Bu tablo nasıl kullanılır? :

- Capacity : Total capacity for High sensible mode = Total capacity for normal capacity table X TC ratio.
Leistung: Gesamtleistung für hochfühlbaren Leistungsmodus = Gesamtleistung für normale Leistungstabelle x GL-Verhältnis.
Απόδοση: Συνολική απόδοση για τη λειτουργία υψηλής ευαισθησίας = Συνολική απόδοση για τον πίνακα κανονικών αποδόσεων X αναλογία TC
Capacidad: Capacidad total para el modo de alta sensibilidad = Capacidad total para la tabla de capacidad normal X relación TC.
Capacité sensible (FCS (Facteur de chaleur sensible) – en anglais : SHF) : FCS pour le mode sensibilité élevée (« High ») = FCS du tableau des capacités normales x rapport FCS.
Capacità: Capacità totale per modalità ad alta capacità sensibile = Capacità totale per tabella capacità normali X rapporto TC.
Capaciteit: totale capaciteit in modus grote ("High") gevoeligheid = totale capaciteit uit de tabel met normale capaciteiten x TC-ratio.
Производительность: Общая производительность для режима с высоким коэфф. ошутимого охлаждения = Общая производительность для нормального режима, таблица X коэфф. TC.
Kapasite: Yüksek algı modu için toplam kapasite = Normal kapasite tablosundaki toplam kapasite değeri x TC oranı.

- Sensible capacity (SHF): SHF for High sensible mode = SHF for normal capacity table X SHF ratio .
Fühbare Leistung (SHF): SHF für hochfühlbaren Leistungsmodus = SHF für normale Leistungstabelle x SHF-Verhältnis.
Αισθητή απόδοση (SHF): SHF για λειτουργία υψηλής ευαισθησίας = SHF για πίνακα κανονικών αποδόσεων X αναλογία SHF .

Capacidad sensible (FCS): SHF para el modo de alta sensibilidad = SHF para la tabla de capacidad normal X relación SHF.

Capacité sensible (FCS (Facteur de chaleur sensible) – en anglais : SHF) : FCS pour le mode sensibilité élevée (« High ») = FCS du tableau des capacités normales x rapport FCS.
Capacità sensibile (SHF): SHF per modalità ad alta capacità sensibile = SHF per tabella capacità normali X rapporto SHF.

Gevoeligheidsfactor (WGF (warmtegevoelsfactor) – in het Engels "SHF"): WGF voor de modus grote ("High") gevoeligheid = WGF uit de tabel met normale capaciteiten x WGF-ratio.



Ощутимая производительность (SHF): SHF для режима с высоким коэфф. ошутимого охлаждения = SHF для нормального режима, таблица X коэфф. SHF.
Algılanabilir kapasite (SHF): Yüksek algı modu için SHF = Normal kapasite tablosundaki SHF değeri x SHF oranı.

- In case of SHF is bigger than 1 , SHF is "1"
Für den Fall, dass SHF größer als 1 ist, wird SHF als "1" angenommen.
Σε περίπτωση που το SHF είναι μεγαλύτερο από 1, το SHF είναι "1"
En caso de que SHF sea superior a 1 , SHF equivale a "1"
Si FCS est supérieur à 1 , utilisez « 1 » pour FCS.
Qualora il valore SHF sia maggiore di 1 , SHF è "1"
Indien WGF groter is dan 1, neem dan "1" voor WGF.
Если SHF больше 1, то SHF равен "1"
SHF değeri 1'den büyükse, SHF değeri "1" kabul edilmelidir




6 Dimensional drawings

6 - 1 Dimensional Drawings

FXLQ20-25P

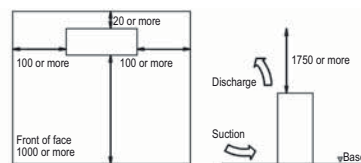



Required installation space

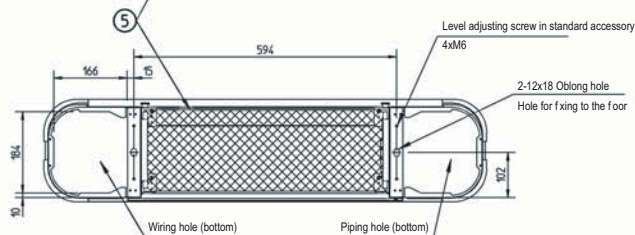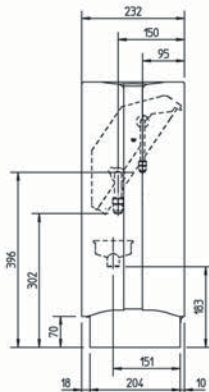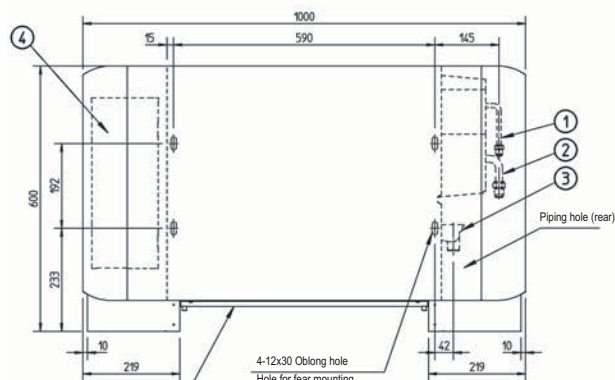




Item	Name	Description
1	Liquid pipe connection	Ø6.4 Flare connection
2	Gas pipe connection	Ø12.7 Flare connection
3	Drain pipe connection	O.D.Ø21
4	Switch box	
5	Air filter	

3TW32294-1

FXLQ32-40P

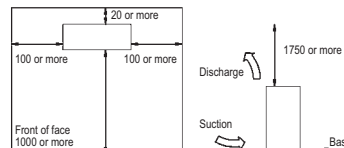

Required installation space

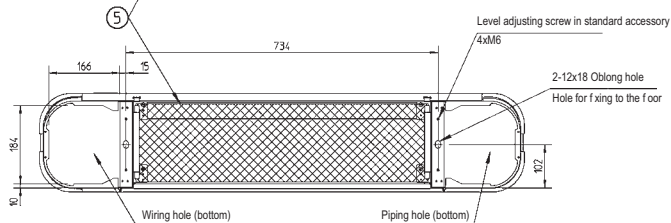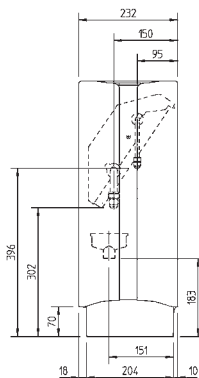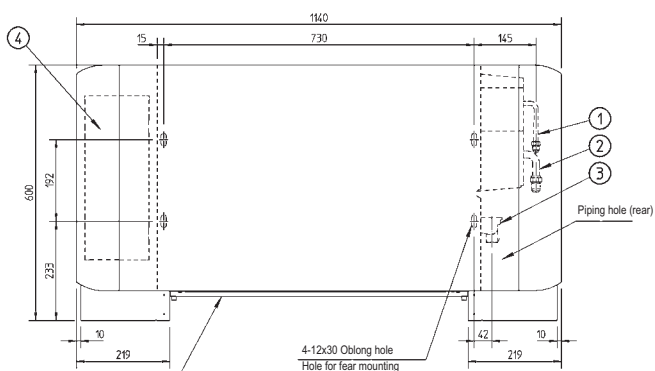




Item	Name	Description
1	Liquid pipe connection	Ø6.4 Flare connection
2	Gas pipe connection	Ø12.7 Flare connection
3	Drain pipe connection	O.D.Ø21
4	Switch box	
5	Air filter	

3TW32314-1

6 Dimensional drawings

6 - 1 Dimensional Drawings

FXLQ50-63P

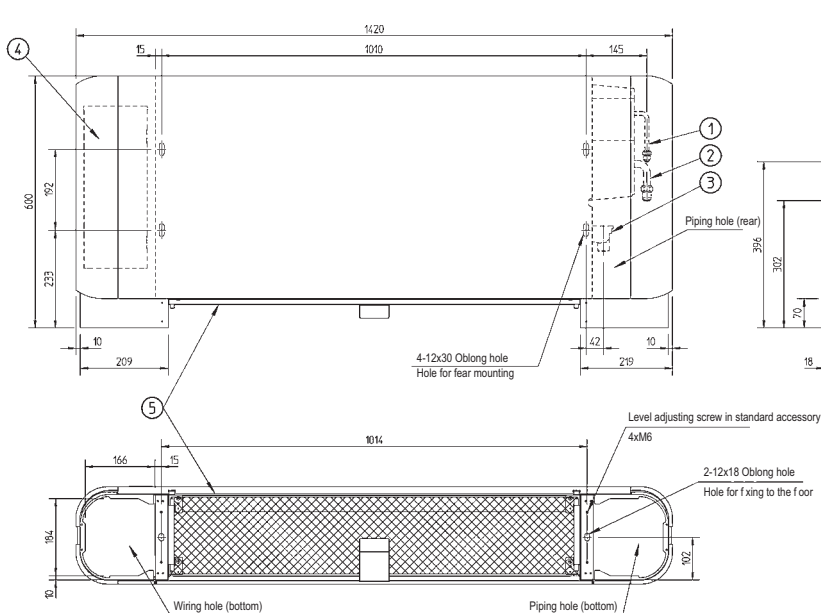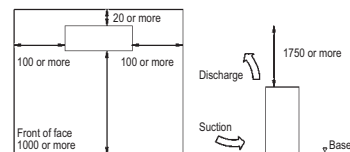

Model	A	B
FXL050	Ø6.4	Ø12.7
FXL063	Ø9.5	Ø15.9



Item	Name	Description
1	Liquid pipe connection	ØA Flare connection
2	Gas pipe connection	ØB Flare connection
3	Drain pipe connection	O.D.Ø21
4	Switch box	
5	Air filter	

3TW32334-1

7 Centre of gravity

7 - 1 Centre of Gravity

FXLQ-P

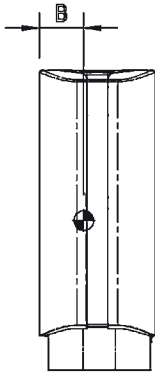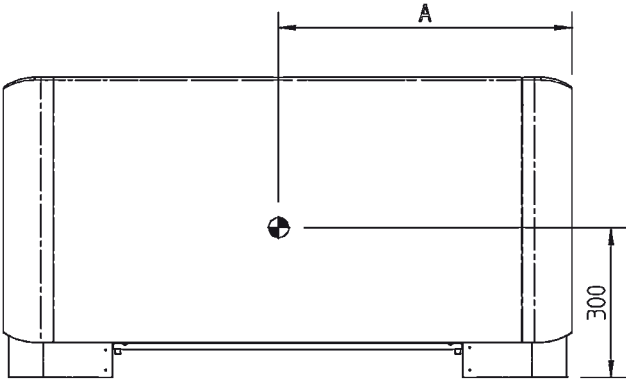


Model	A	B
FXLQ 20, 25 P	500	81
FXLQ 32, 40 P	588	89
FXLQ 50, 63 P	728	99

4TW32299-2

8 Piping diagrams

8 - 1 Piping Diagrams

FXLQ-P

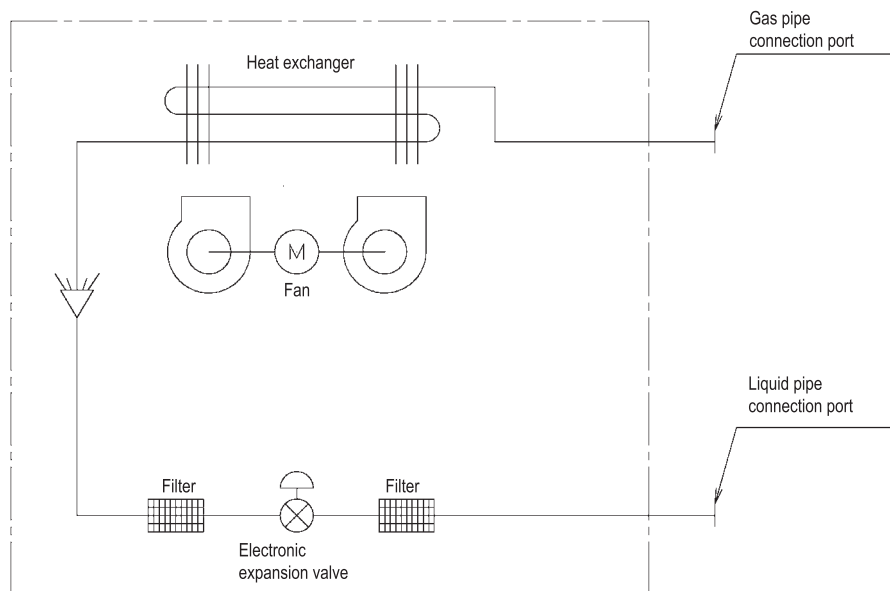


4D034245G

9 Wiring diagrams

9 - 1 Wiring Diagrams - Single Phase

FXLQ-P

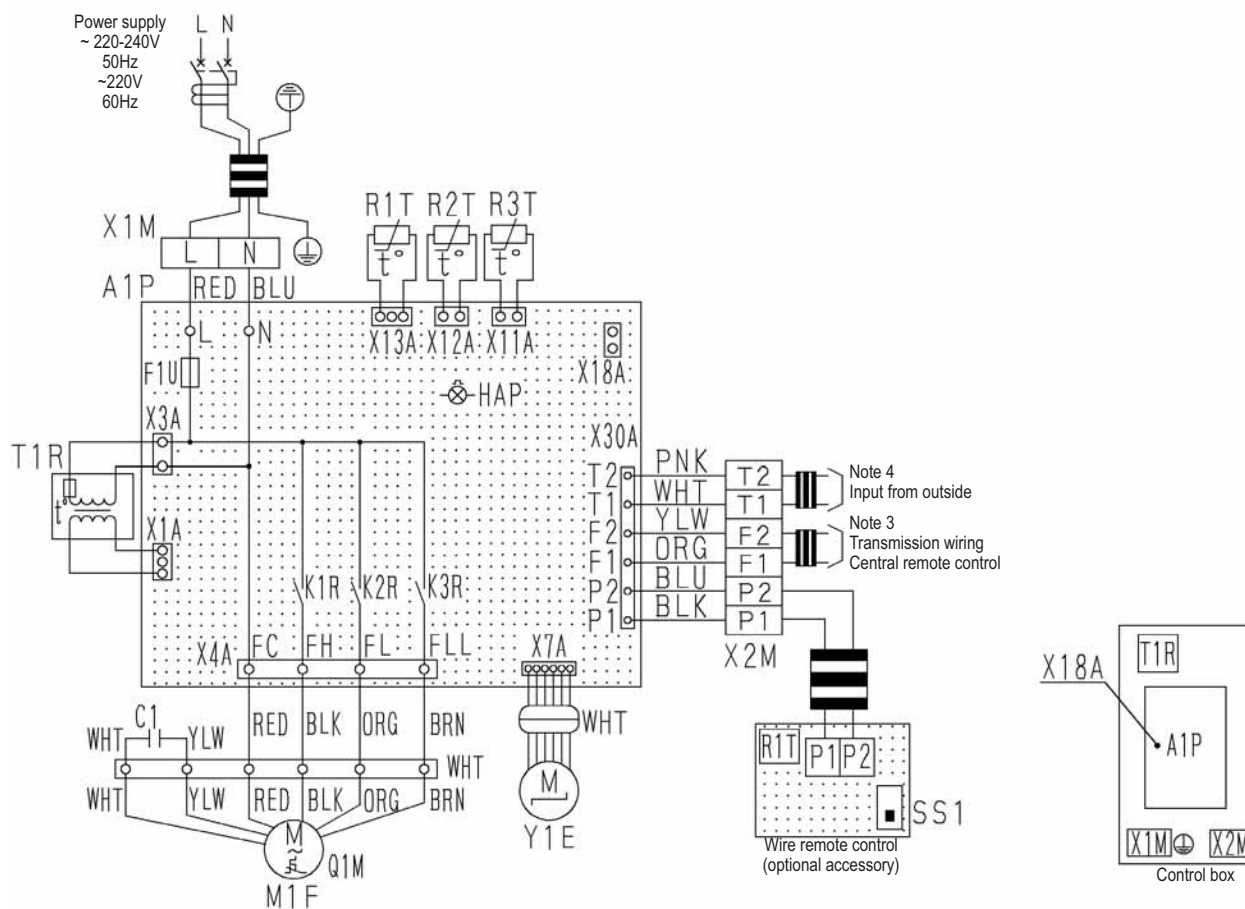

Indoor unit		Y1E	Electronic expansion valve
A1P	Printed circuit board		
C1	Capacitor (M1F)		Wired remote control
F1U	Fuse (⑤ , 5A, 250V)	R1T	Thermistor (air)
HAP	Light emitting diode (service monitor green)	SS1	Select switch (main/sub)
K1R-K3R	Magnetic relay (M1F)		
M1F	Motor (indoor fan)		Connector for optional parts
Q1M	Thermo switch (M1F embedded)		
R1T	Thermistor (air)	X18A	Connector (wiring adapter for electrical appendices)
R2T-R3T	Thermistor (coil)		
T1R	Transformer (220-240V/22V)		
X1M	Terminal block (power)		
X2M	Terminal block (control)		

PNK: pink	WHT: white
YLW: yellow	ORG: orange
BLU: blue	BLK: black
RED: red	BRN: brown

3D039826G

NOTES

- □ □ □ : terminal block, □ □ □ □ : connector, -○- : terminal
- ⚡ : field wiring
- In case using central remote control, connect it to the unit in accordance with the attached instruction manual.
- When connecting the input wires from outside, forced OFF or ON/OFF control operation can be selected by remote control, in details, refer to the installation manual attached to the unit.
- Use copper conductors only.


10 Sound data

10 - 1 Sound Pressure Spectrum

10

FXLQ20,25P

4D034528A

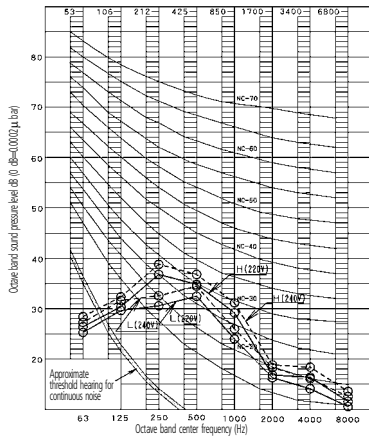


NOTES

- Over all (dB):
(B, G, N is already rectified)
- | Scale | 220V | | 240V | |
|-------|------|------|------|------|
| | H | L | H | L |
| A | 35 | 32 | 37 | 34 |
| C | 40 | 36.5 | 42 | 38.5 |
- Measuring place: Anechoic chamber
 - Operating conditions:
 - Power source: 220•240V/220V 50/60Hz
 - JIS standard
 - Location of microphone
-
- Operating noise differs with operation and ambient conditions.

FXLQ32P

4D034564A

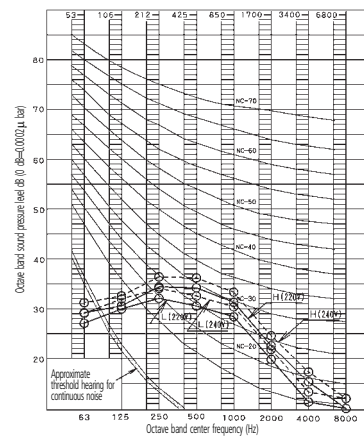


NOTES

- Over all (dB):
(B, G, N is already rectified)
- | Scale | 220V | | 240V | |
|-------|------|----|------|----|
| | H | L | H | L |
| A | 35 | 32 | 37 | 34 |
| C | 39 | 37 | 41 | 39 |
- Measuring place: Anechoic chamber
 - Operating conditions:
 - Power source: 220•240V/220V 50/60Hz
 - JIS standard
 - Location of microphone
-
- Operating noise differs with operation and ambient conditions.

FXLQ40P

4D034565A

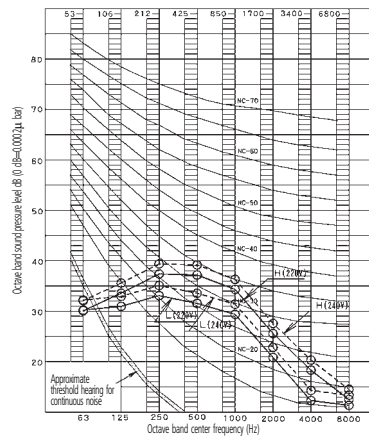


NOTES

- Over all (dB):
(B, G, N is already rectified)
- | Scale | 220V | | 240V | |
|-------|------|----|------|----|
| | H | L | H | L |
| A | 38 | 33 | 40 | 35 |
| C | 42 | 38 | 44 | 40 |
- Measuring place: Anechoic chamber
 - Operating conditions:
 - Power source: 220•240V/220V 50/60Hz
 - JIS standard
 - Location of microphone
-
- Operating noise differs with operation and ambient conditions.

FXLQ50P

4D034566A

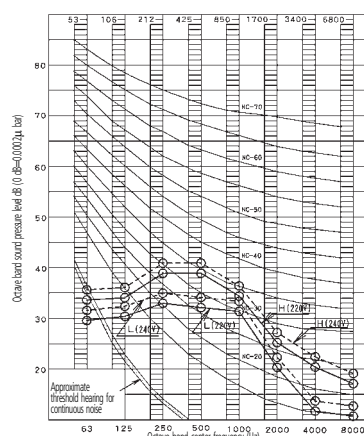


NOTES

- Over all (dB):
(B, G, N is already rectified)
- | Scale | 220V | | 240V | |
|-------|------|------|------|------|
| | H | L | H | L |
| A | 39 | 34 | 41 | 36 |
| C | 44 | 38.5 | 46 | 40.5 |
- Measuring place: Anechoic chamber
 - Operating conditions:
 - Power source: 220•240V/220V 50/60Hz
 - JIS standard
 - Location of microphone
-
- Operating noise differs with operation and ambient conditions.

10 Sound data

10 - 1 Sound Pressure Spectrum

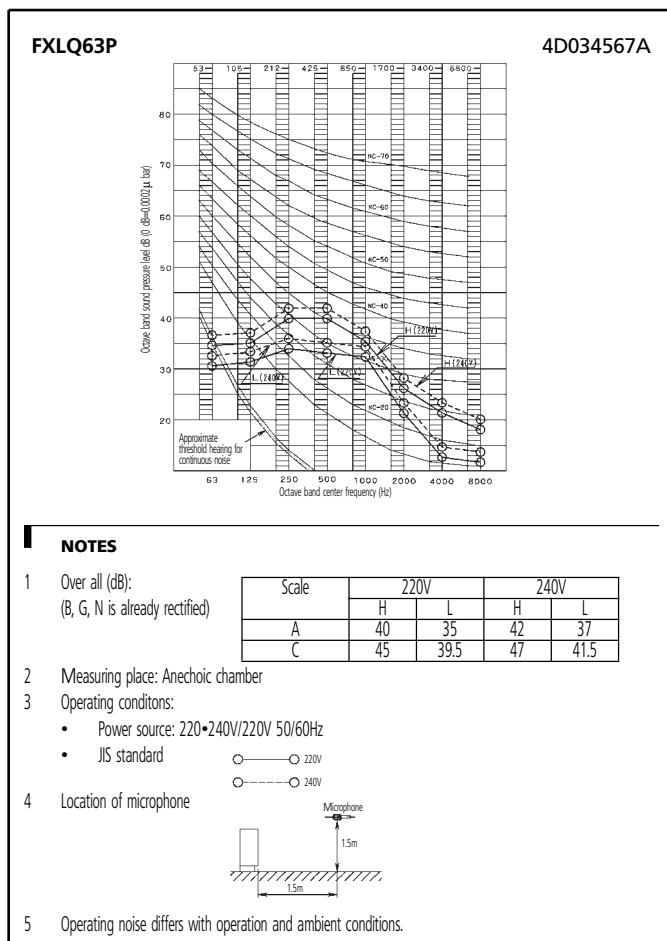



These products are not within the scope of the Eurovent certification program

The present leaflet is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V.. Daikin Europe N.V. has compiled the content of this leaflet to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this leaflet. All content is copyrighted by Daikin Europe N.V.

BARCODE

Daikin products are distributed by: