

DAIKIN

SiBE34 - 802

R-410A

Service Manual

VRV[®] III-S

**RXYSQ4.5.6PA7Y1B, PA7V1B
R-410A
Heat Pump 50Hz**



VRV[®] III-S R-410A

Heat Pump

50Hz

1. Introduction	v
1.1 Safety Cautions	v
1.2 PREFACE	ix
Part 1 General Information	1
1. Model Names of Indoor/Outdoor Units.....	2
2. External Appearance.....	3
2.1 Indoor Units	3
3. Capacity Range.....	4
Part 2 Specifications	5
1. Specifications	6
1.1 Outdoor Units	6
1.2 Indoor Units	10
Part 3 List of Electrical and Functional Parts.....	29
1. List of Electrical and Functional Parts	30
1.1 Outdoor Unit.....	30
1.2 Indoor Unit.....	32
Part 4 Refrigerant Circuit	39
1. Refrigerant Circuit	40
1.1 Outdoor Unit.....	40
2. Functional Parts Layout	44
2.1 RXYSQ4 / 5 / 6PA7Y1B	44
2.2 RXYSQ4 / 5 / 6PA7V1B	45
Part 5 Function.....	47
1. Operation Mode	48
2. Basic Control	49
2.1 Normal Operation	49
2.2 Compressor PI Control	50
2.3 Electronic Expansion Valve PI Control.....	51
2.4 Cooling Operation Fan Control.....	52
3. Special Control	53
3.1 Startup Control	53
3.2 Oil Return Operation	54
3.3 Defrosting Operation	56
3.4 Pump-down Residual Operation	57

3.5	Restart Standby.....	58
3.6	Stopping Operation	59
4.	Protection Control	60
4.1	High Pressure Protection Control.....	60
4.2	Low Pressure Protection Control.....	61
4.3	Discharge Pipe Protection Control	62
4.4	Inverter Protection Control	63
5.	Other Control.....	64
5.1	Demand Operation	64
5.2	Heating Operation Prohibition	64
6.	Outline of Control (Indoor Unit)	65
6.1	Drain Pump Control.....	65
6.2	Louver Control for Preventing Ceiling Dirt.....	67
6.3	Thermostat Sensor in Remote Controller.....	68
6.4	Freeze Prevention	70
6.5	View of Operations of Swing Flaps	71
6.6	Electronic Expansion Valve Control	72
6.7	Hot Start Control (In Heating Operation Only).....	72

Part 6 Test Operation 73

1.	Test Operation	74
1.1	Procedure and Outline	74
1.2	Operation when Power is Turned On	85
2.	Outdoor Unit PC Board Layout	86
3.	Field Setting	87
3.1	Field Setting from Remote Controller	87
3.2	Field Setting from Outdoor Unit.....	104

Part 7 Troubleshooting 123

1.	Symptom-based Troubleshooting	125
2.	Troubleshooting by Remote Controller	128
2.1	The INSPECTION / TEST Button.....	128
2.2	Self-diagnosis by Wired Remote Controller	129
2.3	Self-diagnosis by Wireless Remote Controller	130
2.4	Operation of the Remote Controller's Inspection / Test Operation Button	132
2.5	Remote Controller Service Mode	133
2.6	Remote Controller Self-Diagnosis Function	135
3.	Troubleshooting by Indication on the Remote Controller	142
3.1	"R0" Indoor Unit: Error of External Protection Device.....	142
3.2	"R1" Indoor Unit: PC Board Defect.....	143
3.3	"R3" Indoor Unit: Malfunction of Drain Level Control System (S1L)	144
3.4	"R6" Indoor Unit: Fan Motor (M1F) Lock, Overload.....	146
3.5	"R7" Indoor Unit: Malfunction of Swing Flap Motor (M1S).....	147
3.6	Abnormal Power Supply Voltage.....	149
3.7	"R9" Indoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E).....	150
3.8	"RF" Indoor Unit: Drain Level above Limit	152
3.9	"RW" Indoor Unit: Malfunction of Capacity Determination Device	153

3.10	“ㄷ” Indoor Unit: Failure of Transmission (Between Indoor unit PC Board and Fan PC Board).....	154
3.11	“ㄷ” Indoor Unit: Malfunction of Thermistor (R2T) for Heat Exchanger	156
3.12	“ㄷ” Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes	157
3.13	“ㄷ” Indoor Unit: Failure of Combination (Between Indoor unit PC Board and Fan PC Board).....	158
3.14	“ㄷ” Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air.....	159
3.15	“ㄷ” Indoor Unit: Malfunction of Thermistor for Discharge Air.....	160
3.16	“ㄷ” Indoor Unit: Malfunction of Humidity Sensor System	161
3.17	“ㄷ” Indoor Unit: Malfunction of Thermostat Sensor in Remote Controller	162
3.18	“ㄷ” Outdoor Unit: PC Board Defect	163
3.19	“ㄷ” Outdoor Unit: Actuation of High Pressure Switch.....	164
3.20	“ㄷ” Outdoor Unit: Actuation of Low Pressure Sensor.....	166
3.21	“ㄷ” Inverter Compressor Motor Lock.....	168
3.22	“ㄷ” Malfunction of Outdoor Unit Fan Motor	169
3.23	“ㄷ” Outdoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y3E).....	170
3.24	“ㄷ” Outdoor Unit: Abnormal Discharge Pipe Temperature.....	172
3.25	“ㄷ” Outdoor Unit: Refrigerant Overcharged.....	173
3.26	“ㄷ” Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air.....	174
3.27	“ㄷ” Outdoor Unit: Malfunction of Discharge Pipe Thermistor (R2T)	175
3.28	“ㄷ” Outdoor Unit: Malfunction of Thermistor (R3T, R5T) for Suction Pipe 1, 2	176
3.29	“ㄷ” Outdoor Unit: Malfunction of Thermistor (R6T)	177
3.30	“ㄷ” Outdoor Unit: Malfunction of Thermistor (R7T) for Outdoor Unit Liquid Pipe	178
3.31	“ㄷ” Outdoor Unit: Malfunction of Thermistor (R4T)	179
3.32	“ㄷ” Outdoor Unit: Malfunction of High Pressure Sensor.....	180
3.33	“ㄷ” Outdoor Unit: Malfunction of Low Pressure Sensor	181
3.34	“ㄷ” Outdoor Unit: Malfunction of PC Board	182
3.35	“ㄷ” Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise.....	183
3.36	“ㄷ” Outdoor Unit: Inverter Compressor Abnormal	184
3.37	“ㄷ” Outdoor Unit: Inverter Current Abnormal.....	185
3.38	“ㄷ” Outdoor Unit: Inverter Start up Error	186
3.39	“ㄷ” Outdoor Unit: Malfunction of Transmission between Inverter and Control PC Board	187
3.40	“ㄷ” Outdoor Unit: High Voltage of Capacitor in Main Inverter Circuit	188
3.41	“ㄷ” Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure.....	189
3.42	“ㄷ” Power Supply Insufficient or Instantaneous Failure	191
3.43	“ㄷ” Check Operation not Executed.....	193
3.44	“ㄷ” Malfunction of Transmission between Indoor Units and Outdoor Units	194
3.45	“ㄷ” Malfunction of Transmission between Remote Controller and Indoor Unit.....	196
3.46	“ㄷ” Malfunction of Transmission between Main and Sub Remote Controllers	197
3.47	“ㄷ” Malfunction of Transmission between Indoor and Outdoor Units in the Same System.....	198

3.48	“UR” Excessive Number of Indoor Units	200
3.49	“UL” Address Duplication of Central Remote Controller	201
3.50	“UE” Malfunction of Transmission between Central Remote Controller and Indoor Unit	202
3.51	“UF” System is not Set yet	204
3.52	“UM” Malfunction of System, Refrigerant System Address Undefined	205
4.	Troubleshooting by Indication on the Centralized Remote Controller	206
4.1	“UE” Malfunction of Transmission between Centralized Remote Controller and Indoor Unit	206
4.2	“M1” PC Board Defect	207
4.3	“M8” Malfunction of Transmission between Optional Controllers for Centralized Control	208
4.4	“M8” Improper Combination of Optional Controllers for Centralized Control	209
4.5	“ML” Address Duplication, Improper Setting	211
5.	Troubleshooting by Indication on the Unified ON/OFF Controller	212
5.1	Operation Lamp Blinks	212
5.2	Display “Under Host Computer Integrate Control” Blinks (Repeats Single Blink)	214
5.3	Display “Under Host Computer Integrate Control” Blinks (Repeats Double Blink)	217

Part 8 Appendix..... 221

1.	Piping Diagrams	222
1.1	Outdoor Unit	222
1.2	Indoor Unit	224
2.	Wiring Diagrams	227
2.1	Outdoor Unit	227
2.2	Field Wiring	229
2.3	Indoor Unit	231
3.	Option List	246
3.1	Option List of Controllers	246
3.2	Option List of Outdoor Unit	248
4.	Example of Connection	249
5.	Thermistor Resistance / Temperature Characteristics	251
6.	Pressure Sensor	253
7.	Method of Replacing the Inverter’s Power Transistors Modules	254

Part 9 Precautions for New Refrigerant (R-410A)..... 257

1.	Precautions for New Refrigerant (R-410A)	258
1.1	Outline	258
1.2	Refrigerant Cylinders	260
1.3	Service Tools	261





Index i

Drawings & Flow Charts iii





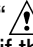

1. Introduction








1.1 Safety Cautions

Cautions and Warnings


- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
 - △ This symbol indicates an item for which caution must be exercised.
The pictogram shows the item to which attention must be paid.
 - This symbol indicates a prohibited action.
The prohibited item or action is shown inside or near the symbol.
 - This symbol indicates an action that must be taken, or an instruction.
The instruction is shown inside or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer




1.1.1 Caution in Repair



 Warning	
<p>Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Working on the equipment that is connected to a power supply can cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.</p>	
<p>If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.</p>	
<p>When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it can cause injury.</p>	
<p>If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.</p>	
<p>The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.</p>	
<p>Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.</p>	

 Caution	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands can cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the refrigerating cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the refrigerating cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	





1.1.2 Cautions Regarding Products after Repair



 Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	

 Warning	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	For integral units only

1.1.3 Inspection after Repair





 Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it can cause an electrical shock, excessive heat generation or fire.	

 Caution	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 Mohm or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

1.1.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

1.1.5 Using Icons List

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

1.2 PREFACE

Thank you for your continued patronage of Daikin products.

This is the new service manual for Daikin's Year 2008 VRVIII-S series Heat Pump System. Daikin offers a wide range of models to respond to building and office air conditioning needs. We are confident that customers will be able to find the models that best suit their needs.

This service manual contains information regarding the servicing of VRVIII-S series R-410A Heat Pump System.

July, 2008

After Sales Service Division

Part 1

General Information

1. Model Names of Indoor/Outdoor Units.....	2
2. External Appearance.....	3
2.1 Indoor Units.....	3
3. Capacity Range.....	4

1. Model Names of Indoor/Outdoor Units

*Indoor Units

Type		Model Name									Power Supply
Ceiling Mounted Cassette Type (Double Flow)	FXCQ	20M	25M	32M	40M	50M	63M	80M	—	125M	V3
Ceiling Mounted Cassette Type (Round Flow)	FXFQ	20P	25P	32P	40P	50P	63P	80P	100P	125P	VE
600×600 Ceiling Mounted Cassette Type (Mult Flow)	FXZQ	20M	25M	32M	40M	50M	—	—	—	—	V1
Ceiling Mounted Cassette Corner Type	FXKQ	—	25MA	32MA	40MA	—	63MA	—	—	—	VE
Slim Ceiling Mounted Duct Type	FXDQ	20P	25P	32P	40NA	50NA	63NA	—	—	—	
	FXDQ-M8	20M8	25M8	—	—	—	—	—	—	—	V3
Ceiling Mounted Built-in Type	FXSQ	20M	25M	32M	40M	50M	63M	80M	100M	125M	V3
Ceiling Mounted Duct Type	FXMQ	—	—	—	40P	50P	63P	80P	100P	125P	VE
Ceiling Suspended Type	FXHQ	—	—	32MA	—	—	63MA	—	100MA	—	
Wall Mounted Type	FXAQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	
Floor Standing Type	FXLQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	
Concealed Floor Standing Type	FXNQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	
Ceiling Suspended Cassette Type	FXUQ	—	—	—	—	—	—	71MA	100MA	125MA	V1
Connection Unit	BEVQ-M(A)	—	—	—	—	—	—	71MA	100MA	125MA	VE

Note: BEV unit is required for FXUQ only.
 VE :1φ, 220~240V, 50Hz, 1φ, 220V, 60Hz
 V1 :1φ, 220~240V, 50Hz
 V3 :1φ, 230V, 50Hz

Outdoor Units








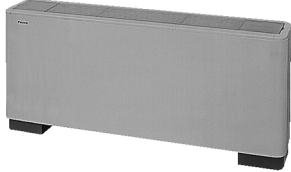

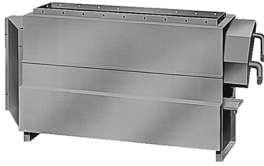



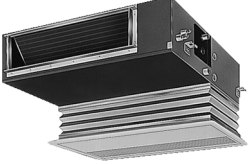
Series		Model Name			Power Supply	
Inverter	Heat Pump	RXYSQ	4PA	5PA	6PA	Y1, V1

Y1 :3φ, 380~415V, 50Hz
 V1 :1φ, 220~240V, 50Hz



2. External Appearance

2.1 Indoor Units

<p>Ceiling Mounted Cassette Type (Double Flow)</p> <p>FXCQ20M8 FXCQ25M8 FXCQ32M8 FXCQ40M8 FXCQ50M8 FXCQ63M8 FXCQ80M8 FXCQ125M8</p> 	<p>Ceiling Mounted Duct Type</p> <p>FXMQ40P FXMQ50P FXMQ63P FXMQ80P FXMQ100P FXMQ125P</p> 
<p>Ceiling Mounted Cassette Type (Round Flow)</p> <p>FXFQ20P7 FXFQ25P7 FXFQ32P7 FXFQ40P7 FXFQ50P7 FXFQ63P7 FXFQ80P7 FXFQ100P7 FXFQ125P7</p> 	<p>Ceiling Suspended Type</p> <p>FXHQ32MA FXHQ63MA FXHQ100MA</p> 
<p>600x600 Ceiling Mounted Cassette Type (Multi Flow)</p> <p>FXZQ20M8 FXZQ25M8 FXZQ32M8 FXZQ40M8 FXZQ50M8</p> 	<p>Wall Mounted Type</p> <p>FXAQ20MA FXAQ25MA FXAQ32MA FXAQ40MA FXAQ50MA FXAQ63MA</p> 
<p>Ceiling Mounted Cassette Corner Type</p> <p>FXKQ25MA FXKQ32MA FXKQ40MA FXKQ63MA</p> 	<p>Floor Standing Type</p> <p>FXLQ20MA FXLQ25MA FXLQ32MA FXLQ40MA FXLQ50MA FXLQ63MA</p> 
<p>Slim Ceiling Mounted Duct Type</p> <p>FXDQ20P FXDQ25P FXDQ32P FXDQ40NA FXDQ50NA FXDQ63NA</p> 	<p>Concealed Floor Standing Type</p> <p>FXNQ20MA FXNQ25MA FXNQ32MA FXNQ40MA FXNQ50MA FXNQ63MA</p> 
<p>Ceiling Concealed Type (small)</p> <p>FXDQ20M8 FXDQ25M8</p> 	<p>Ceiling Suspended Cassette Type (Connection Unit Series)</p> <p>FXUQ71MA + BEVQ71MA FXUQ100MA + BEVQ100MA FXUQ125MA + BEVQ125MA</p> <p>Connection Unit </p> 
<p>Ceiling Mounted Built-In Type</p> <p>FXSQ20M FXSQ25M FXSQ32M FXSQ40M FXSQ50M FXSQ63M FXSQ80M FXSQ100M FXSQ125M</p> 	

3. Capacity Range

Outdoor Units

Capacity Range	4HP	5HP	6HP
RXYSQ	4PA	5PA	6PA
No of Indoor Units to be Connected	6	8	9
Total Capacity Index of Indoor Units to be Connected	50~130	62.5~162.5	70~182

Indoor Units

Capacity Range		0.8HP	1HP	1.25HP	1.6HP	2HP	2.5HP	3.2HP	4HP	5HP
Capacity Index		20	25	31.25	40	50	62.5	80	100	125
Ceiling Mounted Cassette Type (Double Flow)	FXCQ	20M	25M	32M	40M	50M	63M	80M	—	125M
Ceiling Mounted Cassette Type (Round Flow)	FXFQ	20P	25P	32P	40P	50P	63P	80P	100P	125P
600x600 Ceiling Mounted Cassette Type (Multi Flow)	FXZQ	20M	25M	32M	40M	50M	—	—	—	—
Ceiling Mounted Cassette Corner Type	FXKQ	—	25MA	32MA	40MA	—	63MA	—	—	—
Slim Ceiling Mounted Duct Type	FXDQ	20P	25P	32P	40NA	50NA	63NA	—	—	—
	FXDQ-M8	20M8	25M8	—	—	—	—	—	—	—
Ceiling Mounted Built-In Type	FXSQ	20M	25M	32M	40M	50M	63M	80M	100M	125M
Ceiling Mounted Duct Type	FXMQ	—	—	—	40P	50P	63P	80P	100P	125P
Ceiling Suspended Type	FXHQ	—	—	32MA	—	—	63MA	—	100MA	—
Wall Mounted Type	FXAQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—
Floor Standing Type	FXLQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—
Concealed Floor Standing Type	FXNQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—
Ceiling Suspended Cassette Type	FXUQ	—	—	—	—	—	—	71MA	100MA	125MA

Part 2

Specifications

1. Specifications	6
1.1 Outdoor Units	6
1.2 Indoor Units	10

1. Specifications

1.1 Outdoor Units

Heat Pump 50Hz <RXYSQ-PA7Y1B>

1-1 TECHNICAL SPECIFICATIONS				RXYSQ4PA7Y1B		RXYSQ5PA7Y1B		RXYSQ6PA7Y1B		
Capacity	Cooling	kW		11.2		14.0		15.5		
	Heating	kW		12.5		16.0		18.0		
COP	Cooling			3.88		3.88		3.33		
	Heating			4.43		4.03		3.83		
Capacity range		HP		4		5		6		
PED category				Category I						
Max n° of indoor units to be connected				6		8		9		
Indoor index connection	Minimum		50		62.5		70			
	Maximum		130		162.5		182			
Casing	Colour			Daikin White						
	Material			Painted galvanised steel						
Dimensions	Packing	Height	mm	1,524						
		Width	mm	980		980		980		
		Depth	mm	420		420		420		
	Unit	Height	mm	1,345						
		Width	mm	900		900		900		
		Depth	mm	320		320		320		
Weight	Unit		kg		120		120		120	
	Packed Unit		kg		130		130		130	
Packing	Material			Carton, wood + EPS						
	Weight		kg		8		8		8	
Heat Exchanger	Dimensions	Length	mm	857		857		857		
		Nr of Rows		2		2		2		
		Fin Pitch	mm	2		2		2		
		Nr of Passes		10		10		10		
		Face Area	m ²	1,131						
		Nr of Stages		60		60		60		
	Tube type		Hi-XSS (8)							
	Fin	Fin type		Non-symmetric waffle louvre						
Treatment		Corrosion resistant								
Fan	Type			Propeller						
	Quantity			2		2		2		
	Air Flow Rate (nominal at 230V)	Cooling	m ³ /min	106		106		106		
		Heating	m ³ /min	102		105		105		
	Discharge direction			Horizontal						
	Motor	Quantity			2		2		2	
Model			Brushless DC motor							
Motor	Speed (nominal)	Cooling	rpm	850/815						
		Heating	rpm	820/785		840/805		840/805		
Fan	Drive			Direct drive						
	Output motor	W		70		70		70		
Compressor	Quantity			1		1		1		
	Motor	Quantity			1		1		1	
		Model			JT100G-VDLYR					
		Type			Hermetically sealed scroll compressor					
		Speed	rpm		6,480					
		Motor Output	kW		2.5		3.0		3.5	
		Starting Method			Direct on line					
Crankcase Heater	W		33		33		33			
Cooling	Standard	Min	°CDB	-5		-5		-5		
		Max	°CDB	46		46		46		
Operation Range	Heating	Min	°CWB	-20		-20		-20		
		Max	°CWB	15.5		15.5		15.5		

1-1 TECHNICAL SPECIFICATIONS				RXYSQ4PA7Y1B	RXYSQ5PA7Y1B	RXYSQ6PA7Y1B
Sound level	Cooling	Sound Power (Nominal)	dBA	66	67	69
		Sound Pressure (Nominal)	dBA	50	51	53
	Heating	Sound Pressure (Nominal)	dBA	52	53	55
Refrigerant	Name			R-410A		
	Charge	kg	4.0	4.0	4.0	
	Control			Expansion valve (electronic type)		
	Nr of Circuits			1	1	1
Refrigerant Oil	Name			Daphne FVC68D		
	Charged Volume	l	1.5	1.5	1.5	
Piping connections	Liquid (OD)	Type	Flare connection			
		Diameter (OD)	mm	9.52	9.52	9.52
	Gas	Type	Flare connection			
		Diameter (OD)	mm	15.9	15.9	19.1
	Drain	Quantity	3			
		Diameter (OD)	mm	26 × 3		
	Heat Insulation			Both liquid and gas pipes		
Max total length			m	300	300	300
Defrost Method				Reversed cycle		
Defrost Control				Sensor for outdoor heat exchanger temperature		
Capacity Control Method				Inverter controlled		
Capacity Control				24 to 100		
Safety devices				HPS, Fan motor thermal protection, Inverter overload protector, PC board fuse		
Standard Accessories				Installation manual, Operation manual		Installation manual, Operation manual, Connection pipes
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 5m, level difference : 0m.					
	Nominal heating capacities are based on: indoor temperature: 20°CDB, outdoor temperature: 7°CDB, 6°CWB, equivalent refrigerant piping: 5m, level difference: 0m.					
	Sound power level is an absolute value that a sound source generates.					
	Sound pressure level is a relative value, depending on the distance and acoustic environment. For more details, please refer to sound level drawings.					
Sound values are measured in a semi-anechoic room.						

Heat pump 50Hz <RXYSQ-PA7V1B>

1-1 TECHNICAL SPECIFICATIONS				RXYSQ4PA7V1B	RXYSQ5PA7V1B	RXYSQ6PA7V1B	
Capacity	Cooling	kW		11.2	14.0	15.5	
	Heating	kW		12.5	16.0	18.0	
COP	Cooling			3.99	3.99	3.42	
	Heating			4.56	4.15	3.94	
Capacity range		HP		4	5	6	
PED category				Category I			
Max n° of indoor units to be connected				6	8	9	
Indoor index connection	Minimum			50	62.5	70	
	Maximum			130	162.5	182	
Casing	Colour		Daikin White				
	Material		Painted galvanised steel				
Dimensions	Packing	Height	mm	1,524			
		Width	mm	980	980	980	
		Depth	mm	420	420	420	
	Unit	Height	mm	1,345			
		Width	mm	900	900	900	
		Depth	mm	320	320	320	
Weight	Unit		kg	120	120	120	
	Packed Unit		kg	130	130	130	
Packing	Material		Carton, wood + EPS				
	Weight		kg	8	8	8	
Heat Exchanger	Dimensions	Length	mm	857	857	857	
		Nr of Rows		2	2	2	
		Fin Pitch	mm	2	2	2	
		Nr of Passes		10	10	10	
		Face Area	m ²	1,131			
		Nr of Stages		60	60	60	
	Tube type		Hi-XSS (8)				
Fin	Fin type		Non-symmetric waffle louvre				
	Treatment		Corrosion resistant				
Fan	Type		Propeller				
	Quantity			2	2	2	
	Air Flow Rate (nominal at 230V)	Cooling	m ³ /min	106	106	106	
		Heating	m ³ /min	102	105	105	
	Discharge direction		Horizontal				
Motor	Quantity			2	2		
	Model		Brushless DC motor				
Motor	Speed (nominal)	Cooling	rpm	850/815			
		Heating	rpm	820/785	840/805	840/805	
Fan	Drive		Direct drive				
	Output motor		W	70	70	70	
Compressor	Quantity			1	1	1	
	Motor	Quantity			1	1	
		Model		JT100G-VDL			
		Type		Hermetically sealed scroll compressor			
		Speed	rpm	6,480			
		Motor Output	kW	2.5	3.0	3.5	
		Starting Method		Direct on line			
Crankcase Heater		W	33	33	33		
Cooling	Standard	Min	°CDB	-5	-5	-5	
		Max	°CDB	46	46	46	
Operation Range	Heating	Min	°CWB	-20	-20	-20	
		Max	°CWB	15.5	15.5	15.5	
Sound Level	Cooling	Sound Power	dB(A)	66	67	69	
		Sound Pressure	dB(A)	50	51	53	
	Heating	Sound Pressure	dB(A)	52	53	55	

1-1 TECHNICAL SPECIFICATIONS			RXYSQ4PA7V1B	RXYSQ5PA7V1B	RXYSQ6PA7V1B
Refrigerant	Name		R-410A		
	Charge	kg	4.0	4.0	4.0
	Control		Expansion valve (electronic type)		
	Nx of circuits		1	1	1
Refrigerant Oil	Name		Daphne FVC68D		
	Charged Volume	l	1.5	1.5	1.5
Piping connections	Liquid (OD)	Type	Flare connection		
		Diameter (OD)	mm	9.52	9.52
	Gas	Type	Flare connection	Flare connection	Braze connection
		Diameter (OD)	mm	15.9	15.9
	Drain	Quantity	3	3	3
		Diameter (OD)	mm	26 × 3	
	Heat Insulation		Both liquid and gas pipes		
Max total length		m	300	300	300
Defrost Method			Reversed cycle		
Defrost Control			Sensor for outdoor heat exchanger temperature		
Capacity Control Method			Inverter controlled		
Capacity Control			24 to 100		
Safety devices			HPS, Fan motor thermal protection, Inverter overload protector, PC board fuse		
Standard Accessories			Installation manual, Operation manual		Installation manual, Operation manual, Connection pipes
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 5m, level difference : 0m.				
	8 meter 1				
	Sound pressure				
	Sound values				
Sound values are measured in a semi-anechoic room.					

1.2 Indoor Units

Ceiling Mounted Cassette Type (Double Flow)

1-1 TECHNICAL SPECIFICATIONS				FXCQ20M8V3B	FXCQ25M8V3B	FXCQ32M8V3B	FXCQ40M8V3B	FXCQ50M8V3B	
Nominal Capacity	Cooling	kW	2.20	2.80	3.60	4.50	5.60		
	Heating	kW	2.50	3.20	4.00	5.00	6.30		
Power input (Nominal)	Cooling	kW	0.077	0.092	0.092	0.130	0.130		
	Heating	kW	0.044	0.059	0.059	0.097	0.097		
Casing	Colour	Non painted							
	Material	Galvanised steel							
Dimensions	Packing	Height	mm	405	405	405	405	405	
		Width	mm	1060	1060	1060	1280	1280	
		Depth	mm	665	665	665	665	665	
	Unit	Height	mm	305	305	305	305	305	
		Width	mm	780	780	780	995	995	
		Depth	mm	600	600	600	600	600	
Weight	Unit	kg	26	26	26	31	32		
	Packed Unit	kg	30	30	30	37	38		
Required Ceiling Void		mm	350	350	350	350	350		
Heat Exchanger	Dimensions	Length	mm	475x2	475x2	475x2	690x2	475x2	
		Nr of Rows	2x2						
		Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50	
		Nr of Passes	3x2						
		Face Area	m ²	0.1x2	0.1x2	0.1x2	0.145x2	0.145x2	
		Nr of Stages	10x2						
	Empty Tubeplate Hole	6							
	Tube type	Hi-XSS (7)							
	Fin	Fin type	Symmetric waffle louvre						
		Treatment	Hydrophilic						
Fan	Type	Sirocco fan							
	Quantity	1		1	1	2	2		
Air Flow Rate	Cooling	High	m ³ /min	7.0	9.0	9.0	12.0	12.0	
		Low	m ³ /min	5.0	6.5	6.5	9.0	9.0	
	Heating	High	m ³ /min	7.0	9.0	9.0	12.0	12.0	
		Low	m ³ /min	5.0	6.5	6.5	9.0	9.0	
Fan	Motor	Quantity	1						
		Steps	Phase cut control						
		Output (high)	W	10	15	15	20	20	
		Drive	Direct drive						
Refrigerant	Name	R-410A							
Sound Level	Cooling	Sound power (nominal)	dBA	45.0	50.0	50.0	50.0	50.0	
Cooling	Sound Pressure	High	dBA	33.0	35.0	35.0	35.5	35.5	
		Low	dBA	28.0	29.0	29.0	30.5	30.5	
Heating	Sound Pressure	High	dBA	33.0	35.0	35.0	35.5	35.5	
		Low	dBA	28.0	29.0	29.0	30.5	30.5	
Piping connections	Liquid (OD)	Type	Flare connection						
		Diameter	mm	6.35	6.35	6.35	6.35	6.35	
	Gas	Type	Flare connection						
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	
	Drain	Diameter	mm	32	32	32	32	32	
Heat Insulation		Both liquid and gas pipes							
Decoration Panel	Model			BYBC32GJW1	BYBC32GJW1	BYBC32GJW1	BYBC50GJW1	BYBC50GJW1	
	Colour			White (10Y9/0,5)					
	Dimensions	Height	mm	53	53	53	53	53	
		Width	mm	1030	1030	1030	1245	1245	
		Depth	mm	680	680	680	680	680	
Weight		kg	8.0	8.0	8.0	8.5	8.5		
Drain-up Height		mm	600	600	600	600	600		

1-1 TECHNICAL SPECIFICATIONS	FXCQ20M8V3B	FXCQ25M8V3B	FXCQ32M8V3B	FXCQ40M8V3B	FXCQ50M8V3B
Air Filter	Resin net with mold resistance				
Air direction control	Up and downwards				
Refrigerant control	Electronic expansion valve				
Temperature control	Microprocessor thermostat for cooling and heating				
Safety devices	PC board fuse, Fan motor thermal fuse, Drain pump fuse				
Standard Accessories	Screws for fixing the paper pattern for installation, Washer for hanging bracket, Installation and operation manual, Paper pattern for installation, Insulation for fitting, Drain hose				
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 8m, level difference : 0m.				
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 8m, level difference : 0m.				
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.				

Ceiling Mounted Cassette Type (Double Flow)

1-1 TECHNICAL SPECIFICATIONS				FXCQ63M8V3B	FXCQ80M8V3B	FXCQ125M8V3B
Nominal Capacity	Cooling	kW		7.10	9.00	14.00
	Heating	kW		8.00	10.00	16.00
Power input (Nominal)	Cooling	kW		0.161	0.209	0.256
	Heating	kW		0.126	0.176	0.223
Casing	Colour			Non painted		
	Material			Galvanised steel		
Dimensions	Packing	Height	mm	405	405	405
		Width	mm	1460	1808	1808
		Depth	mm	665	645	645
	Unit	Height	mm	305	305	305
		Width	mm	1180	1670	1670
		Depth	mm	600	600	600
Weight	Unit		kg	35	47	48
	Packed Unit		kg	42	55	56
Required Ceiling Void			mm	350	350	350
Heat Exchanger	Dimensions	Length	mm	875x2		1365
		Nr of Rows		2x2		
		Fin Pitch	mm	1.50	1.50	1.50
		Nr of Passes		6x2	5x2	6
		Face Area	m ²	0.184x2	0.287x2	0.287x2
		Nr of Stages		10x2		
	Empty Tubeplate Hole			8		
	Tube type			Hi-XSS (7)		
	Fin	Fin type		Symmetric waffle louvre		
		Treatment		Hydrophilic		
Fan	Type			Sirocco fan		
	Quantity			2	3	3
Air Flow Rate	Cooling	High	m ³ /min	16.5	26.0	33.0
		Low	m ³ /min	13.0	21.0	25.0
	Heating	High	m ³ /min	16.5	26.0	33.0
		Low	m ³ /min	13.0	21.0	25.0
Fan	Motor	Quantity		1	1	1
		Steps		Phase cut control		
		Output (high)	W	30	50	85
		Drive		Direct drive		
Refrigerant	Name			R-410A		
Sound Level	Cooling	Sound power (nominal)	dBA	52.0	54.0	60.0
Cooling	Sound Pressure	High	dBA	38.0	40.0	45.0
		Low	dBA	33.0	35.0	39.0
Heating	Sound Pressure	High	dBA	38.0	40.0	45.0
		Low	dBA	33.0	35.0	39.0
Piping connections	Liquid (OD)	Type		Flare connection		
		Diameter	mm	9.5	9.5	9.5
	Gas	Type		Flare connection		
		Diameter	mm	15.9	15.9	15.9
	Drain	Diameter	mm	32	32	32
Heat Insulation		Both liquid and gas pipes				
Decoration Panel	Model			BYBC63GJW1	BYBC125GJW1	BYBC125GJW1
	Colour			White (10Y9/0,5)		
	Dimensions	Height	mm	53	53	53
		Width	mm	1430	1920	1920
		Depth	mm	680	680	680
Weight		kg	9.5	12.0	12.0	
Drain-up Height			mm	600	600	600
Air Filter			Resin net with mold resistance			
Air direction control			Up and downwards			
Refrigerant control			Electronic expansion valve			
Temperature control			Microprocessor thermostat for cooling and heating			
Safety devices			PC board fuse, Fan motor thermal fuse, Drain pump fuse	PC board fuse, Fan motor thermal protector, Drain pump fuse		
Standard Accessories			Screws for fixing the paper pattern for installation, Washer for hanging bracket, Clamps, Installation and operation manual, Paper pattern for installation, Insulation for fitting, Drain hose			
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 8m, level difference : 0m.					
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 8m, level difference : 0m.					
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.					

Ceiling Mounted Cassette Type (Round-flow)

1-1 TECHNICAL SPECIFICATIONS				FXFQ20P7VEB	FXFQ25P7VEB	FXFQ32P7VEB	FXFQ40P7VEB	FXFQ50P7VEB
Capacity	Cooling	kW		2.2	2.8	3.6	4.5	5.6
	Heating	kW		2.5	3.2	4.0	5.0	6.3
Power Input	Cooling	kW		0.053	0.053	0.053	0.063	0.083
	Heating	kW		0.045	0.045	0.045	0.055	0.067
Casing	Material		Galvanised steel					
Dimensions	Packing	Height	mm	220	220	220	220	220
		Width	mm	882	882	882	882	882
		Depth	mm	882	882	882	882	882
	Unit	Height	mm	204	204	204	204	204
		Width	mm	840	840	840	840	840
		Depth	mm	840	840	840	840	840
Weight	Unit	kg		20.0	20.0	20.0	20.0	21.0
	Packed Unit	kg		24.0	24.0	24.0	24.0	26.0
Dimensions	Length	Inside	mm	2,096				
		Outside	mm	2,152				
Heat Exchanger	Dimensions	Nr of Rows		2	2	2	2	2
		Fin Pitch	mm	1.2	1.2	1.2	1.2	1.2
		Nr of Passes		2	2	3	3	7
		Face Area	m ²	0.267	0.267	0.267	0.267	0.357
		Nr of Stages		6	6	6	6	8
	Empty Tubeplate Hole		4	4				
Fin	Fin type	Cross fin coil (Multi louver fins and Hi-XSS tubes)						
Fan	Type		Turbo fan					
	Quantity			1	1	1	1	1
Air Flow Rate	Cooling	High	m ³ /min	12.5	12.5	12.5	13.5	15.5
		Low	m ³ /min	9.0	9.0	9.0	9.0	10.0
	Heating	High	m ³ /min	12.5	12.5	12.5	13.5	15.0
		Low	m ³ /min	9.0	9.0	9.0	9.0	9.5
Fan	Motor	Model		QTS48D11M				
		Steps		2	2	2	2	2
		Output (high)	W	56	56	56	56	56
Refrigerant	Name		R-410A					
Sound Level	Cooling	Sound power (nominal)	dBA	49	49	49	50	51
Cooling	Sound Pressure	High	dBA	31	31	31	32	33
		Low	dBA	28	28	28	28	28
Heating	Sound Pressure	High	dBA	31	31	31	32	33
		Low	dBA	28	28	28	28	28
Piping connections	Liquid (OD)	Type		Flare connection				
		Diameter	mm	6.35	6.4	6.4	6.4	6.4
	Gas	Type		Flare connection				
		Diameter	mm	12.7	12.7	12.7	12.7	12.7
	Drain	Diameter	mm	VP25 (I.D. 25/O.D. 32)				
	Heat Insulation		Foamed polystyrene/polyethylene					
Sound absorbing insulation		(Foamed Polyurethane)						
Decoration Panel	Model		BYCQ140CW1					
	Colour		RAL9010					
	Dimensions	Height	mm	50	50	50	50	50
		Width	mm	950	950	950	950	950
		Depth	mm	950	950	950	950	950
Weight	kg		5.5	5.5	5.5	5.5	5.5	
Air Filter	Resin net with mold resistance							
Standard Accessories	Installation and operation manual, Drain hose, Washer for hanging bracket, Screws, Sealing Pads, Insulation for fitting, Clamp for drain hose, Installation guide, Drain sealing pad							
Notes	The sound pressure values are mentioned for a unit installed with rear suction							
	The sound power level is an absolute value indicating the power with a sound source generates.							
	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 5m, level difference : 0m.							
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 5m (horizontal)							
Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.								

Ceiling Mounted Cassette Type (Round-flow)

1-1 TECHNICAL SPECIFICATIONS				FXFQ63P7VEB	FXFQ80P7VEB	FXFQ100P7VEB	FXFQ125P7VEB
Capacity	Cooling	kW		7.1	9.0	11.2	14.0
	Heating	kW		8.0	10.0	12.5	16.0
Power Input	Cooling	kW		0.095	0.120	0.173	0.258
	Heating	kW		0.114	0.108	0.176	0.246
Casing	Material			Galvanised steel			
Dimensions	Packing	Height	mm	220	262	262	304
		Width	mm	882	882	882	882
		Depth	mm	882	882	882	882
	Unit	Height	mm	204	246	246	288
		Width	mm	840	840	840	840
		Depth	mm	840	840	840	840
Weight	Unit		kg	21.0	24.0	24.0	26.0
	Packed Unit		kg	26.0	28.0	28.0	31.0
Dimensions	Length	Inside	mm	2,096			
		Outside	mm	2,152			
Heat Exchanger	Dimensions	Nr of Rows		2	2	2	2
		Fin Pitch	mm	1.2	1.2	1.2	1.2
		Nr of Passes		7	9	9	11
		Face Area	m ²	0.357	0.446	0.446	0.535
		Nr of Stages		8	10	10	12
	Fin	Fin type	Cross fin coil (Multi louver fins and Hi-XSS tubes)				
Fan	Type			Turbo fan			
	Quantity			1	1	1	1
Air Flow Rate	Cooling	High	m ³ /min	16.5	23.5	26.5	33.0
		Low	m ³ /min	11.0	14.5	17.0	20.0
	Heating	High	m ³ /min	17.5	23.5	28.0	33.0
		Low	m ³ /min	12.0	14.5	17.5	20.0
Fan	Motor	Model		QTS48D11M	QTS48C15M	QTS48C15M	QTS48C15M
		Steps		2	2	2	2
		Output (high)	W	56	120	120	120
Refrigerant	Name			R-410A			
Sound Level	Cooling	Sound power (nominal)	dBA	52	55	58	61
Cooling	Sound Pressure	High	dBA	34	38	41	44
		Low	dBA	29	32	33	34
Heating	Sound Pressure	High	dBA	36	38	42	44
		Low	dBA	30	32	34	34
Piping connections	Liquid (OD)	Type		Flare connection			
		Diameter	mm	9.5	9.5	9.5	9.5
	Gas	Type		Flare connection			
		Diameter	mm	15.9	15.9	15.9	15.9
	Drain	Diameter		VP25 (I.D. 25/O.D. 32)			
	Heat Insulation			Foamed polystyrene/polyethylene			
Sound absorbing insulation			(Foamed Polyurethane)				
Decoration Panel	Model			BYCQ140CW1			
	Colour			RAL9010			
	Dimensions	Height	mm	50	50	50	50
		Width	mm	950	950	950	950
		Depth	mm	950	950	950	950
Weight		kg	5.5	5.5	5.5	5.5	
Air Filter	Resin net with mold resistance						
Standard Accessories				Installation and operation manual, Drain hose, Washer for hanging bracket, Screws, Sealing Pads, Insulation for fitting, Clamp for drain hose, Installation guide, Drain sealing pad			
Notes	The sound pressure values are mentioned for a unit installed with rear suction						
	The sound power level is an absolute value indicating the power with a sound source generates.						
	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 5m, level difference : 0m.						
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 5m (horizontal)						
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.						

600×600 Ceiling Mounted Cassette Type (Multi Flow)

1-1 TECHNICAL SPECIFICATIONS				FXZQ20M8V1B	FXZQ25M8V1B	FXZQ32M8V1B	FXZQ40M8V1B	FXZQ50M8V1B
Nominal Capacity	Cooling	kW		2.20	2.80	3.60	4.50	5.60
	Heating	kW		2.50	3.20	4.00	5.00	6.30
Power input (Nominal)	Cooling	kW		0.073	0.073	0.076	0.089	0.115
	Heating	kW		0.064	0.064	0.068	0.080	0.107
Casing	Material			Galvanised steel				
Dimensions	Unit	Height	mm	286	286	286	286	286
		Width	mm	575	575	575	575	575
		Depth	mm	575	575	575	575	575
Weight	Unit		kg	18	18	18	18	18
Heat Exchanger	Dimensions	Nr of Rows		2	2	2	2	2
		Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50
		Face Area	m ²	0.269	0.269	0.269	0.269	0.269
		Nr of Stages		10	10	10	10	10
Fan	Type			Turbo fan				
	Quantity			1	1	1	1	1
Air Flow Rate	Cooling	High	m ³ /min	9.00	9.00	9.50	11.00	14.00
		Low	m ³ /min	7.00	7.00	7.50	8.00	10.00
Fan	Motor	Quantity		1	1	1	1	1
		Model		QTS32C15M				
		Output (high)	W	55	55	55	55	55
		Drive			Direct drive			
Refrigerant	Name			R-410A				
Sound Level	Cooling	Sound power (nominal)	dBA	47.0	47.0	49.0	53.0	58.0
Cooling	Sound Pressure	High	dBA	30.0	30.0	32.0	36.0	41.0
		Low	dBA	25.0	25.0	26.0	28.0	33.0
Piping connections	Liquid (OD)	Type		Flare connection				
		Diameter	mm	6.4	6.4	6.4	6.4	6.4
	Gas	Type		Flare connection				
		Diameter	mm	12.7	12.7	12.7	12.7	12.7
	Drain	Diameter	mm	26	26	26	26	26
Heat Insulation			Foamed polystyrene/polyethylene					
Decoration Panel	Model			BYFQ60B7W1				
	Colour			White (Ral 9010)				
	Dimensions	Height	mm	55	55	55	55	55
		Width	mm	700	700	700	700	700
		Depth	mm	700	700	700	700	700
Weight	kg		2.7	2.7	2.7	2.7	2.7	
Air Filter	Resin net with mold resistance							
Refrigerant control	Electronic expansion valve							
Temperature control	Microprocessor thermostat for cooling and heating							
Safety devices	PC board fuse, Fan motor thermal protector							
Standard Accessories	Installation and operation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing Pads, Clamps, Screws, Washer for hanger bracket, Insulation for fitting							
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)							
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)							
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.							

Ceiling Mounted Cassette Corner Type

1-1 TECHNICAL SPECIFICATIONS				FXKQ25MAVE	FXKQ32MAVE	FXKQ40MAVE	FXKQ63MAVE
Nominal Capacity	Cooling	kW		2.80	3.60	4.50	7.10
	Heating	kW		3.20	4.00	5.00	8.00
Power input (Nominal)	Cooling	kW		0.066	0.066	0.076	0.105
	Heating	kW		0.046	0.046	0.056	0.085
Casing	Material			Galvanised steel			
Dimensions	Unit	Height	mm	215	215	215	215
		Width	mm	1110	1110	1110	1310
		Depth	mm	710	710	710	710
Weight	Unit		kg	31	31	31	34
Heat Exchanger	Dimensions	Nr of Rows		2	2	2	3
		Fin Pitch	mm	1.75	1.75	1.75	1.75
		Face Area	m ²	0.180	0.180	0.180	0.226
		Nr of Stages		11	11	11	11
Fan	Type			Sirocco fan			
	Quantity			1	1	1	1
Air Flow Rate	Cooling	High	m ³ /min	11.00	11.00	13.00	18.00
		Low	m ³ /min	9.00	9.00	10.00	15.00
Fan	Motor	Quantity		1	1	1	1
		Model		3D12H1AN1V1	3D12H1AN1V1	3D12H1AP1V1	4D12H1AJ1V1
		Output (high)	W	15	15	20	45
		Drive			Direct drive		
Refrigerant	Name			R-410A			
Cooling	Sound Pressure	High	dBA	38.0	38.0	40.0	42.0
		Low	dBA	33.0	33.0	34.0	37.0
Piping connections	Liquid (OD)	Type		Flare connection			
		Diameter	mm	6.4	6.4	6.4	9.5
	Gas	Type		Flare connection			
		Diameter	mm	12.7	12.7	12.7	15.9
	Drain	Diameter	mm	32	32	32	32
Heat Insulation			Foamed Polyethylene				
Decoration Panel	Model			BYK45FJW1	BYK45FJW1	BYK45FJW1	BYK71FJW1
	Colour			White			
	Dimensions	Height	mm	70	70	70	70
		Width	mm	1240	1240	1240	1440
		Depth	mm	800	800	800	800
Weight			kg	8.5	8.5	8.5	9.5
Air Filter				Resin net with mold resistance			
Refrigerant control				Electronic expansion valve			
Temperature control				Microprocessor thermostat for cooling and heating			
Safety devices				PC board fuse, Drain pump fuse, Fan motor thermal			
Standard Accessories				Installation and operation manual, Metal clamp for drain hose, Clamps, Insulation for hangar bracket, Positioning Jig for installation, Paper pattern for installation, Drain hose, Insulation for fitting, Sealing Pads, Screws, Washer, Air Outlet blocking pad			
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7,5m (horizontal)						
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)						
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.						
	Sound pressure levels are measured at 220V						

Slim Ceiling Mounted Duct Type

1-1 TECHNICAL SPECIFICATIONS				FXDQ20PVE	FXDQ25PVE	FXDQ32PVE	FXDQ40NAVE	FXDQ50NAVE	FXDQ63NAVE
Nominal Capacity	Cooling	kW		2.20	2.80	3.60	4.50	5.60	7.10
	Heating	kW		2.50	3.20	4.00	5.00	6.30	8.00
Power input (Nominal)	Cooling	kW		0.086	0.086	0.089	0.160	0.165	0.181
	Heating	kW		0.067	0.067	0.070	0.147	0.152	0.168
Casing	Material			Galvanised steel plate					
Dimensions	Unit	Height	mm	200	200	200	200	200	200
		Width	mm	700	700	700	900	900	1100
		Depth	mm	620	620	620	620	620	620
Weight	Unit		kg	23.0	23.0	23.0	27.0	28.0	31.0
Heat Exchanger	Dimensions	Nr of Rows		2	2	3	3	3	3
		Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50	1.50
		Face Area	m ²	0.126	0.126	0.126	0.176	0.176	0.227
		Nr of Stages		12	12	12	12	12	12
	Fin	Fin type		Cross fin coil					
Fan	Type			Sirocco fan					
	Quantity			1	1	1	1	1	1
Air Flow Rate	Cooling	High	m ³ /min	8.0	8.0	8.0	10.50	12.50	16.50
		Low	m ³ /min	6.4	6.4	6.4	8.50	10.00	13.00
Fan	External static pressure	High	Pa	30	30	30	44	44	44
		Standard	Pa	10	10	10	15	15	15
	Motor	Output (high)	W	62	62	62	62	130	130
		Drive			Direct drive				
Refrigerant	Name			R-410A					
Cooling	Sound Pressure	High	dBA	33.0	33.0	33.0	34.0	35.0	36.0
		Low	dBA	29.0	29.0	29.0	30.0	31.0	32.0
Piping connections	Liquid (OD)	Type		Flare connection					
		Diameter	mm	6.4	6.4	6.4	6.4	6.4	9.5
	Gas	Type		Flare connection					
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9
Drain	Diameter		VP20 (I.D. 20/O.D. 26)						
Air Filter	Removable/washable/Mildew proof								
Refrigerant control	Electronic expansion valve								
Temperature control	Microprocessor thermostat for cooling and heating								
Safety devices	Fuse, Fan motor thermal protector								
Standard Accessories	Installation and operation manual, Drain hose, Sealing Pads, Clamps, Washer, Insulation for fitting, Clamp metal, Washer fixing plate, Screws for duct flanges, Air filter								
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)								
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)								
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.								
	External static pressure can be changed by the remote control.								
The operation sound levels are conversion values in anechoic chamber. In practice, sound levels tend to be higher than the specified values due to ambient noise or reflection. When the suction place is changed to bottom suction, sound level will increase by approximately 5dBA.									

Slim Ceiling Mounted Duct Type (with Drain Pump)

1-1 TECHNICAL SPECIFICATIONS				FXDQ20M8V3B		FXDQ25M8V3B	
Nominal Capacity	Cooling			2.20		2.80	
	Heating			2.50		3.20	
Power input (Nominal)	Cooling			0.050		0.050	
	Heating			0.050		0.050	
Casing	Colour	Non painted					
	Material	Galvanised steel					
Dimensions	Packing	Height	mm	301		301	
		Width	mm	584		584	
		Depth	mm	753		753	
	Unit	Height	mm	230		230	
		Width	mm	502		502	
		Depth	mm	652		652	
Weight	Unit	kg		17		17	
	Packed Unit	kg		18		18	
Required Ceiling Void			mm	250		250	
Heat Exchanger	Dimensions	Length	mm	430		430	
		Nr of Rows		2		2	
		Fin Pitch	mm	1.40		1.40	
		Nr of Passes		2		2	
		Face Area	m ²	0.108		0.108	
		Nr of Stages		12		12	
		Empty Tubeplate Hole		4			
	Tube type	Hi-XSS (7)					
Fin	Fin type	Symmetric waffle louvre					
	Treatment	Hydrophilic					
Fan	Type	Sirocco fan					
	Quantity			1		1	
Air Flow Rate	Cooling	High	m ³ /min	6.70		7.40	
		Low	m ³ /min	5.20		5.80	
	Heating	High	m ³ /min	6.70		7.40	
		Low	m ³ /min	5.20		5.80	
Fan	Motor	Quantity		1		1	
		Steps		step motor			
		Output (high)	W	10		10	
		Drive		Direct drive			
Refrigerant	Name		R-410A				
Sound Level	Cooling	Sound power (nominal)	dBA	50.0		50.0	
Cooling	Sound Pressure	High	dBA	37.0		37.0	
		Low	dBA	32.0		32.0	
Heating	Sound Pressure	High	dBA	37.0		37.0	
		Low	dBA	32.0		32.0	
Piping connections	Liquid (OD)	Type		Flare connection			
		Diameter	mm	6.4		6.4	
	Gas	Type		Flare connection			
		Diameter	mm	12.7		12.7	
Drain	Diameter	mm	27.2		27.2		
Air Filter			Resin net with mold resistance				
Air direction control			Up and downwards				
Refrigerant control			Electronic expansion valve				
Temperature control			Microprocessor thermostat for cooling and heating				
Safety devices			PC board fuse, Fan motor thermal protector				
Standard Accessories			Installation and operation manual, Fuse, Caution for servicing sticker, Suction air filter				
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 8m, level difference : 0m.						
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 8m, level difference : 0m.						
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.						

Ceiling Mounted Built-in Type

1-1 TECHNICAL SPECIFICATIONS				FXSQ20M8V3B	FXSQ25M8V3B	FXSQ32M8V3B	FXSQ40M8V3B	FXSQ50M8V3B	
Capacity (Conditions specified in 1)	Cooling	kW		2.20	2.80	3.60	4.50	5.60	
	Heating	kW		2.50	3.20	4.00	5.00	6.30	
Power input (Nominal)	Cooling	kW		0.110	0.110	0.114	0.127	0.143	
	Heating	kW		0.090	0.090	0.094	0.107	0.123	
Casing	Colour	Non painted							
	Material	Galvanised steel							
Dimensions	Packing	Height	mm	354	354	354	354	354	
		Width	mm	742	742	742	892	892	
		Depth	mm	936	936	936	936	936	
	Unit	Height	mm	300	300	300	300	300	
		Width	mm	550	550	550	700	700	
		Depth	mm	800	800	800	800	800	
Weight	Unit	kg	30	30	30	30	31		
	Packed Unit	kg	34	34	34	34	35		
Required Ceiling Void		mm	350	350	350	350	350		
Heat Exchanger	Dimensions	Length	mm	300	300	300	450	450	
		Nr of Rows		3	3	3	3	3	
		Fin Pitch	mm	1.75	1.75	1.75	1.75	1.75	
		Nr of Passes		3	3	3	4	4	
		Face Area	m ²	0.088	0.088	0.088	0.132	0.132	
		Nr of Stages		14	14	14	14	14	
		Empty Tubeplate Hole		14					
	Tube type	Hi-XSS (7)							
Fin	Fin type	Symmetric waffle louvre							
	Treatment	Hydrophilic							
Fan	Type	Sirocco fan							
	Quantity	1							
Air Flow Rate	Cooling	High	m ³ /min	9.00	9.00	9.50	11.50	15.00	
		Low	m ³ /min	6.50	6.50	7.00	9.00	11.00	
	Heating	High	m ³ /min	9.00	9.00	9.50	11.50	15.00	
		Low	m ³ /min	6.50	6.50	7.00	9.00	11.00	
Fan	External static pressure	High	Pa	125	125	104	116	136	
		Standard	Pa	105	105	88	98	114	
		Low	Pa	96	96	78	85	99	
	Motor	Quantity	1						
		Model			D18H3AA1V1	D18H3AA1V1	D18H3AA1V1	D18H2AC1V1	D18H2AB1V1
		Steps	step motor						
		Output (high)	W	50	50	50	65	85	
	Drive	Direct drive							
Refrigerant	Name	R-410A							
Sound Level	Cooling	Sound power (nominal)	dBA	50.0	50.0	51.0	56.0	58.0	
Cooling	Sound Pressure	High	dBA	32.0	32.0	33.0	33.0	35.0	
		Low	dBA	28.0	28.0	28.0	29.0	31.0	
Heating	Sound Pressure	High	dBA	32.0	32.0	33.0	33.0	35.0	
		Low	dBA	28.0	28.0	28.0	29.0	31.0	
Piping connections	Liquid (OD)	Type	Flare connection						
		Diameter	mm	6.35	6.35	6.35	6.35	6.35	
	Gas	Type	Flare connection						
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	
Drain	Diameter	mm	32	32	32	32	32		
Heat Insulation	Both liquid and gas pipes								
Decoration Panel	Model			BYBS32DJW1	BYBS32DJW1	BYBS32DJW1	BYBS45DJW1	BYBS45DJW1	
	Colour	White (10Y9/0,5)							
	Dimensions	Height	mm	55	55	55	55	55	
		Width	mm	650	650	650	800	800	
		Depth	mm	500	500	500	500	500	
Weight	kg	3	3	3	3.5	3.5			
Drain-up Height		mm	600	600	600	600	600		
Air Filter	Resin net with mold resistance								
Air direction control	Up and downwards								
Refrigerant control	Electronic expansion valve								
Temperature control	Microprocessor thermostat for cooling and heating								
Safety devices	PC board fuse, Drain pump fuse, Fan motor thermal fuse								
Standard Accessories	Metal clamp for drain hose, Paper pattern for installation, Drain hose, Insulation for fitting, Washer for hanger bracket, Screws for duct flanges, Screws for fixing the paper pattern for installation, Fuse, Installation and operation manual								
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 8m, level difference : 0m.								
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 8m, level difference : 0m.								
	The external static pressure is changeable : change the connectors inside the electrical box, this pressure means : High static pressure -standard - low static pressure								
	The external static pressure is changeable : change the connectors inside the electrical box, this pressure means : High static pressure -standard								
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.								
The sound pressure values are mentioned for a unit installed with rear suction									

Ceiling Mounted Built-in Type

1-1 TECHNICAL SPECIFICATIONS				FXSQ63M8V3B	FXSQ80M8V3B	FXSQ100M8V3B	FXSQ125M8V3B	
Capacity (Conditions specified in 1)	Cooling	kW		7.10	9.00	11.20	14.00	
	Heating	kW		8.00	10.00	12.50	16.00	
Power input (Nominal)	Cooling	kW		0.189	0.234	0.242	0.321	
	Heating	kW		0.169	0.214	0.222	0.301	
Casing	Colour	Non painted						
	Material	Galvanised steel						
Dimensions	Packing	Height	mm	354	356	356	356	
		Width	mm	1192	1596	1596	1596	
		Depth	mm	936	938	938	938	
	Unit	Height	mm	300	300	300	300	
		Width	mm	1000	1400	1400	1400	
		Depth	mm	800	800	800	800	
Weight	Unit	kg		41	51	51	52	
	Packed Unit	kg		47	58	58	59	
Required Ceiling Void		mm		350	350	350	350	
Heat Exchanger	Dimensions	Length	mm	750	1150	1150	1150	
		Nr of Rows		3	3	3	3	
		Fin Pitch	mm	1.75	1.75	1.75	1.75	
		Nr of Passes		7	10	10	10	
		Face Area	m ²		0.221	0.338	0.338	0.338
		Nr of Stages		14	14	14	14	
	Tube type	Hi-XSS (7)						
	Fin	Fin type	Symmetric waffle louvre					
Treatment		Hydrophilic						
Fan	Type	Sirocco fan						
	Quantity			2	3	3	3	
Air Flow Rate	Cooling	High	m ³ /min	21.00	27.00	28.00	38.00	
		Low	m ³ /min	15.50	20.00	20.50	28.00	
	Heating	High	m ³ /min	21.00	27.00	28.00	38.00	
		Low	m ³ /min	15.50	20.00	20.50	28.00	
Fan	External static pressure	High	Pa	123	141	141	109	
		Standard	Pa	111	125	125	93	
		Low	Pa	98				
	Motor	Quantity			1	1	1	1
		Model			2D18H2AB1V1	3D18H2AH1V1	3D18H2AH1V1	3D18H2AG1V1
		Steps	step motor					
		Output (high)	W		125	135	135	225
		Drive	Direct drive					
Refrigerant	Name	R-410A						
Sound Level	Cooling	Sound power (nominal)	dBa	56.0	55.0	56.0	65.0	
Cooling	Sound Pressure	High	dBa	35.0	37.0	38.0	40.0	
		Low	dBa	30.0	31.0	33.0	35.0	
Heating	Sound Pressure	High	dBa	35.0	37.0	38.0	40.0	
		Low	dBa	30.0	31.0	33.0	35.0	
Piping connections	Liquid (OD)	Type	Flare connection					
		Diameter	mm	9.5	9.5	9.5	9.5	
	Gas	Type	Flare connection					
		Diameter	mm	15.9	15.9	15.9	15.9	
Drain	Diameter	mm	32	32	32	32		
Heat Insulation	Both liquid and gas pipes							
Decoration Panel	Model			BYBS71DJW1	BYBS125DJW1	BYBS125DJW1	BYBS125DJW1	
	Colour	White (10Y9/0,5)						
	Dimensions	Height	mm	55	55	55	55	
		Width	mm	1100	1500	1500	1500	
		Depth	mm	500	500	500	500	
Weight	kg		4.5	6.5	6.5	6.5		
Drain-up Height		mm	600	600	600	600		
Air Filter	Resin net with mold resistance							
Air direction control	Up and downwards							
Refrigerant control	Electronic expansion valve							
Temperature control	Microprocessor thermostat for cooling and heating							
Safety devices	PC board fuse, Drain pump fuse, Fan motor thermal fuse		PC board fuse, Drain pump fuse, Fan motor thermal protector					
Standard Accessories	Metal clamp for drain hose, Paper pattern for installation, Drain hose, Insulation for fitting, Washer for hanger bracket, Screws for duct flanges, Screws for fixing the paper pattern for installation, Fuse, Installation and operation manual							
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 8m, level difference : 0m.							
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 8m, level difference : 0m.							
	The external static pressure is changeable : change the connectors inside the electrical box, this pressure means : High static pressure -standard - low static pressure							
	The external static pressure is changeable : change the connectors inside the electrical box, this pressure means : High static pressure -standard							
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat. The sound pressure values are mentioned for a unit installed with rear suction							

Ceiling Mounted Duct Type

1-1 TECHNICAL SPECIFICATIONS			FXMQ40PVE	FXMQ50PVE	FXMQ63PVE	FXMQ80PVE	FXMQ100PVE	FXMQ125PVE	
Capacity	Cooling	kW	4.5	5.6	7.1	9.0	11.2	14.0	
	Heating	kW	5.0	6.3	8.0	10.0	12.5	16.0	
Power Input	Cooling	kW	0.194 (1) 0.193 (2)	0.215 (1) 0.214 (2)	0.230 (1) 0.229 (2)	0.298 (1) 0.297 (2)	0.376 (1) 0.375 (2)	0.461 (1) 0.460 (2)	
	Heating	kW	0.182	0.203	0.218	0.286	0.364	0.449	
Casing	Material		Galvanised steel plate						
Dimensions	Unit	Height	mm	300	300	300	300	300	
		Width	mm	700	1,000	1,000	1,000	1,400	
		Depth	mm	700	700	700	700	700	
Weight	Unit	kg	28	36	36	36	46	46	
Heat Exchanger	Dimensions	Nr of Rows		3	3	3	3	3	
		Fin Pitch	mm	1.75	1.75	1.75	1.75	1.75	
		Face Area	m ²	0.148	0.249	0.249	0.249	0.383	
		Nr of Stages		16	16	16	16	16	
Fan	Type		Sirocco fan						
Air Flow Rate	Cooling	High high	m ³ /min	16	18	19.5	25	32	
		High	m ³ /min	13	16.5	17.5	22.5	27	
		Low	m ³ /min	11	15	16	20	23	
Fan	External static pressure	High	Pa	160	200	200	200	200	
		Standard	Pa	100	100	100	100	100	
		Low	Pa	30	50	50	50	50	
	Motor	Output (high)	W	140	350	350	350	350	
		Drive		Direct drive					
Piping connections	Liquid (OD)	Type		Flare connection					
		Diameter	mm	6.35	9.52	9.52	9.52	9.52	9.52
	Gas	Type		Flare connection					
		Diameter	mm	12.7	15.9	15.9	15.9	15.9	15.9
Drain	Diameter	mm	VP25 (I.D. 32/O.D. 25)						
Refrigerant control			Electronic expansion valve						
Temperature control			Microprocessor thermostat for cooling and heating						
Safety devices			Fuse, Fan driver overload protector						
Standard Accessories			Operation manual, Installation manual, Drain hose, Sealing pads, Clamps, Washer, Screws, Insulation for fitting, Clamp metal, Air discharge flange, Air suction flange						
Notes	Nominal cooling capacities are based on following conditions: return air temperature: 27°CDB/19°CWB; outdoor temperature: 35°CDB; standard external static pressure: 100Pa; equivalent refrigerant piping: 7.5m (horizontal)								
	Nominal heating capacities are based on following conditions: return air temperature: 20°CDB; outdoor temperature: 7°CDB/6°CWB; standard external static pressure: 100Pa; equivalent refrigerant piping: 7.5m (horizontal)								
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.								
	External static pressure is changeable in 13 or 14 stages within the () range by the remote control.								
Air filter is not standard accessory, but please mount it in the duct system of the suction side. Select its colorimetric method/gravity method) 50% or more.									

Ceiling Suspended Type

1-1 TECHNICAL SPECIFICATIONS				FXHQ32MAVE		FXHQ63MAVE		FXHQ100MAVE			
Nominal Capacity	Cooling			kW		3.60		7.10		11.20	
	Heating			kW		4.00		8.00		12.50	
Power input (Nominal)	Cooling			kW		0.111		0.115		0.135	
	Heating			kW		0.111		0.115		0.135	
Casing	Colour			White (10Y9/0,5)							
Dimensions	Unit	Height	mm	195		195		195			
		Width	mm	960		1160		1400			
		Depth	mm	680		680		680			
Weight	Unit		kg		24		28		33		
Heat Exchanger	Dimensions	Nr of Rows		2		3		3			
		Fin Pitch		mm		1.75		1.75			
		Face Area		m ²		0.182		0.233			
		Nr of Stages		12		12		12			
Fan	Type			Sirocco fan							
	Quantity			1		1		1			
Air Flow Rate	Cooling	High	m ³ /min	12.00		17.50		25.00			
		Low	m ³ /min	10.00		14.00		19.50			
Fan	Motor	Quantity		1		1		1			
		Model		3D12K1AA1		4D12K1AA1		3D12K2AA1			
		Output (high)	W	62		62		130			
		Drive			Direct drive						
Refrigerant	Name			R-410A							
Cooling	Sound Pressure	High	dBA	36.0		39.0		45.0			
		Low	dBA	31.0		34.0		37.0			
Piping connections	Liquid (OD)	Type		Flare connection							
		Diameter	mm	6.4		9.5		9.5			
	Gas	Type		Flare connection							
		Diameter	mm	12.7		15.9		15.9			
	Drain	Diameter	mm	26		26		26			
Heat Insulation			Glass wool								
Air Filter				Resin net with mold resistance							
Refrigerant control				Electronic expansion valve							
Temperature control				Microprocessor thermostat for cooling and heating							
Safety devices				PC board fuse, Fan motor thermal protector							
Standard Accessories				Installation and operation manual, Drain hose, Paper pattern for installation, Clamp metal, Insulation for fitting Clamps, Washer							
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7,5m (horizontal)										
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)										
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.										

Wall Mounted Type

1-1 TECHNICAL SPECIFICATIONS				FXAQ20MAVE	FXAQ25MAVE	FXAQ32MAVE	FXAQ40MAVE	FXAQ50MAVE	FXAQ63MAVE	
Nominal Capacity	Cooling	kW		2.20	2.80	3.60	4.50	5.60	7.10	
	Heating	kW		2.50	3.20	4.00	5.00	6.30	8.00	
Power input (Nominal)	Cooling	kW		0.016	0.022	0.027	0.020	0.027	0.050	
	Heating	kW		0.024	0.027	0.032	0.020	0.032	0.060	
Casing	Colour			white (3.0Y8.5/0.5)						
Dimensions	Unit	Height	mm	290	290	290	290	290	290	
		Width	mm	795	795	795	1050	1050	1050	
		Depth	mm	230	230	230	230	230	230	
Weight	Unit		kg	11	11	11	14	14	14	
Heat Exchanger	Dimensions	Nr of Rows		2	2	2	2	2	2	
		Fin Pitch		mm	1.40	1.40	1.40	1.40	1.40	1.40
		Face Area		m ²	0.161	0.161	0.161	0.213	0.213	0.213
		Nr of Stages			14	14	14	14	14	14
Fan	Type			Cross flow fan						
	Quantity			1	1	1	1			
Air Flow Rate	Cooling	High	m ³ /min	7.50	8.00	9.00	12.00	15.00	19.00	
		Low	m ³ /min	4.50	5.00	5.50	9.00	12.00	14.00	
Fan	Motor	Quantity		1	1	1	1	1	1	
		Model		QCL9661M	QCL9661M	QCL9661M	QCL9686M	QCL9686M	QCL9686M	
		Output (high)	W	40	40	40	43	43	43	
		Drive			Direct drive					
Refrigerant	Name			R-410A						
Cooling	Sound Pressure	High	dBA	35.0	36.0	37.0	39.0	42.0	46.0	
		Low	dBA	29.0	29.0	29.0	34.0	36.0	39.0	
Piping connections	Liquid (OD)	Type		Flare connection						
		Diameter	mm	6.4	6.4	6.4	6.4	6.35	9.5	
	Gas	Type		Flare connection						
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9	
	Drain	Diameter		mm	18	18	18	18	18	18
Heat Insulation			Foamed polystyrene/polyethylene							
Air Filter				Washable resin net						
Refrigerant control				Electronic expansion valve						
Temperature control				Microprocessor thermostat for cooling and heating						
Safety devices				PC board fuse						
Standard Accessories				Installation and operation manual, Installation panel, Paper pattern for installation, Insulation tape, Clamps, Screws						
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 5m (horizontal)									
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 5m (horizontal)									
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.									

Floor Standing Type

1-1 TECHNICAL SPECIFICATIONS				FXLQ20MAVE	FXLQ25MAVE	FXLQ32MAVE	FXLQ40MAVE	FXLQ50MAVE	FXLQ63MAVE	
Nominal Capacity	Cooling	kW		2.20	2.80	3.60	4.50	5.60	7.10	
	Heating	kW		2.50	3.20	4.00	5.00	6.30	8.00	
Power input (Nominal)	Cooling	kW		0.049	0.049	0.090	0.090	0.110	0.110	
	Heating	kW		0.049	0.049	0.090	0.090	0.110	0.110	
Casing	Colour			Ivory white (5Y7,5/1)						
Dimensions	Unit	Height	mm	600	600	600	600	600	600	
		Width	mm	1000	1000	1140	1140	1420	1420	
		Depth	mm	222	222	222	222	222	222	
Weight	Unit		kg	25	25	30	30	36	36	
Heat Exchanger	Dimensions	Nr of Rows		3	3	3	3	3	3	
		Fin Pitch		mm	1.50	1.50	1.50	1.50	1.50	1.50
		Face Area		m ²	0.159	0.159	0.200	0.200	0.282	0.282
		Nr of Stages			14	14	14	14	14	14
Fan	Type			Sirocco fan						
	Quantity			1	1	1	1	1	1	
Air Flow Rate	Cooling	High	m ³ /min	7.00	7.00	8.00	11.00	14.00	16.00	
		Low	m ³ /min	6.00	6.00	6.00	8.50	11.00	12.00	
Fan	Motor	Quantity		1	1	1	1	1	1	
		Model		D14B20	D14B20	2D14B13	2D14B13	2D14B20	2D14B20	
		Output (high)	W	15	15	25	25	35	35	
		Drive			Direct drive					
Refrigerant	Name			R-410A						
Cooling	Sound Pressure	High	dBA	35.0	35.0	35.0	38.0	39.0	40.0	
		Low	dBA	32.0	32.0	32.0	33.0	34.0	35.0	
Piping connections	Liquid (OD)	Type		Flare connection						
		Diameter	mm	6.4	6.4	6.4	6.4	6.4	9.5	
	Gas	Type		Flare connection						
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9	
	Drain	Diameter		mm						
Heat Insulation			Glass Fiber/Urethane Foam							
Air Filter				Resin net with mold resistance						
Refrigerant control				Electronic expansion valve						
Temperature control				Microprocessor thermostat for cooling and heating						
Safety devices				PC board fuse, Fan motor thermal protector						
Standard Accessories				Installation and operation manual, Insulation for fitting, Drain hose, Clamps, Screws, Level adjustment screw, Washer						
Notes				Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)						
				Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)						
				Capacities are net, including deduction for cooling (an addition for heating) for indoor fan motor heat.						
				Sound pressure levels are measured at 220V						

Concealed Floor Standing Type

1-1 TECHNICAL SPECIFICATIONS				FXNQ20MAVE	FXNQ25MAVE	FXNQ32MAVE	FXNQ40MAVE	FXNQ50MAVE	FXNQ63MAVE	
Nominal Capacity	Cooling	kW		2.20	2.80	3.60	4.50	5.60	7.10	
	Heating	kW		2.50	3.20	4.00	5.00	6.30	8.00	
Power input (Nominal)	Cooling	kW		0.049	0.049	0.090	0.090	0.110	0.110	
	Heating	kW		0.049	0.049	0.090	0.090	0.110	0.110	
Casing	Material			Galvanised steel						
Dimensions	Unit	Height	mm	610	610	610	610	610	610	
		Width	mm	930	930	1070	1070	1350	1350	
		Depth	mm	220	220	220	220	220	220	
Weight	Unit		kg	19	19	23	23	27	27	
Heat Exchanger	Dimensions	Nr of Rows		3	3	3	3	3	3	
		Fin Pitch		mm	1.50	1.50	1.50	1.50	1.50	1.50
		Face Area		m ²	0.159	0.159	0.200	0.200	0.282	0.282
		Nr of Stages			14	14	14	14	14	14
Fan	Type			Sirocco fan						
	Quantity			1	1	1	1	1	1	
Air Flow Rate	Cooling	High	m ³ /min	7.00	7.00	8.00	11.00	14.00	16.00	
		Low	m ³ /min	6.00	6.00	6.00	8.50	11.00	12.00	
Fan	Motor	Quantity		1	1	1	1	1	1	
		Model		D14B20	D14B20	2D14B13	2D14B13	2D14B20	2D14B20	
		Output (high)	W	15	15	25	25	35	35	
		Drive			Direct drive					
Refrigerant	Name			R-410A						
Cooling	Sound Pressure	High	dBA	35.0	35.0	35.0	38.0	39.0	40.0	
		Low	dBA	32.0	32.0	32.0	33.0	34.0	35.0	
Piping connections	Liquid (OD)	Type		Flare connection						
		Diameter	mm	6.4	6.4	6.4	6.4	6.4	9.5	
	Gas	Type		Flare connection						
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9	
	Drain	Diameter		mm						
Heat Insulation			Glass Fiber/Urethane Foam							
Air Filter	Resin net with mold resistance									
Refrigerant control	Electronic expansion valve									
Temperature control	Microprocessor thermostat for cooling and heating									
Safety devices	PC board fuse, Fan motor thermal protector									
Standard Accessories	Installation and operation manual, Insulation for fitting, Drain hose, Clamps, Screws, Washer, Level adjustment screw									
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)									
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)									
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.									
	Sound pressure levels are measured at 220V									

Ceiling Suspended Cassette Type

1-1 TECHNICAL SPECIFICATIONS				FXUQ71MAV1		FXUQ100MAV1		FXUQ125MAV1		
Power input (Nominal)	Cooling	kW		0.180		0.289		0.289		
	Heating	kW		0.160		0.269		0.269		
Casing	Colour			White						
	Material			Resin						
Dimensions	Packing	Height	mm	230		295		295		
		Width	mm	960		960		960		
		Depth	mm	960		960		960		
	Unit	Height	mm	165		230		230		
		Width	mm	895		895		895		
		Depth	mm	895		895		895		
Weight	Unit		kg	25		31		31		
	Packed Unit		kg	35		42		42		
Heat Exchanger	Dimensions	Length	mm	2101		2101		2101		
		Nr of Rows			3		3		3	
		Fin Pitch	mm	1.50		1.50		1.50		
		Nr of Passes			8		8		12	
		Face Area	m ²	0.265		0.353		0.353		
		Nr of Stages			6		8		8	
	Empty Tubeplate Hole			4						
Fin	Fin type		Cross fin coil (Multi louver fins and N-hix tubes)							
Fan	Type			Turbo fan						
	Quantity			1		1		1		
Air Flow Rate	Cooling	High	m ³ /min	19.00		29.00		32.00		
		Low	m ³ /min	14.00		21.00		23.00		
	Heating	High	m ³ /min	19.00		29.00		32.00		
		Low	m ³ /min	14.00		21.00		23.00		
Fan	Motor	Steps		2		2		2		
		Output (high)	W	45		90		90		
Refrigerant	Name			R-410A						
Sound Level	Cooling	Sound power (nominal)	dBA	56.0		59.0		60.0		
Cooling	Sound Pressure	High	dBA	40.0		43.0		44.0		
		Low	dBA	35.0		38.0		39.0		
Heating	Sound Pressure	High	dBA	40.0		43.0		44.0		
		Low	dBA	35.0		38.0		39.0		
Piping connections	Liquid (OD)	Type		Flare connection						
		Diameter	mm	9.5		9.5		9.5		
	Gas	Type		Flare connection						
		Diameter	mm	15.9		15.9		15.9		
	Drain	Diameter		I.D. 20/O.D. 26						
Heat Insulation		Heat resistant foamed polyethylene, regular foamed polyethylene								
Air Filter				Resin net with mold resistance						
Safety devices				Fan motor thermal protector						
Standard Accessories				Installation and operation manual, Drain hose, Clamp metal, Insulation for fitting, Sealing Pads, Clamps, Washer						
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7,5m (horizontal)									
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)									
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.									
	Sound pressure levels are measured at 220V									

BEV Units

11-1-1 Technical Specifications				BEVQ71MAVE	BEVQ100MAVE	BEVQ125MAVE
Power input (Nominal)	Cooling		kW	0.189	0.298	0.298
	Heating		kW	0.169	0.278	0.278
Casing	Material			Galvanised steel plate		
Dimensions	Packing	Height	mm	100	100	100
		Width	mm	350	350	350
		Depth	mm	225	225	225
Sound absorbing thermal insulation material				Flame and heat resistant foamed polyetherene		
Weight	Unit		kg	3.0	3.0	3.5
Indoor Units	Liquid (OD)	Type		Flare connection		
		Diameter	mm	9.5	9.5	9.5
	Gas	Type		Flare connection		
		Diameter	mm	15.9	15.9	15.9
Outdoor Unit	Liquid (OD)	Type		Flare connection		
		Diameter	mm	9.5	9.5	9.5
	Suction gas (OD)	Type		Flare connection		
		Diameter	mm	15.9	15.9	15.9
Standard Accessories	Item			Installation manual, Gas piping connections, Insulation for fitting, Sealing material, Clamps		

Part 3

List of Electrical and Functional Parts

1. List of Electrical and Functional Parts	30
1.1 Outdoor Unit.....	30
1.2 Indoor Unit	32

1. List of Electrical and Functional Parts

1.1 Outdoor Unit

RXYSQ4 / 5 / 6PA7Y1B

Item	Name		Symbol	Model			Remark (PCB terminal)
				4HP	5HP	6HP	
Compressor	Inverter	Type	M1C	JT1G-VDLYR			Relay
		Output		2.5kW	3.0kW	3.5kW	A2P X102A
	Crankcase heater (INV)		E1HC	33W			A1P X28A
Fan motor	Motor		M1F-M2F	0.07kW			—
	Over-current relay		—	3.2A			—
Functional parts	Electronic expansion valve (Main)	Cooling	Y1E	480pls			A1P X21A
		Heating		PI control			
	Electronic expansion valve (Subcool)	Cooling	Y3E	PI control			A1P X22A
		Heating		PI control			
	4 way valve		Y1S	STF-0404G			A1P X25A
	Solenoid valve (Hot gas)		Y2S	TEV1620DQ2			A1P X26A
	Solenoid valve (Unload circuit)		Y3S	TEV1620DQ2			A1P X27A
Pressure-related parts	Pressure switch (INV)		S1PH	ACB-4UB10 OFF: 4.0+0/-0.15MPa ON: 3.0±0.15MPa			A1P X32A
	Pressure sensor (HP)		S1NPH	PS8051A 0~4.15MPa			A1P X17A
	Pressure sensor (LP)		S1NPL	PS8051A -0.05~1.7MPa			A1P X18A
Thermistor	Main PCB	For outdoor air	R1T	3.5~360kΩ			A1P X11A
		For discharge pipe	R2T	5.0~640kΩ			A1P X12A 1-2Pin
		For suction pipe 1	R3T	3.5~360kΩ			A1P X12A 3-4Pin
		For subcooling heat exchanger	R4T	3.5~360kΩ			A1P X12A 5-6Pin
		For suction pipe 2	R5T	3.5~360kΩ			A1P X12A 7-8Pin
		For heat exchanger	R6T	3.5~360kΩ			A1P X13A 1-2Pin
		For liquid pipe 1	R7T	3.5~360kΩ			A1P X13A 3-4Pin
		For liquid pipe 2	R8T	3.5~360kΩ			A1P X13A 5-6Pin
Others	Fuse (A1P)		F1U	AC250V 6.3A Time lag fuse			—

RXYSQ4 / 5 / 6PA7V1B

Item	Name		Symbol	Model			Remark (PCB terminal)
				4HP	5HP	6HP	
Compressor	Inverter	Type	M1C	JT100G-VDL			Relay
		Output		2.5kW	3.0kW	3.5kW	A1P
	Crankcase heater (INV)		E1HC	33W			A1P X28A
Fan motor	Motor		M1F-M2F	0.07kW			—
	Over-current relay		—	3.2A			—
Functional parts	Electronic expansion valve (Main)	Cooling	Y1E	480pls			A1P X21A
		Heating		PI control			
	Electronic expansion valve (Subcool)	Cooling	Y3E	PI control			A1P X22A
		Heating		PI control			
	4 way valve		Y1S	STF-0404G			A1P X25A
	Solenoid valve (Hot gas)		Y2S	TEV1620DQ2			A1P X26A
Solenoid valve (Unload circuit)		Y3S	TEV1620DQ2			A1P X27A	
Pressure-related parts	Pressure switch (INV)		S1PH	ACB-4UB10 OFF: 4.0+0/-0.15MPa ON: 3.0±0.15MPa			A1P X32A
	Pressure sensor (HP)		S1NPH	PS8051A 0~4.15MPa			A1P X17A
	Pressure sensor (LP)		S1NPL	PS8051A -0.05~1.7MPa			A1P X18A
Thermistor	Main PCB	For outdoor air	R1T	3.5~360kΩ			A1P X11A
		For discharge pipe	R2T	5.0~640kΩ			A1P X12A 1-2Pin
		For suction pipe 1	R3T	3.5~360kΩ			A1P X12A 3-4Pin
		For heat exchanger	R4T	3.5~360kΩ			A1P X12A 5-6Pin
		For suction pipe 2	R5T	3.5~360kΩ			A1P X12A 7-8Pin
		For subcooling heat exchanger	R6T	3.5~360kΩ			A1P X13A 1-2Pin
		For liquid pipe 1	R7T	3.5~360kΩ			A1P X13A 3-4Pin
		For liquid pipe 2	R8T	3.5~360kΩ			A1P X13A 5-6Pin
Others	Fuse (A1P)		F1U	AC250V 6.3A Time lag fuse			—

1.2 Indoor Unit

Parts Name		Symbol	Model									Remark
			FXFQ20 PVE	FXFQ25 PVE	FXFQ32 PVE	FXFQ40 PVE	FXFQ50 PVE	FXFQ63 PVE	FXFQ80 PVE	FXFQ 100 PVE	FXFQ 125 PVE	
Remote Controller	Wired Remote Controller		BRC1D52									Option
	Wireless Remote Controller		BRC7F532									
Motors	Fan Motor	M1F	Thermal Protector : OFF : 108 ^{±5} (ON : 96 ^{±15})									
	Drain Pump	M1P	AC220-240V (50Hz) AC220V (60Hz) PLD-12230DM Thermal Fuse 145°C									
	Swing Motor	M1S	MP35HCA[3P007482-1] Stepping Motor DC16V									
Thermistors	Thermistor (Suction Air)	R1T	In PC board A4P or wired remote controller									
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-5 φ8 L1000 20kΩ (25°C)									
	Thermistor (Heat Exchanger)	R2T	ST8602A-5 φ6 L1000 20kΩ (25°C)									
Others	Float Switch	S1L	FS-0211B									
	Fuse	F1U	250V 5A φ5.2									
	Thermal Fuse	TFu	—									
	Transformer	T1R	—									

Parts Name		Symbol	Model								Remark
			FXCQ 20MV3	FXCQ 25MV3	FXCQ 32MV3	FXCQ 40MV3	FXCQ 50MV3	FXCQ 63MV3	FXCQ 80MV3	FXCQ 125 MV3	
Remote Controller	Wired Remote Controller		BRC1D52								Option
	Wireless Remote Controller		BRC7C62								
Motors	Fan Motor	M1F	AC 220~240V 50Hz								
			1φ10W	1φ15W	1φ20W	1φ30W	1φ50W	1φ85W			
	Thermal Fuse 152°C			—		Thermal protector 135°C : OFF 87°C : ON					
	Drain Pump	M1P	AC220-240V (50Hz) AC220V (60Hz) PLD-12230DM Thermal Fuse 145°C								
Swing Motor	M1S	MT8-L[3PA07509-1] AC200~240V									
Thermistors	Thermistor (Suction Air)	R1T	ST8601-6 φ4 L1250 20kΩ (25°C)								
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-6 φ8 L1250 20kΩ (25°C)								
	Thermistor (Heat Exchanger)	R2T	ST8602A-5 φ6 L1000 20kΩ (25°C)								
Others	Float Switch	S1L	FS-0211B								
	Fuse	F1U	250V 5A φ5.2								
	Transformer	T1R	TR22H21R8								

Parts Name		Symbol	Model					Remark
			FXZQ 20MV1	FXZQ 25MV1	FXZQ 32MV1	FXZQ 40MV1	FXZQ 50MV1	
Remote Controller	Wired Remote Controller		BRC1D52					Option
	Wireless Remote Controller		BRC7E530					
Motors	Fan Motor	M1F	AC 220~240V 50Hz					
			1φ55W 4P					
			Thermal Fuse OFF : 130 ^{±5} / ON : 80 ^{±20}					
	Capacitor, fan motor	C1	4.0μ F 400VAC					
	Drain Pump	M1P	AC220-240V (50Hz) PLD-12230DM Thermal Fuse 145°C					
Swing Motor	M1S	MP35HCA [3P080801-1] AC200~240V						
Thermistors	Thermistor (Suction Air)	R1T	ST8601A-1 φ4 L250 20kΩ (25°C)					
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-3 φ8 L630 20kΩ (25°C)					
	Thermistor (Heat Exchanger)	R2T	ST8602A-3 φ6 L630 20kΩ (25°C)					
Others	Float Switch	S1L	FS-0211					
	Fuse	F1U	250V 5A φ5.2					
	Transformer	T1R	TR22H21R8					

Parts Name		Symbol	Model				Remark
			FXKQ 25MAVE	FXKQ 32MAVE	FXKQ 40MAVE	FXKQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1D52				Option
	Wireless Remote Controller		BRC4C61				
Motors	Fan Motor	M1F	AC 220~240V 50Hz				
			1φ15W 4P		1φ20W 4P	1φ45W 4P	
			Thermal Fuse 146°C		Thermal protector 120°C : OFF 105°C : ON		
	Drain Pump	M1P	AC 220-240V (50Hz) PLD-12200DM Thermal Fuse 145°C				
Swing Motor	M1S	MP35HCA [3P080801-1] AC200~240V					
Thermistors	Thermistor (Suction Air)	R1T	ST8601-13 φ4 L630 20kΩ (25°C)				
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-7 φ8 L1600 20kΩ (25°C)				
	Thermistor (Heat Exchanger)	R2T	ST8602A-7 φ6 L1600 20kΩ (25°C)				
Others	Float Switch	S1L	FS-0211B				
	Fuse	F1U	250V 5A φ5.2				
	Transformer	T1R	TR22H21R8				

Parts Name		Symbol	Model					Remark
			FXDQ 20 PVE	FXDQ 25PVE	FXDQ 32PVE	FXDQ 40NAVE	FXDQ 50NAVE	
Remote Controller	Wired Remote Controller		BRC1D52					Option
	Wireless Remote Controller		BRC4C62					
Motors	Fan Motor	M1F	AC 220~240V 50Hz					
			1φ62W			1φ130W		
	Thermal protector 130°C: OFF, 83°C: ON							
	Drain Pump	M1P	AC220-240V (50Hz) PLD-12230DM Thermal Fuse 145°C					*
Thermistors	Thermistor (Suction Air)	R1T	ST8601-1 φ4 L=250 20kΩ (25°C)					
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-4 φ8 L=800 20kΩ (25°C)					
	Thermistor (Heat Exchanger)	R2T	ST8602A-4 φ6 L=800 20kΩ (25°C)					
Others	Float Switch	S1L	FS-0211E					*
	Fuse	F1U	250V 5A φ5.2					
	Transformer	T1R	TR22H21R8					

Parts Name		Symbol	Model		Remark
			FXDQ 20M8V3B	FXDQ 25M8V3B	
Remote Controller	Wired Remote Controller		BRC1D52		Option
	Wireless Remote Controller		BRC4C62		
Motors	Fan Motor	M1F	AC 200~240V 50/60Hz		
			1φ10W4P		
	Thermal protector 135°C: OFF, 87°C: ON				
Thermistors	Thermistor (Suction Air)	R1T	ST8601-4 φ4 L=800 20kΩ (25°C)		
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-7 φ8 L=1600 20kΩ (25°C)		
	Thermistor (Heat Exchanger)	R2T	ST8602A-6 φ6 L=1250 20kΩ (25°C)		
Others	Fuse	F1U	250V 10A		
	Transformer	T1R	TR22H21R8		

Parts Name		Symbol	Model								Remark
			FXSQ 20 MV3	FXSQ 25 MV3	FXSQ 32 MV3	FXSQ 40 MV3	FXSQ 50 MV3	FXSQ 63 MV3	FXSQ 80 MV3	FXSQ 100 MV3	
Remote Controller	Wired Remote Controller		BRC1D52								Option
	Wireless Remote Controller		BRC4C62								
Motors	Fan Motor	M1F	AC 220~240V 50Hz								
			1φ50W		1φ65W	1φ85W	1φ125W	1φ225W			
	Drain Pump	M1P	Thermal Fuse 152°C				Thermal protector 135°C : OFF 87°C : ON				
Thermistors	Thermistor (Suction Air)	R1T	AC220-240V (50Hz) PLD-12230DM Thermal Fuse 145°C								
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8601-4 φ4 L800 20kΩ (25°C)								
	Thermistor (Heat Exchanger)	R2T	ST8605-7 φ8 L1600 20kΩ (25°C)								
Others	Float Switch	S1L	ST8602A-6 φ6 L1250 20kΩ (25°C)								
	Fuse	F1U	FS-0211B								
	Transformer	T1R	250V 5A φ5.2								
			TR22H21R8								

Parts Name		Symbol	Model					Remark
			FXMQ 40PVE	FXMQ 50PVE	FXMQ 63PVE	FXMQ 80PVE	FXMQ 100PVE	
Remote Controller	Wired Remote Controller		BRC1C62					
	Wireless Remote Controller		BRC4C65					
Motors	Fan Motor	M1F	DC280V 140W 8P			DC373V 350W 8P		
	Drain Pump	M1P	AC220-240V (50/60Hz) PLD-12230DM Thermal protector 145°C					
Thermistors	Thermistor (Suction Air)	R1T	ST8601-3 φ L630 20kΩ (25°C)					
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-14 φ8 L1000 20kΩ (25°C)					
	Thermistor (for Heat Exchanger)	R2T	ST8602A-6 φ8 L1250 20kΩ (25°C)					
Others	Float Switch	S1L	FS-0211B					
	Fuse (A1P)	F1U	250V 3.15A					
	Fuse (A2P, A3P)	F3U- F4U	250V 6.3A					
	Fuse (A2P)	F2U	250V 5A	—				

Parts Name		Symbol	Model			Remark
			FXHQ 32MAVE	FXHQ 63MAVE	FXHQ 100MAVE	
Remote Controller	Wired Remote Controller		BRC1D52			Option
	Wireless Controller		BRC7E63W			
Motors	Fan Motor	M1F	AC 220~240V/220V 50Hz/60Hz			
			1φ63W		1φ130W	
			Thermal protector 130°C : OFF 80°C : ON			
	Capacitor for Fan Motor	C1R	3.0μF-400V		9.0μF-400V	
Swing Motor	M1S	MT8-L[3P058751-1] AC200~240V				
Thermistors	Thermistor (Suction Air)	R1T	ST8601A-1 φ4 L250 20kΩ (25°C)			
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-6 φ8 L = 1250 20kΩ (25°C)		ST8605-6 φ8 L = 1250 20kΩ (25°C)	
	Thermistor (Heat Exchanger)	R2T	ST8602A-6 φ6 L = 1250 20kΩ (25°C)		ST8602A-6 φ6 L = 1250 20kΩ (25°C)	
Others	Fuse	F1U	250V 5A φ5.2			
	Transformer	T1R	TR22H21R8			

Parts Name		Symbol	Model						Remark
			FXAQ 20MAVE	FXAQ 25MAVE	FXAQ 32MAVE	FXAQ 40MAVE	FXAQ 50MAVE	FXAQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1D52						Option
	Wireless Remote Controller		BRC7E618						
Motors	Fan Motor	M1F	AC 220~240V 50Hz						
			1φ40W			1φ43W			
	Thermal protector 130°C : OFF 80°C : ON								
Swing Motor	M1S	MP24 [3SB40333-1] AC200~240V			MSFBC20C21 [3SB40550-1] AC200~240V				
Thermistors	Thermistor (Suction Air)	R1T	ST8601-2 φ4 L400 20kΩ (25°C)						
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-2 φ8 L400 20kΩ (25°C)						
	Thermistor (for Heat Exchanger)	R2T	ST8602-2 φ6 L400 20kΩ (25°C)						
Others	Float Switch	S1L	OPTION						
	Fuse	F1U	250V 5A φ5.2						

Parts Name		Symbol	Model						Remark
			FXLQ 20MAVE	FXLQ 25MAVE	FXLQ 32MAVE	FXLQ 40MAVE	FXLQ 50MAVE	FXLQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1D52						Option
	Wireless Remote Controller		BRC4C62						
Motors	Fan Motor	M1F	AC 220~240V 50Hz						
			1φ15W	1φ25W		1φ35W			
	Thermal protector 135°C : OFF 120°C : ON								
	Capacitor for Fan Motor	C1R	1.0μF-400V	0.5μF-400V	1.0μF-400V	1.5μF-400V	2.0μF-400V		
Thermistors	Thermistor (Suction Air)	R1T	ST8601-6 φ4 L1250 20kΩ (25°C)						
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-9 φ8 L2500 20kΩ (25°C)						
	Thermistor (for Heat Exchanger)	R2T	ST8602A-9 φ6 L2500 20kΩ (25°C)						
Others	Fuse	F1U	AC250V 5A						
	Transformer	T1R	TR22H21R8						

Parts Name		Symbol	Model						Remark
			FXNQ 20MAVE	FXNQ 25MAVE	FXNQ 32MAVE	FXNQ 40MAVE	FXNQ 50MAVE	FXNQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1D52						Option
	Wireless Remote Controller		BRC4C62						
Motors	Fan Motor	M1F	AC 220~240V 50Hz						
			1φ15W	1φ25W		1φ35W			
	Thermal protector 135°C : OFF 120°C : ON								
	Capacitor for Fan Motor	C1R	1.0μF-400V	0.5μF-400V	1.0μF-400V	1.5μF-400V	2.0μF-400V		
Thermistors	Thermistor (Suction Air)	R1T	ST8601-6 φ4 L1250 20kΩ (25°C)						
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-9 φ8 L2500 20kΩ (25°C)						
	Thermistor (for Heat Exchanger)	R2T	ST8602A-9 φ6 L2500 20kΩ (25°C)						
Others	Fuse	F1U	AC250V 5A						
	Transformer	T1R	TR22H21R8						

Parts Name		Symbol	Model			Remark
			FXUQ71MAV1	FXUQ100MAV1	FXUQ125MAV1	
Remote Controller	Wired Remote Controller		BRC1C62			Option
	Wireless Remote Controller		BRC7C528W			
Motors	Fan Motor	M1F	AC 220~240V 50Hz			
			1φ45W	1φ90W		
	Thermal protector 130°C			Thermal protector 130°C : OFF 83°C : ON		
	Drain Pump	M1P	AC220-240V (50Hz) AC220V (60Hz) PJV-1426			
	Swing Motor	M1S	MT8-L[3PA07572-1] AC200~240V			
Thermistors	Thermistor (Suction Air)	R1T	ST8601-1 φ4 L=250 20kΩ (25°C)			
	Thermistor (Heat Exchanger)	R2T	ST8602A-4 φ6 L=800 20kΩ (25°C)			
Others	Float Switch	S1L	FS-0211B			

Part 4

Refrigerant Circuit


1. Refrigerant Circuit	40
1.1 Outdoor Unit.....	40
2. Functional Parts Layout	44
2.1 RXYSQ4 / 5 / 6PA7Y1B	44
2.2 RXYSQ4 / 5 / 6PA7V1B	45

1. Refrigerant Circuit

1.1 Outdoor Unit

RXYSQ4 / 5 / 6PA7Y1B

No. in refrigerant system diagram	Symbol	Name	Major Function
A	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 36 Hz and 195 Hz by using the inverter. 31 steps
D	M1F M2F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 8-step rotation speed by using the inverter.
E	Y1E	Electronic expansion valve (Main: EV1)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
F	Y3E	Electronic expansion valve (Subcool: EV3)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.
G	Y2S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.
H	Y3S	Solenoid valve (Unload circuit SVUL)	Used to the unloading operation of compressor.
M	Y1S	Four way valve	Used to switch the operation mode between cooling and heating.
N	S1NPH	High pressure sensor	Used to detect high pressure.
O	S1NPL	Low pressure sensor	Used to detect low pressure.
P	S1PH	HP pressure switch (For INV compressor)	In order to prevent the increase of high pressure when a malfunction occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
T	—	Pressure regulating valve 1 (Receiver to discharge pipe)	This valve opens at a pressure of 4.0 MPa for prevention of pressure increase, thus resulting in no damage of functional parts due to the increase of pressure in transportation or storage.
1	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.
2	R2T	Thermistor (INV discharge pipe: Tdi)	used to detect discharge pipe temperature, make the temperature protection control of compressor, and others.
3	R3T	Thermistor (Suction pipe1: Ts1)	used to detect suction pipe temperature, keep the suction superheated degree constant in heating operation, and others.
4	R4T	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	Used to control of subcooling electronic expansion valve.
5	R5T	Thermistor (Suction pipe2: Ts2)	Used to the calculation of an internal temperature of compressor etc.
6	R6T	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger, determine defrosting operation, and others.
7	R7T	Thermistor (Liquid pipe1: Tl1)	Used to detect refrigerant over charge in check operation, and others.
8	R8T	Thermistor (Liquid pipe2: Tl2)	Used to detect refrigerant over charge in check operation, and others.

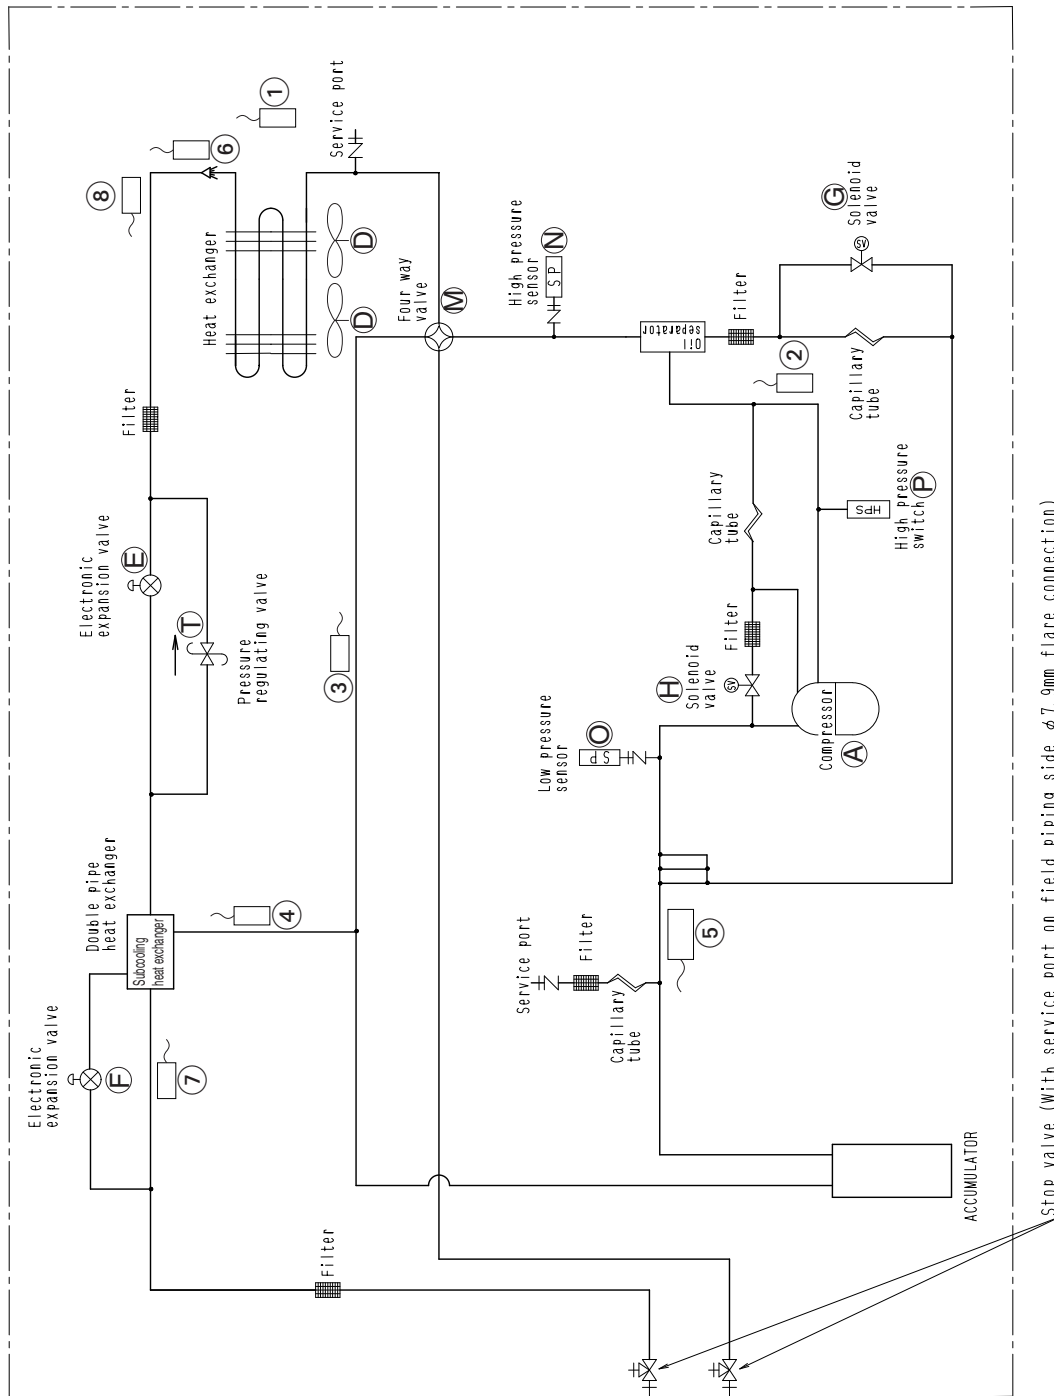


STOP valve (With service port on field piping side $\phi 7, 9\text{mm}$ flare connection)

C : 3D052628

RXYSQ4 / 5 / 6PA7V1B

No. in refrigerant system diagram	Symbol	Name	Major Function
A	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 36 Hz and 195 Hz by using the inverter. 31 steps
D	M1F M2F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 8-step rotation speed by using the inverter.
E	Y1E	Electronic expansion valve (Main: EV1)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
F	Y3E	Electronic expansion valve (Subcool: EV3)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.
G	Y2S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.
H	Y3S	Solenoid valve (Unload circuit SVUL)	Used to the unloading operation of compressor.
M	Y1S	Four way valve	Used to switch the operation mode between cooling and heating.
N	S1NPH	High pressure sensor	Used to detect high pressure.
O	S1NPL	Low pressure sensor	Used to detect low pressure.
P	S1PH	HP pressure switch (For INV compressor)	In order to prevent the increase of high pressure when a malfunction occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
T	—	Pressure regulating valve 1 (Receiver to discharge pipe)	This valve opens at a pressure of 4.0 MPa for prevention of pressure increase, thus resulting in no damage of functional parts due to the increase of pressure in transportation or storage.
1	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.
2	R2T	Thermistor (INV discharge pipe: Tdi)	used to detect discharge pipe temperature, make the temperature protection control of compressor, and others.
3	R3T	Thermistor (Suction pipe1: Ts1)	used to detect suction pipe temperature, keep the suction superheated degree constant in heating operation, and others.
4	R4T	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger, determine defrosting operation, and others.
5	R5T	Thermistor (Suction pipe2: Ts2)	Used to the calculation of an internal temperature of compressor etc.
6	R6T	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	Used to control of subcooling electronic expansion valve.
7	R7T	Thermistor (Liquid pipe1: Tl1)	Used to detect refrigerant over charge in check operation, and others.
8	R8T	Thermistor (Liquid pipe2: Tl2)	Used to detect refrigerant over charge in check operation, and others.

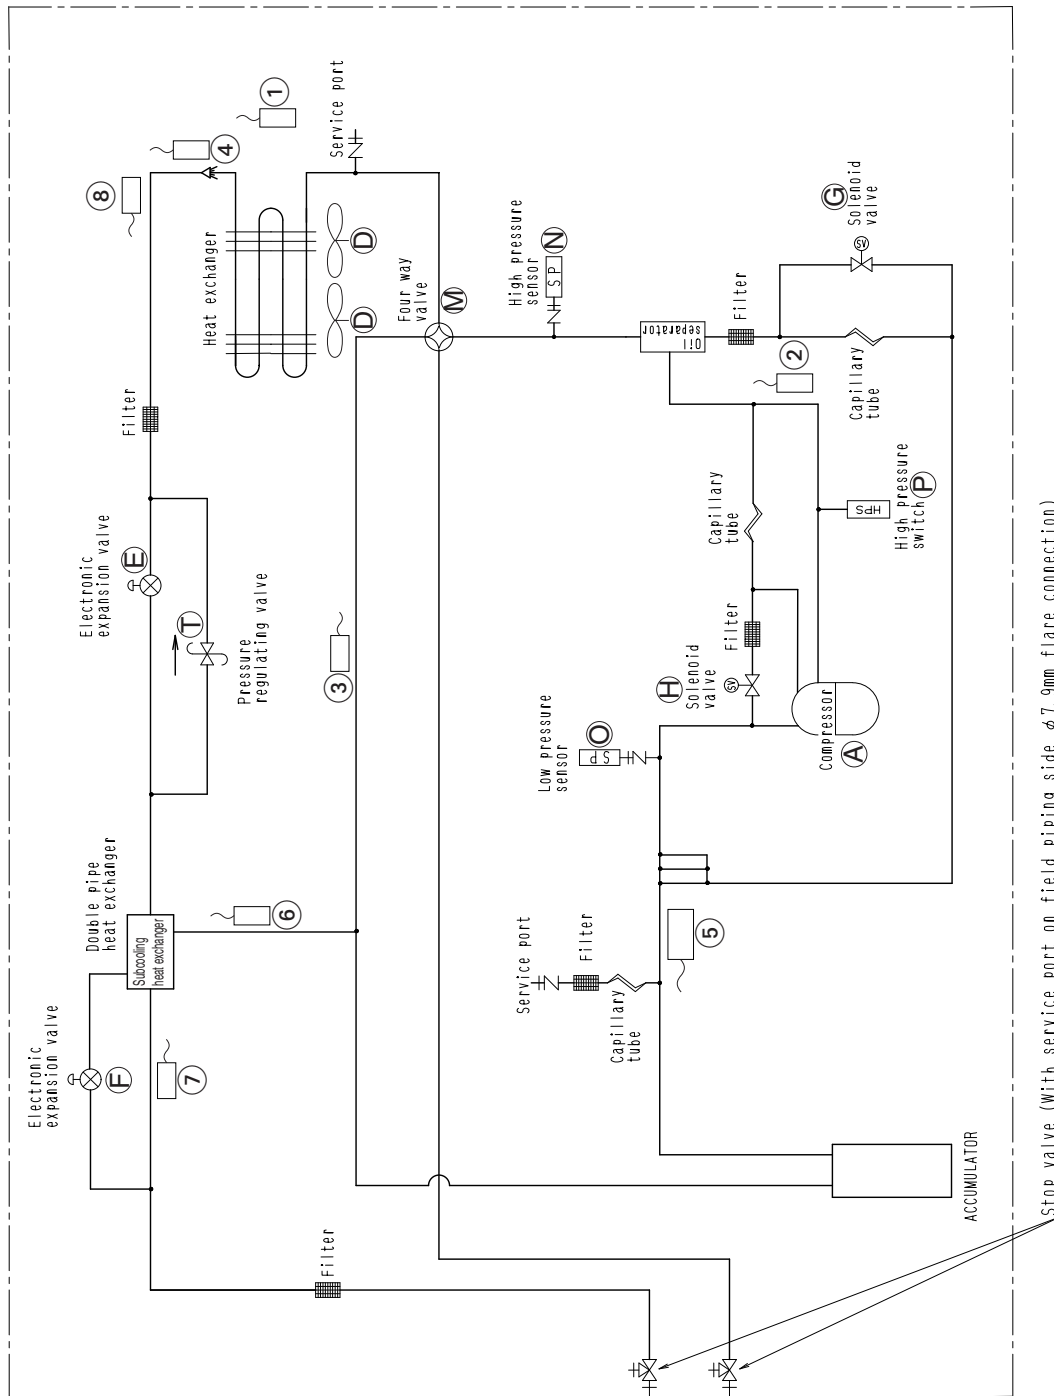


STOP valve (With service port on field piping side $\phi 7, 9\text{mm}$ flare connection)

C : 3D052712

2. Functional Parts Layout


2.1 RXYSQ4 / 5 / 6PA7Y1B

Birds-eye view

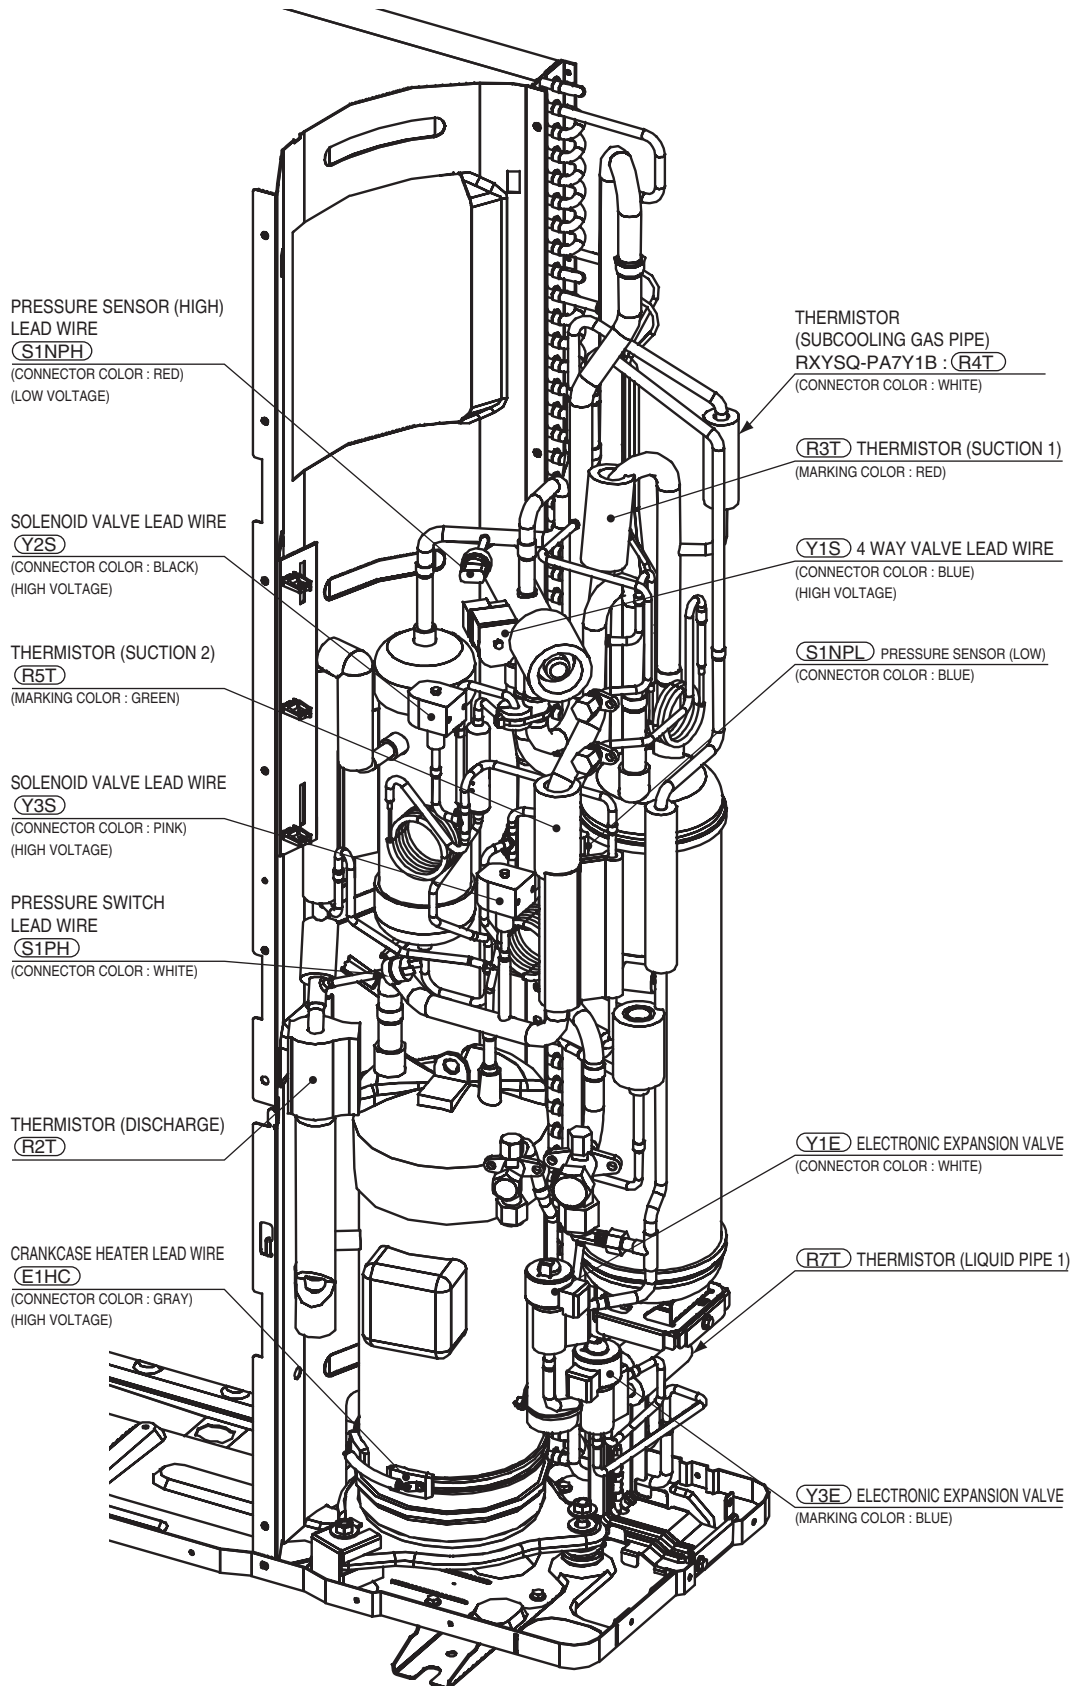


2.2 RXYSQ4 / 5 / 6PA7V1B

Birds-eye view

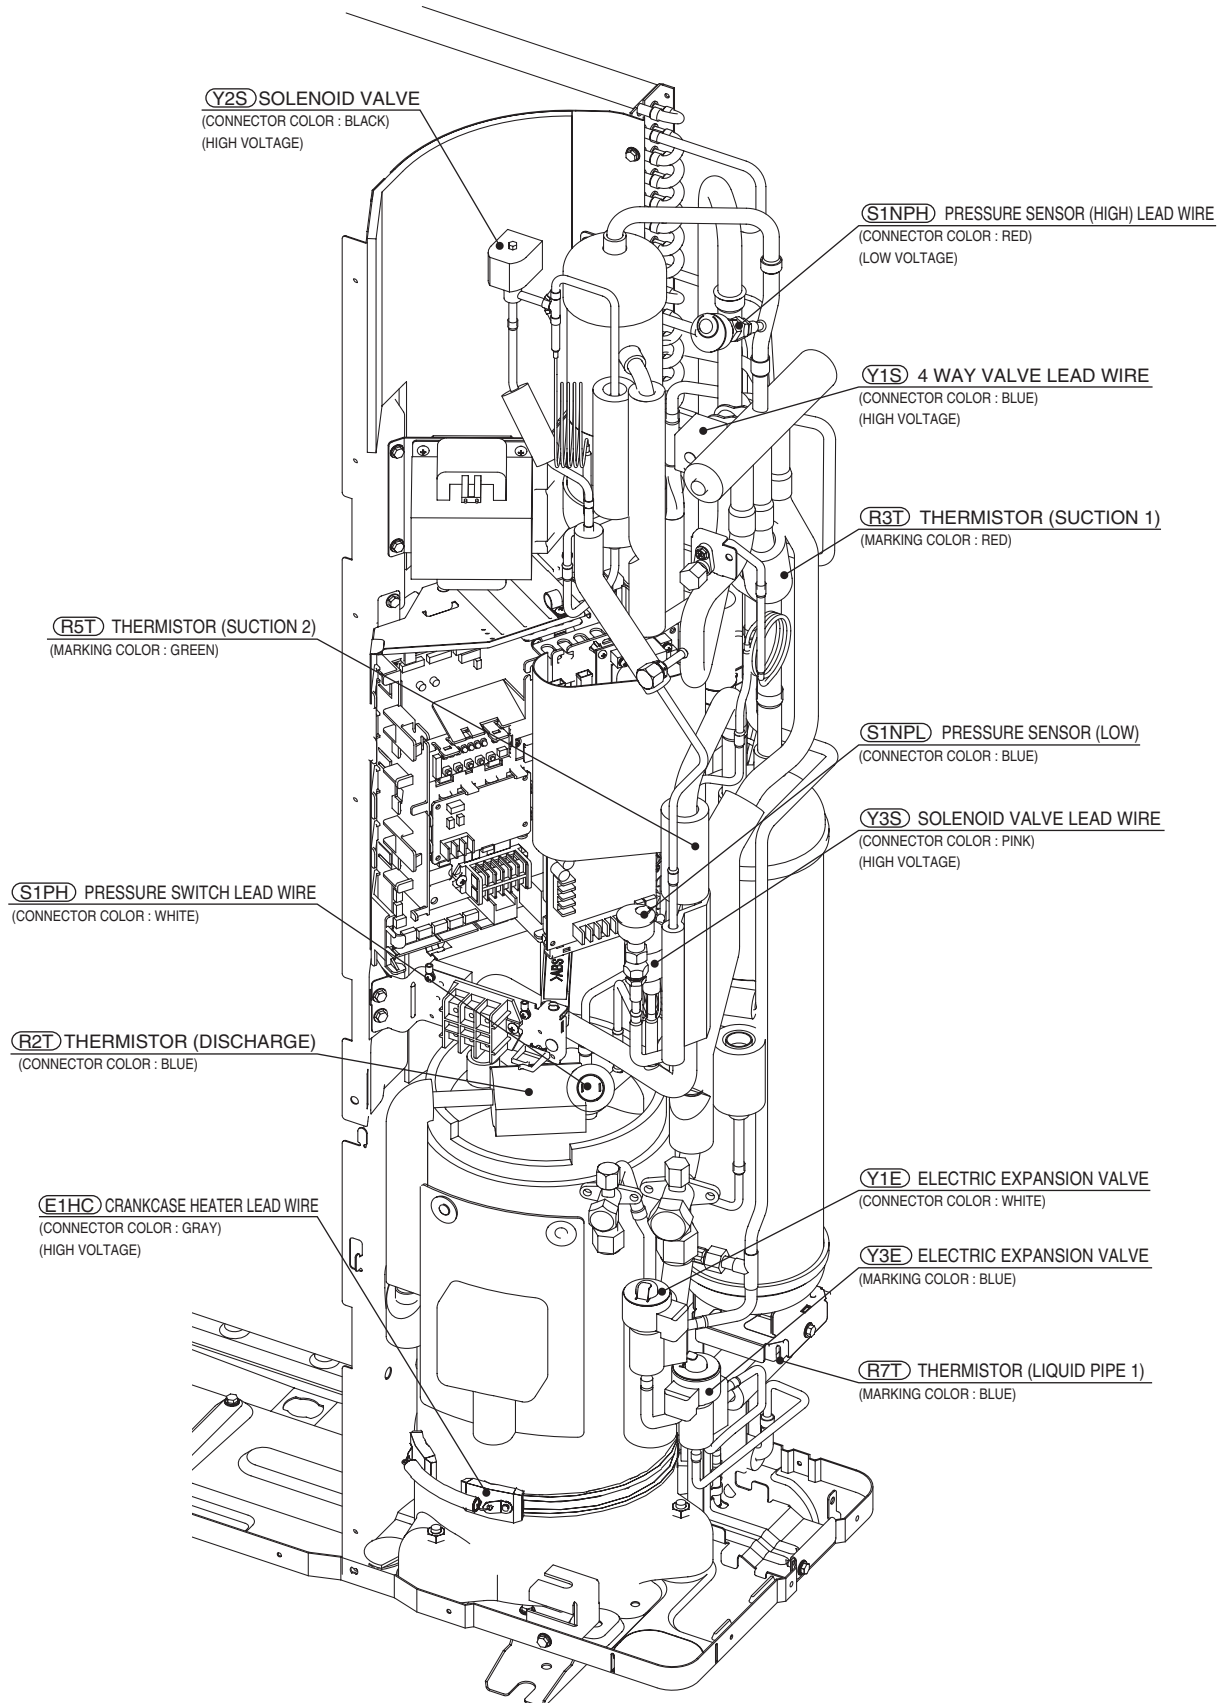

Back view

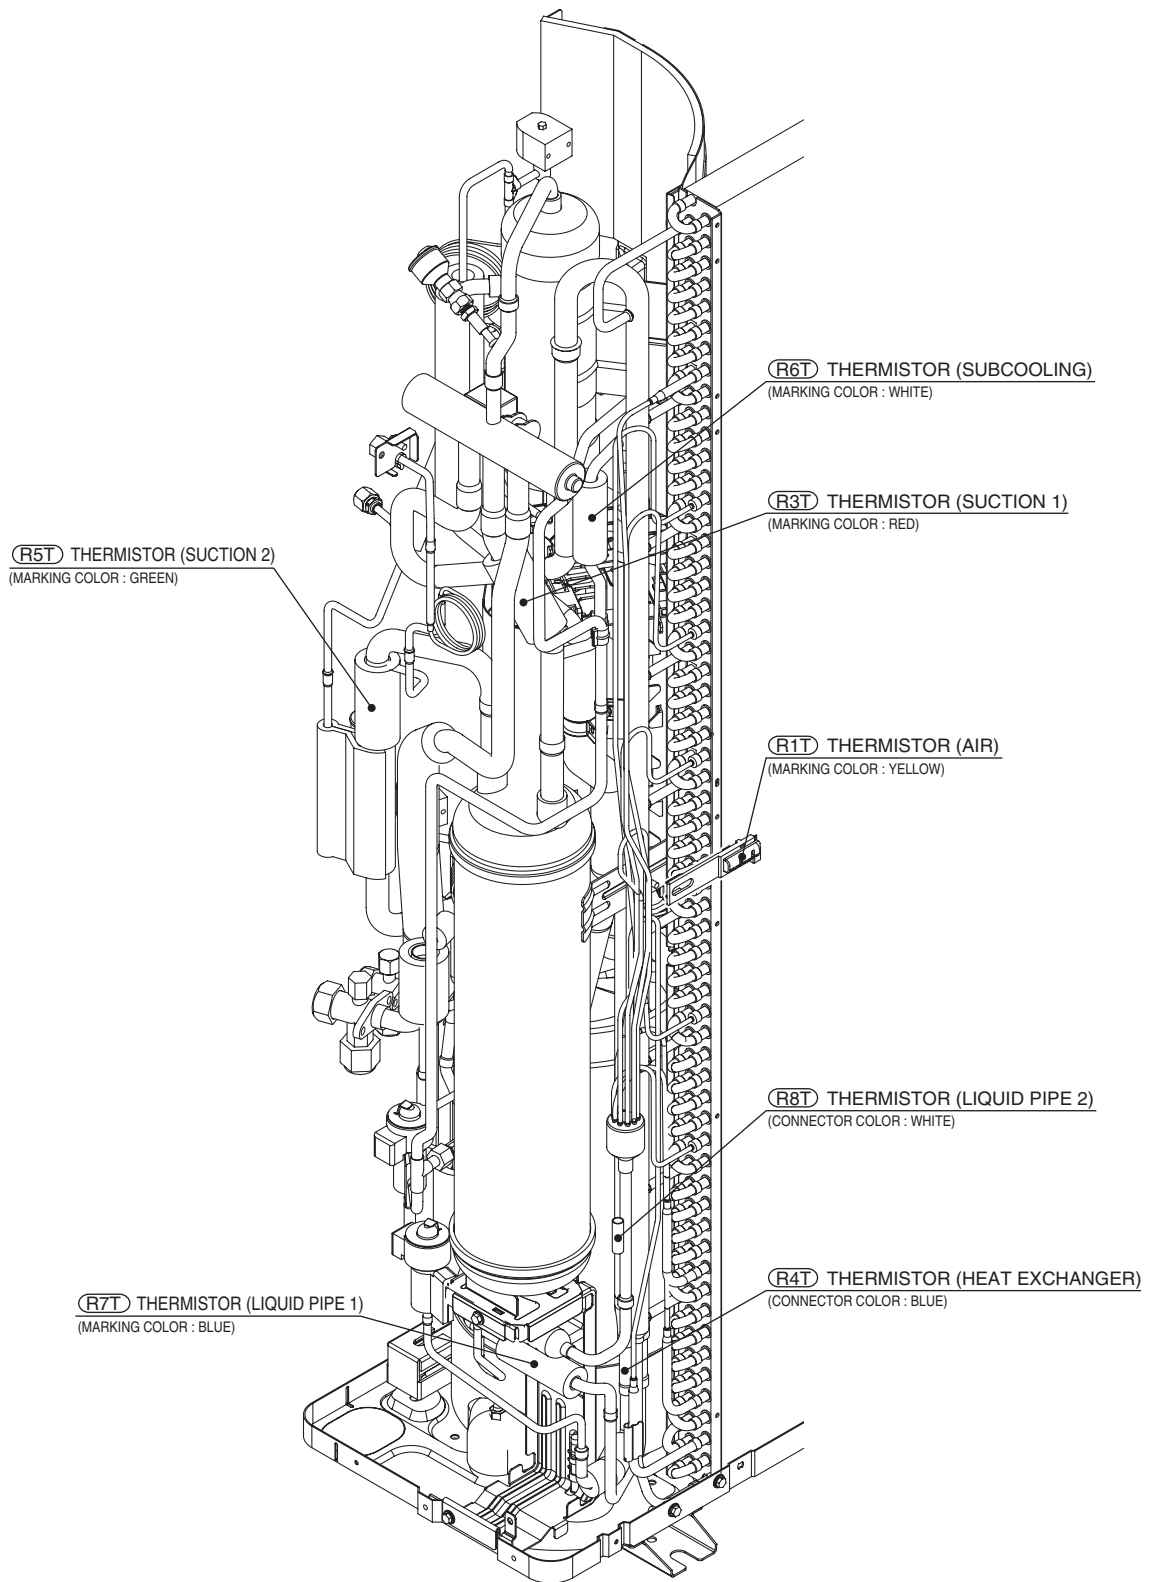


Part 5

Function

1. Operation Mode	48
2. Basic Control	49
2.1 Normal Operation	49
2.2 Compressor PI Control	50
2.3 Electronic Expansion Valve PI Control	51
2.4 Cooling Operation Fan Control	52
3. Special Control	53
3.1 Startup Control	53
3.2 Oil Return Operation	54
3.3 Defrosting Operation	56
3.4 Pump-down Residual Operation	57
3.5 Restart Standby	58
3.6 Stopping Operation	59
4. Protection Control	60
4.1 High Pressure Protection Control	60
4.2 Low Pressure Protection Control	61
4.3 Discharge Pipe Protection Control	62
4.4 Inverter Protection Control	63
5. Other Control	64
5.1 Demand Operation	64
5.2 Heating Operation Prohibition	64
6. Outline of Control (Indoor Unit)	65
6.1 Drain Pump Control	65
6.2 Louver Control for Preventing Ceiling Dirt	67
6.3 Thermostat Sensor in Remote Controller	68
6.4 Freeze Prevention	70
6.5 View of Operations of Swing Flaps	71
6.6 Electronic Expansion Valve Control	72
6.7 Hot Start Control (In Heating Operation Only)	72

1. Operation Mode

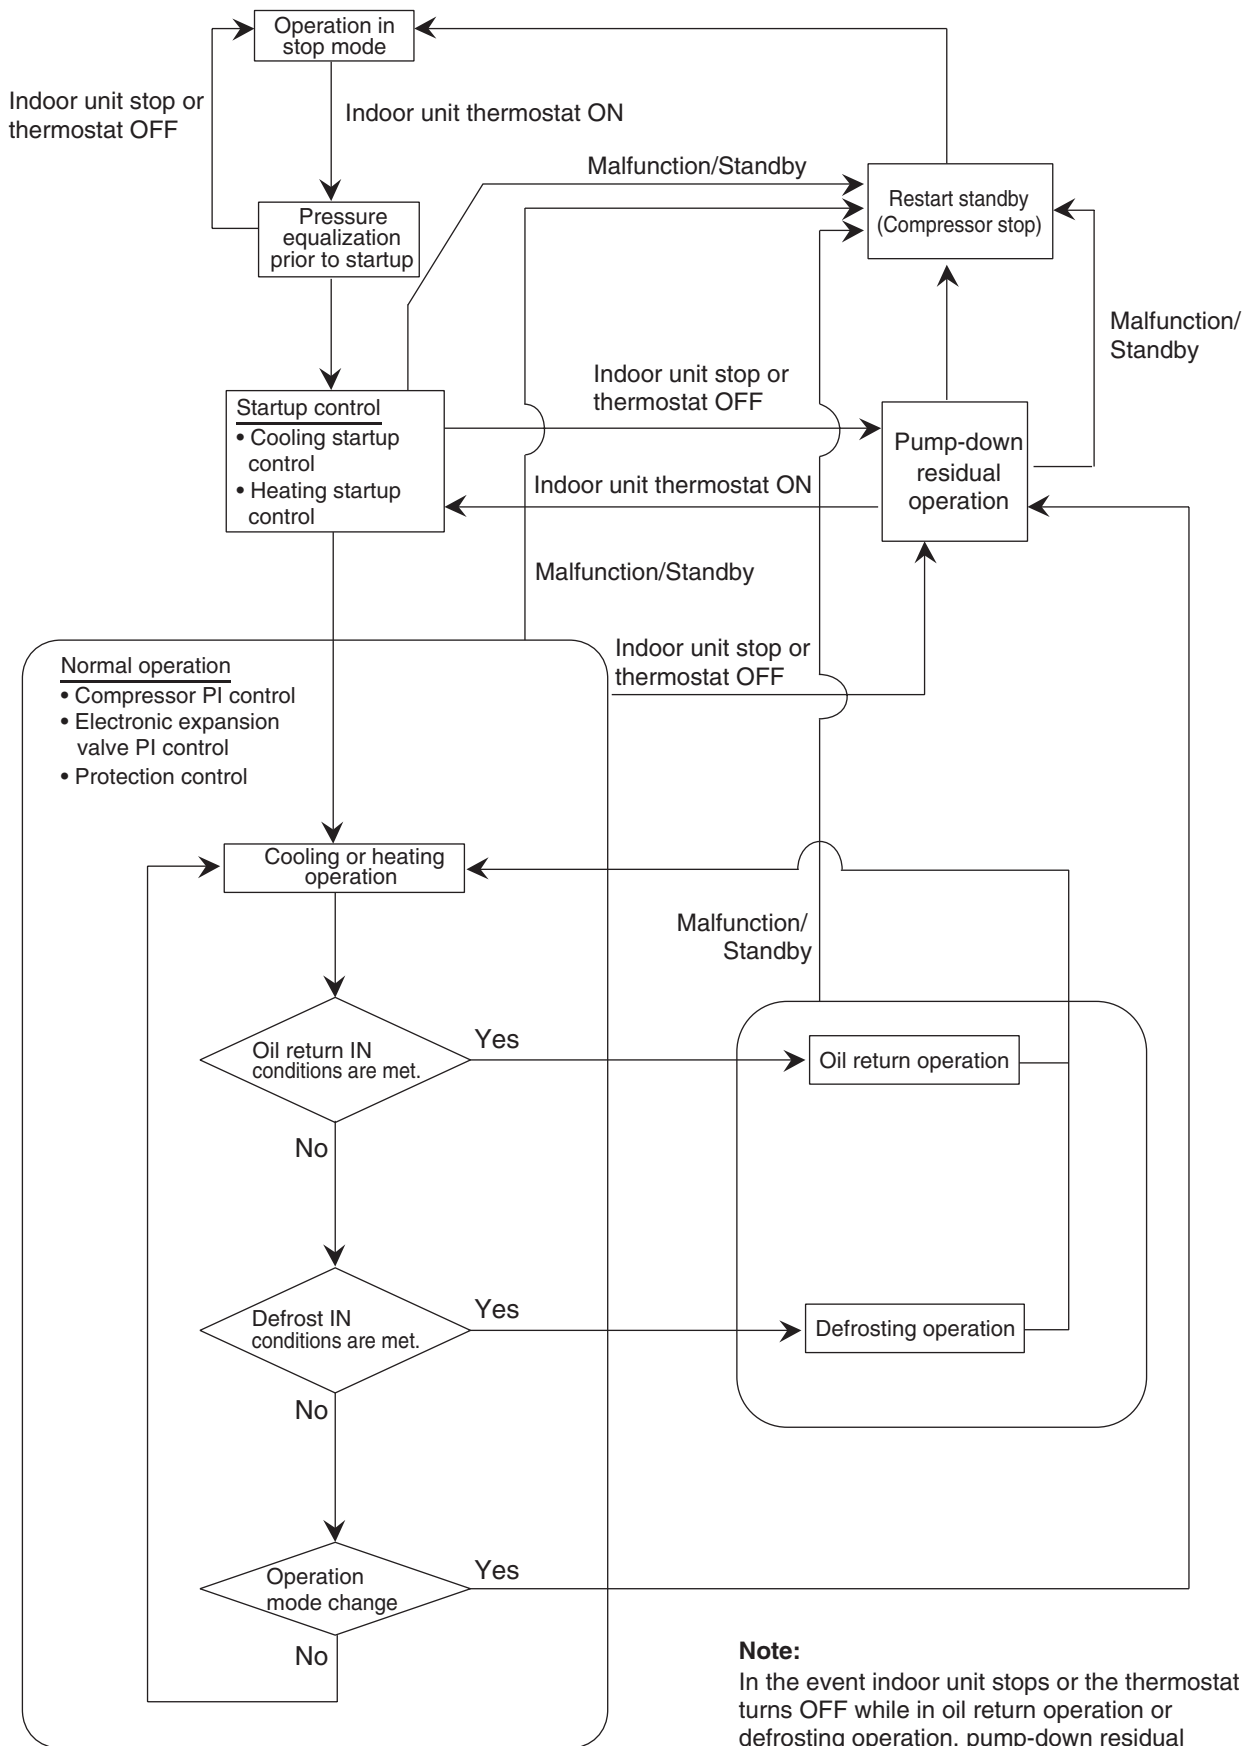

Note:
In the event indoor unit stops or the thermostat turns OFF while in oil return operation or defrosting operation, pump-down residual operation is performed on completion of the oil return operation or defrosting operation.

(V3152)

2. Basic Control

2.1 Normal Operation

■ Cooling Operation

Actuator	Operation	Remarks
Compressor	Compressor PI control	Used for high pressure protection control, low pressure protection control, discharge pipe temperature protection control, and compressor operating frequency upper limit control with inverter protection control.
Outdoor unit fan	Cooling fan control	—
Four way valve	OFF	—
Main electronic expansion valve (EV1)	480 pls	—
Subcooling electronic expansion valve (EV3)	PI control	—
Hot gas bypass valve (SVP)	OFF	This valve turns on with low pressure protection control.

■ Heating Operation

Actuator	Operation	Remarks
Compressor	Compressor PI control	Used for high pressure protection control, low pressure protection control, discharge pipe temperature protection control, and compressor operating frequency upper limit control with inverter protection control.
Outdoor unit fan	STEP 7 or 8	—
Four way valve	ON	—
Main electronic expansion valve (EV1)	PI control	—
Subcooling electronic expansion valve (EV3)	PI control	—
Hot gas bypass valve (SVP)	OFF	This valve turns on with low pressure protection control.

★Heating operation is not functional at an outdoor air temperature of 24°CDB or more.

2.2 Compressor PI Control

Compressor PI Control

Carries out the compressor capacity PI control to maintain Te at constant during cooling operation and Tc at constant during heating operation to ensure stable unit performance.

[Cooling operation]

Controls compressor capacity to adjust Te to achieve target value (TeS).

Te : Low pressure equivalent saturation temperature (°C)

Te setting (Set in Set-up mode 2)

L	M (Normal) (factory setting)	H
3	6	9

TeS : Target Te value
(Varies depending on Te setting, operating frequency, etc.)

[Heating operation]

Controls compressor capacity to adjust Tc to achieve target value (TcS).

Tc : High pressure equivalent saturation temperature (°C)

Tc setting

L	M (Normal) (factory setting)	H
43	46	49

TcS : Target Tc value
(Varies depending on Tc setting, operating frequency, etc.)

RXYSQ4 · 5 · 6PA

STn	INV(Fullload)	INV(Unload)
1		36.0Hz
2		39.0Hz
3		43.0Hz
4		47.0Hz
5		52.0Hz
6	52.0Hz	57.0Hz
7	57.0Hz	64.0Hz
8	62.0Hz	71.0Hz
9	68.0Hz	78.0Hz
10	74.0Hz	

STn	INV(Fullload)	INV(Unload)
11	80.0Hz	
12	86.0Hz	
13	92.0Hz	
14	98.0Hz	
15	104.0Hz	
16	110.0Hz	
17	116.0Hz	
18	122.0Hz	
19	128.0Hz	
20	134.0Hz	

STn	INV(Fullload)	INV(Unload)
21	140.0Hz	
22	146.0Hz	
23	152.0Hz	
24	158.0Hz	
25	164.0Hz	
26	170.0Hz	
27	175.0Hz	
28	180.0Hz	
29	185.0Hz	
30	190.0Hz	
31	195.0Hz	

- * Compressors may operate in a pattern other than those listed in above tables subject to the operating conditions. Selection of full load operation to/from unload operation is made with the unload circuit solenoid valve (Y3S=SVUL). The full load operation is performed with the SVUL set to OFF, while the unload operation is performed with the SVUL set to ON.

2.3 Electronic Expansion Valve PI Control

Main Electronic Expansion Valve EV1 Control

Carries out the electronic expansion valve (Y1E) PI control to maintain the evaporator outlet superheated degree (SH) at constant during heating operation to make maximum use of the outdoor unit heat exchanger (evaporator).

$$SH = Ts1 - Te$$

SH : Evaporator outlet superheated degree (°C)

Ts1 : Suction pipe temperature detected by thermistor R3T (°C)

Te : Low pressure equivalent saturation temperature (°C)

The optimum initial value of the evaporator outlet superheated degree is 3°C, but varies depending on the discharge pipe superheated degree of inverter compressor.

Subcooling Electronic Expansion Valve EV3 Control

Makes PI control of the electronic expansion valve (Y3E) to keep the superheated degree (SH) of the outlet gas pipe on the evaporator side for the full use of the subcooling heat exchanger.

$$SH = Tsh - Te$$

SH : Outlet superheated degree of evaporator (°C)

Tsh : Suction pipe temperature detected with the thermistor R4T (°C)

Te : Low pressure equivalent saturation temperature (°C)


2.4 Cooling Operation Fan Control

In cooling operation with low outdoor air temperature, this control is used to provide the adequate amount of circulation air with liquid pressure secured by high pressure control using outdoor unit fan.

Furthermore, when outdoor temperature $\geq 20^{\circ}\text{C}$, the compressor will run in Step 7 or higher.

When outdoor temperature $\geq 18^{\circ}\text{C}$, it will run in Step 5 or higher.

When outdoor temperature $\geq 12^{\circ}\text{C}$, it will run in Step 1 or higher.

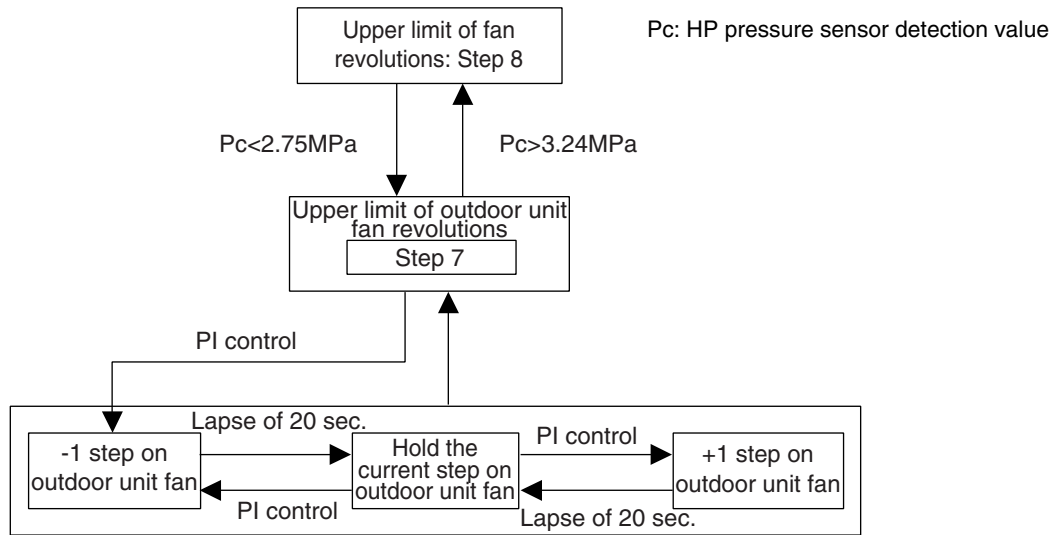

Fan Steps

Cooling	M1F	M2F
STEP0	0 rpm	0 rpm
STEP1	250 rpm	0 rpm
STEP2	400 rpm	0 rpm
STEP3	285 rpm	250 rpm
STEP4	360 rpm	325 rpm
STEP5	445 rpm	410 rpm
STEP6	580 rpm	545 rpm
STEP7	715 rpm	680 rpm
STEP8	850 rpm	815 rpm

3. Special Control

3.1 Startup Control

This control is used to equalize the pressure in the front and back of the compressor prior to the startup of the compressor, thus reducing startup loads. Furthermore, the inverter is turned ON to charge the capacitor. In addition, to avoid stresses to the compressor due to oil return or else after the startup, the following control is made and the position of the four way valve is also determined. To position the four way valve, the master and slave units simultaneously start up.

3.1.1 Startup Control in Cooling Operation

	Pressure equalization control prior to startup	Startup control	
		STEP1	STEP2
Compressor	0 Hz	57 Hz Unload	57 Hz Unload +2 steps/20 sec. (until $P_c - P_e > 0.39\text{MPa}$ is achieved)
Outdoor unit fan	STEP7	$T_a < 20^\circ\text{C}$: OFF $T_a \geq 20^\circ\text{C}$: STEP4	+1 step/15 sec. (when $P_c > 2.16\text{MPa}$) -1 step/15 sec. (when $P_c < 1.77\text{MPa}$)
Four way valve (20S1)	Holds	OFF	OFF
Main electronic expansion valve (EV1)	0 pls	480 pls	480 pls
Subcooling electronic expansion valve (EV3)	0 pls	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Ending conditions	OR <ul style="list-style-type: none"> • $P_c - P_e < 0.3\text{MPa}$ • A lapse of 1 to 5 min. 	A lapse of 10 sec.	OR <ul style="list-style-type: none"> • A lapse of 130 sec. • $P_c - P_e > 0.39\text{MPa}$

3.1.2 Startup Control in Heating Operation

	Pressure equalization control prior to startup	Startup control	
		STEP1	STEP2
Compressor	0 Hz	57 Hz Unload	57 Hz Unload +2 steps/20 sec. (until $P_c - P_e > 0.39\text{MPa}$ is achieved)
Outdoor unit fan	From starting ~ 1 min. : STEP 7 1 ~ 3 min. : STEP 3 3 ~ 5 min. : OFF	STEP8	STEP8
Four way valve	Holds	ON	ON
Main electronic expansion valve (EV1)	0 pls	0 pls	0 pls
Subcooling electronic expansion valve (EV3)	0 pls	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Ending conditions	OR <ul style="list-style-type: none"> • $P_c - P_e < 0.3\text{MPa}$ • A lapse of 1 to 5 min. 	A lapse of 10 sec.	OR <ul style="list-style-type: none"> • A lapse of 130 sec. • $P_c > 2.70\text{MPa}$ • $P_c - P_e > 0.39\text{MPa}$

3.2 Oil Return Operation

In order to prevent the compressor from running out of oil, the oil return operation is conducted to recover oil flown out from the compressor to the system side.

3.2.1 Oil Return Operation in Cooling Operation

[Start conditions]

Referring to the set conditions for the following items, start the oil return operation in cooling.

- Cumulative oil feed rate
- Timer setting (Make this setting so as to start the oil return operation when the initial cumulative operating time reaches two hours after power supply is turned ON and then every eight hours.)

Furthermore, the cumulative oil feed rate is computed from Tc, Te, and compressor loads.

Outdoor unit actuator	Oil return preparation operation	Oil return operation	Post-oil-return operation
Compressor	Take the current step as the upper limit.	52 Hz Full load (→ Low pressure constant control)	Same as the "oil return operation" mode.
Outdoor unit fan	Fan control (Normal cooling)	Fan control (Normal cooling)	Fan control (Normal cooling)
Four way valve	OFF	OFF	OFF
Main electronic expansion valve (EV1)	480 pls	480 pls	480 pls
Subcooling electronic expansion valve (EV3)	SH control	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Ending conditions	20 sec.	or [<ul style="list-style-type: none"> • 3 min. • $T_s - T_e < 5^\circ\text{C}$ 	or [<ul style="list-style-type: none"> • 3 min. • $P_e < 0.6\text{MPa}$ • $HTdi > 110^\circ\text{C}$

Indoor unit actuator		Cooling oil return operation
Fan	Thermostat ON unit	Remote controller setting
	Stopping unit	OFF
	Thermostat OFF unit	Remote controller setting
Electronic expansion valve	Thermostat ON unit	Normal opening
	Stopping unit	224 pls
	Thermostat OFF unit	Normal opening with forced thermostat ON

3.2.2 Oil Return Operation in Heating Operation

[Conditions to start]

The heating oil-returning operation is started referring following conditions.

- Integrated amount of displaced oil
- Timer

(After the power is turned on, integrated operating-time is 2 hours and subsequently every 8 hours.)

In addition, integrated amount of displaced oil is derived from T_c , T_e , and the compressor load.

Outdoor Unit Actuator	Oil return preparation operation	Oil return operation	Post-oil-return operation
Compressor	Upper limit control	140 Hz Full load	2-step increase from 36 Hz Unload to ($P_c - P_e > 0.4$ MPa) every 20 sec.
Outdoor unit fan	STEP8	OFF	STEP8
Four way valve	ON	OFF	ON
Main electronic expansion valve (EV1)	SH control	480 pls	55 pls
Subcooling electronic expansion valve (EV3)	0 pls	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Ending conditions	2 min.	or $\left[\begin{array}{l} \bullet 12 \text{ min.} \\ \bullet Ts1 - Te < 5^\circ\text{C} \\ \bullet Tb > 11^\circ\text{C} \end{array} \right.$	or $\left[\begin{array}{l} \bullet 160 \text{ sec.} \\ \bullet Pc - Pe > 0.4\text{MPa} \end{array} \right.$

* From the preparing oil-returning operation to the oil-returning operation, and from the oil-returning operation to the operation after oil-returning, the compressor stops for 1 minute to reduce noise on changing of the four way valve.

Indoor unit actuator		Heating oil return operation
Fan	Thermostat ON unit	OFF
	Stopping unit	OFF
	Thermostat OFF unit	OFF
Electronic expansion valve	Thermostat ON unit	416 pls
	Stopping unit	256 pls
	Thermostat OFF unit	416 pls

3.3 Defrosting Operation

The defrost operation is performed to solve frost on the outdoor unit heat exchanger when heating, and the heating capacity is recovered.

[Conditions to start]

The defrost operation is started referring following conditions.

- Outdoor heat exchanger heat transfer co-efficiency
- Temperature of heat-exchange (T_b)
- Timer (2 hours at the minimum)

In addition, outdoor heat-exchange co-efficiency is derived from T_c , T_e , and the compressor load.

Outdoor unit actuator	Defrost preparation operation	Defrost operation	Post Defrost operation
Compressor	Upper limit control	140 Hz Full load	2-step increase from 36 Hz Unload to ($P_c - P_e > 0.4$ MPa) every 20 sec.
Outdoor unit fan	STEP8	OFF	STEP8
Four way valve	ON	OFF	ON
Main electronic expansion valve (EV1)	SH control	480 pls	55 pls
Subcooling electronic expansion valve (EV3)	0 pls	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	ON	ON
Ending conditions	2 min.	or $\left[\begin{array}{l} \bullet 15 \text{ min.} \\ \bullet T_b > 11^\circ\text{C} \\ \bullet T_{s1} - T_e < 5^\circ\text{C} \end{array} \right.$	or $\left[\begin{array}{l} \bullet 160 \text{ sec.} \\ \bullet P_c - P_e > 0.4 \text{ MPa} \end{array} \right.$

* From the preparing operation to the defrost operation, and from the defrost operation to the operation after defrost, the compressor stops for 1 minute to reduce noise on changing of the four way valve.

Indoor unit actuator		Heating oil return operation
Fan	Thermostat ON unit	OFF
	Stopping unit	OFF
	Thermostat OFF unit	OFF
Electronic expansion valve	Thermostat ON unit	416 pls
	Stopping unit	256 pls
	Thermostat OFF unit	416 pls

3.4 Pump-down Residual Operation

When activating compressor, if the liquid refrigerant remains in the heat-exchanger, the liquid enters into the compressor and dilutes oil therein resulting in decrease of lubricity.

Therefore, the pump-down residual operation is performed to collect the refrigerant in the heat-exchanger when the compressor is down.

3.4.1 Pump-down Residual Operation in Cooling Operation

Actuator	Pump-down residual operation Step 1	Pump-down residual operation Step 2
Compressor	124 Hz Full load	52 Hz Full load
Outdoor unit fan	Fan control	Fan control
Four way valve	OFF	OFF
Main electronic expansion valve (EV1)	480 pls	240 pls
Subcooling electronic expansion valve (EV3)	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF
Ending conditions	2 sec.	2 sec.

3.4.2 Pump-down Residual Operation in Heating Operation

Actuator	Pump-down residual operation
Compressor	124 Hz Full load
Outdoor unit fan	STEP7
Four way valve	ON
Main electronic expansion valve (EV1)	0 pls
Subcooling electronic expansion valve (EV3)	0 pls
Hot gas bypass valve (SVP)	OFF
Ending conditions	4 sec.

3.5 Restart Standby

Restart is stood by force to prevent frequent power-on/off and to equalize pressure in the refrigerant system.

Actuator	Operation	Remarks
Compressor	OFF	—
Outdoor unit fan	Ta>30°C: STEP4 Ta≤30°C: OFF	—
Four way valve	Keep former condition.	—
Main electronic expansion valve (EV1)	0 pls	—
Subcooling electronic expansion valve (EV3)	0 pls	—
Hot gas bypass valve (SVP)	OFF	—
Ending conditions	2 min.	—

3.6 Stopping Operation

Operation of the actuator when the system is down, is cleared up.

3.6.1 When System is in Stop Mode


Actuator	Operation
Compressor	OFF
Outdoor unit fan	OFF
Four way valve	Keep former condition.
Main electronic expansion valve (EV1)	0 pls
Subcooling electronic expansion valve (EV3)	0 pls
Hot gas bypass valve (SVP)	OFF
Ending conditions	Indoor unit thermostat is turned ON.

4. Protection Control


4.1 High Pressure Protection Control

This high pressure protection control is used to prevent the activation of protection devices due to abnormal increase of high pressure and to protect compressors against the transient increase of high pressure.

[In cooling operation]

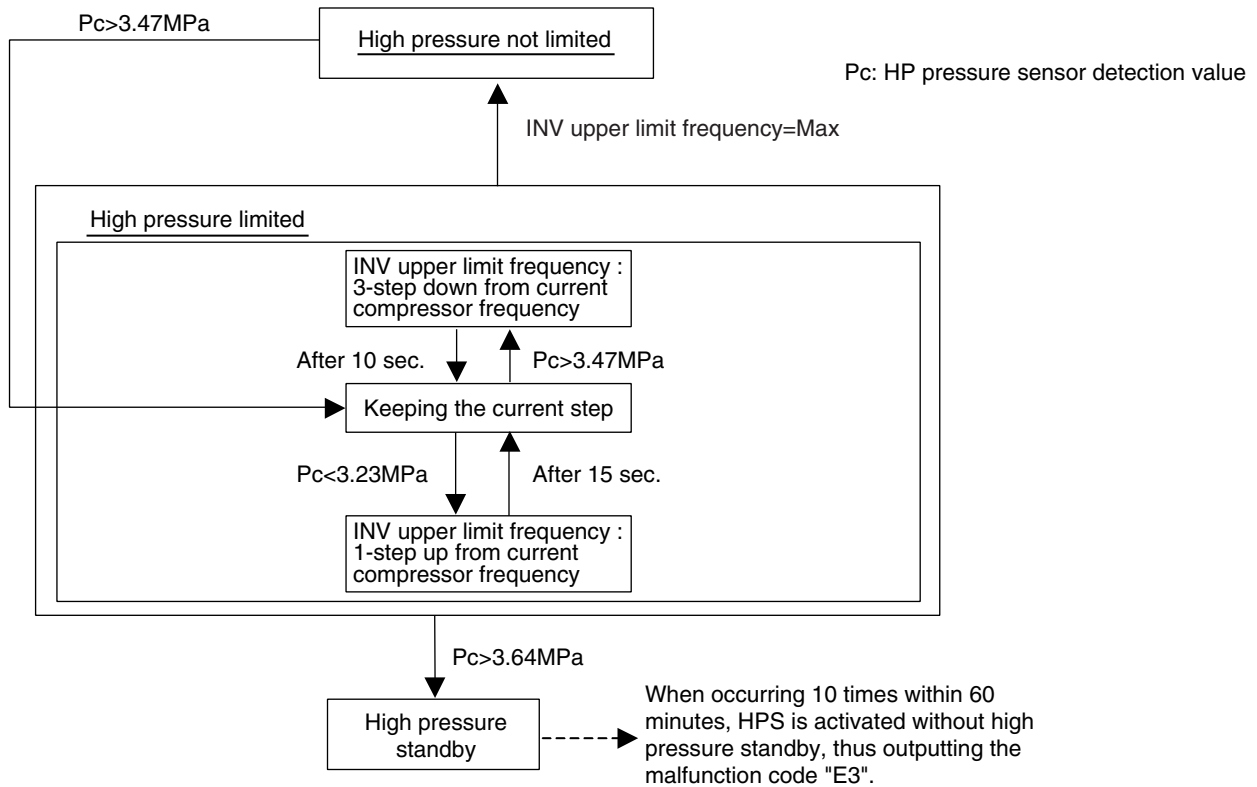


[In heating operation]

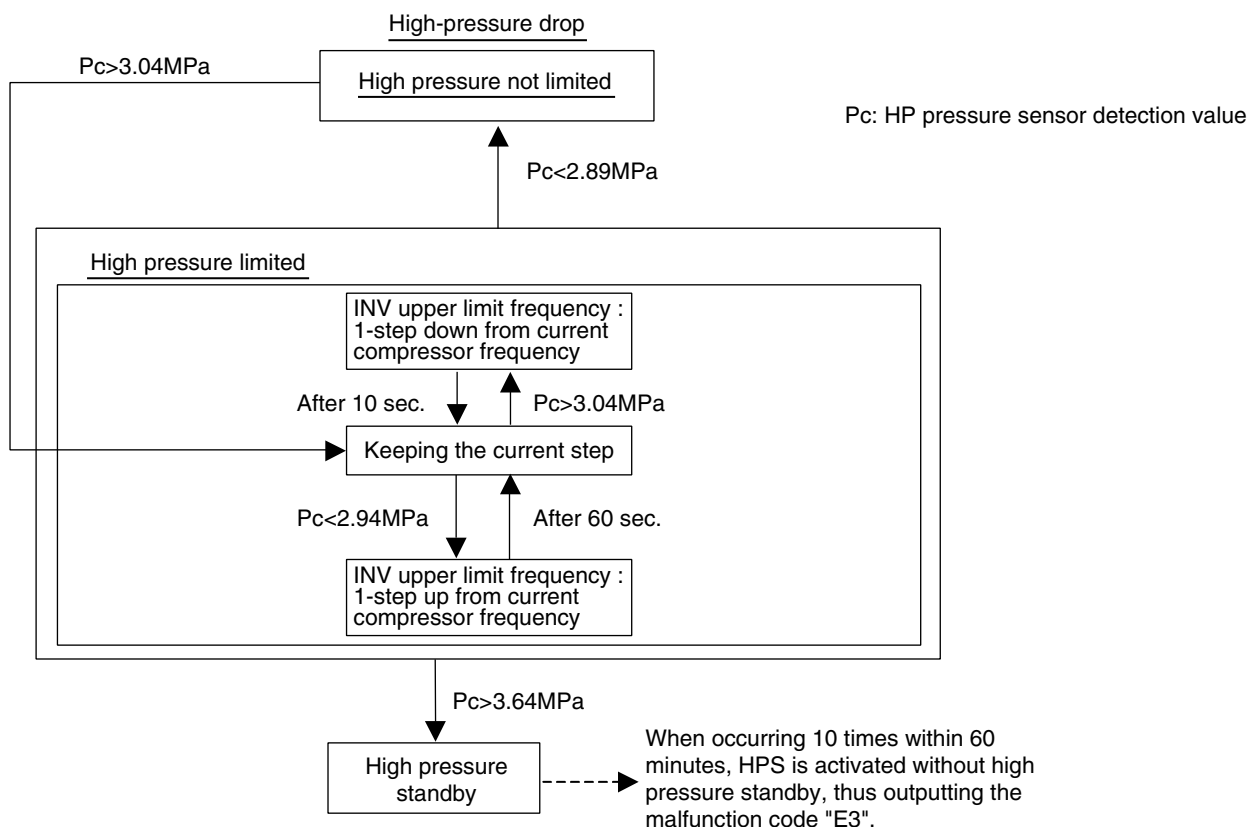


4.2 Low Pressure Protection Control

This low pressure protection control is used to protect compressors against the transient decrease of low pressure.

[In cooling operation]

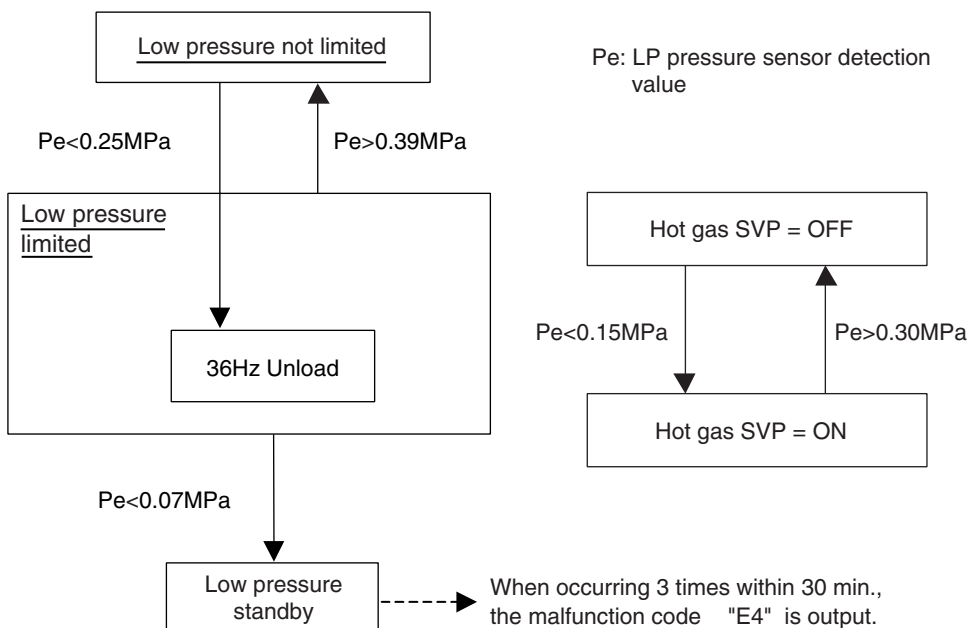


[In heating operation]

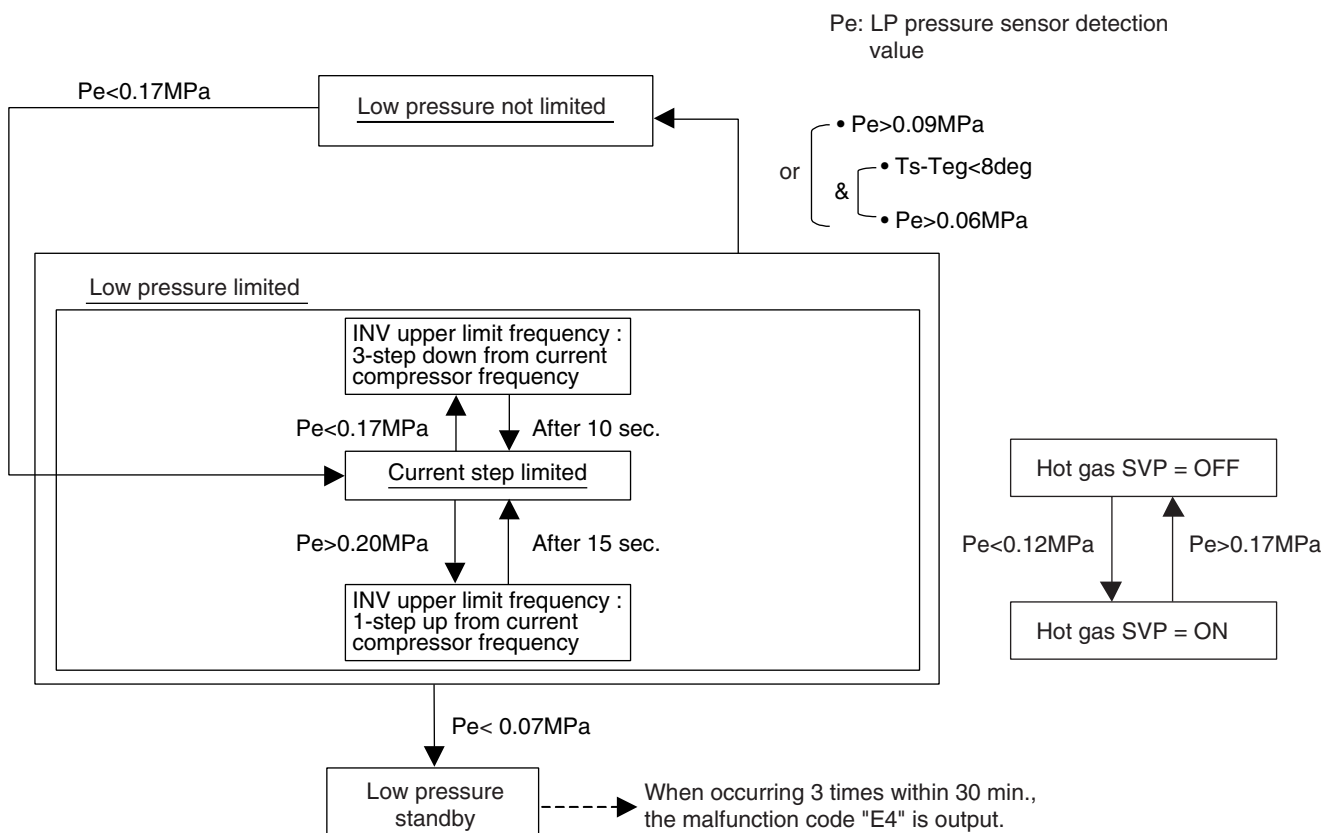

4.3 Discharge Pipe Protection Control

This discharge pipe protection control is used to protect the compressor internal temperature against a malfunction or transient increase of discharge pipe temperature.


[INV compressor]

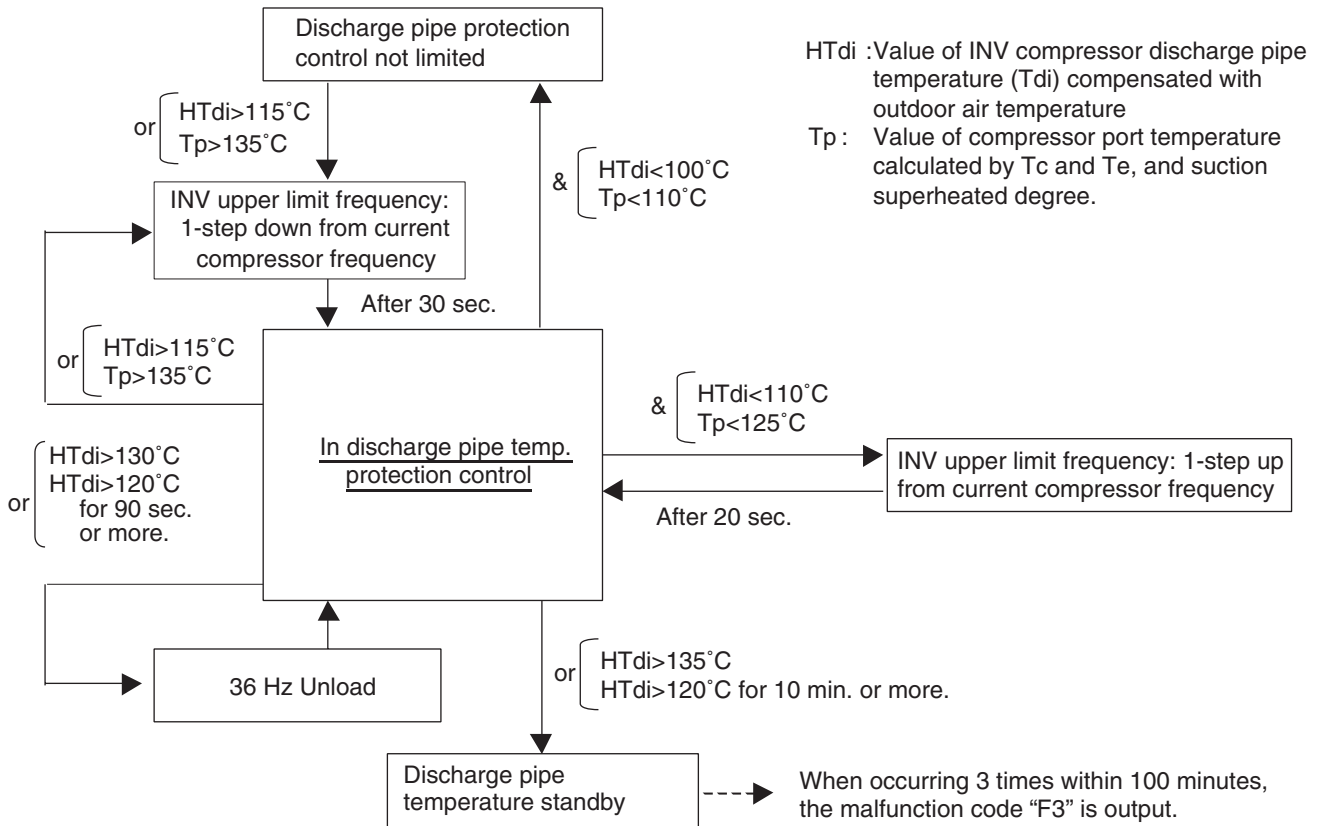


4.4 Inverter Protection Control

Inverter current protection control and inverter fin temperature control are performed to prevent tripping due to a malfunction, or transient inverter overcurrent, and fin temperature increase.

[Inverter overcurrent protection control]

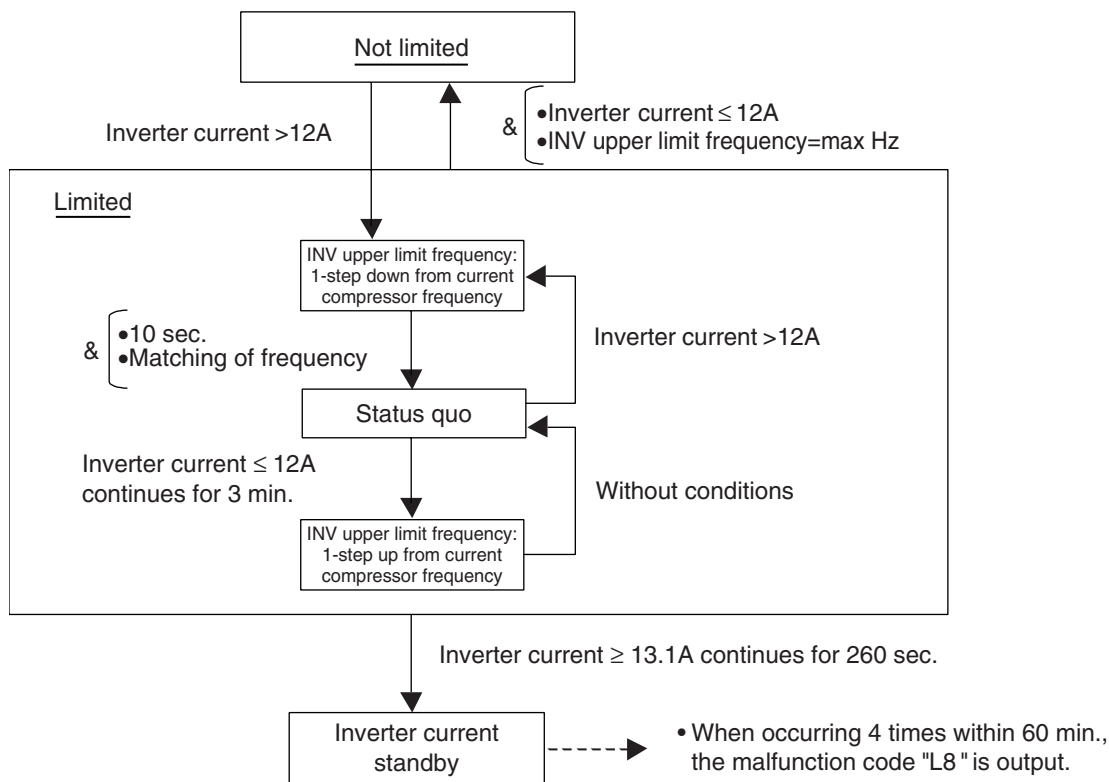

[Inverter fin temperature control]

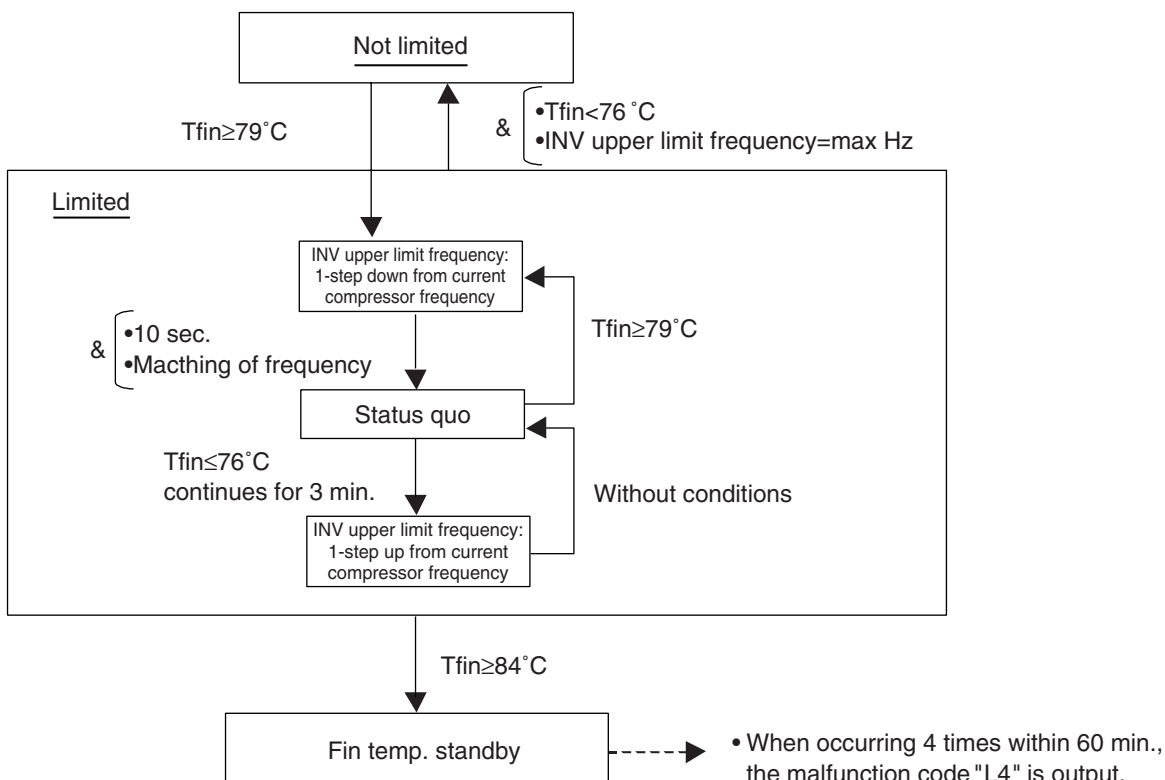

5. Other Control

5.1 Demand Operation

In order to save the power consumption, the capacity of outdoor unit is saved with control forcibly by using "Demand 1 Setting".

To operate the unit with this mode, additional setting of "Continuous Demand Setting".

[Demand 1 setting]

Setting	Standard for upper limit of power consumption
Demand 1 setting 1	Approx. 60%
Demand 1 setting 2 (factory setting)	Approx. 70%
Demand 1 setting 3	Approx. 80%

★ Other protection control functions have precedence over the above operation.

5.2 Heating Operation Prohibition


Heating operation is prohibited above 24°CDB outdoor air temperature.

6. Outline of Control (Indoor Unit)

6.1 Drain Pump Control


- The drain pump is controlled by the ON/OFF buttons (4 button (1) - (4) given in the figure below).

6.1.1 When the Float Switch is Tripped while the Cooling Thermostat is ON:

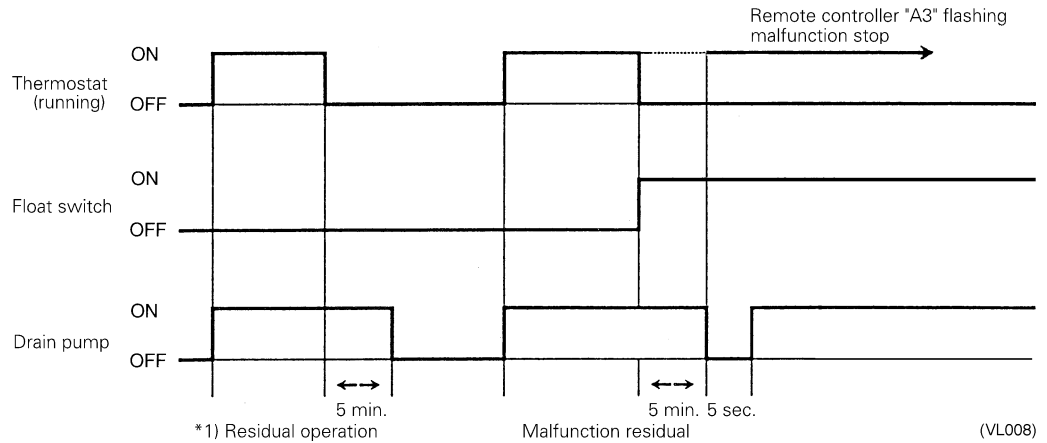


- * 1. The objective of residual operation is to completely drain any moisture adhering to the fin of the indoor unit heat exchanger when the thermostat goes off during cooling operation.

6.1.2 When the Float Switch is Tripped while the Cooling Thermostat is OFF:

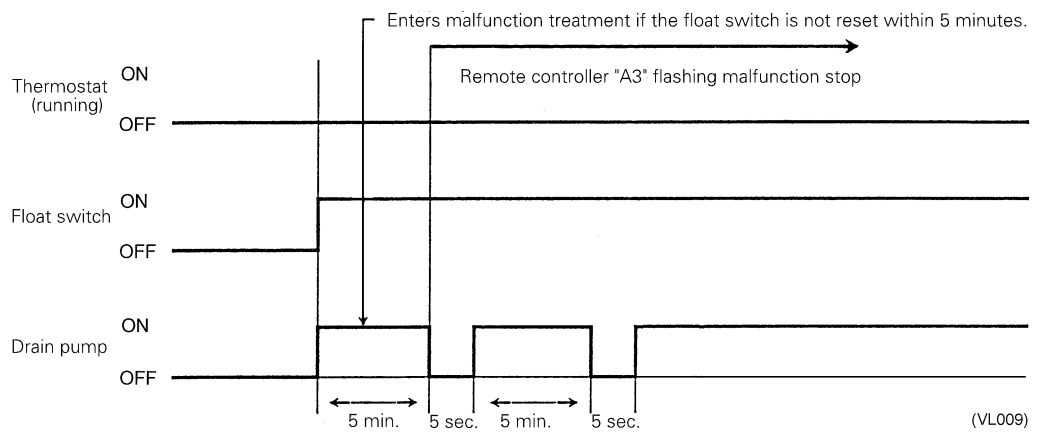


6.1.3 When the Float Switch is Tripped During Heating Operation:

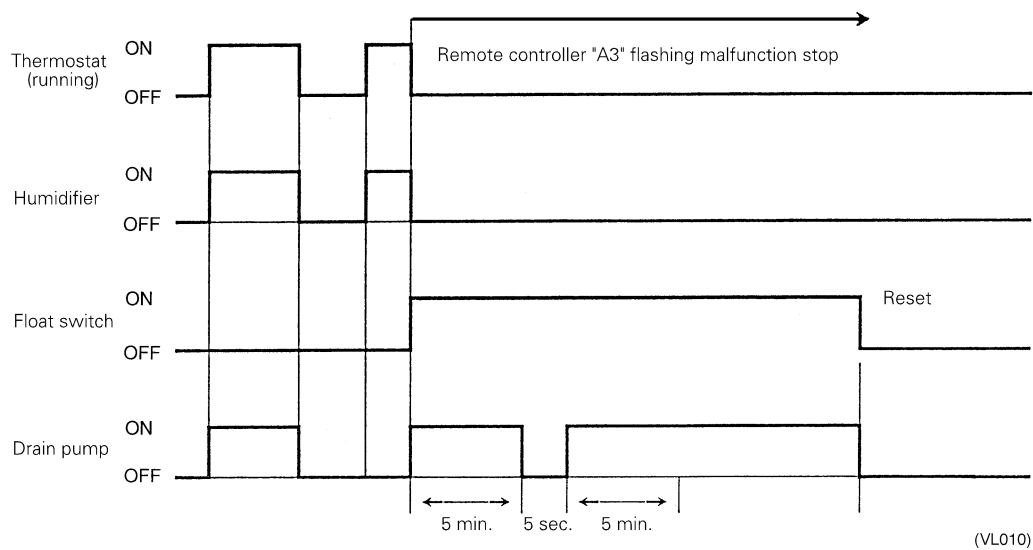

During heating operation, if the float switch is not reset even after the 5 minutes operation, 5 seconds stop, 5 minutes operation cycle ends, operation continues until the switch is reset.


6.1.4 When the Float Switch is Tripped and “AF” is Displayed on the Remote Controller:

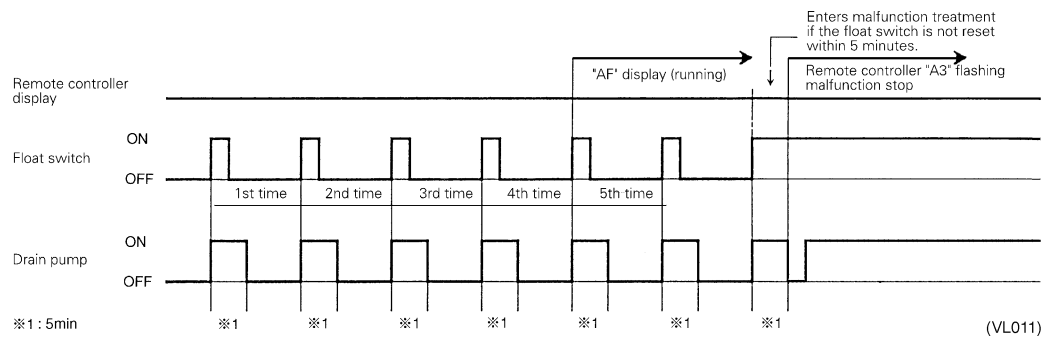

Note: If the float switch is tripped five times in succession, a drain malfunction is determined to have occurred. “AF” is then displayed as operation continues.

6.2 Louver Control for Preventing Ceiling Dirt

We have added a control feature that allows you to select the range of in which air direction can be adjusted in order to prevent the ceiling surrounding the air discharge outlet of ceiling mounted cassette type units from being soiled. (This feature is available on double flow, multi-flow and corner types.)

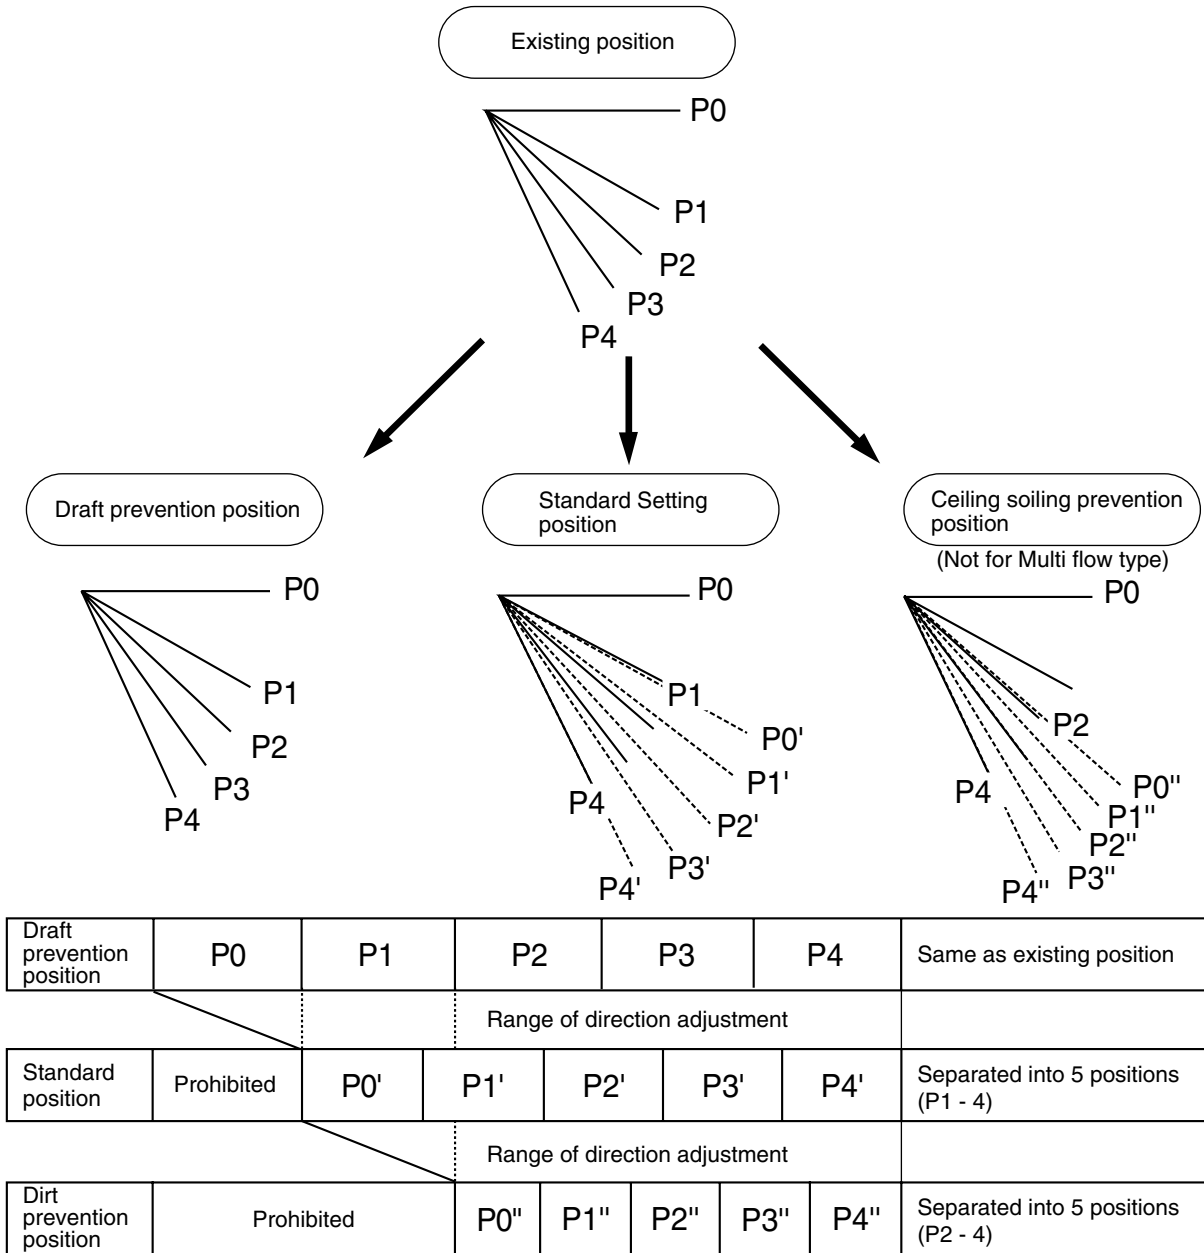

The factory set position is standard position.


(VL012)

6.3 Thermostat Sensor in Remote Controller

Temperature is controlled by both the thermostat sensor in remote controller and air suction thermostat in the indoor unit. (This is however limited to when the field setting for the thermostat sensor in remote controller is set to "Use.")

Cooling

If there is a significant difference in the preset temperature and the suction temperature, fine adjustment control is carried out using a body thermostat sensor, or using the sensor in the remote controller near the position of the user when the suction temperature is near the preset temperature.

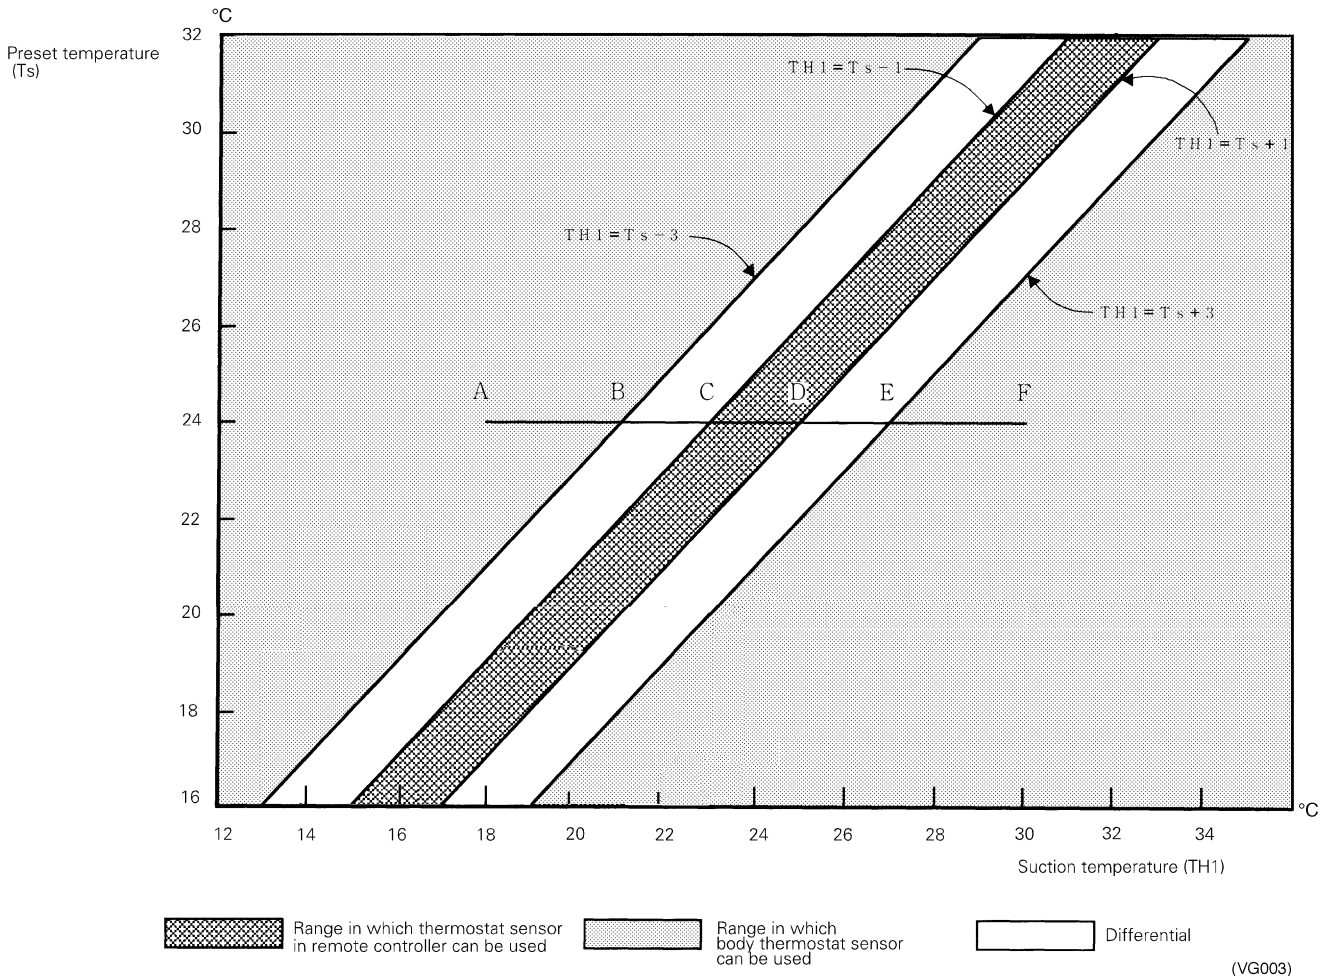

■ **Ex: When cooling**

Assuming the preset temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 30°C (A → F):

(This example also assumes there are several other air conditioners, the VRV system is off, and that temperature changes even when the thermostat sensor is off.)

Body thermostat sensor is used for temperatures from 18°C to 23°C (A → C).

Remote controller thermostat sensor is used for temperatures from 23°C to 27°C (C → E).

Body thermostat sensor is used for temperatures from 27°C to 30°C (E → F).

And, assuming suction temperature has changed from 30°C to 18°C (F → A):


Body thermostat sensor is used for temperatures from 30°C to 25°C (F → D).

Remote controller thermostat sensor is used for temperatures from 25°C to 21°C (D → B).

Body thermostat sensor is used for temperatures from 21°C to 18°C (B → A).

Heating

When heating, the hot air rises to the top of the room, resulting in the temperature being lower near the floor where the occupants are. When controlling by body thermostat sensor only, the unit may therefore be turned off by the thermostat before the lower part of the room reaches the preset temperature. The temperature can be controlled so the lower part of the room where the occupants are doesn't become cold by widening the range in which thermostat sensor in remote controller can be used so that suction temperature is higher than the preset temperature.

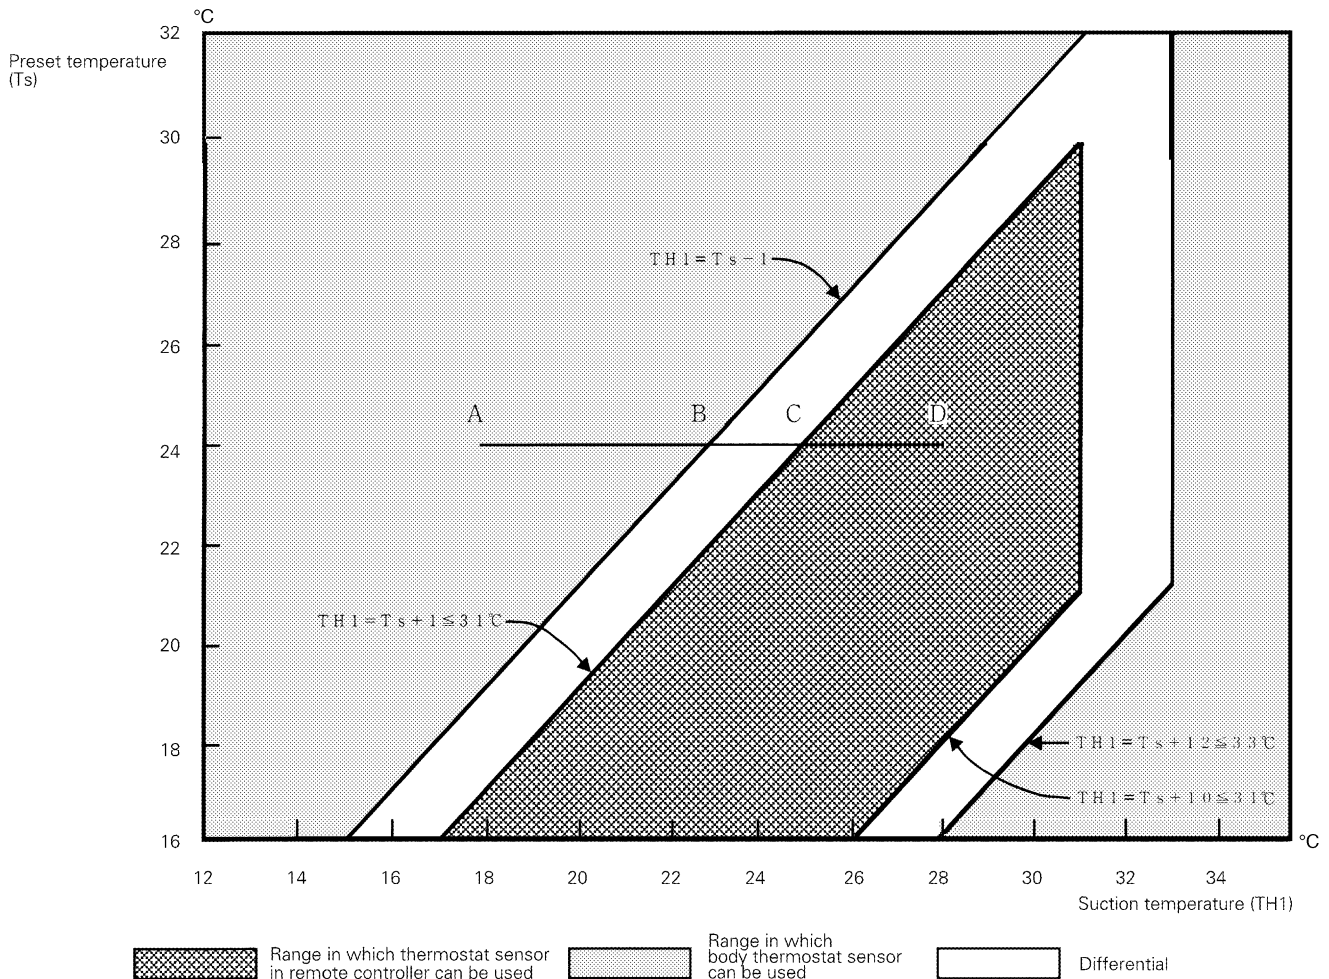

(V2769)

■ Ex: When heating

Assuming the preset temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 28°C (A → D):

(This example also assumes there are several other air conditioners, the VRV system is off, and that temperature changes even when the thermostat is off.)

Body thermostat sensor is used for temperatures from 18°C to 25°C (A → C).

Remote controller thermostat sensor is used for temperatures from 25°C to 28°C (C → D).

And, assuming suction temperature has changed from 28°C to 18°C (D → A):

Remote controller thermostat sensor is used for temperatures from 28°C to 23°C (D → B).

Body thermostat sensor is used for temperatures from 23°C to 18°C (B → A).

6.4 Freeze Prevention


Freeze Prevention by Off Cycle (Indoor Unit)

When the temperature detected by liquid pipe temperature thermistor (R2T) of the indoor unit heat exchanger drops too low, the unit enters freeze prevention operation in accordance with the following conditions, and is also set in accordance with the conditions given below.

Conditions for starting freeze prevention: Temperature is -1°C or less for total of 40 min., or temperature is -5°C or less for total of 10 min.

Conditions for stopping freeze prevention: Temperature is $+7^{\circ}\text{C}$ or more for 10 min. continuously

Ex: Case where temperature is -5°C or less for total of 10 min.

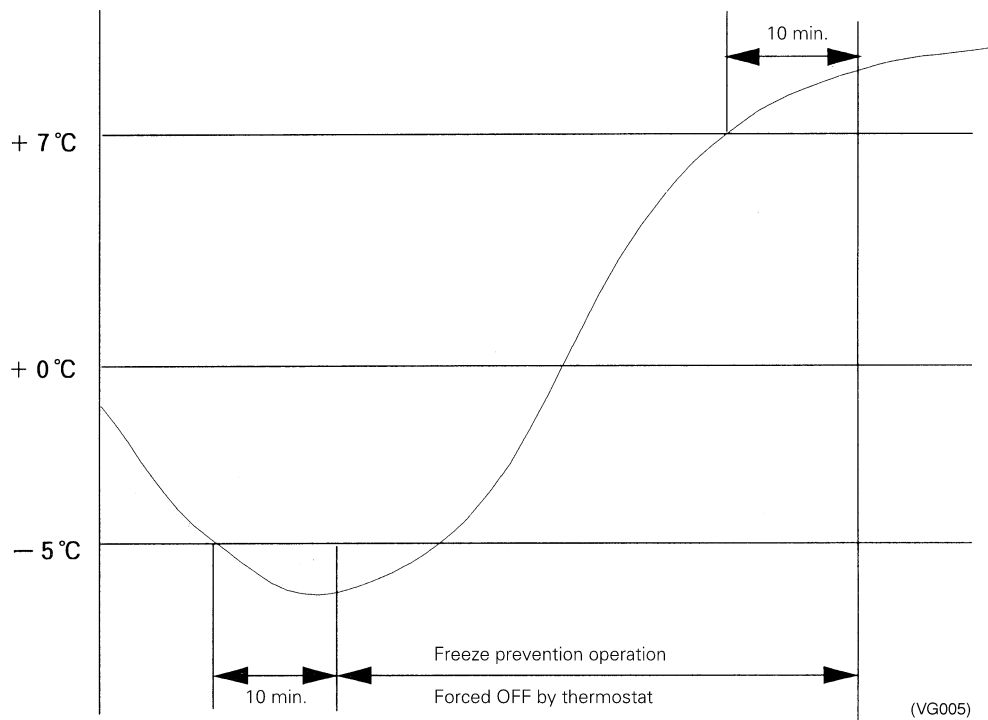

6.5 View of Operations of Swing Flaps

Swing flaps work as following.

			Fan	Flap control			
				FXFQ	FXCQ FXKQ FXHQ	FXAQ	
Heating	Hot-start from defrosting	Swinging	OFF	Level	Level	Level	
		Setting the wind direction	OFF	Level	Level	Level	
	Defrosting	Swinging	OFF	Level	Level	Level	
		Setting the wind direction	OFF	Level	Level	Level	
	Thermostat is off	Swinging	LL	Level	Level	Level	
		Setting the wind direction	LL	Level	Level	Level	
	Hot-start from the state that the thermostat is off	Swinging	LL	Level	Level	Level	
		Setting the wind direction	LL	Level	Level	Level	
	Halt	Swinging	OFF	Level	Level	Level	
		Setting the wind direction	OFF	Level	Level	Level	
	Cooling	Thermostat of microcomputer-dry is on	Swinging	L ^{*1}	Swinging	Swinging	Swinging
			Setting the wind direction	L ^{*1}	Set up	Set up	Set up
Thermostat of microcomputer-dry is off		Swinging	OFF or L	Swinging	Swinging	Swinging	
		Setting the wind direction	OFF or L	Set up	Set up	Set up	
Cooling thermostat is off		Swinging	Set up	Swinging	Swinging	Swinging	
		Setting the wind direction	Set up	Set up	Set up	Set up	
Halt		Swinging	OFF	Level	Level	Level	
		Setting the wind direction	OFF	Set up	Level	Level	
Microcomputer is controlled (including the cooling state)		Swinging	L	Swinging	Swinging	Swinging	
		Setting the wind direction	L	Set up	Set up	Set up	

* 1. Only in FXFQ case, L or LL.

6.6 Electronic Expansion Valve Control

- Electronic expansion Valve Control

In cooling, to maximize the capacity of indoor unit heat exchanger (evaporator), operate the electronic expansion valve under PI control so that the evaporator outlet superheated degree (SH) will become constant.

In heating, to maximize the capacity of indoor unit heat exchanger (condenser), operate the electronic expansion valve under PI control so that the evaporator outlet superheated degree (Condenser outlet subcooled degree) will become constant.

Cooling $SH=TH_2-TH_1$ SH : Evaporator outlet superheated degree
 (Heating $SC=TC-TH_1$) TH₁: Temperature (°C) detected with the liquid thermistor
 TH₂: Temperature (°C) detected with the gas thermistor
 SC : Condenser outlet subcooled degree
 TC : High pressure equivalent saturated temperature


Furthermore, the default value of the optimal evaporator outlet superheated degree (condenser outlet subcooled degree) is 5 deg. However, this default value varies with the operating performance.

6.7 Hot Start Control (In Heating Operation Only)

At startup with thermostat ON or after the completion of defrosting in heating operation, the indoor unit fan is controlled to prevent cold air from blasting out and ensure startup capacity.

[Detail of operation]

When either the **start condition 1** or the **start condition 2** is established, the operations shown below will be conducted.

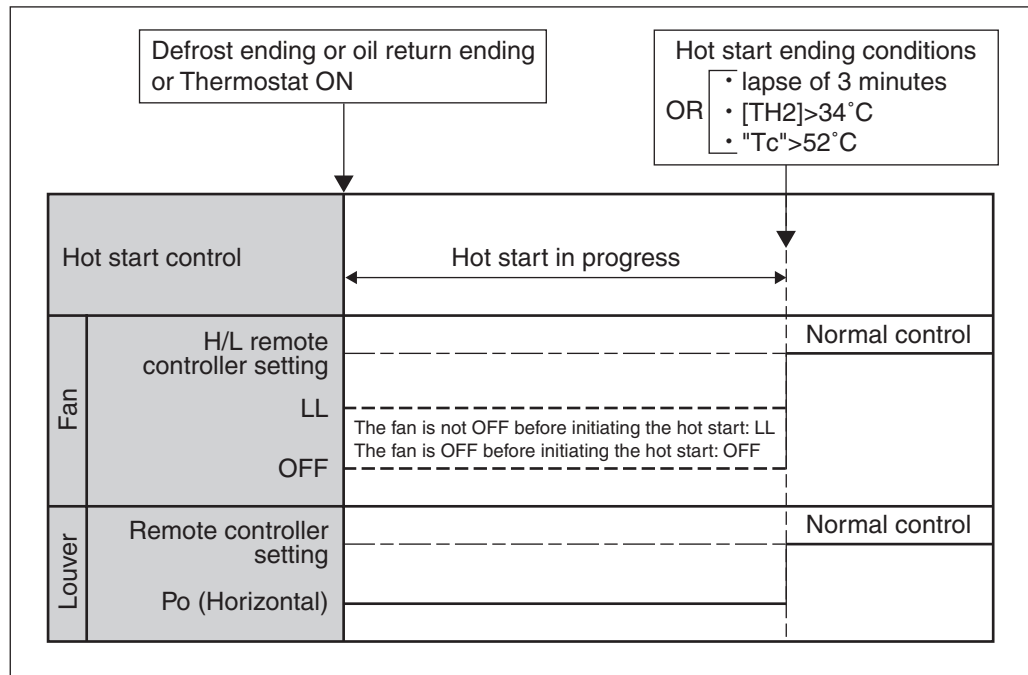

TH₂: Temperature (°C) detected with the gas thermistor
 TC : High pressure equivalent saturated temperature

Part 6

Test Operation

- 1. Test Operation74
 - 1.1 Procedure and Outline74
 - 1.2 Operation when Power is Turned On85
- 2. Outdoor Unit PC Board Layout86
- 3. Field Setting87
 - 3.1 Field Setting from Remote Controller87
 - 3.2 Field Setting from Outdoor Unit.....104

1. Test Operation

1.1 Procedure and Outline

Follow the following procedure to conduct the initial test operation after installation.

1.1.1 Check Work Prior to Turn Power Supply On

Check the below items.

- Power wiring
- Control transmission wiring between units
- Earth wire



Check on refrigerant piping



Check on amount of refrigerant charge

- Is the power supply three-phase 380-415V / 50Hz?
- Have you finished a ductwork to drain?
- Have you detach transport fitting?
- Is the wiring performed as specified?
- Are the designated wires used?
- Is the grounding work completed?
 - Use a 500V megger tester to measure the insulation.
 - Do not use a megger tester for other circuits than 380-415V circuit.
- Are the setscrews of wiring not loose?
- Is the electrical component box covered with an insulation cover completely?

- Is pipe size proper? (The design pressure of this product is 4.0MPa.)
- Are pipe insulation materials installed securely?
 - Liquid and gas pipes need to be insulated. (Otherwise causes water leak.)
- Are respective stop valves on liquid and gas line securely open?

- Is refrigerant charged up to the specified amount?
 - If insufficient, charge the refrigerant from the service port of stop valve on the liquid side with outdoor unit in stop mode after turning power on.
- Has the amount of refrigerant charge been recorded on “Record Chart of Additional Refrigerant Charge Amount”?

(V3180)

1.1.2 Turn Power On

Turn outdoor unit power on.



Turn indoor unit power on.



Carry out field setting on outdoor PC board

- Be sure to turn the power on 6 hours before starting operation to protect compressors.
- Close outside panels of the outdoor unit.

(V3056)

1.1.3 Air Tight Test and Vacuum Drying

- Air tight test: Make sure to use nitrogen gas.
- Pressurize the liquid and gas pipes to 4.0 MPa (40 bar) (do not pressurize more than 4.0 MPa (40 bar)). If the pressure does not drop within 24 hours, the system passes the test. If the pressure drops, check where the nitrogen leaks from.
- Vacuum drying: Use a vacuum pump which can evacuate to -100.7 kPa (5 Torr, -755 mm Hg)
 1. Evacuate the system from the liquid and gas pipes by using a vacuum pump for more than 2 hours and bring the system to -100.7 kPa. After keeping the system under that condition for more than 1 hour, check if the vacuum gauge rises or not. If it rises, the system may either contain moisture inside or have leaks.
 2. Following should be executed if there is a possibility of moisture remaining inside the pipe (if piping work is carried out during the raining season or over a long period of time, rainwater may enter the pipe during work).

After evacuating the system for 2 hours, pressurize the system to 0.05 MPa (vacuum break) with nitrogen gas and evacuate the system again using the vacuum pump for 1 hour to -100.7 kPa (vacuum drying). If the system cannot be evacuated to -100.7 kPa within 2 hours, repeat the operation of vacuum break and vacuum drying.

Then, after leaving the system in vacuum for 1 hour, confirm that the vacuum gauge does not rise.

1.1.4 Additional Refrigerant Charge



- Refrigerant cannot be charged until field wiring has been completed.
- Refrigerant may only be charged after performing the leak test and the vacuum drying (see above).
- When charging a system, care shall be taken that its maximum permissible charge is never exceeded, in view of the danger of liquid hammer.
- Charging with an unsuitable substance may cause explosions and accidents, so always ensure that the appropriate refrigerant (R-410A) is charged.
- Refrigerant containers shall be opened slowly.
- Always use protective gloves and protect your eyes when charging refrigerant.
- When performing service on the unit requiring the refrigerant system to be opened, refrigerant must be evacuated according to local regulations.
- Do not use the automatic refrigerant charging function while working on the indoor units. When using the automatic refrigerant charging function, the indoor units operate automatically as well as the outdoor unit.
- When the power is on, please close the front panel when leaving the unit.

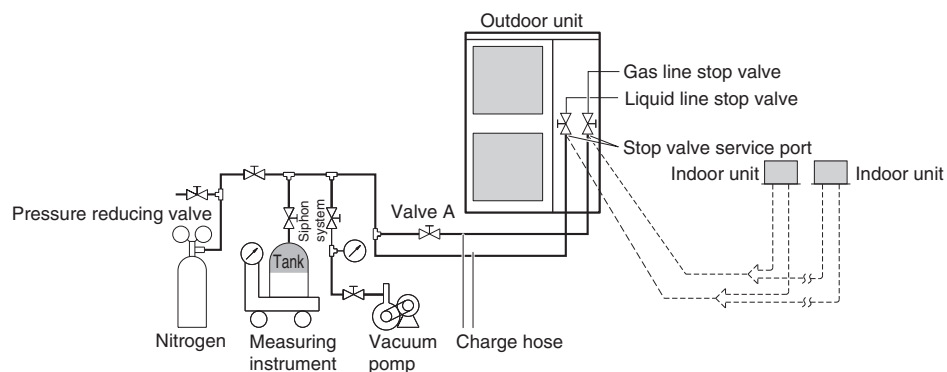


Fig. 6

To avoid compressor breakdown. Do not charge the refrigerant more than the specified amount.


- This outdoor unit is factory charged with refrigerant and depending on pipe sizes and pipe lengths some systems require additional charging of refrigerant. See "How to calculate the additional refrigerant to be charged" on page 249.
- In case re-charge is required, refer to the nameplate of the unit. The nameplate states the type of refrigerant and necessary amount.

Precautions when adding R-410A

Be sure to charge the specified amount of refrigerant in liquid state to the liquid pipe.

Since this refrigerant is a mixed refrigerant, adding it in gas form may cause the refrigerant composition to change, preventing normal operation.

- Before charging, check whether the refrigerant cylinder is equipped with a siphon tube or not.

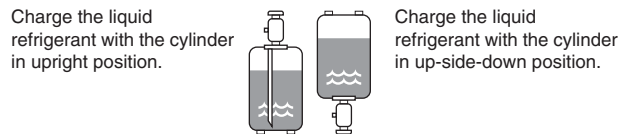

1.1.4.1 Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: R-410A


GWP⁽¹⁾ value: 1975

(1) GWP = global warming potential

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product,
 - ② the additional refrigerant amount charged in the field and
 - ① + ② the total refrigerant charge
- on the refrigerant charge label supplied with the product.


The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the service cover).

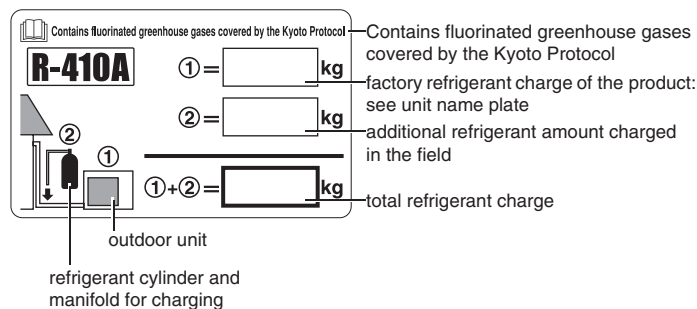

1.1.4.2 Procedures for adding refrigerant

Procedure 1: Adding refrigerant by using the automatic refrigerant charging function (recommended)

How to connect the tank?

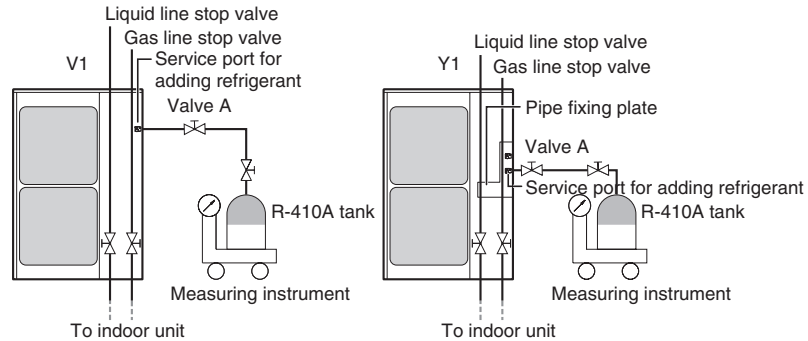

When the refrigerant tank is connected and the specified operation is performed, the appropriate amount of refrigerant will be charged into the system. After charging, the system will stop automatically. The refrigerant must be charged according to the procedure described below.



Caution

- Make sure to turn ON the power 6 hours before starting the operation. This is necessary to warm the crankcase by the electric heater.
- Automatic charging is able to charge 6 kg/hour refrigerant at an outside temperature of 0°C to 24 kg/hour refrigerant at an outside temperature of 35°C. The charging time depends on the amount of charged refrigerant and on the outside temperature.
- Automatic refrigerant charging is NOT possible if the following restrictions are exceeded:
 - Outside temperature: 0°C DB~43°C DB
 - Indoor temperature: 0°C DB~32°C DB
 - Indoor unit connection capacity: 50%~130%

Automatic refrigerant charging procedure

1. Open the liquid and gas side stop valves completely.



Note that valve A must be closed!

2. Turn on the power of the outdoor unit and indoor units.



Note

When an indoor unit is connected to the refrigerant system and the indoor unit is turned off, automatic charging will fail.

3. Make sure that the led on the PCB on the outdoor unit are as shown in the table below. This indicates that the system is operating normally.

MODE	TEST/HWL	IND	MASTER	SLAVE	L.N.O.P.	DEMAND
H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	☼	●	●	●	●

Led state

Throughout the manual the state of the leds is indicated as follows:

- OFF
- ☉ ON
- ◐ blinking
- * ON or OFF

If H2P is lit up, check the type of error based on the error code in the remote controller and correct the error in accordance with “1.1.5 Check Operation” on page 82.

4. Automatically charge the refrigerant according to the procedure described below.



Warning

Do not touch anything else than the push-buttons (BS1~5) on the PCB when making the settings. These settings must be done with the power on



4.1 Press **BS4 TEST** once.

H1P	H2P	H3P	H4P	H5P	H6P	H7P
☉	☉	☉	☉	☉	☉	☉

4.2 Press **BS4 TEST** for 5 seconds. The unit will start running.

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	◐	●	●	●	*	*

If the led display below appears, the automatic refrigerant charging restriction has been exceeded. Additional refrigerant must be charged by calculating the additional refrigerant charging amount.

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Description of error
☉	◐	◐	◐	☉	●	●	Inappropriate outdoor temperature

OR

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Description of error
☉	◐	◐	◐	●	☉	●	Inappropriate indoor temperature

If the led display below appears, check the indoor unit connection capacity.

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Description of error
☉	◐	◐	◐	◐	●	☉	Inappropriate indoor unit connection capacity

If the led display below appears, the liquid and gas side stop valves may be closed.

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Description of error
☉	●	*	*	*	*	*	Stop valve is closed




Note

If you want to repeat the automatic refrigerant charging operation from step 4.1, fully open the liquid and gas side stop valves and press the **BS1 MODE** button once.

4.3 When the led indication becomes as shown in the table below in about 15 to 30 minutes after start of operation, open valve A at once to start charging of the refrigerant. Immediately after starting charging of the refrigerant by opening valve A, press **BS4 TEST** once. When **BS4 TEST** is not pressed within 10 minutes after the led indication is shown, charging is stopped.

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Code on remote controller
◐	◐	◐	●	☉	●	☉	P8

4.4 The led indication becomes as shown in the table below during automatic refrigerant charging.

During automatic refrigerant charging, the remote controller indicates **TEST** (test operation) and  (external control).

H1P	H2P	H3P	H4P	H5P	H6P	H7P
		*	*	*	*	*



Note If the led display below appears, the refrigerant tank is empty. Replace the refrigerant tank, open valve A and re-charge.

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Code on remote controller
							P8

The led indication becomes as shown in the table below when automatic refrigerant charging is about to end. Prepare to close the valve on the refrigerant tank.

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Code on remote controller
							P8



Note It is possible that the code P8 is not shown on the remote controller but this does not indicate a malfunction. The led indication can immediately shift to the situation as shown in "Case 1: Charging complete" on page 79.

4.5 When the led indication becomes as shown in the table below, quickly close valve A and follow instructions as described below.



Caution

- When adding refrigerant is done or when pausing, close the valve on the refrigerant tank immediately.
More refrigerant might be charged by any remaining pressure after the machine is stopped.
- The outdoor fan may keep rotating a little bit more, but this does not indicate a malfunction.

Case 1: Charging complete

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Code on remote controller
							P8

Charging of the refrigerant is complete. Press **BS1 MODE** button once and go to step 5.

Case 2: Recharging operation

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Code on remote controller
							P8

Press **BS1 MODE** button once and perform automatic refrigerant charging again starting from Step 4.1.

Case 3: Charging interrupted

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Code on remote controller
							P2

Something is preventing normal operation:

- Is the gas side stop valve completely open?
- Are the valve on the refrigerant tank and valve A open?
Check if the **BS4 TEST** button was pressed within 10 minutes after the valves were opened.
- Is the indoor unit air intake vent or outlet vent blocked?

After correcting the problem, press **BS1 MODE** button once and perform automatic refrigerant charging again starting from step 4.1.


Case 4: Failure

H1P	H2P	H3P	H4P	H5P	H6P	H7P	Error code on remote controller
●	○	○	●	●	●	●	See footnote(*)

(*) An error in the system interrupted the operation of the unit. Check the error by using the error code displayed on the remote controller. For an explanation of the error codes, see "Error codes on the remote controller" on page 75 and solve the problem.

After correcting the problem, press **BS1 MODE** button once and perform automatic refrigerant charging again starting from step 4.1.

- When charging is complete, determine the weight of refrigerant that was added and fill in the amount in the "Additional refrigerant charge label" attached to service precautions plate on the unit.
- After adding the refrigerant, do not forget to close the lid of the service port. The tightening torque for the lid is 11.5~13.9 N•m.

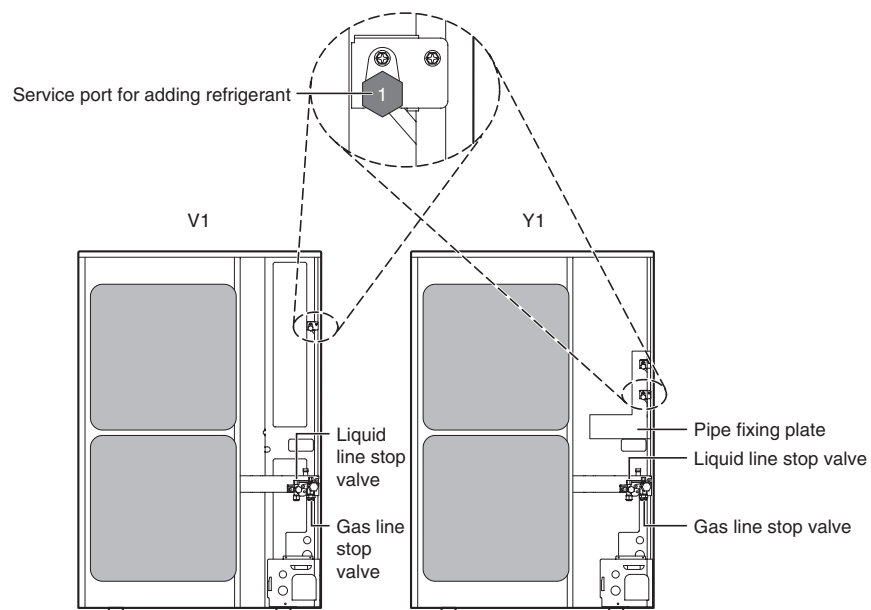

Procedure 2: Charging while the outdoor unit is at a standstill

See figure 6 on page 75.


- Determine the weight of refrigerant to be charged additionally referring to the item "Additional refrigerant charge" in "How to calculate the additional refrigerant to be charged" on page 249 and fill in the amount in the "Additional refrigerant charge label" attached to the unit.
- After the vacuum drying is finished, open valve A and charge the additional refrigerant in its liquid state through the service port on the liquid stop valve taking into account following instructions:
 - Turn on the power of the outdoor unit and indoor units.
 - Check that gas and liquid stop valves are closed.
 - Stop the compressor and charge the specified weight of refrigerant.



- To avoid compressor breakdown. Do not charge the refrigerant more than the specified amount.
- If the total refrigerant cannot be charged while the outdoor unit is at a standstill, it is possible to charge the refrigerant by operating the outdoor unit using the refrigerant charge function (refer to "Setting mode 2" on page 108) and follow "Procedure 3: Charging while the outdoor unit is operating" on page 81.


Procedure 3: Charging while the outdoor unit is operating

See the figure in "How to connect the tank?" on page 77.

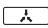1. Completely open the gas side stop valve and liquid side stop valve. Valve A must be left fully closed.
2. Close the front panel and turn on the power to all indoor units and the outdoor unit.
3. Open valve A immediately after starting of the compressor.
4. Charge the additional refrigerant in its liquid state through the service port of the liquid line stop valve.
5. While the unit is at a standstill and under setting mode 2 (refer to Checks before initial start-up, "Setting mode 2" on page 108), set the required function A (additional refrigerant charging operation) to **ON** (ON). Then operation starts. The blinking H2P led indicates test operation and the remote controller indicates **TEST** (test operation) and  (external control).
6. When the specified amount of refrigerant is charged, push the **BS3 RETURN** button. Then operation stops.
 - The operation automatically stops within 30 minutes.
 - If the refrigerant charge cannot be finished within 30 minutes, repeat step 5.
 - If the operation stops immediately after restart, there is a possibility that the system is overcharged.
The refrigerant cannot be charged more than this amount.
7. After the refrigerant charge hose is removed, make sure to close valve A.

1.1.5 Check Operation

- * During check operation, mount front panel to avoid the misjudging.
- * Check operation is mandatory for normal unit operation.
(When the check operation is not executed, alarm code "U3" will be displayed.)

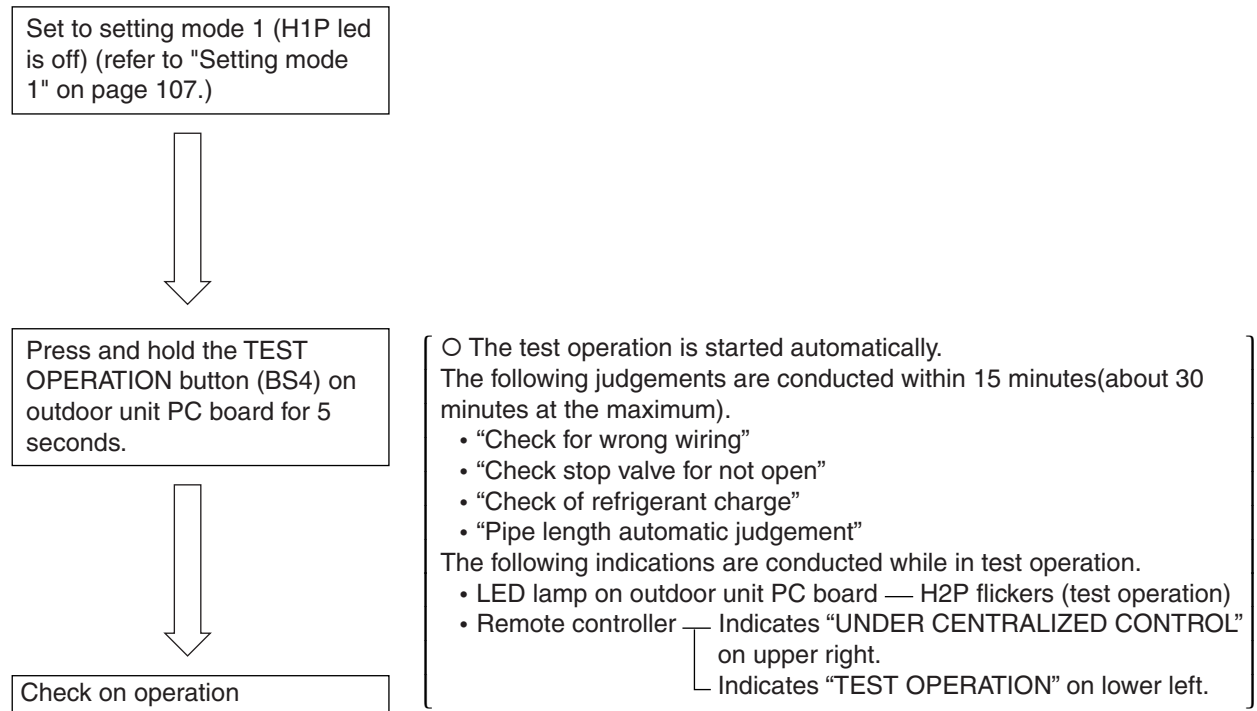

(V3057)

On completion of test operation, LED on outdoor unit PC board displays the following.
 H3P ON: Normal completion
 H2P ON: Abnormal completion → Check the indoor unit remote controller for abnormal display and correct it.

Malfunction code

In case of an alarm code displayed on remote controller:

Malfunction code	Nonconformity during installation	Remedial action
E3	The shutoff valve of an outdoor unit is left closed.	Open the gas-side shutoff valve and the liquid-side shutoff valve.
	Refrigerant overcharge.	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
E4	The shutoff valve of an outdoor unit is left closed.	Open the gas-side shutoff valve and the liquid-side shutoff valve.
	Insufficient refrigerant.	Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant.
F3	Refrigerant overcharge.	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
	The shutoff valve of an outdoor unit is left closed.	Open the gas-side shutoff valve and the liquid-side shutoff valve.
	Insufficient refrigerant.	Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant.
F6	Refrigerant overcharge	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
U1	Power supply cables are connected in the reverse phase instead of the normal phase.	Connect the power supply cables in normal phase. Change any two of the three power supply cables (L1, L2, L3) to correct phase.
U2	Insufficient supply voltage	Check to see if the supply voltage is supplied properly.
U3	If a check operation has not been performed.	Perform a check operation.
U4	No power is supplied to an outdoor unit.	Turn the power on for the outdoor unit.
UA	If no dedicated indoor unit is being used.	Check the indoor unit. If it is not a dedicated unit, replace the indoor unit.
UF	The shutoff valve of an outdoor unit is left closed.	Open the gas-side shutoff valve and the liquid-side shutoff valve.
	If the right indoor unit piping and wiring are not properly connected to the outdoor unit.	Make sure that the right indoor unit piping and wiring are properly connected to the outdoor unit.
UH	If the interunit wiring has not be connected or it has shorted.	Make sure the interunit wiring is correctly attached to terminals (X2M) F1/F2 (TO IN/D UNIT) on the outdoor unit circuit board.

1.1.6 Confirmation on Normal Operation

- Conduct normal unit operation after the check operation has been completed.
(When outdoor air temperature is 24°CDB or higher, the unit can not be operated with heating mode. See the installation manual attached.)
- Confirm that the indoor/outdoor units can be operated normally.
(When an abnormal noise due to liquid compression by the compressor can be heard, stop the unit immediately, and turn on the crankcase heater to heat up it sufficiently, then start operation again.)
- Operate indoor unit one by one to check that the corresponding outdoor unit operates.
- Confirm that the indoor unit discharges cold air (or warm air).
- Operate the air direction control button and flow rate control button to check the function of the devices.

1.2 Operation when Power is Turned On

1.2.1 When Turning On Power First Time

The unit cannot be run for up to 12 minutes to automatically set the master power and address (indoor-outdoor address, etc.).

Status

Outdoor unit

Test lamp H2P Blinks

Can also be set during operation described above.

Indoor unit

If ON button is pushed during operation described above, the "UH" malfunction indicator blinks. (Returns to normal when automatic setting is complete.)

1.2.2 When Turning On Power the Second Time and Subsequent

Tap the RESET(BS5) button on the outdoor unit PC board. Operation becomes possible for about 2 minutes. If you do not push the RESET button, the unit cannot be run for up to 10 minutes to automatically set master power.

Status

Outdoor unit

Test lamp H2P Blinks

Can also be set during operation described above.

Indoor unit

If ON button is pushed during operation described above, the operation lamp lights but the compressor does not operate. (Returns to normal when automatic setting is complete.)

1.2.3 When an Indoor Unit or Outdoor Unit has been Added, or Indoor or Outdoor Unit PC Board has been Changed

Be sure to push and hold the RESET button for 5 seconds. If not, the addition cannot be recognized. In this case, the unit cannot be run for up to 12 minutes to automatically set the address (indoor-outdoor address, etc.)

Status

Outdoor unit

Test lamp H2P ON


Can also be set during operation described above.

Indoor unit


If ON button is pushed during operation described above, the "UH" or "U4" malfunction indicator blinks. (Returns to normal when automatic setting is complete.)

2. Outdoor Unit PC Board Layout

RXYSQ4 / 5 / 6PA7Y1B

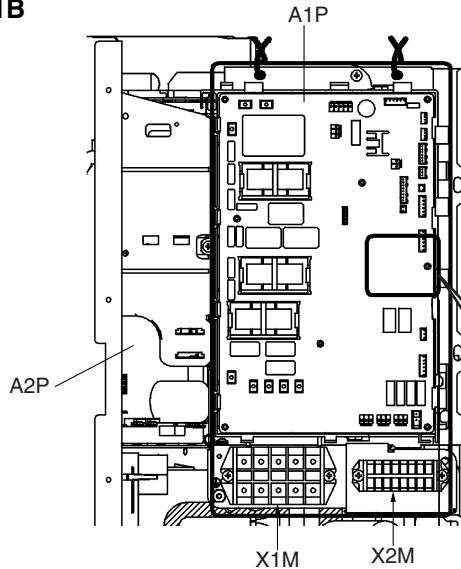

RXYSQ4 / 5 / 6PA7V1B

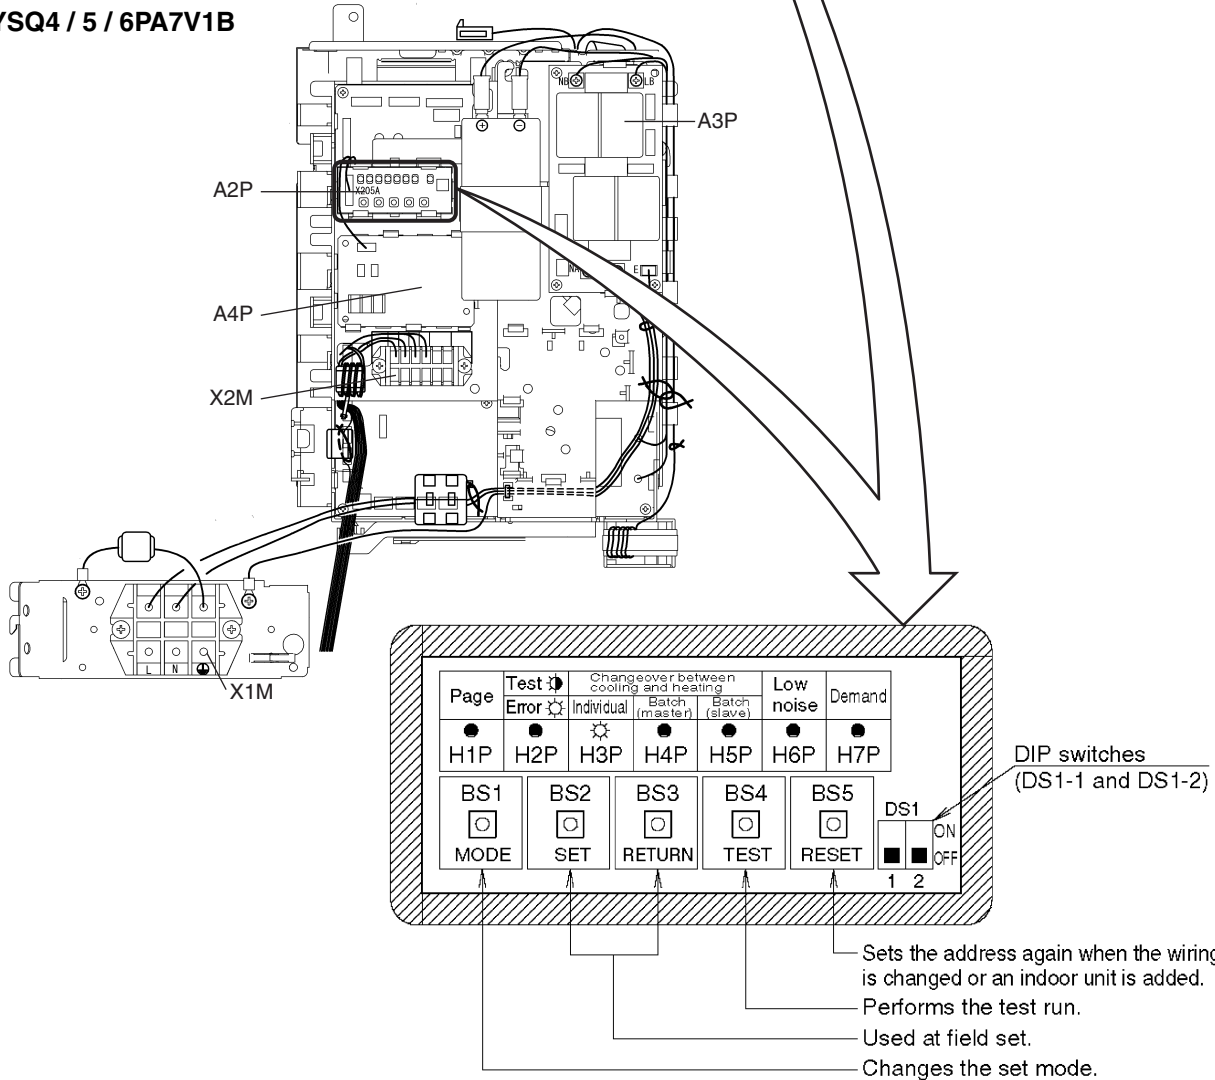

LED indicator status ● : Turn off ☼ : Turn on ◐ : Flicker ✱ : Turn on or off
 (The LED indicator status shown at left indicates the status at factory set.)

3. Field Setting

3.1 Field Setting from Remote Controller


Individual function of indoor unit can be changed from the remote controller. At the time of installation or after service inspection / repair, make the local setting in accordance with the following description.

Wrong setting may cause malfunction.








(When optional accessory is mounted on the indoor unit, setting for the indoor unit may be required to change. Refer to information in the option handbook.)

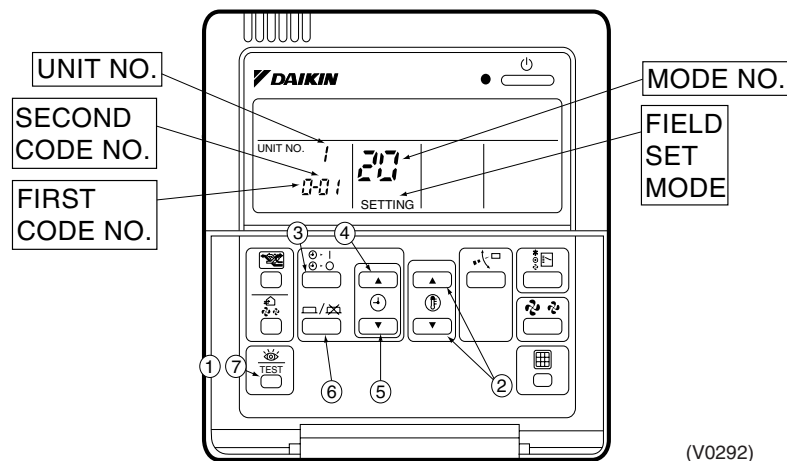3.1.1 Wired Remote Controller

BRC1C62

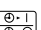


(V0292)

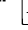1. When in the normal mode, press the “” button for a minimum of four seconds, and the FIELD SET MODE is entered.
2. Select the desired MODE NO. with the “” button (②).
3. During group control, when setting by each indoor unit (mode No. 20, 22 and 23 have been selected), push the “” button (③) and select the INDOOR UNIT NO to be set. (This operation is unnecessary when setting by group.)
4. Push the “” upper button (④) and select FIRST CODE NO.
5. Push the “” lower button (⑤) and select the SECOND CODE NO.
6. Push the “” button (⑥) once and the present settings are SET.
7. Push the “” button (⑦) to return to the NORMAL MODE.





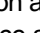
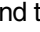

(Example)

If during group setting and the time to clean air filter is set to FILTER CONTAMINATION, HEAVY, SET MODE NO. to “10” FIRST CODE NO. to “0”, and SECOND CODE NO. to “02”.

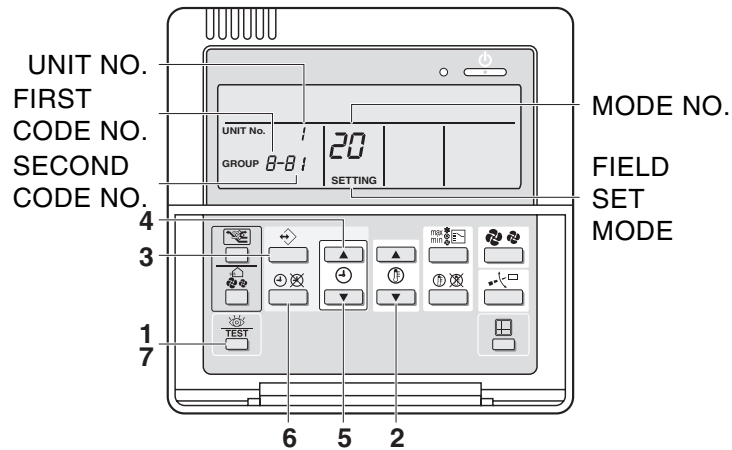BRC1D528



If optional accessories are mounted on the indoor unit, the indoor unit setting may have to be changed. Refer to the instruction manual for each optional accessory.

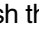1. When in the normal mode, press the “  ” button for a minimum of four seconds, and the FIELD SET MODE is entered.
2. Select the desired MODE NO. with the “  ” button.
3. During group control, when setting by each indoor unit (mode No. 20, 21, 22 and 23 have been selected), push the “  ” button and select the INDOOR UNIT NO. to be set. (This operation is unnecessary when setting by group.)
4. Push the “  ” upper button and select FIRST CODE NO.
5. Push the “  ” lower button and select the SECOND CODE NO.
6. Push the “  ” button once and the present settings are SET.
7. Push the “  ” button to return to the NORMAL MODE.

(Example)


If during group setting and the time to clean the air filter is set to FILTER CONTAMINATION - HEAVY, SET MODE NO. to “10”, FIRST CODE NO. to “0”, and SECOND CODE NO. to “02”.

**Notes :**


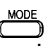




1. Setting is carried out in the group mode, however, if the mode number inside the parentheses is selected, indoor units can also be set individually.
2. The SECOND CODE number is set to “01” when shipped from the factory.
3. Do not make any settings not given in the table.
4. Not displayed if the indoor unit is not equipped with that function.
5. When returning to the normal mode, “88” may be displayed in the LCD in order for the remote controller to initialize itself.
6. It is not possible to change field settings on the remote controller that is set to “sub”.

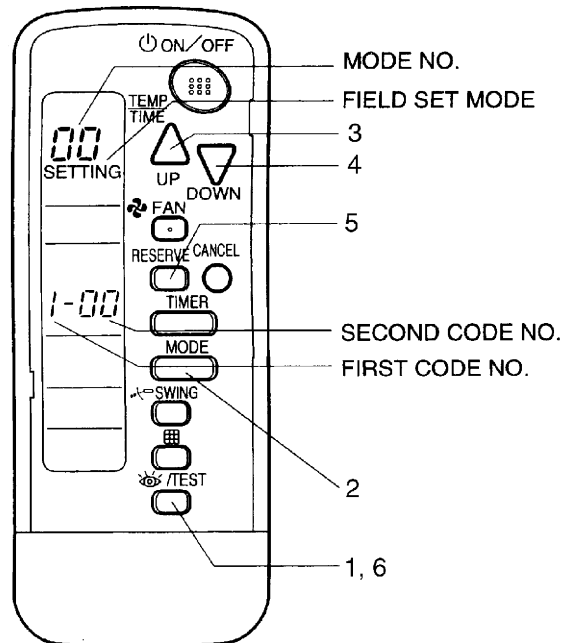3.1.2 Wireless Remote Controller - Indoor Unit

BRC7 type
BRC4 type



(V2770)


1. When in the normal mode, push the “ TEST ” button for 4 seconds or more, and operation then enters the “field set mode.”
2. Select the desired “mode No.” with the “ MODE ” button.
3. Pushing the “ UP ” button, select the first code No.
4. Pushing the “ DOWN ” button, select the second code No.
5. Push the timer “ RESERVE ” button and check the settings.
6. Push the “ TEST ” button to return to the normal mode.

(Example)

When setting the filter sign time to “Filter Dirtiness-High” in all group unit setting, set the Mode No. to “10”, Mode setting No. to “0” and setting position No. to “02”.

3.1.3 Simplified Remote Controller

BRC2C51

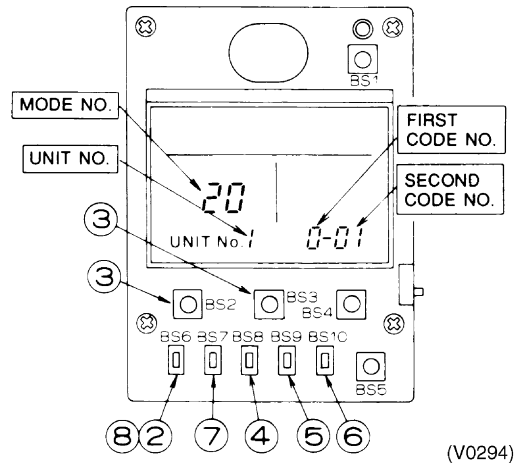

1. Remove the upper part of remote controller.
2. When in the normal mode, press the [BS6] BUTTON (②) (field set), and the FIELD SET MODE is entered.
3. Select the desired MODE No. with the [BS2] BUTTON (③) (temperature setting ▲) and the [BS3] BUTTON (③) (temperature setting ▼).
4. During group control, when setting by each indoor unit (mode No. 20, 22, and 23 have been selected), push the [BS8] (④) BUTTON (unit No.) and select the INDOOR UNIT NO. to be set. (This operation is unnecessary when setting by group.)
5. Push the [BS9] BUTTON (⑤) (set A) and select FIRST CODE NO.
6. Push the [BS10] BUTTON (⑥) (set B) and select SECOND CODE NO.
7. Push the [BS7] BUTTON (⑦) (set/cancel) once and the present settings are SET.
8. Push the [BS6] BUTTON (⑧) (field set) to return to the NORMAL MODE.
9. (Example) If during group setting and the time to clean air filter is set to FILTER CONTAMINATION - HEAVY, SET MODE NO. to "10", FIRST CODE NO. to "0", and SECOND CODE NO. to "02".

3.1.4 Setting Contents and Code No. – VRV Indoor unit

Mode No. Note 2	Setting Switch No.	Setting Contents		Second Code No.(Note 3)								Details No.
				01		02		03		04		
10 (20)	0	Filter contamination heavy/light (Setting for display time to clean air filter) (Sets display time to clean air filter to half when there is heavy filter contamination.)	Super long life filter	Light	Approx. 10,000 hrs.	Heavy	Approx. 5,000 hrs.	—	—	(1)		
			Long life filter		Approx. 2,500 hrs.		Approx. 1,250 hrs.					
			Standard filter		Approx. 200 hrs.		Approx. 100 hrs.					
	1	Long life filter type	Long life filter		Super long life filter		—		(2)			
2	Thermostat sensor in remote controller	Use		No use		—		(3)				
3	Display time to clean air filter calculation (Set when filter sign is not to be displayed.)	Display		No display		—		(4)				
11 (21)	7	Airflow adjustment	OFF		Completion of airflow adjustment		Start of airflow adjustment		(5)			
12 (22)	0	Optional accessories output selection (field selection of output for adaptor for wiring)	Indoor unit turned ON by thermostat		—		Operation output		Malfunction output		(6)	
	1	ON/OFF input from outside (Set when ON/OFF is to be controlled from outside.)	Forced OFF		ON/OFF control		External protection device input		—		(7)	
	2	Thermostat differential changeover (Set when remote sensor is to be used.)	1°C		0.5°C		—		—		(8)	
	3	OFF by thermostat fan speed	LL		Set fan speed		—		—		(9)	
	4	Automatic mode differential (automatic temperature differential setting for VRV system heat recovery series cool/heat)	01:0	02:1	03:2	04:3	05:4	06:5	07:6	08:7	(10)	
	5	Power failure automatic reset	Not equipped		Equipped		—		—		(11)	
	6	Airflow When Cooling Thermostat is OFF	LL air flow		Preset air flow		—		—		(12)	
13 (23)	0	High air outlet velocity (Set when installed in place with ceiling higher than 2.7 m.)	N		H		S		—		(13)	
	1	Selection of air flow direction (Set when a blocking pad kit has been installed.)	F (4 directions)		T (3 directions)		W (2 directions)		—		(14)	
	3	Air flow direction adjustment (Set at installation of decoration panel.)	Equipped		Not equipped		—		—		(15)	
	4	Field set air flow position setting	Draft prevention		Standard		Ceiling Soiling prevention		—		(16)	
	5	Setting of the Static Pressure Selection	Standard		High static pressure		—		—		(17)	
	6	External Static Pressure Settings	01:30	02:50	03:60	04:70	05:80	06:90	07:100	08:110	(18)	
15 (25)	1	Thermostat OFF excess humidity	Not equipped		Equipped		—		—		(19)	
	2	Direct duct connection (when the indoor unit and heat reclaim ventilation unit are connected by duct directly.) *Note 6	Not equipped		Equipped		—		—		(20)	
	3	Drain pump humidifier interlock selection	Not equipped		Equipped		—		—		(21)	
	5	Field set selection for individual ventilation setting by remote controller	Not equipped		Equipped		—		—		(22)	



- Notes :**
- Settings are made simultaneously for the entire group, however, if you select the mode No. inside parentheses, you can also set by each individual unit. Setting changes however cannot be checked except in the individual mode for those in parentheses.
 - The mode numbers inside parentheses cannot be used by wireless remote controllers, so they cannot be set individually. Setting changes also cannot be checked.
 - Marked are factory set.
 - Do not make settings other than those described above. Nothing is displayed for functions the indoor unit is not equipped with.
 - “88” may be displayed to indicate the remote controller is resetting when returning to the normal mode.
 - If the setting mode to “Equipped”, heat reclaim ventilation fan conducts the fan residual operation by linking to indoor unit.
 - The FXMQ50-63-80-100-125PVE cannot be set to 30Pa.
 - The FXMQ40PVE cannot be set to 180 or 200Pa.

3.1.5 Applicable range of Field setting

	Ceiling mounted cassette type			Slim Ceiling mounted duct type	Ceiling mounted built-in type	Ceiling Mounted duct type (Middle and high static pressure)	Ceiling suspended type	Wall mounted type	Floor standing type	Concealed Floor standing type	New Ceiling suspended cassette type	Details No.
	Round flow	Double flow	Corner type									
	FXFQ	FXCQ	FXKQ									
Filter sign	○	○	○	○	○	○	○	○	○	○	○	(1)
Ultra long life filter sign	○	○	—	—	—	—	—	—	—	—	—	(2)
Remote controller thermostat sensor	○	○	○	○	○	○	○	○	○	○	○	(3)
Set fan speed when thermostat OFF	○	○	○	○	○	○	○	○	○	○	○	(9) (12)
Air flow auto adjustment	—	—	—	—	—	○	—	—	—	—	—	(5)
Air flow adjustment Ceiling height	○	—	—	—	—	—	○	—	—	—	○	(13)
Air flow direction	○	—	—	—	—	—	—	—	—	—	○	(14)
Air flow direction adjustment (Down flow operation)	—	—	○	—	—	—	—	—	—	—	—	(15)
Air flow direction adjustment range	○	○	○	—	—	—	—	—	—	—	—	(16)
Field set fan speed selection	○	—	—	○*1	—	○*1	○	—	—	—	—	(17) (18)

*1 Static pressure selection

3.1.6 Detailed Explanation of Setting Modes

(1) Filter Sign Setting

If switching the filter sign ON time, set as given in the table below.

Set Time

Setting	Filter Specs.	Standard	Long Life	Ultra Long Life Filter
Contamination Light		200 hrs.	2,500 hrs.	10,000 hrs.
Contamination Heavy		100 hrs.	1,250 hrs.	5,000 hrs.

(2) Ultra-Long-Life Filter Sign Setting

When a Ultra-long-life filter is installed, the filter sign timer setting must be changed.

Setting Table

Mode No.	Setting Switch No.	Setting Position No.	Setting
10 (20)	1	01	Long-Life Filter
		02	Ultra-Long-Life Filter (1)
		03	—

(3) Selection of Thermistor

Select the thermistor to control room temperature.

Mode No.	First Code No.	Second Code No.	Thermistor that controls room temperature
10 (20)	2	01	Indoor air thermistor for remote controller and suction air thermistor for indoor unit
		02	Suction air thermistor for indoor unit
		03	Thermistor for remote controller

The factory setting for the Second Code No. is "01" and room temperature is controlled by the indoor unit suction air thermistor and remote controller thermistor.

When the Second Code No. is set to "02", room temperature is controlled by the suction air thermistor.

When the Second Code No. is set to "03", room temperature is controlled by the remote controller thermistor.

(4) "Filter Cleaning" Displayed or Not Displayed

Whether or not to display "Filter Cleaning" after operation of certain duration can be selected.

Mode No.	First Code No.	Second Code No.	"Filter Cleaning" display
10 (20)	3	01	Display
		02	No display

(5) Airflow Adjustment (AUTO)**External Static Pressure Settings**

Make settings in either method (a) or method (b) as explained below.

(a) Use the airflow auto adjustment function to make settings.

Airflow auto adjustment: The volume of blow-off air is automatically adjusted to the rated quantity.

(b) Select External Static Pressure with Remote Controller Check that 01 (OFF) is set for the "SECOND CODE NO." in "MODE NO. 21" for airflow adjustment on an indoor unit basis in Table 4. The "SECOND CODE NO." is set to 01 (OFF) at factory set. Change the "SECOND CODE NO." as shown in Table according to the external static pressure of the duct to be connected.

Mode No.	First Code No.	Second Code No.	Airflow adjustment
11 (21)	7	01	OFF
		02	Completion of airflow adjustment
		03	Start of airflow adjustment

(6) Optional Output Switching


Using this setting, "operation output signal" and "abnormal output signal" can be provided.

Output signal is output between terminals K1 and K2 of "customized wiring adapter," an optional accessory.

Mode No.	First Code No.	Second Code No.	Remarks
12 (22)	0	01	Indoor unit thermostat ON/OFF signal is provided.
		03	Output linked with "Start/Stop" of remote controller is provided.
		04	In case of "Malfunction Display" appears on the remote controller, output is provided.

(7) External ON/OFF input

This input is used for "ON / OFF operation" and "Protection device input" from the outside. The input is performed from the T1-T1 terminal of the operation terminal block (X1A) in the electric component box.

**Setting Table**

Mode No.	Setting Switch No.	Setting Position No.	Operation by input of the signal A
12 (22)	1	01	ON: Forced stop (prohibition of using the remote controller) OFF: Permission of using the remote controller
		02	OFF → ON: Permission of operation ON → OFF: Stop
		03	ON: Operation OFF: The system stops, then the applicable unit indicates "A0". The other indoor units indicate "U9".

(8) Thermostat Switching

Differential value during thermostat ON/OFF control can be changed.

Mode No.	First Code No.	Second Code No.	Differential value
12(22)	2	01	1°C
		02	0.5°C

(9) Air Flow Setting When Heating Thermostat is OFF

This setting is used to set air flow when heating thermostat is OFF.

- * When thermostat OFF air flow volume up mode is used, careful consideration is required before deciding installation location. During heating operation, this setting takes precedence over "(7) Fan Stop When Thermostat is OFF."

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	3	01	LL air flow
		02	Preset air flow

(10) Setting of operation mode to "AUTO"

This setting makes it possible to change differential values for mode selection while in automatic operation mode.

Mode No.	Setting switch No.	Setting position No.							
		01	02	03	04	05	06	07	08
12 (22)	4	0°C	1°C	2°C	3°C	4°C	5°C	6°C	7°C

The automatic operation mode setting is made by the use of the "Operation Mode Selector" button.

(11) Auto Restart after Power Failure Reset

For the air conditioners with no setting for the function (same as factory setting), the units will be left in the stop condition when the power supply is reset automatically after power failure reset or the main power supply is turned on again after once turned off. However, for the air conditioners with the setting, the units may start automatically after power failure reset or the main power supply turned on again (return to the same operation condition as that of before power failure).

For the above reasons, when the unit is set enabling to utilize "Auto restart function after power failure reset", utmost care should be paid for the occurrence of the following situation.



- Caution**
- 1. The air conditioner starts operation suddenly after power failure reset or the main power supply turned on again. Consequently, the user might be surprised (with question for the reason why).**
 - 2. In the service work, for example, turning off the main power switch during the unit is in operation, and turning on the switch again after the work is completed start the unit operation (the fan rotates).**

(12) Air Flow When Cooling Thermostat is OFF

This is used to set air flow to "LL air flow" when cooling thermostat is OFF.

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	6	01	LL air flow
		02	Preset air flow

(13) Setting of Normal Air Flow

Make the following setting according to the ceiling height. The setting position No. is set to "01" at the factory.

■ In the Case of FXAQ

Mode No.	Setting Switch No.	Setting Position No.	Setting
13(23)	0	01	Wall-mounted type: Standard
		02	Wall-mounted type: Slight increase
		03	Wall-mounted type: Normal increase

■ In the Case of FXHQ

Mode No.	First code No.	Second code No.	Ceiling height (m)
13(23)	0	01	2.7 or less
		02	2.7-3.5

■ In the Case of FXFQ20~80 (All round outlet)

Mode No.	First code No.	Second code No.	Setting	Ceiling height (m)
13 (23)	0	01	Standard • All round outlet	≤2.7
		02	High Ceiling (1)	2.7-3
		03	Higher Ceiling (2)	3-3.5

■ In the Case of FXFQ100~125 (All round outlet)

Mode No.	First code No.	Second code No.	Setting	Ceiling height (m)
13 (23)	0	01	Standard • All round outlet	≤3.2
		02	High Ceiling (1)	3.2-3.6
		03	Higher Ceiling (2)	3.6-4.2

■ In the Case of FXFQ20~80 (*24-Way, 3-Way, 2-Way Outlets)

Mode No.	First code No.	Second code No.	Setting	Ceiling height		
				4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01	Standard (N)	Lower than 3.1 m	Lower than 3.0 m	Lower than 3.5 m
		02	High Ceiling (H)	Lower than 3.4 m	Lower than 3.3 m	Lower than 3.8 m
		03	Higher Ceiling (S)	Lower than 4.0 m	Lower than 3.5 m	—

■ In the Case of FXFQ100~125 (*24-Way, 3-Way, 2-Way Outlets)

Mode No.	First code No.	Second code No.	Setting	Ceiling height		
				4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01	Standard (N)	Lower than 3.4 m	Lower than 3.6 m	Lower than 4.2 m
		02	High Ceiling (H)	Lower than 3.9 m	Lower than 4.0 m	Lower than 4.2 m
		03	Higher Ceiling (S)	Lower than 4.5 m	Lower than 4.2 m	—

*1 "Mode No." setting is done in a batch for the group. To make or confirm settings for an individual unit, set the internal mode number in parentheses.

*2 The figure of the ceiling height is for the all round outlet. For the settings for four-direction (part of corner closed off), three-direction and two-direction outlets, see the installation manual and technical guide supplied with the separately sold closure material kit.

■ In the Case of FXUQ71~125

Mode No.	First code No.	Second code No.	Setting	Ceiling height		
				4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01	Standard (N)	Lower than 2.7 m	Lower than 3.0 m	Lower than 3.5 m
		02	High Ceiling (H)	Lower than 3.0 m	Lower than 3.5 m	Lower than 3.8 m
		03	Higher Ceiling (S)	Lower than 3.5 m	Lower than 3.8 m	—

(14) Air Flow Direction Setting

Set the air flow direction of indoor units as given in the table below. (Set when optional air outlet blocking pad has been installed.) The second code No. is factory set to "01."

Setting Table

Mode No.	First Code No.	Second Code No.	Setting
13 (23)	1	01	F : 4-direction air flow
		02	T : 3-direction air flow
		03	W : 2-direction air flow

(15) Operation of Downward Flow Flap: Yes/No

Only the model FXKQ has the function.


When only the front-flow is used, sets yes/no of the swing flap operation of down-flow.

Setting Table

Mode No.	First Code No.	Second Code No.	Setting
13 (23)	3	01	Down-flow operation: Yes
		02	Down-flow operation: No

(16) Setting of Air Flow Direction Adjustment Range

Make the following air flow direction setting according to the respective purpose.



(S2537)

Setting Table

Mode No.	First Code No.	Second Code No.	Setting
13 (23)	4	01	Upward (Draft prevention)
		02	Standard
		03	Downward (Ceiling soiling prevention)

* Some indoor unit models are not equipped with draft prevention (upward) function.

(17) Setting of the Static Pressure Selection

■ In the Case of FXDQ20~32PB, FXDQ40~63NB

Model No.	First Code No.	Second Code No.	External static pressure
13 (23)	5	01	Standard (10Pa)
		02	High static pressure (30Pa)

(18) External Static Pressure Settings (for FXMQ-P model)

MODE NO.	FIRST CODE NO.	SECOND CODE NO.	External Static Pressure
13 (23)	06	01	30Pa (*1)
		02	50Pa
		03	60Pa
		04	70Pa
		05	80Pa
		06	90Pa
		07	100Pa
		08	110Pa
		09	120Pa
		10	130Pa
		11	140Pa
		12	150Pa
		13	160Pa
		14	180Pa (*2)
		15	200Pa (*2)

The "SECOND CODE NO." is set to 07 (an external static pressure of 100 Pa) at factory set.

*1 The FXMQ50 · 63 · 80 · 100 · 125PVE cannot be set to 30 Pa.

*2 The FXMQ40PVE cannot be set to 180 or 200 Pa.

(19) Humidification When Heating Thermostat is OFF

Setting to "Humidification Setting" turns ON the humidifier if suction temperature is 20°C or above and turns OFF the humidifier if suction temperature is 18°C or below when the heating thermostat is OFF.

Mode No.	First Code No.	Second Code No.	Setting
15 (25)	1	01	—
		02	Setting of humidifier

(20) Setting of Direct Duct Connection

This is used when "fresh air intake kit equipped with fan" is connected. The indoor fan carries out residual operation for one minute after the thermostat is stopped. (For the purpose of preventing dust on the air filter from falling off.)

Mode No.	First Code No.	Second Code No.	Contents
15 (25)	2	01	Without direct duct connection
		02	With direct duct connection equipped with fan

(21) Interlocked Operation between Humidifier and Drain Pump

This is used to interlock the humidifier with the drain pump. When water is drained out of the unit, this setting is unnecessary.

Mode No.	First Code No.	Second Code No.	Contents
15 (25)	3	01	Individual operation of humidifier
		02	Interlocked operation between humidifier and drain pump

(22) Individual Setting of Ventilation

This is set to perform individual operation of heat reclaim ventilation using the remote controller/ central unit when heat reclaim ventilation is built in.

(Switch only when heat reclaim ventilation is built in.)







Mode No.	First Code No.	Second Code No.	Contents
15 (25)	5	01	—
		02	Individual operation of ventilation


3.1.7 Centralized Control Group No. Setting

BRC1C Type

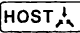In order to conduct the central remote control using the central remote controller and the unified ON/OFF controller, Group No. settings should be made by group using the operating remote controller.

Make Group No. settings for central remote control using the operating remote controller.

1. Turn ON the power of the indoor unit and unified ON/OFF controller. (Unless the power is ON, no setting can be made.)
Check that the installation and electrical wiring are correct before turning the power supply ON. When the power supply is turned ON, all LCD appear once and the unit may not accept the operation for about one minute with the display of "  " flashing (an interval of ON, ON, and OFF)
2. While in normal mode, press and hold the "  " switch for a period of four seconds or more to set the system to "Field Setting Mode".
3. Select the MODE No. "00" with the "  " button.
4. Use the "  " button to select the group No. for each group.
(Group numbers increase in the order of 1-00, 1-01, ... 1-15, 2-00, ... 4-15.)
5. Press "  " to set the selected group No.
6. Press "  " to return to the NORMAL MODE.

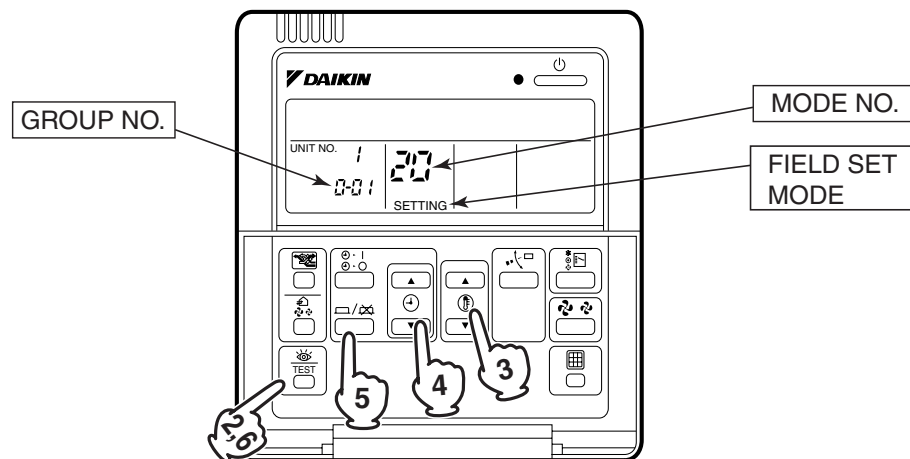







Note:


- For wireless remote controller, see the following.
- For setting group No. of HRV and wiring adaptor for other air conditioners, etc., refer to the instruction manual attached.

NOTICE

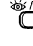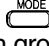Enter the group No. and installation place of the indoor unit into the attached installation table. Be sure to keep the installation table with the operation manual for maintenance.


**BRC7 Type
BRC4 Type**

- Group No. setting by wireless remote controller for centralized control
- 1. When in the normal mode, push “  ” button for 4 seconds or more, and operation then enters the “field set mode.”
- 2. Set mode No. “00” with “  ” button.
- 3. Set the group No. for each group with “  ” “  ” button (advance/backward).
- 4. Enter the selected group numbers by pushing “  ” button.
- 5. Push “  ” button and return to the normal mode.

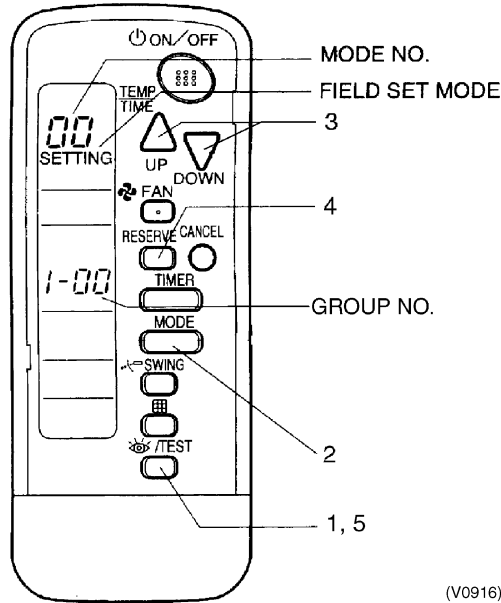

(V0916)

**Group No. Setting
Example**

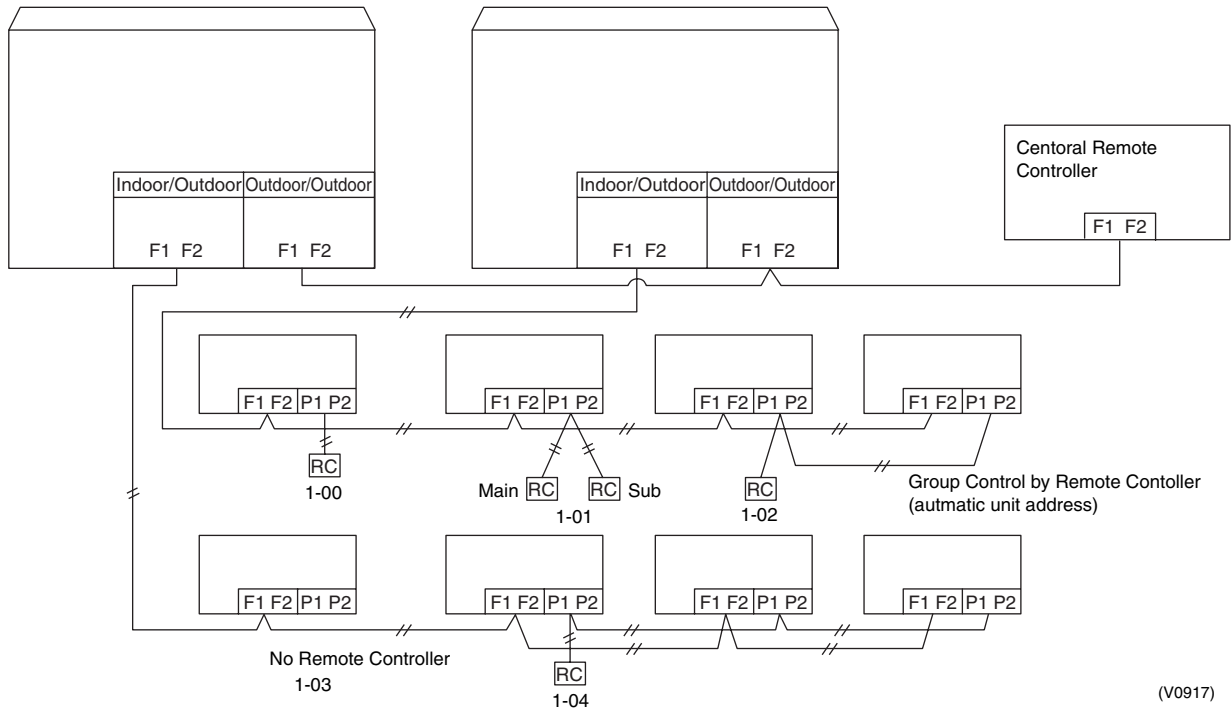

(V0917)



Caution

When turning the power supply on, the unit may often not accept any operation while "88" is displaying after all indications were displayed once for about 1 minute on the liquid crystal display. This is not an operative fault.

3.1.8 Setting of Operation Control Mode from Remote Controller (Local Setting)

The operation control mode is compatible with a variety of controls and operations by limiting the functions of the operation remote controller. Furthermore, operations such as remote controller ON/OFF can be limited in accordance with the combination conditions. (Refer to information in the next page.)

Central remote controller is normally available for operations. (Except when centralized monitor is connected)

3.1.9 Contents of Control Modes


Twenty modes consisting of combinations of the following five operation modes with temperature and operation mode setting by remote controller can be set and displayed by operation modes 0 through 19.

- ◆ ON/OFF control impossible by remote controller
Used when you want to turn on/off by central remote controller only.
(Cannot be turned on/off by remote controller.)
- ◆ OFF control only possible by remote controller
Used when you want to turn on by central remote controller only, and off by remote controller only.
- ◆ Centralized
Used when you want to turn on by central remote controller only, and turn on/off freely by remote controller during set time.
- ◆ Individual
Used when you want to turn on/off by both central remote controller and remote controller.
- ◆ Timer operation possible by remote controller
Used when you want to turn on/off by remote controller during set time and you do not want to start operation by central remote controller when time of system start is programmed.

How to Select Operation Mode

Whether operation by remote controller will be possible or not for turning on/off, controlling temperature or setting operation mode is selected and decided by the operation mode given on the right edge of the table below.


Example

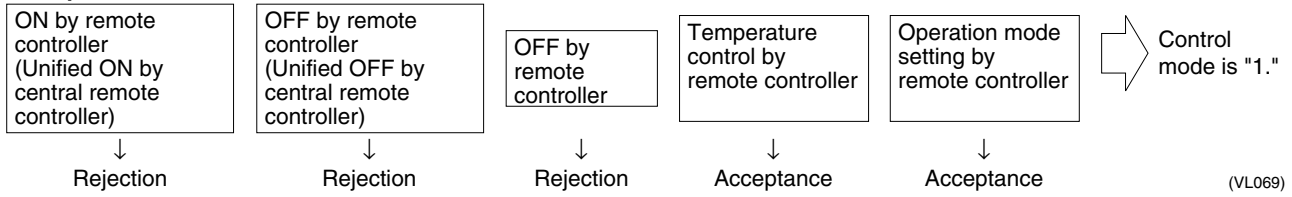

Control mode	Control by remote controller					Control mode		
	Operation		OFF	Temperature control	Operation mode setting			
	Unified operation, individual operation by central remote controller, or operation controlled by timer	Unified OFF, individual stop by central remote controller, or timer stop						
ON/OFF control impossible by remote controller	Rejection (Example)	Rejection (Example)	Rejection (Example)	Rejection	Acceptance	0		
OFF control only possible by remote controller				Acceptance	Acceptance	Acceptance (Example)	Acceptance (Example)	1 (Example)
						Rejection	Rejection	11
Centralized	Acceptance		Acceptance	Acceptance	Rejection	Acceptance	2	
					Acceptance	Rejection	12	
Individual	Acceptance		Acceptance	Acceptance	Rejection	Acceptance	3	
		Acceptance			Rejection	13		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	4		
				Acceptance	Rejection	14		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	5		
				Acceptance	Rejection	15		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	6		
				Acceptance	Rejection	16		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	7 *1		
				Acceptance	Rejection	17		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	8		
				Acceptance	Rejection	18		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	9		
				Acceptance	Rejection	19		

Do not select "timer operation possible by remote controller" if not using a remote controller. Operation by timer is impossible in this case.

*1. Factory setting

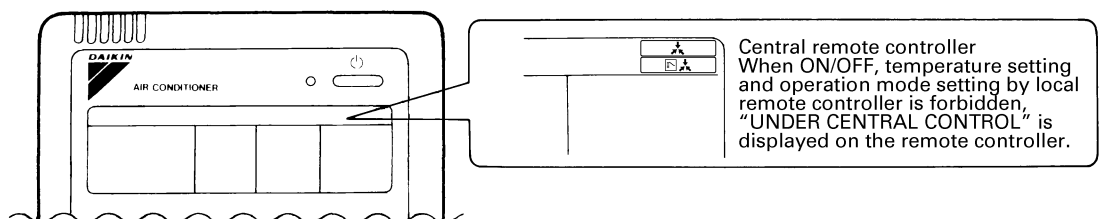

3.2 Field Setting from Outdoor Unit


3.2.1 Setting by Dip Switches

The following field settings are made by dip switches on PC board.

Dipswitch		Setting item	Description
No.	Setting		
DS1-1	ON	Cool / Heat change over setting	Used to set cool / heat change over setting by remote controller equipped with outdoor unit. (Note 1)
	OFF (Factory set)		
DS1-2	ON	Not used	Do not change the factory settings.
	OFF (Factory set)		

Cool/heat selector connection procedure

- Set the remote controller only when changing over the operation mode between cooling and heating using the remote controller installed in the outdoor.
- ① Connect the cool/heat selector (optional accessory) to the terminals (A, B and C) on the outdoor X2M Terminal board (A, B and C).
 - ② Set the cool/heat selector switch DS1-1 from “OFF” (which is selected at the factory before shipment) to “ON”.

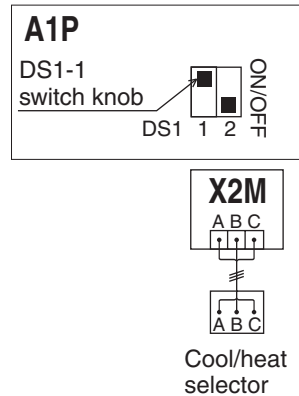



Caution

Capacity Setting after changing the main PC Board(A1P) to spare parts PC Board

When you change the main PC Board(A1P) to spare parts PC Board, please carry out the following setting.


Please Attach the Capacity Setting Adaptor corresponding to Capacity Class (ex. 112, 140, 160) in connector X51A. (See Below)

Capacity Setting Adaptor


	Capacity Class	Note
①	4 (112)	CAPACITY SETTING ADAPTOR (for 100/J112)
②	5 (140)	CAPACITY SETTING ADAPTOR (for 125/J140)
③	6 (160)	CAPACITY SETTING ADAPTOR (for 140/J160)

Position of Attaching the Capacity Setting Adaptor

RXYSQ4 / 5 / 6PA7Y1B

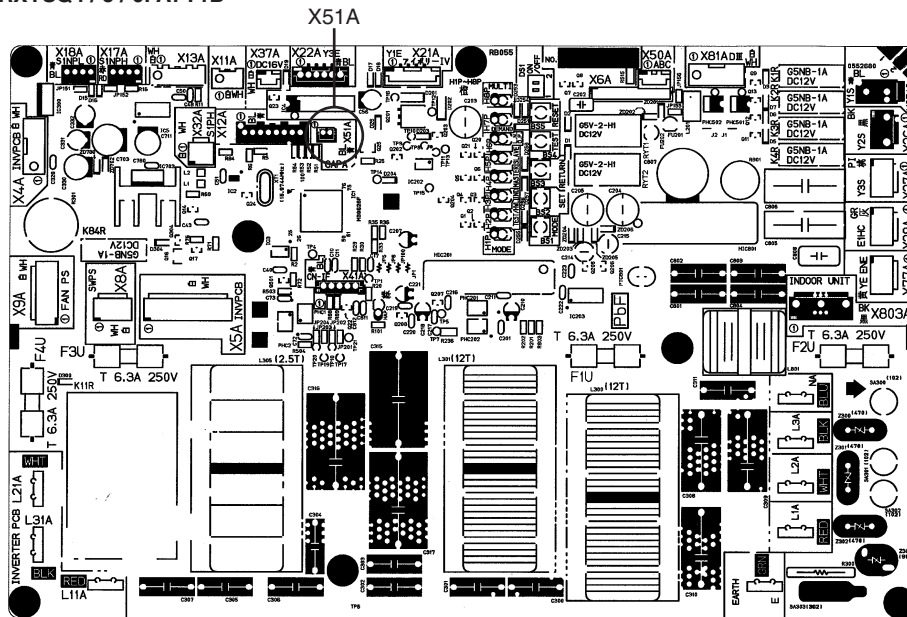

RXYSQ4 / 5 / 6PA7V1B

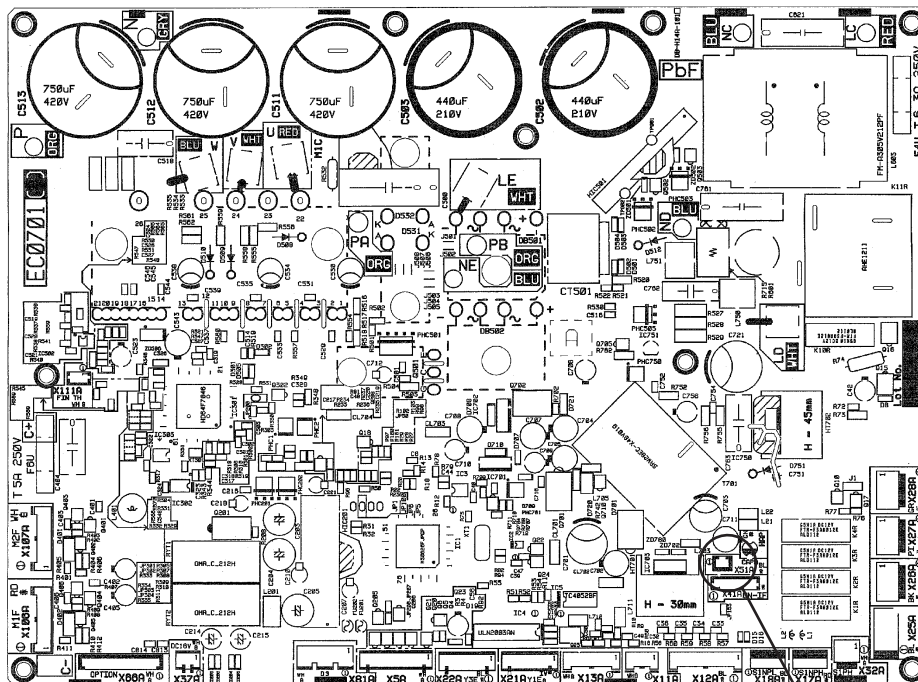


X51A

■ **Setting by pushbutton switches**

The following settings are made by pushbutton switches on PC board.

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
LED indication	●	●	○	●	●	●	●

(Factory setting)



There are the following three setting modes.

① **Setting mode 1 (H1P off)**

Initial status (when normal) : Also indicates during “abnormal”.


② **Setting mode 2 (H1P on)**

Used to modify the operating status and to set program addresses, etc. Usually used in servicing the system.


③ **Monitor mode (H1P blinks)**

Used to check the program made in Setting mode 2.

■ **Mode changing procedure**

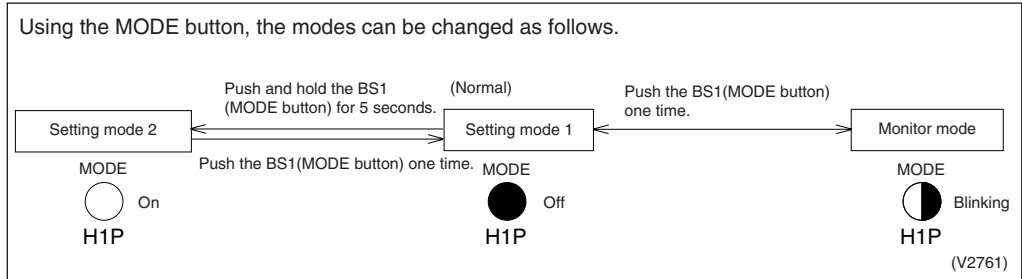

■ **Mode changing procedure**

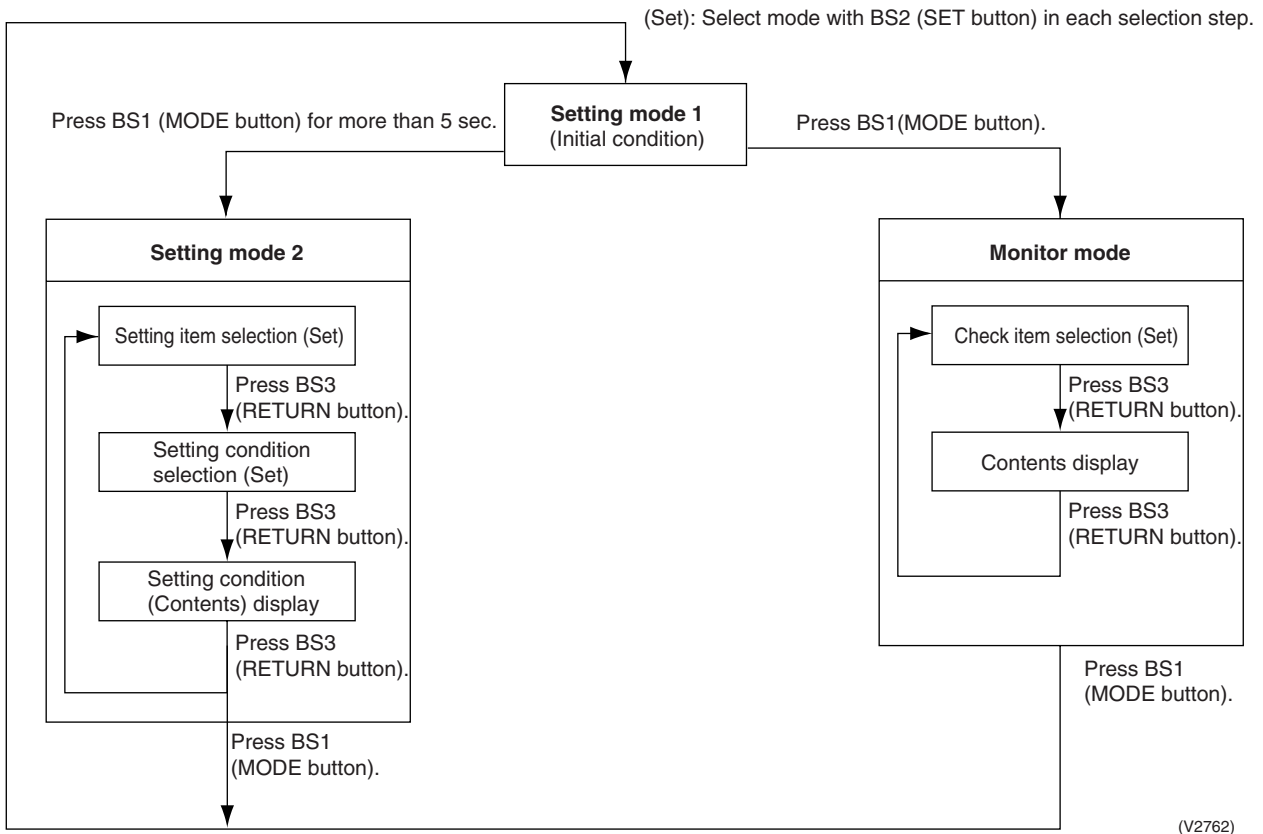


a. "Setting mode 1"


This mode is used to set and check the following items.

1. Set items In order to make COOL/HEAT selection in a batch of outdoor unit group, change the setting.
 - COOL/HEAT selection (IND) Used to select COOL or HEAT by individual outdoor unit (factory set).
 - COOL/HEAT selection (MASTER) Used to select COOL or HEAT by outdoor unit group with the master unit.
 - COOL/HEAT selection (SLAVE) Used to select COOL or HEAT by outdoor unit group with the slave unit.
2. Check items The following items can be checked.
 - (1) Current operating conditions (Normal / Abnormal / In check operation)
 - (2) Setting conditions of COOL/HEAT selection (Individual / Batch master / Batch slave)
 - (3) Low noise operating conditions (In normal operation / In low noise operation)
 - (4) Demand operating conditions (In normal operation / In demand operation)

Procedure for changing COOL/HEAT selection setting

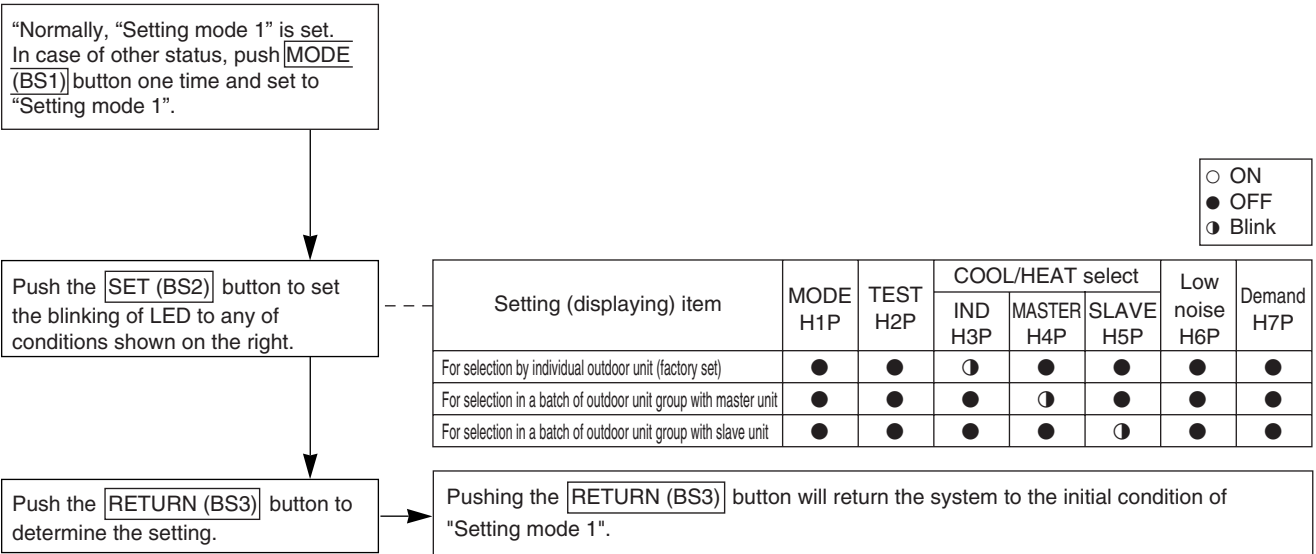

Procedure for checking check items

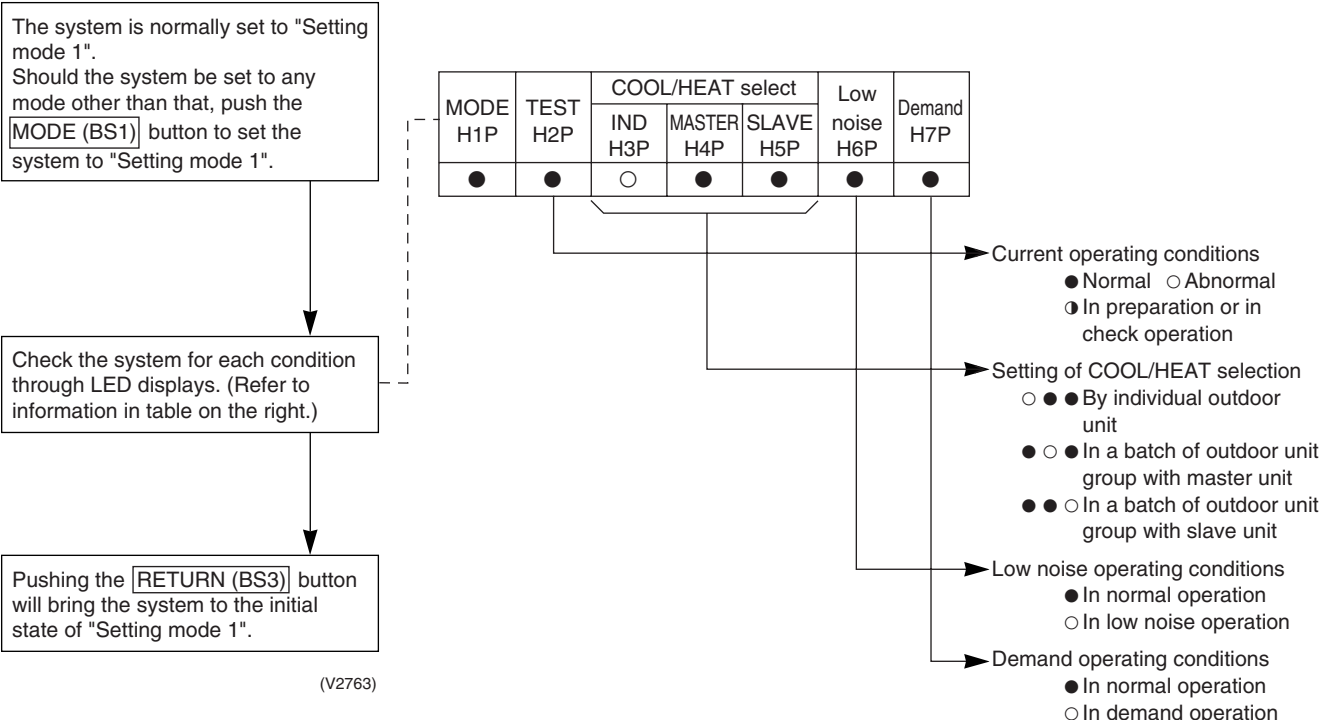

b. "Setting mode 2"

Push and hold the **MODE (BS1)** button for 5 seconds and set to "Setting mode 2".

<Selection of setting items>

Push the **SET (BS2)** button and set the LED display to a setting item shown in the table on the right.
 ↓
 Push the **RETURN (BS3)** button and decide the item. (The present setting condition is blinked.)

<Selection of setting conditions>

Push the **SET (BS2)** button and set to the setting condition you want.
 ↓
 Push the **RETURN (BS3)** button and decide the condition.

Push the **RETURN (BS3)** button and set to the initial status of "Setting mode 2".

* If you become unsure of how to proceed, push the **MODE (BS1)** button and return to setting mode 1.

(V2764)

No.	Setting item	Description
1	Cool/heat unified address	Sets address for cool/heat unified operation.
2	Low noise/demand address	Address for low noise/demand operation
3	Test operation settings	Used to conduct test operation without making changes to the PCB and replacing the refrigerant, after the completion of maintenance.
5	Indoor unit forced fan H	Allows forced operation of indoor unit fan while unit is stopped. (H tap)
6	Indoor unit forced operation	Allows forced operation of indoor unit.
8	Te setting	Target evaporation temperature for cooling
9	Tc setting	Target condensation temperature for heating
10	Defrost changeover setting	Changes the temperature condition for defrost and sets to quick defrost or slow defrost.
12	External low noise setting / Demand setting	Reception of external low noise or demand signal
13	AIRNET address	Set address for AIRNET.
16	Setting of hot water	Make this setting to conduct heating operation with hot water heater.
20	Additional refrigerant charge operation setting	Carries out additional refrigerant charge operation.
21	Refrigerant recovery / vacuuming mode setting	Sets to refrigerant recovery or vacuuming mode.
22	Night-time low noise setting	Sets automatic nighttime low noise operation in a simple way. The operating time is based on "Starting set" and "Ending set".
25	Setting of external low noise level	Sets low noise level when the low noise signal is input from outside.
26	Night-time low noise operation start setting	Sets starting time of nighttime low noise operation. (Night-time low noise setting is also required.)
27	Night-time low noise operation end setting	Sets ending time of nighttime low noise operation. (Night-time low noise setting is also required.)
28	Power transistor check mode *Check after disconnection of compressor wires	Used for trouble diagnosis of DC compressor. Since the waveform of inverter is output without wiring to the compressor, it is convenient to probe whether the trouble comes from the compressor or PC board.
29	Capacity precedence setting	If the capacity control is required, the low noise control is automatically released by this setting during carrying out low noise operation and nighttime low noise operation.
30	Demand setting 1	Changes target value of power consumption when demand control 1 is input.
32	Normal demand setting	Normally enables demand control 1 without external input. (Effective to prevent a problem that circuit breaker of small capacity is shut down due to large load.)

The numbers in the "No." column represent the number of times to press the SET (BS2) button.

No.	Setting item display							Setting condition display	
	Setting item	MODE H1P	TEST H2P	C/H selection			Low noise H6P		
IND H3P				Master H4P	Slave H5P	* Factory set			
1	Cool / Heat Unified address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Address 0 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Binary number 1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									(6 digits) ~ <input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
									31 <input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
2	Low noise/demand address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Address 0 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Binary number 1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									(6 digits) ~ <input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
									31 <input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
3	Test operation	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	Test operation : OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Test operation : ON <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
5	Indoor forced fan H	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Normal operation <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Indoor forced fan H <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
6	Indoor forced operation	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Normal operation <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Indoor forced operation <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
8	Te setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	High <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
									Normal (factory setting) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									Low <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
9	Tc setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	High <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
									Normal (factory setting) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									Low <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
10	Defrost changeover setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Quick defrost <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
									Normal (factory setting) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									Slow defrost <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
12	External low noise/demand setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	External low noise/demand: NO <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									External low noise/demand: YES <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
13	Airnet address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Address 0 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Binary number 1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									(6 digits) ~ <input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
									63 <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
16	Setting of hot water heater	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									ON <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
20	Additional refrigerant charging operation setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	Refrigerant charging: OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Refrigerant charging: ON <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
21	Refrigerant recovery / vacuuming mode setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Refrigerant recovery / vacuuming: OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Refrigerant recovery / vacuuming: ON <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
22	Night-time low noise setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Level 1 (outdoor fan with 6 step or lower) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Level 2 (outdoor fan with 5 step or lower) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
									Level 3 (outdoor fan with 4 step or lower) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/>

The numbers in the "No." column represent the number of times to press the SET (BS2) button.

No.	Setting item display								Setting condition display * Factory set
	Setting item	MODE H1P	TEST H2P	C/H selection			Low noise H6P	Demand H7P	
				IND H3P	Master H4P	Slave H5P			
25	Low noise setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Level 1 (outdoor fan with 6 step or lower) <input type="radio"/> ● ● ● ● ● ● <input type="radio"/> Level 2 (outdoor fan with 5 step or lower) <input type="radio"/> ● ● ● ● ● <input type="radio"/> ● * Level 3 (outdoor fan with 4 step or lower) <input type="radio"/> ● ● ● ● <input type="radio"/> ● ●
26	Night-time low noise operation start setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	About 20:00 <input type="radio"/> ● ● ● ● ● ● <input type="radio"/> About 22:00 (factory setting) <input type="radio"/> ● ● ● ● ● <input type="radio"/> ● * About 24:00 <input type="radio"/> ● ● ● ● <input type="radio"/> ● ●
27	Night-time low noise operation end setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	About 6:00 <input type="radio"/> ● ● ● ● ● ● <input type="radio"/> About 7:00 <input type="radio"/> ● ● ● ● ● <input type="radio"/> ● About 8:00 (factory setting) <input type="radio"/> ● ● ● ● <input type="radio"/> ● ● *
28	Power transistor check mode	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> ● ● ● ● ● ● <input type="radio"/> * ON <input type="radio"/> ● ● ● ● ● <input type="radio"/> ●
29	Capacity precedence setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	OFF <input type="radio"/> ● ● ● ● ● ● <input type="radio"/> * ON <input type="radio"/> ● ● ● ● ● <input type="radio"/> ●
30	Demand setting 1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	60 % demand <input type="radio"/> ● ● ● ● ● ● <input type="radio"/> 70 % demand <input type="radio"/> ● ● ● ● ● <input type="radio"/> ● * 80 % demand <input type="radio"/> ● ● ● ● <input type="radio"/> ● ●
32	Normal demand setting	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> ● ● ● ● ● ● <input type="radio"/> * ON <input type="radio"/> ● ● ● ● ● <input type="radio"/> ●

The numbers in the "No." column represent the number of times to press the SET (BS2) button.

c. Monitor mode

To enter the monitor mode, push the **MODE (BS1)** button when in "Setting mode 1".

<Selection of setting item>

Push the **SET (BS2)** button and set the LED display to a setting item.

<Confirmation on setting contents>

Push the **RETURN (BS3)** button to display different data of set items.

Push the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

* Push the **MODE (BS1)** button and returns to "Setting mode 1".

(V2765)

No.	Setting item	LED display							Data display
		H1P	H2P	H3P	H4P	H5P	H6P	H7P	
0	Various setting	●	●	●	●	●	●	●	See below
1	C/H unified address	●	●	●	●	●	●	○	Lower 6 digits
2	Low noise/demand address	●	●	●	●	●	○	●	
3	Not used	●	●	●	●	●	○	○	
4	Airnet address	●	●	●	●	○	●	●	
5	Number of connected indoor units	●	●	●	●	○	●	○	
7	Number of connected zone units (excluding outdoor and BS unit)	●	●	●	●	○	○	○	
8	Number of outdoor units	●	●	●	○	●	●	●	Lower 6 digits
11	Number of zone units (excluding outdoor and BS unit)	●	●	●	○	●	○	○	
12	Number of terminal blocks	●	●	●	○	○	●	●	
13	Number of terminal blocks	●	●	●	○	○	●	○	Lower 4 digits: lower
14	Contents of malfunction (the latest)	○	●	●	○	○	○	●	Malfunction code table Refer to page 138, 139.
15	Contents of malfunction (1 cycle before)	○	●	●	○	○	○	○	
16	Contents of malfunction (2 cycle before)	○	●	○	●	●	●	●	
20	Contents of retry (the latest)	○	●	○	●	○	●	●	
21	Contents of retry (1 cycle before)	○	●	○	●	○	●	○	
22	Contents of retry (2 cycle before)	○	●	○	●	○	○	●	
25	Normal judgment of outdoor units PC board	●	●	○	○	●	●	○	Lower 2 digits: ○ ● Abnormal ● ○ Normal ● ● Unjudgment


The numbers in the "No." column represent the number of times to press the SET (BS2) button.

Setting item 0 Display contents of "Various setting"

EMG operation / backup operation setting	ON	●	●	●	○	●	●	●
	OFF	●	●	●	●	●	●	●
Defrost select setting	Short	●	●	●	●	○	●	●
	Medium	●	●	●	●	●	●	●
	Long	●	●	●	●	●	●	●
Te setting	H	●	●	●	●	●	○	●
	M	●	●	●	●	●	○	●
	L	●	●	●	●	●	●	●
Tc setting	H	●	●	●	●	●	●	○
	M	●	●	●	●	●	●	●
	L	●	●	●	●	●	●	●


Push the SET button and match with the LEDs No. 1 - 15, push the RETURN button, and confirm the data for each setting.

★ Data such as addresses and number of units is expressed as binary numbers; the two ways of expressing are as follows:

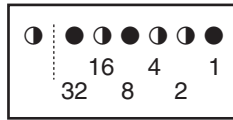

The No. 1 cool/heat unified address is expressed as a binary number consisting of the lower 6 digits. (0 - 63)

In ① the address is 010110 (binary number), which translates to $16 + 4 + 2 = 22$ (base 10 number). In other words, the address is 22.

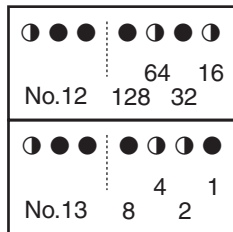

The number of terminal blocks for No. 12 and 13 is expressed as an 8-digit binary number, which is the combination of four upper, and four lower digits for No. 12 and 13 respectively. (0 - 128)

In ② the address for No. 12 is 0101, the address for No. 13 is 0110, and the combination of the two is 01010110 (binary number), which translates to $64 + 16 + 4 + 2 = 86$ (base 10 number). In other words, the number of terminal block is 86.

★ See the preceding page for a list of data, etc. for No. 0 - 25.


3.2.2 Cool / Heat Mode Switching

There are the following 4 cool/heat switching modes.

- ① Set cool/heat separately for each outdoor unit system by indoor unit remote controller.
- ② Set cool/heat separately for each outdoor unit system by cool/heat switching remote controller.
- ③ Set cool/heat for more than one outdoor unit system simultaneously in accordance with unified master outdoor unit by indoor unit remote controller.
- ④ Set cool/heat for more than one outdoor unit system simultaneously in accordance with unified master outdoor unit by cool/heat switching remote controller.

① Set Cool / Heat Separately for Each Outdoor Unit System by Indoor Unit Remote Controller

- ◆ It does not matter whether or not there is outdoor - outdoor unit wiring.
- ◆ Set outdoor unit PC board DS1-1 to IN (factory set).
- ◆ Set cool/heat switching to IND (individual) for “Setting mode 1” (factory set).

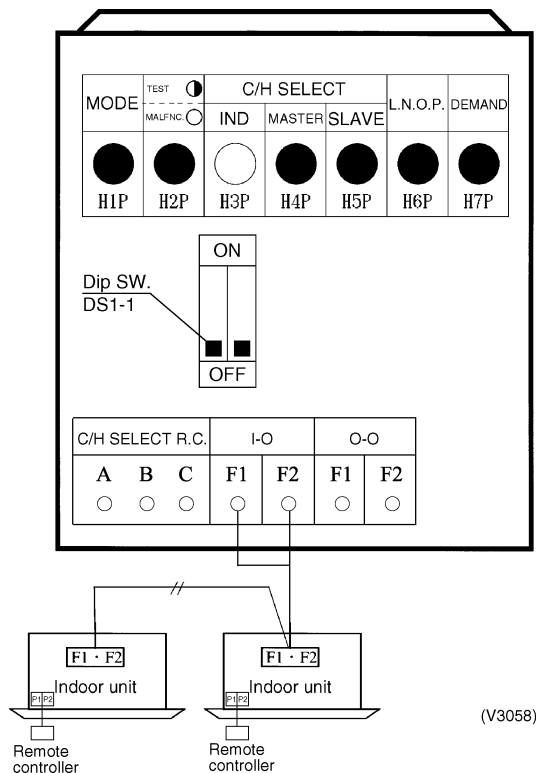

<Set the master unit (= indoor unit having the right to select the cooling/heating operation mode).>

In the case of wired remote controllers

- After the check operation, “**CHANGEOVER UNDER CONTROL**” is flashing in all connected remote controllers.
- Select an indoor unit to be used as the master unit in accordance with the request from the customer. (It is recommended to select an indoor unit which will be used most often as the master unit.)
- Press the operation mode selector button in the remote controller of the indoor unit selected as the master unit.
- In that remote controller, “**CHANGEOVER UNDER CONTROL**” disappears. That remote controller will control changeover of the cooling/heating operation mode.
- In other remote controllers, “**CHANGEOVER UNDER CONTROL**” lights.


For the details, refer to the installation manual supplied together with the indoor unit.

In the case of wireless remote controllers

- After the check operation, the timer lamp is flashing in all connected indoor units.
- Select an indoor unit to be used as the master unit in accordance with the request from the customer. (It is recommended to select an indoor unit which will be used most often as the master unit.)
- Press the operation selector mode button in the remote controller of the indoor unit selected as the master unit. A “peep” sound is emitted, and the timer lamp turns off in all indoor units.
- That indoor unit will control changeover of the cooling/heating operation mode.

② Set Cool / Heat Separately for Each Outdoor Unit System by Cool/Heat Switching Remote Controller

- ◆ It does not matter whether or not there is outdoor - outdoor unit wiring.
- ◆ Set outdoor unit PC board DS1-1 to OUT (factory set).
- ◆ Set cool/heat switching to IND (individual) for “Setting mode 1” (factory set).

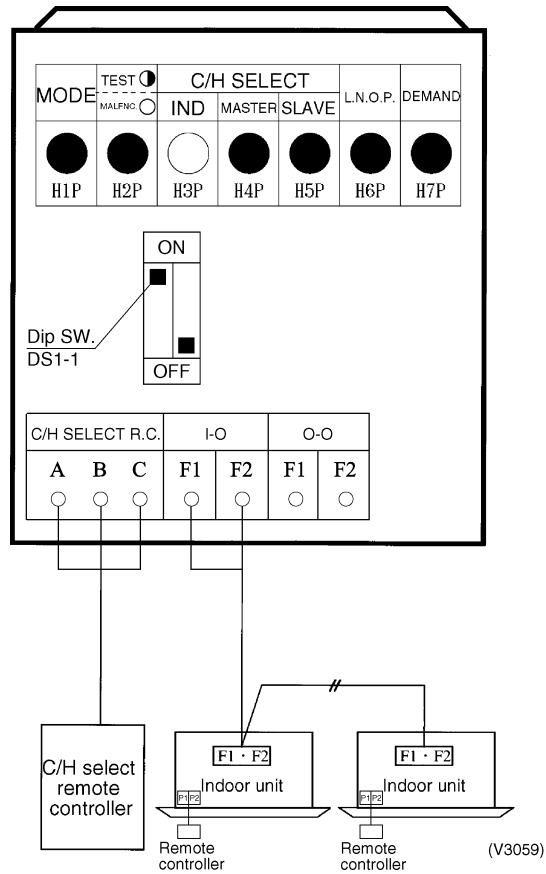

3.2.3 Setting of Low Noise Operation and Demand Operation


Setting of Low Noise Operation

By connecting the external contact input to the low noise input of the outdoor unit external control adaptor (optional), you can lower operating noise by 2-3 dB.

When the low noise operation is carried out automatically at night (The external control adaptor for outdoor unit is not required)

1. While in "Setting mode 2", select the setting condition (i.e., "Mode 1", "Mode 2", or "Mode 3") for set item No. 22 (Setting of nighttime low noise level).
2. If necessary, while in "Setting mode 2", select the setting condition (i.e., "20:00", "22:00", or "24:00") for set item No. 26 (Setting of start time of nighttime low noise operation).
(Use the start time as a guide since it is estimated according to outdoor temperatures.)
3. If necessary, while in "Setting mode 2", select the setting condition (i.e., "06:00", "07:00", or "08:00") for set item No. 27 (Setting of end time of nighttime low noise operation).
(Use the end time as a guide since it is estimated according to outdoor temperatures.)
4. If necessary, while in "Setting mode 2", set the setting condition for set item No. 29 (Setting of capacity precedence) to "ON".
(If the condition is set to "ON", when the air-conditioning load reaches a high level, the system will be put into normal operation mode even during nighttime.)

Image of operation

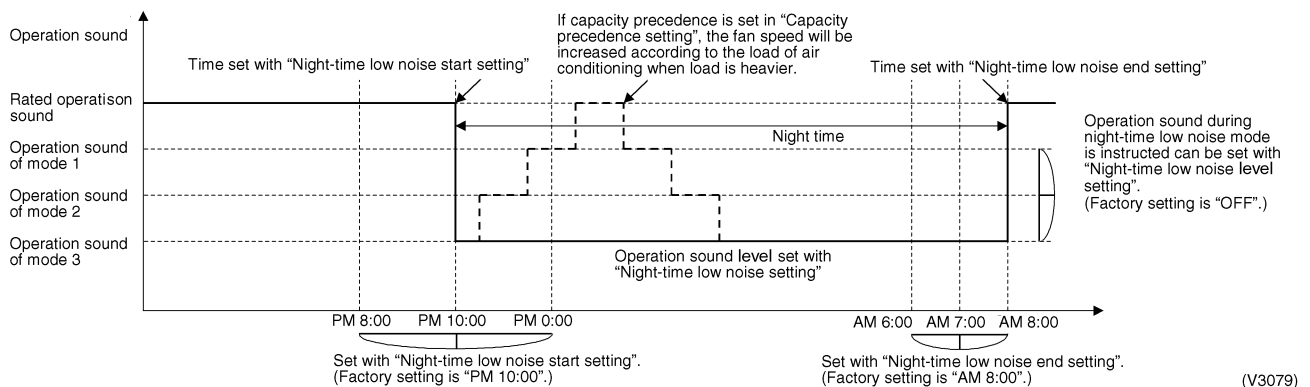

Setting of Demand Operation


By connecting the external contact input to the demand input of the outdoor unit external control adaptor (optional), the power consumption of unit operation can be saved suppressing the compressor operating condition.

Set item	Condition	Content
Demand	Mode 1	The compressor operates at approx. 60% or less of rating.
	Mode 2	The compressor operates at approx. 70% or less of rating.
	Mode 3	The compressor operates at approx. 80% or less of rating.

When the normal demand operation is carried out. (Use of the external control adaptor for outdoor unit is not required.)

1. While in "Setting mode 2", make setting of the set item No. 32 (Setting of constant demand) to "ON".
2. While in "Setting mode 2", select the set item No. 30 (Setting of Demand 1 level) and then set the setting condition to targeted mode.

Image of operation

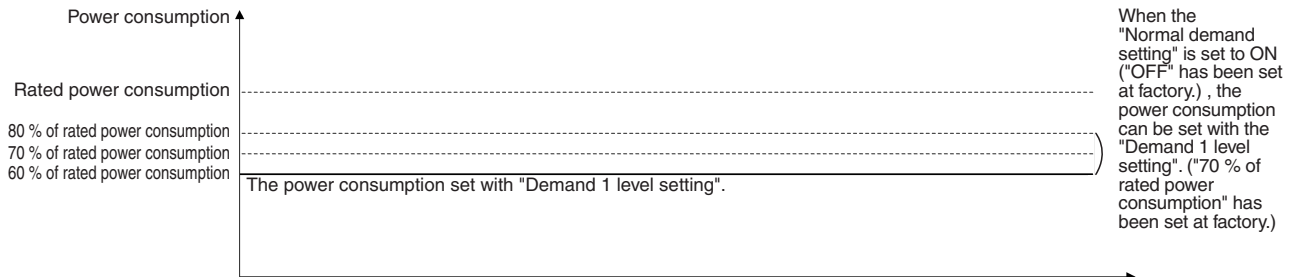

(V3082)

Detailed Setting Procedure of Low Noise Operation and Demand Control

1. Setting mode 1 (H1P off)

- ① In setting mode 2, push the BS1 (MODE button) one time. → Setting mode 1 is entered and H1P off.
During the setting mode 1 is displayed, “In low noise operation” and “In demand control” are displayed.

2. Setting mode 2 (H1P on)

- ① In setting 1, push and hold the BS1 (MODE button) for more than 5 seconds. → Setting mode 2 is entered and H1P lights.
- ② Push the BS2 (SET button) several times and match the LED display with the Setting No. you want.
- ③ Push the BS3 (RETURN button) one time, and the present setting content is displayed.
→ Push the BS2 (SET button) several times and match the LED display with the setting content (as shown on next page) you want.
- ④ Push the BS3 (RETURN button) two times. → Returns to ①.
- ⑤ Push the BS1 (MODE button) one time. → Returns to the setting mode 1 and turns H1P off.

○: ON ●: OFF ◐: Blink

Setting No.	Setting contents	①							②							Setting contents	③							
		Setting No. indication							Setting No. indication								Setting contents indication (Initial setting)							
		H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P		H1P	H2P	H3P	H4P	H5P	H6P	H7P	
12	External low noise / Demand setting	○	●	●	●	●	●	●	○	●	●	○	○	●	●	NO (Factory set)	○	●	●	●	●	●	●	◐
															YES	○	●	●	●	●	●	◐	●	
22	Night-time low noise setting								○	●	○	●	○	○	●	OFF (Factory setting)	○	●	●	●	●	●	●	●
															Mode 1	○	●	●	●	●	●	●	◐	
															Mode 2	○	●	●	●	●	●	◐	●	
															Mode 3	○	●	●	●	●	●	◐	◐	
26	Night-time low noise start setting								○	●	○	○	●	○	●	PM 8:00	○	●	●	●	●	●	●	◐
															PM 10:00 (Factory setting)	○	●	●	●	●	●	◐	●	
															PM 0:00	○	●	●	●	◐	●	●		
27	Night-time low noise end setting								○	●	○	○	●	○	○	AM 6:00	○	●	●	●	●	●	●	◐
															AM 7:00	○	●	●	●	●	●	◐	●	
															AM 8:00 (Factory setting)	○	●	●	●	◐	●	●		
29	Capacity precedence setting								○	●	○	○	○	●	○	Low noise precedence (Factory setting)	○	●	●	●	●	●	●	◐
															Capacity precedence	○	●	●	●	●	●	◐	●	
30	Demand setting 1								○	●	○	○	○	○	●	60 % of rated power consumption	○	●	●	●	●	●	●	◐
															70 % of rated power consumption (Factory setting)	○	●	●	●	●	●	◐	●	
															80 % of rated power consumption	○	●	●	●	◐	●	●		
32	Normal demand setting								○	●	●	●	●	●	●	OFF (Factory setting)	○	●	●	●	●	●	●	◐
															ON	○	●	●	●	●	●	◐	●	


Setting mode indication section

Setting No. indication section

Set contents indication section

3.2.4 Setting of Refrigerant Additional Charging Operation

- * When the outdoor unit is stopped and the entire quantity of refrigerant cannot be charged from the stop valve on the liquid side, make sure to charge the remaining quantity of refrigerant using this procedure. If the refrigerant quantity is insufficient, the unit may malfunction.
- ① Turn ON the power of the indoor unit and the outdoor unit.
 - ② Make sure to completely open the stop valve on the gas side and the stop valve on the liquid side.
 - ③ Connect the refrigerant charge hose to the service port (for additionally charging the refrigerant).
 - ④ In the stopped status, set to ON the refrigerant additional charging operation (A) in [set mode 2] (H1P: Turn on).
 - ⑤ The operation is automatically started.
(The LED indicator H2P flickers, and "Test run" and "Under centralized control" are displayed in the remote controller.)
 - ⑥ After charging the specified quantity of refrigerant, press the RETURN button (BS3) to stop the operation.
 (The operation is automatically stopped within 30 minutes.
 If charging is not completed within 30 minutes, set and perform the refrigerant additional charging operation (A) again.
If the refrigerant additional charging operation is stopped soon, the refrigerant may be overcharged.
Never charge extra refrigerant.)
 - ⑦ Disconnect the refrigerant charge hose.

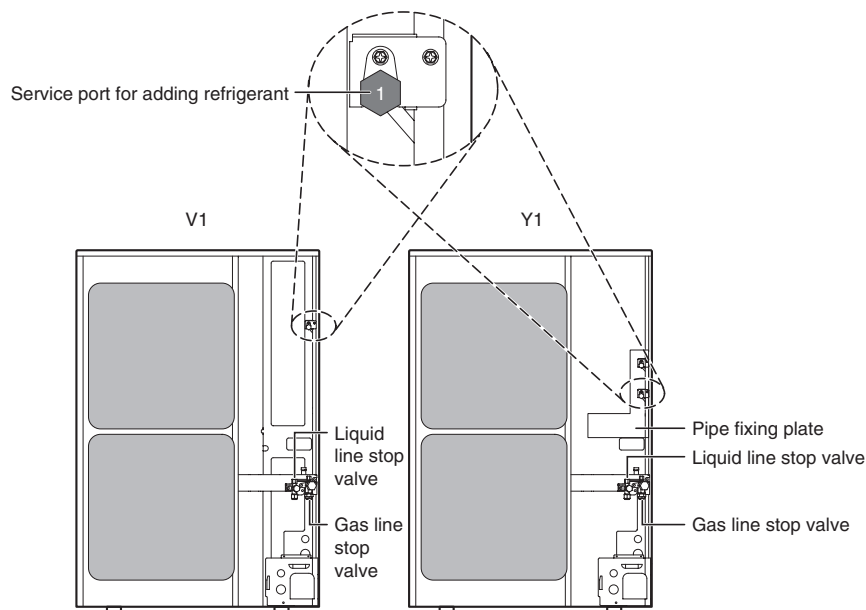

3.2.5 Setting of Refrigerant Recovery Mode

When carrying out the refrigerant collection on site, fully open the respective expansion valve of indoor and outdoor units

All indoor and outdoor unit's operation are prohibited.

[Operation procedure]

- ① In "Setting Mode 2" with units in stop mode, set "B Refrigerant Recovery / Vacuuming mode" to ON. The respective expansion valve of indoor and outdoor units are fully opened. "TEST OPERATION" and "UNDER CENTRALIZED CONTROL" are displayed on the remote controller, and the indoor / outdoor unit operation is prohibited.
After setting, do not cancel "Setting Mode 2" until completion of refrigerant recovery operation.
- ② Collect the refrigerant using a refrigerant recovery unit. (See the operation manual attached to the refrigerant recovery unit for more detail.)
- ③ Press Mode button "BS1" once and reset "Setting Mode 2".

3.2.6 Setting of Vacuuming Mode

In order to perform vacuuming operation at site, fully open the expansion valves of indoor and outdoor units and turn on some solenoid valves.


[Operating procedure]

- ① In "Setting Mode 2" with units in stop mode, set "B Refrigerant Recovery / Vacuuming mode" to ON. The respective expansion valve of indoor and outdoor units are fully opened. "TEST OPERATION" and "UNDER CENTRALIZED CONTROL" are displayed on the remote controller, and the indoor / outdoor unit operation is prohibited. After setting, do not cancel "Setting Mode 2" until completion of Vacuuming operation.
- ② Use the vacuum pump to perform vacuuming operation.
- ③ Press Mode button "BS1" once and reset "Setting Mode 2".

3.2.7 Check Operation

To prevent any trouble in the period of installation at site, the system is provided with a test operation mode enabling check for incorrect wiring, stop valve left in closed, coming out (or misplacing with suction pipe thermistor) or discharge pipe thermistor and judgment of piping length, refrigerant overcharging, and learning for the minimum opening degree of electronic expansion valve.

CHECK OPERATION FUNCTION

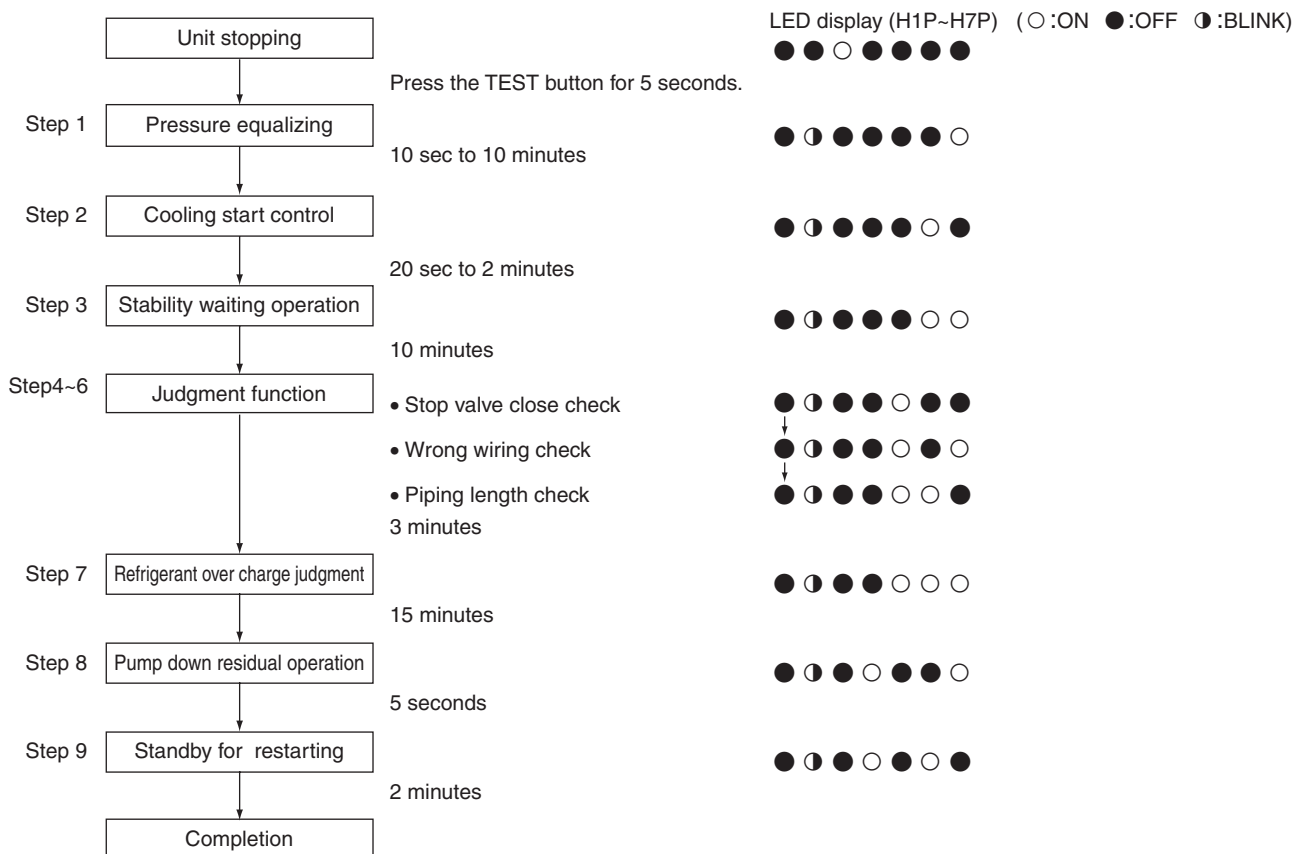


Part 7

Troubleshooting

1. Symptom-based Troubleshooting	125
2. Troubleshooting by Remote Controller	128
2.1 The INSPECTION / TEST Button.....	128
2.2 Self-diagnosis by Wired Remote Controller	129
2.3 Self-diagnosis by Wireless Remote Controller	130
2.4 Operation of the Remote Controller's Inspection / Test Operation Button	132
2.5 Remote Controller Service Mode	133
2.6 Remote Controller Self-Diagnosis Function	135
3. Troubleshooting by Indication on the Remote Controller	142
3.1 "R0" Indoor Unit: Error of External Protection Device.....	142
3.2 "R1" Indoor Unit: PC Board Defect.....	143
3.3 "R3" Indoor Unit: Malfunction of Drain Level Control System (S1L)	144
3.4 "R6" Indoor Unit: Fan Motor (M1F) Lock, Overload.....	146
3.5 "R7" Indoor Unit: Malfunction of Swing Flap Motor (M1S).....	147
3.6 Abnormal Power Supply Voltage.....	149
3.7 "R9" Indoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E).....	150
3.8 "RF" Indoor Unit: Drain Level above Limit	152
3.9 "RL" Indoor Unit: Malfunction of Capacity Determination Device	153
3.10 "L1" Indoor Unit: Failure of Transmission (Between Indoor unit PC Board and Fan PC Board).....	154
3.11 "L4" Indoor Unit: Malfunction of Thermistor (R2T) for Heat Exchanger.....	156
3.12 "L5" Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes	157
3.13 "L6" Indoor Unit: Failure of Combination (Between Indoor unit PC Board and Fan PC Board).....	158
3.14 "L9" Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air.....	159
3.15 "LR" Indoor Unit: Malfunction of Thermistor for Discharge Air.....	160
3.16 "LL" Indoor Unit: Malfunction of Humidity Sensor System	161
3.17 "LJ" Indoor Unit: Malfunction of Thermostat Sensor in Remote Controller	162
3.18 "E1" Outdoor Unit: PC Board Defect	163
3.19 "E3" Outdoor Unit: Actuation of High Pressure Switch.....	164
3.20 "E4" Outdoor Unit: Actuation of Low Pressure Sensor.....	166
3.21 "E5" Inverter Compressor Motor Lock.....	168
3.22 "E7" Malfunction of Outdoor Unit Fan Motor	169
3.23 "E9" Outdoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y3E).....	170
3.24 "F3" Outdoor Unit: Abnormal Discharge Pipe Temperature.....	172
3.25 "F6" Outdoor Unit: Refrigerant Overcharged.....	173
3.26 "H3" Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air.....	174
3.27 "J3" Outdoor Unit: Malfunction of Discharge Pipe Thermistor (R2T)	175
3.28 "J5" Outdoor Unit: Malfunction of Thermistor (R3T, R5T) for Suction Pipe 1, 2	176

3.29	“U5” Outdoor Unit: Malfunction of Thermistor (R6T)	177
3.30	“U7” Outdoor Unit: Malfunction of Thermistor (R7T) for Outdoor Unit Liquid Pipe	178
3.31	“U3” Outdoor Unit: Malfunction of Thermistor (R4T)	179
3.32	“U8” Outdoor Unit: Malfunction of High Pressure Sensor.....	180
3.33	“U4” Outdoor Unit: Malfunction of Low Pressure Sensor	181
3.34	“U1” Outdoor Unit: Malfunction of PC Board	182
3.35	“U4” Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise.....	183
3.36	“U5” Outdoor Unit: Inverter Compressor Abnormal	184
3.37	“U8” Outdoor Unit: Inverter Current Abnormal.....	185
3.38	“U3” Outdoor Unit: Inverter Start up Error	186
3.39	“U1” Outdoor Unit: Malfunction of Transmission between Inverter and Control PC Board	187
3.40	“P1” Outdoor Unit: High Voltage of Capacitor in Main Inverter Circuit	188
3.41	“U7” Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure	189
3.42	“U2” Power Supply Insufficient or Instantaneous Failure	191
3.43	“U3” Check Operation not Executed.....	193
3.44	“U4” Malfunction of Transmission between Indoor Units and Outdoor Units	194
3.45	“U5” Malfunction of Transmission between Remote Controller and Indoor Unit.....	196
3.46	“U8” Malfunction of Transmission between Main and Sub Remote Controllers	197
3.47	“U3” Malfunction of Transmission between Indoor and Outdoor Units in the Same System	198
3.48	“U7” Excessive Number of Indoor Units	200
3.49	“U4” Address Duplication of Central Remote Controller	201
3.50	“U8” Malfunction of Transmission between Central Remote Controller and Indoor Unit	202
3.51	“U1” System is not Set yet.....	204
3.52	“U4” Malfunction of System, Refrigerant System Address Undefined...	205
4.	Troubleshooting by Indication on the Centralized Remote Controller.....	206
4.1	“U8” Malfunction of Transmission between Centralized Remote Controller and Indoor Unit	206
4.2	“M1” PC Board Defect	207
4.3	“M8” Malfunction of Transmission between Optional Controllers for Centralized Control.....	208
4.4	“M8” Improper Combination of Optional Controllers for Centralized Control.....	209
4.5	“M4” Address Duplication, Improper Setting	211
5.	Troubleshooting by Indication on the Unified ON/OFF Controller.....	212
5.1	Operation Lamp Blinks	212
5.2	Display “Under Host Computer Integrate Control” Blinks (Repeats Single Blink).....	214
5.3	Display “Under Host Computer Integrate Control” Blinks (Repeats Double Blink)	217

1. Symptom-based Troubleshooting

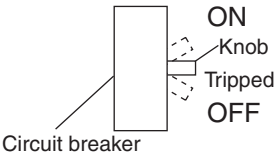	Symptom		Supposed Cause	Countermeasure	
1	The system does not start operation at all.		Blowout of fuse(s)	Turn Off the power supply and then replace the fuse(s).	
			Cutout of breaker(s)	<ul style="list-style-type: none"> If the knob of any breaker is in its OFF position, turn ON the power supply. If the knob of any circuit breaker is in its tripped position, do not turn ON the power supply.  <p>The diagram shows a rectangular circuit breaker with a knob on the right side. The knob has three positions: 'ON' at the top, 'Tripped' in the middle, and 'OFF' at the bottom. A dashed line indicates the knob's movement between these positions. The label 'Circuit breaker' points to the main body of the device.</p>	
			Power failure	After the power failure is reset, restart the system.	
			Open phase in power supply cable	Check power supply. After that, properly connect the power supply cable, and then turn ON the power supply.	
2	The system starts operation but makes an immediate stop.		Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).	
			Clogged air filter(s)	Clean the air filter(s).	
3	The system does not cool or heat air well.		Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).	
			Clogged air filter(s)	Clean the air filter(s).	
			Enclosed outdoor unit(s)	Remove the enclosure.	
			Improper set temperature	Set the temperature to a proper degree.	
			Airflow rate set to "LOW"	Set it to a proper airflow rate.	
			Improper direction of air diffusion	Set it to a proper direction.	
			Open window(s) or door(s)	Shut it tightly.	
			[In cooling]	Direct sunlight received	Hang curtains or shades on windows.
			[In cooling]	Too many persons staying in a room	
[In cooling]	Too many heat sources (e.g. OA equipment) located in a room				
4	The system does not operate.	The system stops and immediately restarts operation.	If the OPERATION lamp on the remote controller turns ON, the system will be normal. These symptoms indicate that the system is controlled so as not to put unreasonable loads on the system.	Normal operation. The system will automatically start operation after a lapse of five minutes.	
		Pressing the TEMP ADJUST button immediately resets the system.			
		The remote controller displays "UNDER CENTRALIZED CONTROL", which blinks for a period of several seconds when the OPERATION button is depressed.	The system is controlled with centralized controller. Blinking display indicates that the system cannot be operated using the remote controller.		Operate the system using the COOL/HEAT centralized remote controller.
		The system stops immediately after turning ON the power supply.	The system is in preparation mode of micro computer operation.		Wait for a period of approximately one minute.
5	The system makes intermittent stops.	The remote controller displays malfunction codes "U4" and "U5", and the system stops but restarts after a lapse of several minutes.	The system stops due to an interruption in communication between units caused by electrical noises coming from equipment other than air conditioners.	Remove causes of electrical noises. If these causes are removed, the system will automatically restart operation.	


	Symptom		Supposed Cause	Countermeasure
6	COOL-HEAT selection is disabled.	The remote controller displays "UNDER CENTRALIZED CONTROL".	This remote controller has no option to select cooling operation.	Use a remote controller with option to select cooling operation.
		The remote controller displays "UNDER CENTRALIZED CONTROL", and the COOL-HEAT selection remote controller is provided.	COOL-HEAT selection is made using the COOL-HEAT selection remote controller.	Use the COOL-HEAT selection remote controller to select cool or heat.
7	The system conducts fan operation but not cooling or heating operation.	This symptom occurs immediately after turning ON the power supply.	The system is in preparation mode of operation.	Wait for a period of approximately 10 minutes.
8	The airflow rate is not reproduced according to the setting.	Even pressing the AIRFLOW RATE SET button makes no changes in the airflow rate.	In heating operation, when the room temperature reaches the set degree, the outdoor unit will stop while the indoor unit is brought to fan LL operation so that no one gets cold air. Furthermore, if fan operation mode is selected when other indoor unit is in heating operation, the system will be brought to fan LL operation. (The fan LL operation is also enabled while in oil return mode in cooling operation.)	Normal operation.
9	The airflow direction is not reproduced according to the setting.	The airflow direction is not corresponding to that displayed on the remote controller. The flap does not swing.	Automatic control	Normal operation.
10	A white mist comes out from the system.	<Indoor unit> In cooling operation, the ambient humidity is high. (This indoor unit is installed in a place with much oil or dust.)	Uneven temperature distribution due to heavy stain of the inside of the indoor unit	Clean the inside of the indoor unit.
		<Indoor unit> Immediately after cooling operation stopping, the ambient temperature and humidity are low.	Hot gas (refrigerant) flown in the indoor unit results to be vapor from the unit.	Normal operation.
		<Indoor and outdoor units> After the completion of defrosting operation, the system is switched to heating operation.	Defrosted moisture turns to be vapor and comes out from the units.	Normal operation.

	Symptom	Supposed Cause	Countermeasure	
11	The system produces sounds.	<Indoor unit> Immediately after turning ON the power supply, indoor unit produces "ringing" sounds.	These are operating sounds of the electronic expansion valve of the indoor unit.	Normal operation. This sound becomes low after a lapse of approximately one minute.
		<Indoor and outdoor units> "Hissing" sounds are continuously produced while in cooling or defrosting operation.	These sounds are produced from gas (refrigerant) flowing respectively through the indoor and outdoor units.	Normal operation.
		<Indoor and outdoor units> "Hissing" sounds are produced immediately after the startup or stop of the system, or the startup or stop of defrosting operation.	These sounds are produced when the gas (refrigerant) stops or changes flowing.	Normal operation.
		<Indoor unit> Faint sounds are continuously produced while in cooling operation or after stopping the operation.	These sounds are produced from the drain discharge device in operation.	Normal operation.
		<Indoor unit> "Creaking" sounds are produced while in heating operation or after stopping the operation.	These sounds are produced from resin parts expanding and contracting with temperature changes.	Normal operation.
		<Indoor unit> Sounds like "trickling" or the like are produced from indoor units in the stopped state.	On VRV systems, these sounds are produced when other indoor units in operation. The reason is that the system runs in order to prevent oil or refrigerant from dwelling.	Normal operation.
		<Outdoor unit> Pitch of operating sounds changes.	The reason is that the compressor changes the operating frequency.	Normal operation.
12	Dust comes out from the system.	Dust comes out from the system when it restarts after the stop for an extended period of time.	Dust, which has deposited on the inside of indoor unit, is blown out from the system.	Normal operation.
13	Odors come out from the system.	In operation	Odors of room, cigarettes or else adsorbed to the inside of indoor unit are blown out.	The inside of the indoor unit should be cleaned.
14	Outdoor unit fan does not rotate.	In operation	The reason is that fan revolutions are controlled to put the operation to the optimum state.	Normal operation.
15	LCD display "88" appears on the remote controller.	Immediately after turning ON the power supply	The reason is that the system is checking to be sure the remote controller is normal.	Normal operation. This code is displayed for a period of approximately one minute at maximum.
16	The outdoor unit compressor or the outdoor unit fan does not stop.	After stopping operation	It stops in order to prevent oil or refrigerant from dwelling.	Normal operation. It stops after a lapse of approximately 5 to 10 minutes.
17	The outdoor gets hot.	While stopping operation	The reason is that the compressor is warmed up to provide smooth startup of the system.	Normal operation.
18	Hot air comes out from the system even though it stops.	Hot air is felt while the system stops.	On VRV systems, small quantity of refrigerant is fed to indoor units in the stopped state when other indoor units are in operation.	Normal operation.
19	The system does not cool air well.	The system is in dry operation.	The reason is that the dry operation serves not to reduce the room temperature where possible.	Change the system to cooling operation.

2. Troubleshooting by Remote Controller

2.1 The INSPECTION / TEST Button


The following modes can be selected by using the [Inspection/Test Operation] button on the remote control.

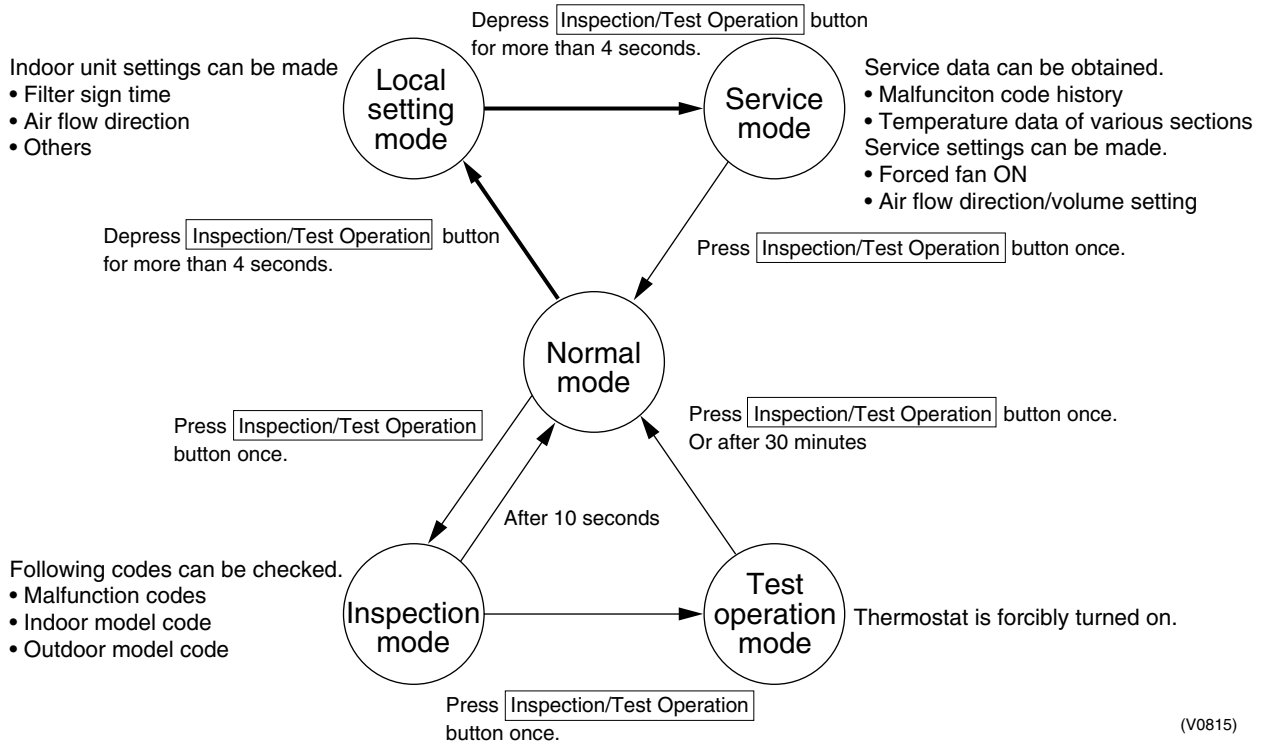

2.2 Self-diagnosis by Wired Remote Controller

Explanation

If operation stops due to malfunction, the remote controller's operation LED blinks, and malfunction code is displayed. (Even if stop operation is carried out, malfunction contents are displayed when the inspection mode is entered.) The malfunction code enables you to tell what kind of malfunction caused operation to stop. See page 136 for malfunction code and malfunction contents.

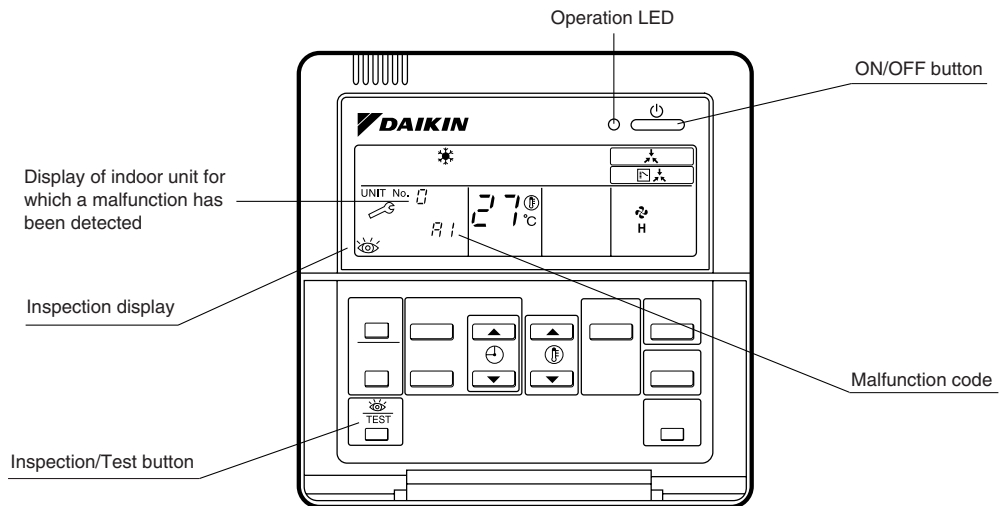

Note:

1. Pressing the INSPECTION/TEST button will blink the check indication.
2. While in check mode, pressing and holding the ON/OFF button for a period of five seconds or more will clear the failure history indication shown above. In this case, on the codes display, the malfunction code will blink twice and then change to "00" (=Normal), the Unit No. will change to "0", and the operation mode will automatically switch from check mode to normal mode (displaying the set temperature).

2.3 Self-diagnosis by Wireless Remote Controller


**In the Case of
BRC7C Type
BRC7E Type
BRC4C Type**

If equipment stops due to a malfunction, the operation indicating LED on the light reception section flashes.

The malfunction code can be determined by following the procedure described below. (The malfunction code is displayed when an operation error has occurred. In normal condition, the malfunction code of the last problem is displayed.)

1. Press the INSPECTION/TEST button to select "Inspection."
The equipment enters the inspection mode. The "Unit" indication lights and the Unit No. display shows flashing "0" indication.
2. Set the Unit No.
Press the UP or DOWN button and change the Unit No. display until the buzzer (*1) is generated from the indoor unit.
*1 Number of beeps
3 short beeps : Conduct all of the following operations.
1 short beep : Conduct steps 3 and 4.
Continue the operation in step 4 until a buzzer remains ON. The continuous buzzer indicates that the malfunction code is confirmed.
Continuous beep : No abnormality.
3. Press the MODE selector button.
The left "0" (upper digit) indication of the malfunction code flashes.
4. Malfunction code upper digit diagnosis
Press the UP or DOWN button and change the malfunction code upper digit until the malfunction code matching buzzer (*2) is generated.

- The upper digit of the code changes as shown below when the UP and DOWN buttons are pressed.



⇒ "Advance" button ← "Backward" button (SE006)

*2 Number of beeps



Continuous beep : Both upper and lower digits matched. (Malfunction code confirmed)

2 short beeps : Upper digit matched.


1 short beep : Lower digit matched.

5. Press the MODE selector button.
The right "0" (lower digit) indication of the malfunction code flashes.
6. Malfunction code lower digit diagnosis
Press the UP or DOWN button and change the malfunction code lower digit until the continuous malfunction code matching buzzer (*2) is generated.

- The lower digit of the code changes as shown below when the UP and DOWN buttons are pressed.

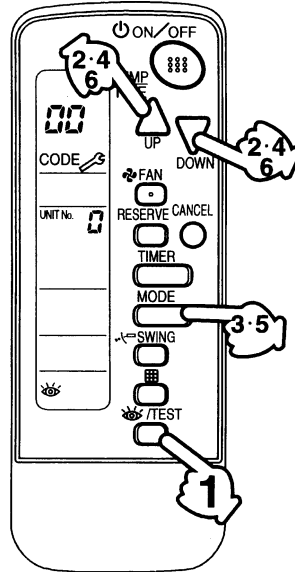


Normal status
 Enters inspection mode from normal status when the INSPECTION/TEST button is pressed.

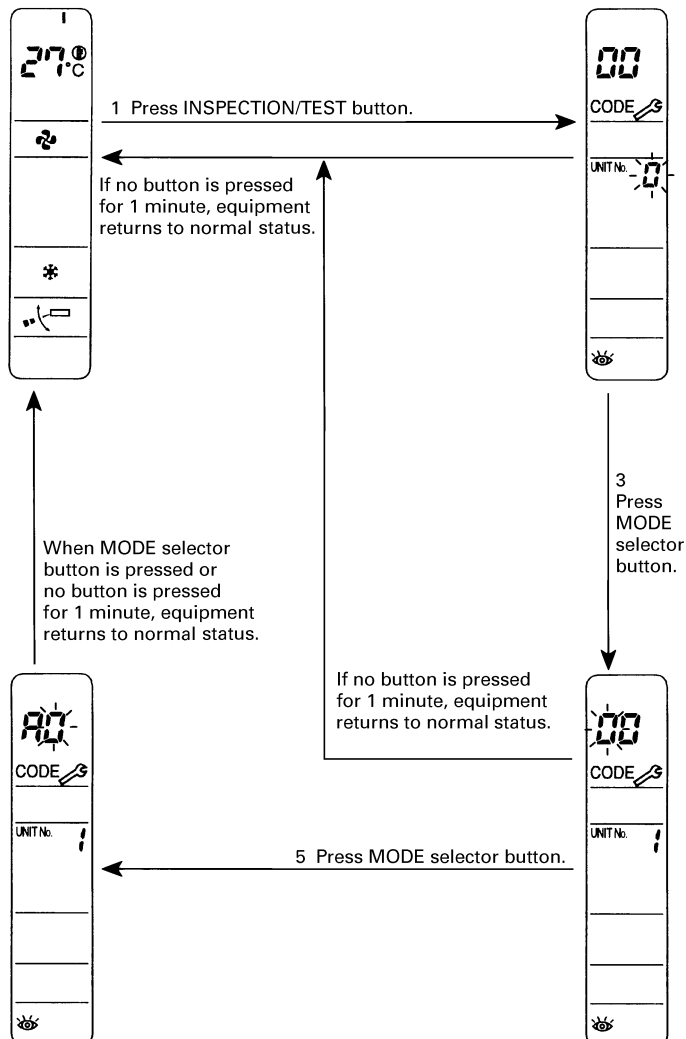


(SF008)

2.4 Operation of the Remote Controller's Inspection / Test Operation Button

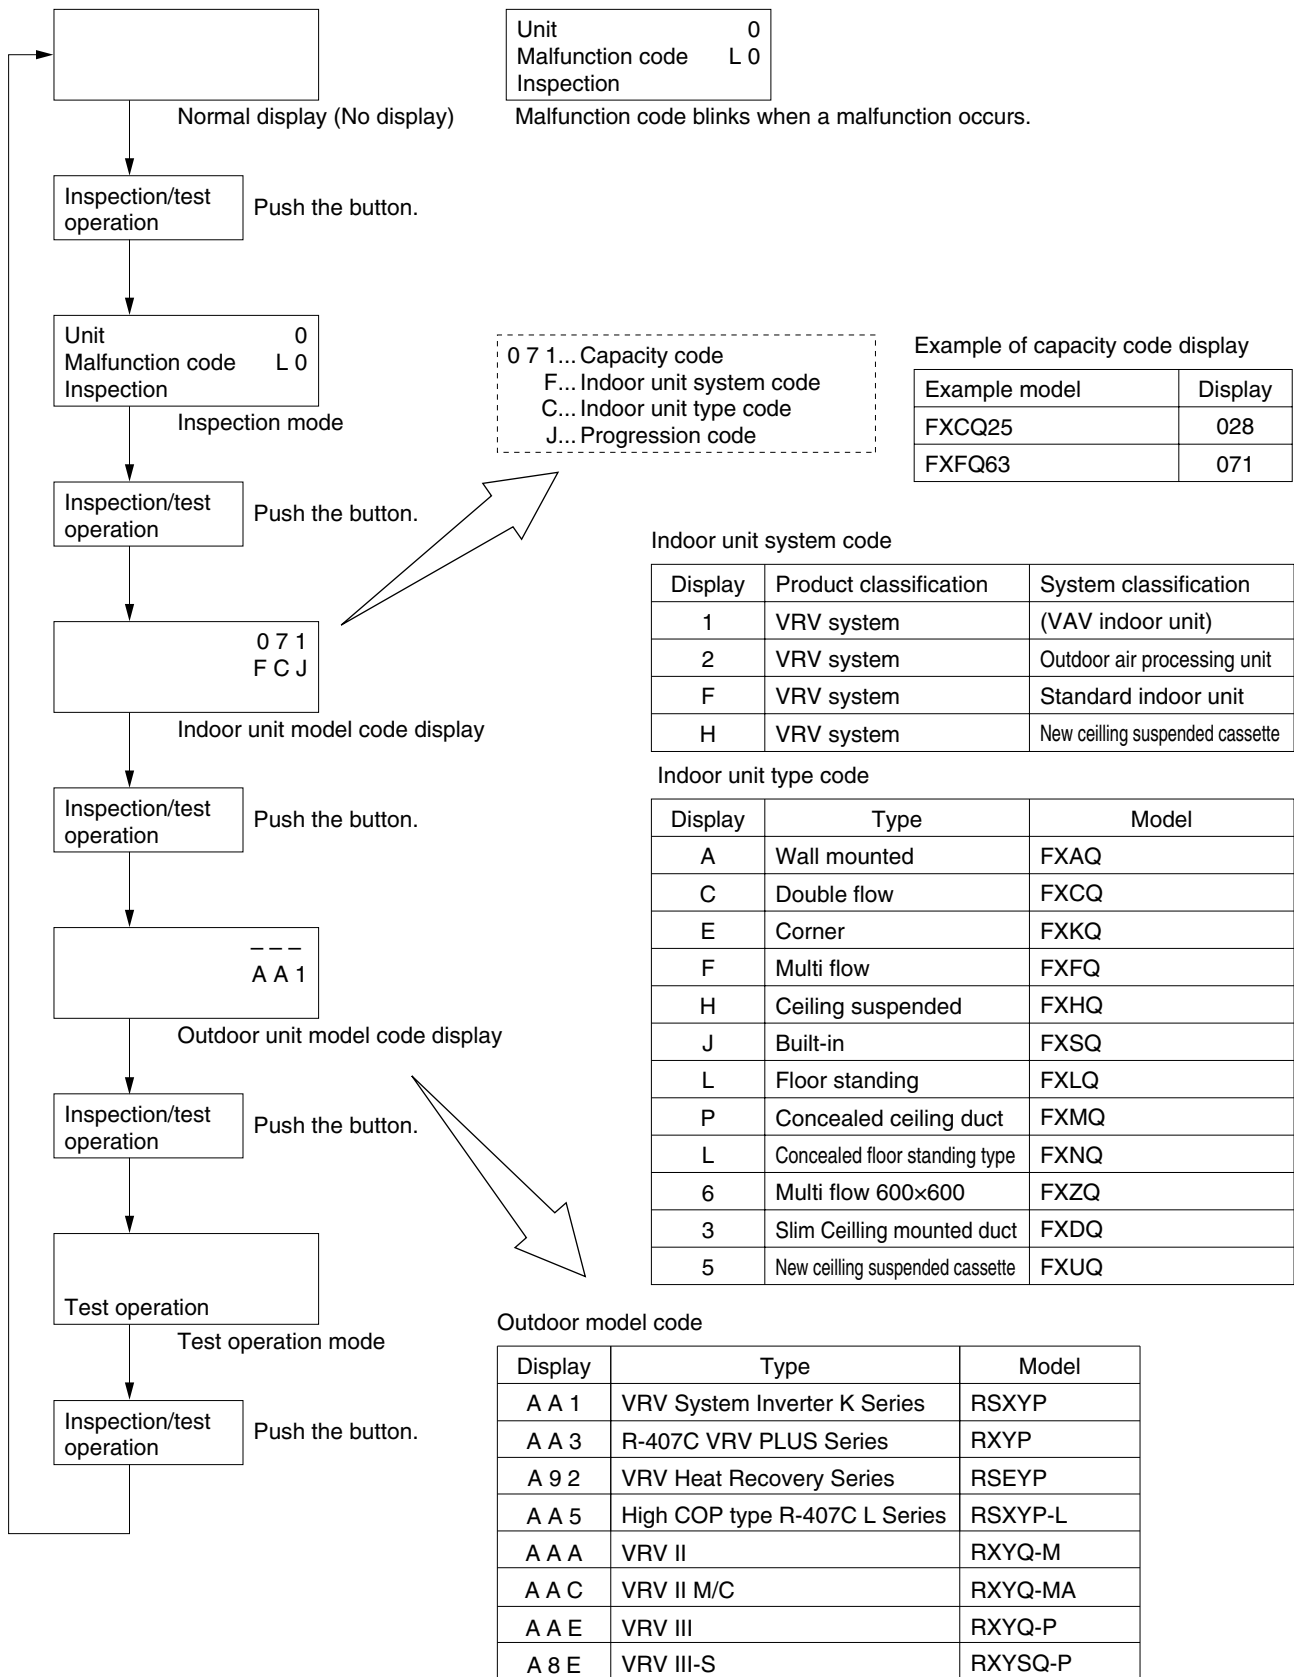

2.5 Remote Controller Service Mode


How to Enter the Service Mode

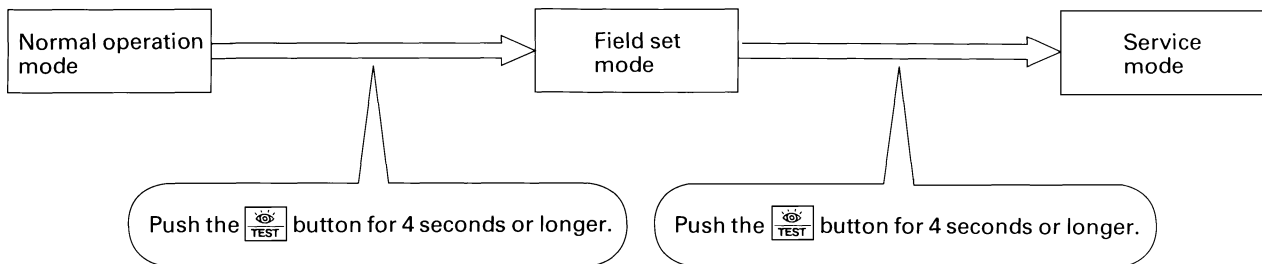

(VF020)


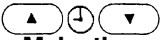
Service Mode Operation Method

1. Select the mode No.


Set the desired mode No. with the  button.

(For wireless remote controller, Mode 43 only can be set.)

2. Select the unit No. (For group control only)


Select the indoor unit No. to be set with the time mode . (For wireless remote controller,  button.)

3. Make the settings required for each mode. (Modes 41, 44, 45)

In case of Mode 44, 45, push  button to be able to change setting before setting work. (LCD "code" blinks.)


For details, refer to the table in next page.









4. Define the setting contents. (Modes 44, 45)

Define by pushing the timer  button.

After defining, LCD "code" changes blinking to ON.

5. Return to the normal operation mode.

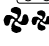
Push the  button one time.

Mode No	Function	Contents and operation method	Remote controller display example
40	Malfunction hysteresis display	<p>Display malfunction hysteresis.</p> <p>The history No. can be changed with the  button.</p>	<p>Unit 1 Malfunction code 40</p> <p>2-U4 Malfunction code</p> <p>History No: 1 - 9 1: Latest</p> <p>(VE007)</p>
41	Display of sensor and address data	<p>Display various types of data.</p> <p>Select the data to be displayed with the  button. Sensor data</p> <p>0: Thermostat sensor in remote controller. 1: Suction 2: Liquid pipe 3: Gas pipe</p> <p>Address data 4: Indoor unit address 5: Outdoor unit address 6: BS unit address 7: Zone control address 8: Cool/heat group address 9: Demand / low noise address</p>	<p>Sensor data display</p> <p>Unit No. Sensor type</p> <p>1 1 2 7 41</p> <p>Temperature °C</p> <p>Address display</p> <p>Unit No. Address type</p> <p>1 8 1 41</p> <p>Address</p> <p>(VE008)</p>
43	Forced fan ON	<p>Manually turn the fan ON by each unit. (When you want to search for the unit No.)</p> <p>By selecting the unit No. with the  button, you can turn the fan of each indoor unit on (forced ON) individually.</p>	<p>Unit 1</p> <p>43</p> <p>(VE009)</p>
44	Individual setting	<p>Set the fan speed and air flow direction by each unit</p> <p>Select the unit No. with the time mode  button. Set the fan speed with the  button.</p> <p>Set the air flow direction with the  button.</p>	<p>Unit 1 Code 44</p> <p>1 3</p> <p>Fan speed 1: Low 3: High</p> <p>Air flow direction P0 - P4</p> <p>(VE010)</p>
45	Unit No. transfer	<p>Transfer unit No.</p> <p>Select the unit No. with the  button. Set the unit No. after transfer with the  button.</p>	<p>Present unit No.</p> <p>Unit 1 Code 45</p> <p>0 2</p> <p>Unit No. after transfer</p> <p>(VE011)</p>

2.6 Remote Controller Self-Diagnosis Function

The remote controller switches are equipped with a self diagnosis function so that more appropriate maintenance can be carried out. If a malfunction occurs during operation, the operation lamp, malfunction code and display of malfunctioning unit No. let you know the contents and location of the malfunction.

When there is a stop due to malfunction, the contents of the malfunction given below can be diagnosed by a combination of operation lamp, INSPECTION display of the liquid crystal display and display of malfunction code. It also lets you know the unit No. during group control.

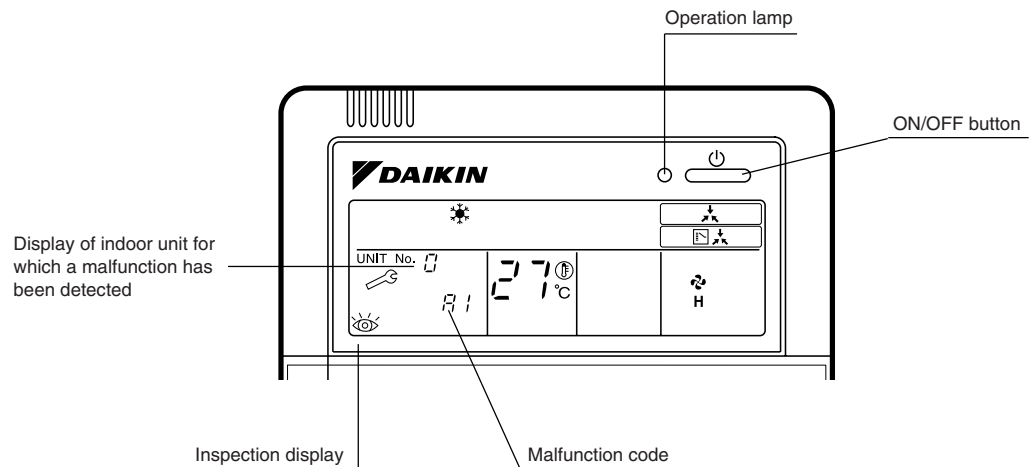


(VL050)

○ : ON ● : OFF ◐ : Blink

	Malfunction code	Operation lamp	Malfunction contents	Page Referred
Indoor Unit	A0	●	Error of external protection device	142
	A1	●	PC board defect, E ² PROM defect	143
	A3	●	Malfunction of drain level control system (S1L)	144
	A6	●	Fan motor (M1F) lock, overload	146
	A7	○	Malfunction of swing flap motor (M1S)	147
	A8	●	Abnormal power supply voltage	149
	A9	●	Malfunction of moving part of electronic expansion valve (Y1E)	150
	AF	○	Drain level above limit	152
	AJ	●	Malfunction of capacity setting	153
	C1	●	Failure of transmission (between indoor unit PC board and fan PC board)	154
	C4	●	Malfunction of thermistor (R2T) for heat exchange (loose connection, disconnection, short circuit, failure)	156
	C5	●	Malfunction of thermistor (R3T) for gas pipes (loose connection, disconnection, short circuit, failure)	157
	C6	●	Failure of combination (between indoor unit PC board and fan PC board)	158
	C9	●	Malfunction of thermistor (R1T) for suction air (loose connection, disconnection, short circuit, failure)	159
	CA	●	Malfunction of thermistor for discharge air (loose connection, disconnection, short circuit, failure)	160
	CC	○	Malfunction of humidity sensor system	161
	CJ	○	Malfunction of thermostat sensor in remote controller	162
Outdoor Unit	E1	●	PC board defect	163
	E3	●	Actuation of high pressure switch	164
	E4	●	Actuation of low pressure sensor	166
	E5	●	Compressor motor lock	168
	E6	●	Standard compressor lock or over current	—
	E7	●	Malfunction of outdoor unit fan motor	169
	E9	●	Malfunction of moving part of electronic expansion valve (Y1E, Y3E)	170
	F3	●	Abnormal discharge pipe temperature	172
	F6	●	Refrigerant overcharged	173
	H3	○	Failure of high pressure switch	—
	H4	●	Actuation of low pressure switch	—
	H7	●	Abnormal outdoor fan motor signal	—
	H9	●	Malfunction of thermistor (R1T) for outdoor air (loose connection, disconnection, short circuit, failure)	174
	J2	●	Current sensor malfunction	—
	J3	●	Malfunction of discharge pipe thermistor (R2T) (loose connection, disconnection, short circuit, failure)	175
	J5	●	Malfunction of thermistor (R3T, R5T) for suction pipe (loose connection, disconnection, short circuit, failure)	176
	J6	●	Malfunction of thermistor (R6T) for heat exchanger (loose connection, disconnection, short circuit, failure)	177
	J7	●	Malfunction of thermistor (R7T) for outdoor unit liquid pipe	178
	J9	●	Malfunction of subcooling heat exchanger gas pipe thermistor (R4T)	179
	JA	●	Malfunction of high pressure sensor	180
	JC	●	Malfunction of low pressure sensor	181
	L0	●	Inverter system error	—
	L1	●	Malfunction of PC board	182
L4	●	Malfunction of inverter radiating fin temperature rise	183	
L5	●	Inverter compressor abnormal	184	
L8	●	Inverter current abnormal	185	
L9	●	Inverter start up error	186	

○: ON ●: OFF ◐: Blink

	Malfunction code	Operation lamp	Malfunction contents	Page Referred
Outdoor Unit	LA	◐	Malfunction of power unit	—
	LC	◐	Malfunction of transmission between inverter and control PC board	187
	P1	◐	High voltage of capacitor in main inverter circuit.	188
System	U0	○	Low pressure drop due to refrigerant shortage or electronic expansion valve failure	189
	U1	◐	Reverse phase / open phase	—
	U2	◐	Power supply insufficient or instantaneous failure	191
	U3	◐	Check operation is not completed.	193
	U4	◐	Malfunction of transmission between indoor and outdoor units	194
	U5	◐	Malfunction of transmission between remote controller and indoor unit	196
	U5	●	Failure of remote controller PC board or setting during control by remote controller	196
	U7	◐	Malfunction of transmission between outdoor units	—
	U8	◐	Malfunction of transmission between main and sub remote controllers (malfunction of sub remote controller)	197
	U9	◐	Malfunction of transmission between indoor unit and outdoor unit in the same system	198
	UA	◐	Excessive number of indoor units	200
	UC	○	Address duplication of central remote controller	201
	UE	◐	Malfunction of transmission between central remote controller and indoor unit	202
	UF	◐	System is not set yet	204
	UH	◐	Malfunction of system, refrigerant system address undefined	205
Central Remote Controller and Schedule Timer	UE	◐	Malfunction of transmission between centralized remote controller and indoor unit	206
	M1	○ or ●	PC board defect	207
	M8	○ or ●	Malfunction of transmission between optional controllers for centralized control	208
	MA	○ or ●	Improper combination of optional controllers for centralized control	209
	MC	○ or ●	Address duplication, improper setting	211
Heat Reclaim Ventilation	64	○	Indoor unit's air thermistor error	—
	65	○	Outside air thermistor error	—
	68	○	Malfunction of HVU	—
	6A	○	Damper system alarm	—
	6A	◐	Damper system + thermistor error	—
	6F	○	Malfunction of simple remote controller	—
	94	◐	Internal transmission error	—

 The system operates for malfunction codes indicated in black squares, however, be sure to check and repair.

Malfunction code indication by outdoor unit PC board

<Monitor mode>

To enter the monitor mode, push the **MODE (BS1)** button when in "Setting mode 1".

<Selection of setting item>

Push the **SET (BS2)** button and set the LED display to a setting item.

<Confirmation of malfunction 1>

Push the **RETURN (BS3)** button once to display "First digit" of malfunction code.

<Confirmation of malfunction 2>

Push the **SET (BS2)** button once to display "Second digit" of malfunction code.

<Confirmation of malfunction 3>

Push the **SET (BS2)** button once to display "malfunction location".

<Confirmation of malfunction 4>

Push the **SET (BS2)** button once to display "master or slave 1 or slave 2" and "malfunction location".

Push the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

* Push the **MODE (BS1)** button and returns to "Setting mode 1".

Detail description on next page.

Contents of malfunction		Malfunction code
In-phase malfunction of DIII Net	Detection of DIII Net	E1
Abnormal discharge pressure	HPS activated	E3
Abnormal suction pressure	Abnormal Pe	E4
Compressor lock	Detection of INV compressor lock	E5
Over load, over current, abnormal lock of outdoor unit fan motor	Detection of DC fan 1 motor lock	E7
	Detection of DC fan 2 motor lock	
Malfunction of electronic expansion valve	EV1	E9
	EV3	
Faulty sensor of outdoor air temperature	Faulty Ta sensor (short)	H9
Abnormal discharge pipe temperature	Abnormal Td	F3
Abnormal heat exchanger temperature	Refrigerant over charge	F6
Faulty sensor of discharge pipe temperature	Faulty Tdi sensor (short)	J3
Faulty sensor of suction pipe temperature	Faulty Ts1 sensor (short)	J5
	Faulty Ts2 sensor (short)	
Faulty sensor of heat exchanger temperature	Faulty Tb sensor (short)	J6
Malfunction of the liquid pipe temperature sensor	Faulty Tl sensor (short)	J7
Faulty sensor of subcool heat exchanger temperature	Faulty Tsh sensor (short)	J9
Faulty sensor of discharge pressure	Faulty Pc sensor (short)	JA
Faulty sensor of suction pressure	Faulty Pe sensor (short)	JC
Faulty Inverter PC board	Faulty IPM	L1
	Abnormal Current sensor offset	
	Abnormal IGBT	
	Faulty Current sensor	
Abnormal SP-PAM over-voltage		
Inverter radiation fin temperature rising	Over heating of inverter radiation fin temperature	L4
DC output over current	Inverter instantaneous over current	L5
Electronic thermal	Electronic thermal switch 1	L8
	Electronic thermal switch 2	
	Out-of-step	
	Speed down after startup	
	Lightening detection	
Stall prevention (Limit time)	Stall prevention (Current increasing)	L9
	Stall prevention (Faulty start up)	
	Abnormal wave form in startup	
	Out-of-step	
Transmission error between inverter and outdoor unit	Inverter transmission error	LC

○: ON ●: OFF ◐: Blink

Malfunction code	Confirmation of malfunction 1							Confirmation of malfunction 2							Confirmation of malfunction 3							Confirmation of malfunction 4						
	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P
E1	◐			●	●	◐	◐	◐			●	●	●	◐	◐	◐	●	●	●	●	●	◐	◐	◐	●	●	◐	◐
E3								◐			●	●	◐	◐	◐			●	●	●	●	◐			●	●		
E4								◐			●	◐	●	●	◐			●	●	●	●	◐			●	●		
E5								◐			●	◐	●	◐	◐			●	●	●	●	◐			●	●		
E7								◐			●	◐	◐	◐	◐			●	●	●	●	◐			●	◐		
E9								◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●		
H9								◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●		
F3	◐			●	◐	●	◐	◐			●	●	◐	◐	◐			●	●	●	●	◐			●	●		
F6								◐			●	◐	◐	●	◐			●	●	●	●	◐			●	●	◐	◐
J3	◐			●	◐	◐	●	◐			●	●	◐	◐	◐			●	●	●	●	◐			●	●		
J5								◐			●	◐	●	◐	◐			●	●	●	●	◐			●	◐		
J6								◐			●	◐	◐	●	◐			●	●	●	●	◐			●	●		
J7								◐			●	◐	◐	◐	◐			●	●	●	●	◐			●	●		
J9								◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●		
JA								◐			◐	●	◐	●	◐			●	●	●	●	◐			●	●		
JC								◐			◐	◐	●	●	◐			●	●	●	●	◐			●	●		
L1	◐			●	◐	◐	◐	◐			●	●	●	◐	◐			●	●	●	●	◐			●	●	●	●
L4								◐			●	◐	●	●	◐			●	●	●	●	◐			●	●		
L5								◐			●	◐	●	◐	◐			●	●	●	●	◐			●	●		
L8								◐			◐	●	●	●	◐			●	●	●	●	◐			●	◐		
L9								◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●		
LC								◐			◐	◐	●	●	◐			●	●	●	●	◐			●	◐		

Display of contents of malfunction (first digit)

Display of contents of malfunction (second digit)

Display 1 of malfunction in detail

Display 2 of malfunction in detail

*1

●	●	Master
●	◐	Slave1
◐	●	Slave2
◐	◐	System

<Monitor mode>

To enter the monitor mode, push the **MODE (BS1)** button when in "Setting mode 1".

<Selection of setting item>

Push the **SET (BS2)** button and set the LED display to a setting item.

<Confirmation of malfunction 1>

Push the **RETURN (BS3)** button once to display "First digit" of malfunction code.

<Confirmation of malfunction 2>

Push the **SET (BS2)** button once to display "Second digit" of malfunction code.

<Confirmation of malfunction 3>

Push the **SET (BS2)** button once to display "malfunction location".

<Confirmation of malfunction 4>

Push the **SET (BS2)** button once to display "master or slave 1 or slave 2" and "malfunction location".

Push the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

* Push the **MODE (BS1)** button and returns to "Setting mode 1".

Detail description on next page.

Contents of malfunction		Malfunction code
Open phase/Power supply imbalance	Imbalance of inverter power supply voltage	P1
Faulty temperature sensor of inverter radiation fin	Faulty thermistor of inverter fin	P4
Refrigerant shortage	Refrigerant shortage alarm	U0
Abnormal power supply voltage	Insufficient Inverter voltage	U2
	Faulty charge of capacitor in main inverter circuit	
	Malfunction due to SP-PAM overvoltage	
	Malfunction due to P-N short circuit	
No implementation of test-run		U3
Transmission error between indoor and outdoor unit	I/O transmission error	U4
	I/O transmission error	
Transmission error of other system	Indoor unit system abnormal in other system or other indoor unit system abnormal in own system	U9
Erroneous field setting	System transmission malfunction	UA
	Overconnection malfunction of indoor units	
	Malfunction of field setting	
	Refrigerant abnormal	
	Connection error (BP unit)	
Faulty system malfunction	Wiring error (Auto-address error)	UH
Conflict in wiring and piping, no setting for system	Conflict in wiring and piping	UF

○: ON ●: OFF ◐: Blink

Malfunction code	Confirmation of malfunction 1							Confirmation of malfunction 2							Confirmation of malfunction 3							Confirmation of malfunction 4						
	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P
P1	◐			◐	●	●	●	◐			●	●	●	◐	◐			●	●	●	●	◐			●	●		
P4								◐			●	◐	●	●	◐			●	●	●	●	◐			●	●		
U0	◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●	●	●	◐			●	●	◐	◐
U2								◐			●	●	◐	●	◐			●	●	●	●	◐			●	●	◐	◐
U3								◐			●	●	◐	◐	◐			●	●	●	●	◐			●	●	◐	◐
U4								◐			●	◐	●	●	◐			●	●	●	●	◐			●	●	◐	◐
U9								◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●	◐	◐
UA								◐			◐	●	◐	●	◐			●	●	●	●	◐			●	●	◐	◐
UH								◐			◐	●	◐	◐	◐			●	●	●	●	◐			●	●	◐	◐
UF								◐			◐	◐	◐	◐	◐			●	●	●	●	◐			●	●	◐	◐

Display of contents of malfunction (first digit)

Display of contents of malfunction (second digit)

Display 1 of malfunction in detail

Display 2 of malfunction in detail

*1

●	●	Master
●	◐	Slave1
◐	●	Slave2
◐	◐	System

3. Troubleshooting by Indication on the Remote Controller

3.1 "80" Indoor Unit: Error of External Protection Device


Remote Controller Display	80
Applicable Models	All indoor unit models
Method of Malfunction Detection	
Malfunction Decision Conditions	
Supposed Causes	<ul style="list-style-type: none"> ■ Actuation of external protection device ■ Improper field set ■ Defect of indoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

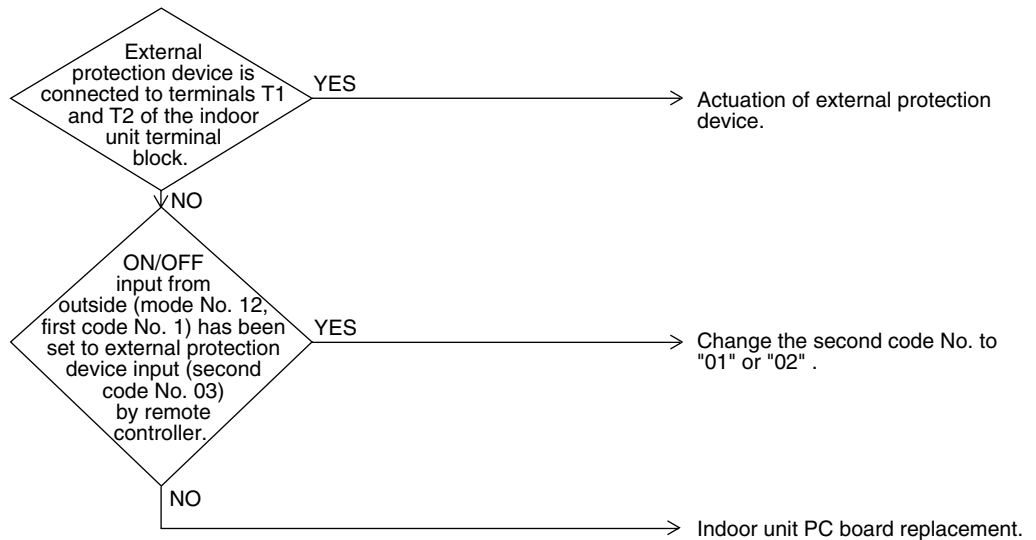

(V2776)

3.2 “A1” Indoor Unit: PC Board Defect

Remote Controller Display	A1
Applicable Models	All indoor unit models
Method of Malfunction Detection	Check data from E ² PROM.
Malfunction Decision Conditions	When data could not be correctly received from the E ² PROM E ² PROM : Type of nonvolatile memory. Maintains memory contents even when the power supply is turned off.
Supposed Causes	<ul style="list-style-type: none"> Defect of indoor unit PC board
Troubleshooting	<pre> graph TD Start[Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.] --> Step[Turn power supply OFF, then power ON again.] Step --> Decision{Does the system return to normal?} Decision -- YES --> External[External factor other than malfunction (for example, noise etc.)] Decision -- NO --> Replace[Replace the indoor unit PC board. (V2777)] </pre>


3.3 “E3” Indoor Unit: Malfunction of Drain Level Control System (S1L)

Remote Controller Display	E3
Applicable Models	FXCQ, FXFQ, FXZQ, FXKQ, FXSQ, FXMQ, FXHQ (Option), FXAQ (Option)
Method of Malfunction Detection	By float switch OFF detection
Malfunction Decision Conditions	When rise of water level is not a condition and the float switch goes OFF.
Supposed Causes	<ul style="list-style-type: none"> ■ 220~240V power supply is not provided ■ Defect of float switch or short circuit connector ■ Defect of drain pump ■ Drain clogging, upward slope, etc. ■ Defect of indoor unit PC board ■ Loose connection of connector

Troubleshooting

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

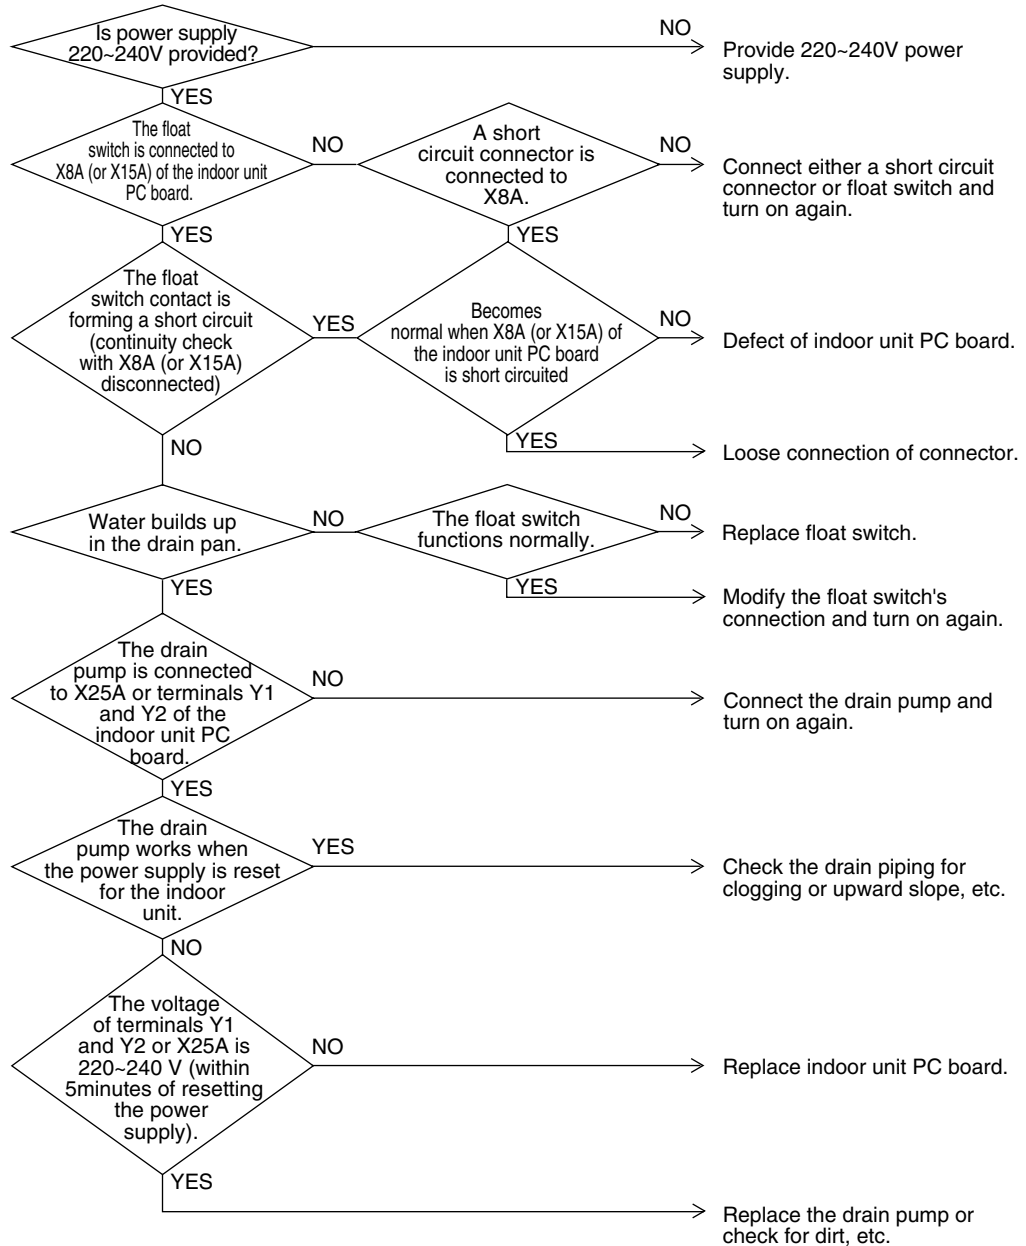

(V2778)

3.4 “85” Indoor Unit: Fan Motor (M1F) Lock, Overload


Remote Controller Display	85
Applicable Models	All indoor unit models
Method of Malfunction Detection	Detection by failure of signal for detecting number of turns to come from the fan motor
Malfunction Decision Conditions	When number of turns can't be detected even when output voltage to the fan is maximum
Supposed Causes	<ul style="list-style-type: none"> ■ Fan motor lock ■ Disconnected or faulty wiring between fan motor and PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

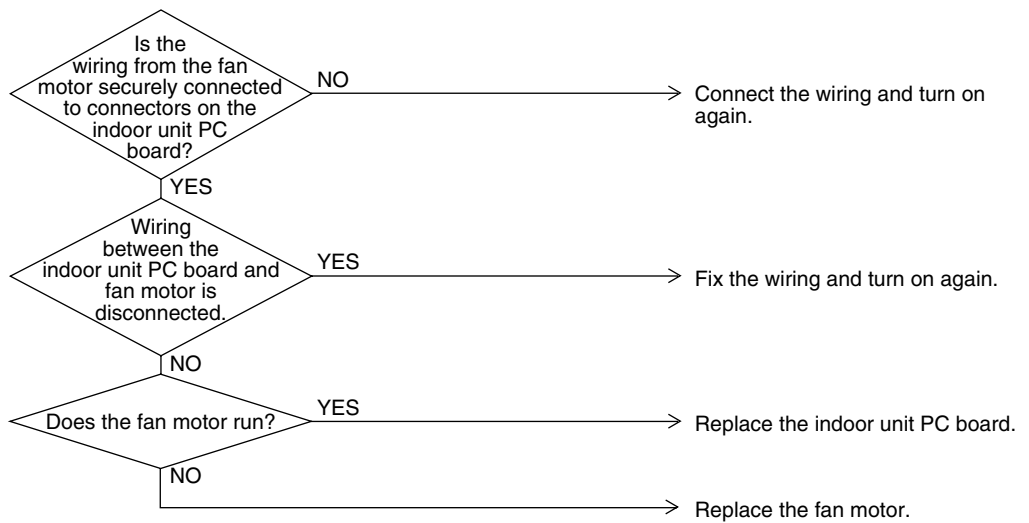

(V2779)

3.5 “87” Indoor Unit: Malfunction of Swing Flap Motor (M1S)


Remote Controller Display	87
Applicable Models	FXCQ, FXKQ, FXZQ, FXHQ, FXUQ
Method of Malfunction Detection	Utilizes ON/OFF of the limit switch when the motor turns.
Malfunction Decision Conditions	When ON/OFF of the microswitch for positioning cannot be reversed even though the swing flap motor is energized for a specified amount of time (about 30 seconds).
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of swing motor ■ Defect of connection cable (power supply and limit switch) ■ Defect of air flow direction adjusting flap-cam ■ Defect of indoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

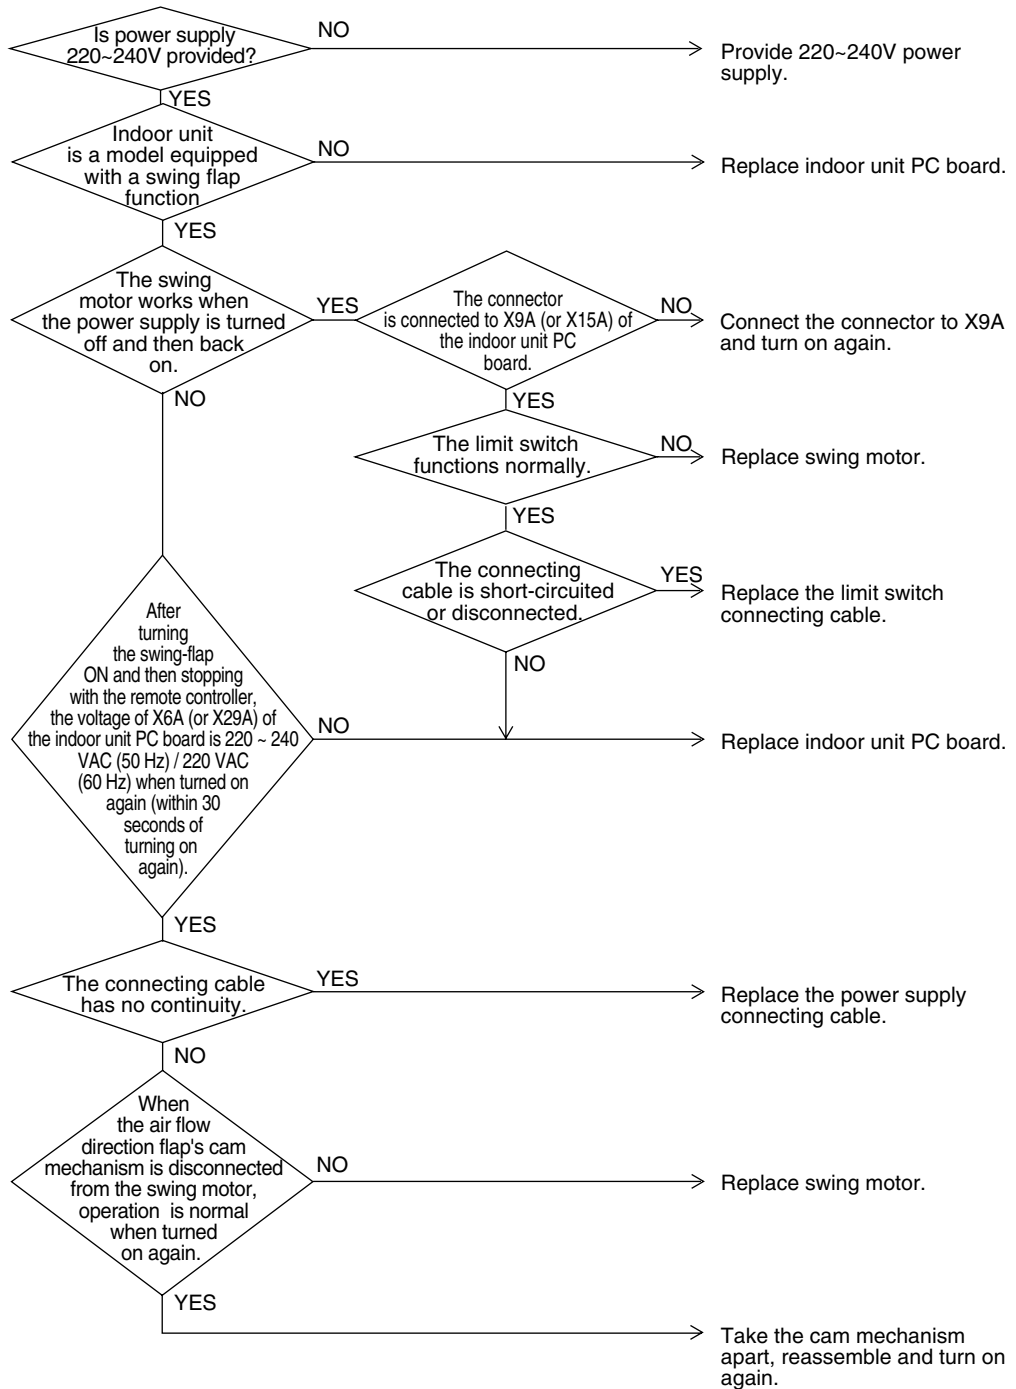

(V2780)

3.6 Abnormal Power Supply Voltage

Remote Controller Display	
Applicable Models	FXMQ40~125P
Method of Malfunction Detection	Detect malfunction checking the input voltage of fan motor.
Malfunction Decision Conditions	When the input voltage of fan motor is 150V and below, or 386V and above.
Supposed Causes	<p>The possible causes are:</p> <ul style="list-style-type: none"> ■ Power-supply voltage malfunction. ■ Connection defect on signal line. ■ Wiring defect. ■ Instantaneous blackout, others.
Troubleshooting	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;"> <p>Caution</p> </div> <p>Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.</p> </div> <pre> graph TD Start[Check the condition of the power source. ① Check if power-supply voltage is 220V - 240V ± 10%. ② Check if there is power open phase or faulty wiring. ③ Check if power-supply voltage side unbalance is within 6V.] --> D1{There are problems on the condition of power source described above.} D1 -- YES --> A1[Correct any fault.] D1 -- NO --> D2{"88" Reoccurrence of malfunction.} D2 -- YES --> A2[Check and correct each wiring.] D2 -- NO --> A3[It is possible to have external factor, such as brownout and instantaneous blackout.] </pre>

3.7 “E9” Indoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E)

Remote Controller Display

E9

Applicable Models

All indoor unit models

Method of Malfunction Detection

Malfunction Decision Conditions

Supposed Causes


- Malfunction of moving part of electronic expansion valve
- Defect of indoor unit PC board
- Defect of connecting cable

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

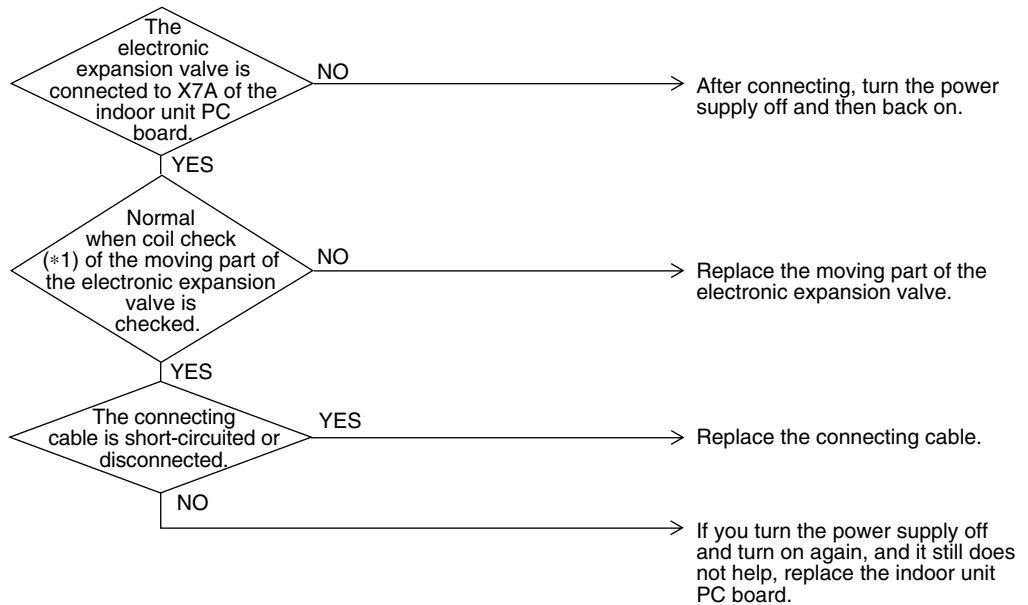

(V2781)

*1: Coil check method for the moving part of the electronic expansion valve
Discount the electronic expansion valve from the PC board and check the continuity between the connector pins.


(Normal)

Pin No.	1. White	2. Yellow	3. Orange	4. Blue	5. Red	6. Brown
1. White		x	○ Approx. 300Ω	x	○ Approx. 150Ω	x
2. Yellow			x	○ Approx. 300Ω	x	○ Approx. 150Ω
3. Orange				x	○ Approx. 150Ω	x
4. Blue					x	○ Approx. 150Ω
5. Red						x
6. Brown						


○: Continuity


x: No continuity

3.8 “FF” Indoor Unit: Drain Level above Limit

Remote Controller Display	
Applicable Models	FXCQ, FXSQ, FXKQ, FXMQ, FXDQ
Method of Malfunction Detection	Water leakage is detected based on float switch ON/OFF operation while the compressor is in non-operation.
Malfunction Decision Conditions	When the float switch changes from ON to OFF while the compressor is in non-operation.
Supposed Causes	<ul style="list-style-type: none"> ■ Humidifier unit (optional accessory) leaking ■ Defect of drain pipe (upward slope, etc.) ■ Defect of indoor unit PC board

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

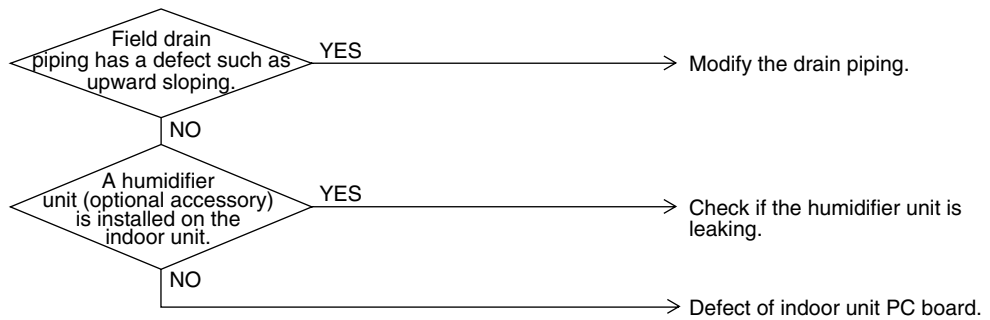

(V2782)

3.9 “AU” Indoor Unit: Malfunction of Capacity Determination Device

Remote
Controller
Display

AU

Applicable
Models

All indoor unit models

Method of
Malfunction
Detection

Capacity is determined according to resistance of the capacity setting adaptor and the memory inside the IC memory on the indoor unit PC board, and whether the value is normal or abnormal is determined.

Malfunction
Decision
Conditions

Operation and:

1. When the capacity code is not contained in the PC board's memory, and the capacity setting adaptor is not connected.
2. When a capacity that doesn't exist for that unit is set.

Supposed
Causes

- You have forgotten to install the capacity setting adaptor.
- Defect of indoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.




(V2783)

3.10 “E1” Indoor Unit: Failure of Transmission (Between Indoor unit PC Board and Fan PC Board)

Remote Controller Display	E1
Applicable Models	FXMQ40~125P
Method of Malfunction Detection	Check the condition of transmission between indoor PC board (A1P) and PC board for fan (A2P) using computer.
Malfunction Decision Conditions	When normal transmission is not conducted for certain duration.
Supposed Causes	<ul style="list-style-type: none"> ■ Connection defect of the connector between indoor PC board (A1P) and PC board for fan (A2P). ■ Malfunction of indoor PC board (A1P). ■ Malfunction of PC board for fan (A2P). ■ External factor, such as instantaneous blackout.

Troubleshooting

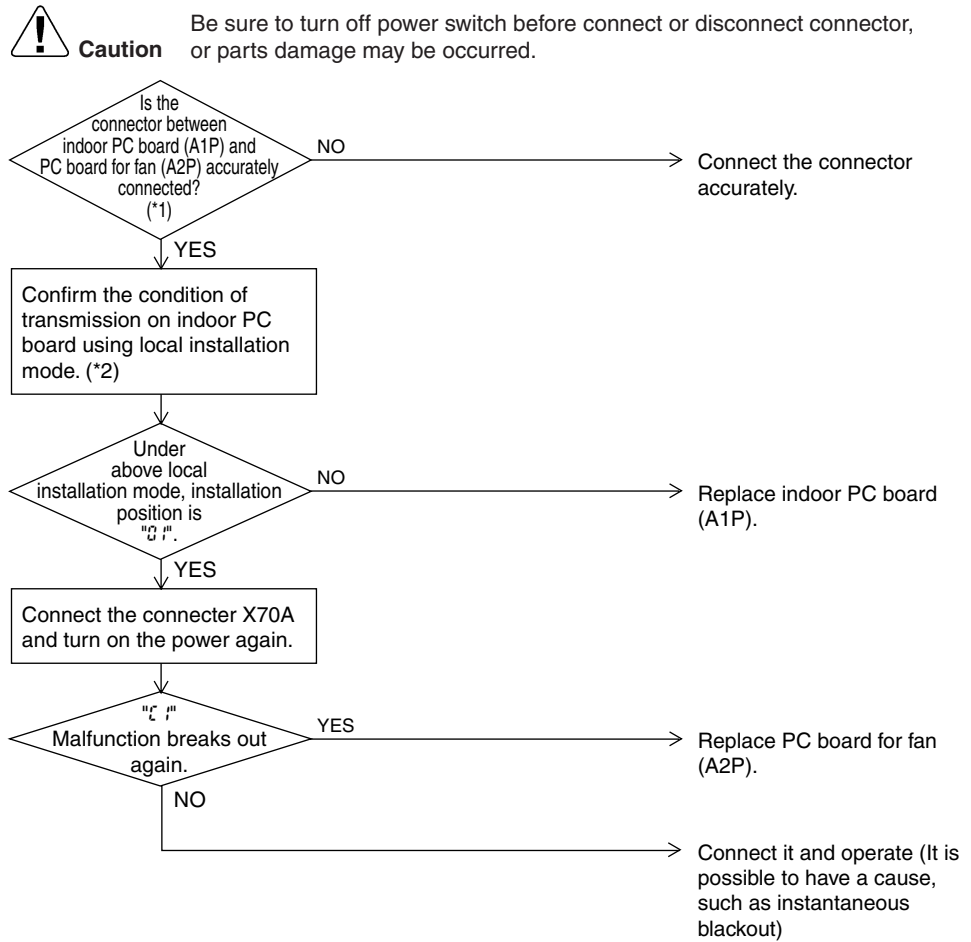

*1. Pull out and insert the connector once and check it is absolutely connected.

*2. Method to check transmission part of indoor PC board.

- ① Turn off the power and remove the connector X70A of indoor PC board (A1P).
- ② Short-circuit X70A.
- ③ After turning on the power, check below numbers under local setting remote control.
(Confirmation: Setting position NO. at the condition of setting switch No. 21 on mode No. 41)



Determination

01: Normal
Other than 01: Transmission defect on indoor PC board

★ After confirmation, turn off the power, take off the short-circuit and connect X70A back to original condition.

3.11 “E4” Indoor Unit: Malfunction of Thermistor (R2T) for Heat Exchanger

Remote Controller Display

E4

Applicable Models

All indoor unit models

Method of Malfunction Detection

Malfunction detection is carried out by temperature detected by heat exchanger thermistor.

Malfunction Decision Conditions

When the heat exchanger thermistor becomes disconnected or shorted while the unit is running.

Supposed Causes


- Defect of thermistor (R2T) for liquid pipe
- Defect of indoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

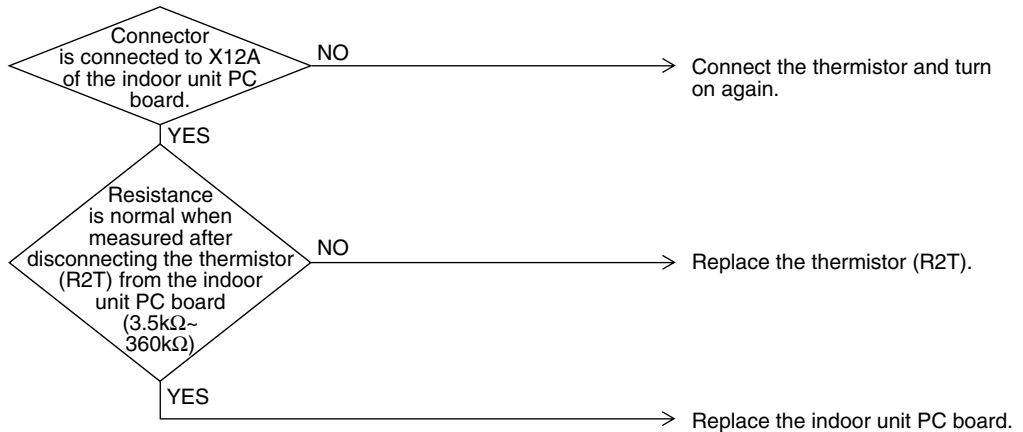

(V2784)



* Refer to thermistor resistance / temperature characteristics table on P251.

3.12 “E5” Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes

Remote
Controller
Display

E5

Applicable
Models

All indoor unit models

Method of
Malfunction
Detection

Malfunction detection is carried out by temperature detected by gas pipe thermistor.

Malfunction
Decision
Conditions

When the gas pipe thermistor becomes disconnected or shorted while the unit is running.

Supposed
Causes


- Defect of indoor unit thermistor (R3T) for gas pipe
- Defect of indoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

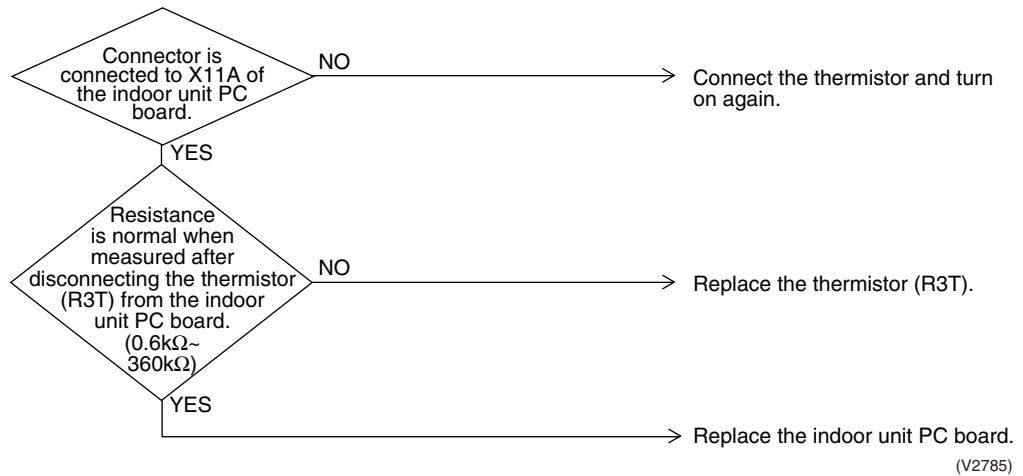

* Refer to thermistor resistance / temperature characteristics table on P251.

3.13 “CE” Indoor Unit: Failure of Combination (Between Indoor unit PC Board and Fan PC Board)

Remote Controller Display



Applicable Models

FXMQ40~125P

Method of Malfunction Detection

Conduct open line detection with PC board for fan (A2P) using indoor PC board (A1P).

Malfunction Decision Conditions

When the communication data of PC board for fan (A2P) is determined as incorrect.

Supposed Causes


- The possible causes are:
- Malfunction of PC board for fan (A2P).
 - Connection defect of capacity setting adaptor.
 - Setting mistake on site.

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

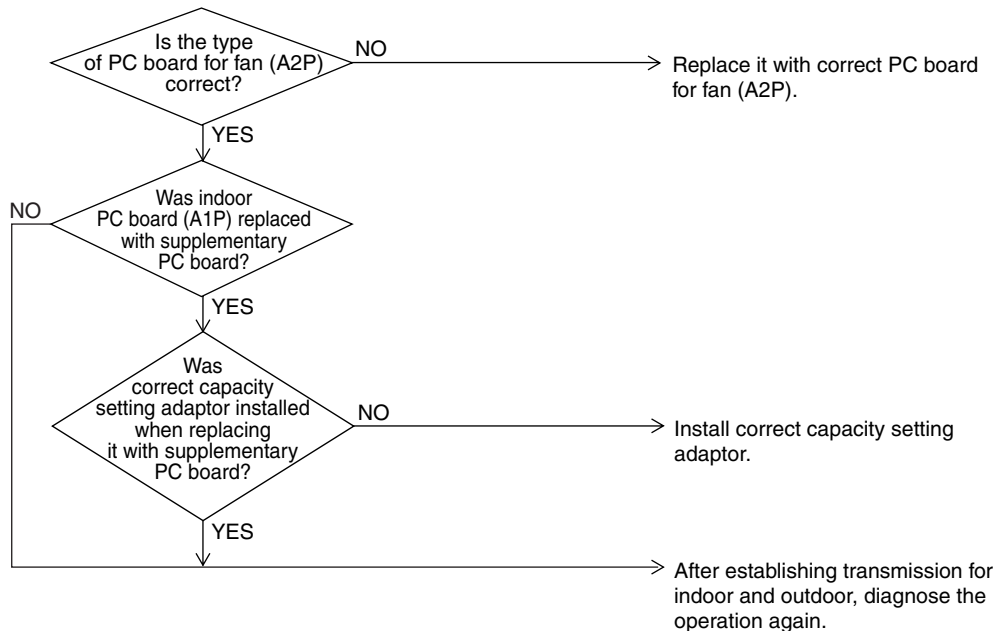

3.14 “E9” Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air

Remote
Controller
Display

E9

Applicable
Models

All indoor unit models

Method of
Malfunction
Detection

Malfunction detection is carried out by temperature detected by suction air temperature thermistor.

Malfunction
Decision
Conditions

When the suction air temperature thermistor becomes disconnected or shorted while the unit is running.

Supposed
Causes


- Defect of indoor unit thermistor (R1T) for air inlet
- Defect of indoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

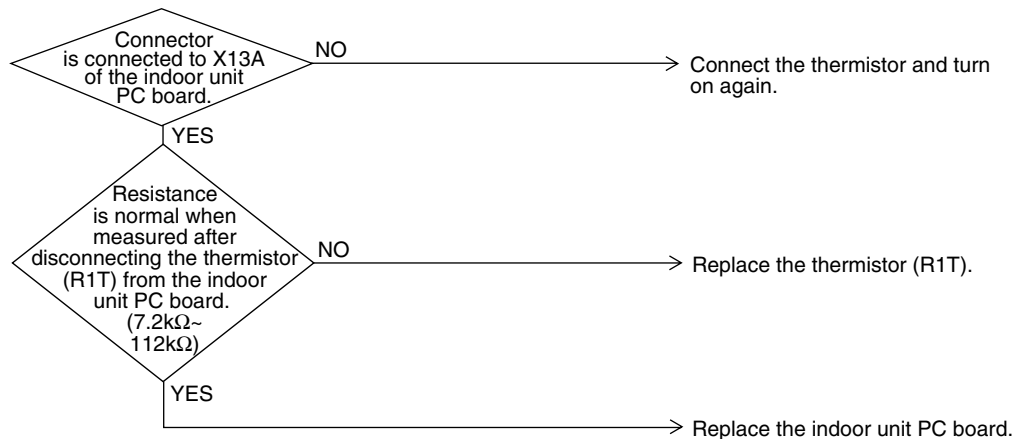

(V2786)



* Refer to thermistor resistance / temperature characteristics table on P251.

3.15 “CA” Indoor Unit: Malfunction of Thermistor for Discharge Air

Remote Controller Display



Applicable Models

All indoor unit models

Method of Malfunction Detection

Malfunction detection is carried out by temperature detected by discharge air temperature thermistor.

Malfunction Decision Conditions

When the discharge air temperature thermistor becomes disconnected or shorted while the unit is running.

Supposed Causes


- Defect of indoor unit thermistor for air outlet
- Defect of indoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

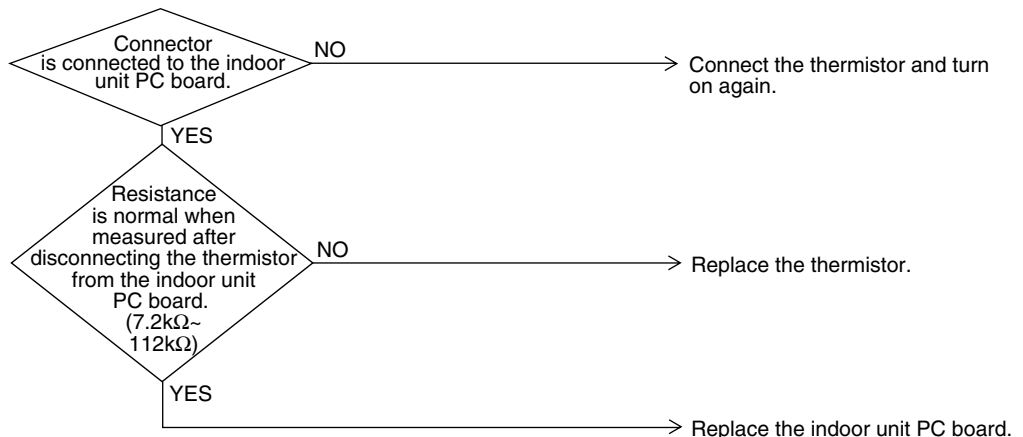

(V2786)



* Refer to thermistor resistance / temperature characteristics table on P251.

3.16 "CC" Indoor Unit: Malfunction of Humidity Sensor System

Remote
Controller
Display



Applicable
Models

FXFQ

Method of
Malfunction
Detection

Even if a malfunction occurs, operation still continues.
Malfunction is detected according to the moisture (output voltage) detected by the moisture sensor.

Malfunction
Decision
Conditions

When the moisture sensor is disconnected or short-circuited

Supposed
Causes


- Faulty sensor
- Disconnection

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

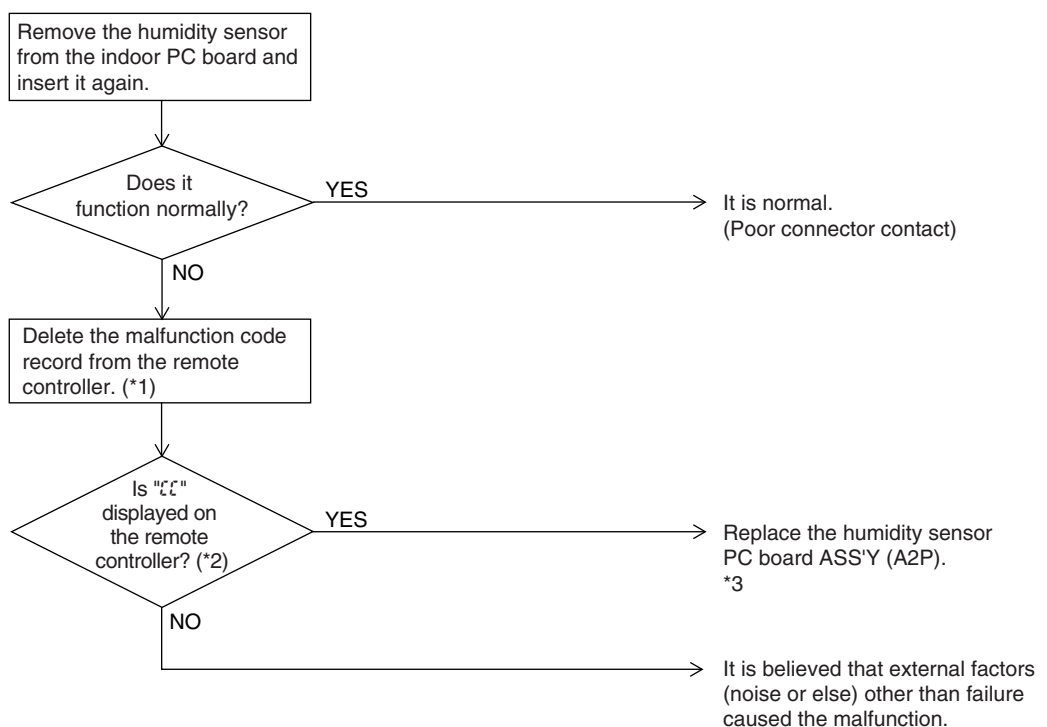


*1: To delete the record, the **ON/OFF** button of the remote controller must be pushed and held for 5 seconds in the **check mode**.


*2: To display the code, the **Inspection/Test Operation** button of the remote controller must be pushed and held in the normal mode.


*3: If "CC" is displayed even after replacing the humidity sensor PC board ASS'Y (A2P) and taking the steps *1 and 2, replace the indoor PC board ASS'Y (A1P).

3.17 “CU” Indoor Unit: Malfunction of Thermostat Sensor in Remote Controller


Remote Controller Display	
Applicable Models	All indoor unit models
Method of Malfunction Detection	Malfunction detection is carried out by temperature detected by remote controller air temperature thermistor. (Note1)
Malfunction Decision Conditions	When the remote controller air temperature thermistor becomes disconnected or shorted while the unit is running.
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of remote controller thermistor ■ Defect of remote controller PC board


Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

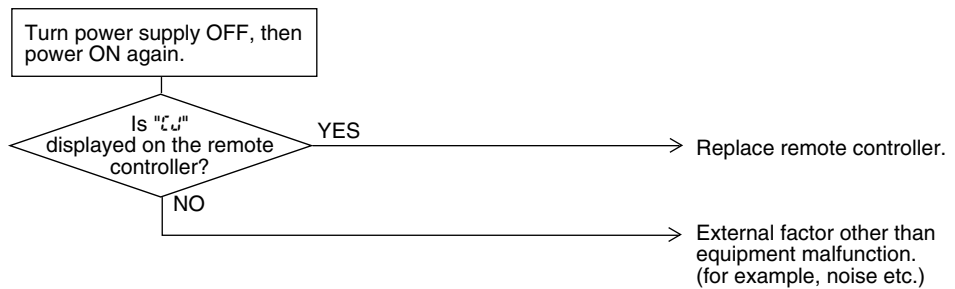

(V2787)

 **Note:** In case of remote controller thermistor malfunction, unit is still operable by suction air thermistor on indoor unit.


 * Refer to thermistor resistance / temperature characteristics table on P251.

3.18 “E1” Outdoor Unit: PC Board Defect

Remote Controller Display	E1
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Check data from E ² PROM
Malfunction Decision Conditions	When data could not be correctly received from the E ² PROM E ² PROM : Type of nonvolatile memory. Maintains memory contents even when the power supply is turned off.
Supposed Causes	<ul style="list-style-type: none"> Defect of outdoor unit PC board (A1P)
Troubleshooting	<pre> graph TD Start[Turn off the power once and turn on again.] --> Decision{Return to normal?} Decision -- YES --> External[External factor other than malfunction (for example, noise etc.).] Decision -- NO --> Replace[Replace the outdoor unit main PC Board (A1P).] </pre>


Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

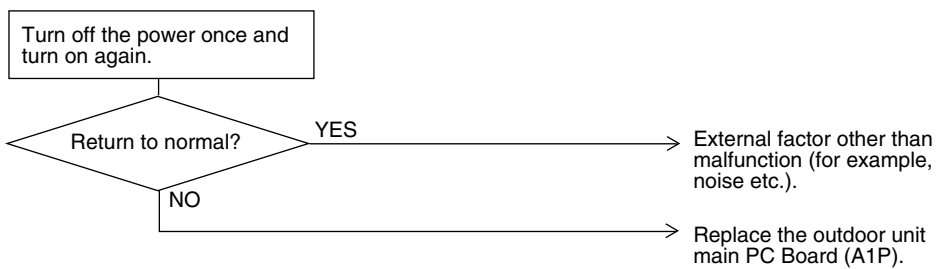

(V3064)

3.19 “E3” Outdoor Unit: Actuation of High Pressure Switch

<p>Remote Controller Display</p>	<p style="text-align: center; font-size: 2em; color: blue;">E3</p>
<p>Applicable Models</p>	<p>RXYSQ4~6PA</p>
<p>Method of Malfunction Detection</p>	<p>Abnormality is detected when the contact of the high pressure protection switch opens.</p>
<p>Malfunction Decision Conditions</p>	<p>Error is generated when the HPS activation count reaches the number specific to the operation mode. (Reference) Operating pressure of high pressure switch Operating pressure: 4.0MPa Reset pressure: 3.0MPa</p>
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Actuation of outdoor unit high pressure switch ■ Defect of High pressure switch ■ Defect of outdoor unit PC board (A1P) ■ Instantaneous power failure ■ Faulty high pressure sensor

Troubleshooting




Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Check for the points shown below.
 ① Is the stop valve open?
 ② Is the HPS connector properly connected to the main PC board?
 ③ Does the high pressure switch have continuity?




· Mount a pressure gauge on the high-pressure service port.
 · Connect the Service Checker.
 · Reset the operation using the remote controller, and then restart the operation.

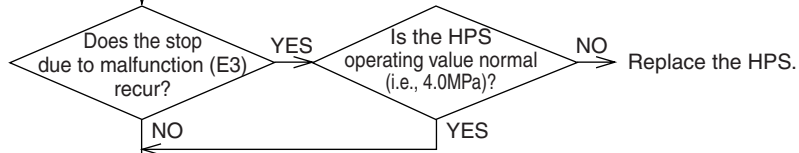

· The high pressure sensor is normal, and the pressure detected with the PC board is also normal.
 · The high pressure has really become high.

CHECK 1 Refer to information on P.218, remove the causes by which the high pressure has become high.

- *1: Make a comparison between the voltage of the pressure sensor (*4) and that read by the pressure gauge.
 (As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure according to information on P.253.)
- *2: Make a comparison between the high pressure value checked with the Service Checker and the voltage of the pressure sensor (see *1).
- *3: Make measurement of voltage of the pressure sensor.

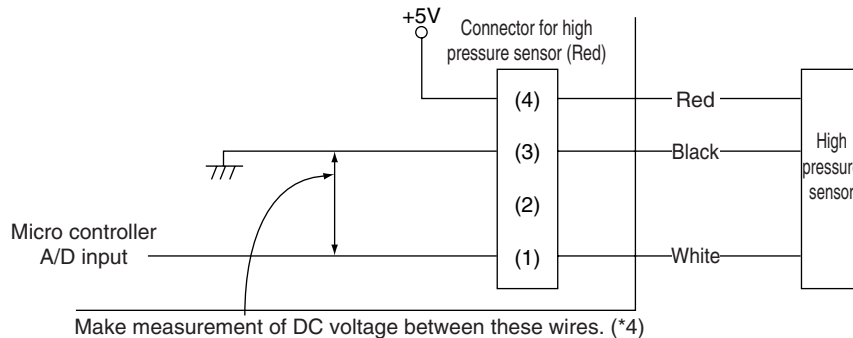


3.20 “E4” Outdoor Unit: Actuation of Low Pressure Sensor

<p>Remote Controller Display</p>	<p>E4</p>
<p>Applicable Models</p>	<p>RXYSQ4~6PA</p>
<p>Method of Malfunction Detection</p>	<p>Abnormality is detected by the pressure value with the low pressure sensor.</p>
<p>Malfunction Decision Conditions</p>	<p>Error is generated when the low pressure is dropped under specific pressure. Operating pressure:0.07MPa</p>
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Abnormal drop of low pressure (Lower than 0.07MPa) ■ Defect of low pressure sensor ■ Defect of outdoor unit PC board (A1P) ■ Stop valve is not opened.


Troubleshooting



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

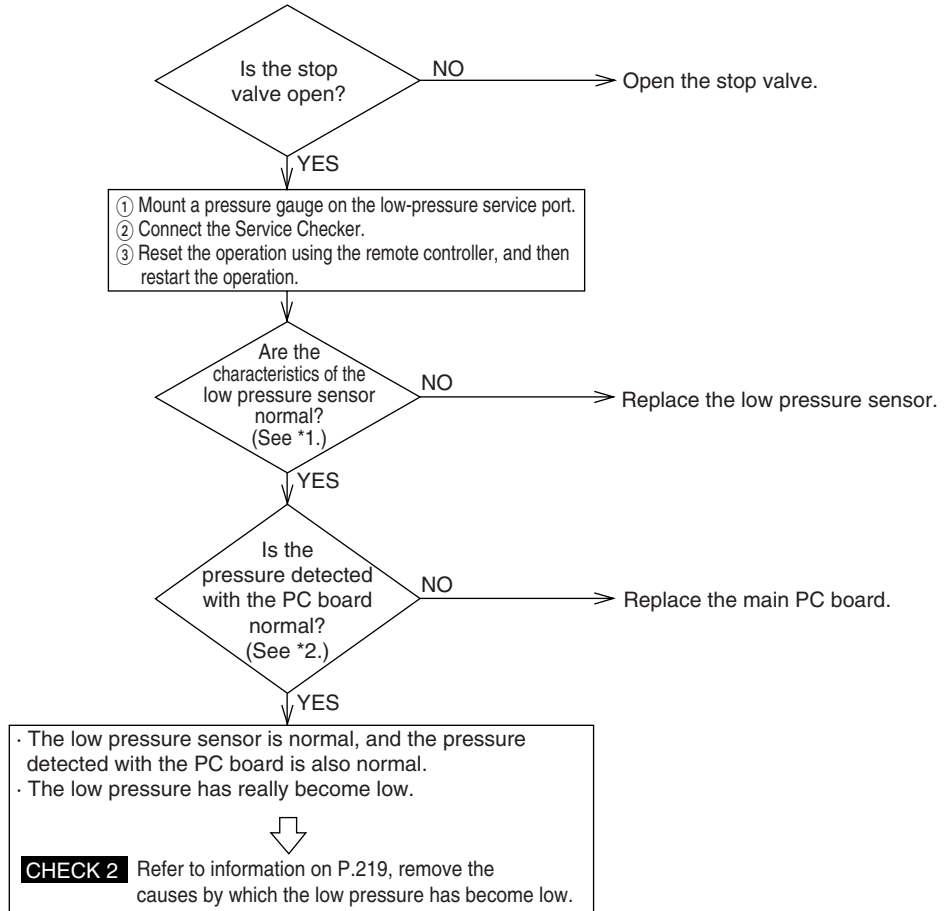

- *1: Make a comparison between the voltage of the pressure sensor (*4) and that read by the pressure gauge.
(As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure according to information on P.253.)
- *2: Make a comparison between the low pressure value checked with the Service Checker and the voltage of the pressure sensor (see *1).
- *3: Make measurement of voltage of the pressure sensor.

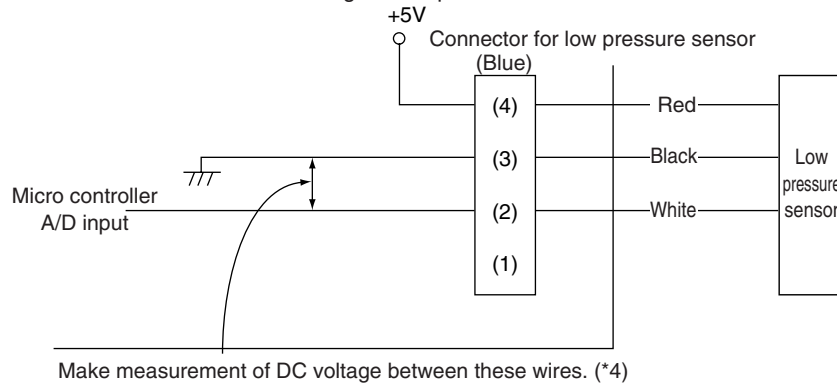

3.21 “E5” Inverter Compressor Motor Lock


Remote Controller Display	E5
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Inverter PC board takes the position signal from UVW line connected between the inverter and compressor, and the malfunction is detected when any abnormality is observed in the phase-current waveform.
Malfunction Decision Conditions	This malfunction will be output when the inverter compressor motor does not start up even in forced startup mode.
Supposed Causes	<ul style="list-style-type: none"> ■ Compressor lock ■ High differential pressure (0.5MPa or more) ■ Incorrect UVW wiring ■ Faulty inverter PC board ■ Stop valve is left in closed.

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

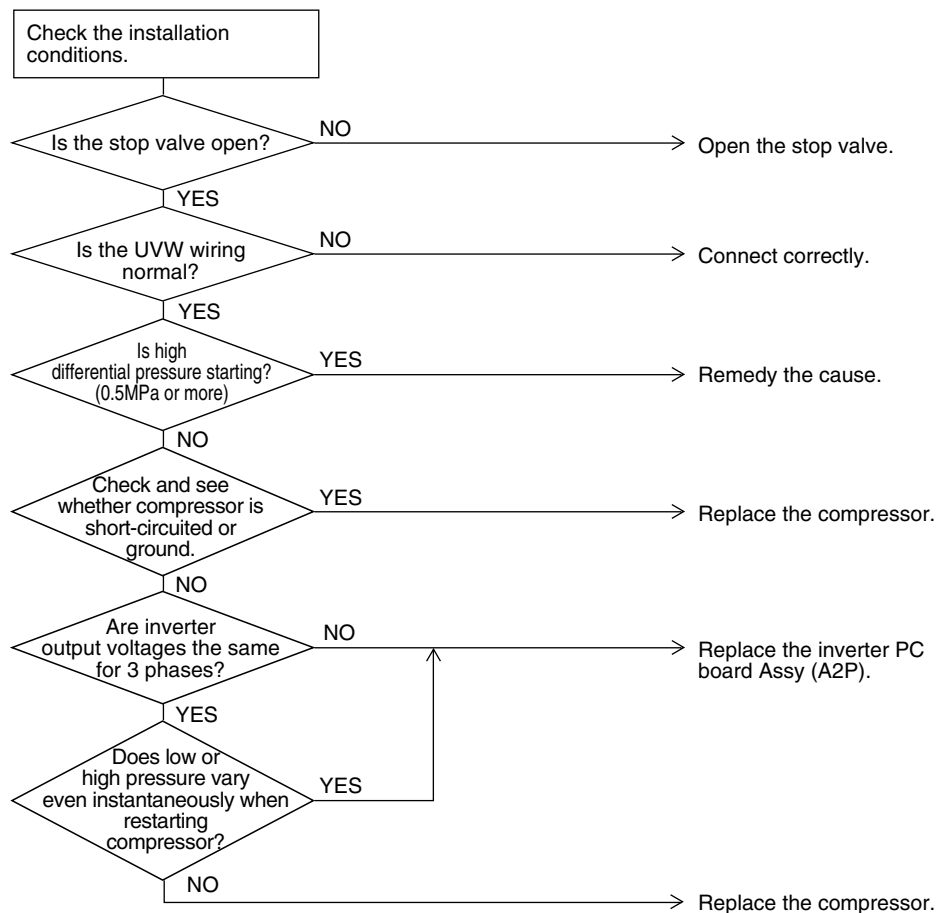


(V2793)

3.22 “E7” Malfunction of Outdoor Unit Fan Motor

Remote Controller Display	E7
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Malfunction of fan motor system is detected according to the fan speed detected by hall IC when the fan motor runs.
Malfunction Decision Conditions	<ul style="list-style-type: none"> ■ When the fan runs with speed less than a specified one for 6 seconds or more when the fan motor running conditions are met ■ When malfunction is generated 4 times, the system shuts down.
Supposed Causes	<ul style="list-style-type: none"> ■ Malfunction of fan motor ■ The harness connector between fan motor and PC board is left in disconnected, or faulty connector ■ Fan does not run due to foreign matters tangled ■ Clearing condition: Operate for 5 minutes (normal) ■ Open phase L1 or open phase N.

Troubleshooting

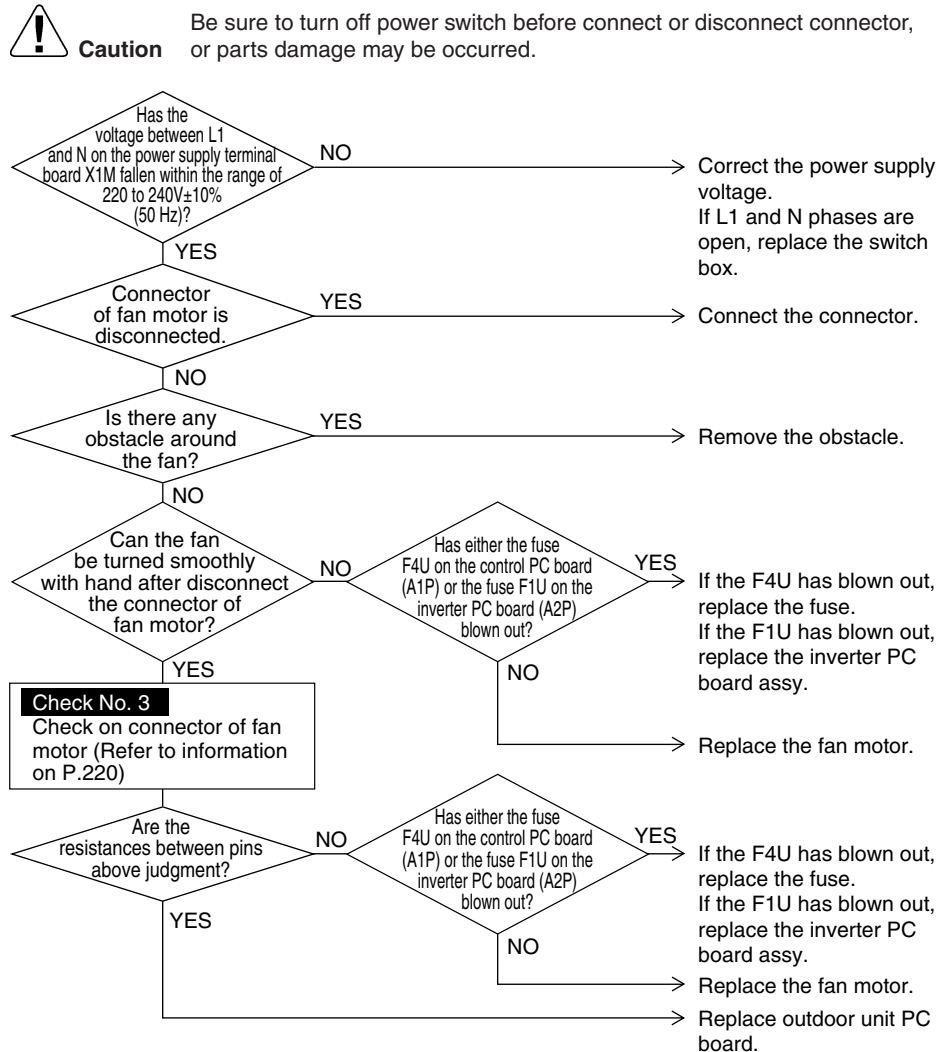

3.23 “E9” Outdoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y3E)


Remote Controller Display	E9
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Check disconnection of connector Check continuity of expansion valve coil
Malfunction Decision Conditions	Error is generated under no common power supply when the power is on.
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of moving part of electronic expansion valve ■ Defect of outdoor unit PC board (A1P) ■ Defect of connecting cable

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

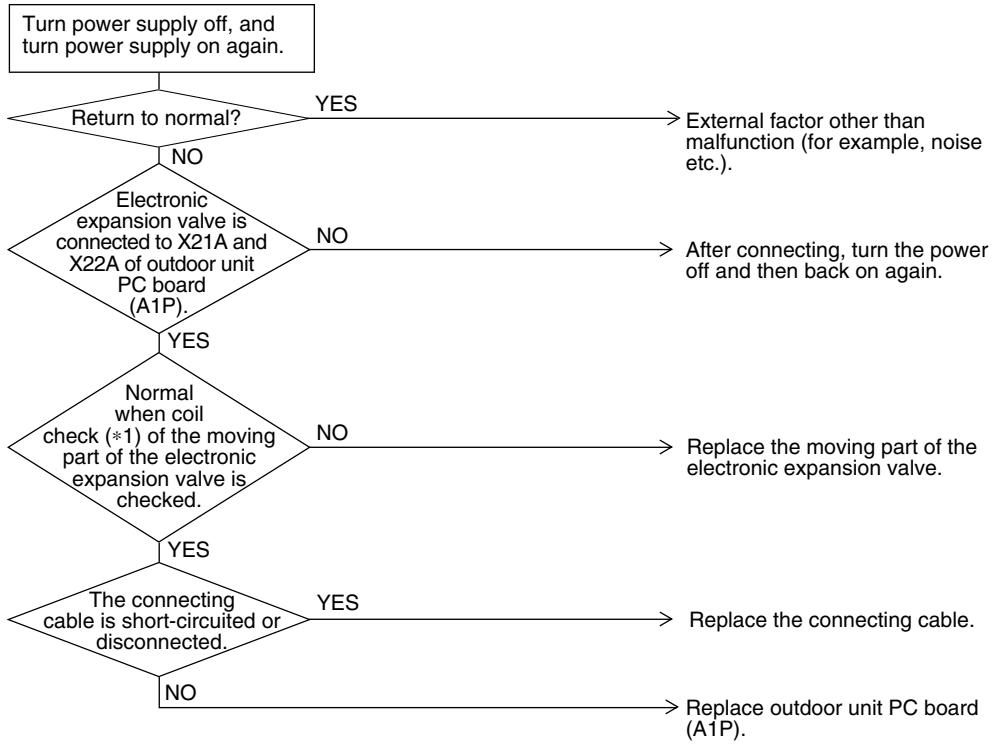

(V3067)

*Make measurement of resistance between the connector pins, and then make sure the resistance falls in the range of 40 to 50Ω.

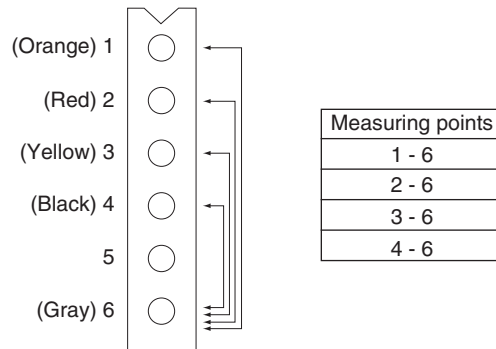

(V3067)

3.24 “F3” Outdoor Unit: Abnormal Discharge Pipe Temperature

Remote Controller Display

F3

Applicable Models

RXYSQ4~6PA

Method of Malfunction Detection

Abnormality is detected according to the temperature detected by the discharge pipe temperature sensor.

Malfunction Decision Conditions

When the discharge pipe temperature rises to an abnormally high level
When the discharge pipe temperature rises suddenly

Supposed Causes


- Faulty discharge pipe temperature sensor
- Faulty connection of discharge pipe temperature sensor
- Faulty outdoor unit PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

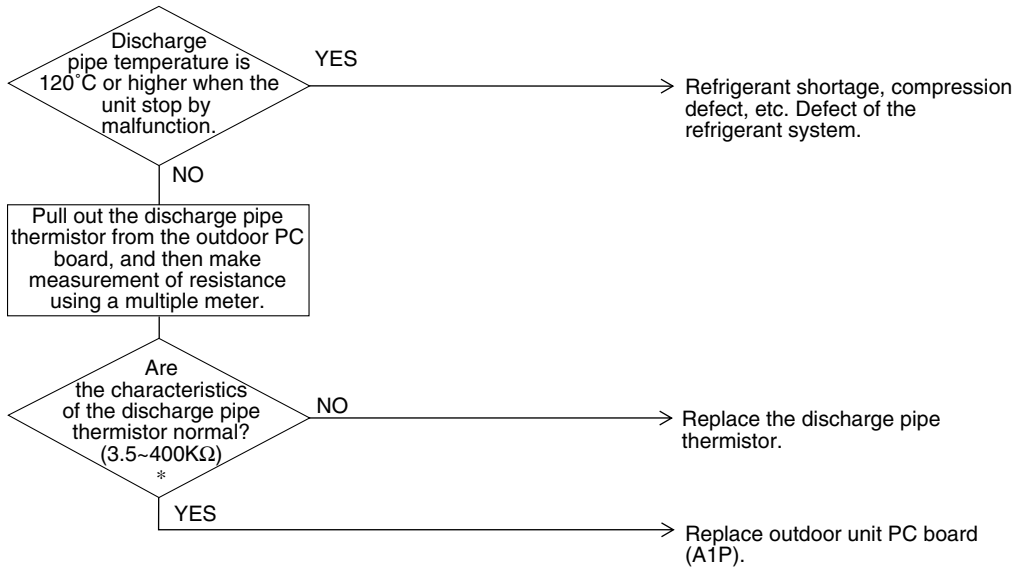

(V3068)



* Refer to “Thermistor Resistance / Temperature Characteristics” table on P252.

3.25 “F8” Outdoor Unit: Refrigerant Overcharged

Remote
Controller
Display

F8

Applicable
Models

RXYSQ4~6PA

Method of
Malfunction
Detection

Excessive charging of refrigerant is detected by using the heat exchanging deicer temperature during a check operation.

Malfunction
Decision
Conditions

When the amount of refrigerant, which is calculated by using the heat exchanging deicer temperature during a check run, exceeds the standard.

Supposed
Causes


- Refrigerant overcharge
- Misalignment of the thermistor for heat exchanger
- Defect of the thermistor for heat exchanger

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

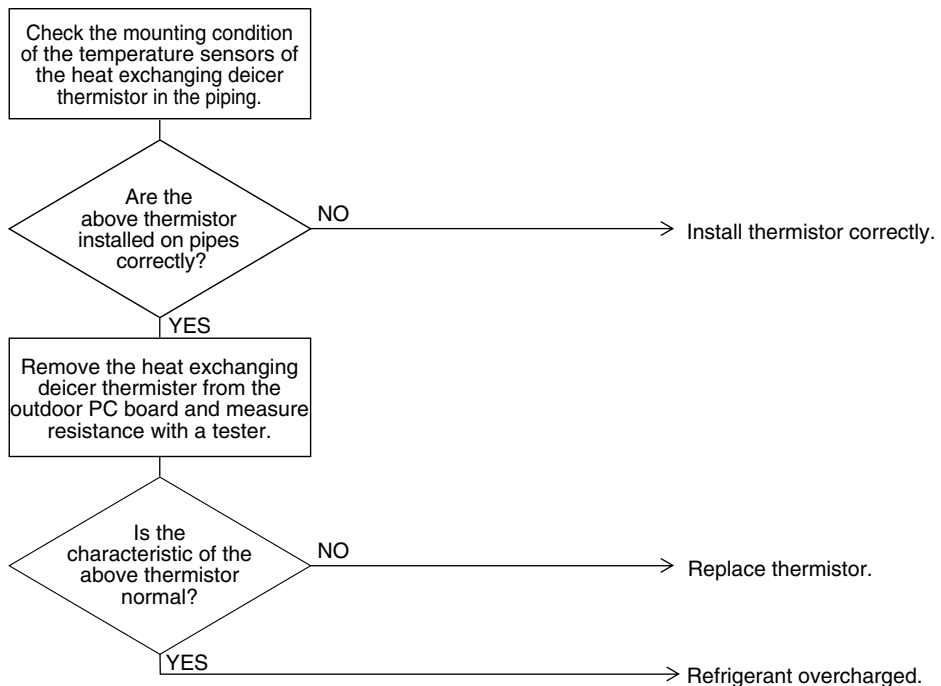

(V2797)




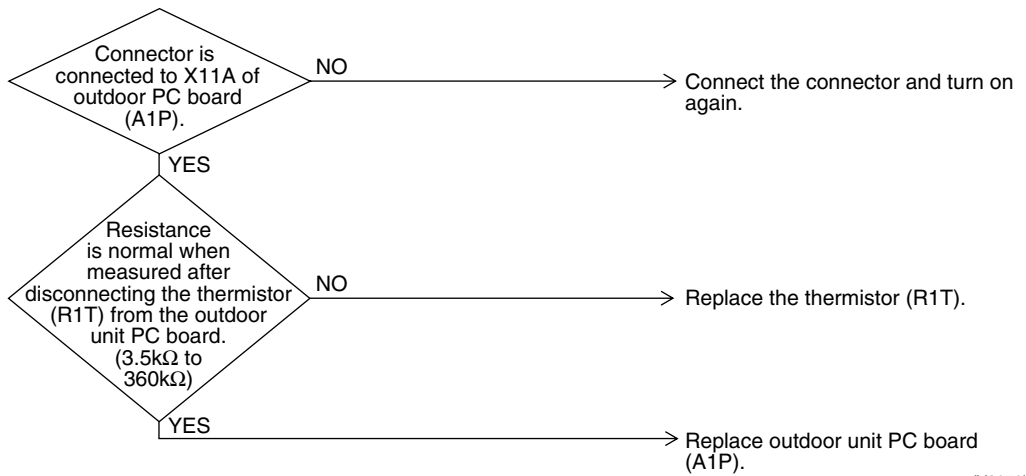
* Refer to “Thermistor Resistance / Temperature Characteristics” table on P251.

3.26 “H9” Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air

Remote Controller Display	H9
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Malfunction is detected from the temperature detected by the outdoor air thermistor.
Malfunction Decision Conditions	When the outside air temperature thermistor has short circuit or open circuit.
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of thermistor (R1T) for outdoor air ■ Defect of outdoor unit PC board (A1P)

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(V3070)



* Refer to “Thermistor Resistance / Temperature Characteristics” table on P251.

3.27 “U3” Outdoor Unit: Malfunction of Discharge Pipe Thermistor (R2T)

Remote
Controller
Display

U3

Applicable
Models

RXYSQ4~6PA

Method of
Malfunction
Detection

Malfunction is detected from the temperature detected by discharge pipe temperature thermistor.

Malfunction
Decision
Conditions

When a short circuit or an open circuit in the discharge pipe temperature thermistor is detected.

Supposed
Causes


- Defect of thermistor (R2T) for outdoor unit discharge pipe
- Defect of outdoor unit PC board (A1P)

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

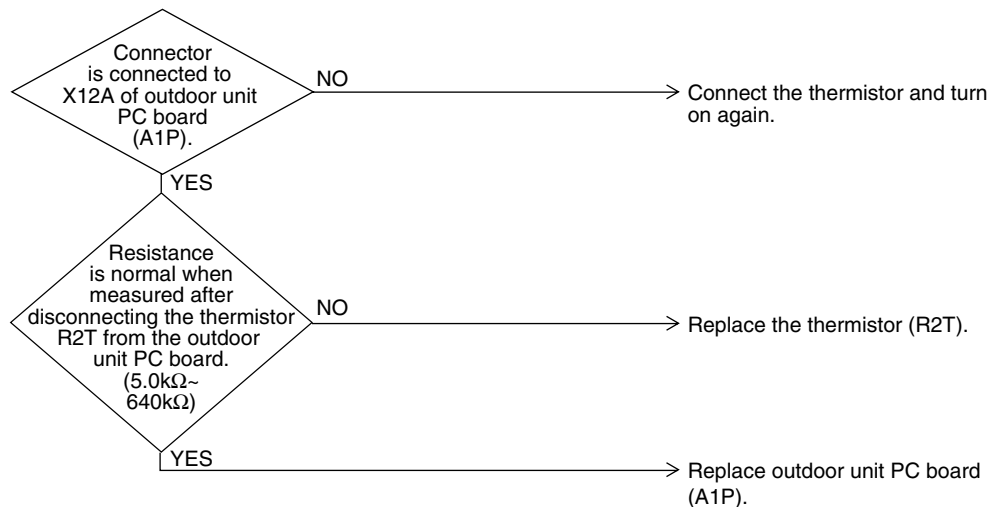

(V3072)



* Refer to thermistor resistance / temperature characteristics table on P252.

3.28 “U5” Outdoor Unit: Malfunction of Thermistor (R3T, R5T) for Suction Pipe 1, 2

Remote Controller Display



Applicable Models

RXYSQ4~6PA

Method of Malfunction Detection

Malfunction is detected from the temperature detected by the thermistor for suction pipe 1, 2.

Malfunction Decision Conditions

When a short circuit or an open circuit in the thermistor for suction pipe 1, 2 are detected.

Supposed Causes


- Defect of thermistor (R3T, R5T) for outdoor unit suction pipe
- Defect of outdoor unit PC board (A1P)

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

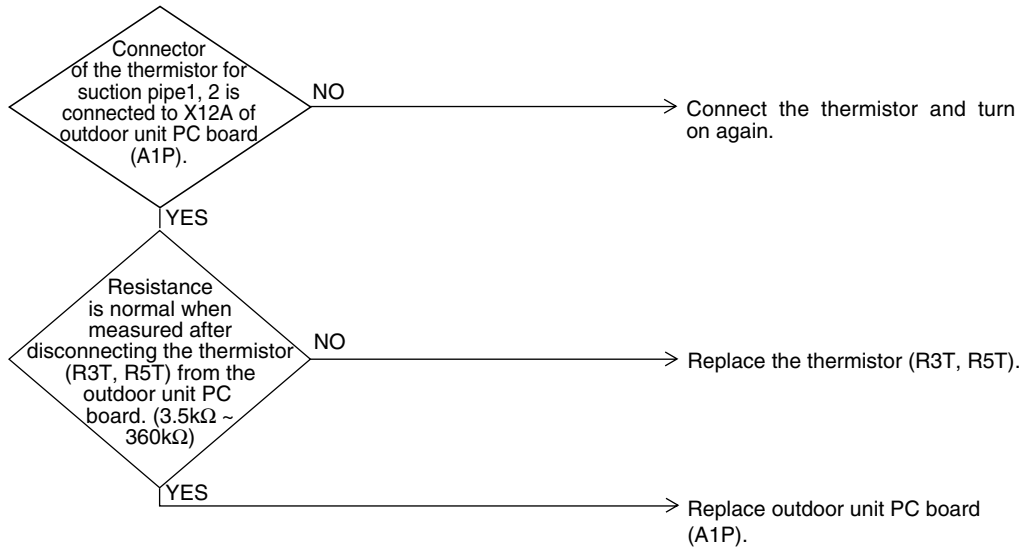

(V3073)



* Refer to thermistor resistance / temperature characteristics table on P251.

3.29 “UE” Outdoor Unit: Malfunction of Thermistor (R6T)

Remote
Controller
Display



Applicable
Models

RXYSQ4~6PA

Method of
Malfunction
Detection

Malfunction is detected from the temperature detected by the heat exchanger thermistor.

Malfunction
Decision
Conditions

When a short circuit or an open circuit in the heat exchange thermistor is detected.

Supposed
Causes


- Defect of thermistor (R6T) for outdoor unit heat exchanger
- Defect of outdoor unit PC board (A1P)

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

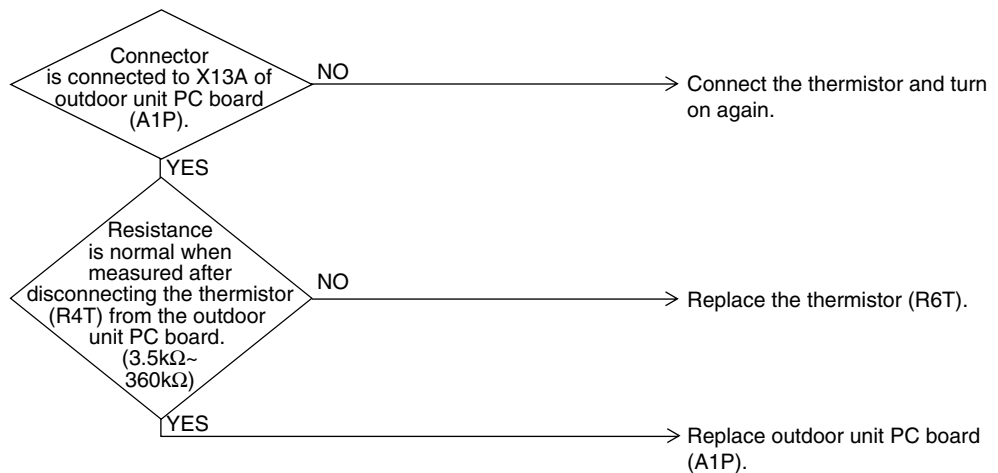

(V3074)



* Refer to thermistor resistance / temperature characteristics table on P251.

3.30 “” Outdoor Unit: Malfunction of Thermistor (R7T) for Outdoor Unit Liquid Pipe

Remote Controller Display



Applicable Models

RXYSQ4~6PA

Method of Malfunction Detection

Malfunction is detected from the temperature detected by the liquid pipe thermistor.

Malfunction Decision Conditions

When a short circuit or an open circuit in the heat exchange thermistor is detected.

Supposed Causes


- Defect of thermistor (R7T) for outdoor unit liquid pipe
- Defect of outdoor unit PC board (A1P)

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

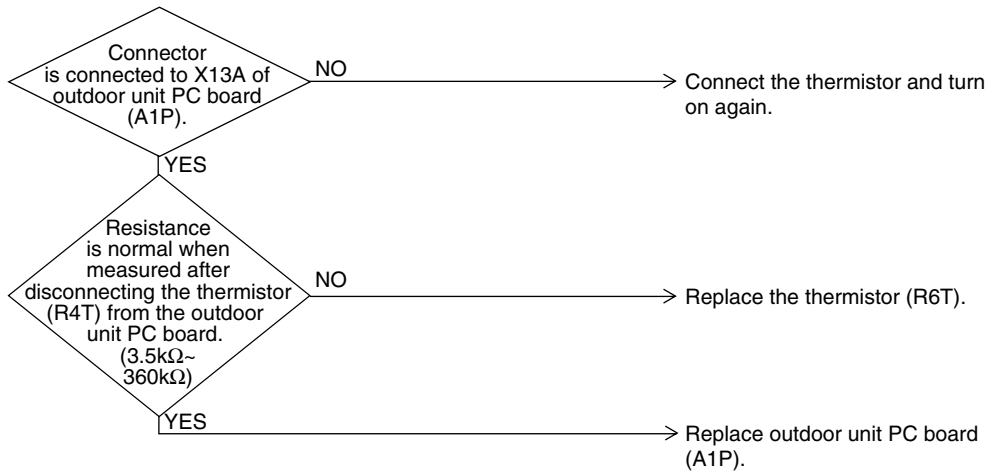


(V3074)




* Refer to thermistor resistance / temperature characteristics table on P251.

3.31 “U9” Outdoor Unit: Malfunction of Thermistor (R4T)

Remote Controller Display	
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Malfunction is detected according to the temperature detected by subcooling heat exchanger gas pipe thermistor.
Malfunction Decision Conditions	When the subcooling heat exchanger gas pipe thermistor is short circuited or open.
Supposed Causes	<ul style="list-style-type: none"> ■ Faulty subcooling heat exchanger gas pipe thermistor (R4T) ■ Faulty outdoor unit PC board
Troubleshooting	

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

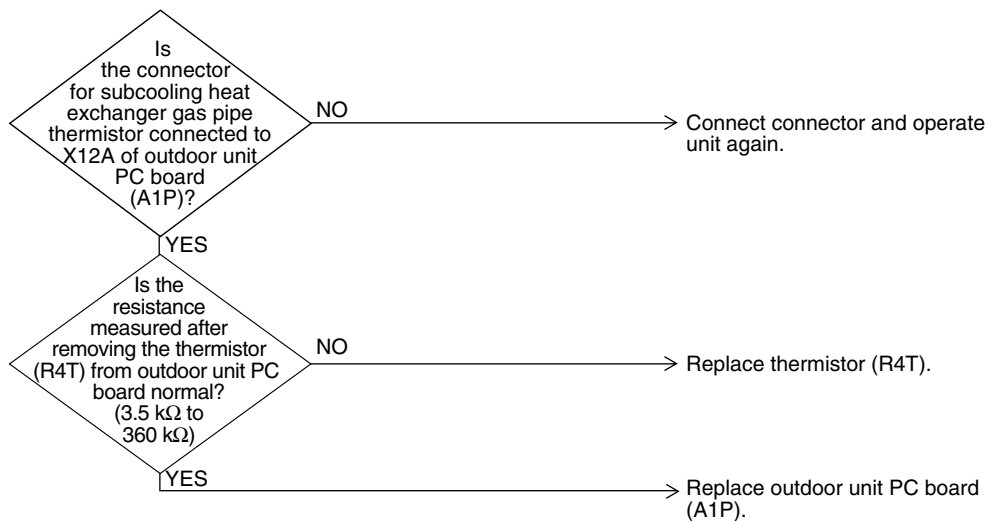


(V3075)




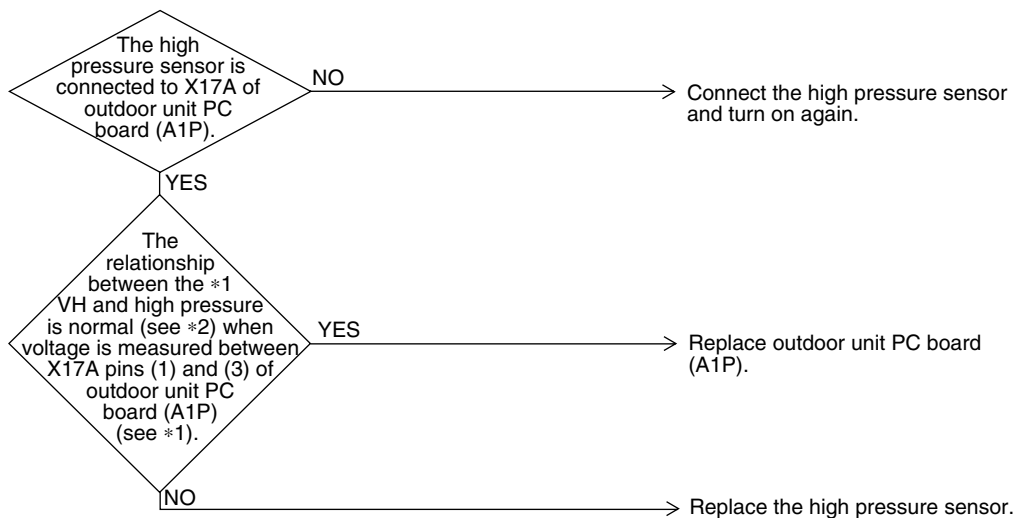
* Refer to “Thermistor Resistance / Temperature Characteristics” table on P251.

3.32 “UR” Outdoor Unit: Malfunction of High Pressure Sensor

Remote Controller Display	
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Malfunction is detected from the pressure detected by the high pressure sensor.
Malfunction Decision Conditions	When the high pressure sensor is short circuit or open circuit.
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of high pressure sensor ■ Connection of low pressure sensor with wrong connection. ■ Defect of outdoor unit PC board.


Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(V2806)

*1: Voltage measurement point

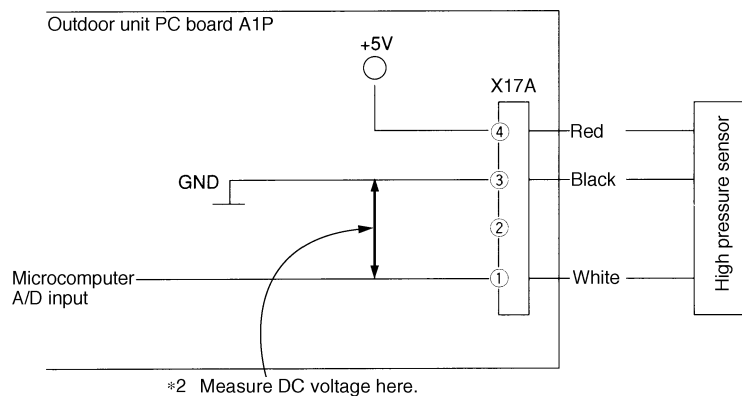

*2 Measure DC voltage here.

(V2807)



*2: Refer to “Pressure Sensor”, pressure / voltage characteristics table on P253.

3.33 “” Outdoor Unit: Malfunction of Low Pressure Sensor

Remote
Controller
Display



Applicable
Models

RXYSQ4~6PA

Method of
Malfunction
Detection

Malfunction is detected from pressure detected by low pressure sensor.

Malfunction
Decision
Conditions

When the low pressure sensor is short circuit or open circuit.

Supposed
Causes


- Defect of low pressure sensor
- Connection of high pressure sensor with wrong connection.
- Defect of outdoor unit PC board.

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

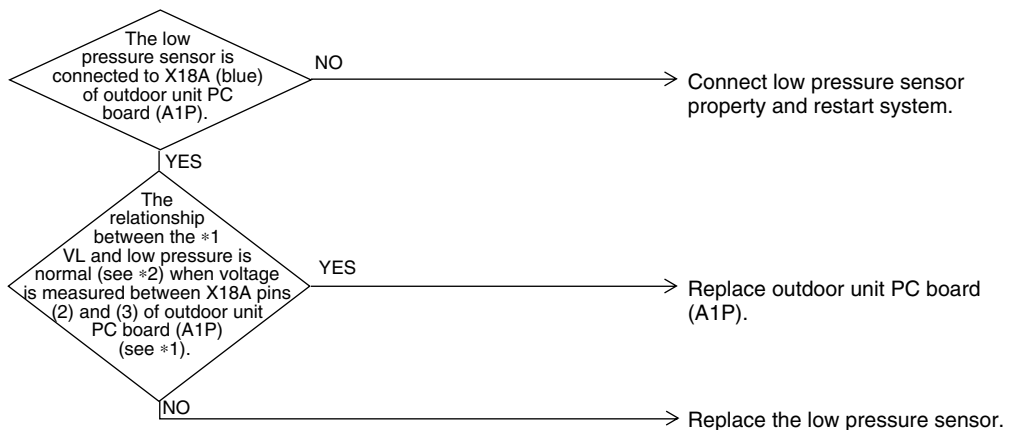

(V2808)

*1: Voltage measurement point

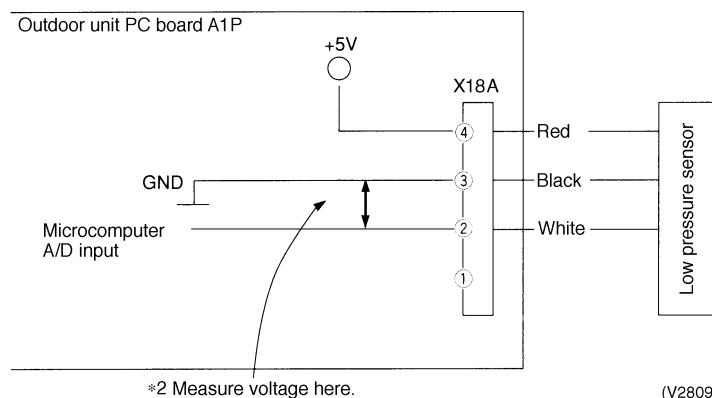

(V2809)



*2: Refer to “Pressure Sensor”, pressure/voltage characteristics table on P253.

3.34 “L I” Outdoor Unit: Malfunction of PC Board


Remote Controller Display	L I
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	<ul style="list-style-type: none"> ■ Detect malfunctions by current value during waveform output before compressor startup. ■ Detect malfunctions by current sensor value during synchronized operation at the time of startup.
Malfunction Decision Conditions	<ul style="list-style-type: none"> ■ In case of overcurrent (OCP) during waveform output ■ When the current sensor malfunctions during synchronized operation ■ In case of IGBT malfunction
Supposed Causes	<ul style="list-style-type: none"> ■ Faulty outdoor PC board (A1P) <ul style="list-style-type: none"> • IPM failure • Current sensor failure • Failure of IGBT or drive circuit

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

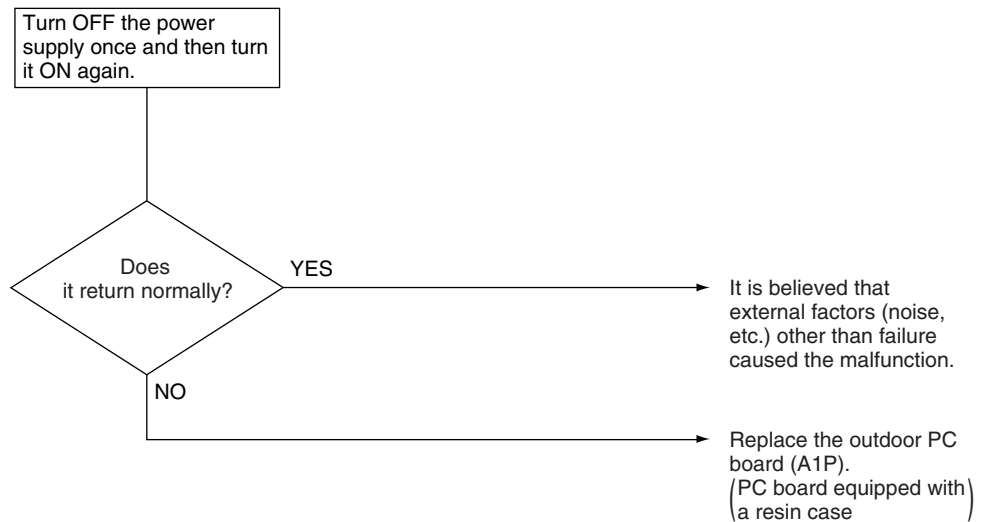

3.35 "L4" Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise

Remote
Controller
Display

L4

Applicable
Models

RXYSQ4~6PA

Method of
Malfunction
Detection

Fin temperature is detected by the thermistor of the radiation fin.

Malfunction
Decision
Conditions

When the temperature of the inverter radiation fin increases above 83°C.

Supposed
Causes


- Actuation of fin thermal (Actuates above 83°C)
- Defect of inverter PC board (A2P)
- Defect of fin thermistor

Troubleshooting



Caution


Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

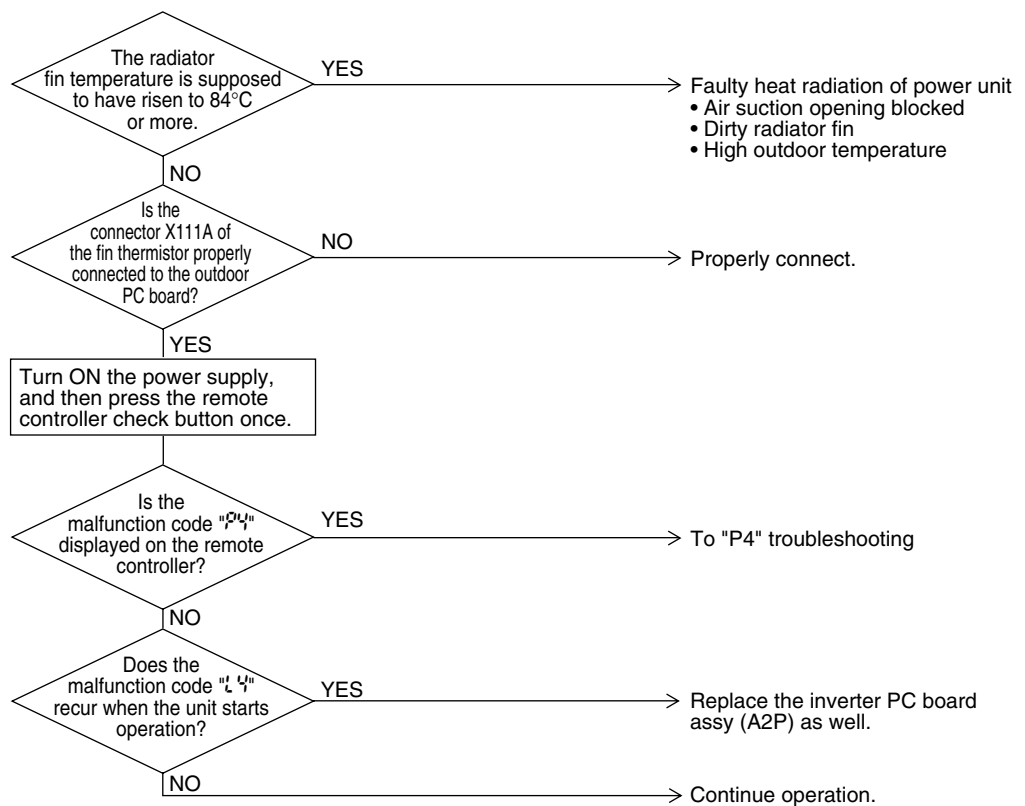


3.36 “L5” Outdoor Unit: Inverter Compressor Abnormal

Remote Controller Display	L5
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Malfunction is detected from current flowing in the power transistor.
Malfunction Decision Conditions	When an excessive current flows in the power transistor. (Instantaneous overcurrent also causes activation.)
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of compressor coil (disconnected, defective insulation) ■ Compressor start-up malfunction (mechanical lock) ■ Defect of inverter PC board (A2P)

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Compressor inspection

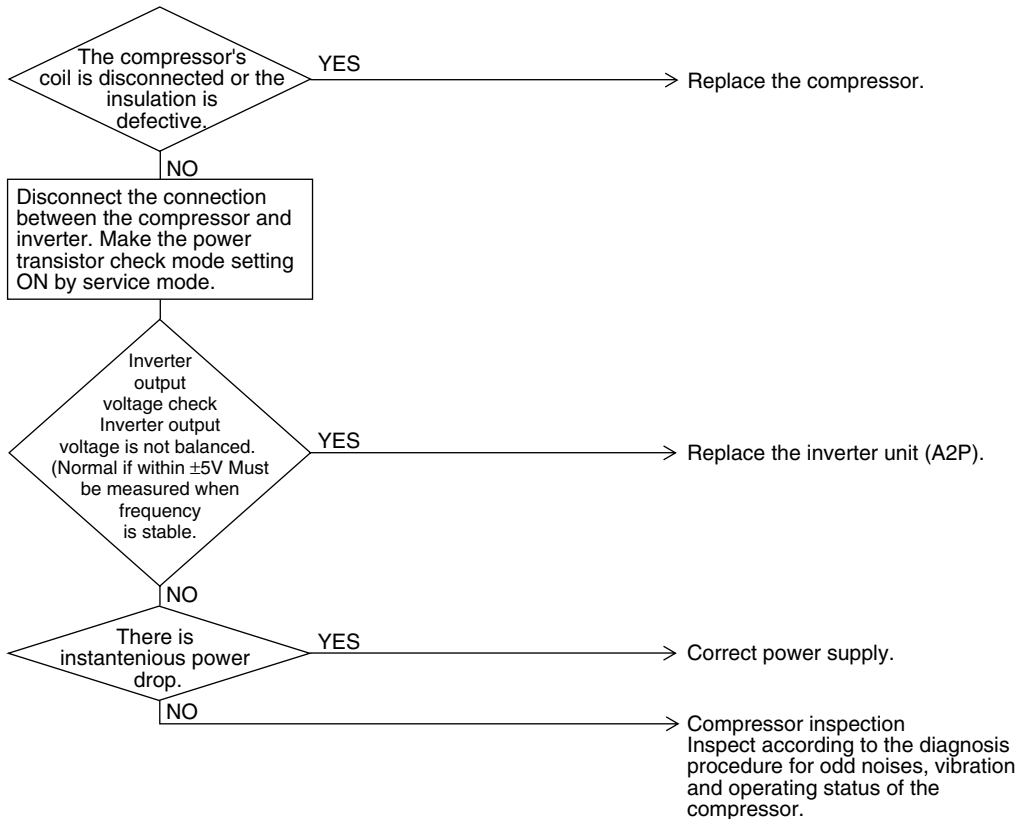

(V2812)

Higher voltage than actual is displayed when the inverter output voltage is checked by tester.

3.37 "L8" Outdoor Unit: Inverter Current Abnormal

Remote
Controller
Display

L8

Applicable
Models

RXYSQ4~6PA

Method of
Malfunction
Detection

Malfunction is detected by current flowing in the power transistor.

Malfunction
Decision
Conditions

When overload in the compressor is detected.

Supposed
Causes

- Compressor overload
- Compressor coil disconnected
- Defect of outdoor unit PC board (A2P)


Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Output current check

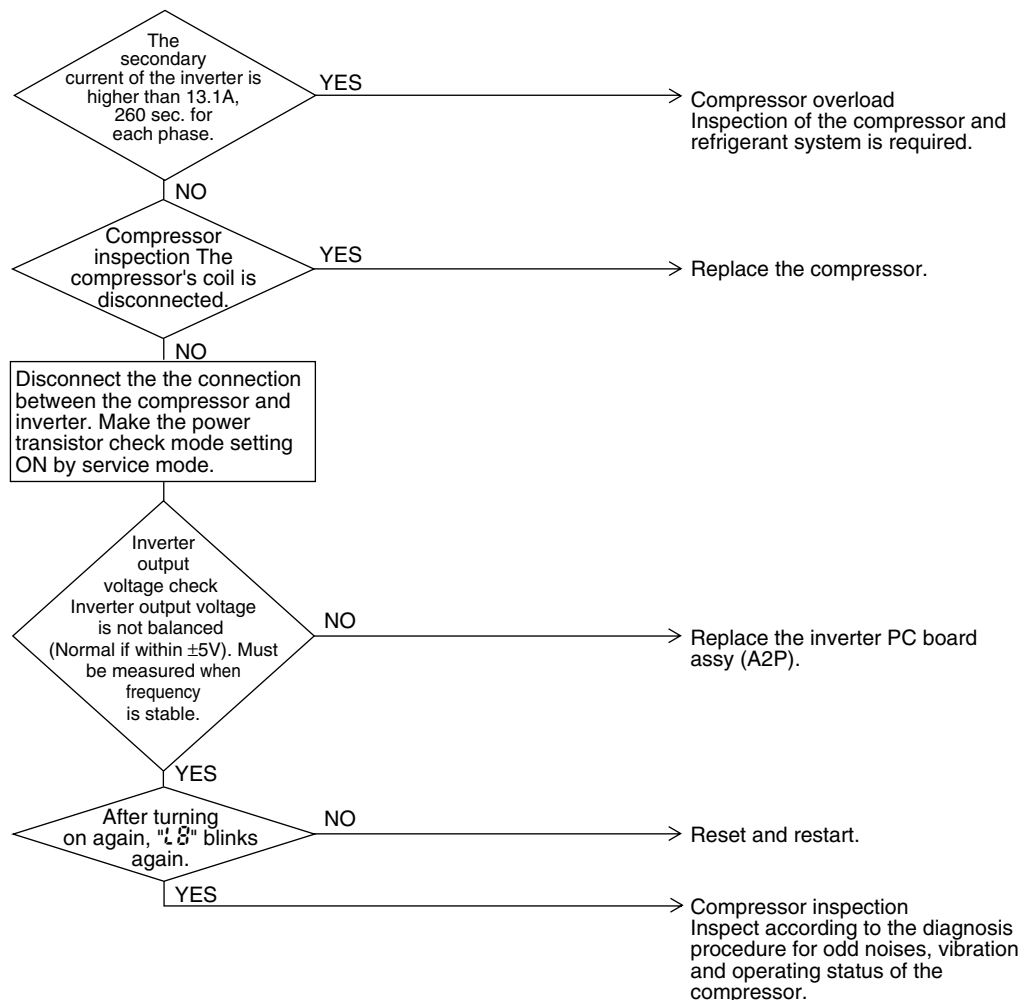


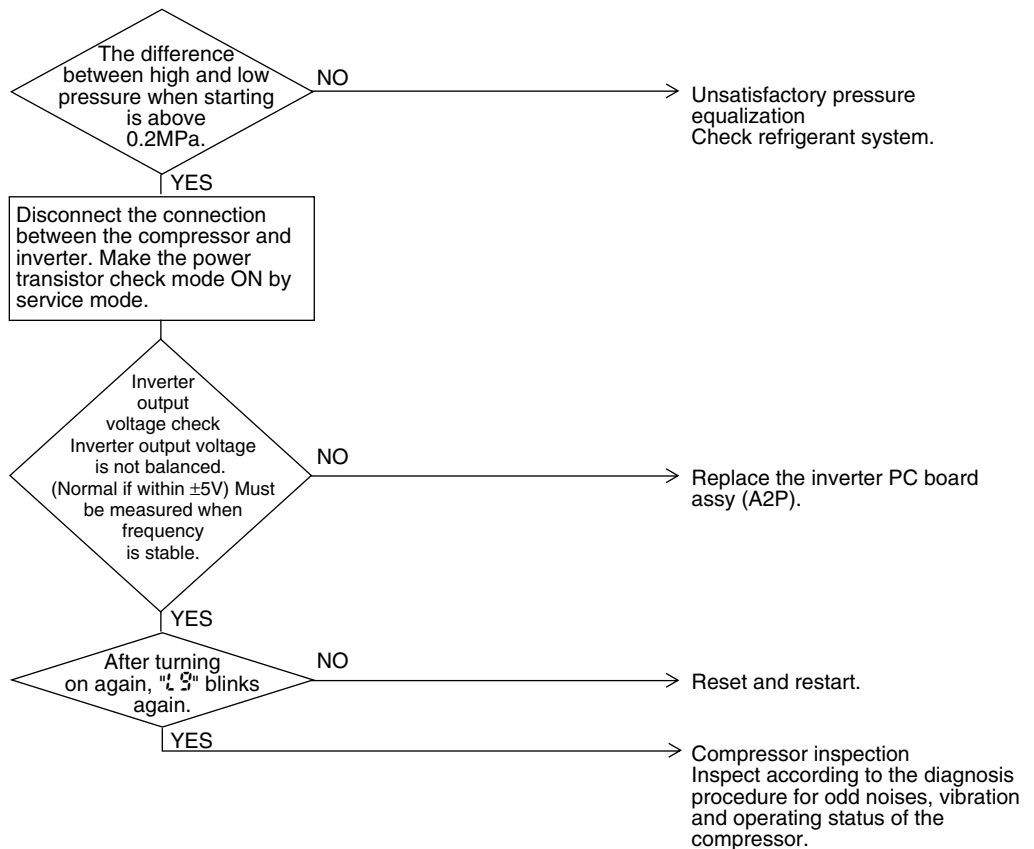
(V3184)

3.38 “L9” Outdoor Unit: Inverter Start up Error

Remote Controller Display	L9
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Malfunction is detected from current flowing in the power transistor.
Malfunction Decision Conditions	When overload in the compressor is detected during startup
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of compressor ■ Pressure differential start ■ Defect of outdoor unit PC board (A2P)

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(V2814)

3.39 “U” Outdoor Unit: Malfunction of Transmission between Inverter and Control PC Board

Remote Controller Display



Applicable Models

RXYSQ4~6PA

Method of Malfunction Detection

Check the communication state between inverter PC board and control PC board by micro-computer.

Malfunction Decision Conditions

When the correct communication is not conducted in certain period.

Supposed Causes

- Malfunction of connection between the inverter microcomputer and outdoor control microcomputer
- Defect of outdoor unit PC board (A1P)
- External factor (Noise etc.)

Troubleshooting



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

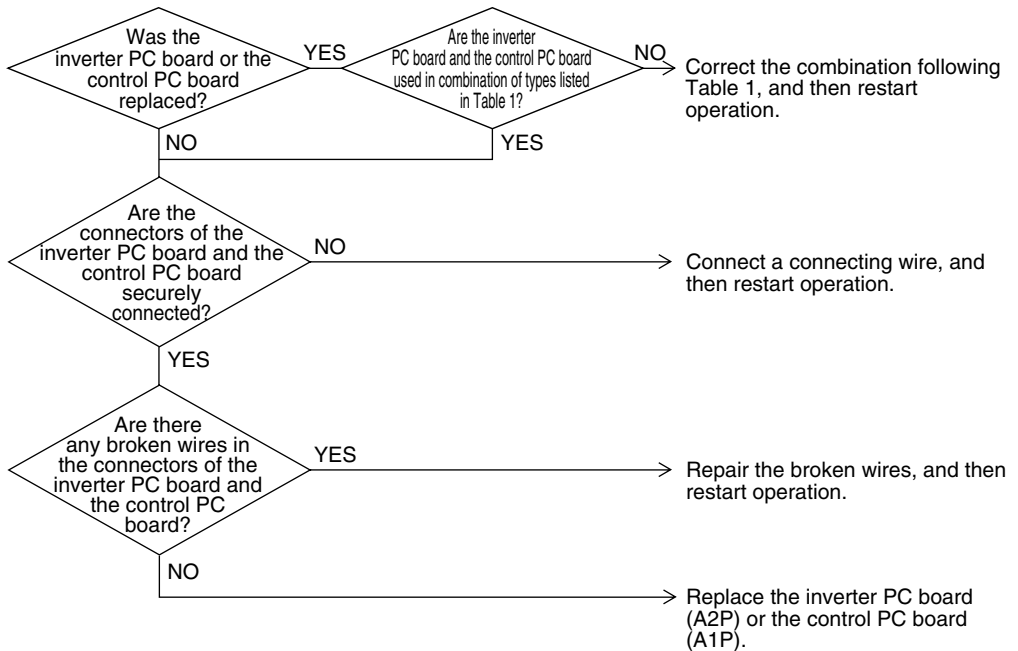


Table 1: Combination of PC boards

	Type of control PC board	Type of inverter PC board
RXYSQ4PA7Y1B	EC0640-1	PC0625-1
RXYSQ5PA7Y1B		
RXYSQ6PA7Y1B		

3.40 “P1” Outdoor Unit: High Voltage of Capacitor in Main Inverter Circuit


Remote Controller Display	P1
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Malfunction is detected according to the voltage waveform of main circuit capacitor built in the inverter.
Malfunction Decision Conditions	When the aforementioned voltage waveform becomes identical with the waveform of the power supply open phase.
Supposed Causes	<ul style="list-style-type: none"> ■ Defect of main circuit capacitor ■ Improper main circuit wiring ■ Defect of outdoor unit PC board (A2P) ■ Imbalance of phase-to-phase voltages ■ Open phase

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

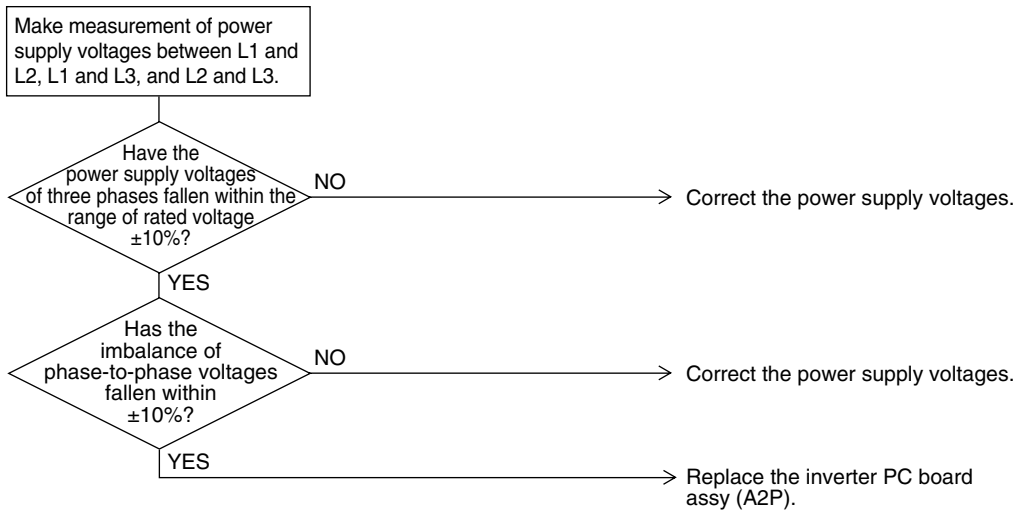


3.41 “” Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure

Remote Controller Display	
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Short of gas malfunction is detected by discharge pipe temperature thermistor and low pressure saturation temperature.
Malfunction Decision Conditions	Microcomputer judge and detect if the system is short of refrigerant. ★Malfunction is not decided while the unit operation is continued.
Supposed Causes	<ul style="list-style-type: none"> ■ Out of gas or refrigerant system clogging (incorrect piping) ■ Defect of pressure sensor ■ Defect of outdoor unit PC board (A1P) ■ Defect of thermistor R3T

Troubleshooting




Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

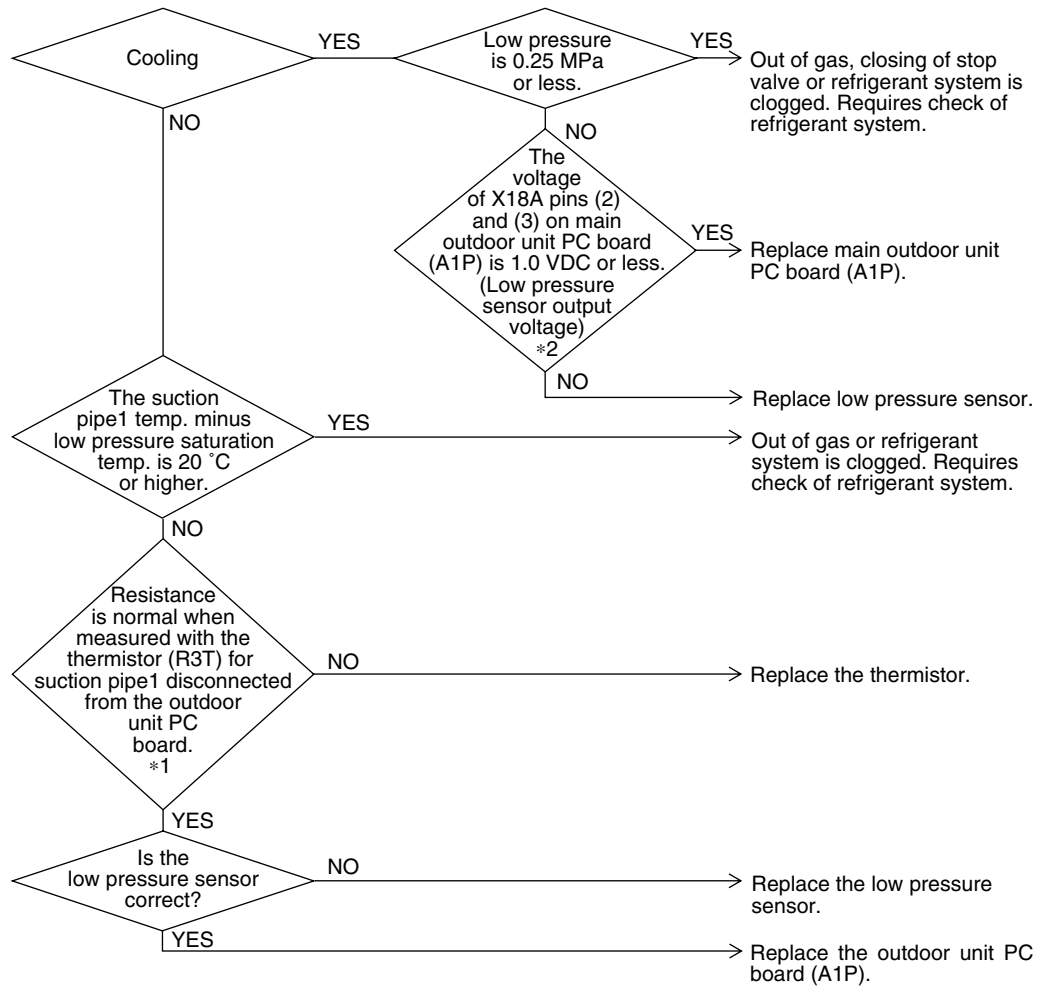

(V2819)

*2: Voltage measurement point

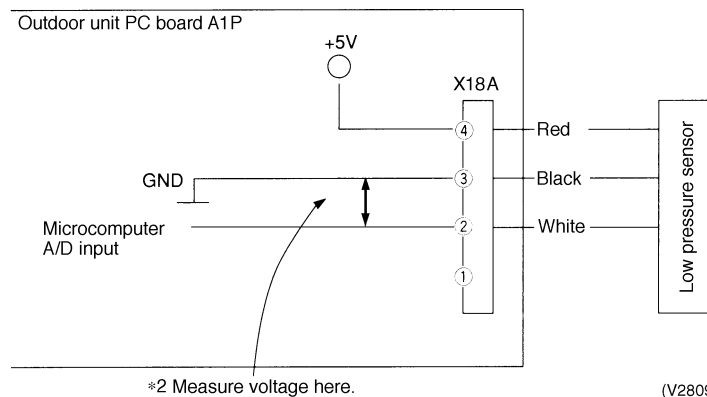

(V2809)




*1: Refer to "Thermistor Resistance / Temperature Characteristics" table on P251.

*2: Refer to "Pressure Sensor, Pressure / Voltage Characteristics" table on P253.

3.42 “U2” Power Supply Insufficient or Instantaneous Failure

Remote Controller Display	U2
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Detection of voltage of main circuit capacitor built in the inverter and power supply voltage.
Malfunction Decision Conditions	When the abnormal voltage of main circuit capacitor built in the inverter and abnormal power supply voltage are detected.
Supposed Causes	<ul style="list-style-type: none"> ■ Power supply insufficient ■ Instantaneous power failure ■ Defect of outdoor unit fan motor ■ Defect of outdoor inverter PC board (A2P)

Troubleshooting

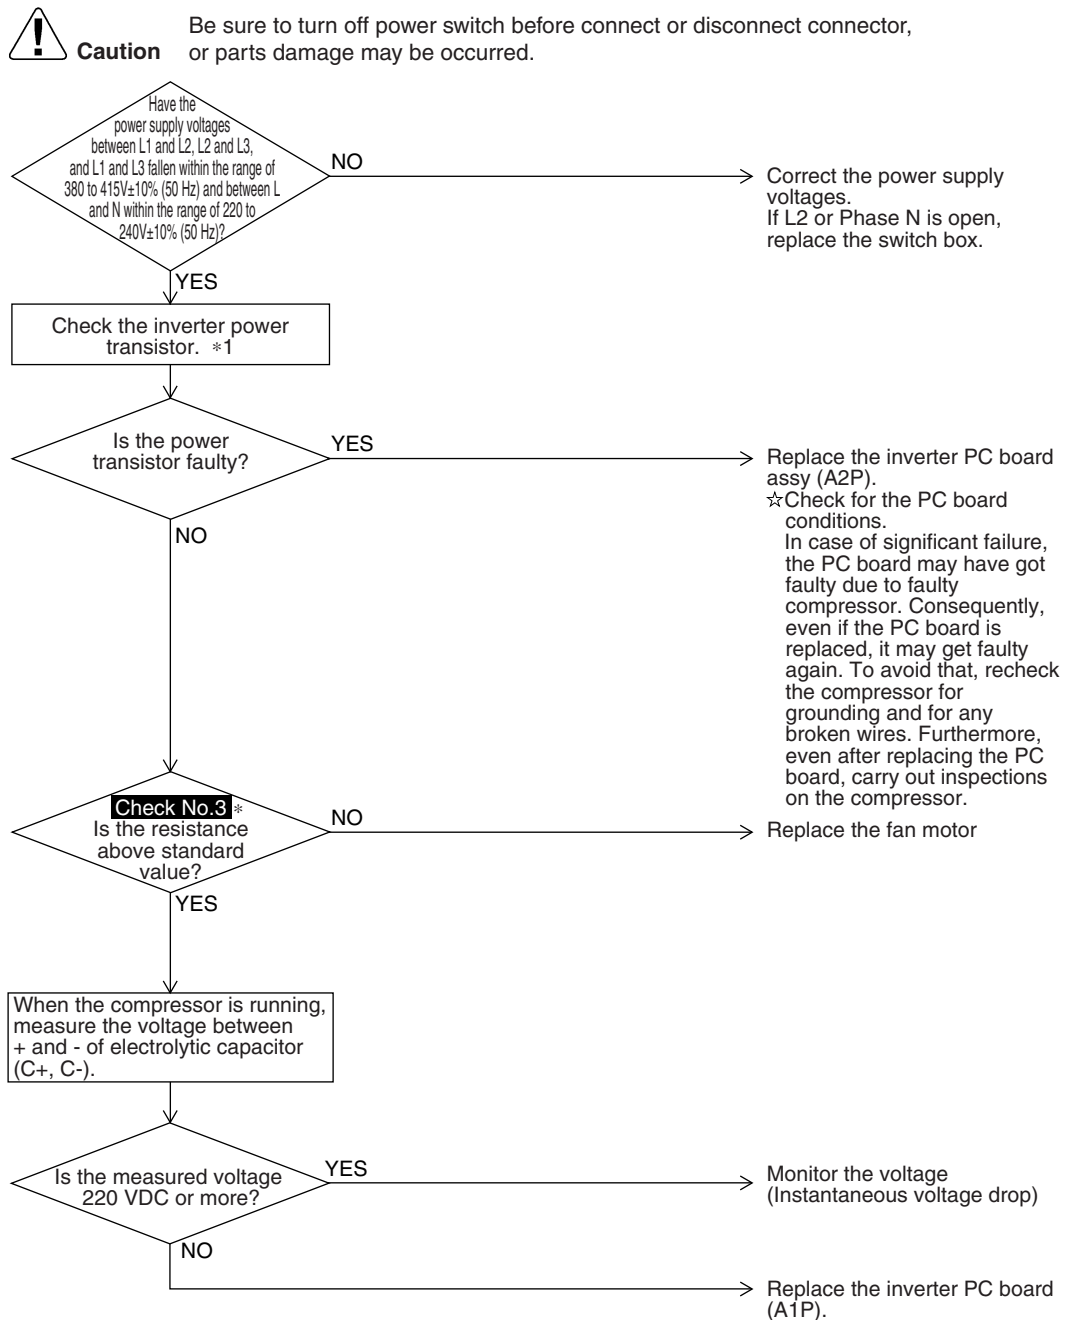

(S2605)



*1: Inverter's Power Transistors Check : Refer to information on P.254~256.


*Check No.3 : Refer to information on P.220.

3.43 “U3” Check Operation not Executed

Remote Controller Display	U3
Applicable Models	RXYSQ4~6PA
Method of Malfunction Detection	Check operation is executed or not
Malfunction Decision Conditions	Malfunction is decided when the unit starts operation without check operation.
Supposed Causes	<ul style="list-style-type: none"> ■ Check operation is not executed.
Troubleshooting	


Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

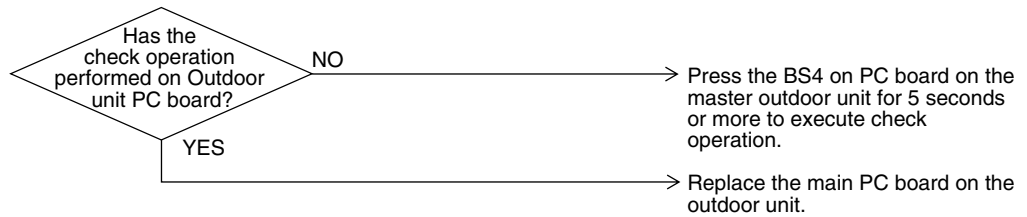


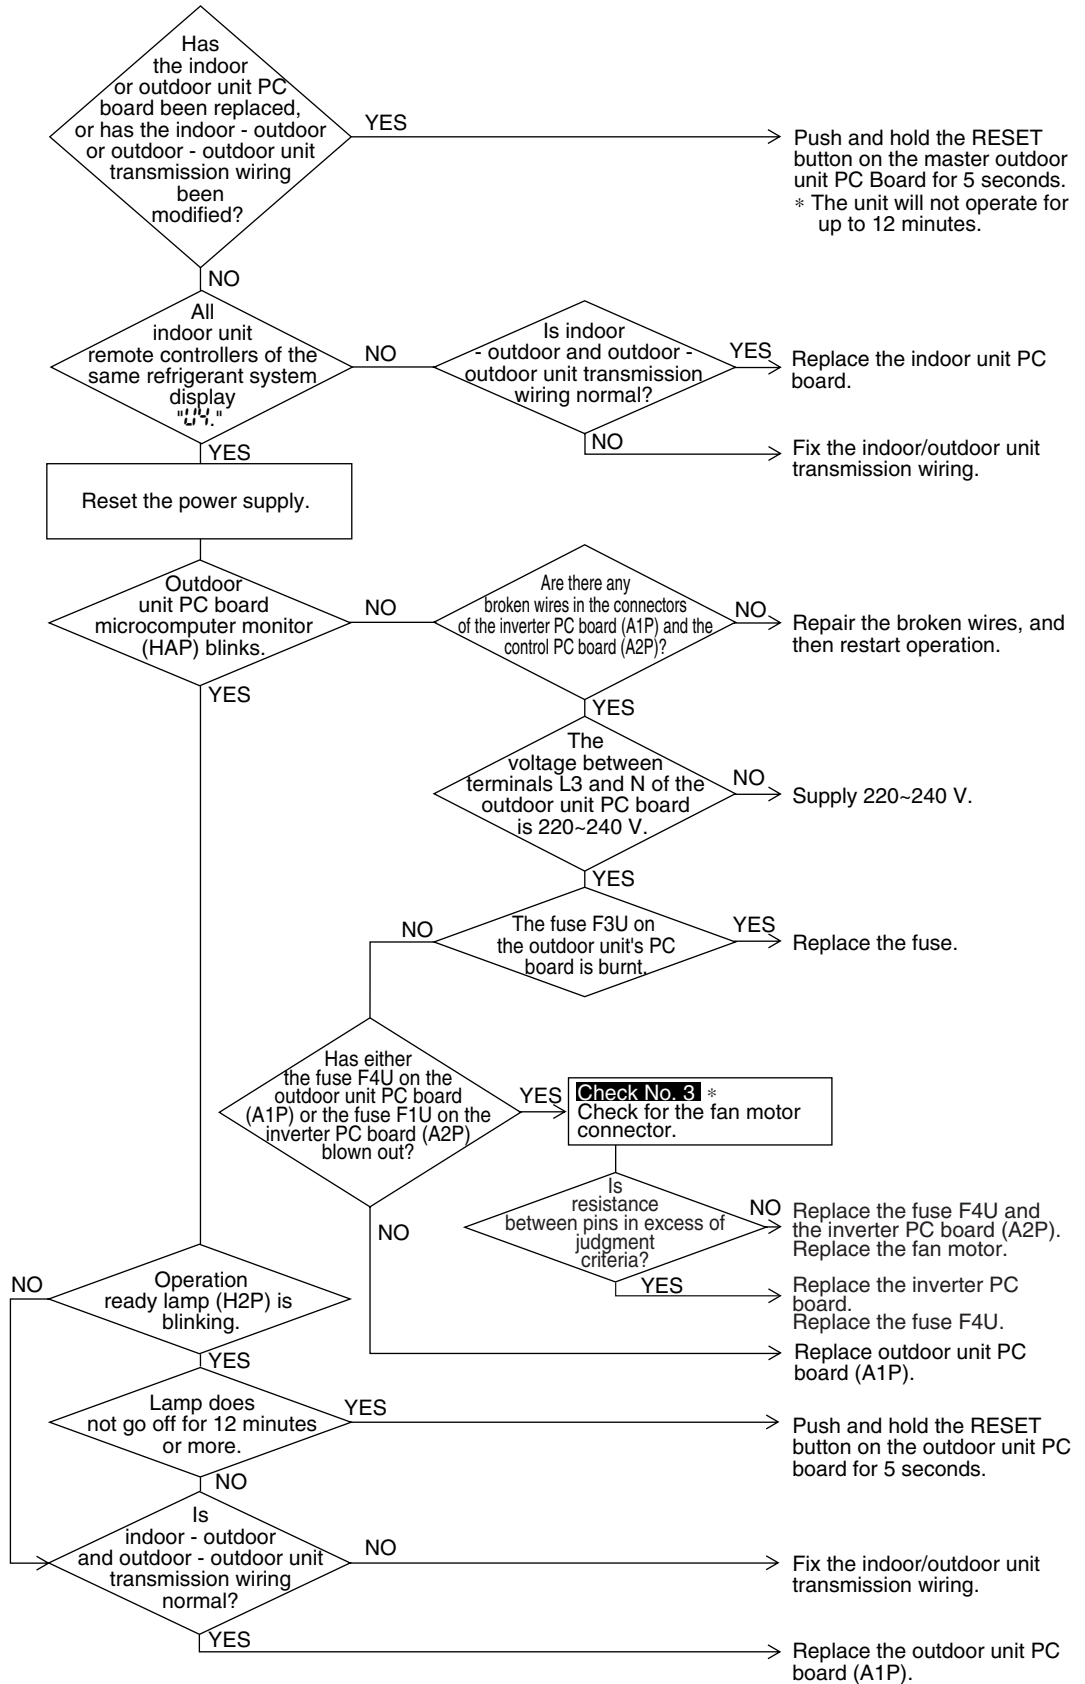
(V3052)

3.44 “U4” Malfunction of Transmission between Indoor Units and Outdoor Units

Remote Controller Display	U4
Applicable Models	All indoor unit models RXYSQ4~6PA
Method of Malfunction Detection	Microcomputer checks if transmission between indoor and outdoor units is normal.
Malfunction Decision Conditions	When transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none"> ■ Indoor to outdoor, outdoor to outdoor transmission wiring F1, F2 disconnection, short circuit or wrong wiring ■ Outdoor unit power supply is OFF ■ System address doesn't match ■ Defect of outdoor unit PC board ■ Defect of indoor unit PC board

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(V3187)



* **Check No.3** : Refer to information on P.220.

3.45 “U5” Malfunction of Transmission between Remote Controller and Indoor Unit

Remote Controller Display

U5

Applicable Models

All indoor unit models

Method of Malfunction Detection

In case of controlling with 2-remote controller, check the system using microcomputer is signal transmission between indoor unit and remote controller (main and sub) is normal.

Malfunction Decision Conditions

Normal transmission does not continue for specified period.

Supposed Causes


- Malfunction of indoor unit remote controller transmission
- Connection of two main remote controllers (when using 2 remote controllers)
- Defect of indoor unit PC board
- Defect of remote controller PC board
- Malfunction of transmission caused by noise

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

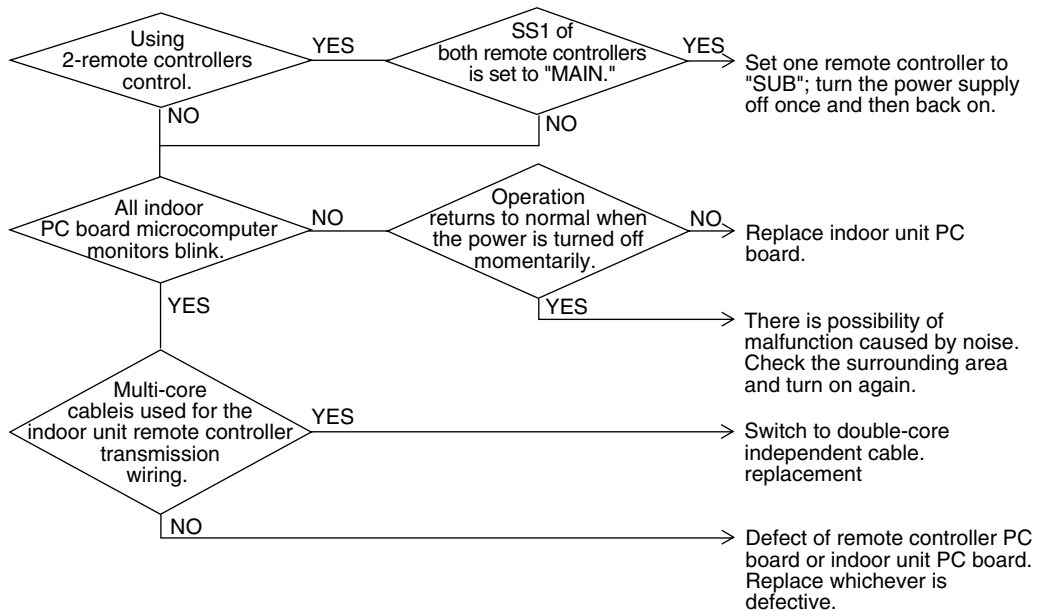

(V2823)

3.46 “U8” Malfunction of Transmission between Main and Sub Remote Controllers

Remote
Controller
Display

U8

Applicable
Models

All indoor unit models

Method of
Malfunction
Detection

In case of controlling with 2-remote controller, check the system using microcomputer if signal transmission between indoor unit and remote controller (main and sub) is normal.

Malfunction
Decision
Conditions

Normal transmission does not continue for specified period.

Supposed
Causes


- Malfunction of transmission between main and sub remote controller
- Connection between sub remote controllers
- Defect of remote controller PC board

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

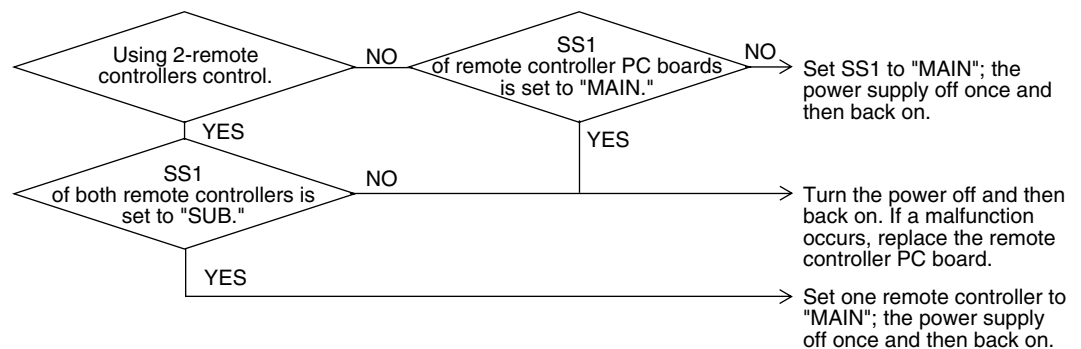

(V2825)

3.47 “U9” Malfunction of Transmission between Indoor and Outdoor Units in the Same System


<p>Remote Controller Display</p>	<p>U9</p>
<p>Applicable Models</p>	<p>All indoor unit models</p>
<p>Method of Malfunction Detection</p>	
<p>Malfunction Decision Conditions</p>	
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Malfunction of transmission within or outside of other system ■ Malfunction of electronic expansion valve in indoor unit of other system ■ Defect of PC board of indoor unit in other system ■ Improper connection of transmission wiring between indoor and outdoor unit

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

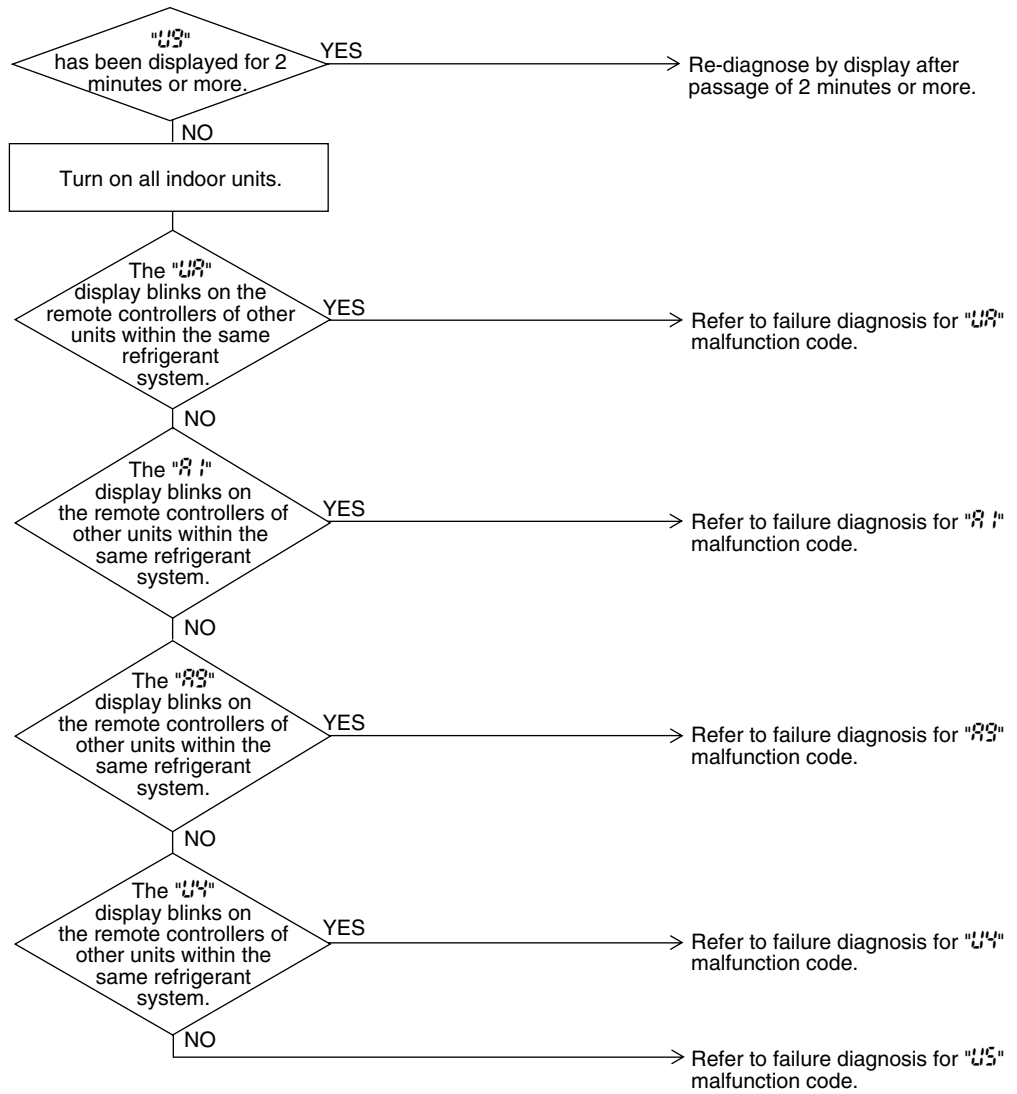

(V2826)

3.48 “UR” Excessive Number of Indoor Units


Remote Controller Display	
Applicable Models	All indoor unit models
Method of Malfunction Detection	
Malfunction Decision Conditions	
Supposed Causes	<ul style="list-style-type: none"> ■ Excess of connected indoor units ■ Defect of outdoor unit PC board (A1P) ■ Mismatching of the refrigerant type of indoor and outdoor unit. ■ Setting of outdoor PC board was not conducted after replacing to spare parts PC board.

Troubleshooting



Caution


Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

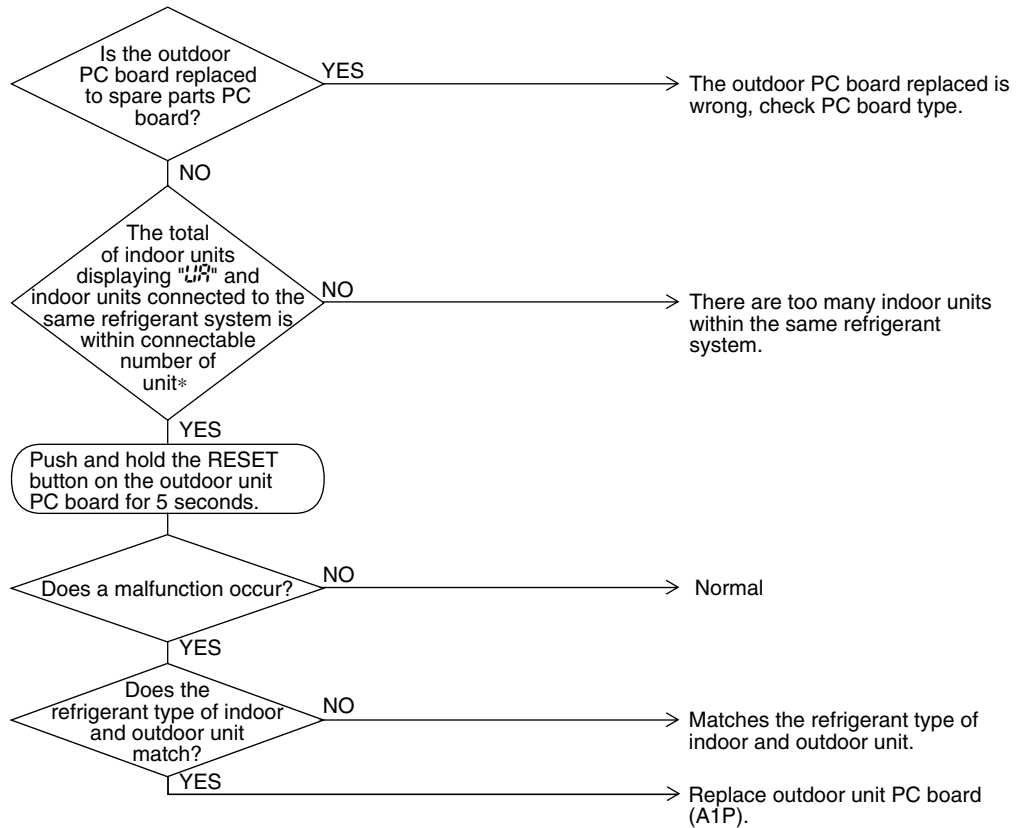


(V3169)


* The number of indoor units that can be connected to a single outdoor unit system depends on the type of outdoor unit.

3.49 “UE” Address Duplication of Central Remote Controller

Remote Controller Display	
Applicable Models	All indoor unit models
Method of Malfunction Detection	
Malfunction Decision Conditions	
Supposed Causes	<ul style="list-style-type: none"> ■ Address duplication of centralized remote controller ■ Defect of indoor unit PC board

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

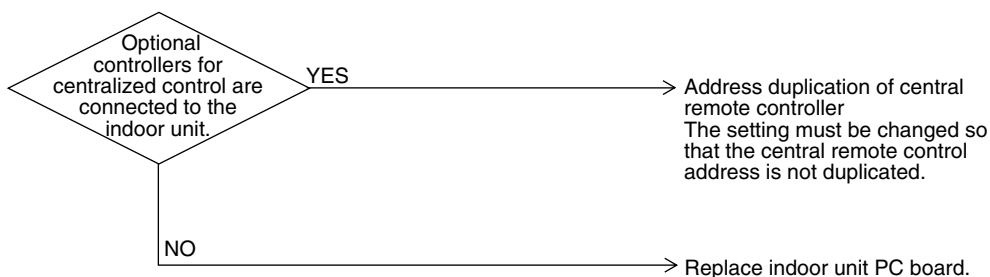

(V2828)

3.50 “UE” Malfunction of Transmission between Central Remote Controller and Indoor Unit


Remote Controller Display	UE
Applicable Models	All indoor unit models Centralized controller
Method of Malfunction Detection	Microcomputer checks if transmission between indoor unit and centralized remote controller is normal.
Malfunction Decision Conditions	When transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none"> ■ Malfunction of transmission between optional controllers for centralized control and indoor unit ■ Connector for setting master controller is disconnected. ■ Failure of PC board for centralized remote controller ■ Defect of indoor unit PC board

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

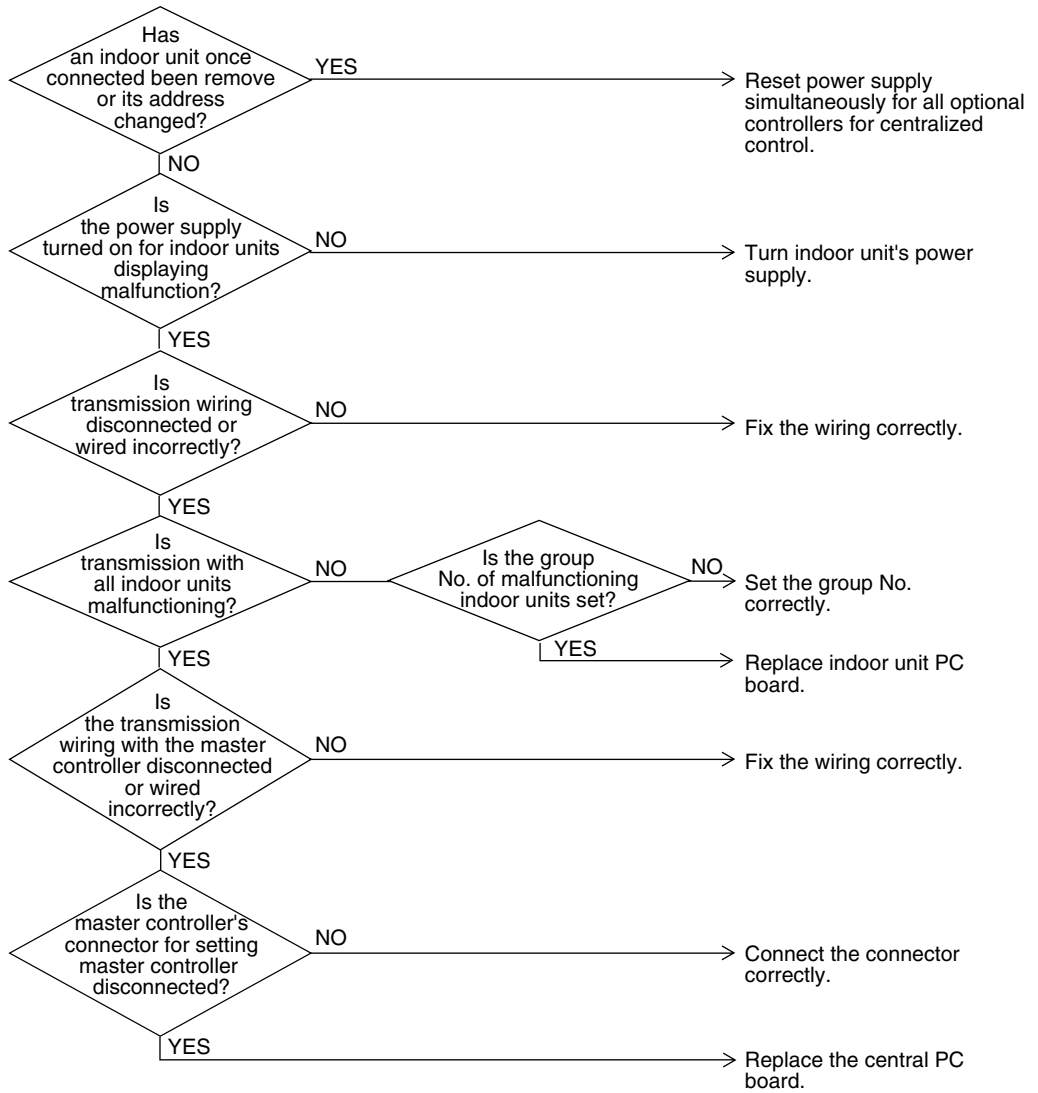

(V2829)

3.51 “UF” System is not Set yet


Remote Controller Display	
Applicable Models	All models of indoor units RXYSQ4~6PA
Method of Malfunction Detection	On check operation, the number of indoor units in terms of transmission is not corresponding to that of indoor units that have made changes in temperature.
Malfunction Decision Conditions	The malfunction is determined as soon as the abnormality aforementioned is detected through checking the system for any erroneous connection of units on the check operation.
Supposed Causes	<ul style="list-style-type: none"> ■ Improper connection of transmission wiring between indoor-outdoor units and outdoor-outdoor units ■ Failure to execute check operation ■ Defect of indoor unit PC board ■ Stop valve is left in closed

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

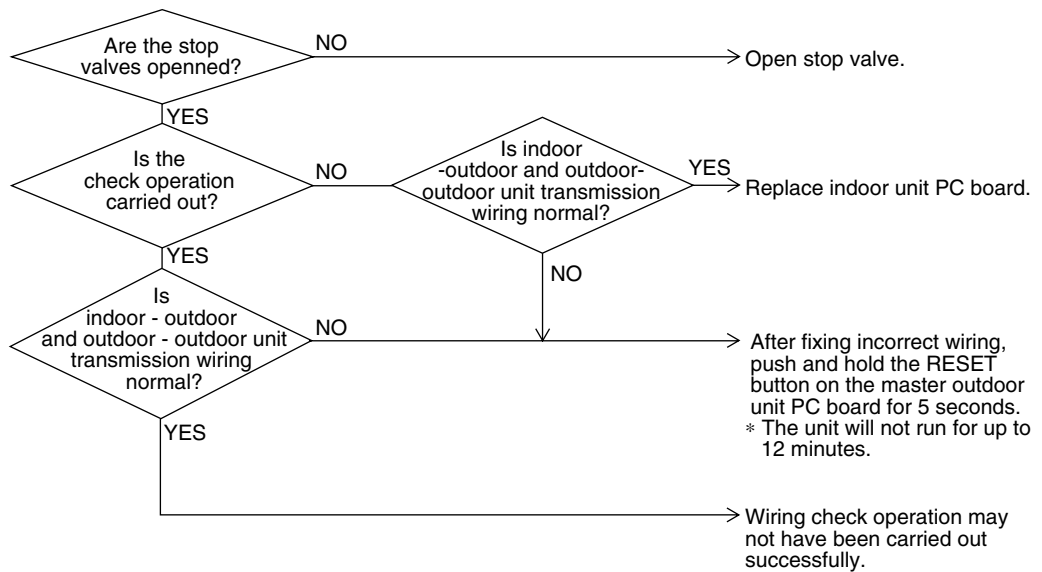

(V2830)



Note:

Wiring check operation may not be successful if carried out after the outdoor unit has been off for more than 12 hours, or if it is not carried out after running all connected indoor units in the fan mode for at least an hour.

3.52 “UH” Malfunction of System, Refrigerant System Address Undefined

Remote Controller Display



Applicable Models

All indoor unit models
RXYSQ4~6PA

Method of Malfunction Detection

Malfunction Decision Conditions

Supposed Causes


- Improper connection of transmission wiring between outdoor unit and outdoor unit outside control adaptor
- Defect of indoor unit PC board
- Defect of outdoor unit PC board (A1P)

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

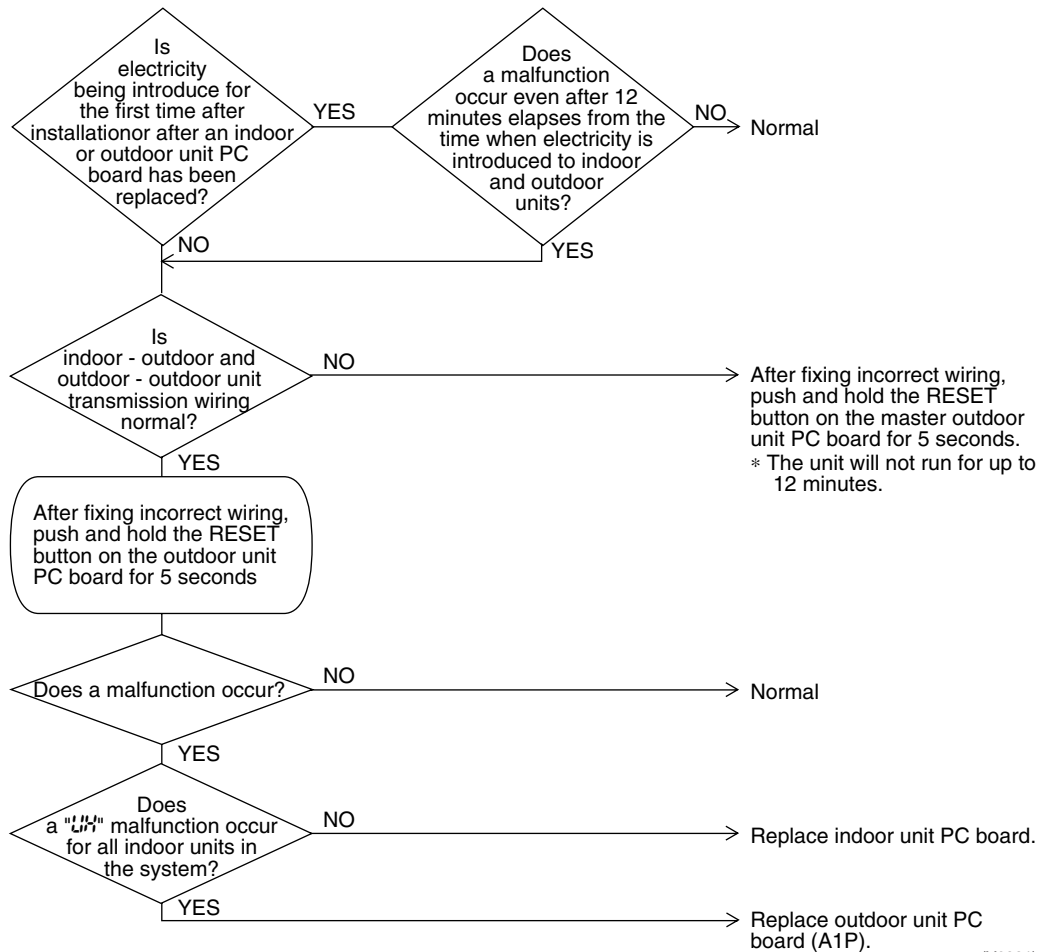


(V2831)

4. Troubleshooting by Indication on the Centralized Remote Controller

4.1 “UE” Malfunction of Transmission between Centralized Remote Controller and Indoor Unit

Remote Controller Display	UE
Applicable Models	All indoor unit models Centralized Remote Controller
Method of Malfunction Detection	Microcomputer checks if transmission between indoor unit and central remote controller is normal.
Malfunction Decision Conditions	When transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none"> ■ Malfunction of transmission between optional controllers for centralized control and indoor unit ■ Connector for setting master controller is disconnected. ■ Failure of PC board for central remote controller ■ Defect of indoor unit PC board

Troubleshooting

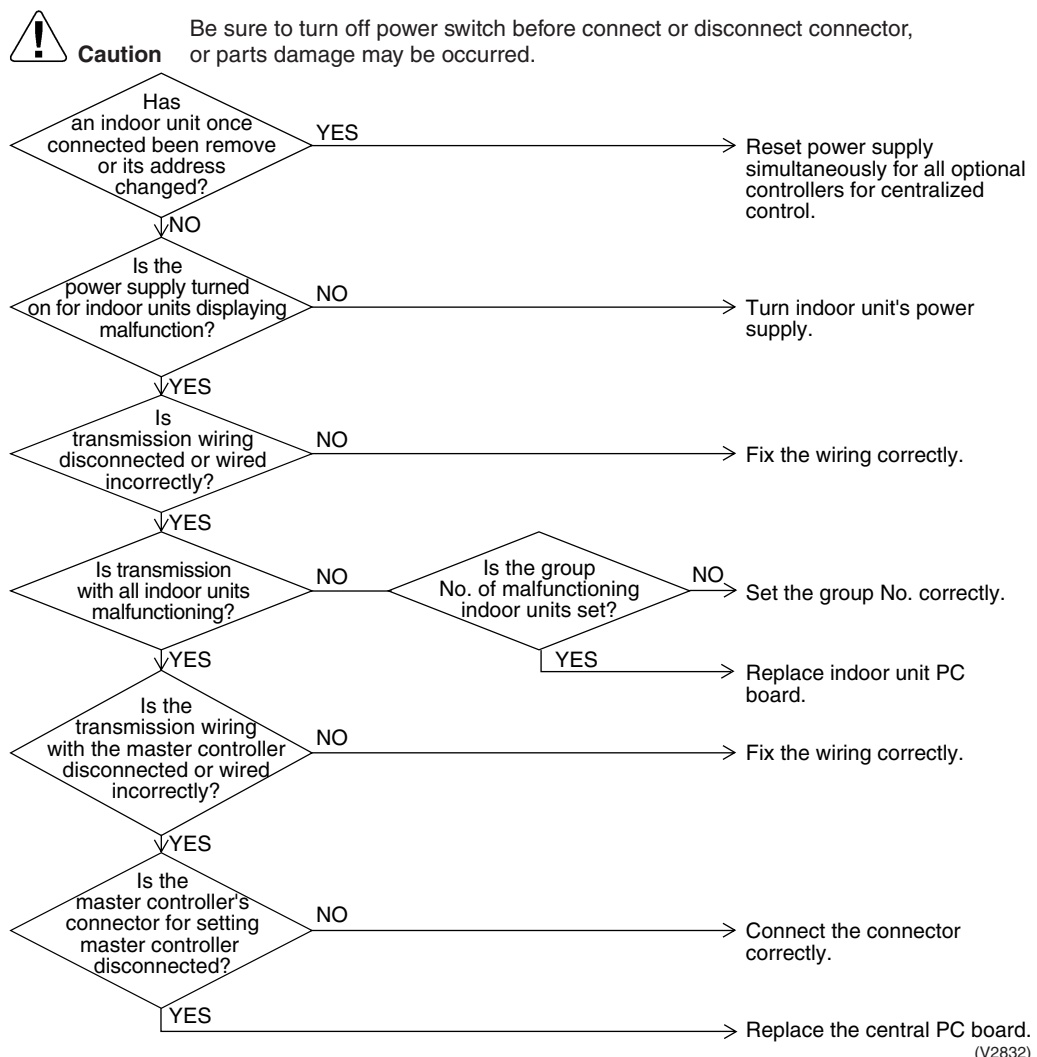

(V2832)


4.2 “MI” PC Board Defect


Remote Controller Display	MI
Applicable Models	Centralized remote controller
Method of Malfunction Detection	
Malfunction Decision Conditions	
Supposed Causes	<ul style="list-style-type: none">■ Defect of central remote controller PC board
Troubleshooting	Replace the central remote controller PC board.

4.3 “M8” Malfunction of Transmission between Optional Controllers for Centralized Control

Remote Controller Display	M8
Applicable Models	Centralized remote controller
Method of Malfunction Detection	
Malfunction Decision Conditions	
Supposed Causes	<ul style="list-style-type: none"> ■ Malfunction of transmission between optional controllers for centralized control ■ Defect of PC board of optional controllers for centralized control

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

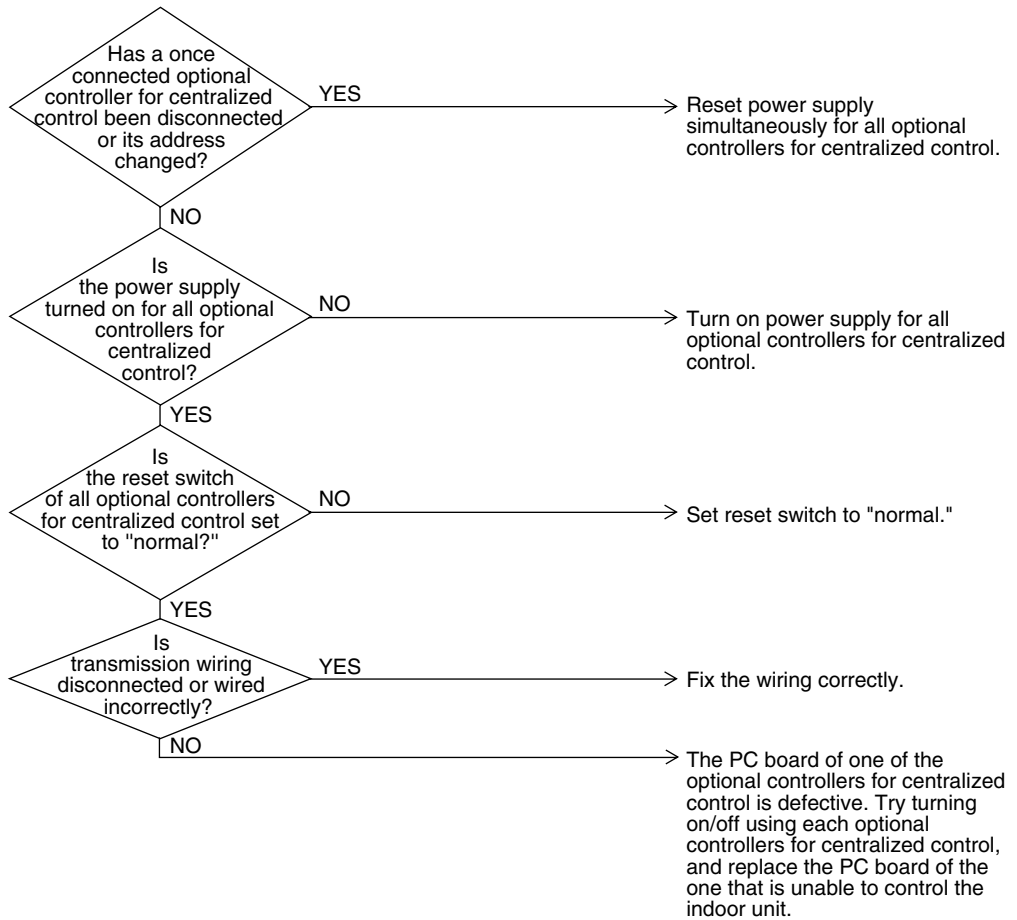

(V2833)

4.4 “MR” Improper Combination of Optional Controllers for Centralized Control


Remote Controller Display	MR
Applicable Models	Centralized remote controller
Method of Malfunction Detection	
Malfunction Decision Conditions	
Supposed Causes	<ul style="list-style-type: none"> ■ Improper combination of optional controllers for centralized control ■ More than one master controller is connected ■ Defect of PC board of optional controller for centralized control

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

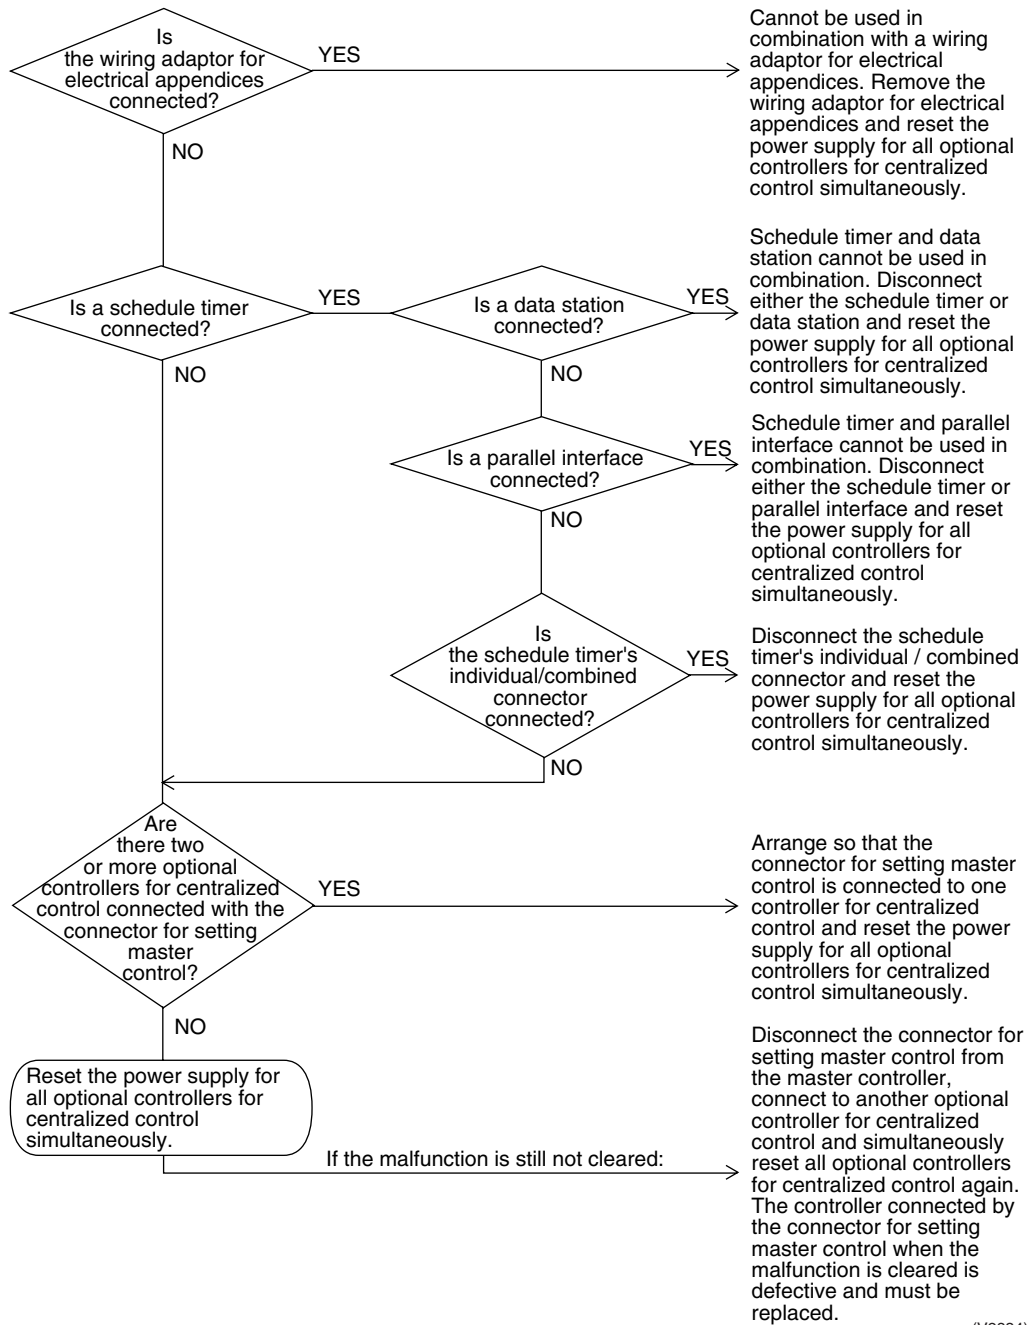

(V2834)

4.5 “MC” Address Duplication, Improper Setting

Remote
Controller
Display

MC

Applicable
Models

Centralized remote controller

Method of
Malfunction
Detection

Malfunction
Decision
Conditions

Supposed
Causes


- Address duplication of centralized remote controller

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

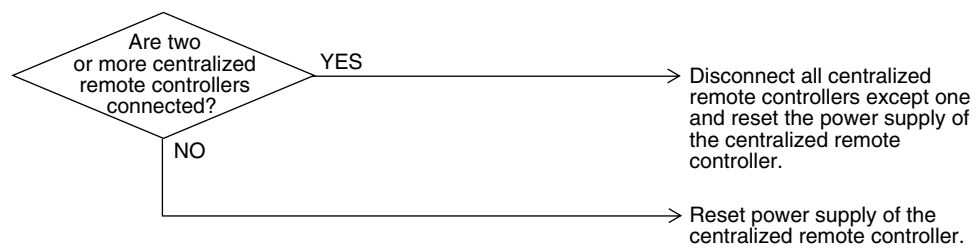

(V2835)

5. Troubleshooting by Indication on the Unified ON/OFF Controller

5.1 Operation Lamp Blinks

**Remote
Controller
Display**

Operation lamp blinks

**Applicable
Models**

All models of indoor units
Unified ON/OFF controller

**Method of
Malfunction
Detection**

**Malfunction
Decision
Conditions**

**Supposed
Causes**


- Malfunction of transmission between optional controller and indoor unit
- Connector for setting master controller is disconnected
- Defect of unified ON/OFF controller
- Defect of indoor unit PC board
- Malfunction of air conditioner

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

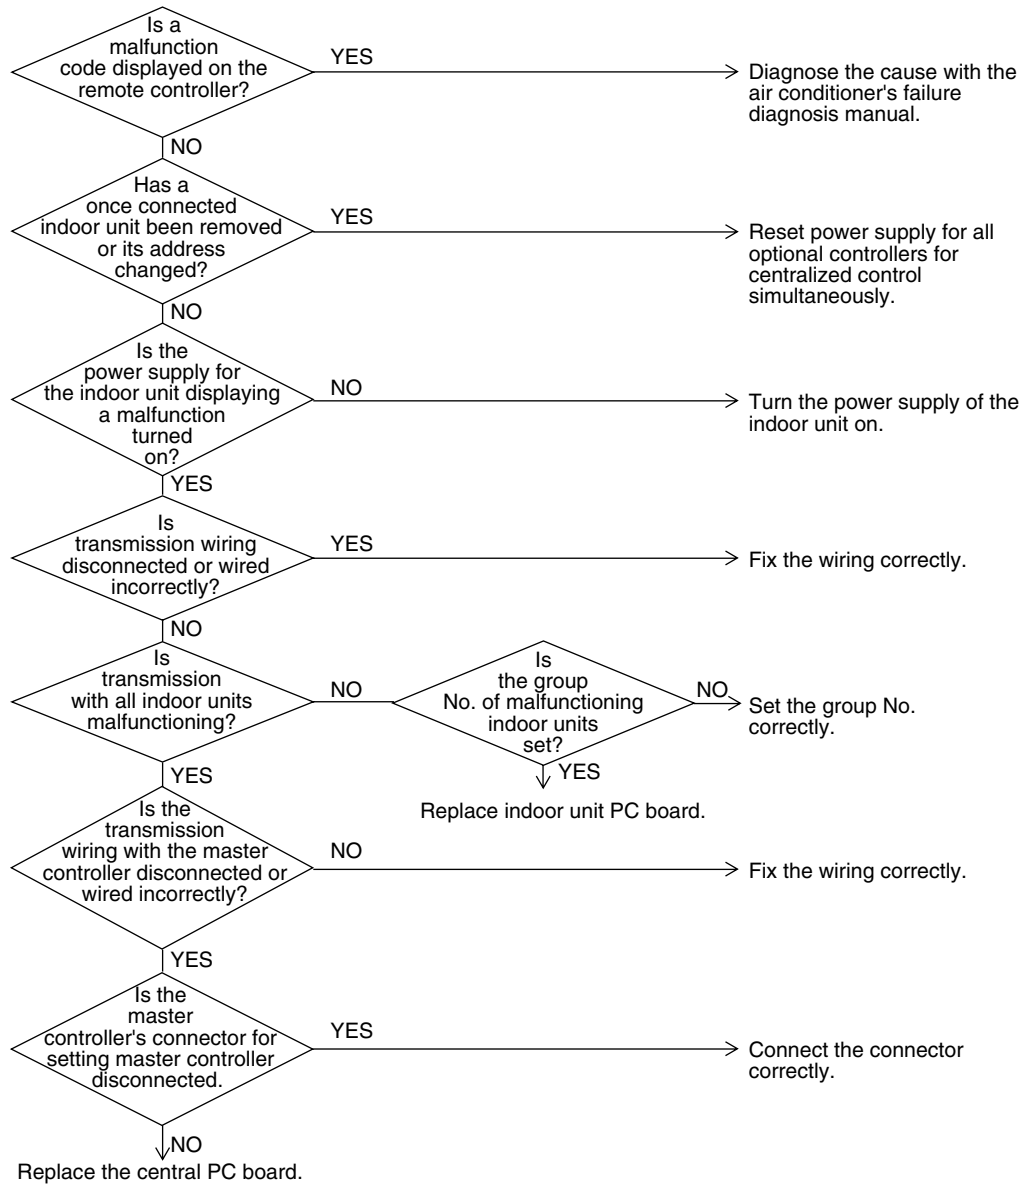

(V2841)

5.2 Display “Under Host Computer Integrate Control” Blinks (Repeats Single Blink)


Remote Controller Display	“under host computer integrated control” (Repeats single blink)
Applicable Models	Unified ON/OFF controller Central controller, Schedule timer
Method of Malfunction Detection	
Malfunction Decision Conditions	
Supposed Causes	<ul style="list-style-type: none"> ■ Address duplication of central remote controller ■ Improper combination of optional controllers for centralized control ■ Connection of more than one master controller ■ Malfunction of transmission between optional controllers for centralized control ■ Defect of PC board of optional controllers for centralized control

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

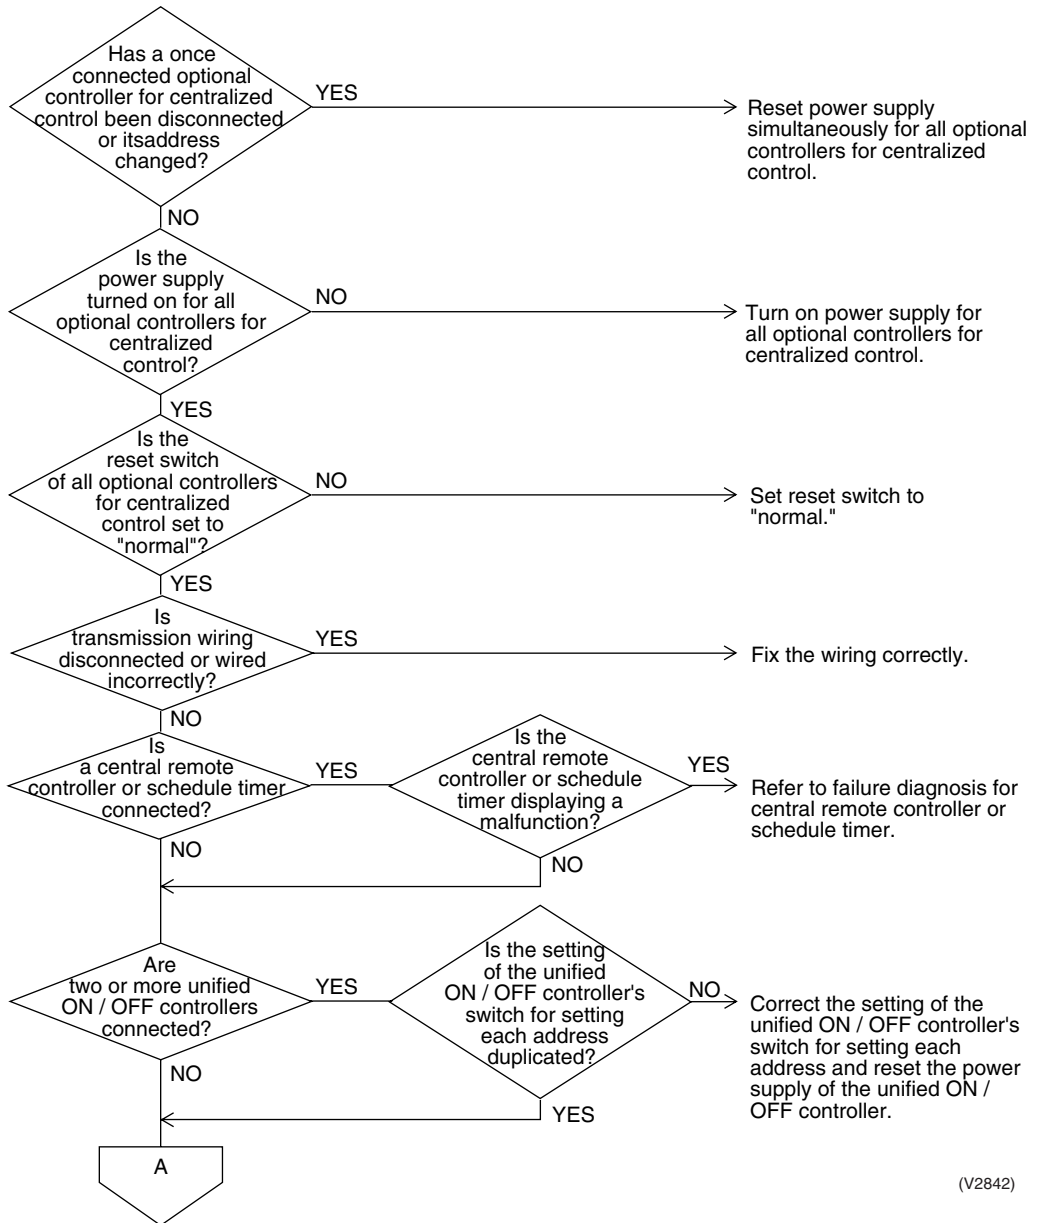

(V2842)

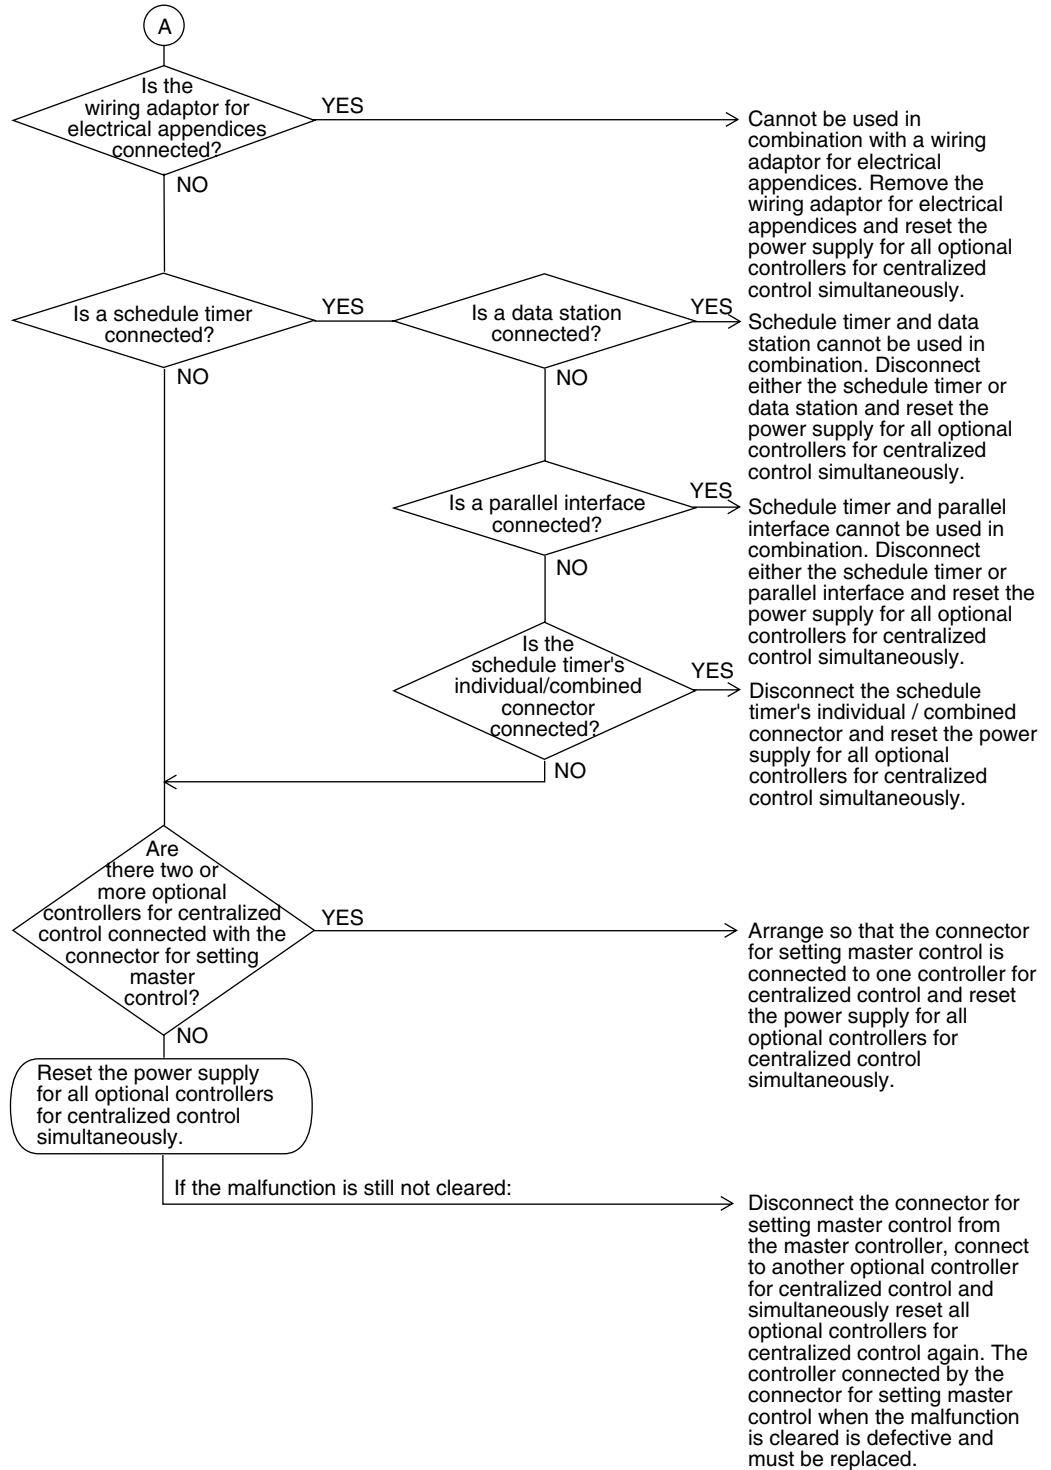

(V2843)

5.3 Display “Under Host Computer Integrate Control” Blinks (Repeats Double Blink)

Remote Controller Display

“under host computer integrated control” (Repeats double blink)

Applicable Models

Unified ON/OFF controller

Method of Malfunction Detection

Malfunction Decision Conditions

Supposed Causes


- Central control address (group No.) is not set for indoor unit.
- Improper address setting
- Improper wiring of transmission wiring

Troubleshooting



Caution


Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

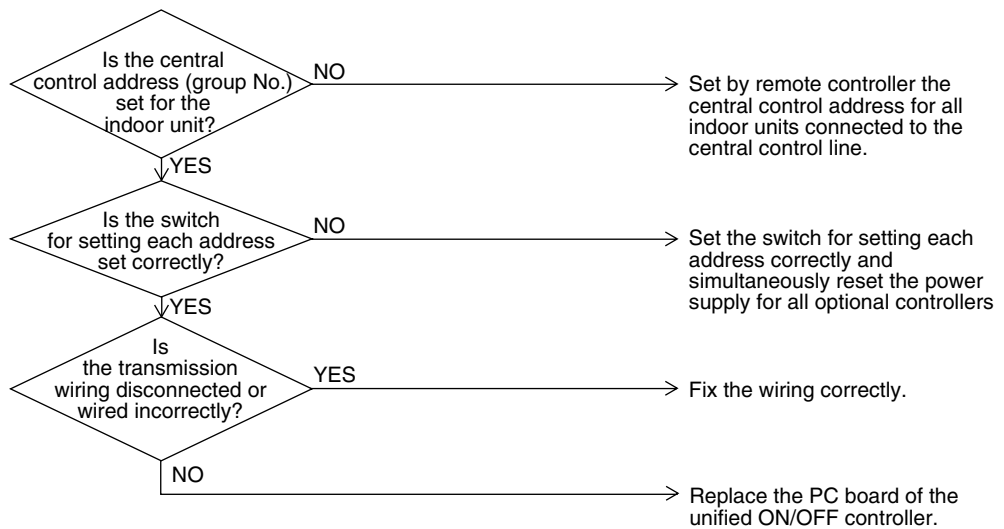

(V2844)

[CHECK 1] Check for causes of rise in high pressure


Referring to the Fault Tree Analysis (FTA) shown below, probe the faulty points.

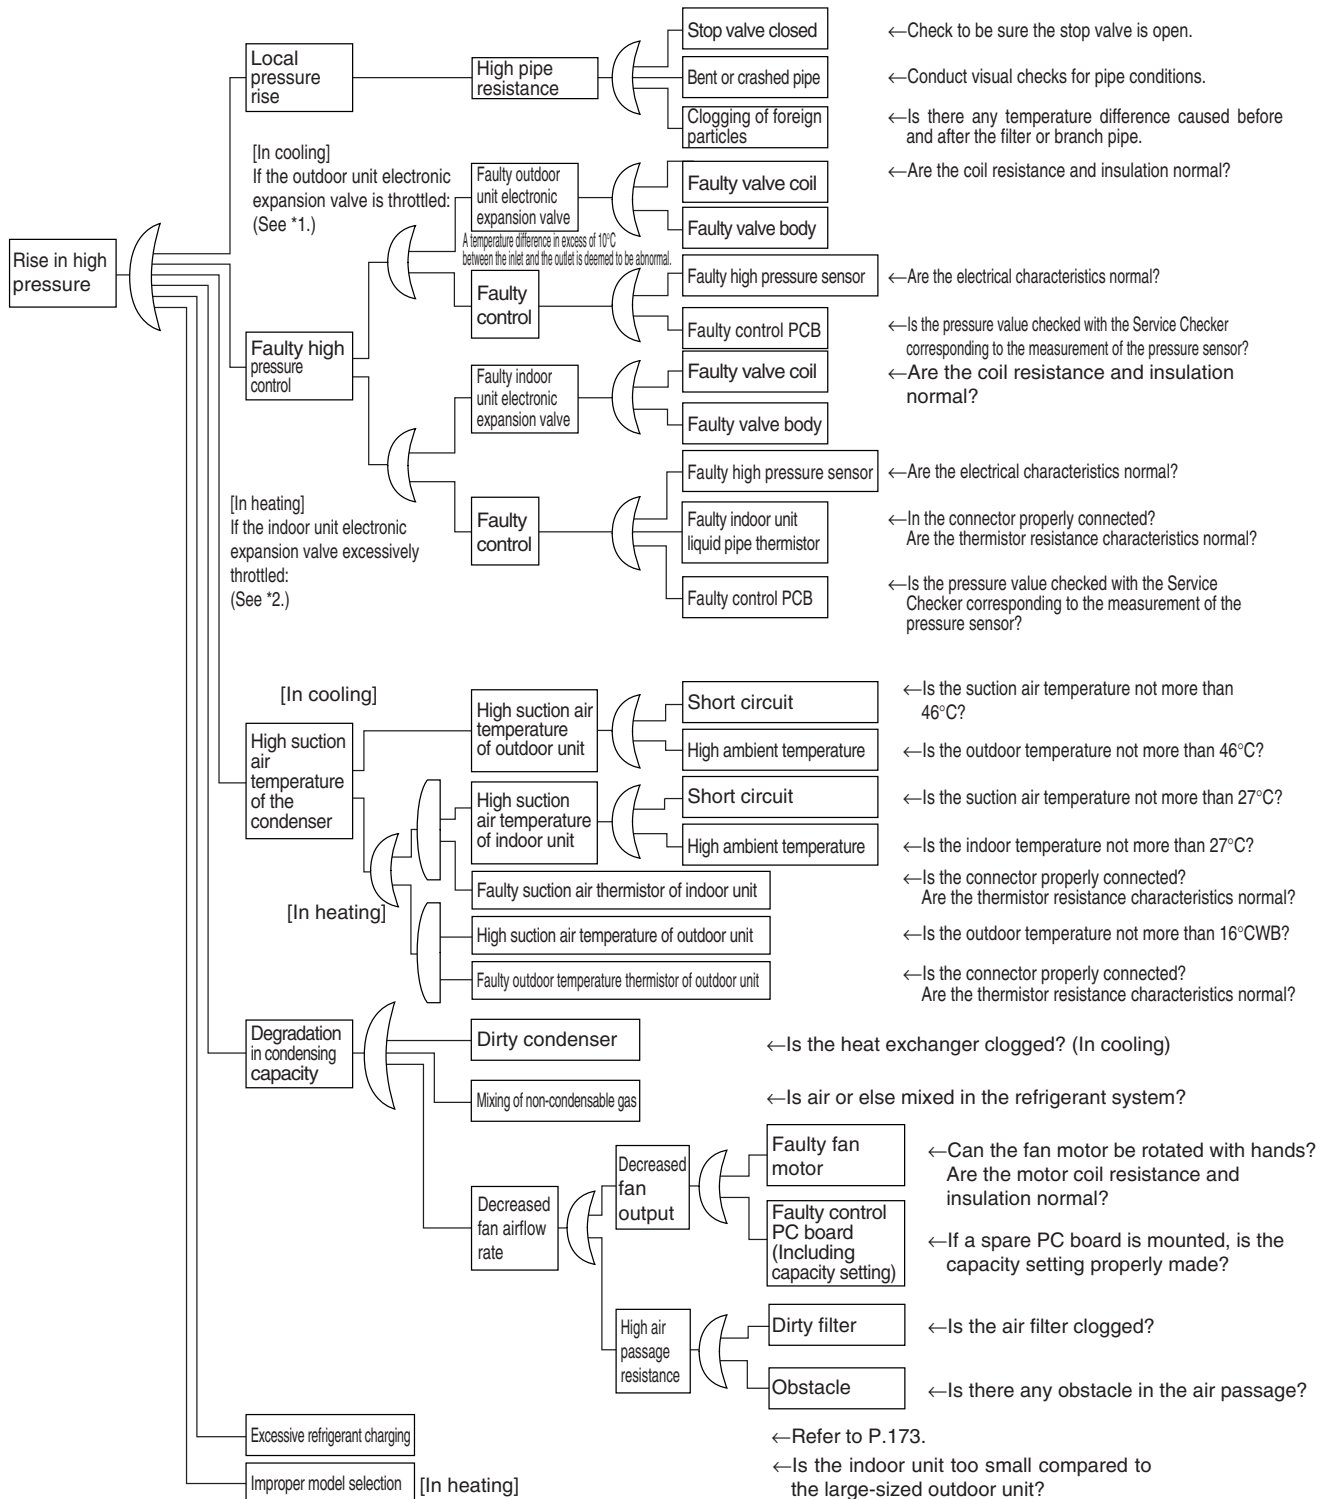

*1: In cooling, it is normal if the outdoor unit electronic expansion valve (EV1) is fully open.
 *2: In heating, the indoor unit electronic expansion valve is used for "subcooled degree control".
 (For details, refer to "Electronic Expansion Valve Control" on P.72.)

[CHECK 2] Check for causes of drop in low pressure


Referring to the Fault Tree Analysis (FTA) shown below, probe the faulty points.

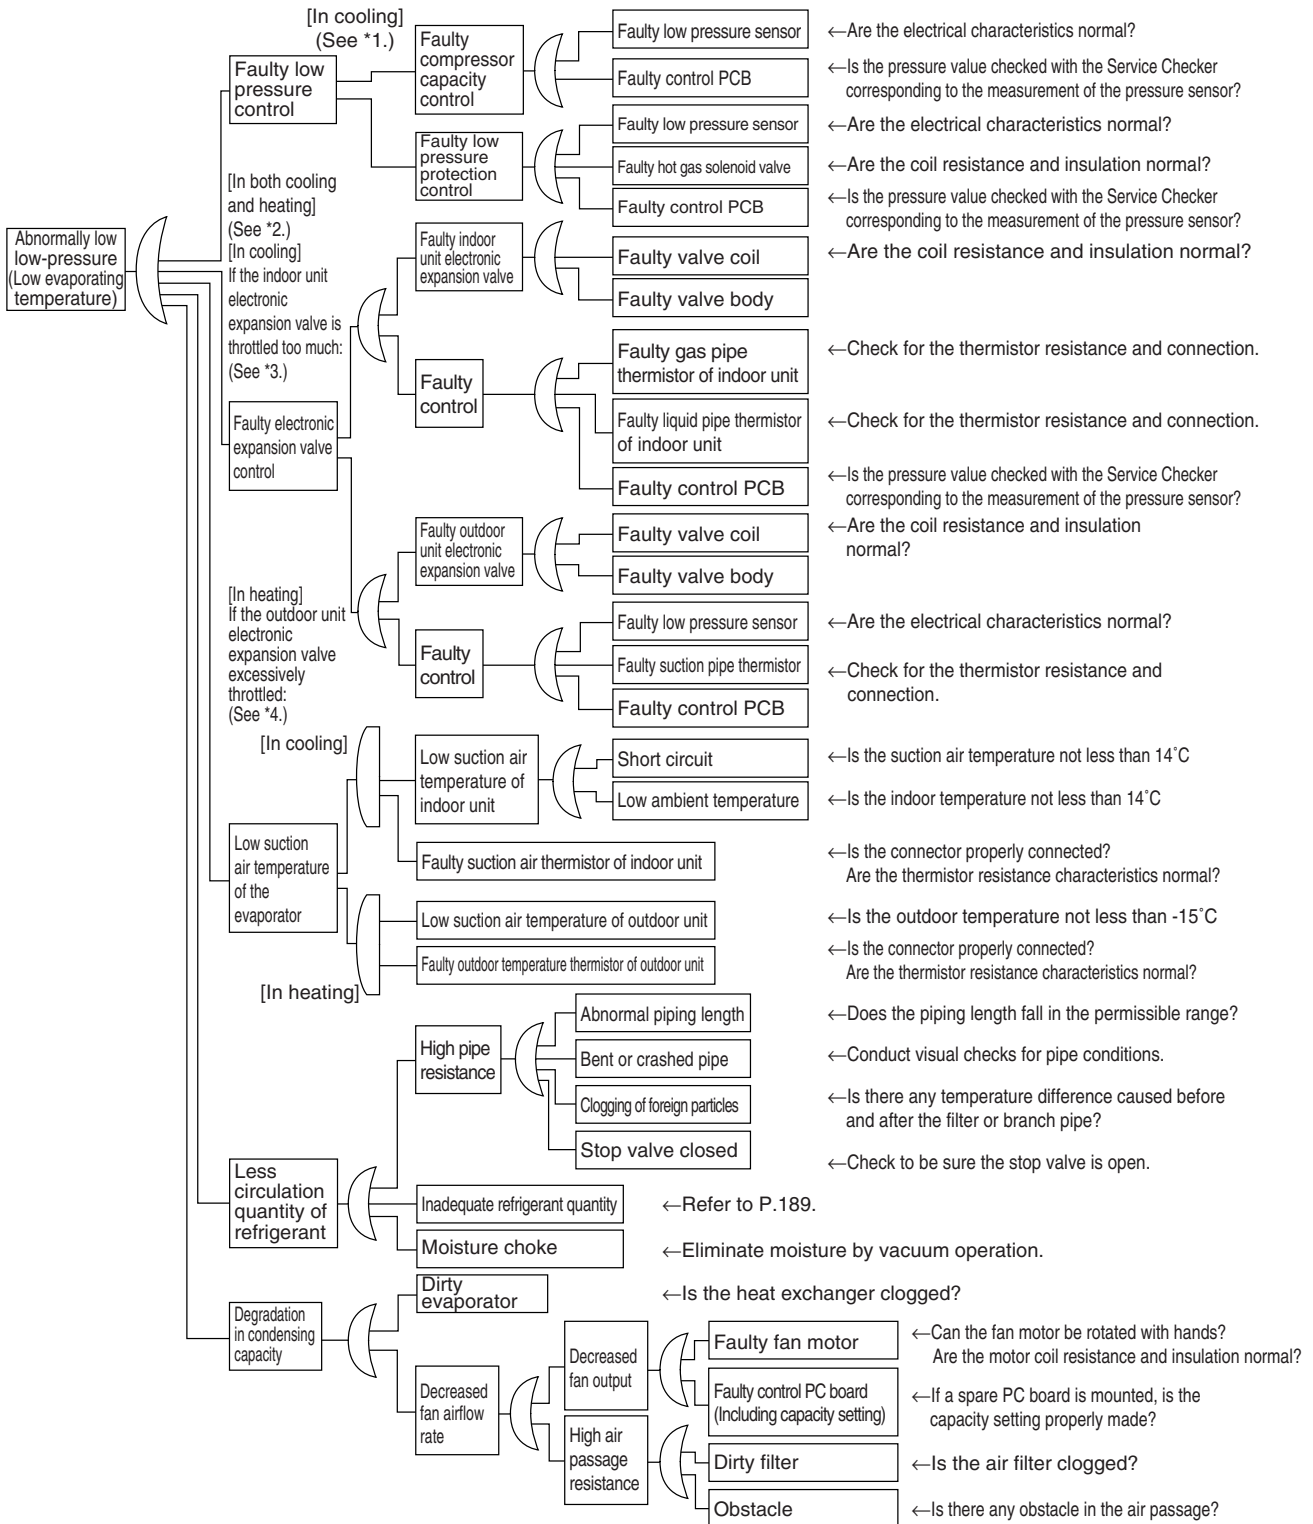

*1: For details of the compressor capacity control while in cooling, refer to "Compressor PI Control" on P.50.
 *2: The "low pressure protection control" includes low pressure protection control and hot gas bypass control. For details, refer to P.61.
 *3: In cooling, the indoor unit electronic expansion valve is used for "superheated degree control". (For details, refer to P.72.)
 *4: In heating, the outdoor unit electronic expansion valve (EV1) is used for "superheated degree control of outdoor unit heat exchanger". (For details, refer to P.51.)

[CHECK 3] Check for Fan Motor Connector

- (1) Turn the power supply off.
- (2) With the fan motor connector on motor side disconnected, measure the resistance between each pin, then make sure that the resistance is more than the value mentioned in the following table.

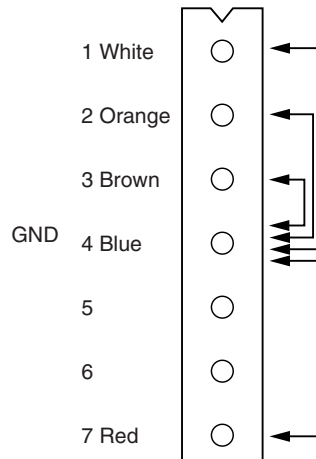

Measurement point	Judgment
1 - 4	1MΩ or more
2 - 4	100kΩ or more
3 - 4	100Ω or more
4 - 7	100kΩ or more

Part 8

Appendix


1. Piping Diagrams.....	222
1.1 Outdoor Unit.....	222
1.2 Indoor Unit.....	224
2. Wiring Diagrams.....	227
2.1 Outdoor Unit.....	227
2.2 Field Wiring	229
2.3 Indoor Unit.....	231
3. Option List.....	246
3.1 Option List of Controllers.....	246
3.2 Option List of Outdoor Unit.....	248
4. Example of Connection	249
5. Thermistor Resistance / Temperature Characteristics.....	251
6. Pressure Sensor	253
7. Method of Replacing the Inverter's Power Transistors Modules.....	254

1. Piping Diagrams

1.1 Outdoor Unit


RXYSQ4 / 5 / 6PA7Y1B

3D057917

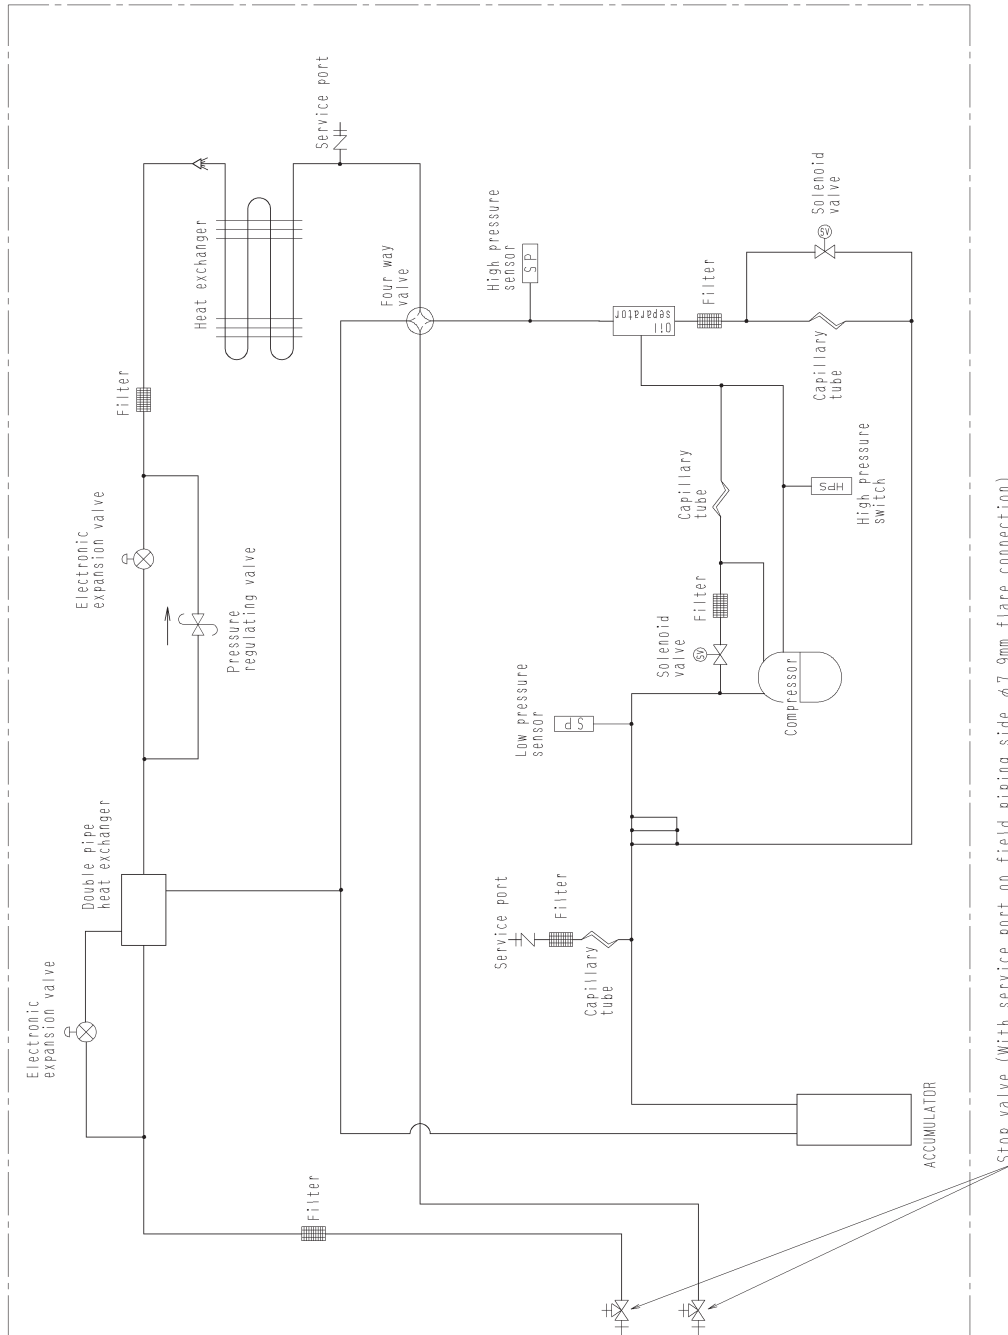


RXYSQ4 / 5 / 6PA7V1B

3D062712

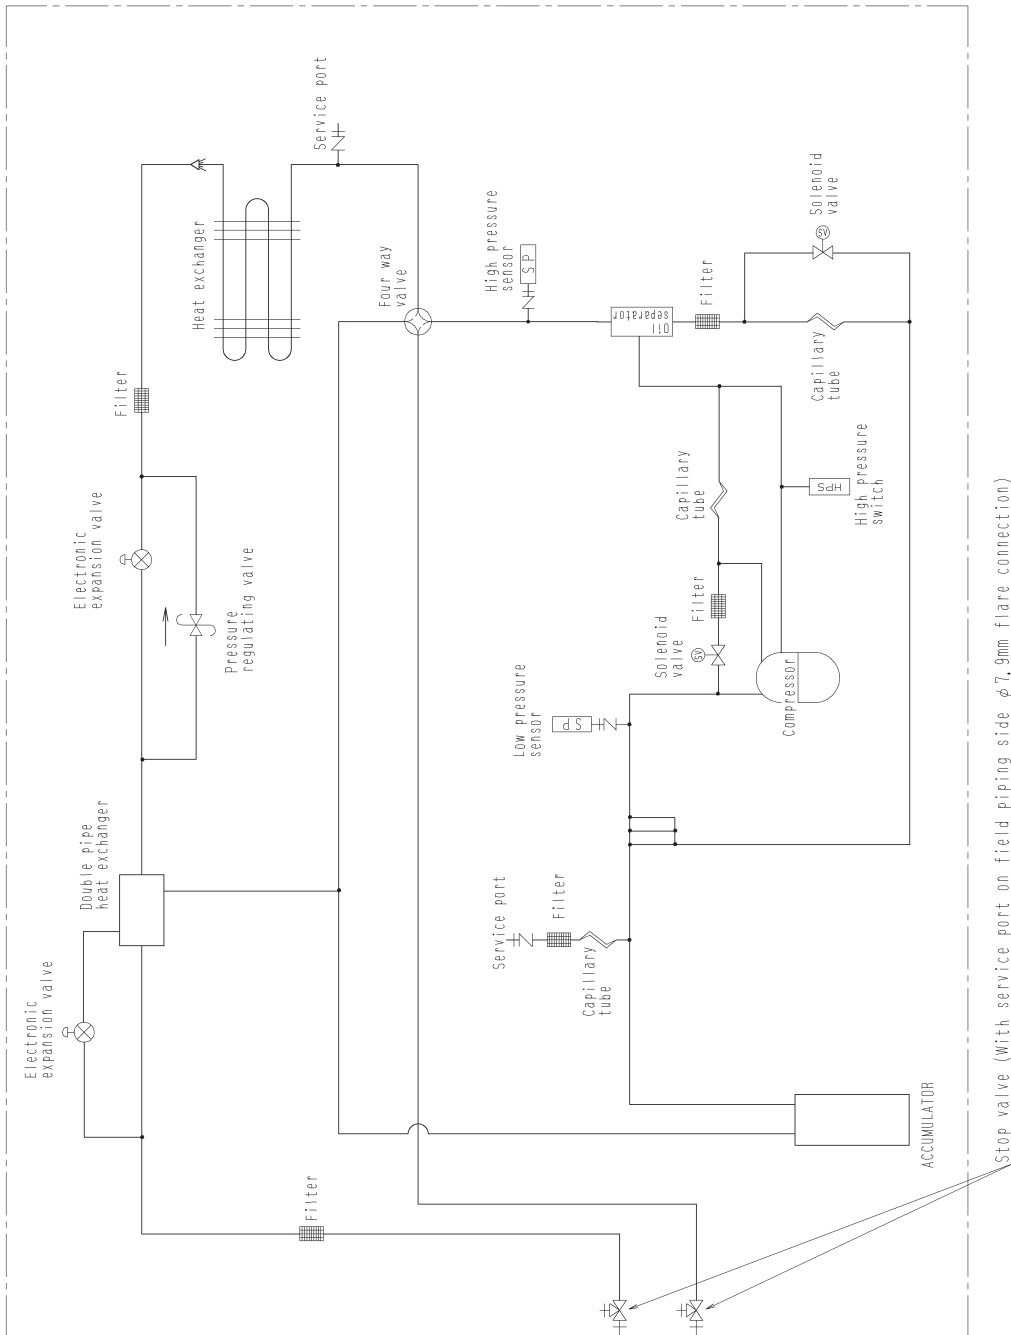

1.2 Indoor Unit

FXCQ, FXFQ, FXZQ, FXKQ, FXSQ, FXMQ, FXHQ, FXAQ, FXLQ, FXNQ

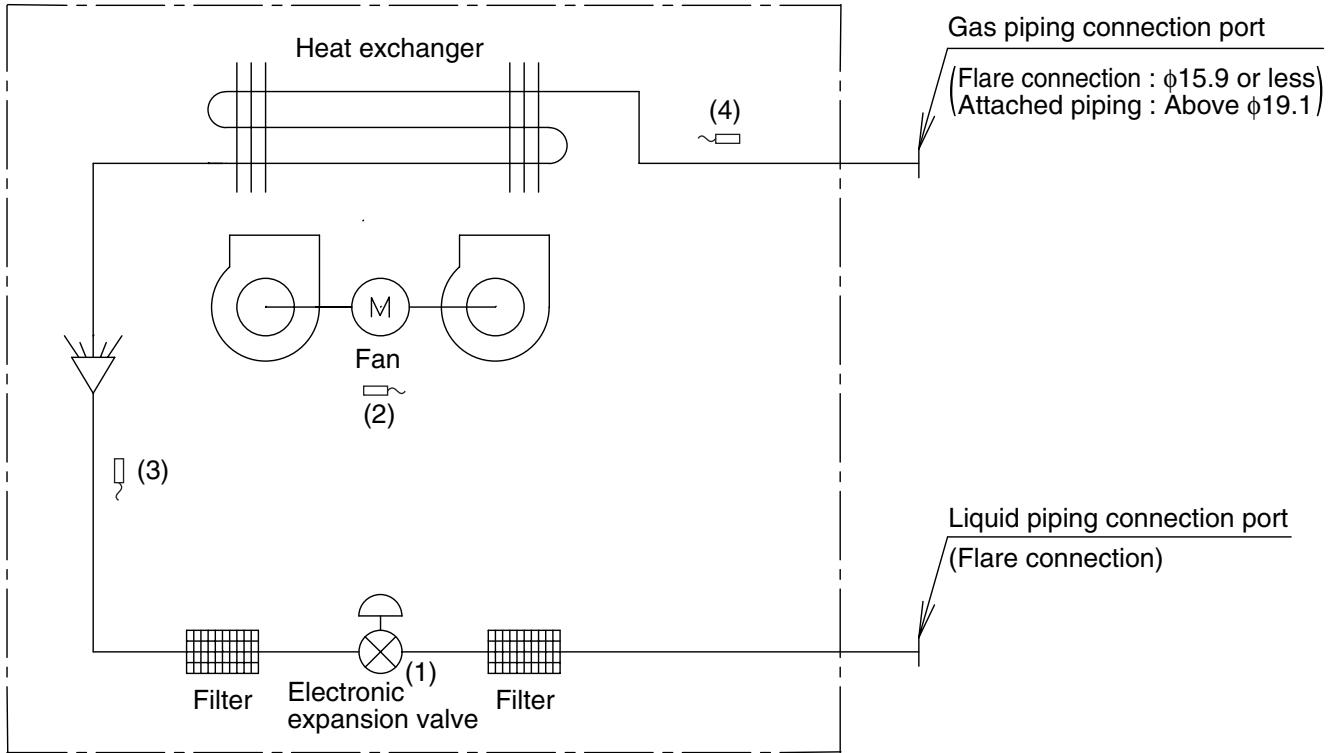


DU220-602J

Code	Name	Code	Main function
(1)	Electronic expansion valve	Y1E	Used for gas superheated degree control while in cooling operation or subcooled degree control while in heating operation.
(2)	Suction air temperature thermistor	R1T	Used for thermostat control.
(3)	Liquid pipe	R2T	Used for gas superheated degree control while in cooling operation or subcooled degree control while in heating operation.
(4)	Gas pipe	R3T	Used for gas superheated degree control while in cooling operation.

(mm)

Capacity	GAS	Liquid
20 / 25 / 32 / 40 / 50	$\phi 12.7$	$\phi 6.4$
63 / 80 / 100 / 125	$\phi 15.9$	$\phi 9.5$

FXDQ

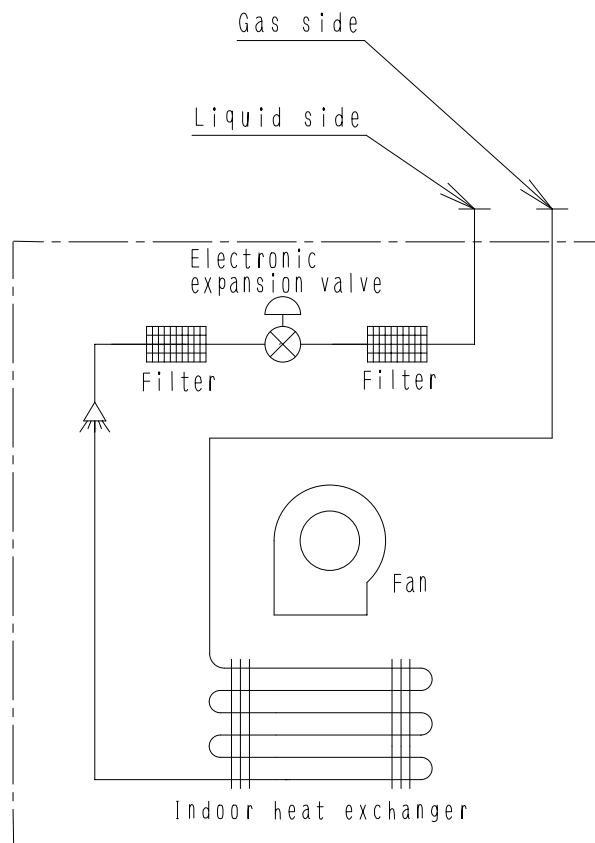

4D043864H


■ Refrigerant pipe connection port diameters

(mm)

Model	Gas	Liquid
FXDQ20 / 25 / 32 / 40 / 50	φ12.7	φ6.4
FXDQ63	φ15.9	φ9.5


FXUQ + BEVQ

Indoor Unit

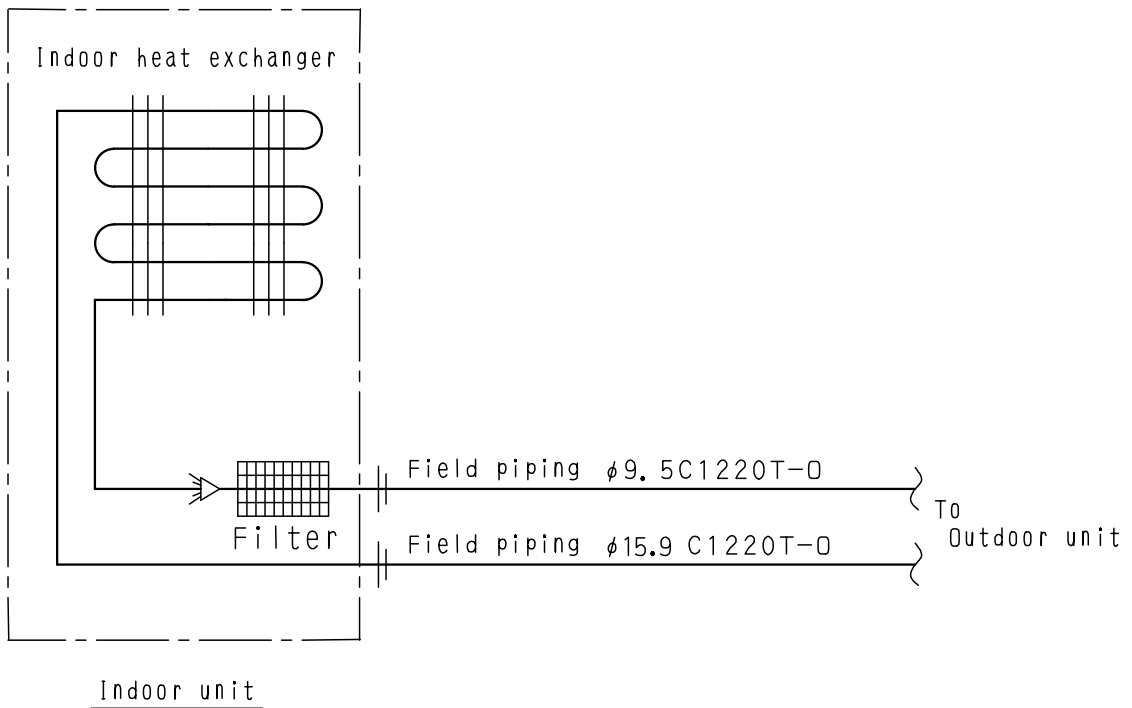

4D037995F

Connection Unit

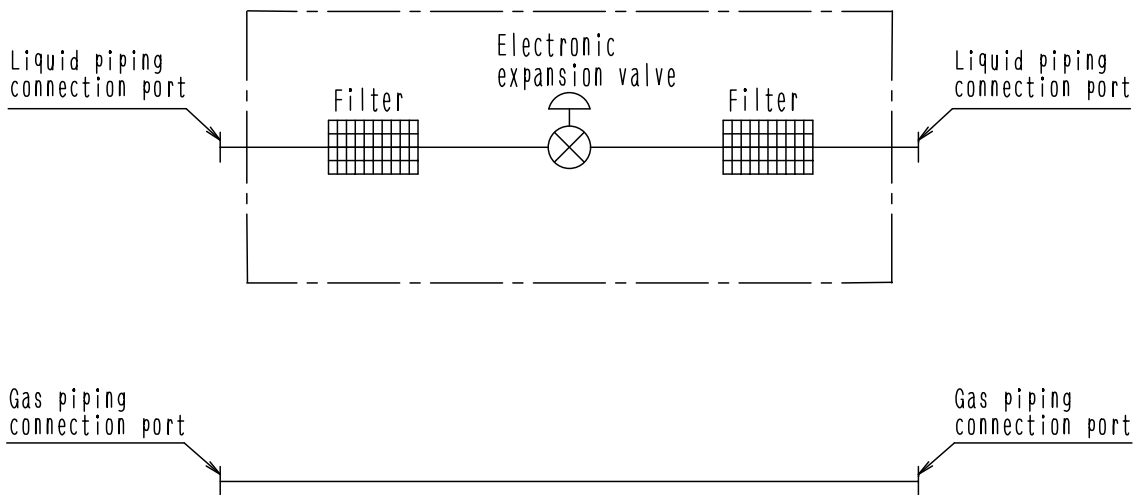


4D034127B

2. Wiring Diagrams

2.1 Outdoor Unit

RXYSQ4 / 5 / 6PA7Y1B

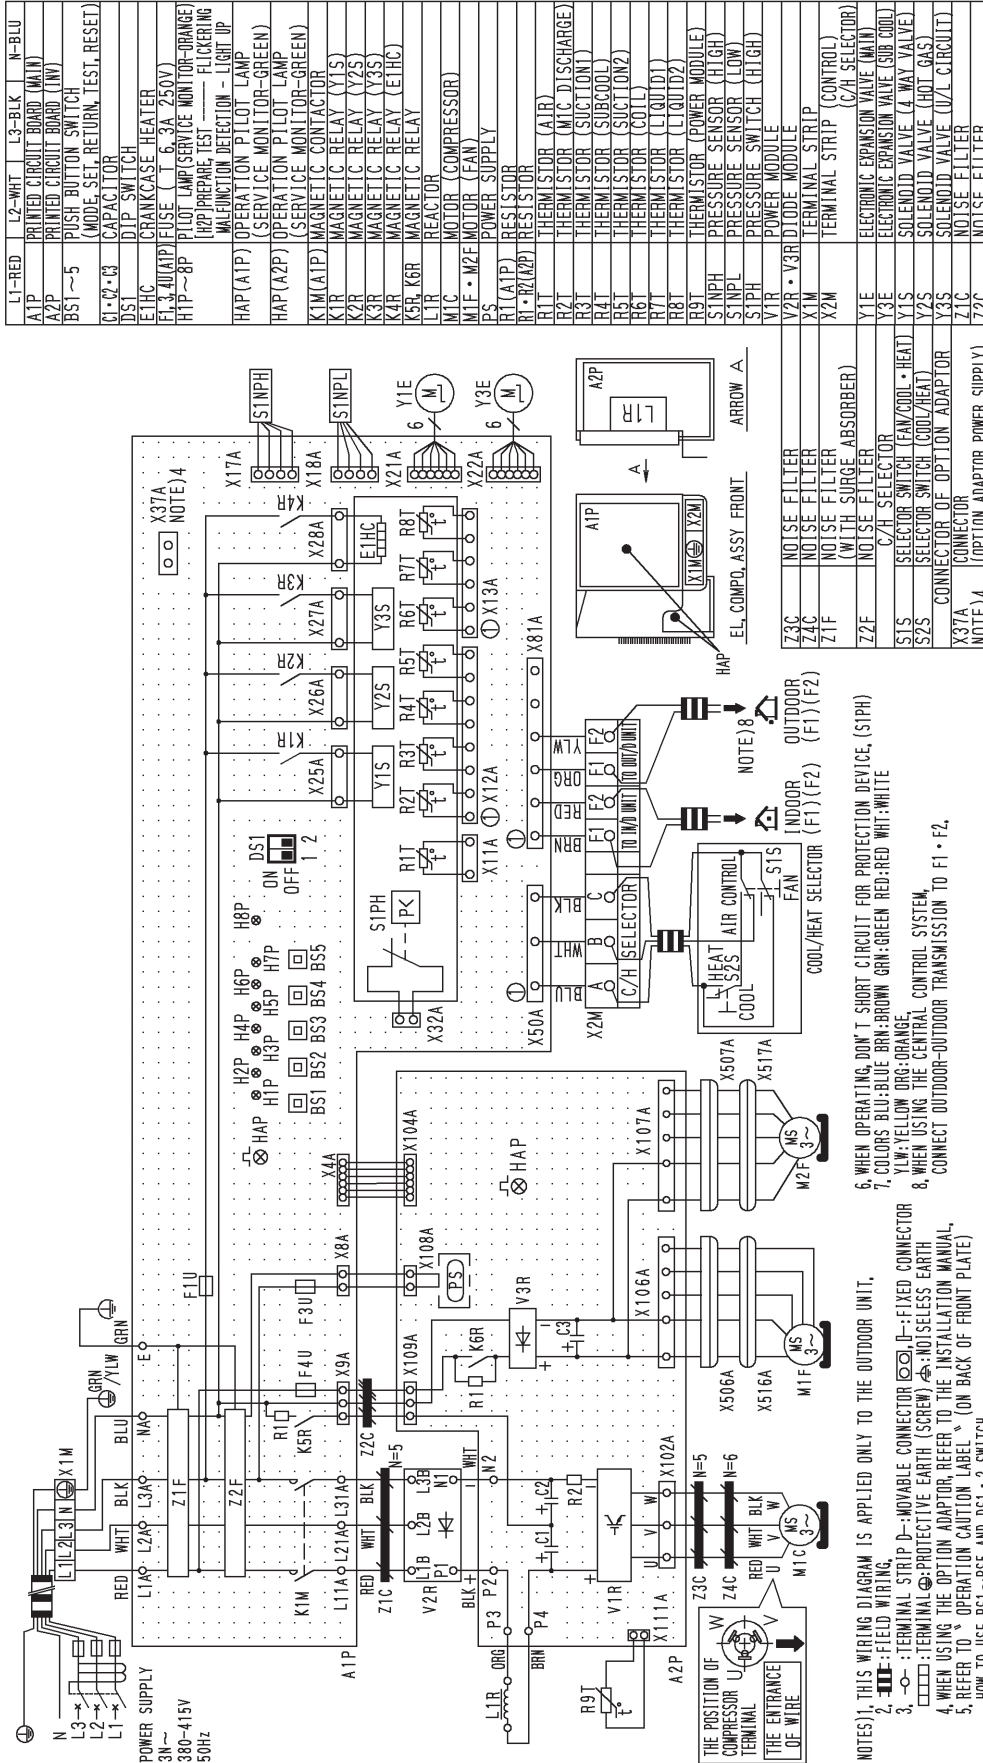

L1-RED	L2-WHT	L3-BLK	N-BLU
A1P	PRINTED CIRCUIT BOARD (MAIN)		
A2P	PRINTED CIRCUIT BOARD (INV)		
BS1~5	PUSH BUTTON SWITCH (MODE, SET, RETURN, TEST, RESET)		
C1-C3	CAPACITOR		
DS1	DIP SWITCH		
E1HC	CRANKCASE HEATER		
F1,3,4U(RIP)	FUSE (1.6, 3A, 250V)		
H1P~8P	PILOT LAMP (SERVICE MONITOR-ORANGE) (H2P:PREPARE TEST --- FLICKERING) (H3P:FUNCTION DETECTION - LIGHT UP)		
HAP (A1P)	OPERATION PILOT LAMP (SERVICE MONITOR-GREEN)		
HAP (A2P)	OPERATION PILOT LAMP (SERVICE MONITOR-GREEN)		
K1M (A1P)	MAGNETIC CONTACTOR		
K1R	MAGNETIC RELAY (Y1S)		
K2R	MAGNETIC RELAY (Y2S)		
K3R	MAGNETIC RELAY (Y3S)		
K4R	MAGNETIC RELAY (ETHC)		
K5R, K6R	MAGNETIC RELAY		
L1R	REACTOR		
M1C	MOTOR (COMPRESSOR)		
M1F~M2E	MOTOR (FAN)		
PS	POWER SUPPLY		
RT (A1P)	RESISTOR		
R1T	THERMISTOR (AIR)		
R2T	THERMISTOR (M1C DISCHARGE)		
R3T	THERMISTOR (SUCTION1)		
R4T	THERMISTOR (SUBCOOL)		
R5T	THERMISTOR (SUCTION2)		
R6T	THERMISTOR (COIL)		
R7T	THERMISTOR (LIQUID1)		
R8T	THERMISTOR (LIQUID2)		
R9T	THERMISTOR (POWER MODULE)		
S1NPH	PRESSURE SENSOR (HIGH)		
S1NPL	PRESSURE SENSOR (LOW)		
S1PH	PRESSURE SWITCH (HIGH)		
V1R	POWER MODULE		
V2R~V3R	DIODE MODULE		
X1M	TERMINAL STRIP (CONTROL)		
X2M	TERMINAL STRIP (C/H SELECTOR)		
Y1E	ELECTRONIC EXPANSION VALVE (MAIN)		
Y3E	ELECTRONIC EXPANSION VALVE (SUB COIL)		
Y1S	SOLENOID VALVE (4 WAY VALVE)		
Y2S	SOLENOID VALVE (HOT GAS)		
Y3S	SOLENOID VALVE (I/ZL CIRCUIT)		
Z1C	NOISE FILTER		
Z2C	NOISE FILTER		

Z3C	NOISE FILTER
Z4C	NOISE FILTER
Z1F	NOISE FILTER (WITH SURGE ABSORBER)
Z2F	NOISE FILTER (WITH SURGE ABSORBER)
S1S	SELECTOR SWITCH (FAN/COOL-HEAT)
S2S	SELECTOR SWITCH (COOL/HEAT)
Y3S	CONNECTOR OF OPTION ADAPTOR
X37A	CONNECTOR (OPTION ADAPTOR POWER SUPPLY)
NOTE)4	(OPTION ADAPTOR POWER SUPPLY)


- WHEN OPERATING, DON'T SHORT CIRCUIT FOR PROTECTION DEVICE, (S1PH)
- COLORS BLU:BLUE BRN:BROWN GRN:GREEN RED:RED WHT:WHITE
- Y1L:YELLOW DRG:ORANGE
- WHEN USING THE CENTRAL CONTROL SYSTEM, CONNECT OUTDOOR-OUTDOOR TRANSMISSION TO F1 • F2.

- NOTES)1, THIS WIRING DIAGRAM IS APPLIED ONLY TO THE OUTDOOR UNIT.
- FIELD WIRING.
- MOVABLE CONNECTOR (O) : FIXED CONNECTOR (□) : TERMINAL STRIP D : PROTECTIVE EARTH (SCREW) : NOISELESS EARTH
- WHEN USING THE OPTION ADAPTOR, REFER TO THE INSTALLATION MANUAL.
- REFER TO OPERATION CAUTION LABEL (ON BACK OF FRONT PLATE) HOW TO USE BS1~BS5 AND DS1 • 2 SWITCH.

3D059640

RXYSQ4 / 5 / 6PA7V1B

3D05811B

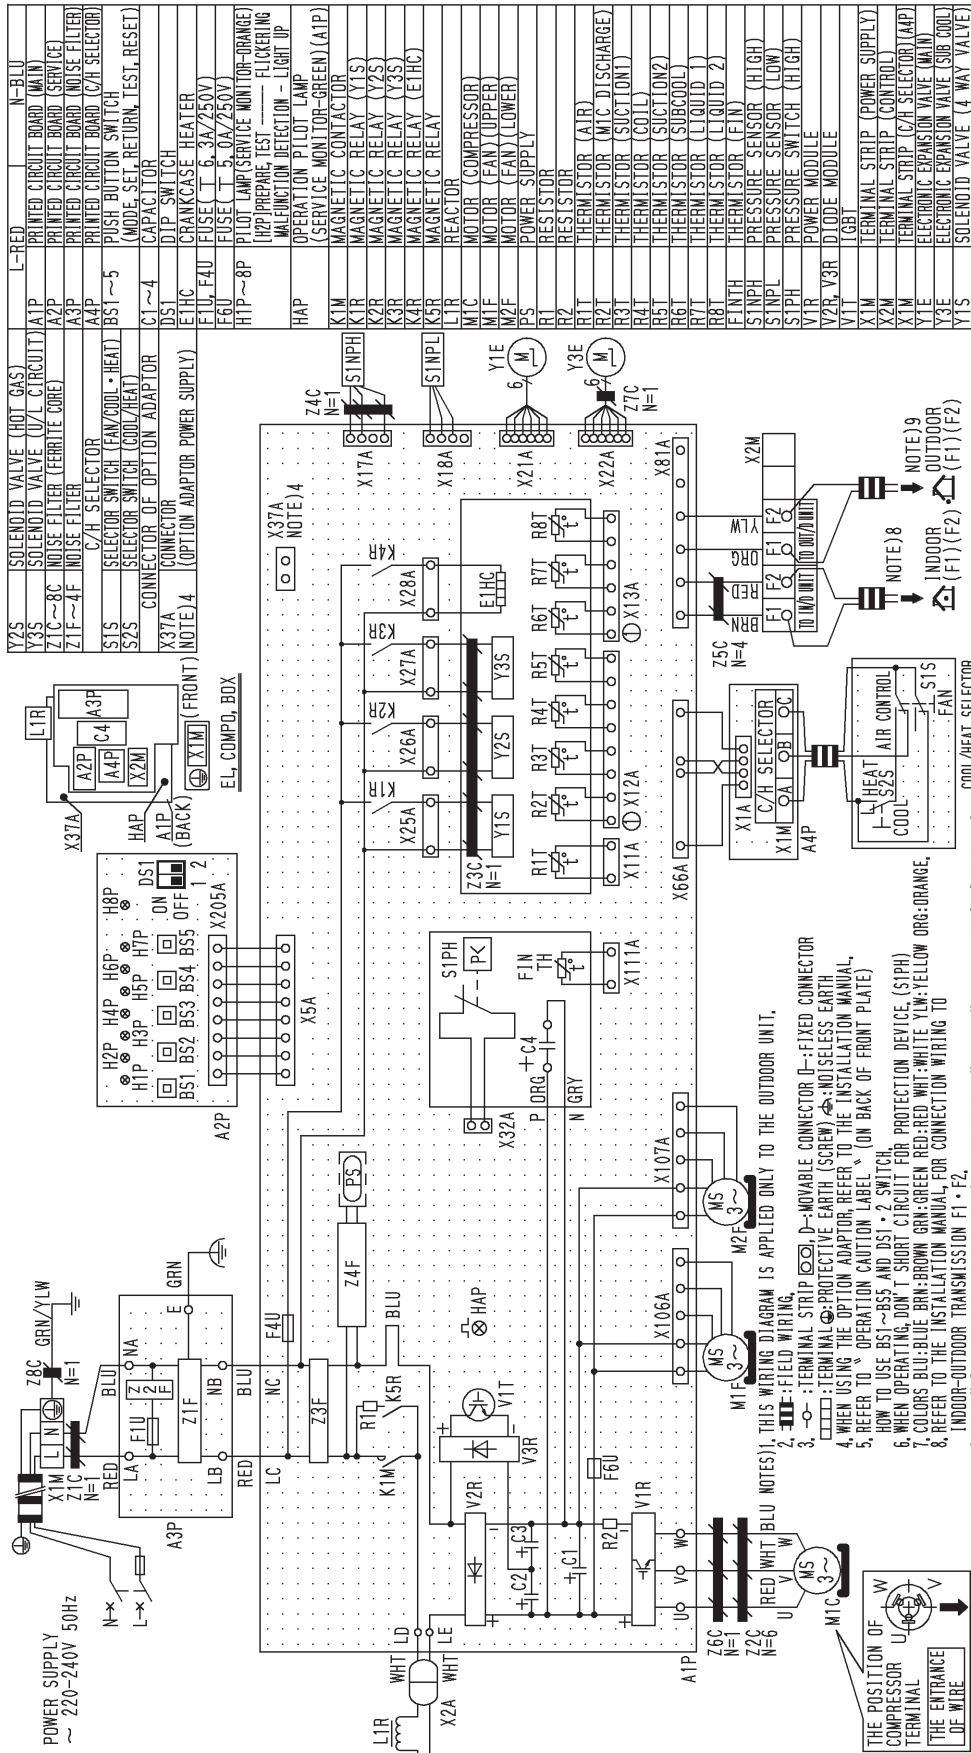


2.2 Field Wiring

RXYSQ4 / 5 / 6PA7Y1B

- Notes 1) All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
 - 2) Use copper conductors only.
 - 3) As for details, see wiring diagram.
 - 4) Install circuit breaker for safety.
 - 5) All field wiring and components must be provided by licensed electrician.
 - 6) Unit shall be grounded in compliance with the applicable local and national codes.
 - 7) Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
 - 8) Be sure to install the switch and the fuse to the power line of each equipment.
 - 9) Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
 - 10) If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
- Running the product in reversed phase may break the compressor and other parts.

- Notes 1) All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
- 2) Use copper conductors only.
- 3) As for details, see wiring diagram.
- 4) Install circuit breaker for safety.
- 5) All field wiring and components must be provided by licensed electrician.

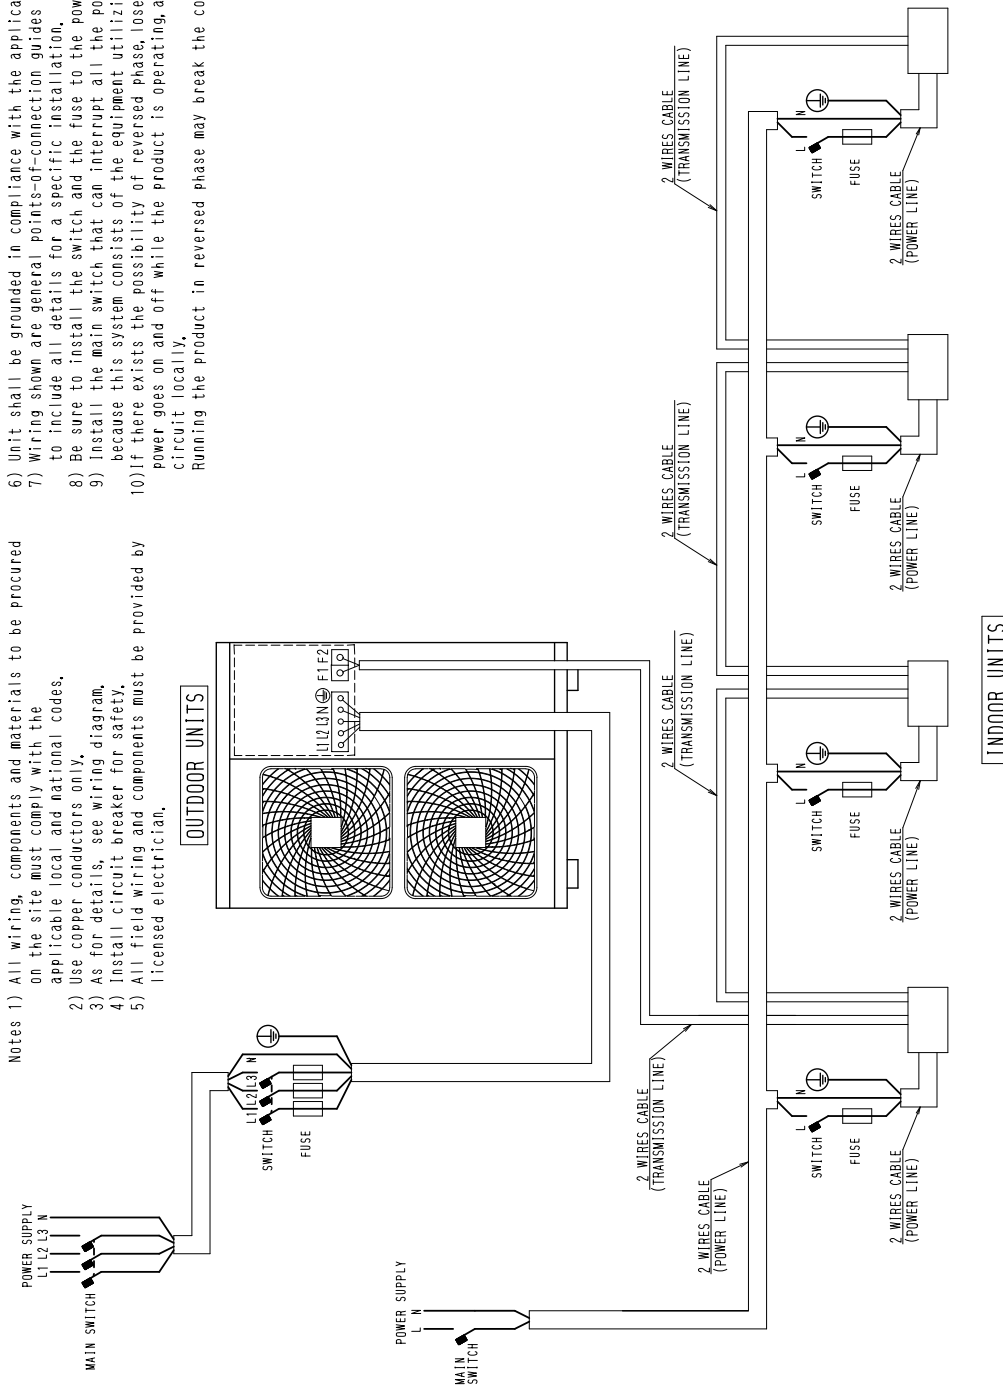


3D057919

RXYSQ4 / 5 / 6PA7V1B

- 6) Unit shall be grounded in compliance with the applicable local and national codes.
- 7) Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
- 8) Be sure to install the switch and the fuse to the power line of each equipment.
- 9) Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.


- Notes 1) All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
- 2) Use copper conductors only.
 - 3) As for details, see wiring diagram.
 - 4) Install circuit breaker for safety.
 - 5) All field wiring and components must be provided by licensed electrician.

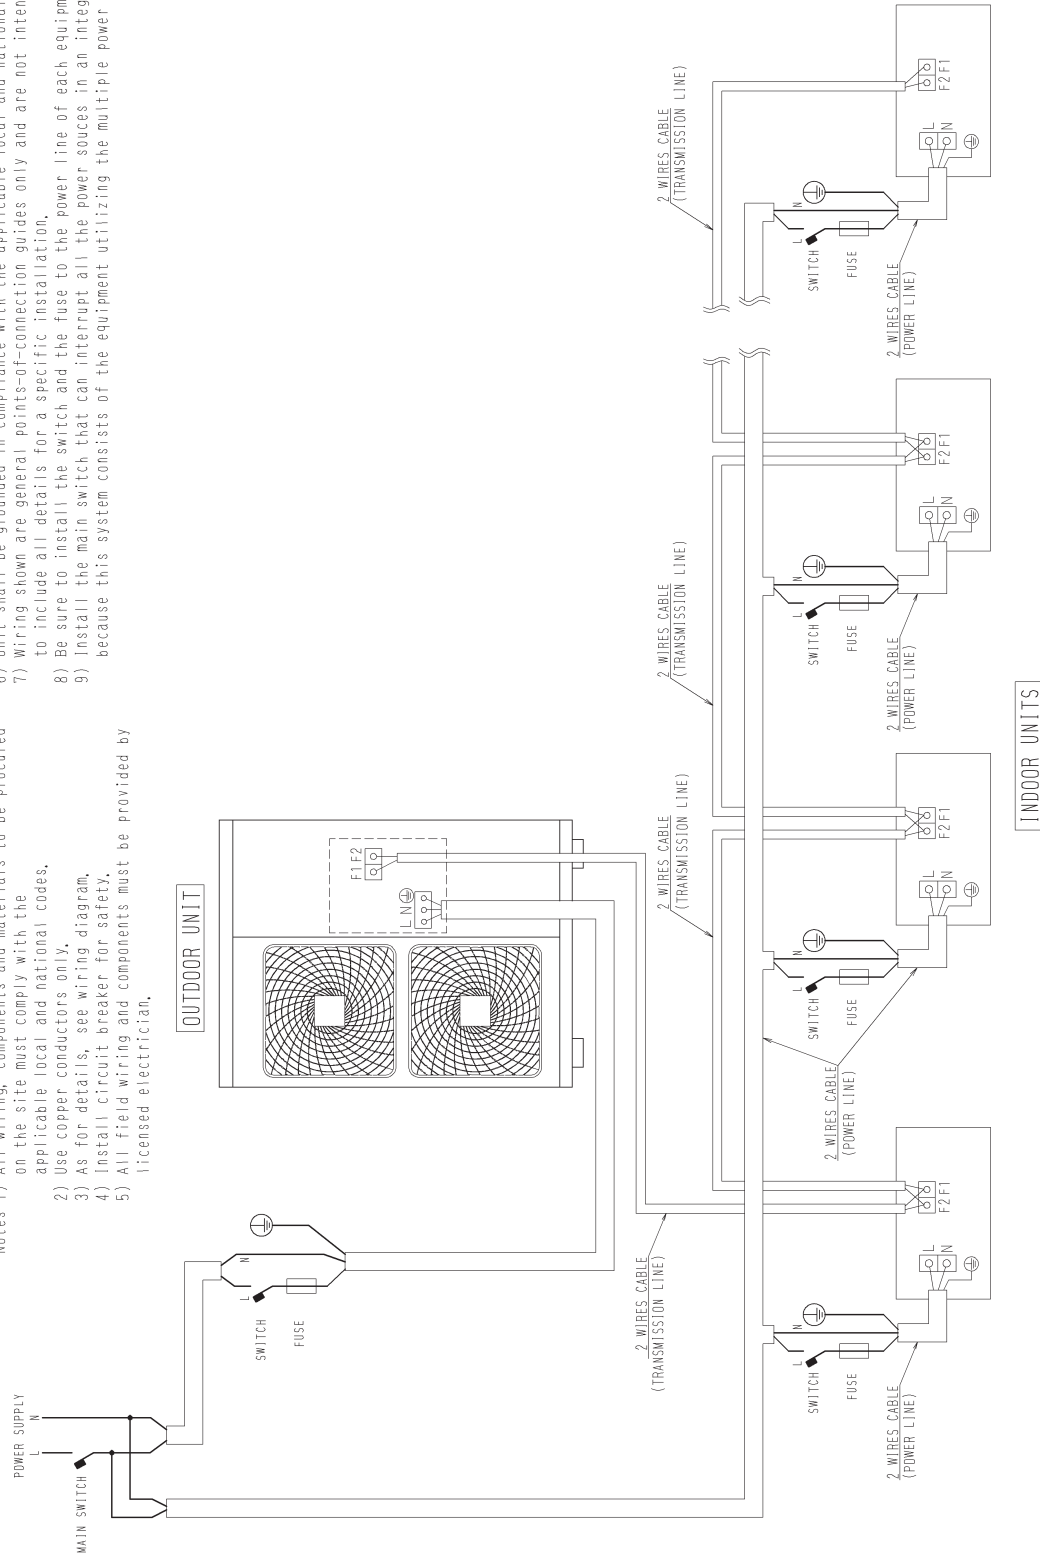

3D052597

2.3 Indoor Unit

FXCQ20M / 25M / 32M / 63MV3

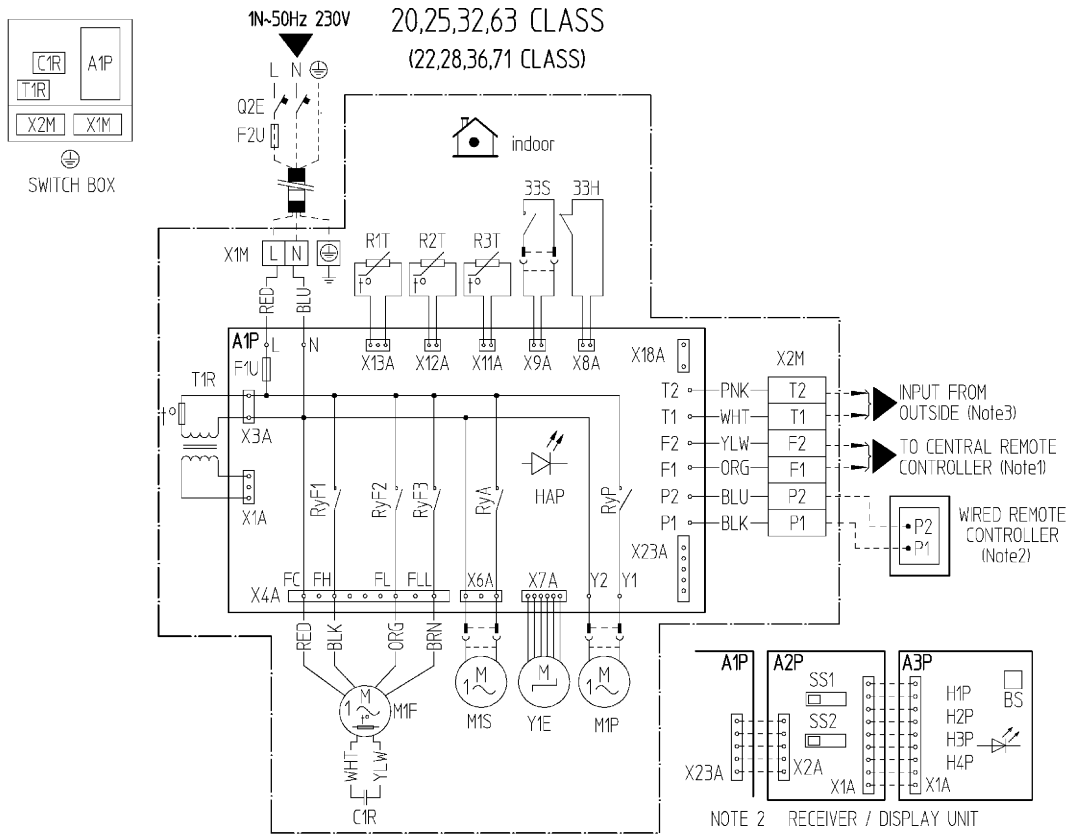

FIELD WIRING

L : LIVE
N : NEUTRAL
C : CONNECTOR
• : WIRE CLAMP
⊕ : PROTECTIVE EARTH (SCREW)

COLORS:
BLK : BLACK
BLU : BLUE
BRN : BROWN
ORG : ORANGE
PNK : PINK
RED : RED
WHT : WHITE
YLW : YELLOW


33H	FLOAT SWITCH	R2T, R3T	THERMISTOR (COIL)	H1P	LIGHT EMITTING DIODE (ON-RED)
33S	LIMIT SWITCH (SWING FLAP)	Q2E	EARTH LEAK DETECTOR	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
A1P	PRINTED CIRCUIT BOARD	RyA	MAGNETIC RELAY (M1S)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
C1R	CAPACITOR (M1F)	RyF1-3	MAGNETIC RELAY (M1F)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
F1T	THERMAL FUSE (152°C) (M1F EMBEDDED)	RyP	MAGNETIC RELAY (M1P)	SS1	SELECTOR SWITCH (MAIN/SUB)
F1U	FUSE (250V, 5A)	T1R	TRANSFORMER (220-240V/22W)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
F2U	FIELD FUSE	X1M	TERMINAL STRIP (POWER)	CONNECTOR FOR OPTIONAL PARTS	
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	X2M	TERMINAL STRIP (CONTROL)	X18A	CONNECTOR (WIRING, ADAPTOR FOR ELECTRICAL APPENDICES)
M1F	MOTOR (INDOOR FAN)	Y1E	ELECTRONIC EXPANSION VALVE	X23A	CONNECTOR (WIRELESS REMOTE CONTROLLER)
M1S	MOTOR (SWING FLAP)	RECEIVER/DISPLAY UNIT (ATTACHED TO WIRELESS REMOTE CONTROLLER)			
M1P	MOTOR (DRAIN PUMP)				
R1T	THERMISTOR (AIR)	A2P, A3P	PRINTED CIRCUIT BOARD		
		BS	ON/OFF BUTTON		

NOTES :

1. WHEN USING A CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
2. X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS USED.
3. WHEN CONNECTING THE INPUT WIRES FROM THE OUTDOOR UNIT, 'FORCED OFF' OR 'ON/OFF' OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. FOR MORE DETAILS SEE INSTALLATION MANUAL.
4. USE COPPER CONDUCTORS ONLY.

2TW23776-1D

FXCQ40M / 50M / 80M / 125MV3

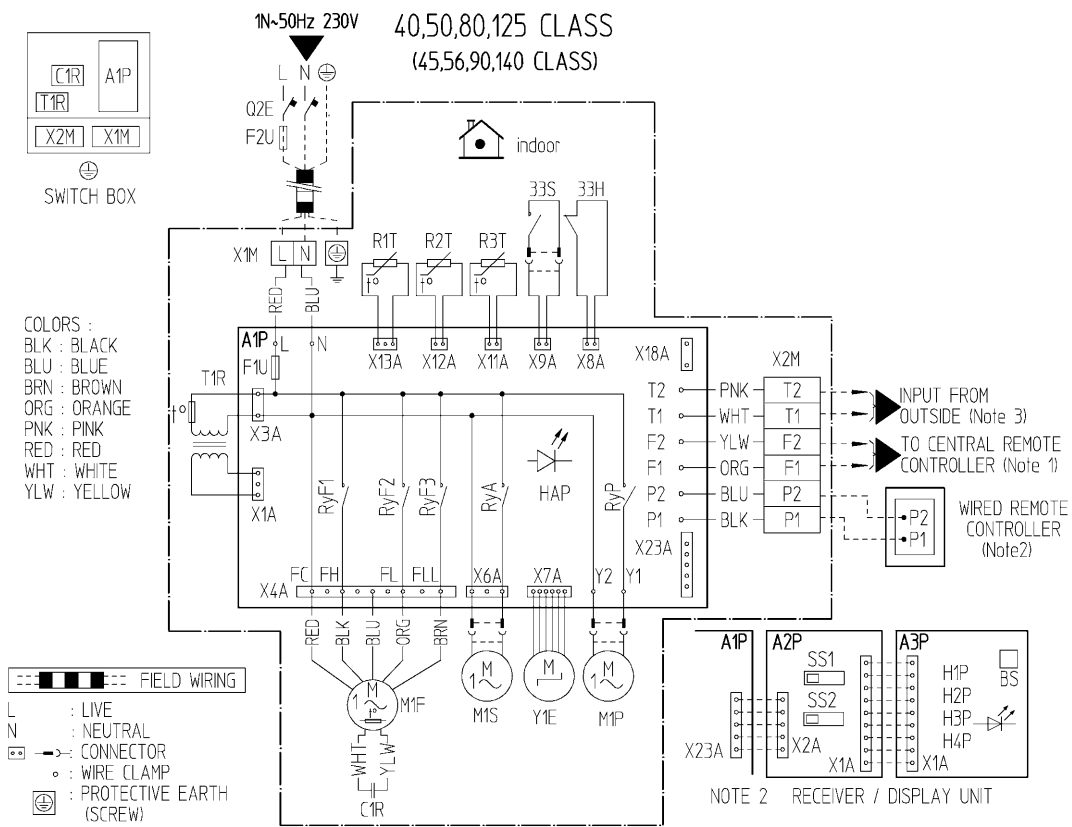


33H	FLOAT SWITCH	R2T, R3T	THERMISTOR (COIL)	H1P	LIGHT EMITTING DIODE (ON-RED)
33S	LIMIT SWITCH (SWING FLAP)	Q2E	EARTH LEAK DETECTOR	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
A1P	PRINTED CIRCUIT BOARD	RyA	MAGNETIC RELAY (M1S)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
C1R	CAPACITOR (M1F)	RyF1-3	MAGNETIC RELAY (M1F)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
F1T	THERMAL FUSE (152°C/M1F EMBEDDED)	RyP	MAGNETIC RELAY (M1P)	SS1	SELECTOR SWITCH (MAIN/SUB)
F1U	FUSE (250V, 5A)	T1R	TRANSFORMER (220-240V/22V)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
F2U	FIELD FUSE	X1M	TERMINAL STRIP (POWER)	CONNECTOR FOR OPTIONAL PARTS	
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	X2M	TERMINAL STRIP (CONTROL)	X18A	CONNECTOR (WIRING, ADAPTOR FOR ELECTRICAL APPENDICES)
M1F	MOTOR (INDOOR FAN)	Y1E	ELECTRONIC EXPANSION VALVE	X23A	CONNECTOR (WIRELESS REMOTE CONTROLLER)
M1S	MOTOR (SWING FLAP)	RECEIVER/DISPLAY UNIT (ATTACHED TO WIRELESS REMOTE CONTROLLER)			
M1P	MOTOR (DRAIN PUMP)	A2P, A3P	PRINTED CIRCUIT BOARD		
R1T	THERMISTOR (AIR)	BS	ON/OFF BUTTON		

NOTES :

1. WHEN USING A CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
2. X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS USED.
3. WHEN CONNECTING THE INPUT WIRES FROM THE OUTDOOR UNIT, 'FORCED OFF' OR 'ON/OFF' OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. FOR MORE DETAILS SEE INSTALLATION MANUAL.
4. USE COPPER CONDUCTORS ONLY.

2TW23806-1D

FXFQ20P / 25P / 32P / 40P / 50P / 63P / 80P / 100P / 125P7VE

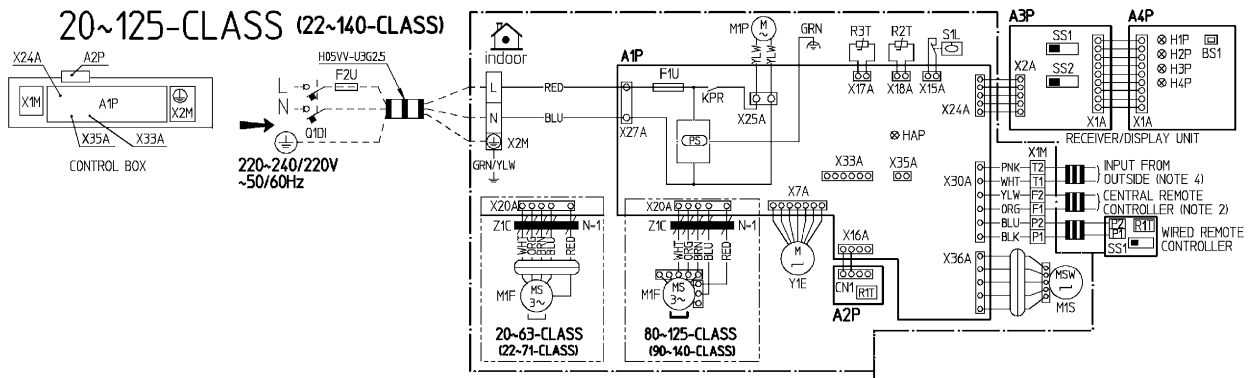

INDOOR UNIT		MIS	MOTOR (SWING FLAP)	RECEIVER/DISPLAY UNIT (ATTACHED TO WIRELESS REMOTE CONTROLLER)		SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
A1P	PRINTED CIRCUIT BOARD	PS	POWER SUPPLY CIRCUIT	A3P	PRINTED CIRCUIT BOARD	X24A	CONNECTOR (WIRELESS REMOTE CONTROLLER)
A2P	PRINTED CIRCUIT BOARD	Q1D	EARTH LEAK DETECTOR	A4P	PRINTED CIRCUIT BOARD	X33A	CONNECTOR (ADAPTOR FOR WIRING)
C1	CAPACITOR	R1T	THERMISTOR (AIR)	BS1	PUSH BUTTON (ON/OFF)	X35A	CONNECTOR (GROUP CONTROL ADAPTOR)
F1U	FUSE (T, 5A, 250V)	R2T	THERMISTOR (COIL)	H1P	LIGHT EMITTING DIODE (ON-RED)	WIRED REMOTE CONTROLLER	
F2U	FIELD FUSE	R3T	THERMISTOR (HEADER)	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)	R1T	THERMISTOR (AIR)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	S1L	FLOAT SWITCH	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)	SS1	SELECTOR SWITCH (MAIN/SUB)
KPR	MAGNETIC RELAY (MIP)	X1M	TERMINAL STRIP	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)		
L1	COIL	X2M	TERMINAL STRIP				
MIF	MOTOR (INDOOR FAN)	Y1E	ELECTRONIC EXPANSION VALVE				
MIP	MOTOR (DRAIN PUMP)	Z1C	FERRITE CORE				


NOTES:

1. □□□□: TERMINAL □□,D-: CONNECTOR □□: FIELD WIRING
2. IN CASE OF USING A CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
3. X24A, X33A AND X35A ARE CONNECTED WHEN THE OPTIONAL ACCESSORIES ARE BEING USED.
4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER.
SEE INSTALLATION MANUAL FOR MORE DETAILS.
5. CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH (SS1, SS2) BY INSTALLATION MANUAL AND ENGINEERING DATA, ETC.
6. COLOUR LEGEND:
RED: RED BLK: BLACK WHT: WHITE YLW: YELLOW GRN: GREEN
ORG: ORANGE BRN: BROWN GRY: GREY BLU: BLUE PNK: PINK

3TW28836-1B

FXZQ20M / 25M / 32M / 40M / 50MV1

20,25,32,40,50 CLASS
(22,28,36,45,56 CLASS)

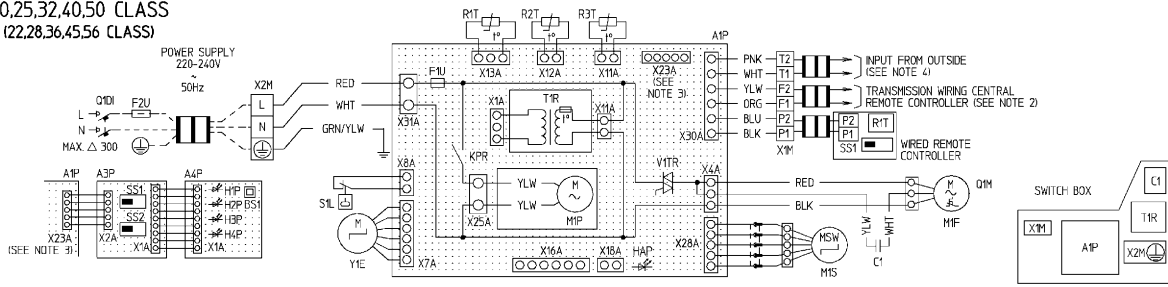

A1P	PRINTED CIRCUIT BOARD	T1R	TRANSFORMER (220-240V/22V)	H3P	LIGHT EMITTING DIODE (FILTER SIGN - RED)
C1	CAPACITOR (M1F)	V1TR	TRIAC	H4P	LIGHT EMITTING DIODE (DEFROST - ORANGE)
F1U	FUSE (⑤, 5A, 250V)	X1M	TERMINAL STRIP	SS1	SELECTOR SWITCH (MAIN/SUB)
F2U	FIELD FUSE	X2M	TERMINAL STRIP	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	Y1E	ELECTRONIC EXPANSION VALVE	CONNECTOR FOR OPTIONAL PARTS	
KPR	MAGNETIC RELAY (M1P)	W1R	REMOTE CONTROLLER	X16A	CONNECTOR (ADAPTOR FOR WIRE)
M1F	MOTOR (INDOOR FAN)	R1T	THERMISTOR (AIR)	X18A	CONNECTOR (ON/OFF) (WIRING ADAPTOR FOR ELECTRICAL APPENDICES)
M1P	MOTOR (DRAIN PUMP)	SS1	SELECTOR SWITCH (MAIN/SUB)	RED-RED PNK-PINK BLK-BLACK ORG-ORANGE WHT-WHITE GRN-GREEN YLW-YELLOW BLU-BLUE	
M1S	MOTOR (SWING FLAP)	W1R	WIRELESS REMOTE CONTROLLER (RECEIVER/DISPLAY UNIT)		
Q1D	FIELD EARTH LEAK DETECTOR (MAX. 300mA)	A3P	PRINTED CIRCUIT BOARD		
Q1M	THERMAL PROTECTOR (M1F EMBEDDED)	A4P	PRINTED CIRCUIT BOARD		
R1T	THERMISTOR (AIR)	BS1	PUSH BUTTON (ON/OFF)		
R2T	THERMISTOR (COIL-LIQUID)	H1P	LIGHT EMITTING DIODE (ON - RED)		
R3T	THERMISTOR (COIL-GAS)	H2P	LIGHT EMITTING DIODE (TIMER - GREEN)		
SL	FLOAT SWITCH				


- □ □ : TERMINAL
- ⊗ : CONNECTOR
- : WIRE CLAMP
- ≡≡≡ : FIELD WIRING

NOTES:

1. IN CASE OF USING A REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE TO THE ATTACHED INSTALLATION MANUAL.
2. X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED.
3. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED TO THE UNIT.
4. REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM. SEE TECHNICAL DATA AND CATALOGS, ETC. BEFORE CONNECTING.

3TW26426-1B

FXKQ25MA / 32MA / 40MA / 63MAVE

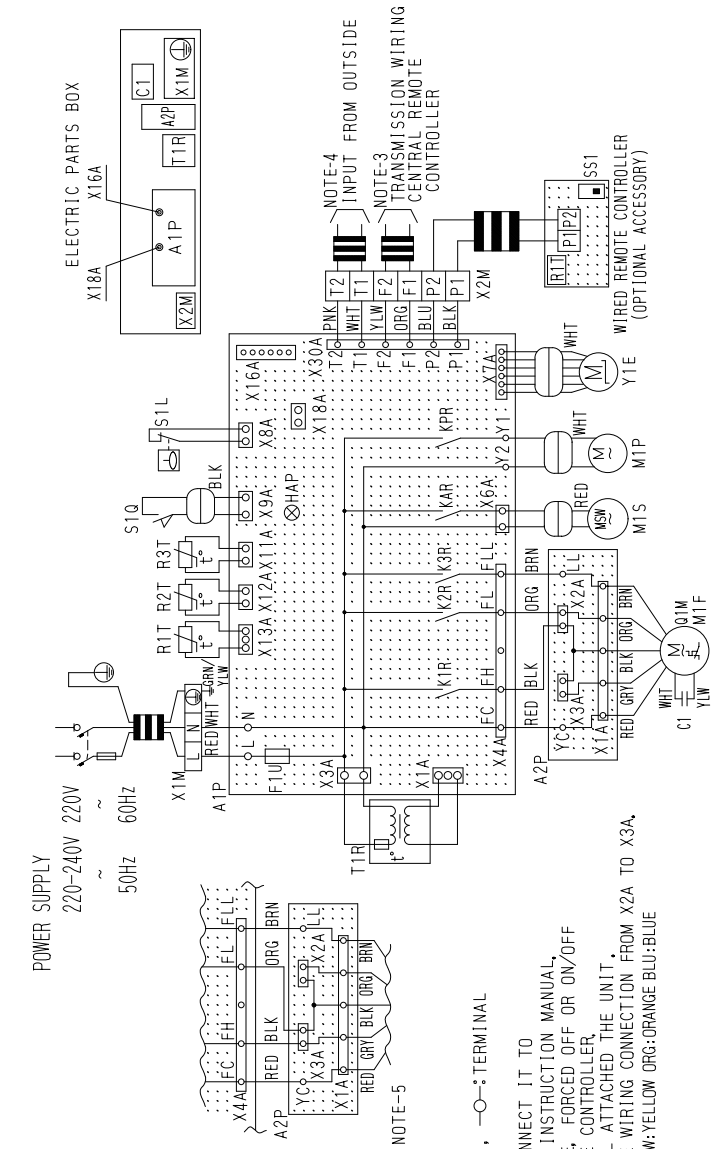


INDOOR UNIT	R1T	THERMISTOR(A.I.R)
A1P	R2T-R3T	THERMISTOR(COIL)
A2P	S1L	FLOAT SWITCH
C1	S1Q	LIMIT SWITCH(SWING FLAP)
F1U	T1R	TRANSFORMER(20-240V/22V)
HAP	X1M	TERMINAL BLOCK(POWER)
K1R-K3R	X2M	TERMINAL BLOCK(CONTROL)
M1F	Y1E	ELECTRONIC EXPANSION VALVE
M1P	WIRED REMOTE CONTROLLER	
M1S	R1T	THERMISTOR(A.I.R)
Q1M	SS1	SELECTOR SWITCH(MAIN/SUB)
	CONNECTOR FOR OPTIONAL PARTS	
	X16A	CONNECTOR(ADAPTOR FOR WIRING)
	X18A	CONNECTOR(WIRING ADAPTOR FOR ELECTRICAL APPENDICES)

- NOTES) 1. [Symbol] : TERMINAL BLOCK, [Symbol] : CONNECTOR, -O- : TERMINAL
2. [Symbol] : FIELD WIRING
3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
5. IN CASE HIGH E.S.P. OPERATION, CHANGE OVER THE WIRING CONNECTION FROM X2A TO X3A.
6. SYMBOLS SHOW AS FOLLOWS, (PNK:PINK WHT:WHITE YLW:YELLOW ORG:ORANGE BLU:BLUE BLK:BLACK RED:RED BRN:Brown GRY:GRAY)
7. USE COPPER CONDUCTORS ONLY.


3D039564C

FXDQ20M8 / 25M8V3

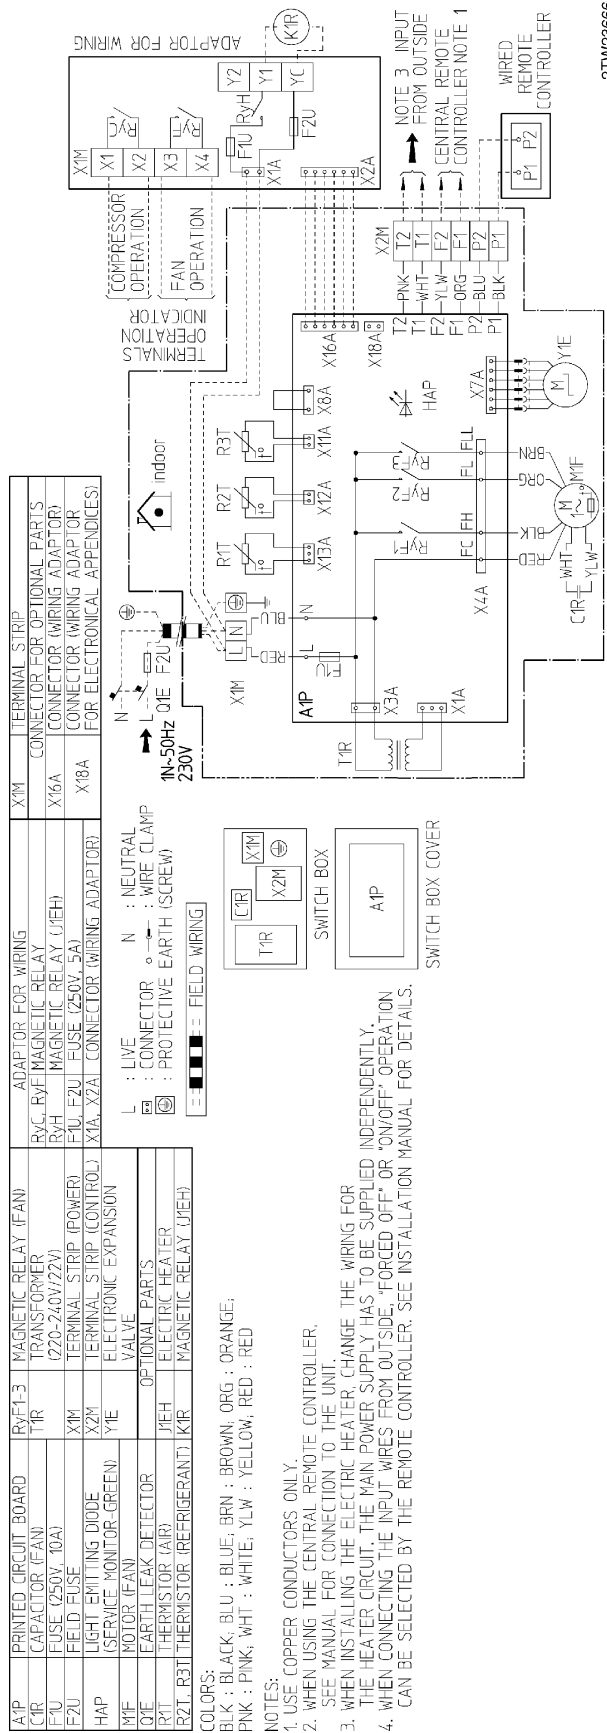

2TW23666

FXSQ20M / 25M / 32M / 40M / 50M / 63M8V3

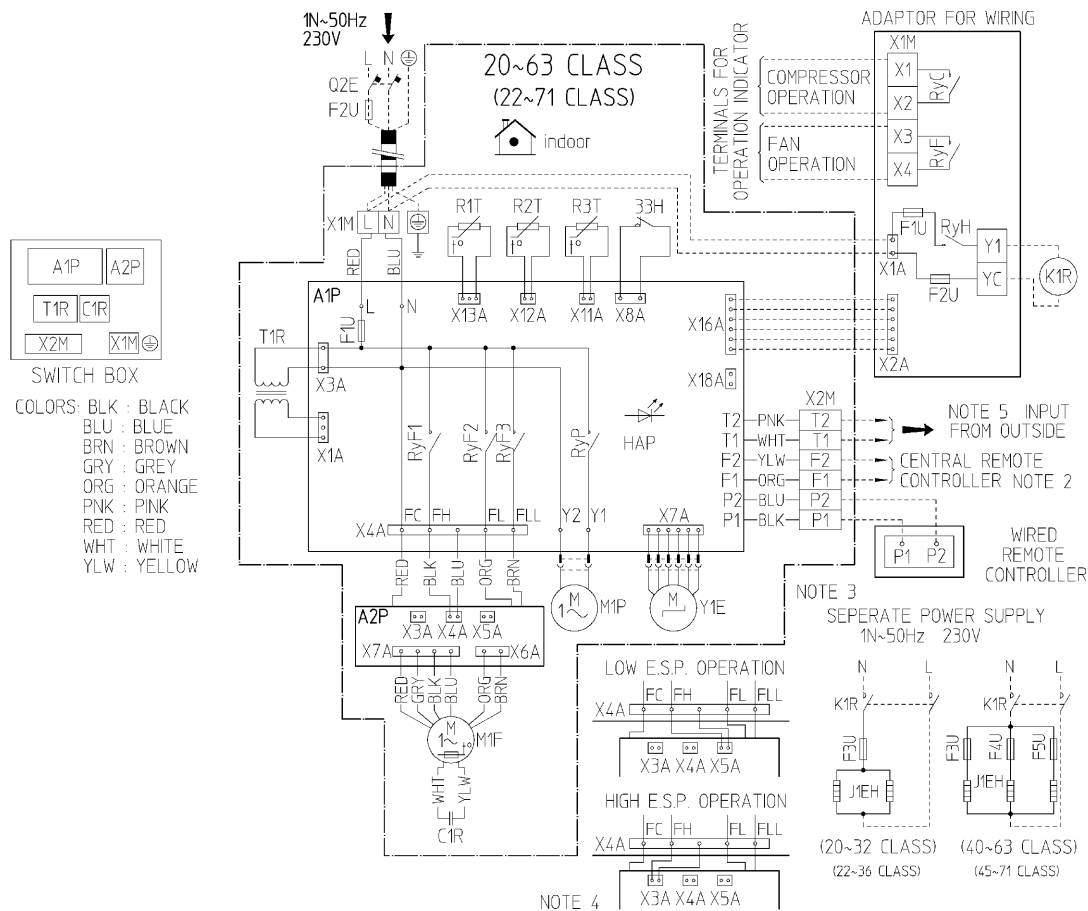

SWITCH BOX
 A1P A2P
 T1R C1R
 X2M X1M

COLORS: BLK : BLACK
 BLU : BLUE
 BRN : BROWN
 GRY : GREY
 ORG : ORANGE
 PNK : PINK
 RED : RED
 WHT : WHITE
 YLW : YELLOW

33H	FLOAT SWITCH	R1T	THERMISTOR (AIR)	K1R	MAGNETIC RELAY (J1EH)
A1P	PRINTED CIRCUIT BOARD	R2T, R3T	THERMISTOR (REFRIGERANT)	ADAPTOR FOR WIRING	
A2P	TERMINAL BOARD	RyF1-3	MAGNETIC RELAY (FAN)	RyC, RyF	MAGNETIC RELAY
C1R	CAPACITOR (FAN)	RyP	MAGNETIC RELAY (DRAIN PUMP)	RyH	MAGNETIC RELAY (J1EH)
F1U	FUSE (250V, 10A)	T1R	TRANSFORMER (220-240V/22V)	F1U, F2U	FUSE (250V, 5A)
F2U	FIELD FUSE	X1M	TERMINAL STRIP (POWER)	X1A, X2A	CONNECTOR (WIRING ADAPTOR)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	X2M	TERMINAL STRIP (CONTROL)	X1M	TERMINAL STRIP
M1F	MOTOR (FAN)	Y1E	ELECTRONIC EXPANSION VALVE	CONNECTOR FOR OPTIONAL PARTS	
M1P	MOTOR (DRAIN PUMP)	OPTIONAL PARTS			
Q2E	EARTH LEAK DETECTOR	F3-5U	FUSE (250V, 16A)	X16A	CONNECTOR (WIRING ADAPTOR)
		J1EH	ELECTRIC HEATER	X18A	CONNECTOR (WIRING ADAPTOR FOR ELECTRONICAL APPENDICES)


--- ■ ■ ■ --- FIELD WIRING
 L : LIVE
 N : NEUTRAL
 □ : CONNECTOR
 ○ : WIRE CLAMP
 ⊕ : PROTECTIVE EARTH (SCREW)

NOTES :

- USE COPPER CONDUCTORS ONLY.
- WHEN USING THE CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
- WHEN INSTALLING THE ELECTRIC HEATER, CHANGE THE WIRING FOR THE HEATER CIRCUIT. THE MAIN POWER SUPPLY HAS TO BE SUPPLIED INDEPENDENTLY.
- FOR HIGH OR LOW E.S.P. OPERATION, CHANGE THE WIRING CONNECTION OF X4A AS SHOWN ON THE WIRING DIAGRAM.
- WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, 'FORCED OFF' OR 'ON/OFF' OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. SEE INSTALLATION MANUAL FOR MORE DETAILS.

2TW23686-1C

FXSQ80M / 100M / 125M8V3

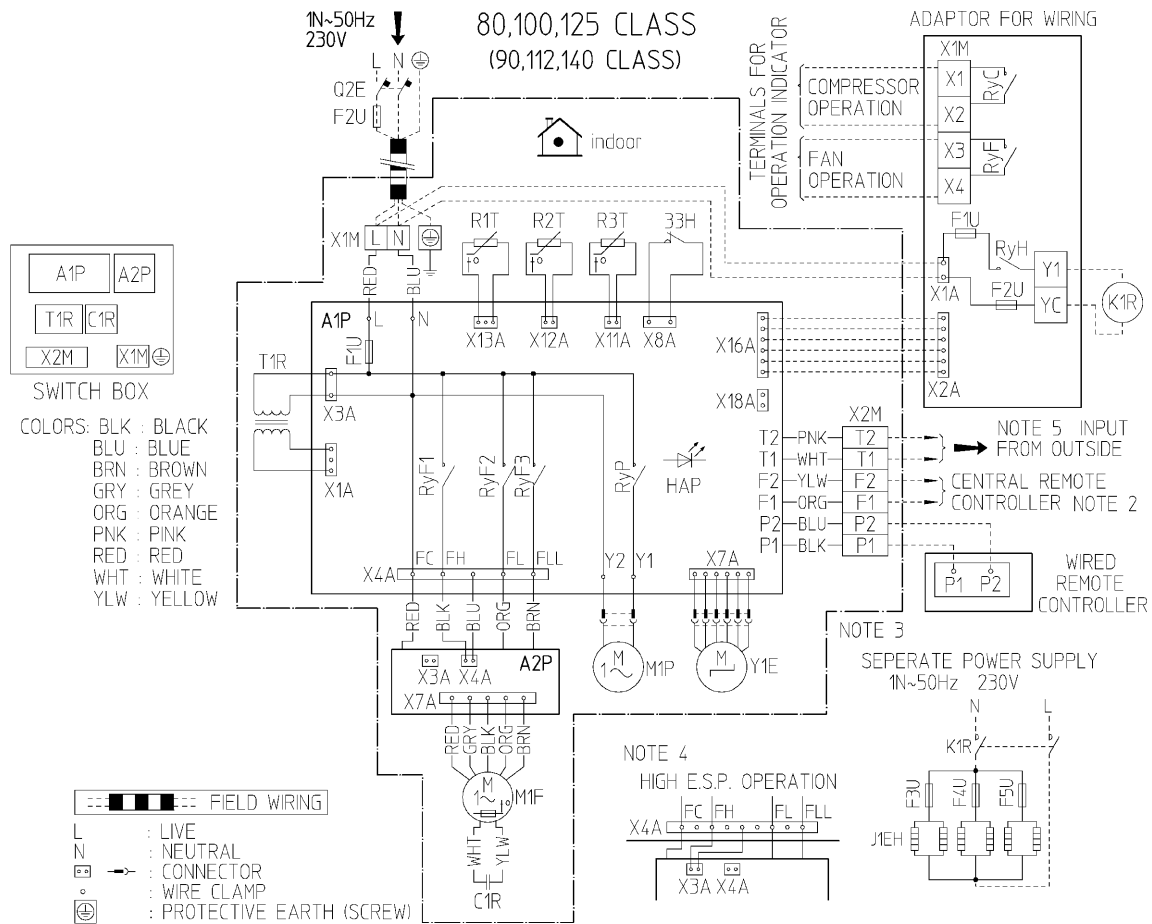


33H	FLOAT SWITCH	R2T, R3T	THERMISTOR (REFRIGERANT)	ADAPTOR FOR WIRING	
A1P	PRINTED CIRCUIT BOARD	RyF1-3	MAGNETIC RELAY (FAN)	RyC, RyF	MAGNETIC RELAY
A2P	TERMINAL BOARD	RyP	MAGNETIC RELAY (DRAIN PUMP)	RyH	MAGNETIC RELAY (J1EH)
C1R	CAPACITOR (FAN)	T1R	TRANSFORMER (220V/27V)	F1U, F2U	FUSE (250V, 5A)
F1U	FUSE (250V, 10A)	X1M	TERMINAL STRIP (POWER)	X1A, X2A	CONNECTOR (WIRING ADAPTOR)
F2U	FIELD FUSE	X2M	TERMINAL STRIP (CONTROL)	X1M	TERMINAL STRIP
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	Y1E	ELECTRONIC EXPANSION VALVE	CONNECTOR FOR OPTIONAL PARTS	
M1F	MOTOR (FAN)	OPTIONAL PARTS		X16A	CONNECTOR (WIRING ADAPTOR)
M1P	MOTOR (DRAIN PUMP)	F3-5U	FUSE (250V, 16A)	X18A	CONNECTOR (WIRING ADAPTOR FOR ELECTRONICAL APPENDICES)
Q2E	EARTH LEAK DETECTOR	J1EH	ELECTRIC HEATER		
R1T	THERMISTOR (AIR)	K1R	MAGNETIC RELAY (J1EH)		

NOTES :

1. USE COPPER CONDUCTORS ONLY.
2. WHEN USING THE CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
3. WHEN INSTALLING THE ELECTRIC HEATER, CHANGE THE WIRING FOR THE HEATER CIRCUIT. THE MAIN POWER SUPPLY HAS TO BE SUPPLIED INDEPENDENTLY.
4. FOR HIGH E.S.P. OPERATION, CHANGE THE WIRING CONNECTION OF X4A AS SHOWN ON THE WIRING DIAGRAM.
5. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED 'OFF' OR 'ON/OFF' OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER.
SEE INSTALLATION MANUAL FOR MORE DETAILS.

2TW23736-1C

FXMQ40P / 50P / 63P / 80P / 100P / 125PVE

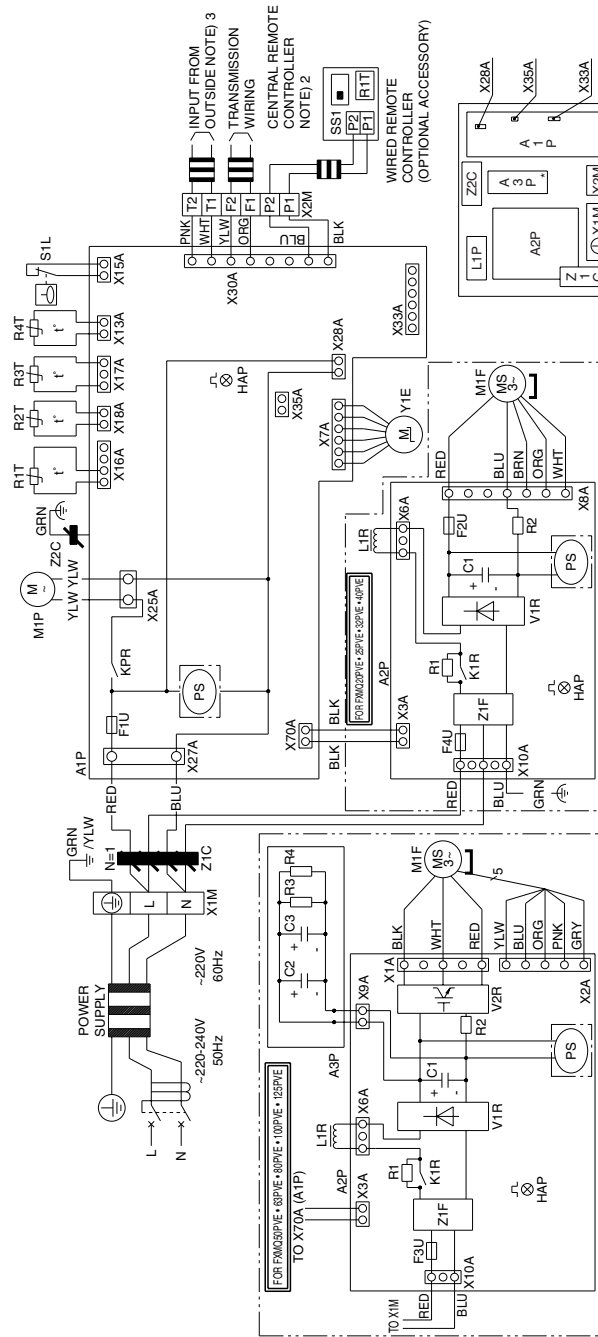

EL. COMPO. BOX (INDOOR)
 *ONLY FXMQ50PVE • 63PVE • 80PVE • 100PVE • 125PVE


INDOOR UNIT	PS	SWITCHING POWER SUPPLY (A1P, A2P)	Y1E	ELECTRONIC EXPANSION VALVE
A1P PRINTED CIRCUIT BOARD	R1	RESISTOR (CURRENT LIMITING)	Z1C, Z2C	NOISE FILTER (FERRITE CORE)
A2P PRINTED CIRCUIT BOARD (FAN)	R2	CURRENT SENSING DEVICE	Z1F	NOISE FILTER
A3P PRINTED CIRCUIT BOARD (CAPACITOR)	R3, R4	RESISTOR (ELECTRIC DISCHARGE)	CONNECTOR OPTIONAL ACCESSORY	
C1, C2, C3 CAPACITOR			X28A	CONNECTOR (POWER SUPPLY FOR WIRING)
F1U FUSE (T, 3.15A, 250V)	R1T	THERMISTOR (SUCTION AIR)	X33A	CONNECTOR (FOR WIRING)
F2U FUSE (T, 5A, 250V)	R2T	THERMISTOR (LIQUID)	X35A	CONNECTOR (ADAPTER)
F3U FUSE (T, 6.3A, 250V)	R3T	THERMISTOR (GAS)		WIRED REMOTE CONTROLLER
F4U FUSE (T, 6.3A, 250V)	R4T	THERMISTOR (DISCHARGE AIR)	R1T	THERMISTOR (AIR)
HAP LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	S1L	FLOAT SWITCH	SS1	SELECTOR SWITCH (MAIN/SUB)
KPR DIODE BRIDGE	V1R	DIODE BRIDGE		
K1R MAGNETIC RELAY	V2R	POWER MODULE		
L1R MAGNETIC RELAY	X1M	TERMINAL STRIP (POWER SUPPLY)		
M1F MOTOR (FAN)	X2M	TERMINAL STRIP (CONTROL)		

- NOTES) 1. □ : TERMINAL □ : CONNECTOR □ : FIELD WIRING
 2. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
 3. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
 4. COLORS: BLK : BLACK RED : RED BLU : BLUE WHT : WHITE
 PNK : PINK YLW : YELLOW BRN : BROWN GRY : GRAY GRN : GREEN ORG : ORANGE.


3D058783

FXHQ32MA / 63MA / 100MAVE

3D039801D

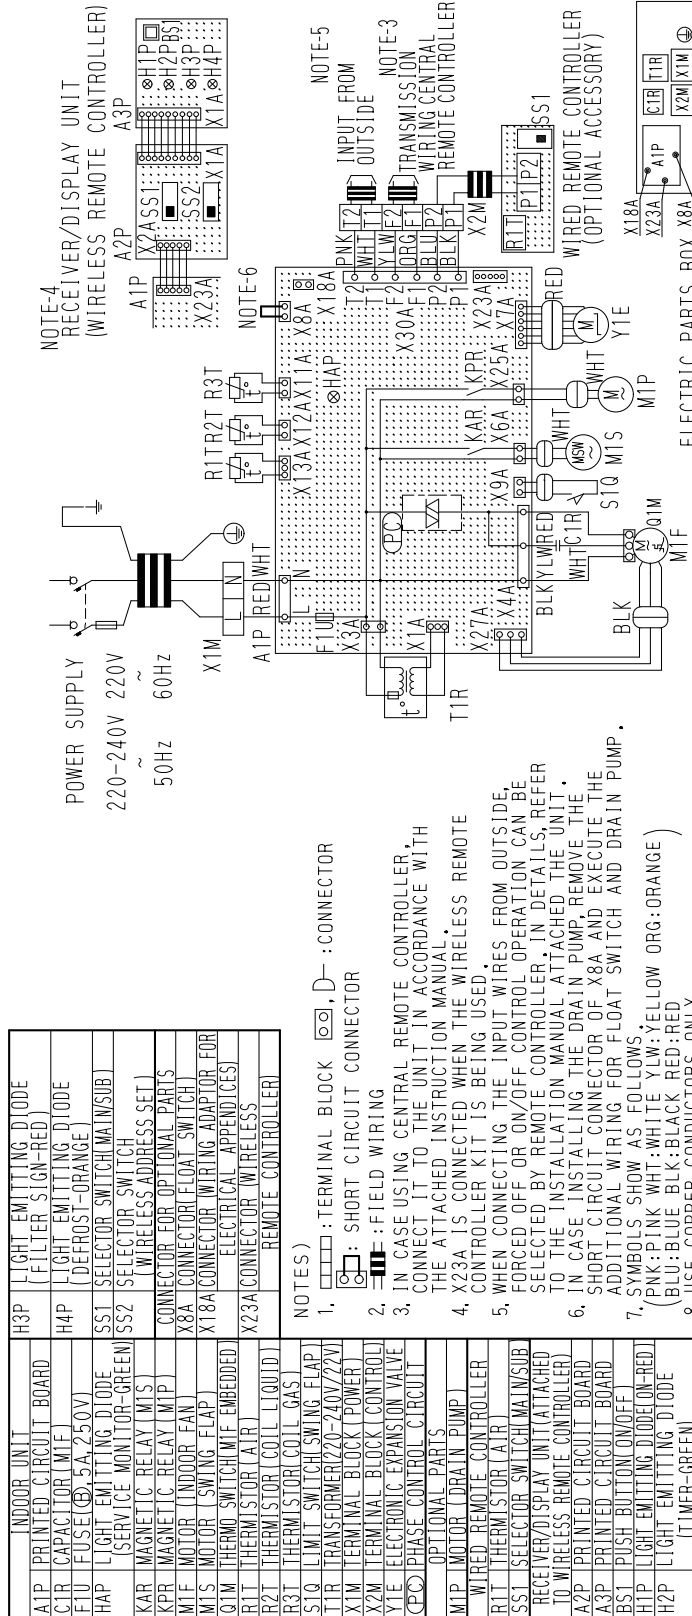


FXAQ20MA / 25MA / 32MAVE / 40MA / 50MA / 63MAVE

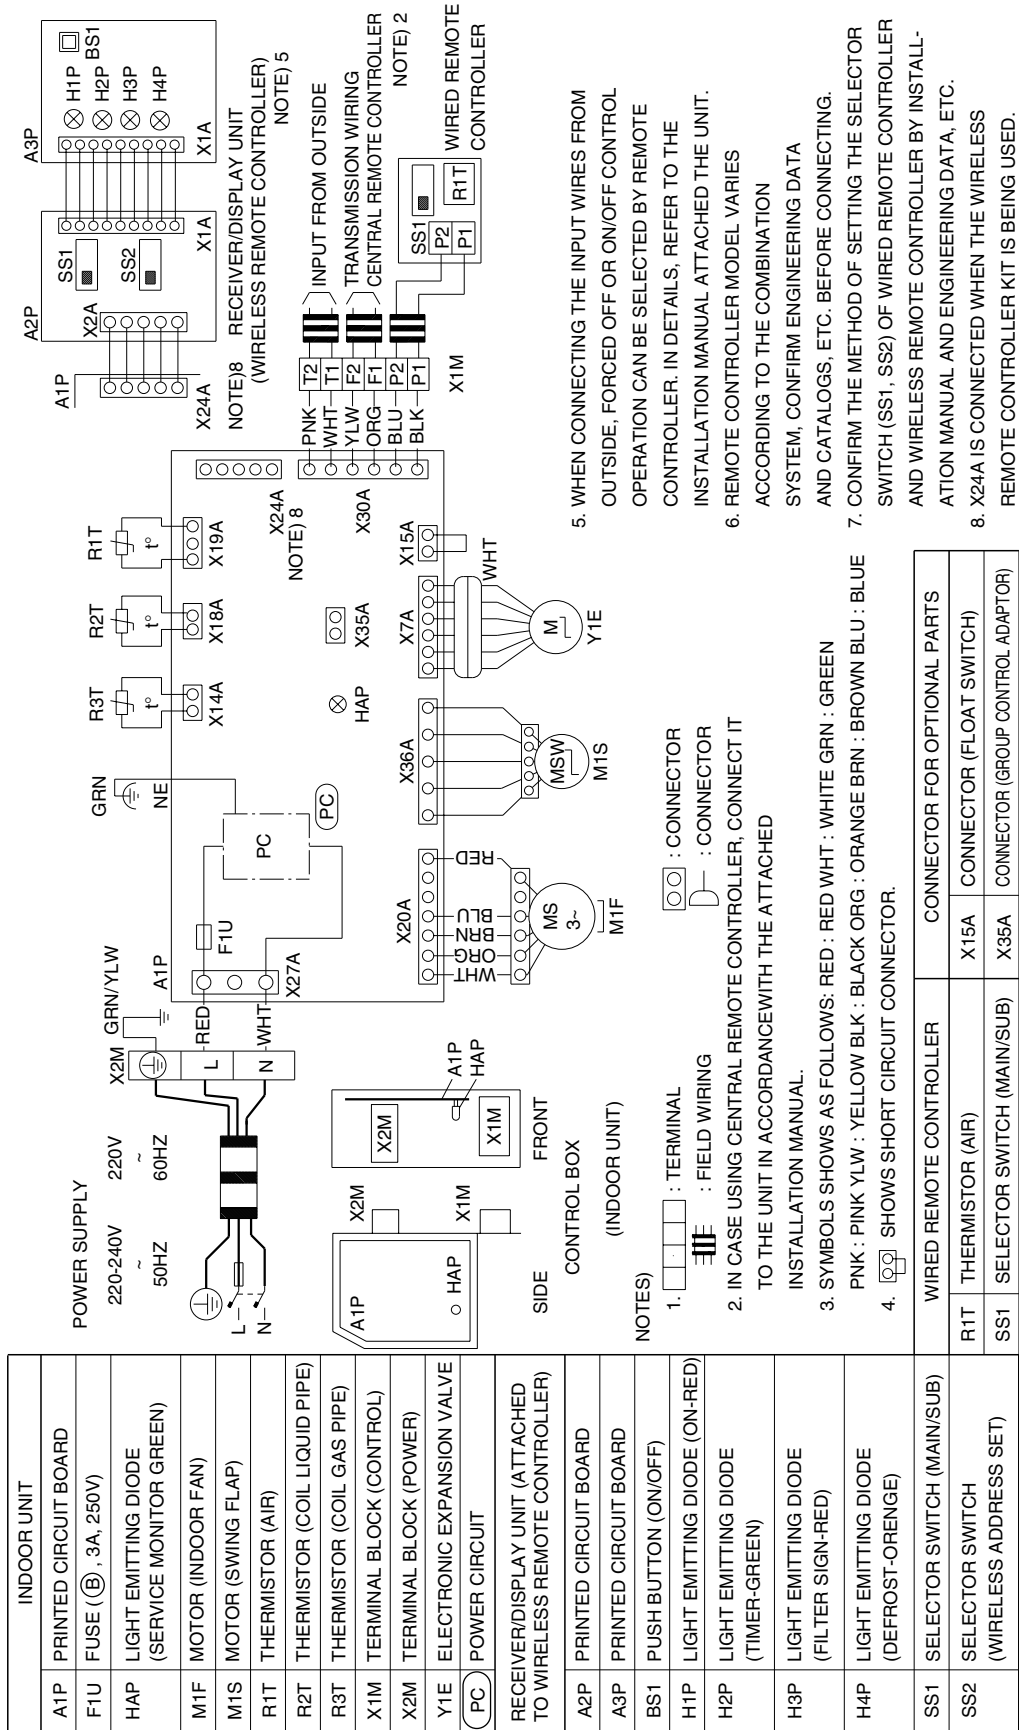

3D034206D

FXLQ20MA / 25MA / 32MA / 40MA / 50MA / 63MAVE
FXNQ20MA / 25MA / 32MA / 40MA / 50MA / 63MAVE

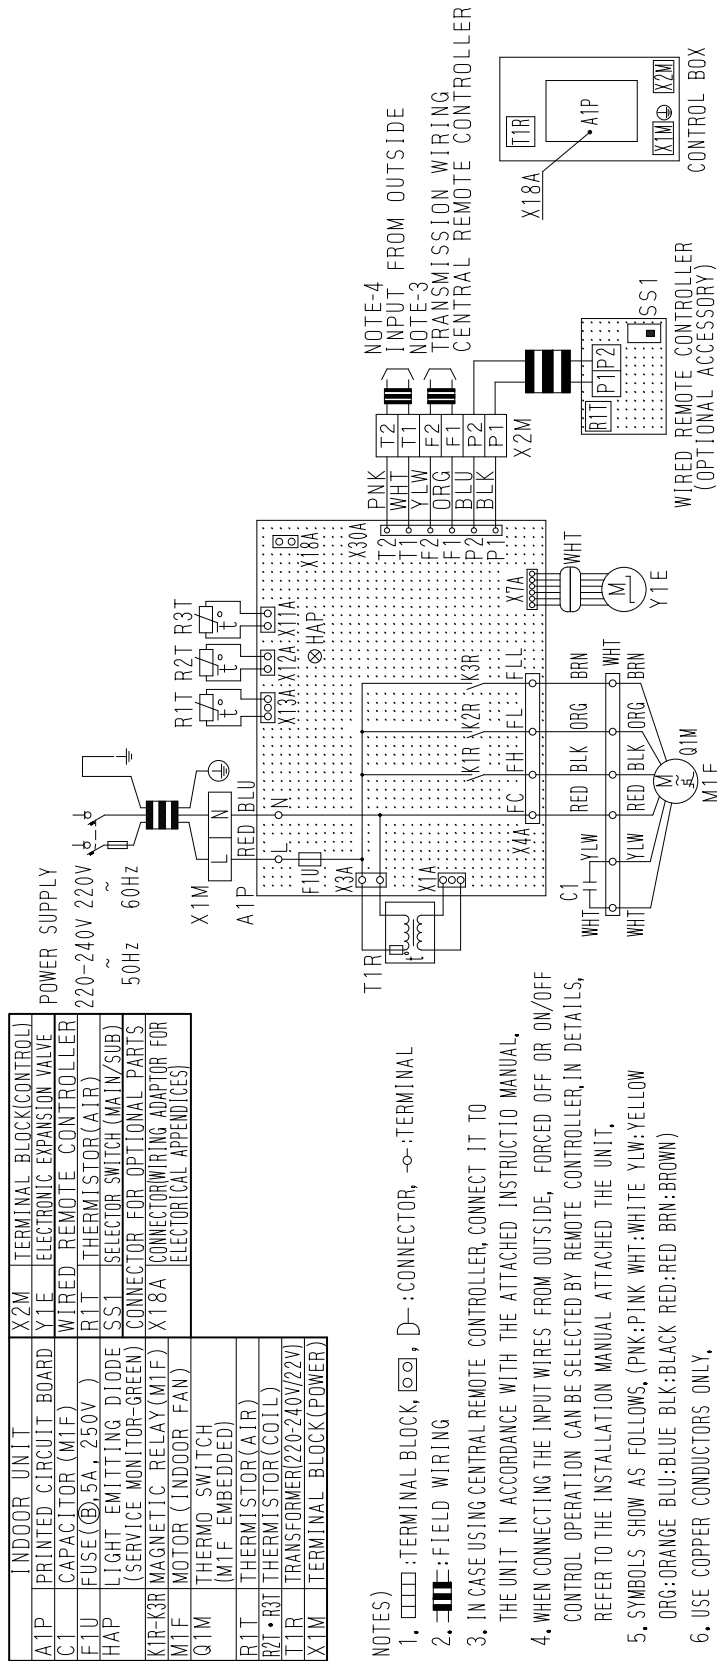


INDOOR UNIT	X2M	TERMINAL BLOCK (CONTROL)
A1P	Y1E	ELECTRONIC EXPANSION VALVE
C1	W1R	WIRED REMOTE CONTROLLER
F1U	R1T	THERMISTOR (AIR)
HAP	SS1	SELECTOR SWITCH (MAIN/SUB)
K1R-K3R	CON	CONNECTOR FOR OPTIONAL PARTS
M1F	X18A	CONNECTOR WIRING ADAPTOR FOR ELECTRICAL APPENDICES
Q1M		
R1T		
R2T-R3T		
T1R		
X1M		

NOTES)

1. □□□□: TERMINAL BLOCK, □□□, D-: CONNECTOR, -○-: TERMINAL
2. —|—: FIELD WIRING
3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
5. SYMBOLS SHOW AS FOLLOWS, (PNK: PINK WHT: WHITE YLW: YELLOW ORG: ORANGE BLU: BLUE BLK: BLACK RED: RED BRN: BROWN)
6. USE COPPER CONDUCTORS ONLY.

3D039826D

FXUQ71MA / 100MA / 125MAV1

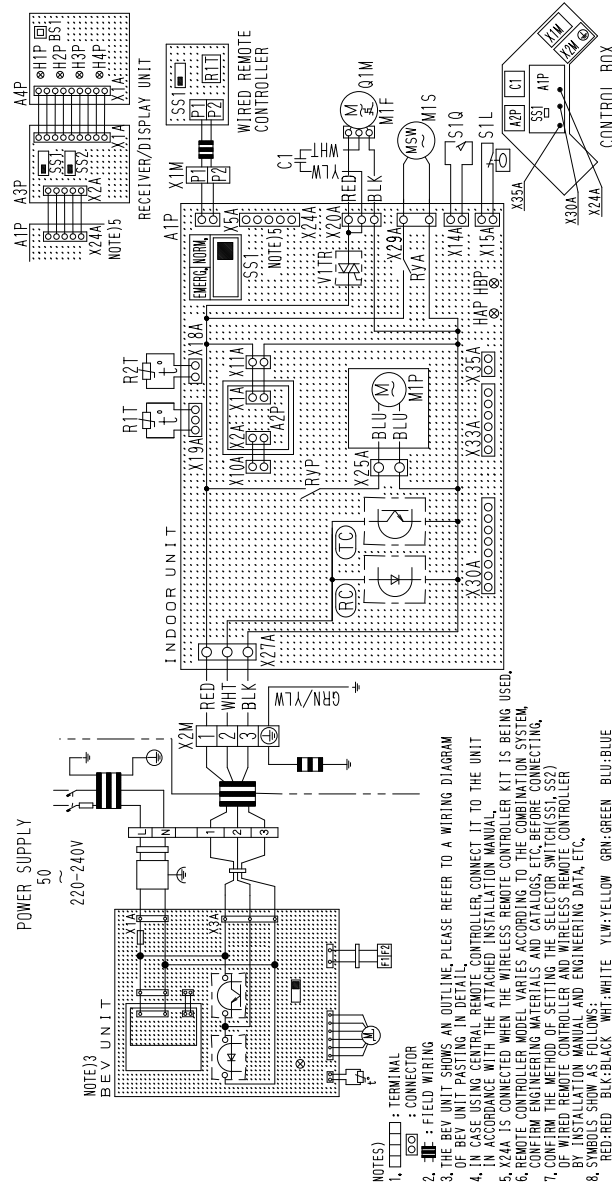



3D044973A

INDOOR UNIT	WIRED REMOTE CONTROLLER
A1P PRINTED CIRCUIT BOARD	R1T THERMISTOR(AIR)
A2P PRINTED CIRCUIT BOARD	SS1 SELECTOR SWITCH(MAIN/SUB)
(TRANSFORMER 220~240V/16V)	RECEIVER/DISPLAY UNIT
C1 CAPACITOR(M1F)	A3P PRINTED CIRCUIT BOARD
H1P LIGHT EMITTING DIODE	(ATTACHED TO WIRELESS REMOTE CONTROLLER)
(SERVICE MONITOR GREEN)	A4P PRINTED CIRCUIT BOARD
H2P LIGHT EMITTING DIODE	B.S.1 PUSH BUTTON(ON/OFF)
(ON-RED)	H1P LIGHT EMITTING DIODE
M1S MOTOR(SWING FLAP)	(H1P)
M1F MOTOR(INDOOR FAN)	H2P LIGHT EMITTING DIODE
M1P MOTOR(DRAIN PUMP)	(TIMER-GREEN)
Q1M THERMO SWITCH(WIF EMBEDDED)	H3P LIGHT EMITTING DIODE
R1T THERMISTOR(AIR)	(FILLER SIGN-RED)
R2T THERMISTOR(COIL)	H4P LIGHT EMITTING DIODE
RVA MAGNETIC RELAY(MTA)	(DEFROST-ORANGE)
RVP MAGNETIC RELAY(MIP)	SS1 SELECTOR SWITCH(MAIN/SUB)
S1L FLOAT SWITCH	(WIRELESS ADDRESS SET)
SS1 SELECTOR SWITCH(EMERGENCY)	CONNECTOR FOR OPTIONAL PARTS
VTR PHASE CONTROL CIRCUIT	X24A CONNECTOR(WIRELESS REMOTE CONTROLLER)
X1M TERMINAL STRIP	X30A CONNECTOR(INTERFACE ADAPTOR FOR SKY AIR SERIES)
X2M TERMINAL STRIP	X35A CONNECTOR(GROUP CONTROL ADAPTOR)
OPTIONAL TRANSMISSION CIRCUIT	

- NOTES
- : TERMINAL
 - ⊞ : CONNECTOR
 - : FIELD WIRING
 - THE BEV UNIT SHOWS AN OUTLINE, PLEASE REFER TO A WIRING DIAGRAM OF BEV UNIT PASTING IN DETAIL.
 - IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
 - X24A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED. REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM. CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH(SS1, SS2) FROM THE ENGINEERING MATERIALS AND CATALOGS, ETC. BEFORE CONNECTING.
 - IF WIRELESS REMOTE CONTROLLER IS USED, CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH(SS1, SS2) BY CONSULTING MANUAL FOR WIRELESS REMOTE CONTROLLER BY INSTALLATION MANUAL AND ENGINEERING DATA, ETC.
 - SYMBOLS SHOW AS FOLLOWS: RED-RED BLK-BLACK WHI-WHITE YW-YELLOW GRN-GREEN BLU-BLUE

BEVQ71MA / 100MA / 125MAVE

BEV UNIT	
A1P	PRINTED CIRCUIT BOARD ASSY
A2P	POWER SUPPLY PRINTED CIRCUIT BOARD ASSY(220-240V/16V)
F1U	FUSE(ⓑ, 10A, 250V)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GRREN)
R3T	THERMISTOR(GAS)
SS1	SELECTOR SWITCH(M/S)
X1M	TERMINAL STRIP(POWER)
X2M	TERMINAL STRIP(TRANSMISSION)
Y1E	ELECTRONIC EXPANSION VALVE
Z1C · Z2C Z3C · Z4F	NOISE FILTER

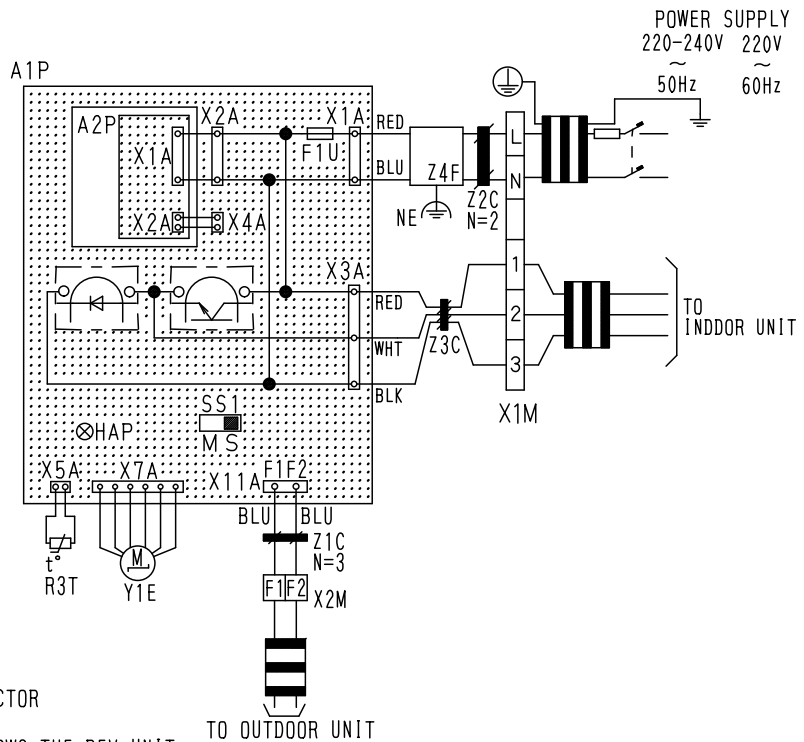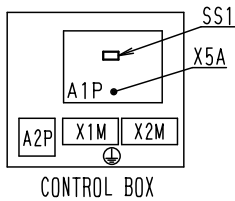

注) 1. □□□□ : TERMINAL □□□□ : CONNECTOR

2. ≡≡≡≡ : FIELD WIRING

3. THIS WIRING DIAGRAM ONLY SHOWS THE BEV UNIT, SEE THE WIRING DIAGRAMS AND INSTALLATION MANUALS FOR THE WIRING AND SETTINGS FOR THE INDOOR, OUTDOOR, AND BS UNITS.

4. SEE THE INDOOR UNIT'S WIRING DIAGRAM WHEN INSTALLING OPTIONAL PARTS FOR THE INDOOR UNIT.

5. ONLY ONE INDOOR UNIT MAY BE CONNECTED TO THE BEV UNIT.

6. SEE THE INDOOR UNIT'S WIRING DIAGRAM FOR WHEN CONNECTING THE REMOTE CONTROL.

7. ALWAYS USE THE SKY AIR CONNECTION ADAPTER FOR THE INDOOR UNIT WHEN USING A CENTRAL CONTROL UNIT. REFER TO THE MANUAL ATTACHED THE UNIT WHEN CONNECTING.

8. COOL/HEAT CHANGEOVER OF INDOOR UNITS CONNECTED TO BEV UNIT CANNOT BE CARRIED OUT UNLESS THEY ARE CONNECTED TO BS UNIT.

IN CASE OF A SYSTEM WITH BEV UNIT ONLY, COOL/HEAT SELECTOR IS REQUIRED.

9. SET THE SS1 TO "M" ONLY FOR THE BEV UNIT CONNECTED TO THE INDOOR UNIT WHICH IS TO HAVE COOL/HEAT SWITCHING CAPABILITY, WHEN CONNECTING THE BS UNIT.

THE "M/S" ON THE SS1 STANDS FOR "MAIN/SUB". THIS IS SET TO "S" WHEN SHIPPED FROM THE FACTORY.

10. CONNECT THE ATTACHED THERMISTOR TO THE R3T.

10. SYMBOLS SHOW AS FOLLOWS,
(BLU:BLUE RED:RED WHT:WHITE BLK:BLACK)

3D044901B

3. Option List

3.1 Option List of Controllers

Operation Control System Optional Accessories

No.	Item	Type	FXFQ	FXZQ	FXCQ	FXKQ	FXDQ	FXDQ-M8	FXSQ	FXMQ	FXUQ	FXHQ	FXAQ	FXLQ	FXNQ	
1	Wired remote control		BRC1D52													
2	Infrared remote control	cooling only	BRC7F533	BRC7E531	BRC7C67	BRC4C63	BRC4C64		BRC4C66	BRC7C529	BRC7E66	BRC7E619	BRC4C64			
		heat pump	BRC7F532	BRC7E530	BRC7C62	BRC4C61	BRC4C62		BRC4C65	BRC7C528	BRC7E63	BRC7E618	BRC4C62			
3	Simplified remote control		—			BRC2C51			—			BRC2C51				
4	Simplified remote control for hotel use		—			BRC3A61			—			BRC3A61				
5	Centralised remote control		DCS302C51													
6	Unified ON/OFF control		DCS301B51													
7	Schedule timer		DST301B51													
8	Wiring adapter		—	KRP1B57*1	—	KRP1B61	KRP1B61	KRP1B56	—	KRP1C64	KRP4A53	KRP1B3	—	KRP1B61		
9	Wiring adapter (hour meter)		EKRP1C11*1	—	EKRP1B2	—	EKRP1B2*2	—	EKRP1B2	—	—					
10	Wiring adapter for electrical appendices (1)		KRP2A526*1		KRP2A516*1	KRP2A61	KRP2A516	KRP2A53	KRP2A516	KRP2A61	KRP2A62*		KRP2A51			
11	Wiring adapter for electrical appendices (2)		KRP4AA53*1	KRP4A536*1	KRP4A516*1	KRP4A51	KRP4A516	KRP4A54	KRP4A516	KRP4A51	KRP4A52*		KRP4A51			
12	Remote sensor		KRCS01-4		KRCS01-1B											
13	Installation box for adapter PCB		KRP1H98	KRP1BA101	KRP1B96*3/4	—	KRP1BA101	—	—	KRP1B97	KRP1C93*3	KRP4A93*3/4	—			
14	Electrical box with earth terminal (3 blocks)		KJB311A													
15	Electrical box with earth terminal (2 blocks)		KJB212AA													
16	Noise filter (for electromagnetic interface only)		KEK26-1A													
17	External control adaptor		—	DTA104A52	DTA104A51*1	DTA104A61	DTA104A53	DTA104A51	DTA104A61	—		DTA104A62	DTA104A51	DTA104A61		
18	Interface adaptor for SkyAir series		—									DTA102A52	—			
19	Connector for forced on/forced off		—									EKRORO	—			

Note:

1. Installation box is required
2. Fixingbox is KRP1A90
3. Up to 2 adapters can be fixed per installation box
4. Only 1 installation box can be installed per indoor unit

Various PC Boards

No.	Part name	Model No.	Function
1	Adaptor for wiring	KRP1B56 KRP1B57 KRP1B61 KRP1B3 KRP4A53	■ PC board when equipped with auxiliary electric heater in the indoor unit.
2	DIII-NET Expander Adaptor	DTA109A51	■ Up to 1,024 units can be centrally controlled in 64 different groups. ■ Wiring restrictions (max. length: 1,000 m, total wiring length: 2,000 m, max. number of branches: 16) apply to each adaptor.

System Configuration

No.	Part name	Model No.	Function	
1	Residential central remote controller	Note2 DCS303A51	• Up to 16 groups of indoor units (128 units) can be easily controlled using the large LCD panel. ON/OFF, temperature setting and scheduling can be controlled individually for indoor units.	
2	Central remote controller	DCS302C51	• Up to 64 groups of indoor units(128 units) can be connected, and ON/OFF, temperature setting and monitoring can be accomplished individually or simultaneously. Connectable up to 2 controllers in one system.	
2-1	Electrical box with earth terminal (3 blocks)	KJB311A		
3	Unified ON/OFF controller	DCS301B51	• Up to 16 groups of indoor units(128 units) can be turned, ON/OFF individually or simultaneously, and operation and malfunction can be displayed. Can be used in combination with up to 8 controllers.	
3-1	Electrical box with earth terminal (2 blocks)	KJB212A(A)		
3-2	Noise filter (for electromagnetic interface use only)	KEK26-1A		
4	Schedule timer	DST301B51	• Programmed time weekly schedule can be controlled by unified control for up to 64 groups of indoor units (128 units). Can turn units ON/OFF twice per day.	
5	Interface adaptor for SkyAir-series	R-407C/R-22	★DTA102A52	• Adaptors required to connect products other than those of the VRV System to the high-speed DIII-NET communication system adopted for the VRV System. * To use any of the above optional controllers, an appropriate adaptor must be installed on the product unit to be controlled.
		R-410A	★DTA112B51	
6	DIII -NET Expander Adaptor	DTA109A51	• Up to 1024 units can be centrally controlled in 64 different groups. • Wiring restrictions (max. length : 1,000m, total wiring length : 2,000m, max. number of branches : 16) apply to each adaptor.	
6-1	Mounting plate	KRP4A92	• Fixing plate for DTA109A51	

Note:

1. Installation box for * adaptor must be procured on site.
2. For residential use only. Cannot be used with other centralized control equipment.

Building Management System

No.	Part name				Model No.	Function	
1	intelligent Touch Controller	Basic	Hardware	intelligent Touch Controller	DCS601C51	• Air-Conditioning management system that can be controlled by a compact all-in-one unit.	
1-1		Option	Hardware	DIII-NET plus adaptor	DCS601A52	• Additional 64 groups (10 outdoor units) is possible.	
1-2			Software	P. P. D.	DCS002C51	• P. P. D.: Power Proportional Distribution function	
1-3			Web	DCS004A51	• Monitors and controls the air conditioning system using the Internet and a Web browser application on a PC.		
1-4	Electrical box with earth terminal (4 blocks)				KJB411A	• Wall embedded switch box.	
2	intelligent Manager III	Basic	Hardware	Number of units to be connected	128 units	DAM602B52	• Air conditioner management system that can be controlled by personal computers.
					256 units	DAM602B51	
					512 units	DAM602B51x2	
					768 units	DAM602B51x3	
					1024 units	DAM602B51x4	
2-1	Option	Software	P.P.D.	DAM002A51	• Power Proportional Distribution function		
2-2			Web	DAM004A51	• Monitors and controls the air conditioning system using the Internet and a Web browser application on a PC.		
2-3			Eco	DAM003A51	• ECO (Energy saving functions.)		
2-4	Optional DIII Ai unit				DAM101A51	• External temperature sensor for intelligent Manager III.	
2-5	Di unit				DEC101A51	• 8 pairs based on a pair of On/Off input and abnormality input.	
2-6	Dio unit				DEC102A51	• 4 pairs based on a pair of On/Off input and abnormality input.	
3	Communication line	*1 Interface for use in BACnet®			DMS502B51	• Interface unit to allow communications between VRV and BMS. Operation and monitoring of air-conditioning systems through BACnet® communication.	
3-1		Optional DIII board			DAM411B51	• Expansion kit, installed on DMS502B51, to provide 2 more DIII-NET communication ports. Not usable independently.	
3-2		Optional Di board			DAM412B51	• Expansion kit, installed on DMS502B51, to provide 16 more wattmeter pulse input points. Not usable independently.	
4		*2 Interface for use in LONWORKS®			DMS504B51	• Interface unit to allow communications between VRV and BMS. Operation and monitoring of air-conditioning systems through LONWORKS® communication.	
5	Contact/analog signal	Parallel interface Basic unit			DPF201A51	• Enables ON/OFF command, operation and display of malfunction; can be used in combination with up to 4 units.	
6		Temperature measurement units			DPF201A52	• Enables temperature measurement output for 4 groups; 0-5VDC.	
7		Temperature setting units			DPF201A53	• Enables temperature setting input for 16 groups; 0-5VDC.	
8		Unification adaptor for computerized control			★DCS302A52	• Interface between the central monitoring board and central control units.	

Notes:

- *1. BACnet® is a registered trademark of American Society of Heating, Refrigerating and Air-Conditioning Engineers (ASHRAE).
- *2. LONWORKS®, is a registered trade mark of Echelon Corporation.
- *3. Installation box for * adaptor must be procured on site.

3.2 Option List of Outdoor Unit

RXYSQ4 / 5 / 6P

Optional accessories		RXYSQ4PA7Y1B RXYSQ5PA7Y1B RXYSQ6PA7Y1B	RXYSQ4PA7V1B RXYSQ5PA7V1B RXYSQ6PA7V1B
Cool/Heat Selector		KRC19-26A6	
Fixing box		KJB111A	
Distributive Piping	Refnet header	KHRQ22M29H	
	Refnet joint	KHRQ22M20T	
Central drain plug		KKPJ5F180	

4TW26101

4. Example of Connection

Example of connection (Connection of 8 indoor units Heat pump system)		Branch with refnet joint	Branch with refnet joint and refnet header	Branch with refnet header																
<p>1 indoor unit</p> <p>▲ refnet joint</p> <p>○ refnet header</p>																				
Maximum allowable length	Between outdoor and indoor units	Actual pipe length	Pipe length between outdoor and indoor units 150 m																	
		Equivalent length	[Example] unit 8: a+b+c+d+e+f+g+p 150 m																	
		Total extension length	Equivalent pipe length between outdoor and indoor units 175 m (Assume equivalent pipe length of refnet joint to be 0.5 m and of the refnet header to be 1.0 m. (for calculation purposes))																	
Allowable height	Between outdoor and indoor units	Difference in height	Difference in height between outdoor and indoor units (H1) 50 m (40 m if outdoor unit is located in a lower position).																	
	Between indoor and indoor units	Difference in height	Difference in height between adjacent indoor units (H2) 15 m																	
Allowable length after the branch	Actual pipe length	Pipe length from refnet joint or refnet header to indoor unit 40 m																		
		[Example] unit 8: b+c+d+e+f+g+p 40 m	[Example] unit 6: b+h 40 m, unit 8: i+k 40 m	[Example] unit 8: i 40 m																
Refrigerant branch kit selection		Use the following refnet joint		Use the following refnet header																
Refrigerant branch kits can only be used with R-410A.		<table border="1"> <thead> <tr> <th>Outdoor unit capacity type</th> <th>Refrigerant branch kit name</th> </tr> </thead> <tbody> <tr> <td>RXYSQ4~6</td> <td>KHRQ22M20T</td> </tr> </tbody> </table>		Outdoor unit capacity type	Refrigerant branch kit name	RXYSQ4~6	KHRQ22M20T	<table border="1"> <thead> <tr> <th>Outdoor unit capacity type</th> <th>Refrigerant branch kit name</th> </tr> </thead> <tbody> <tr> <td>RXYSQ4~6</td> <td>KHRQ22M29H</td> </tr> </tbody> </table>	Outdoor unit capacity type	Refrigerant branch kit name	RXYSQ4~6	KHRQ22M29H								
Outdoor unit capacity type	Refrigerant branch kit name																			
RXYSQ4~6	KHRQ22M20T																			
Outdoor unit capacity type	Refrigerant branch kit name																			
RXYSQ4~6	KHRQ22M29H																			
Pipe size selection Caution on selecting connection pipes If the overall equivalent piping length is 90 m, be sure to enlarge the pipe diameter of the gas-side main piping. If the recommended pipe size is not available, stick to the original pipe diameter (which may result in a small capacity decrease). [Gas side] RXYSQ4+5: Ø15.9→Ø19.1 RXYSQ6: Ø19.1→Ø22.2		A. Piping between outdoor unit and refrigerant branch kit • Match to the size of the connection piping on the outdoor unit. Outdoor unit connection piping size <table border="1"> <thead> <tr> <th rowspan="2">Outdoor unit capacity type</th> <th colspan="2">Piping size (outer diameter x minimum thickness)</th> </tr> <tr> <th>Gas pipe</th> <th>Liquid pipe</th> </tr> </thead> <tbody> <tr> <td>RXYSQ4+5</td> <td>Ø15.9x1.0 (Ø19.1x1.0)</td> <td rowspan="2">Ø9.5x0.8</td> </tr> <tr> <td>RXYSQ6</td> <td>Ø19.1x1.0 (Ø22.2x1.0)</td> </tr> </tbody> </table>		Outdoor unit capacity type	Piping size (outer diameter x minimum thickness)		Gas pipe	Liquid pipe	RXYSQ4+5	Ø15.9x1.0 (Ø19.1x1.0)	Ø9.5x0.8	RXYSQ6	Ø19.1x1.0 (Ø22.2x1.0)	B. Piping between refrigerant branch kits • Use the pipe size from the following table. <table border="1"> <thead> <tr> <th colspan="2">Piping size (outer diameter x minimum thickness)</th> </tr> <tr> <th>Gas pipe</th> <th>Liquid pipe</th> </tr> </thead> <tbody> <tr> <td>Ø15.9x1.0</td> <td>Ø9.5x0.8</td> </tr> </tbody> </table>	Piping size (outer diameter x minimum thickness)		Gas pipe	Liquid pipe	Ø15.9x1.0	Ø9.5x0.8
Outdoor unit capacity type	Piping size (outer diameter x minimum thickness)																			
	Gas pipe	Liquid pipe																		
RXYSQ4+5	Ø15.9x1.0 (Ø19.1x1.0)	Ø9.5x0.8																		
RXYSQ6	Ø19.1x1.0 (Ø22.2x1.0)																			
Piping size (outer diameter x minimum thickness)																				
Gas pipe	Liquid pipe																			
Ø15.9x1.0	Ø9.5x0.8																			
		C. Piping between refrigerant branch kit and indoor unit • Pipe size for direct connection to indoor unit must be the same as the connection size of indoor unit. <table border="1"> <thead> <tr> <th rowspan="2">Indoor capacity index</th> <th colspan="2">Piping size (outer diameter x minimum thickness)</th> </tr> <tr> <th>Gas pipe</th> <th>Liquid pipe</th> </tr> </thead> <tbody> <tr> <td>20+25+32+40+50</td> <td>Ø12.7x0.8</td> <td>Ø6.4x0.8</td> </tr> <tr> <td>63+80+100+125</td> <td>Ø15.9x1.0</td> <td>Ø9.5x0.8</td> </tr> </tbody> </table>			Indoor capacity index	Piping size (outer diameter x minimum thickness)		Gas pipe	Liquid pipe	20+25+32+40+50	Ø12.7x0.8	Ø6.4x0.8	63+80+100+125	Ø15.9x1.0	Ø9.5x0.8					
Indoor capacity index	Piping size (outer diameter x minimum thickness)																			
	Gas pipe	Liquid pipe																		
20+25+32+40+50	Ø12.7x0.8	Ø6.4x0.8																		
63+80+100+125	Ø15.9x1.0	Ø9.5x0.8																		
How to calculate the additional refrigerant to be charged Additional refrigerant to be charged R (kg) R should be rounded off in units of 0.1 kg		$R = \left(\text{Total length (m) of liquid piping size at } \text{Ø}9.5 \right) \times 0.054 + \left(\text{Total length (m) of liquid piping size at } \text{Ø}6.4 \right) \times 0.022$ <p>Example for refrigerant branch using refnet joint and refnet header</p> <table border="1"> <tr> <td>a: Ø9.5x30 m</td> <td>d: Ø9.5x13 m</td> <td>g: Ø6.4x10 m</td> <td>j: Ø6.4x10 m</td> </tr> <tr> <td>b: Ø9.5x10 m</td> <td>e: Ø6.4x10 m</td> <td>h: Ø6.4x20 m</td> <td>k: Ø6.4x9 m</td> </tr> <tr> <td>c: Ø9.5x10 m</td> <td>f: Ø6.4x10 m</td> <td>i: Ø9.5x10 m</td> <td></td> </tr> </table> <p>R=[73 x 0.054] + [69 x 0.022] = 5.46 5.5 kg</p>			a: Ø9.5x30 m	d: Ø9.5x13 m	g: Ø6.4x10 m	j: Ø6.4x10 m	b: Ø9.5x10 m	e: Ø6.4x10 m	h: Ø6.4x20 m	k: Ø6.4x9 m	c: Ø9.5x10 m	f: Ø6.4x10 m	i: Ø9.5x10 m					
a: Ø9.5x30 m	d: Ø9.5x13 m	g: Ø6.4x10 m	j: Ø6.4x10 m																	
b: Ø9.5x10 m	e: Ø6.4x10 m	h: Ø6.4x20 m	k: Ø6.4x9 m																	
c: Ø9.5x10 m	f: Ø6.4x10 m	i: Ø9.5x10 m																		

5. Thermistor Resistance / Temperature Characteristics

Indoor unit For air suction R1T
For liquid pipe R2T
For gas pipe R3T

Outdoor unit for fin thermistor R1T

Outdoor unit For outdoor air R1T
For suction pipe 1 R3T
For heat exchanger R4T, R6T
For suction pipe 2 R5T
For Subcooling heat exchanger outlet R6T, R4T
For Liquid pipe R7T, R8T
(kΩ)

T°C	0.0
-10	-
-8	-
-6	88.0
-4	79.1
-2	71.1
0	64.1
2	57.8
4	52.3
6	47.3
8	42.9
10	38.9
12	35.3
14	32.1
16	29.2
18	26.6
20	24.3
22	22.2
24	20.3
26	18.5
28	17.0
30	15.6
32	14.2
34	13.1
36	12.0
38	11.1
40	10.3
42	9.5
44	8.8
46	8.2
48	7.6
50	7.0
52	6.7
54	6.0
56	5.5
58	5.2
60	4.79
62	4.46
64	4.15
66	3.87
68	3.61
70	3.37
72	3.15
74	2.94
76	2.75
78	2.51
80	2.41
82	2.26
84	2.12
86	1.99
88	1.87
90	1.76
92	1.65
94	1.55
96	1.46
98	1.38

T°C	0.0	0.5
-20	197.81	192.08
-19	186.53	181.16
-18	175.97	170.94
-17	166.07	161.36
-16	156.80	152.38
-15	148.10	143.96
-14	139.94	136.05
-13	132.28	128.63
-12	125.09	121.66
-11	118.34	115.12
-10	111.99	108.96
-9	106.03	103.18
-8	100.41	97.73
-7	95.14	92.61
-6	90.17	87.79
-5	85.49	83.25
-4	81.08	78.97
-3	76.93	74.94
-2	73.01	71.14
-1	69.32	67.56
0	65.84	64.17
1	62.54	60.96
2	59.43	57.94
3	56.49	55.08
4	53.71	52.38
5	51.09	49.83
6	48.61	47.42
7	46.26	45.14
8	44.05	42.98
9	41.95	40.94
10	39.96	39.01
11	38.08	37.18
12	36.30	35.45
13	34.62	33.81
14	33.02	32.25
15	31.50	30.77
16	30.06	29.37
17	28.70	28.05
18	27.41	26.78
19	26.18	25.59
20	25.01	24.45
21	23.91	23.37
22	22.85	22.35
23	21.85	21.37
24	20.90	20.45
25	20.00	19.56
26	19.14	18.73
27	18.32	17.93
28	17.54	17.17
29	16.80	16.45
30	16.10	15.76

T°C	0.0	0.5
30	16.10	15.76
31	15.43	15.10
32	14.79	14.48
33	14.18	13.88
34	13.59	13.31
35	13.04	12.77
36	12.51	12.25
37	12.01	11.76
38	11.52	11.29
39	11.06	10.84
40	10.63	10.41
41	10.21	10.00
42	9.81	9.61
43	9.42	9.24
44	9.06	8.88
45	8.71	8.54
46	8.37	8.21
47	8.05	7.90
48	7.75	7.60
49	7.46	7.31
50	7.18	7.04
51	6.91	6.78
52	6.65	6.53
53	6.41	6.53
54	6.65	6.53
55	6.41	6.53
56	6.18	6.06
57	5.95	5.84
58	5.74	5.43
59	5.14	5.05
60	4.96	4.87
61	4.79	4.70
62	4.62	4.54
63	4.46	4.38
64	4.30	4.23
65	4.16	4.08
66	4.01	3.94
67	3.88	3.81
68	3.75	3.68
69	3.62	3.56
70	3.50	3.44
71	3.38	3.32
72	3.27	3.21
73	3.16	3.11
74	3.06	3.01
75	2.96	2.91
76	2.86	2.82
77	2.77	2.72
78	2.68	2.64
79	2.60	2.55
80	2.51	2.47

**Outdoor Unit
Thermistors for
Discharge Pipe
(R2T)**

						(kΩ)		
T°C	0.0	0.5	T°C	0.0	0.5	T°C	0.0	0.5
0	640.44	624.65	50	72.32	70.96	100	13.35	13.15
1	609.31	594.43	51	69.64	68.34	101	12.95	12.76
2	579.96	565.78	52	67.06	65.82	102	12.57	12.38
3	552.00	538.63	53	64.60	63.41	103	12.20	12.01
4	525.63	512.97	54	62.24	61.09	104	11.84	11.66
5	500.66	488.67	55	59.97	58.87	105	11.49	11.32
6	477.01	465.65	56	57.80	56.75	106	11.15	10.99
7	454.60	443.84	57	55.72	54.70	107	10.83	10.67
8	433.37	423.17	58	53.72	52.84	108	10.52	10.36
9	413.24	403.57	59	51.98	50.96	109	10.21	10.06
10	394.16	384.98	60	49.96	49.06	110	9.92	9.78
11	376.05	367.35	61	48.19	47.33	111	9.64	9.50
12	358.88	350.62	62	46.49	45.67	112	9.36	9.23
13	342.58	334.74	63	44.86	44.07	113	9.10	8.97
14	327.10	319.66	64	43.30	42.54	114	8.84	8.71
15	312.41	305.33	65	41.79	41.06	115	8.59	8.47
16	298.45	291.73	66	40.35	39.65	116	8.35	8.23
17	285.18	278.80	67	38.96	38.29	117	8.12	8.01
18	272.58	266.51	68	37.63	36.98	118	7.89	7.78
19	260.60	254.72	69	36.34	35.72	119	7.68	7.57
20	249.00	243.61	70	35.11	34.51	120	7.47	7.36
21	238.36	233.14	71	33.92	33.35	121	7.26	7.16
22	228.05	223.08	72	32.78	32.23	122	7.06	6.97
23	218.24	213.51	73	31.69	31.15	123	6.87	6.78
24	208.90	204.39	74	30.63	30.12	124	6.69	6.59
25	200.00	195.71	75	29.61	29.12	125	6.51	6.42
26	191.53	187.44	76	28.64	28.16	126	6.33	6.25
27	183.46	179.57	77	27.69	27.24	127	6.16	6.08
28	175.77	172.06	78	26.79	26.35	128	6.00	5.92
29	168.44	164.90	79	25.91	25.49	129	5.84	5.76
30	161.45	158.08	80	25.07	24.66	130	5.69	5.61
31	154.79	151.57	81	24.26	23.87	131	5.54	5.46
32	148.43	145.37	82	23.48	23.10	132	5.39	5.32
33	142.37	139.44	83	22.73	22.36	133	5.25	5.18
34	136.59	133.79	84	22.01	21.65	134	5.12	5.05
35	131.06	128.39	85	21.31	20.97	135	4.98	4.92
36	125.79	123.24	86	20.63	20.31	136	4.86	4.79
37	120.76	118.32	87	19.98	19.67	137	4.73	4.67
38	115.95	113.62	88	19.36	19.05	138	4.61	4.55
39	111.35	109.13	89	18.75	18.46	139	4.49	4.44
40	106.96	104.84	90	18.17	17.89	140	4.38	4.32
41	102.76	100.73	91	17.61	17.34	141	4.27	4.22
42	98.75	96.81	92	17.07	16.80	142	4.16	4.11
43	94.92	93.06	93	16.54	16.29	143	4.06	4.01
44	91.25	89.47	94	16.04	15.79	144	3.96	3.91
45	87.74	86.04	95	15.55	15.31	145	3.86	3.81
46	84.38	82.75	96	15.08	14.85	146	3.76	3.72
47	81.16	79.61	97	14.62	14.40	147	3.67	3.62
48	78.09	76.60	98	14.18	13.97	148	3.58	3.54
49	75.14	73.71	99	13.76	13.55	149	3.49	3.45
50	72.32	70.96	100	13.35	13.15	150	3.41	3.37


6. Pressure Sensor

$P_H = 1.38V - 0.69$
 $P_L = 0.57V - 0.28$
 P_H : High pressure (MPa)
 P_L : Low pressure (MPa)
 V : Voltage (V)

P_H : Detected Pressure [High Side] MPa
 P_L : Detected Pressure [Low Side] MPa
 V_H : Output Voltage [High Side] V_{DC}
 V_L : Output Voltage [Low Side] V_{DC}

Detected Pressure

P_H, P_L
 (kg/cm²) MPa

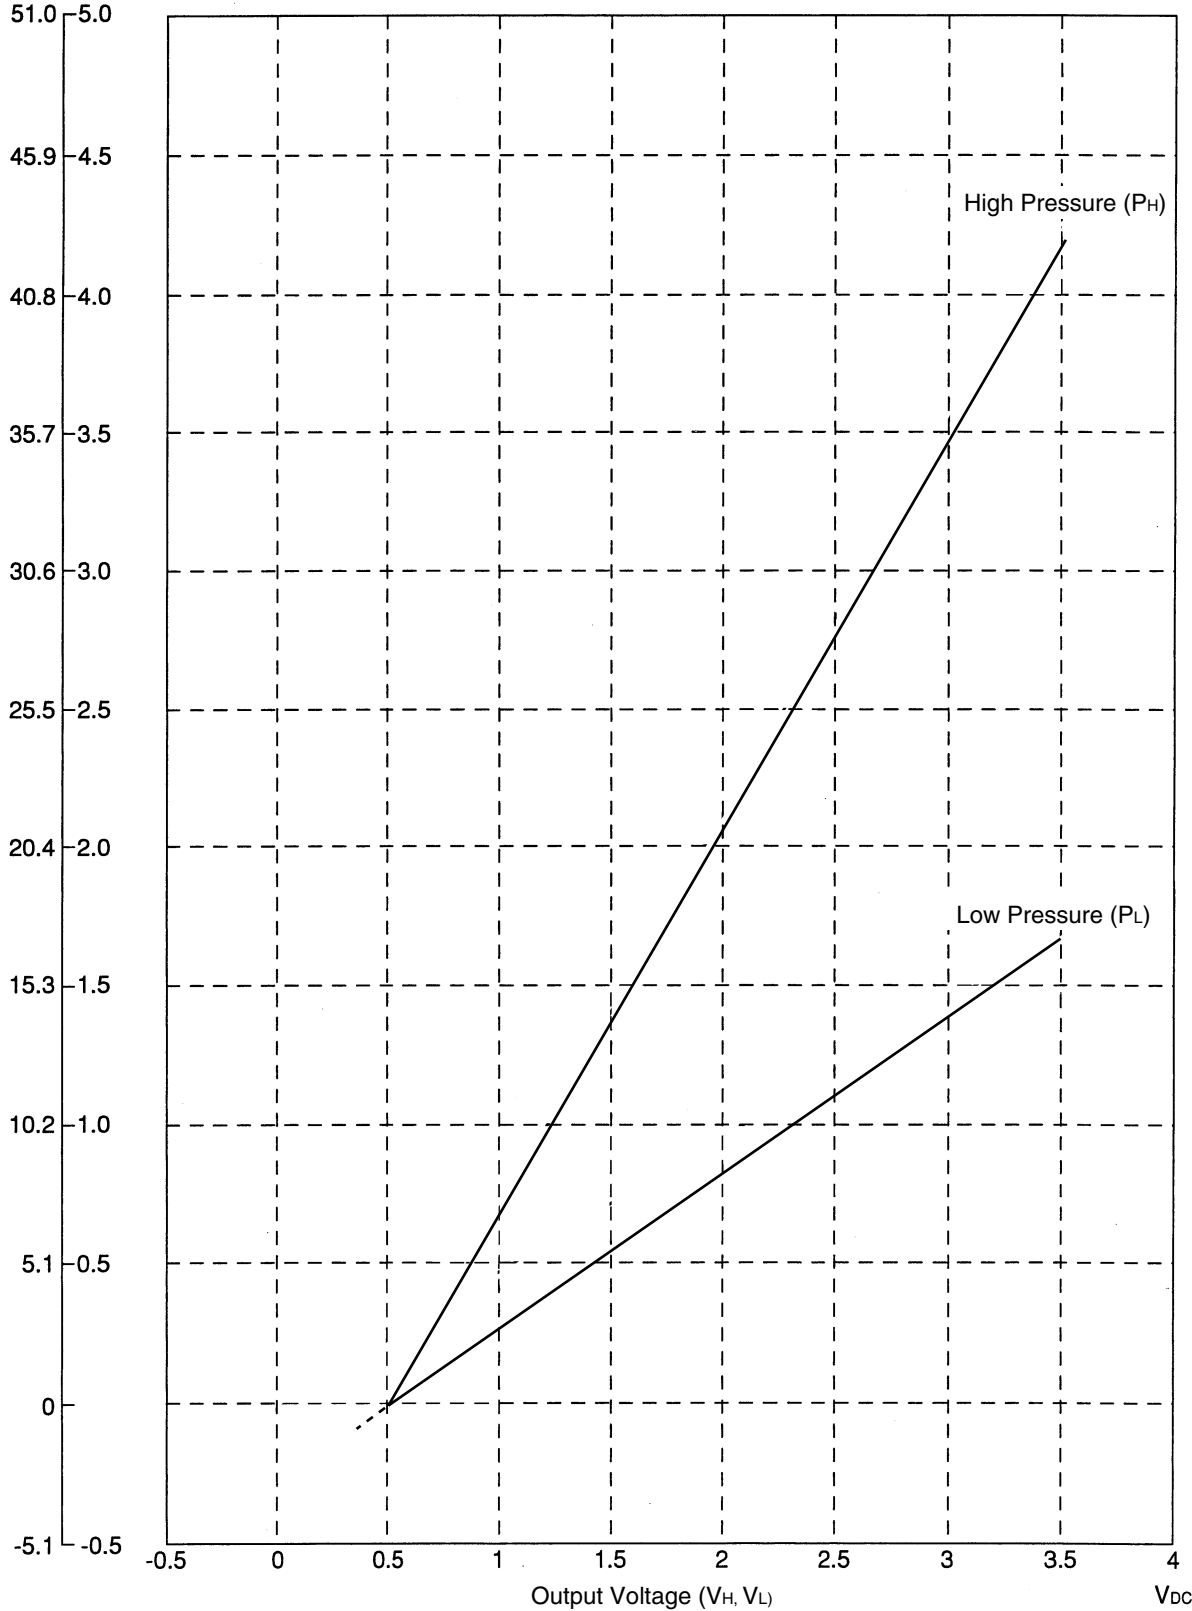

(V3053)

7. Method of Replacing the Inverter's Power Transistors Modules

Checking failures in power semiconductors mounted on inverter PC board

Check the power semiconductors mounted on the inverter PC board by the use of a multiple tester.


<Items to be prepared>

- Multiple tester : Prepare the digital type of multiple tester with diode check function.


<Preparation>

- Turn OFF the power supply. Then, after a lapse of 10 minutes or more, make measurement of resistance.
- To make measurement, disconnect all connectors and terminals.

Inverter PC board (RXYSQ4 / 5 / 6PA7Y1B)

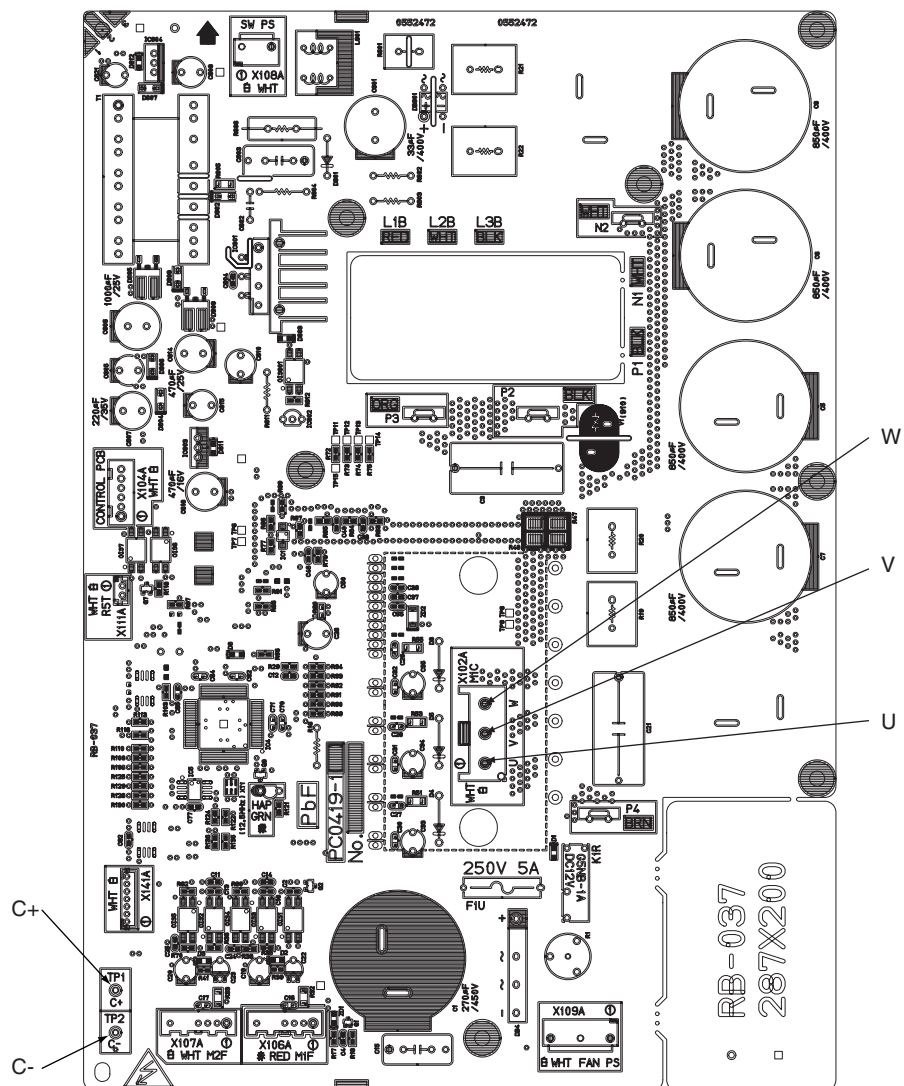

Inverter PC board (RXYSQ4 / 5 / 6PA7V1B)

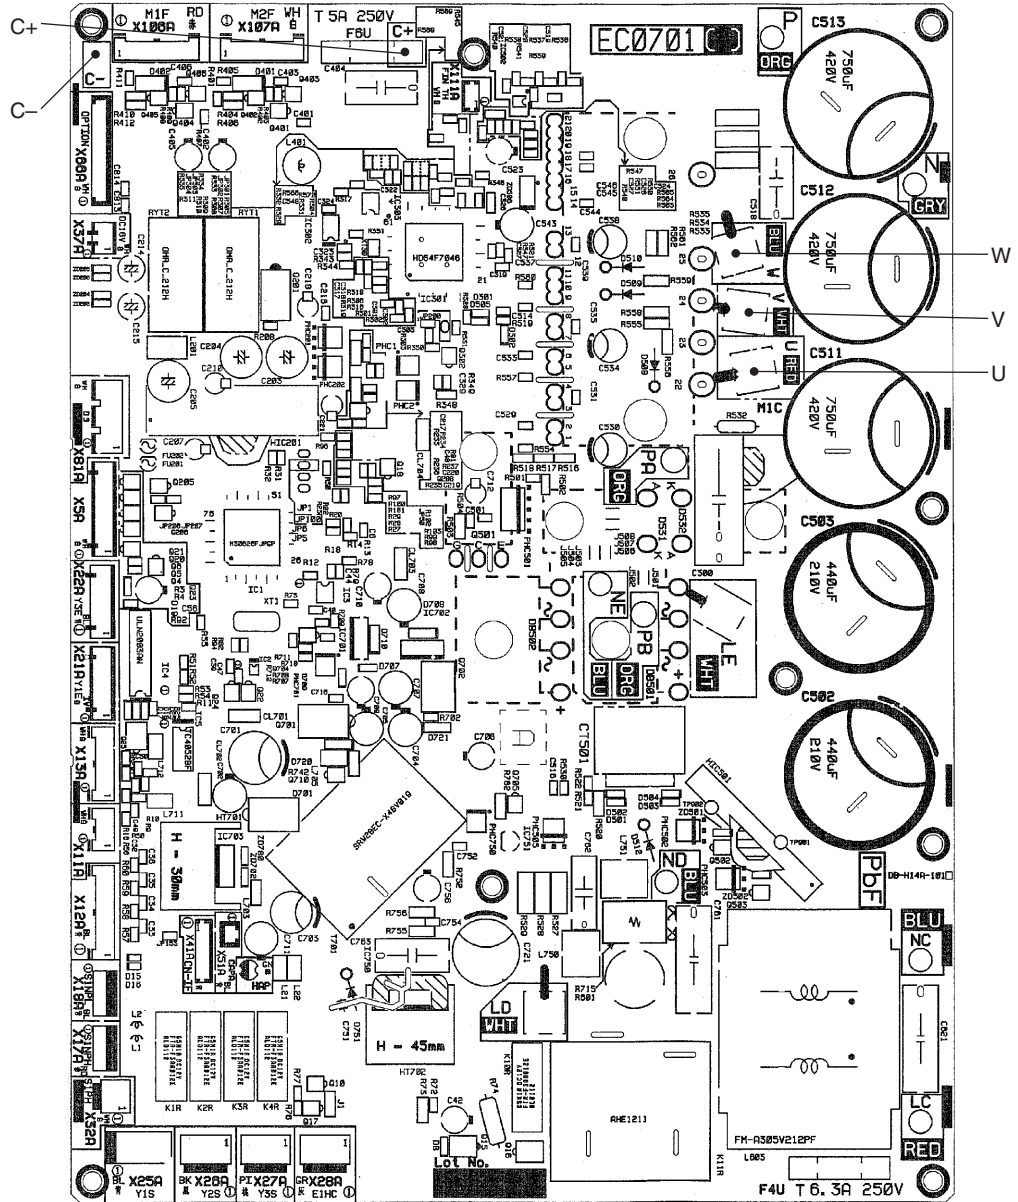

Power module checking

When using the digital type of multiple tester, make measurement in diode check mode.

Tester terminal		Criterion	Remark
+	-		
C+	U	Not less than 0.3V (including ∞)*	It may take time to determine the voltage due to capacitor charge or else.
	V		
	W		
U	C-	Not less than 0.3V (including ∞)*	
V			
W			
U	C+	0.3 to 0.7V (including ∞)*	
V			
W			
C-	U	0.3 to 0.7V (including ∞)*	
	V		
	W		

*There needs to be none of each value variation.

The following abnormalities are also doubted besides the PC board abnormality.

- Faulty compressor (ground fault, ground leakage)
- Faulty fan motor (ground leakage)

Part 9

Precautions for New Refrigerant (R-410A)

1. Precautions for New Refrigerant (R-410A)	258
1.1 Outline	258
1.2 Refrigerant Cylinders.....	260
1.3 Service Tools.....	261

1. Precautions for New Refrigerant (R-410A)


1.1 Outline

1.1.1 About Refrigerant R-410A

- Characteristics of new refrigerant, R-410A
 1. Performance
Almost the same performance as R-22 and R-407C
 2. Pressure
Working pressure is approx. 1.4 times more than R-22 and R-407C.
 3. Refrigerant composition
Few problems in composition control, since it is a Quasi-azeotropic mixture refrigerant.

	HFC units (Units using new refrigerants)		HCFC units
Refrigerant name	R-407C	R-410A	R-22
Composing substances	Non-azeotropic mixture of HFC32, HFC125 and HFC134a (*1)	Quasi-azeotropic mixture of HFC32 and JFC125 (*1)	Single-component refrigerant
Design pressure	3.2 MPa (gauge pressure) = 32.6 kgf/cm ²	4.0 MPa (gauge pressure) = 40.8 kgf/cm ²	2.75MPa (gauge pressure) = 28.0 kgf/cm ²
Refrigerant oil	Synthetic oil (Ether)		Mineral oil (Suniso)
Ozone destruction factor (ODP)	0	0	0.05
Combustibility	None	None	None
Toxicity	None	None	None

- ★1. Non-azeotropic mixture refrigerant: mixture of two or more refrigerants having different boiling points.
- ★2. Quasi-azeotropic mixture refrigerant: mixture of two or more refrigerants having similar boiling points.
- ★3. The design pressure is different at each product. Please refer to the installation manual for each product.
(Reference) 1 MPa ≒ 10.19716 kgf / cm²

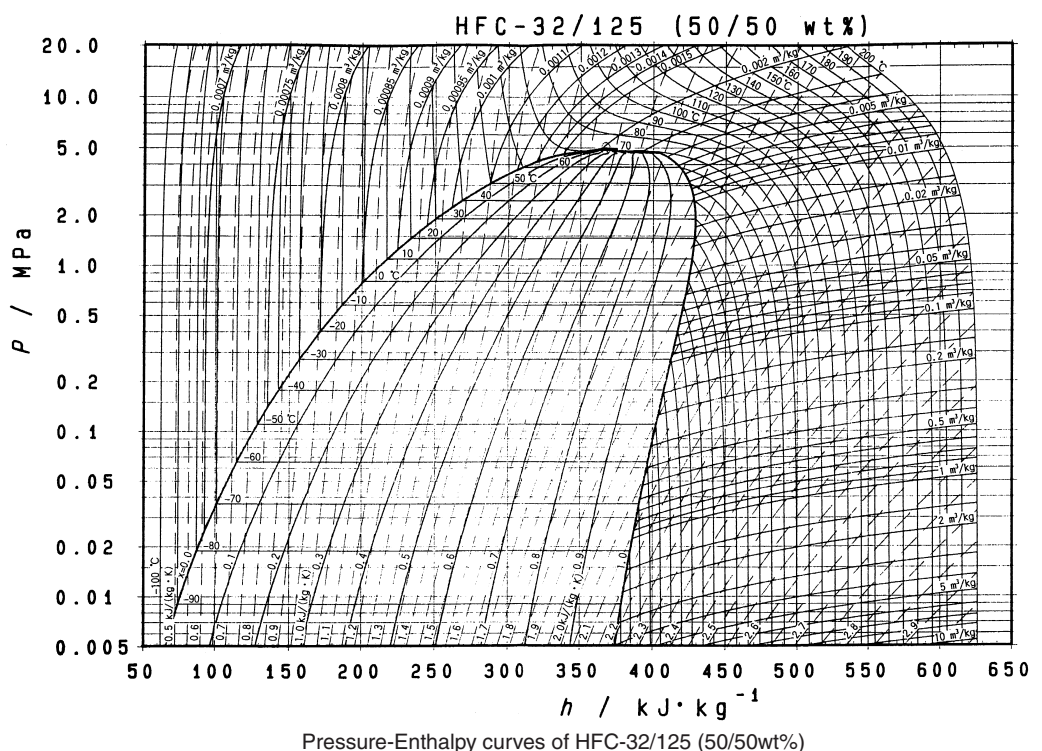


■ Thermodynamic characteristic of R-410A

DAIREP ver2.0

Temperature (°C)	Steam pressure (kPa)		Density (kg/m ³)		Specific heat at constant pressure (kJ/kgK)		Specific enthalpy (kJ/kg)		Specific entropy (kJ/KgK)	
	Liquid	Vapor	Liquid	Vapor	Liquid	Vapor	Liquid	Vapor	Liquid	Vapor
-70	36.13	36.11	1410.7	1.582	1.372	0.695	100.8	390.6	0.649	2.074
-68	40.83	40.80	1404.7	1.774	1.374	0.700	103.6	391.8	0.663	2.066
-66	46.02	45.98	1398.6	1.984	1.375	0.705	106.3	393.0	0.676	2.058
-64	51.73	51.68	1392.5	2.213	1.377	0.710	109.1	394.1	0.689	2.051
-62	58.00	57.94	1386.4	2.463	1.378	0.715	111.9	395.3	0.702	2.044
-60	64.87	64.80	1380.2	2.734	1.379	0.720	114.6	396.4	0.715	2.037
-58	72.38	72.29	1374.0	3.030	1.380	0.726	117.4	397.6	0.728	2.030
-56	80.57	80.46	1367.8	3.350	1.382	0.732	120.1	398.7	0.741	2.023
-54	89.49	89.36	1361.6	3.696	1.384	0.737	122.9	399.8	0.754	2.017
-52	99.18	99.03	1355.3	4.071	1.386	0.744	125.7	400.9	0.766	2.010
-51.58	101.32	101.17	1354.0	4.153	1.386	0.745	126.3	401.1	0.769	2.009
-50	109.69	109.51	1349.0	4.474	1.388	0.750	128.5	402.0	0.779	2.004
-48	121.07	120.85	1342.7	4.909	1.391	0.756	131.2	403.1	0.791	1.998
-46	133.36	133.11	1336.3	5.377	1.394	0.763	134.0	404.1	0.803	1.992
-44	146.61	146.32	1330.0	5.880	1.397	0.770	136.8	405.2	0.816	1.987
-42	160.89	160.55	1323.5	6.419	1.401	0.777	139.6	406.2	0.828	1.981
-40	176.24	175.85	1317.0	6.996	1.405	0.785	142.4	407.3	0.840	1.976
-38	192.71	192.27	1310.5	7.614	1.409	0.792	145.3	408.3	0.852	1.970
-36	210.37	209.86	1304.0	8.275	1.414	0.800	148.1	409.3	0.864	1.965
-34	229.26	228.69	1297.3	8.980	1.419	0.809	150.9	410.2	0.875	1.960
-32	249.46	248.81	1290.6	9.732	1.424	0.817	153.8	411.2	0.887	1.955
-30	271.01	270.28	1283.9	10.53	1.430	0.826	156.6	412.1	0.899	1.950
-28	293.99	293.16	1277.1	11.39	1.436	0.835	159.5	413.1	0.911	1.946
-26	318.44	317.52	1270.2	12.29	1.442	0.844	162.4	414.0	0.922	1.941
-24	344.44	343.41	1263.3	13.26	1.448	0.854	165.3	414.9	0.934	1.936
-22	372.05	370.90	1256.3	14.28	1.455	0.864	168.2	415.7	0.945	1.932
-20	401.34	400.06	1249.2	15.37	1.461	0.875	171.1	416.6	0.957	1.927
-18	432.36	430.95	1242.0	16.52	1.468	0.886	174.1	417.4	0.968	1.923
-16	465.20	463.64	1234.8	17.74	1.476	0.897	177.0	418.2	0.980	1.919
-14	499.91	498.20	1227.5	19.04	1.483	0.909	180.0	419.0	0.991	1.914
-12	536.58	534.69	1220.0	20.41	1.491	0.921	182.9	419.8	1.003	1.910
-10	575.26	573.20	1212.5	21.86	1.499	0.933	185.9	420.5	1.014	1.906
-8	616.03	613.78	1204.9	23.39	1.507	0.947	189.0	421.2	1.025	1.902
-6	658.97	656.52	1197.2	25.01	1.516	0.960	192.0	421.9	1.036	1.898
-4	704.15	701.49	1189.4	26.72	1.524	0.975	195.0	422.6	1.048	1.894
-2	751.64	748.76	1181.4	28.53	1.533	0.990	198.1	423.2	1.059	1.890
0	801.52	798.41	1173.4	30.44	1.543	1.005	201.2	423.8	1.070	1.886
2	853.87	850.52	1165.3	32.46	1.552	1.022	204.3	424.4	1.081	1.882
4	908.77	905.16	1157.0	34.59	1.563	1.039	207.4	424.9	1.092	1.878
6	966.29	962.42	1148.6	36.83	1.573	1.057	210.5	425.5	1.103	1.874
8	1026.5	1022.4	1140.0	39.21	1.584	1.076	213.7	425.9	1.114	1.870
10	1089.5	1085.1	1131.3	41.71	1.596	1.096	216.8	426.4	1.125	1.866
12	1155.4	1150.7	1122.5	44.35	1.608	1.117	220.0	426.8	1.136	1.862
14	1224.3	1219.2	1113.5	47.14	1.621	1.139	223.2	427.2	1.147	1.859
16	1296.2	1290.8	1104.4	50.09	1.635	1.163	226.5	427.5	1.158	1.855
18	1371.2	1365.5	1095.1	53.20	1.650	1.188	229.7	427.8	1.169	1.851
20	1449.4	1443.4	1085.6	56.48	1.666	1.215	233.0	428.1	1.180	1.847
22	1530.9	1524.6	1075.9	59.96	1.683	1.243	236.4	428.3	1.191	1.843
24	1615.8	1609.2	1066.0	63.63	1.701	1.273	239.7	428.4	1.202	1.839
26	1704.2	1697.2	1055.9	67.51	1.721	1.306	243.1	428.6	1.214	1.834
28	1796.2	1788.9	1045.5	71.62	1.743	1.341	246.5	428.6	1.225	1.830
30	1891.9	1884.2	1034.9	75.97	1.767	1.379	249.9	428.6	1.236	1.826
32	1991.3	1983.2	1024.1	80.58	1.793	1.420	253.4	428.6	1.247	1.822
34	2094.5	2086.2	1012.9	85.48	1.822	1.465	256.9	428.4	1.258	1.817
36	2201.7	2193.1	1001.4	90.68	1.855	1.514	260.5	428.3	1.269	1.813
38	2313.0	2304.0	989.5	96.22	1.891	1.569	264.1	428.0	1.281	1.808
40	2428.4	2419.2	977.3	102.1	1.932	1.629	267.8	427.7	1.292	1.803
42	2548.1	2538.6	964.6	108.4	1.979	1.696	271.5	427.2	1.303	1.798
44	2672.2	2662.4	951.4	115.2	2.033	1.771	275.3	426.7	1.315	1.793
46	2800.7	2790.7	937.7	122.4	2.095	1.857	279.2	426.1	1.327	1.788
48	2933.7	2923.6	923.3	130.2	2.168	1.955	283.2	425.4	1.339	1.782
50	3071.5	3061.2	908.2	138.6	2.256	2.069	287.3	424.5	1.351	1.776
52	3214.0	3203.6	892.2	147.7	2.362	2.203	291.5	423.5	1.363	1.770
54	3361.4	3351.0	875.1	157.6	2.493	2.363	295.8	422.4	1.376	1.764
56	3513.8	3503.5	856.8	168.4	2.661	2.557	300.3	421.0	1.389	1.757
58	3671.3	3661.2	836.9	180.4	2.883	2.799	305.0	419.4	1.403	1.749
60	3834.1	3824.2	814.9	193.7	3.191	3.106	310.0	417.6	1.417	1.741
62	4002.1	3992.7	790.1	208.6	3.650	3.511	315.3	415.5	1.433	1.732
64	4175.7	4166.8	761.0	225.6	4.415	4.064	321.2	413.0	1.450	1.722

1.2 Refrigerant Cylinders

- Cylinder specifications
 - The cylinder is painted refrigerant color (pink).
 - The cylinder valve is equipped with a siphon tube.

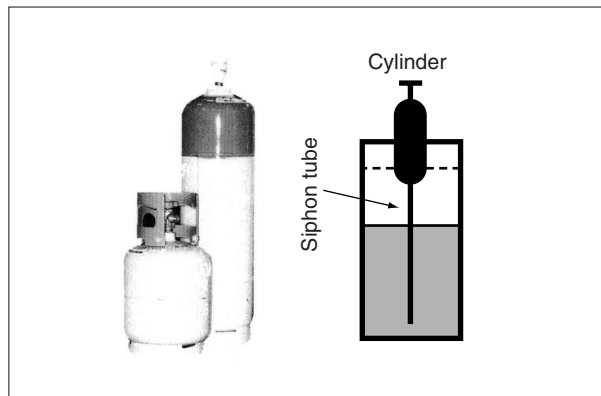

Refrigerant can be charged in liquid state with cylinder in upright position.

Caution: Do not lay cylinder on its side during charging, since it cause refrigerant in gas state to enter the system.

- Handling of cylinders
 - (1) Laws and regulations

R-410A is liquefied gas, and the High-Pressure Gas Safety Law must be observed in handling them. Before using, refer to the High-Pressure Gas Safety Law. The Law stipulates standards and regulations that must be followed to prevent accidents with high-pressure gases. Be sure to follow the regulations.
 - (2) Handling of vessels

Since R-410A is high-pressure gas, it is contained in high-pressure vessels. Although those vessels are durable and strong, careless handling can cause damage that can lead to unexpected accidents. Do not drop vessels, let them fall, apply impact or roll them on the ground.
 - (3) Storage

Although R-410A is not flammable, it must be stored in a well-ventilated, cool, and dark place in the same way as any other high-pressure gases. It should also be noted that high-pressure vessels are equipped with safety devices that releases gas when the ambient temperature reaches more than a certain level (fusible plug melts) and when the pressure exceeds a certain level (spring-type safety valve operates).

1.3 Service Tools

R-410A is used under higher working pressure, compared to previous refrigerants (R-22,R-407C). Furthermore, the refrigerating machine oil has been changed from Suniso oil to Ether oil, and if oil mixing is occurred, sludge results in the refrigerants and causes other problems. Therefore, gauge manifolds and charge hoses that are used with a previous refrigerant (R-22,R-407C) can not be used for products that use new refrigerants.

Be sure to use dedicated tools and devices.

■ Tool compatibility

Tool	Compatibility			Reasons for change
	HFC		HCFC	
	R-410A	R-407C	R-22	
Gauge manifold Charge hose	×			<ul style="list-style-type: none"> Do not use the same tools for R-22 and R-410A. Thread specification differs for R-410A and R-407C.
Charging cylinder	×		○	<ul style="list-style-type: none"> Weighting instrument used for HFCs.
Gas detector	○		×	<ul style="list-style-type: none"> The same tool can be used for HFCs.
Vacuum pump (pump with reverse flow preventive function)		○		<ul style="list-style-type: none"> To use existing pump for HFCs, vacuum pump adaptor must be installed.
Weighting instrument		○		
Charge mouthpiece		×		<ul style="list-style-type: none"> Seal material is different between R-22 and HFCs. Thread specification is different between R-410A and others.
Flaring tool (Clutch type)		○		<ul style="list-style-type: none"> For R-410A, flare gauge is necessary.
Torque wrench		○		<ul style="list-style-type: none"> Torque-up for 1/2 and 5/8
Pipe cutter		○		
Pipe expander		○		
Pipe bender		○		
Pipe assembling oil		×		<ul style="list-style-type: none"> Due to refrigerating machine oil change. (No Suniso oil can be used.)
Refrigerant recovery device	Check your recovery device.			
Refrigerant piping	See the chart below.			<ul style="list-style-type: none"> Only $\phi 19.1$ is changed to 1/2H material while the previous material is "O".

As for the charge mouthpiece and packing, 1/2UNF20 is necessary for mouthpiece size of charge hose.

■ Copper tube material and thickness

Pipe size	R-407C		R-410A	
	Material	Thickness t (mm)	Material	Thickness t (mm)
$\phi 6.4$	O	0.8	O	0.8
$\phi 9.5$	O	0.8	O	0.8
$\phi 12.7$	O	0.8	O	0.8
$\phi 15.9$	O	1.0	O	1.0
$\phi 19.1$	O	1.0	1/2H	1.0
$\phi 22.2$	1/2H	1.0	1/2H	1.0
$\phi 25.4$	1/2H	1.0	1/2H	1.0
$\phi 28.6$	1/2H	1.0	1/2H	1.0
$\phi 31.8$	1/2H	1.2	1/2H	1.1
$\phi 38.1$	1/2H	1.4	1/2H	1.4
$\phi 44.5$	1/2H	1.6	1/2H	1.6

* O: Soft (Annealed)
H: Hard (Drawn)

1. Flaring tool



■ Specifications


- Dimension A

Unit:mm

Nominal size	Tube O.D. Do	A ⁺⁰ _{-0.4}	
		Class-2 (R-410A)	Class-1 (Conventional)
1/4	6.35	9.1	9.0
3/8	9.52	13.2	13.0
1/2	12.70	16.6	16.2
5/8	15.88	19.7	19.4
3/4	19.05	24.0	23.3

■ Differences

- Change of dimension A

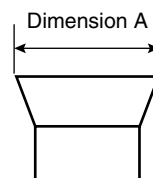

For class-1: R-407C
For class-2: R-410A

Conventional flaring tools can be used when the work process is changed.

(change of work process)

Previously, a pipe extension margin of 0 to 0.5mm was provided for flaring. For R-410A air conditioners, perform pipe flaring with a pipe extension margin of 1.0 to 1.5mm.

(For clutch type only)

Conventional tool with pipe extension margin adjustment can be used.

2. Torque wrench



■ Specifications

- Dimension B

Unit:mm


Nominal size	Class-1	Class-2	Previous
1/2	24	26	24
5/8	27	29	27

No change in tightening torque

No change in pipes of other sizes


■ Differences

- Change of dimension B
Only 1/2", 5/8" are extended

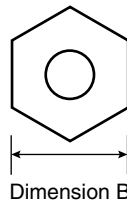

For class-1: R-407C
For class-2: R-410A

3. Vacuum pump with check valve

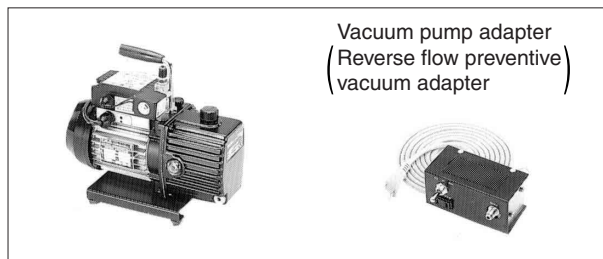

■ Specifications

- Discharge speed
50 l/min (50Hz)
60 l/min (60Hz)
- Suction port UNF7/16-20(1/4 Flare)
UNF1/2-20(5/16 Flare) with adapter
- Maximum degree of vacuum
Select a vacuum pump which is able to keep the vacuum degree of the system in excess of -100.7 kPa (5 torr - 755 mmHg).

■ Differences

- Equipped with function to prevent reverse oil flow
- Previous vacuum pump can be used by installing adapter.

4. Leak tester




- Specifications
 - Hydrogen detecting type, etc.
 - Applicable refrigerants
R-410A, R-407C, R-404A, R-507A, R-134a, etc.
- Differences
 - Previous testers detected chlorine. Since HFCs do not contain chlorine, new tester detects hydrogen.

5. Refrigerant oil (Air compal)



- Specifications
 - Contains synthetic oil, therefore it can be used for piping work of every refrigerant cycle.
 - Offers high rust resistance and stability over long period of time.
- Differences
 - Can be used for R-410A and R-22 units.


6. Gauge manifold for R-410A

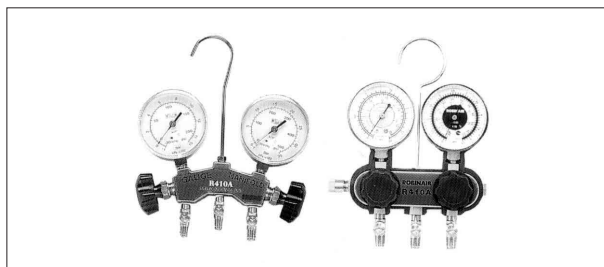

- Specifications
 - High pressure gauge
- 0.1 to 5.3 MPa (-76 cmHg to 53 kg/cm²)
 - Low pressure gauge
- 0.1 to 3.8 MPa (-76 cmHg to 38 kg/cm²)
 - 1/4" → 5/16" (2min → 2.5min)
 - No oil is used in pressure test of gauges.
→ For prevention of contamination


- Temperature scale indicates the relationship between pressure and temperature in gas saturated state.
- Differences
 - Change in pressure
 - Change in service port diameter

7. Charge hose for R-410A

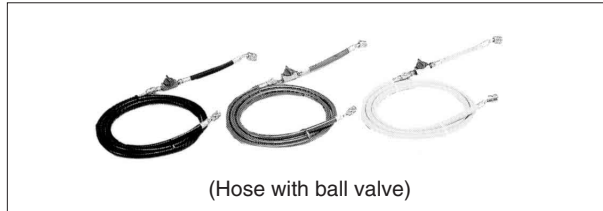

- Specifications
 - Working pressure 5.08 MPa (51.8 kg/cm²)
 - Rupture pressure 25.4 MPa (259 kg/cm²)
 - Available with and without hand-operate valve that prevents refrigerant from outflow.
- Differences
 - Pressure proof hose
 - Change in service port diameter
 - Use of nylon coated material for HFC resistance


8. Charging cylinder

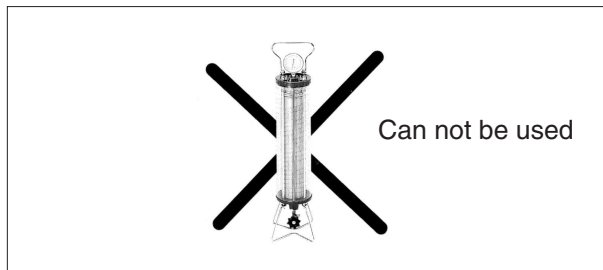

- Specifications
 - Use weigher for refrigerant charge listed below to charge directly from refrigerant cylinder.
- Differences
 - The cylinder can not be used for mixed refrigerant since mixing ratio is changed during charging.

When R-410A is charged in liquid state using charging cylinder, foaming phenomenon is generated inside charging cylinder.

9. Weigher for refrigerant charge

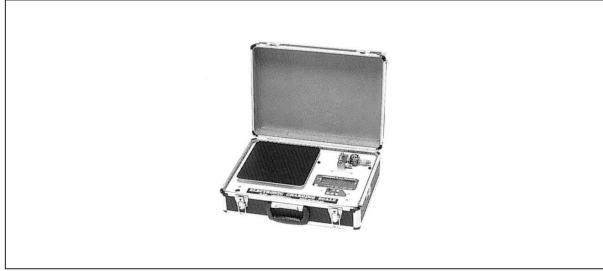

- Specifications
 - High accuracy
 - TA101A (for 10-kg cylinder) = $\pm 2\text{g}$
 - TA101B (for 20-kg cylinder) = $\pm 5\text{g}$
 - Equipped with pressure-resistant sight glass to check liquid refrigerant charging.
 - A manifold with separate ports for HFCs and previous refrigerants is equipped as standard accessories.
- Differences
 - Measurement is based on weight to prevent change of mixing ratio during charging.

10. Charge mouthpiece



- Specifications
 - For R-410A, 1/4" → 5/16" (2min → 2.5min)
 - Material is changed from CR to H-NBR.
- Differences
 - Change of thread specification on hose connection side (For the R-410A use)
 - Change of sealer material for the HFCs use.

Index

A	
A0	142
A1	143
A3	144
A6	146
A7	147
A8	149
A9	150
Abnormal Discharge Pipe Temperature	172
Abnormal Power Supply Voltage	149
About Refrigerant R-410A	258
Actuation of High Pressure Switch	164
Actuation of Low Pressure Sensor	166
Address Duplication of Central Remote Controller	201
Address Duplication, Improper Setting	211
AF	152
AJ	153
Applicable range of Field setting	92
C	
C1	154
C4	156
C5	157
C6	158
C9	159
CA	160
CC	161
Centralized Control Group No. Setting	100
Check for causes of drop in low pressure	219
Check for causes of rise in high pressure	218
Check Operation	82
Check Operation not Executed	193
CJ	162
Compressor PI Control	50
Contents of Control Modes	102
Cool / Heat Mode Switching	113
Cooling Operation Fan Control	52
D	
Defrosting Operation	56
Demand Operation	64
Detailed Explanation of Setting Modes	93
Discharge Pipe Protection Control	62
Display "Under Host Computer Integrate Control" Blinks (Repeats Double Blink)	217
Display "Under Host Computer Integrate Control" Blinks (Repeats Single Blink)	214
Drain Level above Limit	152
Drain Pump Control	65
E	
E1	163
E3	164
E4	166
E5	168
E7	169
E9	170
Electrical and Functional Parts	
Outdoor Unit	30
Electronic Expansion Valve PI Control	51
Error of External Protection Device	142
Excessive Number of Indoor Units	200
F	
F3	172
F6	173
Failure of Combination (Between Indoor unit PC Board and Fan PC Board)	158
Failure of Transmission (Between Indoor unit PC Board and Fan PC Board)	154
Fan Motor (M1F) Lock, Overload	146
Field Setting	87
Field Setting from Outdoor Unit	104
Field Setting from Remote Controller	87
Freeze Prevention	70
Functional Parts Layout	44
H	
H9	174
Heating Operation Prohibition	64
High Pressure Protection Control	60
High Voltage of Capacitor in Main Inverter Circuit	188
I	
Improper Combination of Optional Controllers for Centralized Control	209
Inverter Compressor Abnormal	184
Inverter Compressor Motor Lock	168
Inverter Current Abnormal	185
Inverter Protection Control	63
Inverter Start up Error	186
J	
J3	175
J5	176
J6	177
J7	178
J9	179
JA	180
JC	181
L	
L1	182
L4	183
L5	184
L8	185
L9	186
LC	187
List of Electrical and Functional Parts	
Indoor Unit	32
Louver Control for Preventing Ceiling Dirt	67
Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure	189
Low Pressure Protection Control	61

M

M1	207
M8	208
MA	209
Malfunction code indication by outdoor unit	
PC board	138
Malfunction of Capacity Determination Device ...	153
Malfunction of Discharge Pipe Thermistor	
(R2T)	175
Malfunction of Drain Level Control System	
(S1L)	144
Malfunction of High Pressure Sensor	180
Malfunction of Humidity Sensor System	161
Malfunction of Inverter Radiating Fin Temperature	
Rise	183
Malfunction of Low Pressure Sensor	181
Malfunction of Moving Part of Electronic Expansion	
Valve (Y1E)	150
Malfunction of Moving Part of Electronic Expansion	
Valve (Y1E, Y3E)	170
Malfunction of Outdoor Unit Fan Motor	169
Malfunction of PC Board	182
Malfunction of Swing Flap Motor (M1S)	147
Malfunction of System, Refrigerant System Address	
Undefined	205
Malfunction of Thermistor (R4T)	179
Malfunction of Thermistor (R6T)	177
Malfunction of Thermistor (R1T) for Suction Air ...	159
Malfunction of Thermistor (R2T) for	
Heat Exchanger	156
Malfunction of Thermistor (R3T) for Gas Pipes	157
Malfunction of Thermistor (R3T, R5T) for	
Suction Pipe 1, 2	176
Malfunction of Thermistor (R7T) for	
Outdoor Unit Liquid Pipe	178
Malfunction of Thermistor for Discharge Air	160
Malfunction of Thermostat Sensor in Remote	
Controller	162
Malfunction of Transmission between Central Remote	
Controller and Indoor Unit	202
Malfunction of Transmission between Centralized	
Remote Controller and Indoor Unit	206
Malfunction of Transmission between Indoor and	
Outdoor Units in the Same System	198
Malfunction of Transmission between Indoor Units	
and Outdoor Units	194
Malfunction of Transmission between Inverter and	
Control PC Board	187
Malfunction of Transmission between Main and Sub	
Remote Controllers	197
Malfunction of Transmission between Optional	
Controllers for Centralized Control	208
Malfunction of Transmission between Remote	
Controller and Indoor Unit	196
MC	211
Method of Replacing The Inverter's Power Transistors	
and Diode Modules	254

N

Normal Operation	49
------------------------	----

O

Oil Return Operation	54
Operation Lamp Blinks	212
Operation Mode	48
Operation when Power is Turned On	85
Option List	246
Outdoor Unit PC Board Layout	86
Outdoor Unit Thermistors for Discharge Pipe	252

P

P1	188
PC Board Defect	143, 163, 207
Power Supply Insufficient or	
Instantaneous Failure	191
Precautions for New Refrigerant (R-410A)	258
Pressure Sensor	253
Protection Control	60
Pump-down Residual Operation	57

R

Refrigerant Circuit	40
Refrigerant Cylinders	260
Refrigerant Overcharged	173
Restart Standby	58

S

Service Tools	261
Setting by Dip Switches	104
Setting by pushbutton switches	106
Setting of Low Noise Operation and Demand	
Operation	115
Setting of Refrigerant Additional Charging	
Operation	119
Special Control	53
Specifications	6
Startup Control	53
Stopping Operation	59
Swing Flaps	71
Symptom-based Troubleshooting	125
System is not Set yet	204

T

Test Operation	
Procedure and Outline	74
Thermistor Resistance /	
Temperature Characteristics	251
Thermostat Sensor in Remote Controller	68

U

U0	189
U2	191
U3	193
U4	194
U5	196
U8	197
U9	198
UA	200
UC	201
UE	202, 206
UF	204
UH	205

Drawings & Flow Charts

A			H	
abnormal discharge pipe temperature	172		high pressure protection control	60
abnormal power supply voltage	149		high voltage of capacitor in main inverter circuit	188
actuation of high pressure switch	164			
actuation of low pressure sensor	166		I	
address duplication of central remote controller	201		improper combination of optional controllers for centralized control	209
address duplication, improper setting	211		inverter compressor abnormal	184
C			inverter current abnormal	185
centralized control group no. setting	100		inverter protection control	63
BRC1C type	100		inverter start up error	186
BRC4 type	101			
BRC7 type	101		L	
group no. setting example	101		louver control for preventing ceiling dirt	67
check for causes of drop in low pressure	219		low pressure drop due to refrigerant shortage or electronic expansion valve failure	189
check for causes of rise in high pressure	218		low pressure protection control	61
check for fan motor connector	220			
check operation	82		M	
check operation not executed	193		malfunction of capacity determination device	153
check work prior to turn power supply on	74		malfunction of discharge pipe thermistor (R2T)	175
compressor motor lock	168		malfunction of drain level control system (S1L)	144
contents of control modes	102		malfunction of high pressure sensor	180
how to select operation mode	103		malfunction of humidity sensor system	161
cooling operation fan control	52		malfunction of inverter radiating fin temperature rise	183
D			malfunction of low pressure sensor	181
display “under host computer integrate control” blinks (repeats double blink)	217		malfunction of moving part of electronic expansion valve (20E)	150
display “under host computer integrate control” blinks (repeats single blink)	214		malfunction of moving part of electronic expansion valve (Y1E, Y3E)	170
display of sensor and address data	134		malfunction of outdoor unit fan motor	169
drain level above limit	152		malfunction of swing flap motor (MA)	147
drain pump control	65		malfunction of system, refrigerant system address undefined	205
when the float switch is tripped and “AF” is displayed on the remote controller	66		malfunction of thermistor (R4T)	179
when the float switch is tripped during heating operation	66		malfunction of thermistor (R6T)	177
when the float switch is tripped while the cooling thermostat is off	65		malfunction of thermistor (R1T) for outdoor air ...	174
when the float switch is tripped while the cooling thermostat is on	65		malfunction of thermistor (R1T) for suction air ...	159
E			malfunction of thermistor (R2T) for heat exchanger	156
error of external protection device	142		malfunction of thermistor (R3T) for gas pipes	157
excessive number of indoor units	200		malfunction of thermistor (R3T, R5T) for suction pipe 1, 2	176
F			malfunction of thermistor (R7T) for outdoor unit liquid pipe	178
failure of combination (between indoor unit pc board and fan pc board)	158		malfunction of thermistor for discharge air	160
failure of transmission (between indoor unit pc board and fan pc board)	154		malfunction of thermostat sensor in remote controller	162
fan motor (M1F) lock, overload	146		malfunction of transmission between central remote controller and indoor unit	202
freeze prevention	70			
functional parts layout	44			

malfunction of transmission between centralized remote controller and indoor unit	206	wireless remote controller - indoor unit	89
malfunction of transmission between indoor and outdoor units in the same system	198	BRC4 type	89
malfunction of transmission between indoor units and outdoor units	194	BRC7 type	89
malfunction of transmission between inverter and control pc board	187	wiring diagrams	227
malfunction of transmission between main and sub remote controllers	197		
malfunction of transmission between optional controllers for centralized control	208		
malfunction of transmission between remote controller and indoor unit	196		
method of replacing the inverter's power transistors modules	254		
O			
operation lamp blinks	212		
operation mode	48		
operation of the remote controller's inspection / test operation button	132		
outdoor unit pc board layout	86		
P			
pc board defect	143, 163, 207		
piping diagrams	222		
power supply insufficient or instantaneous failure	191		
pressure sensor	253		
R			
refrigerant circuit	40		
refrigerant overcharged	173		
remote controller self-diagnosis function	135		
remote controller service mode	133		
S			
self-diagnosis by wired remote controller	129		
self-diagnosis by wireless remote controller	130		
setting of low noise operation and demand operation	115		
image of operation	116		
setting of refrigerant additional charging operation	119		
check operation	121		
simplified remote controller	90		
BRC2C51	90		
system is not set yet	204		
T			
thermostat sensor in remote controller	68		
cooling	68		
heating	69		
torque wrench	263		
troubleshooting by remote controller	128		
turn power on	74		
W			
weigher for refrigerant charge	266		
wired remote controller	87		

Warning



- Daikin Industries, Ltd.'s products are manufactured for export to numerous countries throughout the world. Daikin Industries, Ltd. does not have control over which products are exported to and used in a particular country. Prior to purchase, please therefore confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107



JQA-1452

About ISO 9001

ISO 9001 is a plant certification system defined by the International Organization for Standardization (ISO) relating to quality assurance. ISO 9001 certification covers quality assurance aspects related to the "design, development, manufacture, installation, and supplementary service" of products manufactured at the plant.



EC99J2044

About ISO 14001

ISO 14001 is the standard defined by the International Organization for Standardization (ISO) relating to environmental management systems. Our group has been acknowledged by an internationally accredited compliance organisation as having an appropriate programme of environmental protection procedures and activities to meet the requirements of ISO 14001.

Dealer

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved
Printed in Japan 00/00/000 Y.K.